



## D Show Commands

---

- [show dampening interface](#), on page 2
- [show diagnostic bootup level](#), on page 3
- [show diagnostic content module](#), on page 4
- [show diagnostic description module test all](#), on page 5
- [show diagnostic events](#), on page 6
- [show diagnostic ondemand setting](#), on page 7
- [show diagnostic result module](#), on page 8
- [show diagnostic result module all](#), on page 10
- [show diagnostic simulation module](#), on page 12
- [show diagnostic status module](#), on page 13
- [show diff rollback-patch](#), on page 14
- [show dot1q-tunnel](#), on page 15
- [show dot1q-tunnel interface](#), on page 16
- [show dot1x](#), on page 17
- [show dot1x all](#), on page 18
- [show dot1x all details](#), on page 20
- [show dot1x all statistics](#), on page 22
- [show dot1x all summary](#), on page 24
- [show dot1x interface](#), on page 25
- [show dot1x interface client statistics](#), on page 29
- [show dot1x interface client statistics address](#), on page 31
- [show dot1x supplicant](#), on page 32
- [show dot1x supplicant interface](#), on page 33

# show dampening interface

show dampening interface

## Syntax Description

|           |                                                 |
|-----------|-------------------------------------------------|
| show      | Show running system information                 |
| dampening | Display dampening information                   |
| interface | Display interface dampening general information |

## Command Mode

- /exec

# show diagnostic bootup level

show diagnostic bootup level [ *\_\_readonly\_\_* <bootup\_level> ]

## Syntax Description

|                     |                                          |
|---------------------|------------------------------------------|
| show                | Show running system information          |
| diagnostic          | Diagnostic commands                      |
| bootup              | Show diagnostic bootup information       |
| level               | Show diagnostic bootup level information |
| <i>__readonly__</i> | (Optional)                               |
| <i>bootup_level</i> | (Optional) Bootup level                  |

## Command Mode

- /exec

# show diagnostic content module

```
show diagnostic content module { all | <module> } [ __readonly__ <attr_descr> { TABLE_Module
<module_id> <module_type> { TABLE_test <test_id> <testname> <test_attr> <test_interval> } } ]
```

## Syntax Description

|                      |                                    |
|----------------------|------------------------------------|
| show                 | Show running system information    |
| diagnostic           | Diagnostic commands                |
| content              | Show diagnostic test content       |
| module               | Module Keyword                     |
| all                  | Select all module ID               |
| <i>module</i>        | Module number                      |
| <i>__readonly__</i>  | (Optional)                         |
| <i>attr_descr</i>    | (Optional) Attribute description   |
| TABLE_Module         | (Optional) All modules table       |
| <i>module_id</i>     | (Optional) Module Number           |
| <i>module_type</i>   | (Optional) module type description |
| TABLE_test           | (Optional) All tests table         |
| <i>test_id</i>       | (Optional) Test id                 |
| <i>testname</i>      | (Optional) Test name               |
| <i>test_attr</i>     | (Optional) Test Attribute          |
| <i>test_interval</i> | (Optional) HM test interval        |

## Command Mode

- /exec

# show diagnostic description module test all

```
show diagnostic description module <module> test { all | <name> | <test-id> } [ __readonly__ { TABLE_desc
<testname> <testdesc> } ]
```

## Syntax Description

|                 |                                      |
|-----------------|--------------------------------------|
| show            | Show running system information      |
| diagnostic      | Diagnostic commands                  |
| description     | Show diagnostic test desc            |
| module          | Module keyword                       |
| <i>module</i>   | Module Number                        |
| test            | Diagnostic test selection            |
| all             | Select all test ID                   |
| <i>name</i>     | Test name                            |
| <i>test-id</i>  |                                      |
| __readonly__    | (Optional)                           |
| TABLE_desc      | (Optional) Table of test description |
| <i>testname</i> | (Optional) Test name                 |
| <i>testdesc</i> | (Optional) Description of the test   |

## Command Mode

- /exec

# show diagnostic events

```
show diagnostic events [ error | info ] [ __readonly__ { TABLE_events <event_text> } ]
```

## Syntax Description

|                   |                                   |
|-------------------|-----------------------------------|
| show              | Show running system information   |
| diagnostic        | Diagnostic commands               |
| events            | Diagnostic events                 |
| error             | (Optional) Error event-type       |
| info              | (Optional) Information event-type |
| __readonly__      | (Optional)                        |
| TABLE_events      | (Optional) list of events logged  |
| <i>event_text</i> | (Optional) Text of one event      |

## Command Mode

- /exec

# show diagnostic ondemand setting

show diagnostic ondemand setting [ *\_\_readonly\_\_* <test\_iteration\_count> <action\_on\_failure> ]

## Syntax Description

|                             |                                       |
|-----------------------------|---------------------------------------|
| show                        | Show running system information       |
| diagnostic                  | Diagnostic commands                   |
| ondemand                    | Show diagnostic on demand information |
| setting                     | Show diagnostic on demand settings    |
| <i>__readonly__</i>         | (Optional)                            |
| <i>test_iteration_count</i> | (Optional) Iteration Count            |
| <i>action_on_failure</i>    | (Optional) Action on failure          |

## Command Mode

- /exec

# show diagnostic result module

```
show diagnostic result module <module> [ test { <name> | <test-id> } ] [ [ detail ] | [ statistics ] ] [
__readonly__ <module_id> <curr_diag_level> <module_name> [ <bootup_diag_level> ] [ { TABLE_TestStat
<stat_testid> <stat_testname> { TABLE_StatDetail <port_no> <packet_tx> <packet_rx> <packet_loss> } }
] [ { TABLE_Test <test_id> <testname> [ <testresult> ] [ { <passed_ports> <failed_ports> <incomplete_ports>
<untested_ports> <aborted_ports> <err_disabled_ports> } ] [ { <err_code> <total_run_count>
<last_execution_time> <first_failure_time> <last_failure_time> <last_pass_time> <total_fail_count>
<consecutive_fail_count> <last_fail_reason> <next_execution_time> } } ] ] ]
```

## Syntax Description

|                          |                                       |
|--------------------------|---------------------------------------|
| show                     | Show running system information       |
| diagnostic               | Diagnostic commands                   |
| result                   | Show diagnostic test result           |
| module                   | Module keyword                        |
| <i>module</i>            | Module number                         |
| test                     | (Optional) Diagnostic test selection  |
| <i>test-id</i>           | (Optional)                            |
| <i>name</i>              | (Optional) Test name                  |
| detail                   | (Optional) Detailed result            |
| statistics               | (Optional) Result statistics          |
| <i>__readonly__</i>      | (Optional)                            |
| <i>module_id</i>         | (Optional) Module ID                  |
| <i>curr_diag_level</i>   | (Optional) Current diag level         |
| <i>module_name</i>       | (Optional) Module name                |
| <i>bootup_diag_level</i> | (Optional) Diagnostic level at bootup |
| TABLE_TestStat           | (Optional) Statistics table           |
| <i>stat_testid</i>       | (Optional) Test id                    |
| <i>stat_testname</i>     | (Optional) Test name                  |
| TABLE_StatDetail         | (Optional) Table stats detail         |
| <i>port_no</i>           | (Optional) Port Number                |
| <i>packet_tx</i>         | (Optional) Packet Tx                  |
| <i>packet_rx</i>         | (Optional) Packet Rx                  |



|                               |                                              |
|-------------------------------|----------------------------------------------|
| <i>packet_loss</i>            | (Optional) Packet lost                       |
| TABLE_Test                    | (Optional) Table of tests in module          |
| <i>test_id</i>                | (Optional) Test id of tests                  |
| <i>testname</i>               | (Optional) Test name                         |
| <i>testresult</i>             | (Optional) Test Results                      |
| <i>passed_ports</i>           | (Optional) List passed ports                 |
| <i>failed_ports</i>           | (Optional) List failed ports                 |
| <i>incomplete_ports</i>       | (Optional) List of Incompletely tested ports |
| <i>untested_ports</i>         | (Optional) List of untested ports            |
| <i>aborted_ports</i>          | (Optional) List of aborted ports             |
| <i>err_disabled_ports</i>     | (Optional) List error disabled ports         |
| <i>err_code</i>               | (Optional) Error code                        |
| <i>total_run_count</i>        | (Optional) Total run count                   |
| <i>last_execution_time</i>    | (Optional) Last execution time               |
| <i>first_failure_time</i>     | (Optional) First test failure time           |
| <i>last_failure_time</i>      | (Optional) Last test failure time            |
| <i>last_pass_time</i>         | (Optional) Last test pass time               |
| <i>total_fail_count</i>       | (Optional) Total fail count                  |
| <i>consecutive_fail_count</i> | (Optional) Consecutive failure count         |
| <i>last_fail_reason</i>       | (Optional) Last failure reason               |
| <i>next_execution_time</i>    | (Optional) Next test execution time          |

### Command Mode

- /exec

# show diagnostic result module all

```
show diagnostic result module all [ detail ] [ __readonly__ { TABLE_Module <module_id> <curr_diag_level>
<module_name> [ <bootup_diag_level> ] { TABLE_Test <test_id> <testname> [ <testresult> ] [ {
<passed_ports> <failed_ports> <incomplete_ports> <untested_ports> <aborted_ports> <err_disabled_ports>
} ] [ { <err_code> <total_run_count> <last_execution_time> <first_failure_time> <last_failure_time>
<last_pass_time> <total_fail_count> <consecutive_fail_count> <last_fail_reason> <next_execution_time>
} ] } ] }
```

## Syntax Description

|                           |                                              |
|---------------------------|----------------------------------------------|
| show                      | Show running system information              |
| diagnostic                | Diagnostic commands                          |
| result                    | Show diagnostic test result                  |
| module                    | Module keyword                               |
| all                       | Select all test ID                           |
| detail                    | (Optional) Detailed result                   |
| <i>__readonly__</i>       | (Optional)                                   |
| TABLE_Module              | (Optional) Table of modules                  |
| <i>module_id</i>          | (Optional) Module ID                         |
| <i>curr_diag_level</i>    | (Optional) Current diag level                |
| <i>module_name</i>        | (Optional) Module name                       |
| <i>bootup_diag_level</i>  | (Optional) Diagnostic level at bootup        |
| TABLE_Test                | (Optional) Table of tests in module          |
| <i>test_id</i>            | (Optional) Test id of tests                  |
| <i>testname</i>           | (Optional) Test name                         |
| <i>testresult</i>         | (Optional) Test Results                      |
| <i>passed_ports</i>       | (Optional) List passed ports                 |
| <i>failed_ports</i>       | (Optional) List failed ports                 |
| <i>incomplete_ports</i>   | (Optional) List of Incompletely tested ports |
| <i>untested_ports</i>     | (Optional) List of untested ports            |
| <i>aborted_ports</i>      | (Optional) List of aborted ports             |
| <i>err_disabled_ports</i> | (Optional) List error disabled ports         |

|                               |                                      |
|-------------------------------|--------------------------------------|
| <i>err_code</i>               | (Optional) Error code                |
| <i>total_run_count</i>        | (Optional) Total run count           |
| <i>last_execution_time</i>    | (Optional) Last execution time       |
| <i>first_failure_time</i>     | (Optional) First test failure time   |
| <i>last_failure_time</i>      | (Optional) Last test failure time    |
| <i>last_pass_time</i>         | (Optional) Last test pass time       |
| <i>total_fail_count</i>       | (Optional) Total fail count          |
| <i>consecutive_fail_count</i> | (Optional) Consecutive failure count |
| <i>last_fail_reason</i>       | (Optional) Last failure reason       |
| <i>next_execution_time</i>    | (Optional) Next test execution time  |

**Command Mode**

- /exec

# show diagnostic simulation module

```
show diagnostic simulation module <module> [ __readonly__ <module_id> <module_name> [ { TABLE_detail
<serial_no> <testid> [ <portid> ] <mode> } ] ]
```

## Syntax Description

|                     |                                        |
|---------------------|----------------------------------------|
| show                | Show running system information        |
| diagnostic          | Diagnostic commands                    |
| simulation          | Simulating Diagnostic result           |
| module              | Module keyword                         |
| <i>module</i>       | Module Number                          |
| <i>__readonly__</i> | (Optional)                             |
| <i>module_id</i>    | (Optional) Module ID                   |
| <i>module_name</i>  | (Optional) Module Name                 |
| TABLE_detail        | (Optional) Table of simulation details |
| <i>serial_no</i>    | (Optional) serial no                   |
| <i>testid</i>       | (Optional) Test id                     |
| <i>portid</i>       | (Optional) Port id                     |
| <i>mode</i>         | (Optional) Simulation mode             |

## Command Mode

- /exec

# show diagnostic status module

```
show diagnostic status module <module> [ __readonly__ <test_runby_mapping> <module_id> <module_name>
{ TABLE_current <cur_test_name> <cur_run_by> } { TABLE_enqueued <enq_test_name> <enq_run_by> }
]
```

## Syntax Description

|                           |                                            |
|---------------------------|--------------------------------------------|
| show                      | Show running system information            |
| diagnostic                | Diagnostic commands                        |
| status                    | Show test status(running/enqueued)         |
| module                    | Module keyword                             |
| <i>module</i>             | Module number                              |
| <i>__readonly__</i>       | (Optional)                                 |
| <i>test_runby_mapping</i> | (Optional) Test type expansion             |
| <i>module_id</i>          | (Optional) Module Id                       |
| <i>module_name</i>        | (Optional) Module name                     |
| TABLE_current             | (Optional) Table of currently running test |
| <i>cur_test_name</i>      | (Optional) Currently running test          |
| <i>cur_run_by</i>         | (Optional) Test Run By                     |
| TABLE_enqueued            | (Optional) Table of enqueued tests         |
| <i>enq_test_name</i>      | (Optional) Enqueued test name              |
| <i>enq_run_by</i>         | (Optional) Test enqueued by                |

## Command Mode

- /exec

# show diff rollback-patch

```
show diff rollback-patch { src-checkpoint <chkpoint_name> | src-running-cfg | src-startup-cfg | src-file
<srcfile_uri> } { dst-checkpoint <chkpoint_name> | dst-running-cfg | dst-startup-cfg | dst-file <dstfile_uri>
} [ __readonly__ [ <patch_entry> ] + ]
```

## Syntax Description

|                      |                                                                |
|----------------------|----------------------------------------------------------------|
| show                 | Show running system information                                |
| diff                 | Show diff between configuration files or checkpoints           |
| rollback-patch       | Show rollback patch between configuration files or checkpoints |
| src-checkpoint       | Use checkpoint as source configuration                         |
| <i>chkpoint_name</i> | Checkpoint name                                                |
| src-running-cfg      | Use running configuration as source                            |
| src-startup-cfg      | Use startup configuration as source                            |
| src-file             | Src Checkpoint file                                            |
| <i>srcfile_uri</i>   | Src Checkpoint file path                                       |
| dst-checkpoint       | Use checkpoint as destination configuration                    |
| <i>chkpoint_name</i> | Checkpoint name                                                |
| dst-running-cfg      | Use running configuration as destination                       |
| dst-startup-cfg      | Use startup configuration as destination                       |
| dst-file             | Dst Checkpoint file                                            |
| <i>dstfile_uri</i>   | Src Checkpoint file path                                       |
| <i>__readonly__</i>  | (Optional) Read only                                           |
| <i>patch_entry</i>   | (Optional) rollback patch entry                                |

## Command Mode

- /exec

# show dot1q-tunnel

```
show dot1q-tunnel [ __readonly__ TABLE_interface <interface> ]
```

## Syntax Description

|                  |                                   |
|------------------|-----------------------------------|
| show             | Show running system information   |
| dot1q-tunnel     | Show if port mode is dot1q-tunnel |
| __readonly__     | (Optional) Read Only              |
| <i>interface</i> | (Optional) Interface index        |
| TABLE_interface  | (Optional) show interface         |

## Command Mode

- /exec

# show dot1q-tunnel interface

show dot1q-tunnel interface <ifid\_eth\_dot1q\_tunnel> [ \_\_readonly\_\_ TABLE\_interface <interface> ]

## Syntax Description

|                              |                                                       |
|------------------------------|-------------------------------------------------------|
| show                         | Show running system information                       |
| dot1q-tunnel                 | Show if port mode is dot1q-tunnel                     |
| interface                    | Show interface status and information                 |
| <i>ifid_eth_dot1q_tunnel</i> | Enter interface type and number in module/slot format |
| <i>__readonly__</i>          | (Optional) Read Only                                  |
| <i>interface</i>             | (Optional) Interface index                            |
| TABLE_interface              | (Optional) show interface                             |

## Command Mode

- /exec



# show dot1x

```
show dot1x [ __readonly__ <sys_auth_ctrl> <proto_ver> ]
```

## Syntax Description

|                            |                                     |
|----------------------------|-------------------------------------|
| <code>dot1x</code>         | dot1x configuration commands        |
| <code>__readonly__</code>  | (Optional)                          |
| <code>sys_auth_ctrl</code> | (Optional) show system auth control |
| <code>proto_ver</code>     | (Optional) show protocol version    |

## Command Mode

- /exec

## show dot1x all

```
show dot1x all [ __readonly__ <sys_auth_ctrl> <proto_ver> TABLE_all <if_index> TABLE_allpae <pae_type>
[ <port_control> ] [ <host_mode> ] [ <quiet_period> ] [ <inactivity_period> ] [ <tx_period> ] [ <max_req>
] [ <reauth> ] [ <rate_limit_period> ] [ <supp_timeout> ] [ <server_timeout> ] [ <reauth_server> ] [
<reauth_period> ] [ <reauth_max> ] [ <mac_auth_bypass> ] [ <start_period> ] [ <auth_period> ] [
<held_period> ] [ <max_start> ] ]
```

### Syntax Description

| dot1x                    | dot1x configuration commands                   |
|--------------------------|------------------------------------------------|
| all                      | Show information for all interfaces            |
| <i>__readonly__</i>      | (Optional)                                     |
| TABLE_all                | (Optional)                                     |
| TABLE_allpae             | (Optional)                                     |
| <i>if_index</i>          | (Optional) Interface Index                     |
| <i>sys_auth_ctrl</i>     | (Optional) Show System Auth Control            |
| <i>proto_ver</i>         | (Optional) Show Protocol Version               |
| <i>pae_type</i>          | (Optional) Show PAE Type                       |
| <i>port_control</i>      | (Optional) Show Port Control                   |
| <i>host_mode</i>         | (Optional) Show Host Mode                      |
| <i>reauth</i>            | (Optional) Show Reauth Enabled Status          |
| <i>quiet_period</i>      | (Optional) Show Quiet Period                   |
| <i>inactivity_period</i> | (Optional) Show Inactivity Period              |
| <i>server_timeout</i>    | (Optional) Show Server Timeout                 |
| <i>supp_timeout</i>      | (Optional) Show Supp Timeout                   |
| <i>reauth_period</i>     | (Optional) Show Reauth Period                  |
| <i>reauth_max</i>        | (Optional) Show Reauth Max                     |
| <i>max_req</i>           | (Optional) Show Max Req                        |
| <i>tx_period</i>         | (Optional) Show Tx Period                      |
| <i>rate_limit_period</i> | (Optional) Show Rate Limit Period              |
| <i>reauth_server</i>     | (Optional) Show Reauth Server Enabled Status   |
| <i>mac_auth_bypass</i>   | (Optional) Show MAC Auth Bypass Enabled Status |

|                     |                                         |
|---------------------|-----------------------------------------|
| <i>start_period</i> | (Optional) Show Supplicant Start Period |
| <i>auth_period</i>  | (Optional) Show Supplicant Auth Period  |
| <i>held_period</i>  | (Optional) Show Supplicant Held Period  |
| <i>max_start</i>    | (Optional) Show Supplicant Max Start    |

**Command Mode**

- /exec

## show dot1x all details

```
show dot1x all details [ __readonly__ <sys_auth_ctrl> <proto_ver> TABLE_alldetail <if_index>
TABLE_allpaedetail <pae_type> [ <port_control> ] [ <host_mode> ] [ <quiet_period> ] [ <inactivity_period>
] [ <tx_period> ] [ <max_req> ] [ <reauth> ] [ <rate_limit_period> ] [ <supp_timeout> ] [ <server_timeout>
] [ <reauth_server> ] [ <reauth_period> ] [ <reauth_max> ] [ <mac_auth_bypass> ] [ <no_of_clients> ] [
<port_status_no_clients> ] [ { TABLE_if_auth_clients [ <supp_mac_addr> ] [ <auth_domain> ] [
<auth_sm_state> ] [ <auth_bend_sm_state> ] [ <port_status> ] [ <authentication_method> ] [
<authenticated_by> ] [ <reauth_period_client> ] [ <reauth_action> ] [ <time_to_next_reauth> ] [ <auth_vlan>
] } ] [ <start_period> ] [ <auth_period> ] [ <held_period> ] [ <max_start> ] [ <no_of_supp_clients> ] [
<auth_mac_addr> ] [ <supp_sm_state> ] [ <supp_bend_sm_state> ] [ <supp_port_status> ] ]
```

### Syntax Description

| dot1x                 | dot1x configuration commands          |
|-----------------------|---------------------------------------|
| all                   | Show information for all interfaces   |
| details               | 802.1x details                        |
| <i>__readonly__</i>   | (Optional)                            |
| TABLE_alldetail       | (Optional)                            |
| TABLE_allpaedetail    | (Optional)                            |
| TABLE_if_auth_clients | (Optional)                            |
| <i>if_index</i>       | (Optional) Interface Index            |
| <i>sys_auth_ctrl</i>  | (Optional) Show System Auth Control   |
| <i>proto_ver</i>      | (Optional) Show Protocol Version      |
| <i>pae_type</i>       | (Optional) Show PAE Type              |
| <i>port_control</i>   | (Optional) Show Port Control          |
| <i>host_mode</i>      | (Optional) Show Host Mode             |
| <i>reauth</i>         | (Optional) Show Reauth Enabled Status |
| <i>quiet_period</i>   | (Optional) Show Quiet Period          |
| <i>server_timeout</i> | (Optional) Show Server Timeout        |
| <i>supp_timeout</i>   | (Optional) Show Supp Timeout          |
| <i>reauth_period</i>  | (Optional) Show Reauth Period         |
| <i>reauth_max</i>     | (Optional) Show Reauth Max            |
| <i>max_req</i>        | (Optional) Show Max Req               |
| <i>tx_period</i>      | (Optional) Show Tx Period             |

|                               |                                                     |
|-------------------------------|-----------------------------------------------------|
| <i>rate_limit_period</i>      | (Optional) Show Rate Limit Period                   |
| <i>inactivity_period</i>      | (Optional) Show Inactivity Period                   |
| <i>reauth_server</i>          | (Optional) Show Reauth Server Enabled Status        |
| <i>mac_auth_bypass</i>        | (Optional) Show MAC Auth Bypass Enabled Status      |
| <i>no_of_clients</i>          | (Optional) Show Supplicant Clients                  |
| <i>port_status_no_clients</i> | (Optional) Show Port Status if there are no clients |
| <i>supp_mac_addr</i>          | (Optional) Show Supplicant MAC Address              |
| <i>auth_domain</i>            | (Optional) Show Supplicant Auth Domain              |
| <i>auth_sm_state</i>          | (Optional) Show Authenticator SM State              |
| <i>auth_bend_sm_state</i>     | (Optional) Show Authenticator Backend State         |
| <i>port_status</i>            | (Optional) Show Port Status                         |
| <i>authentication_method</i>  | (Optional) show authentication method               |
| <i>authenticated_by</i>       | (Optional) show authenticated by                    |
| <i>reauth_period_client</i>   | (Optional) Show Reauth Period                       |
| <i>reauth_action</i>          | (Optional) Show Reauthentication Action             |
| <i>time_to_next_reauth</i>    | (Optional) Show Time to Next Reauth                 |
| <i>auth_vlan</i>              | (Optional) Show Vlan                                |
| <i>start_period</i>           | (Optional) Show Supplicant Start Period             |
| <i>auth_period</i>            | (Optional) Show Supplicant Auth Period              |
| <i>held_period</i>            | (Optional) Show Supplicant Held Period              |
| <i>max_start</i>              | (Optional) Show Supplicant Max Start                |
| <i>no_of_supp_clients</i>     | (Optional) Show Supplicant Clients                  |
| <i>auth_mac_addr</i>          | (Optional) Show Authenticator MAC Address           |
| <i>supp_sm_state</i>          | (Optional) Show Supplicant SM State                 |
| <i>supp_bend_sm_state</i>     | (Optional) Show Supplicant Backend SM State         |
| <i>supp_port_status</i>       | (Optional) Show Supplicant Port Status              |

**Command Mode**

- /exec

# show dot1x all statistics

```
show dot1x all statistics [ __readonly__ TABLE_allstat <if_index> TABLE_allpaestat <pae_type> [ <rxstart>
] [ <rxlogoff> ] [ <rxresp> ] [ <rxrespid> ] [ <rxinvalid> ] [ <rxlenerr> ] [ <rxtotal> ] [ <txreq> ] [ <txreqid>
] [ <txtotal> ] [ <rxversion> ] [ <lastrxsourcemaac> ] [ <rxreq> ] [ <rxsuppinvalid> ] [ <rxsupplennerr> ] [
<rxsupptotal> ] [ <txstart> ] [ <txlogoff> ] [ <txresp> ] [ <txsupptotal> ] [ <rxsuppverson> ] [ <lastrxsrcaac>
] ]
```

## Syntax Description

| dot1x                   | dot1x configuration commands                    |
|-------------------------|-------------------------------------------------|
| all                     | Show information for all interfaces             |
| statistics              | 802.1x statistics                               |
| <i>__readonly__</i>     | (Optional)                                      |
| TABLE_allstat           | (Optional)                                      |
| TABLE_allpaestat        | (Optional)                                      |
| <i>if_index</i>         | (Optional) Interface Index                      |
| <i>pae_type</i>         | (Optional) Show PAE Type                        |
| <i>rxstart</i>          | (Optional) Show Received EAPOL-Start            |
| <i>rxlogoff</i>         | (Optional) Show Received EAPOL-Logoff           |
| <i>rxresp</i>           | (Optional) Show Received EAP-Response           |
| <i>rxrespid</i>         | (Optional) Show Received EAP-ResponseID         |
| <i>rxinvalid</i>        | (Optional) Show Received Invalid EAPOL Frame    |
| <i>rxlenerr</i>         | (Optional) Show Received EAPOL Bad Length Frame |
| <i>rxtotal</i>          | (Optional) Show Received Total EAPOL Frame      |
| <i>txreq</i>            | (Optional) Show Transmitted EAP-Request         |
| <i>txreqid</i>          | (Optional) Show Transmitted EAP-RequestID       |
| <i>txtotal</i>          | (Optional) Show Transmitted Total EAPOL Frame   |
| <i>rxversion</i>        | (Optional) Show Received EAPOL Version          |
| <i>lastrxsourcemaac</i> | (Optional) Show Last Source MAC                 |
| <i>rxreq</i>            | (Optional) Show Received EAP-Request            |
| <i>rxsuppinvalid</i>    | (Optional) Show received Invalid EAPOL Frame    |
| <i>rxsupplennerr</i>    | (Optional) Show received EAPOL Bad Length Frame |

|                      |                                               |
|----------------------|-----------------------------------------------|
| <i>rxsupptotal</i>   | (Optional) Show Received Total EAPOL Frame    |
| <i>txstart</i>       | (Optional) Show transmitted EAPOL-Start       |
| <i>txlogoff</i>      | (Optional) Show transmitted EAPOL-Logoff      |
| <i>txresp</i>        | (Optional) Show transmitted EAP-Response      |
| <i>txsupptotal</i>   | (Optional) Show transmitted Total EAPOL Frame |
| <i>rxsuppversion</i> | (Optional) Show Received EAPOL Version        |
| <i>lastrxsrmac</i>   | (Optional) Show Last Source MAC received      |

**Command Mode**

- /exec

# show dot1x all summary

```
show dot1x all summary [ __readonly__ TABLE_allsummary <if_index> <pae_type> [
<port_status_no_clients> ] [ { TABLE_if_auth_clients [ <auth_mac_addr> ] [ <port_status> ] } ] ]
```

## Syntax Description

|                               |                                                     |
|-------------------------------|-----------------------------------------------------|
| dot1x                         | dot1x configuration commands                        |
| all                           | Show information for all interfaces                 |
| summary                       | 802.1x summary                                      |
| <i>__readonly__</i>           | (Optional)                                          |
| <i>TABLE_allsummary</i>       | (Optional)                                          |
| <i>TABLE_if_auth_clients</i>  | (Optional)                                          |
| <i>if_index</i>               | (Optional) Interface Index                          |
| <i>pae_type</i>               | (Optional) Show PAE Type                            |
| <i>auth_mac_addr</i>          | (Optional) Show Authenticator MAC Address           |
| <i>port_status_no_clients</i> | (Optional) Show Port Status if there are no clients |
| <i>port_status</i>            | (Optional) Show Port Status                         |

## Command Mode

- /exec



## show dot1x interface

```
{ show dot1x interface <if> [ __readonly__ <if_index> <pae_type> [ <port_control> ] [ <host_mode> ] [
<quiet_period> ] [ <inactivity_period> ] [ <tx_period> ] [ <max_req> ] [ <reauth> ] [ <rate_limit_period> ] [
<supp_timeout> ] [ <server_timeout> ] [ <reauth_server> ] [ <reauth_period> ] [ <reauth_max> ] [
<mac_auth_bypass> ] [ <start_period> ] [ <auth_period> ] [ <held_period> ] [ <max_start> ] ] } | { show
dot1x interface <if> details [ __readonly__ <if_index_detail> <pae_type_detail> [ <port_control_detail> ] [
<host_mode_detail> ] [ <quiet_period_detail> ] [ <inactivity_period_detail> ] [ <tx_period_detail> ] [
<max_req_detail> ] [ <reauth_detail> ] [ <rate_limit_period_detail> ] [ <supp_timeout_detail> ] [
<server_timeout_detail> ] [ <reauth_server_detail> ] [ <reauth_period_detail> ] [ <reauth_max_detail> ] [
<mac_auth_bypass_detail> ] [ <no_of_clients> ] [ <port_status_no_clients_detail> ] [ {
TABLE_if_auth_clients_detail [ <supp_mac_addr_detail> ] [ <auth_domain> ] [ <auth_sm_state> ] [
<auth_bend_sm_state> ] [ <port_status> ] [ <authentication_method> ] [ <authenticated_by> ] [
<reauth_period_client> ] [ <reauth_action> ] [ <time_to_next_reauth> ] [ <auth_vlan> ] } ] [
<start_period_detail> ] [ <auth_period_detail> ] [ <held_period_detail> ] [ <max_start_detail> ] [
<no_of_supp_clients> ] [ <auth_mac_addr_detail> ] [ <supp_sm_state> ] [ <supp_bend_sm_state> ] [
<supp_port_status> ] ] } | { show dot1x interface <if> statistics [ __readonly__ <if_index_stat> <pae_type_stat>
[ <rxstart> ] [ <rxlogoff> ] [ <rxresp> ] [ <rxrespid> ] [ <rxinvalid> ] [ <rxlenerr> ] [ <rxtotal> ] [ <txreq> ]
[ <txreqid> ] [ <txtotal> ] [ <rxversion> ] [ <lastrxsourcemac> ] [ <rxreq> ] [ <rxsuppinvalid> ] [ <rxsupplennerr>
] [ <rxsupptotal> ] [ <txstart> ] [ <txlogoff> ] [ <txresp> ] [ <txsupptotal> ] [ <rxsuppversion> ] [ <lastrxsrcmac>
] ] } | { show dot1x interface <if> summary [ __readonly__ <if_index_summary> <pae_type_summary> [
<port_status_no_clients_summary> ] [ { TABLE_if_auth_clients_summary [ <auth_mac_addr> ] [
<port_status_summary> ] } ] [ <supp_mac_addr> ] [ <supp_port_status_summary> ] ] }
```

### Syntax Description

| dot1x                         | dot1x configuration commands |
|-------------------------------|------------------------------|
| <i>if</i>                     |                              |
| details                       | 802.1x details               |
| statistics                    | 802.1x statistics            |
| summary                       | 802.1x summary               |
| TABLE_if_auth_clients_detail  | (Optional)                   |
| TABLE_if_auth_clients_summary | (Optional)                   |
| __readonly__                  | (Optional)                   |
| <i>if_index</i>               | (Optional) Interface Index   |
| <i>if_index_detail</i>        | (Optional) Interface Index   |
| <i>if_index_stat</i>          | (Optional) Interface Index   |
| <i>if_index_summary</i>       | (Optional) Interface Index   |
| <i>pae_type</i>               | (Optional) Show PAE Type     |
| <i>port_control</i>           | (Optional) Show Port Control |

|                                 |                                                |
|---------------------------------|------------------------------------------------|
| <i>host_mode</i>                | (Optional) Show Host Mode                      |
| <i>reauth</i>                   | (Optional) Show Reauth Enabled Status          |
| <i>quiet_period</i>             | (Optional) Show Quiet Period                   |
| <i>inactivity_period</i>        | (Optional) Show Inactivity Period              |
| <i>server_timeout</i>           | (Optional) Show Server Timeout                 |
| <i>supp_timeout</i>             | (Optional) Show Supp Timeout                   |
| <i>reauth_period</i>            | (Optional) Show Reauth Period                  |
| <i>reauth_max</i>               | (Optional) Show Reauth Max                     |
| <i>max_req</i>                  | (Optional) Show Max Req                        |
| <i>tx_period</i>                | (Optional) Show Tx Period                      |
| <i>rate_limit_period</i>        | (Optional) Show Rate Limit Period              |
| <i>start_period</i>             | (Optional) Show Supplicant Start Period        |
| <i>auth_period</i>              | (Optional) Show Supplicant Auth Period         |
| <i>held_period</i>              | (Optional) Show Supplicant Held Period         |
| <i>max_start</i>                | (Optional) Show Supplicant Max Start           |
| <i>reauth_server</i>            | (Optional) Show Reauth Server Enabled Status   |
| <i>mac_auth_bypass</i>          | (Optional) Show MAC Auth Bypass Enabled Status |
| <i>pae_type_detail</i>          | (Optional) Show PAE Type                       |
| <i>port_control_detail</i>      | (Optional) Show Port Control                   |
| <i>host_mode_detail</i>         | (Optional) Show Host Mode                      |
| <i>reauth_detail</i>            | (Optional) Show Reauth Enabled Status          |
| <i>quiet_period_detail</i>      | (Optional) Show Quiet Period                   |
| <i>inactivity_period_detail</i> | (Optional) Show Inactivity Period              |
| <i>server_timeout_detail</i>    | (Optional) Show Server Timeout                 |
| <i>supp_timeout_detail</i>      | (Optional) Show Supp Timeout                   |
| <i>reauth_period_detail</i>     | (Optional) Show Reauth Period                  |
| <i>reauth_max_detail</i>        | (Optional) Show Reauth Max                     |
| <i>max_req_detail</i>           | (Optional) Show Max Req                        |
| <i>tx_period_detail</i>         | (Optional) Show Tx Period                      |

|                                      |                                                     |
|--------------------------------------|-----------------------------------------------------|
| <i>rate_limit_period_detail</i>      | (Optional) Show Rate Limit Period                   |
| <i>reauth_server_detail</i>          | (Optional) Show Reauth Server Enabled Status        |
| <i>mac_auth_bypass_detail</i>        | (Optional) Show MAC Auth Bypass Enabled Status      |
| <i>no_of_clients</i>                 | (Optional) Show Supplicant Clients                  |
| <i>port_status_no_clients_detail</i> | (Optional) Show Port Status if there are no clients |
| <i>supp_mac_addr_detail</i>          | (Optional) Show Supplicant MAC Address              |
| <i>auth_domain</i>                   | (Optional) Show Supplicant Auth Domain              |
| <i>auth_sm_state</i>                 | (Optional) Show Authenticator SM State              |
| <i>auth_bend_sm_state</i>            | (Optional) Show Authenticator Backend State         |
| <i>port_status</i>                   | (Optional) Show Port Status                         |
| <i>authentication_method</i>         | (Optional) show authentication method               |
| <i>authenticated_by</i>              | (Optional) show authenticated by                    |
| <i>reauth_period_client</i>          | (Optional) Show Reauth Period                       |
| <i>reauth_action</i>                 | (Optional) Show Reauthentication Action             |
| <i>time_to_next_reauth</i>           | (Optional) Show Time to Next Reauth                 |
| <i>auth_vlan</i>                     | (Optional) Show vlan                                |
| <i>start_period_detail</i>           | (Optional) Show Supplicant Start Period             |
| <i>auth_period_detail</i>            | (Optional) Show Supplicant Auth Period              |
| <i>held_period_detail</i>            | (Optional) Show Supplicant Held Period              |
| <i>max_start_detail</i>              | (Optional) Show Supplicant Max Start                |
| <i>no_of_supp_clients</i>            | (Optional) Show Supplicant Clients                  |
| <i>auth_mac_addr_detail</i>          | (Optional) Show Authenticator MAC Address           |
| <i>supp_sm_state</i>                 | (Optional) Show Supplicant SM State                 |
| <i>supp_bend_sm_state</i>            | (Optional) Show Supplicant Backend SM State         |
| <i>supp_port_status</i>              | (Optional) Show Supplicant Port Status              |
| <i>pae_type_stat</i>                 | (Optional) Show PAE Type                            |
| <i>rxstart</i>                       | (Optional) Show Received EAPOL-Start                |
| <i>rxlogoff</i>                      | (Optional) Show Received EAPOL-Logoff               |
| <i>rxresp</i>                        | (Optional) Show Received EAP-Response               |

|                                       |                                                     |
|---------------------------------------|-----------------------------------------------------|
| <i>rxrespid</i>                       | (Optional) Show Received EAP-ResponseID             |
| <i>rxinvalid</i>                      | (Optional) Show Received Invalid EAPOL Frame        |
| <i>rxlenerr</i>                       | (Optional) Show Received EAPOL Bad Length Frame     |
| <i>rxtotal</i>                        | (Optional) Show Received Total EAPOL Frame          |
| <i>txreq</i>                          | (Optional) Show Transmitted EAP-Request             |
| <i>txreqid</i>                        | (Optional) Show Transmitted EAP-RequestID           |
| <i>txtotal</i>                        | (Optional) Show Transmitted Total EAPOL Frame       |
| <i>rxversion</i>                      | (Optional) Show Received EAPOL Version              |
| <i>lastrxsourcemac</i>                | (Optional) Show Last Source MAC                     |
| <i>rxreq</i>                          | (Optional) Show Received EAP-Request                |
| <i>rxsuppinvalid</i>                  | (Optional) Show received Invalid EAPOL Frame        |
| <i>rxsupplenerr</i>                   | (Optional) Show received EAPOL Bad Length Frame     |
| <i>rxsupptotal</i>                    | (Optional) Show Received Total EAPOL Frame          |
| <i>txstart</i>                        | (Optional) Show transmitted EAPOL-Start             |
| <i>txlogoff</i>                       | (Optional) Show transmitted EAPOL-Logoff            |
| <i>txresp</i>                         | (Optional) Show transmitted EAP-Response            |
| <i>txsupptotal</i>                    | (Optional) Show transmitted Total EAPOL Frame       |
| <i>rxsuppversion</i>                  | (Optional) Show Received EAPOL Version              |
| <i>lastrxsrmac</i>                    | (Optional) Show Last Source MAC received            |
| <i>pae_type_summary</i>               | (Optional) Show PAE Type                            |
| <i>port_status_no_clients_summary</i> | (Optional) Show Port Status if there are no clients |
| <i>port_status_summary</i>            | (Optional) Show Port Status                         |
| <i>supp_port_status_summary</i>       | (Optional) Show Port Status                         |
| <i>supp_mac_addr</i>                  | (Optional) Show Supplicant Client MAC Address       |
| <i>auth_mac_addr</i>                  | (Optional) Show Auth Client MAC Address             |

**Command Mode**

- /exec

## show dot1x interface client statistics

```
show dot1x interface <if> client statistics [ __readonly__ <if_index_stat> <pae_type_stat> [ {
TABLE_mac_address [ <macaddr> ] [ <rxstart> ] [ <rxlogoff> ] [ <rxresp> ] [ <rxrespid> ] [ <rxinvalid> ] [
<rxlenerr> ] [ <rxtotal> ] [ <txreq> ] [ <txreqid> ] [ <txtotal> ] [ <rxversion> ] [ <lastrxsourcemac> } ] [
<spurious_rxstart> ] [ <spurious_rxlogoff> ] [ <spurious_rxresp> ] [ <spurious_rxrespid> ] [
<spurious_rxinvalid> ] [ <spurious_rxlenerr> ] [ <spurious_rxtotal> ] [ <spurious_txreq> ] [ <spurious_txreqid>
] [ <spurious_txtotal> ] [ <spurious_rxversion> ] [ <spurious_lastrxsourcemac> ] ]
```

### Syntax Description

|                         |                                                       |
|-------------------------|-------------------------------------------------------|
| dot1x                   | dot1x configuration commands                          |
| <i>if</i>               |                                                       |
| client                  | 802.1x client                                         |
| statistics              | 802.1x statistics                                     |
| __readonly__            | (Optional)                                            |
| TABLE_mac_address       | (Optional)                                            |
| <i>if_index_stat</i>    | (Optional) Interface Index                            |
| <i>pae_type_stat</i>    | (Optional) Show PAE Type                              |
| <i>macaddr</i>          | (Optional) mac-address of the client                  |
| <i>rxstart</i>          | (Optional) Show Received EAPOL-Start                  |
| <i>rxlogoff</i>         | (Optional) Show Received EAPOL-Logoff                 |
| <i>rxresp</i>           | (Optional) Show Received EAP-Response                 |
| <i>rxrespid</i>         | (Optional) Show Received EAP-ResponseID               |
| <i>rxinvalid</i>        | (Optional) Show Received Invalid EAPOL Frame          |
| <i>rxlenerr</i>         | (Optional) Show Received EAPOL Bad Length Frame       |
| <i>rxtotal</i>          | (Optional) Show Received Total EAPOL Frame            |
| <i>txreq</i>            | (Optional) Show Transmitted EAP-Request               |
| <i>txreqid</i>          | (Optional) Show Transmitted EAP-RequestID             |
| <i>txtotal</i>          | (Optional) Show Transmitted Total EAPOL Frame         |
| <i>rxversion</i>        | (Optional) Show Received EAPOL Version                |
| <i>lastrxsourcemac</i>  | (Optional) Show Last Source MAC                       |
| <i>spurious_rxstart</i> | (Optional) Show Received EAPOL-Start of spurious macs |

|                                 |                                                                  |
|---------------------------------|------------------------------------------------------------------|
| <i>spurious_rxlogoff</i>        | (Optional) Show Received EAPOL-Logoff of spurious macs           |
| <i>spurious_rxresp</i>          | (Optional) Show Received EAP-Response of spurious macs           |
| <i>spurious_rxrespid</i>        | (Optional) Show Received EAP-ResponseID of spurious macs         |
| <i>spurious_rxinvalid</i>       | (Optional) Show Received Invalid EAPOL Frame of spurious macs    |
| <i>spurious_rxlennerr</i>       | (Optional) Show Received EAPOL Bad Length Frame of spurious macs |
| <i>spurious_rxtotal</i>         | (Optional) Show Received Total EAPOL Frame of spurious macs      |
| <i>spurious_txreq</i>           | (Optional) Show Transmitted EAP-Request of spurious macs         |
| <i>spurious_txreqid</i>         | (Optional) Show Transmitted EAP-RequestID of spurious macs       |
| <i>spurious_txtotal</i>         | (Optional) Show Transmitted Total EAPOL Frame of spurious macs   |
| <i>spurious_rxversion</i>       | (Optional) Show Received EAPOL Version of spurious macs          |
| <i>spurious_lastrxsourcemac</i> | (Optional) Show Last Source MAC of spurious macs                 |

**Command Mode**

- /exec

## show dot1x interface client statistics address

```
show dot1x interface <if> client statistics address <mac-address> [ __readonly__ <if_index_stat>
<pae_type_stat> [ <rxstart> ] [ <rxlogoff> ] [ <rxresp> ] [ <rxrespid> ] [ <rxinvalid> ] [ <rxlenerr> ] [ <rxtotal>
] [ <txreq> ] [ <txreqid> ] [ <txtotal> ] [ <rxversion> ] [ <lastrxsourcemac> ] ]
```

### Syntax Description

|                        |                                                 |
|------------------------|-------------------------------------------------|
| dot1x                  | dot1x configuration commands                    |
| <i>if</i>              |                                                 |
| client                 | 802.1x client                                   |
| statistics             | 802.1x statistics                               |
| address                | 802.1x client address                           |
| <i>mac-address</i>     | mac address EE:EE:EE:EE:EE:EE                   |
| <i>__readonly__</i>    | (Optional)                                      |
| <i>if_index_stat</i>   | (Optional) Interface Index                      |
| <i>pae_type_stat</i>   | (Optional) Show PAE Type                        |
| <i>rxstart</i>         | (Optional) Show Received EAPOL-Start            |
| <i>rxlogoff</i>        | (Optional) Show Received EAPOL-Logoff           |
| <i>rxresp</i>          | (Optional) Show Received EAP-Response           |
| <i>rxrespid</i>        | (Optional) Show Received EAP-ResponseID         |
| <i>rxinvalid</i>       | (Optional) Show Received Invalid EAPOL Frame    |
| <i>rxlenerr</i>        | (Optional) Show Received EAPOL Bad Length Frame |
| <i>rxtotal</i>         | (Optional) Show Received Total EAPOL Frame      |
| <i>txreq</i>           | (Optional) Show Transmitted EAP-Request         |
| <i>txreqid</i>         | (Optional) Show Transmitted EAP-RequestID       |
| <i>txtotal</i>         | (Optional) Show Transmitted Total EAPOL Frame   |
| <i>rxversion</i>       | (Optional) Show Received EAPOL Version          |
| <i>lastrxsourcemac</i> | (Optional) Show Last Source MAC                 |

### Command Mode

- /exec

# show dot1x supplicant

show dot1x supplicant

## Syntax Description

|            |                              |
|------------|------------------------------|
| dot1x      | dot1x configuration commands |
| supplicant | 802.1x supplicant            |

## Command Mode

- /exec



# show dot1x supplicant interface

{ show dot1x supplicant interface <if> } | { show dot1x supplicant interface <if> details } | { show dot1x supplicant interface <if> summary } | { show dot1x supplicant interface <if> statistics }

## Syntax Description

|            |                              |
|------------|------------------------------|
| dot1x      | dot1x configuration commands |
| supplicant | 802.1x supplicant            |
| <i>if</i>  |                              |
| details    | 802.1x details               |
| statistics | 802.1x statistics            |
| summary    | 802.1x summary               |

## Command Mode

- /exec

■ show dot1x supplicant interface