



A Commands

- aaa accounting default, on page 7
- aaa accounting dot1x default group, on page 8
- aaa authentication dot1x default group, on page 9
- aaa authentication login ascii-authentication, on page 10
- aaa authentication login console, on page 11
- aaa authentication login default, on page 13
- aaa authentication login default fallback error local, on page 15
- aaa authentication login enable, on page 16
- aaa authentication login error-enable, on page 17
- aaa authentication login invalid-username-log, on page 18
- aaa authentication login password-aging enable, on page 19
- aaa authentication rejected, on page 20
- aaa authentication rejected in ban, on page 21
- aaa authorization commands console, on page 22
- aaa authorization commands default, on page 23
- aaa authorization ssh default group, on page 24
- aaa bypass-user, on page 25
- aaa group server ldap, on page 26
- aaa group server radius, on page 27
- aaa group server tacacs, on page 28
- aaa server radius dynamic-author, on page 29
- aaa test-authentication, on page 30
- aaa test-radius-authentication, on page 31
- aaa user default-role, on page 32
- abort, on page 33
- abort, on page 34
- abort, on page 35
- abort, on page 36
- absolute-timeout, on page 37
- absolute start, on page 38
- accept-lifetime month_a month_b month_c month_d month_e month_f month_g month_h month_i month_j month_k month_l duration infinite month_a month_b month_c month_d month_e month_f month_g month_h month_i month_j month_k month_l, on page 39
- access-class, on page 41

- access-list, on page 42
- access-list, on page 43
- access-list ipv6, on page 44
- access vlan, on page 45
- acllog match-log-level, on page 46
- action, on page 47
- action, on page 48
- action cli, on page 49
- action counter name value op, on page 50
- action eem test, on page 51
- action event-default, on page 52
- action forceshut reset-reason, on page 53
- action overbudgetshut, on page 54
- action policy-default, on page 55
- action reload, on page 56
- action snmp-trap, on page 57
- action syslog msg, on page 58
- additional-paths install backup, on page 59
- additional-paths receive, on page 60
- additional-paths selection route-map, on page 61
- additional-paths send, on page 62
- address-family ipv4, on page 63
- address-family ipv4 labeled-unicast, on page 64
- address-family ipv4 labeled-unicast, on page 65
- address-family ipv4 mdt, on page 66
- address-family ipv4 mdt, on page 67
- address-family ipv4 mvpn, on page 68
- address-family ipv4 mvpn, on page 69
- address-family ipv4 unicast, on page 70
- address-family ipv4 unicast, on page 71
- address-family ipv4 unicast, on page 72
- address-family ipv4 unicast, on page 73
- address-family ipv4 unicast, on page 74
- address-family ipv4 unicast, on page 75
- address-family ipv4 unicast, on page 76
- address-family ipv4 unicast, on page 77
- address-family ipv4 unicast, on page 78
- address-family ipv4 unicast, on page 79
- address-family ipv4 unicast, on page 80
- address-family ipv6, on page 81
- address-family ipv6 labeled-unicast, on page 82
- address-family ipv6 labeled-unicast, on page 83
- address-family ipv6 mvpn, on page 84
- address-family ipv6 mvpn, on page 85
- address-family ipv6 unicast, on page 86
- address-family ipv6 unicast, on page 87

- address-family ipv6 unicast, on page 88
- address-family ipv6 unicast, on page 89
- address-family ipv6 unicast, on page 90
- address-family ipv6 unicast, on page 91
- address-family ipv6 unicast, on page 92
- address-family ipv6 unicast, on page 93
- address-family ipv6 unicast, on page 94
- address-family ipv6 unicast, on page 95
- address-family ipv6 unicast, on page 96
- address-family ipv6 unicast, on page 97
- address-family ipv6 unicast, on page 98
- address-family l2vpn evpn, on page 99
- address-family l2vpn evpn, on page 100
- address-family l2vpn vpls, on page 101
- address-family l2vpn vpls, on page 102
- address-family link-state, on page 103
- address-family link-state, on page 104
- address-family vpnv4 unicast, on page 105
- address-family vpnv4 unicast, on page 106
- address-family vpnv6 unicast, on page 107
- address-family vpnv6 unicast, on page 108
- address, on page 109
- address, on page 110
- address, on page 111
- address, on page 112
- address, on page 113
- address, on page 114
- address port-number, on page 115
- address primary, on page 116
- address secondary, on page 117
- address secondary, on page 118
- adjacency-check, on page 119
- advertise-gw-ip, on page 120
- advertise-labels, on page 121
- advertise-map exist default advertise-map, on page 122
- advertise-pip, on page 123
- advertise-system-mac, on page 124
- advertise evpn multicast, on page 125
- advertise interface, on page 126
- advertise l2vpn evpn, on page 127
- advertise local-labeled-route, on page 128
- advertise virtual-rmac, on page 129
- advertisement-interval, on page 130
- advertisement-interval, on page 131
- afd queue-desired, on page 132
- affinity-group, on page 133

- [affinity-group activate](#), on page 134
- [affinity-map](#), on page 135
- [affinity](#), on page 136
- [affinity](#), on page 137
- [affinity](#), on page 138
- [affinity](#), on page 139
- [affinity](#), on page 140
- [age](#), on page 141
- [age](#), on page 142
- [aggregate-address](#), on page 143
- [aggregate-address](#), on page 144
- [alert-group user-def-cmd](#), on page 145
- [algorithm algorithm-id algorithm-name](#), on page 146
- [allocate-index](#), on page 147
- [allocate-label all](#), on page 148
- [allocate-label option-b](#), on page 149
- [allocate1 interface2](#), on page 150
- [allocate2 fcoe-vlan-range](#), on page 151
- [allocate3 shared interface3](#), on page 152
- [allow-vni-in-ethertag](#), on page 153
- [allow feature-set](#), on page 154
- [allowas-in](#), on page 155
- [allowas-in](#), on page 156
- [allowed-locators](#), on page 157
- [allowed-vlans](#), on page 158
- [amt flush-routes](#), on page 159
- [amt pseudo-interface](#), on page 160
- [analytics cluster](#), on page 161
- [anonymous-id](#), on page 162
- [append-after next](#), on page 163
- [apply profile](#), on page 164
- [area-leader priority algorithm-id](#), on page 165
- [area authentication](#), on page 166
- [area authentication](#), on page 167
- [area default-cost](#), on page 168
- [area default-cost](#), on page 169
- [area filter-list route-map in](#), on page 170
- [area filter-list route-map in](#), on page 171
- [area nssa](#), on page 172
- [area nssa](#), on page 173
- [area nssa translate type7 always never supress-fa](#), on page 174
- [area nssa translate type7 always never supress-fa](#), on page 175
- [area range](#), on page 176
- [area range](#), on page 177
- [area segment-routing mpls](#), on page 178
- [area sham-link](#), on page 179

- area stub, on page 180
- area stub, on page 181
- area virtual-link, on page 182
- area virtual-link, on page 183
- area virtual-link, on page 184
- area virtual-link, on page 185
- arp access-list, on page 186
- as-format asdot, on page 187
- as-override, on page 188
- assign interface shared, on page 189
- assign vlan dedicated, on page 190
- assign vrf prefix number dedicated, on page 191
- association-group, on page 192
- association-group, on page 193
- attach console module, on page 194
- attach module, on page 195
- attach module node, on page 196
- attach module port, on page 197
- auth-mechanism plain, on page 198
- authentication-check, on page 199
- authentication-check, on page 200
- authentication-check level-1, on page 201
- authentication-check level-2, on page 202
- authentication-key, on page 203
- authentication-key, on page 204
- authentication-key, on page 205
- authentication-type cleartext, on page 206
- authentication-type cleartext, on page 207
- authentication-type cleartext, on page 208
- authentication, on page 209
- authentication, on page 210
- authentication, on page 211
- authentication, on page 212
- authentication, on page 213
- authentication, on page 214
- authentication bind, on page 215
- authentication challenge, on page 216
- authentication key-chain, on page 217
- authentication key-chain, on page 218
- authentication key-chain, on page 219
- authentication key-chain, on page 220
- authentication key-chain, on page 221
- authentication key-chain, on page 222
- authentication lifetime, on page 223
- authentication text, on page 224
- authentication type md5, on page 225

- authentication window-size, on page 226
- auto-bw, on page 227
- auto-bw, on page 228
- auto-bw timers frequency, on page 229
- auto-cost reference-bandwidth, on page 230
- auto-cost reference-bandwidth, on page 231
- auto-recovery, on page 232
- auto-remap-replication-servers, on page 233
- autonomous-system, on page 234
- autoroute announce, on page 235
- autoroute metric, on page 236
- autostate, on page 237
- autovlan enable, on page 238
- awk, on page 239

aaa accounting default

[no] aaa accounting default { group <s0> [<s1> [<s2> [<s3> [<s4> [<s5> [<s6> [<s7>]]]]]]]] [local1 | none] | local [none1] | none2 }

Syntax Description

no	(Optional) Negate a command or set its defaults
aaa	Configure aaa functions
accounting	Configure accounting methods
default	Configure default methods
group	Specify server groups to redirect the accounting logs
<i>s0</i>	Server group name
<i>s1</i>	(Optional) Server group name
<i>s2</i>	(Optional) Server group name
<i>s3</i>	(Optional) Server group name
<i>s4</i>	(Optional) Server group name
<i>s5</i>	(Optional) Server group name
<i>s6</i>	(Optional) Server group name
<i>s7</i>	(Optional) Server group name
none	(Optional) No accounting
none1	(Optional) No accounting
none2	No accounting
local	Use local accounting
local1	(Optional) Use local accounting

Command Mode

- /exec/configure

```
aaa accounting dot1x default group
```

aaa accounting dot1x default group

[no] aaa accounting dot1x default group <grp_name> +

Syntax Description

aaa	Configure aaa functions
accounting	Configure accounting methods
dot1x	accounting methods for dot1x
default	default aaa methods
<i>grp_name</i>	server group name

Command Mode

- /exec/configure

aaa authentication dot1x default group

[no] aaa authentication dot1x default group <grp_name> +

Syntax Description

aaa	Configure aaa functions
authentication	Configure authentication methods
<i>grp_name</i>	server group name

Command Mode

- /exec/configure

aaa authentication login ascii-authentication

aaa authentication login ascii-authentication

[no] aaa authentication login ascii-authentication

Syntax Description

no	(Optional) Negate a command or set its defaults
aaa	Configure aaa functions
authentication	Configure authentication methods
login	Configure methods for login
ascii-authentication	enable ascii authentication

Command Mode

- /exec/configure

aaa authentication login console

```
[no] aaa authentication login console { group <s0> [ { local1 | none | <s1> [ { local1 | none | <s2> [ { local1 | none | <s3> [ { local1 | none | <s4> [ { local1 | none | <s5> [ { local1 | none | <s6> [ { local1 | none | <s7> [ { local1 | none } ] } ] } ] } ] } ] } ] } ] | local | none }
```

Syntax Description

no	(Optional) Negate a command or set its defaults
aaa	Configure aaa functions
authentication	Configure authentication methods
login	Configure methods for login
console	Configure console methods
group	Specify server groups
s0	Server group name
none	(Optional) No authentication
s1	(Optional) Server group name
none	(Optional) No authentication
s2	(Optional) Server group name
none	(Optional) No authentication
s3	(Optional) Server group name
none	(Optional) No authentication
s4	(Optional) Server group name
none	(Optional) No authentication
s5	(Optional) Server group name
none	(Optional) No authentication
s6	(Optional) Server group name
none	(Optional) No authentication
s7	(Optional) Server group name
none	(Optional) No authentication
local	Use local username authentication
local1	(Optional) Use local username authentication

```
aaa authentication login console
```

none	No authentication
------	-------------------

Command Mode

- /exec/configure

aaa authentication login default

```
[no] aaa authentication login default { group <s0> [ { local1 | none | <s1> [ { local1 | none | <s2> [ { local1 | none | <s3> [ { local1 | none | <s4> [ { local1 | none | <s5> [ { local1 | none | <s6> [ { local1 | none | <s7> [ { local1 | none } ] } ] } ] } ] } ] } ] } ] | local | none }
```

Syntax Description

no	(Optional) Negate a command or set its defaults
aaa	Configure aaa functions
authentication	Configure authentication methods
login	Configure methods for login
default	Configure default methods
group	Specify server groups
<i>s0</i>	Server group name
none	(Optional) No authentication
<i>s1</i>	(Optional) Server group name
none	(Optional) No authentication
<i>s2</i>	(Optional) Server group name
none	(Optional) No authentication
<i>s3</i>	(Optional) Server group name
none	(Optional) No authentication
<i>s4</i>	(Optional) Server group name
none	(Optional) No authentication
<i>s5</i>	(Optional) Server group name
none	(Optional) No authentication
<i>s6</i>	(Optional) Server group name
none	(Optional) No authentication
<i>s7</i>	(Optional) Server group name
none	(Optional) No authentication
local	Use local username authentication
local1	(Optional) Use local username authentication

```
aaa authentication login default
```

none	No authentication
------	-------------------

Command Mode

- /exec/configure

aaa authentication login default fallback error local

[no] aaa authentication login { default | console } fallback error local

Syntax Description

no	(Optional) Negate a command or set its defaults
aaa	Configure aaa functions
authentication	Configure authentication methods
login	Configure methods for login
default	Configure default methods
console	Configure console methods
fallback	Configure fallback behavior
error	Fallback in case all AAA servers configured for remote authentication are unreachable (Authentication error)
local	Fallback to local authentication

Command Mode

- /exec/configure

aaa authentication login enable

aaa authentication login enable

[no] aaa authentication login { mschap | mschapv2 | chap } enable

Syntax Description

no	(Optional) Negate a command or set its defaults
aaa	Configure aaa functions
authentication	Configure authentication methods
login	Configure methods for login
mschap	MSCHAP authentication for login
mschapv2	MSCHAP V2 authentication for login
chap	CHAP authentication for login
enable	enable the authentication for login

Command Mode

- /exec/configure

aaa authentication login error-enable

[no] aaa authentication login error-enable

Syntax Description

no	(Optional) Negate a command or set its defaults
aaa	Configure aaa functions
authentication	Configure authentication methods
login	Configure methods for login
error-enable	enable display of error message on login failures

Command Mode

- /exec/configure

```
aaa authentication login invalid-username-log
```

aaa authentication login invalid-username-log

[no] aaa authentication login invalid-username-log

Syntax Description

no	(Optional) Negate a command or set its defaults
aaa	Configure aaa functions
authentication	Configure authentication methods
login	Configure methods for login
invalid-username-log	enable invalid username log

Command Mode

- /exec/configure

aaa authentication login password-aging enable

[no] aaa authentication login password-aging enable

Syntax Description

no	(Optional) Negate a command or set its defaults
aaa	Configure aaa functions
authentication	Configure authentication methods
login	Configure methods for login
password-aging	password-aging authentication for login
enable	enable password-aging notification

Command Mode

- /exec/configure

aaa authentication rejected

aaa authentication rejected

[no] aaa authentication rejected

Syntax Description

no	Negate a command or set its defaults
aaa	Configure aaa functions
authentication	Configure authentication methods
rejected	Set max number of fail attempts

Command Mode

- /exec/configure

aaa authentication rejected in ban

aaa authentication rejected <i1> in <i2> ban <i3>

Syntax Description

aaa	Configure aaa functions
authentication	Configure authentication methods
rejected	Set max number of fail attempts
<i>i1</i>	Fail attempts max value
in	Watch period for fail attempts
<i>i2</i>	Time period in seconds
ban	Block time period
<i>i3</i>	Time period in seconds

Command Mode

- /exec/configure

aaa authorization commands console

```
[no] aaa authorization { commands | config-commands } console { group <s0> [ { local | none | <s1> [ { local | none | <s2> [ { local | none | <s3> [ { local | none | <s4> [ { local | none | <s5> [ { local | none | <s6> [ { local | none | <s7> [ { local | none } ] } ] } ] } ] } ] } ] } ] || local | none }
```

Syntax Description

no	(Optional) Negate a command or set its defaults
aaa	Configure aaa functions
authorization	Configure authorization methods
commands	Authorization for all exec-mode commands
config-commands	Authorization for config commands
console	Configure methods console
group	Specify server groups
s0	Server group name
s1	(Optional) Server group name
s2	(Optional) Server group name
s3	(Optional) Server group name
s4	(Optional) Server group name
s5	(Optional) Server group name
s6	(Optional) Server group name
s7	(Optional) Server group name
local	(Optional) Use local RBACL based authorization
none	(Optional) No authorization

Command Mode

- /exec/configure

aaa authorization commands default

```
[no] aaa authorization { commands | config-commands } default { group <s0> [ { local | none | <s1> [ { local | none | <s2> [ { local | none | <s3> [ { local | none | <s4> [ { local | none | <s5> [ { local | none | <s6> [ { local | none | <s7> [ { local | none } ] } ] } ] } ] } ] } ] } ] | local | none }
```

Syntax Description

no	(Optional) Negate a command or set its defaults
aaa	Configure aaa functions
authorization	Configure authorization methods
commands	Authorization for all exec-mode commands
config-commands	Authorization for config commands
default	Configure default methods
group	Specify server groups
s0	Server group name
s1	(Optional) Server group name
s2	(Optional) Server group name
s3	(Optional) Server group name
s4	(Optional) Server group name
s5	(Optional) Server group name
s6	(Optional) Server group name
s7	(Optional) Server group name
local	(Optional) Use local RBACL based authorization
none	(Optional) No authorization

Command Mode

- /exec/configure

aaa authorization ssh default group

```
[no] aaa authorization { ssh-publickey | ssh-certificate } default { group <s0> [ { local1 | <s1> [ { local1 | <s2> [ { local1 | <s3> [ { local1 | <s4> [ { local1 | <s5> [ { local1 | <s6> [ { local1 | <s7> [ { local1 } ] } ] } ] } ] } ] } ] || local }
```

Syntax Description

no	(Optional) Negate a command or set its defaults
aaa	Configure aaa functions
authorization	Configure authorization methods
ssh-publickey	Configure ssh publickey
ssh-certificate	Configure ssh certificate
default	Configure default ssh methods
group	Specify server groups
s0	Server group name
s1	(Optional) Server group name
s2	(Optional) Server group name
s3	(Optional) Server group name
s4	(Optional) Server group name
s5	(Optional) Server group name
s6	(Optional) Server group name
s7	(Optional) Server group name
local	Use local username authentication
local1	(Optional) Use local username authentication

Command Mode

- /exec/configure

aaa bypass-user

[no] aaa bypass-user <s0> { [accounting] [authorization] | [authorization] [accounting] }

Syntax Description

no	(Optional) Negate a command or set its defaults
aaa	Configure aaa functions
bypass-user	Configure bypass user
s0	Enter the username
accounting	(Optional) Bypass accounting
authorization	(Optional) Bypass authorization

Command Mode

- /exec/configure

aaa group server ldap

aaa group server ldap

[no] aaa group server ldap <s0>

Syntax Description

no	(Optional) Negate a command or set its defaults
aaa	Configure aaa functions
group	Configure aaa server group
server	Configure aaa server group
ldap	LDAP server group name
s0	LDAP server group name

Command Mode

- /exec/configure

aaa group server radius

[no] aaa group server radius <s0>

Syntax Description

no	(Optional) Negate a command or set its defaults
aaa	Configure aaa functions
group	Configure aaa server group
server	Configure aaa server group
radius	RADIUS server group name
s0	RADIUS server group name

Command Mode

- /exec/configure

```
aaa group server tacacs
```

aaa group server tacacs

[no] aaa group server tacacs <s0>

Syntax Description

no	(Optional) Negate a command or set its defaults
aaa	Configure aaa functions
group	Configure aaa server group
server	Configure aaa server group
tacacs	TACACS+ server group name
s0	TACACS+ server group name

Command Mode

- /exec/configure

aaa server radius dynamic-author

[no] aaa server radius dynamic-author

Syntax Description

no	(Optional) Negate a command or set its defaults
aaa	Configure aaa functions
server	Local AAA server
radius	Profile for local radius server
dynamic-author	Local server profile for RFC 5176 support

Command Mode

- /exec/configure

aaa test-authentication

aaa test-authentication

[no] aaa test-authentication

Syntax Description

no	(Optional) Negate a command or set its defaults
aaa	Configure aaa functions
test-authentication	Test aaa authentication

Command Mode

- /exec/configure

aaa test-radius-authentication

[no] aaa test-radius-authentication

Syntax Description

no	(Optional) Negate a command or set its defaults
aaa	Configure aaa functions
test-radius-authentication	Test aaa radius authentication

Command Mode

- /exec/configure

aaa user default-role

aaa user default-role

[no] aaa user default-role

Syntax Description

no	(Optional) Negate a command or set its defaults
aaa	Configure aaa functions
user	Remotely authenticated user
default-role	Default role assigned by aaa-admin for remote authentication

Command Mode

- /exec/configure

abort

abort

Syntax Description

abort	abort plb session
-------	-------------------

Command Mode

- /exec/configure/plb-session-device-group

abort

abort

Syntax Description

abort	Abort the current configuration session
-------	---

Command Mode

- /exec/configure

abort

abort

Syntax Description

abort	Exit region configuration mode, aborting changes
-------	--

Command Mode

- /exec/configure/spanning-tree/mst/configuration

abort

abort

abort

Syntax Description

abort	abort itd session
-------	-------------------

Command Mode

- /exec/configure/itd-session-device-group

absolute-timeout

{ absolute-timeout <i0> | no absolute-timeout [<i0>] }

Syntax Description

no	Negate a command or set its defaults
absolute-timeout	Configure absolute timeout
<i>i0</i>	Enter timeout in minutes, 0 to disable

Command Mode

- /exec/configure/line

absolute start

absolute start

```
{ [ <seqno> ] | no } absolute { start <stime> <sday> <smonth> <syear> [ end <etime> <eday> <emonth> <eyear> ] | end <etime> <eday> <emonth> <eyear> }
```

Syntax Description

<i>seqno</i>	(Optional) Sequence number
no	Negate a command or set its defaults
absolute	Absolute time and date
start	Starting time and date
<i>stime</i>	Starting time
<i>sday</i>	Day of the month
<i>smonth</i>	Month
<i>syear</i>	Year
end	(Optional) Ending time and date
<i>etime</i>	(Optional) Ending time
<i>eday</i>	(Optional) Day of the month
<i>emonth</i>	(Optional) Month
<i>eyear</i>	(Optional) Year

Command Mode

- /exec/configure/timerange

```
accept-lifetime month_a month_b month_c month_d month_e month_f month_g month_h month_i month_j month_k month_l duration infinite month_a month_b
month_c month_d month_e month_f month_g month_h month_i month_j month_k month_l
```

accept-lifetime month_a month_b month_c month_d month_e month_f month_g month_h month_i month_j month_k month_l duration infinite month_a month_b month_c month_d month_e month_f month_g month_h month_i month_j month_k month_l

```
{ { accept-lifetime [ local ] <stime> { month_a | month_b | month_c | month_d | month_e | month_f | month_g |
| month_h | month_i | month_j | month_k | month_l } <sday> <syear> { duration <dsec> | infinite | <etime>
{ month_a | month_b | month_c | month_d | month_e | month_f | month_g | month_h | month_i | month_j |
month_k | month_l } <eday> <eyear> } } | { no accept-lifetime [ [ local ] <stime> { month_a | month_b |
month_c | month_d | month_e | month_f | month_g | month_h | month_i | month_j | month_k | month_l }
<sday> <syear> { duration <dsec> | infinite | <etime> { month_a | month_b | month_c | month_d | month_e |
month_f | month_g | month_h | month_i | month_j | month_k | month_l } <eday> <eyear> } ] }
```

Syntax Description

no	Negate a command or set its defaults
accept-lifetime	Set accept lifetime of key
local	(Optional) Specify time in local timezone
<i>stime</i>	HH:MM:SS Time to start <0-23>:<0-59>:<0-59>
<i>etime</i>	HH:MM:SS Time to end <0-23>:<0-59>:<0-59>
month_a	
month_b	
month_c	
month_d	
month_e	
month_f	
month_g	
month_h	
month_i	
month_j	
month_k	
month_l	
<i>sday</i>	Day of the month to start

```
accept-lifetime month_a month_b month_c month_d month_e month_f month_g month_h month_i month_j month_k month_l duration infinite month_a month_b
month_c month_d month_e month_f month_g month_h month_i month_j month_k month_l
```

<i>eday</i>	Day of the month to end
<i>syear</i>	Year to start
<i>eyear</i>	Year to start
<i>duration</i>	Set key lifetime duration
<i>dsec</i>	Duration in seconds
<i>infinite</i>	Never Expires

Command Mode

- /exec/configure/keychain-key

access-class

[no] access-class <name> <inout>

Syntax Description

no	(Optional) Negate a command or set its defaults
access-class	Specify IPv4 access control for packets
<i>name</i>	List name
<i>inout</i>	Traffic direction

Command Mode

- /exec/configure/line

access-list

access-list

[no] access-list <acl-name>

Syntax Description

no	(Optional) Negate a command or set its defaults
access-list	Configure access-list for PLB service
<i>acl-name</i>	Access-list name

Command Mode

- /exec/configure/plb

access-list

[no] access-list <acl-name> [device-group <dgrp_name>]

Syntax Description

no	(Optional) Negate a command or set its defaults
access-list	ITD access-list name
device-group	(Optional) device-group
<i>acl-name</i>	ITD user ACL name
<i>dgrp_name</i>	(Optional) access-list device-group name

Command Mode

- /exec/configure/itd

access-list ipv6

access-list ipv6

[no] access-list ipv6 <acl-name> [device-group <dgrp_name>]

Syntax Description

no	(Optional) Negate a command or set its defaults
access-list	ITD access-list name
ipv6	ipv6 access-list
device-group	(Optional) device-group
<i>acl-name</i>	ITD user ACL name
<i>dgrp_name</i>	(Optional) access-list ipv6 device-group name

Command Mode

- /exec/configure/itd

access vlan

[no] access vlan <vlan>

Syntax Description

no	(Optional) Negate a command or set its defaults
access	access
vlan	vlan
<i>vlan</i>	Vlan

Command Mode

- /exec/configure/smartzc /exec/configure/smartz

acllog match-log-level

acllog match-log-level

[no] acllog match-log-level <level>

Syntax Description

no	(Optional) Negate a command or set its defaults
acllog	Configure ACL logging
match-log-level	acllog logging level
<i>level</i>	match log level

Command Mode

- /exec/configure

action

[no] action { drop [log] | forward | redirect <intf> }

Syntax Description

no	(Optional) Negate a command or set its defaults
action	Specify the action clause
drop	Drop matched packets
log	(Optional) Log matched packets
forward	Forward matched packets
redirect	Redirect matched packets to the specified interface(s)
<i>intf</i>	Interface traffic is redirected to

Command Mode

- /exec/configure/vacl

action

[no] action <label>

Syntax Description

no	Negate a command or set its defaults
action	Configure the actions to be executed
<i>label</i>	Enter the label <num1>[.<num2>] for action order num2 must be 0-9

Command Mode

- /exec/configure/event-manager-applet

action cli

action <label> cli [local] <vsh_cmd>

Syntax Description

action	Configure the actions to be executed
<i>label</i>	Enter the label <num1>[.<num2>] for action order num2 must be 0-9
cli	Configure a VSH CLI action
local	(Optional) Execute the action in the same card on which the event happens
<i>vsh_cmd</i>	Enter the vsh command

Command Mode

- /exec/configure/event-manager-applet

action counter name value op

action counter name value op

action <label> counter name <counter-name> value <counter-value> op <op-val>

Syntax Description

action	Configure the actions to be executed
<i>label</i>	Enter the label <num1>[.<num2>] for action order num2 must be 0-9
counter	Specify the name of the counter
name	Specify the name of the counter
<i>counter-name</i>	Name of the counter
value	Specify the value to be applied to the counter
<i>counter-value</i>	Enter an integer value or a \$ prefixed name (parameter substitution)
op	Specify the operator to be applied
<i>op-val</i>	Enter the value of the operator

Command Mode

- /exec/configure/event-manager-applet

action eem test

action <label> eem test <param>

Syntax Description

action	Configure the actions to be executed
<i>label</i>	Enter the label <num1>[.<num2>] for action order num2 must be 0-9
eem	Event Manager command
test	Do test action
<i>param</i>	Test action parameter (dummy value)

Command Mode

- /exec/configure/event-manager-applet

action event-default

action event-default

action <label> event-default

Syntax Description

action	Configure the actions to be executed
<i>label</i>	Enter the label <num1>[.<num2>] for action order num2 must be 0-9
event-default	Do default action for the event

Command Mode

- /exec/configure/event-manager-applet

action forceshut reset-reason

[no] action <label2> forceshut [{ module { <module> | <mod-str> } | <s0> { <santa-cruz-range> | <santa-cruz-string> } }] reset-reason <reset_reason_string>

Syntax Description

no	(Optional) Negate a command or set its defaults
action	Configure the actions to be executed
<i>label2</i>	Enter the label <num1>[.<num2>] for action order num2 must be 0-9
forceshut	Force the entire switch to shut down
module	(Optional) Optional. Module to be forced to shut down(optional argument)
<i>module</i>	(Optional) please enter the module number
<i>mod-str</i>	(Optional) Enter the module number (integer value) or a \$ prefixed parameter name
<i>s0</i>	(Optional) Optional. Xbar to be forced to shut down(optional argument)
<i>santa-cruz-range</i>	(Optional) please enter the xbar number
<i>santa-cruz-string</i>	(Optional) Enter the xbar number (integer value) or a \$ prefixed parameter name
reset-reason	Shut down (with reset-reason)
<i>reset_reason_string</i>	please enter reset_reason_string in quotes

Command Mode

- /exec/configure/event-manager-applet

action overbudgetshut

[no] action <label> overbudgetshut [module { <module> | <mod-str> }]

Syntax Description

no	(Optional) Negate a command or set its defaults
action	Configure the actions to be executed
<i>label</i>	Enter the label <num1>[.<num2>] for action order num2 must be 0-9
overbudgetshut	Shut down the specified LCs due to power over budget
module	(Optional) Optional. Module to be force-shut(optional arg)
<i>module</i>	(Optional) please enter the module number
<i>mod-str</i>	(Optional) Enter the module number (integer value) or a \$ prefixed parameter name

Command Mode

- /exec/configure/event-manager-applet

action policy-default

action <label> policy-default

Syntax Description

action	Configure the actions to be executed
<i>label</i>	Enter the label <num1>[.<num2>] for action order num2 must be 0-9
policy-default	Do default action(s) of the policy being overridden

Command Mode

- /exec/configure/event-manager-applet

action reload

action reload

[no] action <label> reload [module { <module> | <mod-str> }]

Syntax Description

no	(Optional) Negate a command or set its defaults
action	Configure the actions to be executed
<i>label</i>	Enter the label <num1>[.<num2>] for action order num2 must be 0-9
reload	Reload the system or a specific module
module	(Optional) Reload a specific module
<i>module</i>	(Optional) please enter the module number
<i>mod-str</i>	(Optional) Enter the module number (integer value) or a \$ prefixed parameter name

Command Mode

- /exec/configure/event-manager-applet

action snmp-trap

action <label> snmp-trap [intdata1 <integer-data1>] [intdata2 <integer-data2>] [strdata <string-data>]

Syntax Description

action	Configure the actions to be executed
<i>label</i>	Enter the label <num1>[.<num2>] for action order num2 must be 0-9
snmp-trap	Send
intdata1	(Optional) Enter
<i>integer-data1</i>	(Optional) Integer
intdata2	(Optional) Enter
<i>integer-data2</i>	(Optional) Integer
strdata	(Optional) Enter
<i>string-data</i>	(Optional) String

Command Mode

- /exec/configure/event-manager-applet

action syslog msg

action syslog msg

action <label> syslog [priority { <prio> | <prio-str> }] msg <msg-text>

Syntax Description

action	Configure the actions to be executed
<i>label</i>	Enter the label <num1>[.<num2>] for action order num2 must be 0-9
syslog	Generate a syslog message
priority	(Optional) Priority of the syslog message
<i>prio</i>	(Optional) Enter the priority
<i>prio-str</i>	(Optional) Enter a valid \$ prefixed name, for parameter substitution
msg	Enter the message for the syslog
<i>msg-text</i>	The message text

Command Mode

- /exec/configure/event-manager-applet

additional-paths install backup

[no] additional-paths install backup

Syntax Description

no	(Optional) Negate a command or set its defaults
additional-paths	Additional paths configuration
install	Install backup path
backup	Install backup path

Command Mode

- /exec/configure/router-bgp/router-bgp-af-ipv6 /exec/configure/router-bgp/router-bgp-vrf-af-ipv6
/exec/configure/router-bgp/router-bgp-af-ipv4 /exec/configure/router-bgp/router-bgp-vrf-af-ipv4

additional-paths receive

additional-paths receive

[no] additional-paths receive

Syntax Description

no	(Optional) Negate a command or set its defaults
additional-paths	Additional paths configuration
receive	Additional paths Receive capability

Command Mode

- /exec/configure/router-bgp/router-bgp-af /exec/configure/router-bgp/router-bgp-af-ipv4-mvpn
 /exec/configure/router-bgp/router-bgp-af-ipv6-mvpn /exec/configure/router-bgp/router-bgp-af-vpnv4
 /exec/configure/router-bgp/router-bgp-af-vpnv6 /exec/configure/router-bgp/router-bgp-af-ipv4-label
 /exec/configure/router-bgp/router-bgp-af-ipv6-label /exec/configure/router-bgp/router-bgp-af-l2vpn-evpn

additional-paths selection route-map

[no] additional-paths selection route-map <rmap-name>

Syntax Description

no	(Optional) Negate a command or set its defaults
additional-paths	Additional paths configuration
selection	Additional paths selection
route-map	Route-map for additional paths selection
<i>rmap-name</i>	Route-map name

Command Mode

- /exec/configure/router-bgp/router-bgp-af /exec/configure/router-bgp/router-bgp-af-vpnv4
/exec/configure/router-bgp/router-bgp-af-vpnv6 /exec/configure/router-bgp/router-bgp-af-ipv6-label
/exec/configure/router-bgp/router-bgp-af-ipv4-mvpn /exec/configure/router-bgp/router-bgp-af-ipv6-mvpn
/exec/configure/router-bgp/router-bgp-af-ipv4-label /exec/configure/router-bgp/router-bgp-af-l2vpn-evpn

additional-paths send

additional-paths send

[no] additional-paths send

Syntax Description

no	(Optional) Negate a command or set its defaults
additional-paths	Additional paths configuration
send	Additional paths Send capability

Command Mode

- /exec/configure/router-bgp/router-bgp-af /exec/configure/router-bgp/router-bgp-af-vpnv4
/exec/configure/router-bgp/router-bgp-af-vpnv6 /exec/configure/router-bgp/router-bgp-af-ipv6-label
/exec/configure/router-bgp/router-bgp-af-ipv4-mvpn /exec/configure/router-bgp/router-bgp-af-ipv6-mvpn
/exec/configure/router-bgp/router-bgp-af-ipv4-label /exec/configure/router-bgp/router-bgp-af-l2vpn-evpn

address-family ipv4

[no] address-family ipv4

Syntax Description

no	(Optional) Negate a command or set its defaults
address-family	Configure an address-family
ipv4	Configure IPv4 address-family

Command Mode

- /exec/configure/config-sr-mpls/config-sr-mpls-conn-pfxsid

address-family ipv4 labeled-unicast

address-family ipv4 labeled-unicast

[no] address-family ipv4 labeled-unicast

Syntax Description

no	(Optional) Negate a command or set its defaults
address-family	Configure an address-family
ipv4	Configure IPv4 address-family
labeled-unicast	Configure labeled unicast sub-address-family

Command Mode

- /exec/configure/router-bgp

address-family ipv4 labeled-unicast

{ [no | default] } address-family ipv4 labeled-unicast

Syntax Description

no	(Optional) Negate a command or set its defaults
default	(Optional) Inherit values from a peer template
address-family	Configure an address-family for peer
ipv4	Configure IPv4 address-family
labeled-unicast	Configure labeled unicast sub-address-family

Command Mode

- /exec/configure/router-bgp/router-bgp-neighbor /exec/configure/router-bgp/router-bgp-template-neighbor
/exec/configure/router-bgp/router-bgp-prefixneighbor

address-family ipv4 mdt

address-family ipv4 mdt

{ [no | default] } address-family ipv4 mdt

Syntax Description

no	(Optional) Negate a command or set its defaults
default	(Optional) Inherit values from a peer template
address-family	Configure an address-family
ipv4	Configure IPv4 address-family
mdt	Configure Multicast Distribution Tree

Command Mode

- /exec/configure/router-bgp/router-bgp-neighbor /exec/configure/router-bgp/router-bgp-template-neighbor
/exec/configure/router-bgp/router-bgp-prefixneighbor

address-family ipv4 mdt

[no] address-family ipv4 mdt

Syntax Description

no	(Optional) Negate a command or set its defaults
address-family	Configure an address-family
ipv4	Configure IPv4 address-family
mdt	Configure Multicast Distribution Tree

Command Mode

- /exec/configure/router-bgp

address-family ipv4 mvpn

address-family ipv4 mvpn

[no] address-family ipv4 mvpn

Syntax Description

no	(Optional) Negate a command or set its defaults
address-family	Configure an address-family
ipv4	Configure IPv4 address-family
mvpn	Configure Multicast VPN

Command Mode

- /exec/configure/router-bgp

address-family ipv4 mvpn

{ [no | default] } address-family ipv4 mvpn

Syntax Description

no	(Optional) Negate a command or set its defaults
default	(Optional) Inherit values from a peer template
address-family	Configure an address-family
ipv4	Configure IPv4 address-family
mvpn	Configure Multicast VPN

Command Mode

- /exec/configure/router-bgp/router-bgp-neighbor /exec/configure/router-bgp/router-bgp-template-neighbor
/exec/configure/router-bgp/router-bgp-prefixneighbor

address-family ipv4 unicast

address-family ipv4 unicast

[no | default] address-family ipv4 { unicast | multicast }

Syntax Description

no	(Optional) Negate a command or set its defaults
default	(Optional) Inherit values from a peer template
address-family	Configure an address-family for peer
ipv4	Configure IPv4 address-family
unicast	Configure Unicast sub-address-family
multicast	Configure Multicast sub-address-family

Command Mode

- /exec/configure/router-bgp/router-bgp-vrf-neighbor
- /exec/configure/router-bgp/router-bgp-vrf-prefixneighbor

address-family ipv4 unicast

[no] address-family ipv4 unicast

Syntax Description

no	(Optional) Negate a command or set its defaults
address-family	Configure an address-family
ipv4	Configure IPv4 address-family
unicast	Configure unicast address-family

Command Mode

- /exec/configure/router-rip

address-family ipv4 unicast

address-family ipv4 unicast

[no] address-family ipv4 unicast

Syntax Description

no	(Optional) Negate a command or set its defaults
address-family	Configure an address-family
ipv4	Configure IPv4 address-family
unicast	Configure unicast address-family

Command Mode

- /exec/configure/router-rip/router-rip-vrf

address-family ipv4 unicast

[no] address-family ipv4 unicast

Syntax Description

no	(Optional) Negate a command or set its defaults
address-family	Configure an address-family
ipv4	Configure IPv4 address-family
unicast	Configure unicast address-family

Command Mode

- /exec/configure/router-isis/router-isis-vrf-common

address-family ipv4 unicast

address-family ipv4 unicast

[no] address-family ipv4 unicast

Syntax Description

no	(Optional) Negate a command or set its defaults
address-family	Configure an address-family
ipv4	Configure IPv4 address-family
unicast	Configure unicast address-family

Command Mode

- /exec/configure/router-eigrp/router-eigrp-vrf-common

address-family ipv4 unicast

[no] { address-family ipv4 unicast }

Syntax Description

no	(Optional) Negate a command or set its defaults
address-family	Configure Address Family and its parameters
ipv4	Configure IPv4 Address Family parameters
unicast	Unicast

Command Mode

- /exec/configure/mpls_static

address-family ipv4 unicast

address-family ipv4 unicast

[no] address-family ipv4 unicast

Syntax Description

no	(Optional) Negate a command or set its defaults
address-family	Configure address family
ipv4	Configure IPv4 address family
unicast	Configure Unicast address family

Command Mode

- /exec/configure/vrf

address-family ipv4 unicast

[no] address-family ipv4 { unicast | multicast }

Syntax Description

no	(Optional) Negate a command or set its defaults
address-family	Configure an address-family
ipv4	Configure IPv4 address-family
unicast	Configure unicast address-family
multicast	Configure multicast address-family

Command Mode

- /exec/configure/router-bgp

address-family ipv4 unicast

address-family ipv4 unicast

[no] address-family ipv4 { unicast | multicast }

Syntax Description

no	(Optional) Negate a command or set its defaults
address-family	Configure an address-family
ipv4	Configure IPv4 address-family
unicast	Configure unicast address-family
multicast	Configure multicast address-family

Command Mode

- /exec/configure/router-bgp/router-bgp-vrf

address-family ipv4 unicast

{ [no | default] } address-family ipv4 { unicast | multicast }

Syntax Description

no	(Optional) Negate a command or set its defaults
default	(Optional) Inherit values from a peer template
address-family	Configure an address-family for peer
ipv4	Configure IPv4 address-family
unicast	Configure Unicast sub-address-family
multicast	Configure Multicast sub-address-family

Command Mode

- /exec/configure/router-bgp/router-bgp-neighbor /exec/configure/router-bgp/router-bgp-template-neighbor
/exec/configure/router-bgp/router-bgp-prefixneighbor

address-family ipv4 unicast

address-family ipv4 unicast

[no] address-family ipv4 unicast

Syntax Description

no	(Optional) Negate a command or set its defaults
address-family	Configure an address-family
ipv4	Configure IPv4 address-family
unicast	Configure unicast address-family

Command Mode

- /exec/configure/l2mp-isis/l2mp-isis-vrf-common

address-family ipv6

[no] address-family ipv6

Syntax Description

no	(Optional) Negate a command or set its defaults
address-family	Configure an address-family
ipv6	Configure IPv6 address-family

Command Mode

- /exec/configure/config-sr-mpls/config-sr-mpls-conn-pfxsid

address-family ipv6 labeled-unicast

address-family ipv6 labeled-unicast

{ [no | default] } address-family ipv6 labeled-unicast

Syntax Description

no	(Optional) Negate a command or set its defaults
default	(Optional) Inherit values from a peer template
address-family	Configure an address-family for peer
ipv6	Configure IPv6 address-family
labeled-unicast	Configure labeled unicast sub-address-family

Command Mode

- /exec/configure/router-bgp/router-bgp-neighbor /exec/configure/router-bgp/router-bgp-template-neighbor
/exec/configure/router-bgp/router-bgp-prefixneighbor

address-family ipv6 labeled-unicast

[no] address-family ipv6 labeled-unicast

Syntax Description

no	(Optional) Negate a command or set its defaults
address-family	Configure an address-family
ipv6	Configure IPv6 address-family
labeled-unicast	Configure labeled unicast sub-address-family

Command Mode

- /exec/configure/router-bgp

address-family ipv6 mvpn

address-family ipv6 mvpn

[no] address-family ipv6 mvpn

Syntax Description

no	(Optional) Negate a command or set its defaults
address-family	Configure an address-family
ipv6	Configure IPv6 address-family
mvpn	Configure Multicast VPN

Command Mode

- /exec/configure/router-bgp

address-family ipv6 mvpn

{ [no | default] } address-family ipv6 mvpn

Syntax Description

no	(Optional) Negate a command or set its defaults
default	(Optional) Inherit values from a peer template
address-family	Configure an address-family
ipv6	Configure IPv6 address-family
mvpn	Configure Multicast VPN

Command Mode

- /exec/configure/router-bgp/router-bgp-neighbor /exec/configure/router-bgp/router-bgp-template-neighbor
/exec/configure/router-bgp/router-bgp-prefixneighbor

address-family ipv6 unicast

address-family ipv6 unicast

[no] address-family ipv6 unicast

Syntax Description

no	(Optional) Negate a command or set its defaults
address-family	Configure an address-family
ipv6	Configure IPv6 address-family
unicast	Configure IPv6 unicast address-family

Command Mode

- /exec/configure/router-ospf3

address-family ipv6 unicast

[no] address-family ipv6 unicast

Syntax Description

no	(Optional) Negate a command or set its defaults
address-family	Configure an address-family
ipv6	Configure IPv6 address-family
unicast	Configure unicast address-family

Command Mode

- /exec/configure/router-rip

address-family ipv6 unicast

address-family ipv6 unicast

[no] address-family ipv6 unicast

Syntax Description

no	(Optional) Negate a command or set its defaults
address-family	Configure an address-family
ipv6	Configure IPv6 address-family
unicast	Configure unicast address-family

Command Mode

- /exec/configure/router-rip/router-rip-vrf

address-family ipv6 unicast

[no] address-family ipv6 unicast

Syntax Description

no	(Optional) Negate a command or set its defaults
address-family	Configure an address-family
ipv6	Configure IPv6 address-family
unicast	Configure unicast address-family

Command Mode

- /exec/configure/router-isis/router-isis-vrf-common

address-family ipv6 unicast

address-family ipv6 unicast

[no] address-family ipv6 unicast

Syntax Description

no	(Optional) Negate a command or set its defaults
address-family	Configure an address-family
ipv6	Configure IPv6 address-family
unicast	Configure IPv6 unicast address-family

Command Mode

- /exec/configure/router-ospf3/vrf

address-family ipv6 unicast

[no] address-family ipv6 unicast

Syntax Description

no	(Optional) Negate a command or set its defaults
address-family	Configure an address-family
ipv6	Configure IPv6 address-family
unicast	Configure unicast address-family

Command Mode

- /exec/configure/router-eigrp/router-eigrp-vrf-common

address-family ipv6 unicast

address-family ipv6 unicast

[no] { address-family ipv6 unicast }

Syntax Description

no	(Optional) Negate a command or set its defaults
address-family	Configure Address Family and its parameters
ipv6	Configure IPv6 Address Family parameters
unicast	Unicast

Command Mode

- /exec/configure/mpls_static

address-family ipv6 unicast

[no] address-family ipv6 unicast

Syntax Description

no	(Optional) Negate a command or set its defaults
address-family	Configure address family
ipv6	Configure IPv6 address family
unicast	Configure Unicast address family

Command Mode

- /exec/configure/vrf

address-family ipv6 unicast

address-family ipv6 unicast

[no] address-family ipv6 { unicast | multicast }

Syntax Description

no	(Optional) Negate a command or set its defaults
address-family	Configure an address-family
ipv6	Configure IPv6 address-family
unicast	Configure unicast address-family
multicast	Configure multicast address-family

Command Mode

- /exec/configure/router-bgp

address-family ipv6 unicast

[no] address-family ipv6 { unicast | multicast }

Syntax Description

no	(Optional) Negate a command or set its defaults
address-family	Configure an address-family
ipv6	Configure IPv6 address-family
unicast	Configure unicast address-family
multicast	Configure multicast address-family

Command Mode

- /exec/configure/router-bgp/router-bgp-vrf

address-family ipv6 unicast

{ [no | default] } address-family ipv6 { unicast | multicast }

Syntax Description

no	(Optional) Negate a command or set its defaults
default	(Optional) Inherit values from a peer template
address-family	Configure an address-family for peer
ipv6	Configure IPv6 address-family
unicast	Configure Unicast sub-address-family
multicast	Configure Multicast sub-address-family

Command Mode

- /exec/configure/router-bgp/router-bgp-neighbor /exec/configure/router-bgp/router-bgp-template-neighbor
/exec/configure/router-bgp/router-bgp-prefixneighbor

address-family ipv6 unicast

[no | default] address-family ipv6 { unicast | multicast }

Syntax Description

no	(Optional) Negate a command or set its defaults
default	(Optional) Inherit values from a peer template
address-family	Configure an address-family for peer
ipv6	Configure IPv6 address-family
unicast	Configure Unicast sub-address-family
multicast	Configure Multicast sub-address-family

Command Mode

- /exec/configure/router-bgp/router-bgp-vrf-neighbor
/exec/configure/router-bgp/router-bgp-vrf-prefixneighbor

address-family ipv6 unicast

address-family ipv6 unicast

[no] address-family ipv6 unicast

Syntax Description

no	(Optional) Negate a command or set its defaults
address-family	Configure an address-family
ipv6	Configure IPv6 address-family
unicast	Configure unicast address-family

Command Mode

- /exec/configure/l2mp-isis/l2mp-isis-vrf-common

address-family l2vpn evpn

[no] address-family l2vpn evpn

Syntax Description

no	(Optional) Negate a command or set its defaults
address-family	Configure an address-family
l2vpn	Configure L2VPN address-family
evpn	Configure L2VPN EVPN address-family

Command Mode

- /exec/configure/router-bgp

address-family l2vpn evpn

address-family l2vpn evpn

{ [no | default] } address-family l2vpn evpn

Syntax Description

no	(Optional) Negate a command or set its defaults
default	(Optional) Inherit values from a peer template
address-family	Configure an address-family
l2vpn	Configure L2VPN address-family
evpn	Configure L2VPN EVPN address-family

Command Mode

- /exec/configure/router-bgp/router-bgp-neighbor /exec/configure/router-bgp/router-bgp-template-neighbor
/exec/configure/router-bgp/router-bgp-prefixneighbor

address-family l2vpn vpls

{ [no | default] } address-family l2vpn vpls

Syntax Description

no	(Optional) Negate a command or set its defaults
default	(Optional) Inherit values from a peer template
address-family	Configure an address-family
l2vpn	Configure L2VPN address-family
vpls	Configure L2VPN VPLS address-family

Command Mode

- /exec/configure/router-bgp/router-bgp-neighbor /exec/configure/router-bgp/router-bgp-template-neighbor
/exec/configure/router-bgp/router-bgp-prefixneighbor

address-family l2vpn vpls

[no] address-family l2vpn vpls

Syntax Description

no	(Optional) Negate a command or set its defaults
address-family	Configure an address-family
l2vpn	Configure L2VPN address-family
vpls	Configure L2VPN VPLS address-family

Command Mode

- /exec/configure/router-bgp

address-family link-state

[no] address-family link-state

Syntax Description

no	(Optional) Negate a command or set its defaults
address-family	Configure an address-family
link-state	Configure link-state address-family

Command Mode

- /exec/configure/router-bgp

address-family link-state

address-family link-state

{ [no | default] } address-family link-state

Syntax Description

no	(Optional) Negate a command or set its defaults
default	(Optional) Inherit values from a peer template
address-family	Configure an address-family
link-state	Configure link-state address-family

Command Mode

- /exec/configure/router-bgp/router-bgp-neighbor /exec/configure/router-bgp/router-bgp-template-neighbor
/exec/configure/router-bgp/router-bgp-prefixneighbor

address-family vpnv4 unicast

{ [no | default] } address-family vpnv4 unicast

Syntax Description

no	(Optional) Negate a command or set its defaults
default	(Optional) Inherit values from a peer template
address-family	Configure an address-family for peer
vpnv4	Configure IPv4 VPN address-family
unicast	Configure Unicast sub-address-family

Command Mode

- /exec/configure/router-bgp/router-bgp-neighbor /exec/configure/router-bgp/router-bgp-template-neighbor
/exec/configure/router-bgp/router-bgp-prefixneighbor

address-family vpnv4 unicast

address-family vpnv4 unicast

[no] address-family vpnv4 unicast

Syntax Description

no	(Optional) Negate a command or set its defaults
address-family	Configure an address-family
vpnv4	Configure IPv4 VPN address-family
unicast	Configure Unicast sub-address-family

Command Mode

- /exec/configure/router-bgp

address-family vpnv6 unicast

{ [no | default] } address-family vpnv6 unicast

Syntax Description

no	(Optional) Negate a command or set its defaults
default	(Optional) Inherit values from a peer template
address-family	Configure an address-family for peer
vpnv6	Configure IPv6 VPN address-family
unicast	Configure Unicast sub-address-family

Command Mode

- /exec/configure/router-bgp/router-bgp-neighbor /exec/configure/router-bgp/router-bgp-template-neighbor
/exec/configure/router-bgp/router-bgp-prefixneighbor

address-family vpnv6 unicast

address-family vpnv6 unicast

[no] address-family vpnv6 unicast

Syntax Description

no	(Optional) Negate a command or set its defaults
address-family	Configure an address-family
vpnv6	Configure IPv6 VPN address-family
unicast	Configure Unicast sub-address-family

Command Mode

- /exec/configure/router-bgp

address

[no] address <ip_addr>

Syntax Description

no	(Optional) Negate a command or set its defaults
address	IP Address configuration
<i>ip_addr</i>	IP Address

Command Mode

- /exec/configure/if-eth-any/vrrs

address

{ address <ip_address> | no address [<ip_address>] }

Syntax Description

no	Negate a command or set its defaults
address	Add an IP address to the vr
<i>ip_address</i>	ip address

Command Mode

- /exec/configure/if-eth-any/vrrp

address

[no] address <ip_addr> [primary]

Syntax Description

no	(Optional) Negate a command or set its defaults
address	IP Address
primary	(Optional) Primary Address
<i>ip_addr</i>	IPv4 Address

Command Mode

- /exec/configure/if-eth-any/vrrpv3_ipv4

address

[no] address <ipv6_addr>

Syntax Description

no	(Optional) Negate a command or set its defaults
address	IP Address

Command Mode

- /exec/configure/if-eth-any/vrrpv3_ipv6

address

[no] address <ipv6_addr>

Syntax Description

no	(Optional) Negate a command or set its defaults
address	IP Address configuration

Command Mode

- /exec/configure/if-eth-any/vrrs

address

[no] address <start-ip> <end-ip>

Syntax Description

no	(Optional) Negate a command or set its defaults
address	Address range for the pool
<i>start-ip</i>	Start IP address
<i>end-ip</i>	End IP address

Command Mode

- /exec/configure/ipnat-pool

address port-number

address { <ipv4-addr> | <ipv6-addr> } port-number <port-number> | no address

Syntax Description

no	Negate a command or set its defaults
address	Configure IPv4 or IPv6 address
<i>ipv4-addr</i>	IPv4 address of the BMP server
port-number	Configure the port for the BMP server
<i>port-number</i>	Port number value

Command Mode

- /exec/configure/router-bgp/router-bgp-bmp-server

address primary

address primary

[no] address <ipv6_addr> primary

Syntax Description

no	(Optional) Negate a command or set its defaults
address	IP Address
primary	Primary Address

Command Mode

- /exec/configure/if-eth-any/vrrpv3_ipv6

address secondary

[no] address <ip_addr> secondary

Syntax Description

no	(Optional) Negate a command or set its defaults
address	IP Address
secondary	Secondary Address
<i>ip_addr</i>	IPv4 Address

Command Mode

- /exec/configure/if-eth-any/vrrpv3_ipv4

address secondary

{ address <ip_address> secondary | no address <ip_address> secondary }

Syntax Description

no	Negate a command or set its defaults
address	Add an IP address to the vr
<i>ip_address</i>	ip address
secondary	a virtual IP address without owner

Command Mode

- /exec/configure/if-eth-any/vrrp

adjacency-check

[no] adjacency-check

Syntax Description

no	(Optional) Negate a command or set its defaults
adjacency-check	Adjacency's protocol support consistency check

Command Mode

- /exec/configure/router-isis/router-isis-af-ipv4 /exec/configure/router-isis/router-isis-af-ipv6

advertise-gw-ip

advertise-gw-ip

[no | default] advertise-gw-ip

Syntax Description

no	(Optional) Negate a command or set its defaults
default	(Optional) Inherit values from a peer template
advertise-gw-ip	Advertise Gateway IP in Type-5 routes to neighbor

Command Mode

- /exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af-l2vpn-evpn

advertise-labels

[no] advertise-labels [vrf { <vrf-name> | <vrf-known-name> }] [[for <pfx-list> [to <peer-pfx-list>]] | [interface <intf>]]

Syntax Description

no	(Optional) Negate a command or set its defaults
advertise-labels	Label advertisements
vrf	(Optional) VRF Routing/Forwarding instance information
<i>vrf-name</i>	(Optional) VPN Routing/Forwarding instance name
<i>vrf-known-name</i>	(Optional) Known VRF name
for	(Optional) Prefix list specifying controls on destination prefixes
<i>pfx-list</i>	(Optional) Name of prefix list
to	(Optional) Prefix list specifying controls on LDP peers
<i>peer-pfx-list</i>	(Optional) Name of prefix list
interface	(Optional) Advertise /32 interface address
<i>intf</i>	(Optional)

Command Mode

- /exec/configure/ldp

advertise-map exist default advertise-map

{ [no] advertise-map <advt-rmap-name> { exist-map | non-exist-map } <cond-rmap-name> } | default
advertise-map

Syntax Description

no	(Optional) Negate a command or set its defaults
default	Inherit values from a peer template
advertise-map	Specify route-map for conditional advertisement
exist-map	Condition route-map to advertise only when prefix in condition exists
non-exist-map	Condition route-map to advertise only when prefix in condition does not exist
<i>advt-rmap-name</i>	Route-map name
<i>cond-rmap-name</i>	Route-map name

Command Mode

- /exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af
- /exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af-ipv4-label
- /exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af-ipv6-label

advertise-pip

[no] advertise-pip

Syntax Description

no	(Optional) Negate a command or set its defaults
advertise-pip	advertise physical ip for type-5 route

Command Mode

- /exec/configure/router-bgp/router-bgp-af-l2vpn-evpn

advertise-system-mac

advertise-system-mac

[no] advertise-system-mac

Syntax Description

no	(Optional) Negate a command or set its defaults
advertise-system-mac	Advertise extra EVPN RT-2 with system MAC

Command Mode

- /exec/configure/router-bgp/router-bgp-af-l2vpn-evpn

advertise evpn multicast

[no] advertise evpn multicast

Syntax Description

no	(Optional) Negate a command or set its defaults
advertise	Advertise L2 multicast capability
evpn	evpn
multicast	L2 multicast

Command Mode

- /exec/configure

advertise interface

[no] advertise interface <interface> [<level>]

Syntax Description

no	(Optional) Negate a command or set its defaults
advertise	Advertise interface IP
interface	Advertise interface IP
<i>interface</i>	Interface to advertise
<i>level</i>	(Optional) IS-IS level

Command Mode

- /exec/configure/router-isis/router-isis-af-ipv4 /exec/configure/router-isis/router-isis-af-ipv6

advertise l2vpn evpn

[no] advertise l2vpn evpn

Syntax Description

no	(Optional) Negate a command or set its defaults
advertise	Configure advertise for this AF
l2vpn	L2VPN
evpn	EVPN

Command Mode

- /exec/configure/router-bgp/router-bgp-vrf-af-ipv4 /exec/configure/router-bgp/router-bgp-vrf-af-ipv6

advertise local-labeled-route

advertise local-labeled-route

[no | default] advertise local-labeled-route

Syntax Description

no	(Optional) Negate a command or set its defaults
default	(Optional) Inherit values from a peer template
advertise	Advertise to peer
local-labeled-route	Advertise a route with local label to peer

Command Mode

- /exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af

advertise virtual-rmac

[no] advertise virtual-rmac

Syntax Description

no	(Optional) Negate a command or set its defaults
advertise	Reachability advertisement
virtual-rmac	Advertise virtual RMAC capability

Command Mode

- /exec/configure/if-nve

advertisement-interval

{ advertisement-interval <interval_time> | no advertisement-interval [<interval_time>] }

Syntax Description

no	Negate a command or set its defaults
advertisement-interval	Set the time interval between advertisement
<i>interval_time</i>	Time interval (in seconds) between advertisements

Command Mode

- /exec/configure/if-eth-any/vrrp

advertisement-interval

```
advertisement-interval <adv-sec> | { no | default } advertisement-interval [ <adv-sec> ]
```

Syntax Description

no	Negate a command or set its defaults
default	Inherit values from a peer template
advertisement-interval	Minimum interval between sending BGP routing updates
<i>adv-sec</i>	Time in seconds

Command Mode

- /exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af
- /exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af-vpnv4
- /exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af-vpnv6

afd queue-desired

[no] afd queue-desired <q-desired> { bytes | kbytes | mbytes } [ecn]

Syntax Description

no	(Optional) Negate a command or set its defaults
afd	Configure AFD parameters
queue-desired	Specify Queue Desired for AFD
bytes	Bytes
kbytes	Kilo bytes
mbytes	Mega bytes
ecn	(Optional) ECN

Command Mode

- /exec/configure/policy-map/type/queuing/class

affinity-group

```
{ affinity-group <affinity_group_id> } | { { no | default } affinity-group [ <affinity_group_id> ] }
```

Syntax Description

no	Negate a command or set its defaults
default	Inherit values from a peer template
affinity-group	Configure an affinity group
<i>affinity_group_id</i>	Affinity Group ID

Command Mode

- /exec/configure/router-bgp/router-bgp-neighbor-sess

affinity-group activate

affinity-group activate

```
affinity-group activate <affinity_group_id> | no affinity-group activate [ <affinity_group_id> ]
```

Syntax Description

no	Negate a command or set its defaults
affinity-group	Configure an affinity group
activate	Activate the affinity group
<i>affinity_group_id</i>	AFFINITY Group ID

Command Mode

- /exec/configure/router-bgp

affinity-map

[no] affinity-map

Syntax Description

no	(Optional) Negate a command or set its defaults
affinity-map	Configure Affinity map

Command Mode

- /exec/configure/sr/te

affinity

[no] affinity

Syntax Description

no	(Optional) Negate a command or set its defaults
affinity	Configure Affinity Constraints

Command Mode

- /exec/configure/sr/te/color/cndpaths/pref/constraint

affinity

[no] affinity

Syntax Description

no	(Optional) Negate a command or set its defaults
affinity	Configure Affinity Constraints

Command Mode

- /exec/configure/sr/te/pol/cndpaths/pref/constraint

affinity

[no] affinity

Syntax Description

no	(Optional) Negate a command or set its defaults
affinity	Specify the interface affinities

Command Mode

- /exec/configure/sr/te/if

affinity

[no] affinity | affinity <hex_value> [mask <mask_value>]

Syntax Description

no	Negate a command or set its defaults
affinity	Specify attribute flags for links comprising LSP
<i>hex_value</i>	affinity value
mask	(Optional) mask on desired link attributes
<i>mask_value</i>	(Optional) affinity mask value

Command Mode

- /exec/configure/te/lsp-attr

affinity

[no] affinity | affinity <value> [mask <mask-value>]

Syntax Description

no	Negate a command or set its defaults
affinity	desired link attributes for links comprising tunnel
<i>value</i>	affinity value
mask	(Optional) mask on desired link attributes
<i>mask-value</i>	(Optional) affinity mask value

Command Mode

- /exec/configure/if-te /exec/configure/tunnel-te/cbts-member

age

{ [no] age <age> | no age }

Syntax Description

age	Provide the age value for this POSTCARD flow-profile
<i>age</i>	flow-profile age (seconds). Default is 30.

Command Mode

- /exec/configure/config-postcard-flow-prof

{ [no] age <age> | no age }

Syntax Description

age	Provide the age value for this INT flow-profile
<i>age</i>	flow-profile age (seconds). Default is 30.

Command Mode

- /exec/configure/config-int-flow-prof

aggregate-address

[no] aggregate-address { <ip-addr> <ip-mask> | <ip-prefix> } [as-set | summary-only | suppress-map <suppress-rmap> | advertise-map <advertise-rmap> | attribute-map <attribute-rmap>] +

Syntax Description

no	(Optional) Negate a command or set its defaults
aggregate-address	Configure BGP aggregate prefixes
<i>ip-addr</i>	Aggregate address
<i>ip-mask</i>	Aggregate mask
<i>ip-prefix</i>	Aggregate prefix
summary-only	(Optional) Don't advertise more specifics
as-set	(Optional) Generate AS-SET information
suppress-map	(Optional) Conditionally filter more specific routes
advertise-map	(Optional) Select attribute information from specific routes
attribute-map	(Optional) Set attribute information of aggregate
<i>advertise-rmap</i>	(Optional) Route-map name
<i>suppress-rmap</i>	(Optional) Route-map name
<i>attribute-rmap</i>	(Optional) Route-map name

Command Mode

- /exec/configure/router-bgp/router-bgp-af-ipv4 /exec/configure/router-bgp/router-bgp-vrf-af-ipv4

aggregate-address

aggregate-address

[no] aggregate-address <ipv6-prefix> [as-set | summary-only | suppress-map <suppress-rmap> | advertise-map <advertise-rmap> | attribute-map <attribute-rmap>] +

Syntax Description

no	(Optional) Negate a command or set its defaults
aggregate-address	Configure BGP aggregate IPv6 prefixes
as-set	(Optional) Generate AS-SET information
summary-only	(Optional) Don't advertise more specifics
suppress-map	(Optional) Conditionally filter more specific routes
advertise-map	(Optional) Select attribute information from specific routes
attribute-map	(Optional) Set attribute information of aggregate
<i>advertise-rmap</i>	(Optional) Route-map name
<i>suppress-rmap</i>	(Optional) Route-map name
<i>attribute-rmap</i>	(Optional) Route-map name

Command Mode

- /exec/configure/router-bgp/router-bgp-af-ipv6 /exec/configure/router-bgp/router-bgp-vrf-af-ipv6

alert-group user-def-cmd

```
{ alert-group { Configuration | Diagnostic | Environmental | Inventory | License | Linecard-Hardware |
Supervisor-Hardware | Syslog-group-port | System | Test } [ index <i0> ] user-def-cmd <s0> | no alert-group
{ Configuration | Diagnostic | Environmental | Inventory | License | Linecard-Hardware | Supervisor-Hardware
| Syslog-group-port | System | Test } index <i0> }
```

Syntax Description

no	Negate a command or set its defaults
alert-group	alert group
user-def-cmd	configure a cli command for an alert group
index	(Optional) configure an index(1 to 5) for the cli command for the alert group
i0	(Optional) Index between 1 to 5 associate with cli command for an alert group
s0	A valid CLI command
Environmental	Power,fan,temperature related events
Inventory	Inventory status events
License	Events related to licensing
Linecard-Hardware	Linecard related events
Supervisor-Hardware	Supervisor related events
Syslog-group-port	Events related to syslog messages filed by port manager
System	Software related events
Test	User generated test events
Configuration	Events related to Configuration
Diagnostic	Events related to Diagnostic

Command Mode

- /exec/configure/callhome

algorithm algorithm-id algorithm-name

algorithm algorithm-id algorithm-name

[no] algorithm algorithm-id <algorithm-id> algorithm-name <algorithm-name>

Syntax Description

no	(Optional) Negate a command or set its defaults
algorithm	Configure Dynamic-flooding algorithm properties
algorithm-id	Configure Dynamic-flooding algorithm id
<i>algorithm-id</i>	Set the algorithm id
algorithm-name	Configure Dynamic-flooding alg name
<i>algorithm-name</i>	Set the algorithm name

Command Mode

- /exec/configure/router-isis/df

allocate-index

{ allocate-index <id> } | { no allocate-index [<id>] }

Syntax Description

no	Unconfigure allocate-index
allocate-index	Configure allocate-index
<i>id</i>	Specify allocate-index

Command Mode

- /exec/configure/router-bgp/router-bgp-vrf

allocate-label all

allocate-label all

[no] allocate-label { all | route-map <rmap-name> }

Syntax Description

no	(Optional) Negate a command or set its defaults
allocate-label	Configure label allocation for this AF
all	Allocate labels for all routes
route-map	Allocate labels for selected routes
<i>rmap-name</i>	Route-map name

Command Mode

- /exec/configure/router-bgp/router-bgp-af-ipv6 /exec/configure/router-bgp/router-bgp-af-ipv4

allocate-label option-b

[no] allocate-label option-b

Syntax Description

no	(Optional) Negate a command or set its defaults
allocate-label	Allow allocation of labels
option-b	Allow allocation of option B labels

Command Mode

- /exec/configure/router-bgp/router-bgp-af-vpnv4 /exec/configure/router-bgp/router-bgp-af-vpnv6

allocate1 interface2

allocate1 interface2

```
allocate1 interface2 { <interface-id> [ force ] | unallocated-interfaces }
```

Syntax Description

allocate1	Assign interfaces to vdc
interface2	Assign interface range to vdc
<i>interface-id</i>	Assign interface range to vdc
force	(Optional) force
unallocated-interfaces	Best-effort trying to move all interfaces in the unallocated pool into this vdc

Command Mode

- /exec/configure/vdc

allocate2 fcoe-vlan-range

{ allocate2 fcoe-vlan-range [<vlan_range>] [from vdc <vdc_names>] } | { no allocate2 fcoe-vlan-range [<vlan_range>] { from vdc <vdc_names> } }

Syntax Description

no	Negate a command or set its defaults
allocate2	Assign interfaces to vdc
fcoe-vlan-range	vlans reserved for FCoE
<i>vlan_range</i>	(Optional) vlans reserved for FCoE
from	(Optional) which vdc will be sharing ports with the FCoE vdc
vdc	(Optional) which vdc will be sharing ports with the FCoE vdc
<i>vdc_names</i>	(Optional) which vdc will be sharing port with the FCoE vdc

Command Mode

- /exec/configure/vdc

```
allocate3 shared interface3
```

allocate3 shared interface3

[no] allocate3 shared interface3 <sinterface-id>

Syntax Description

no	(Optional) Negate a command or set its defaults
allocate3	Assign interfaces to vdc
interface3	Assign interface range to vdc
<i>sinterface-id</i>	Assign interface range to vdc
shared	Shared this port using the reserved FCoE vlans

Command Mode

- /exec/configure/vdc

allow-vni-in-ethertag

[no] allow-vni-in-ethertag

Syntax Description

no	(Optional) Negate a command or set its defaults
allow-vni-in-ethertag	Allow VNI in Ethernet Tag field in EVPN route

Command Mode

- /exec/configure/router-bgp/router-bgp-af-l2vpn-evpn

allow feature-set

allow feature-set

[no] allow feature-set <fs>

Syntax Description

no	(Optional) Negate a command or set its defaults
allow	Used to change permissions inside a vdc
feature-set	Change which feature-sets the user is able to enable inside the vdc
<i>fs</i>	installed feature-sets

Command Mode

- /exec/configure/vdc

allowas-in

[no | default] allowas-in [<allowas-in-cnt>]

Syntax Description

no	(Optional) Negate a command or set its defaults
default	(Optional) Inherit values from a peer template
allowas-in	Accept as-path with my AS present in it
<i>allowas-in-cnt</i>	(Optional) Number of occurrences of AS number, default is 3

Command Mode

- /exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af
- /exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af-vpnv4
- /exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af-vpnv6
- /exec/configure/router-bgp/router-bgp-vrf-neighbor/router-bgp-vrf-neighbor-af-ipv4
- /exec/configure/router-bgp/router-bgp-vrf-neighbor/router-bgp-vrf-neighbor-af-ipv6
- /exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af-l2vpn-evpn
- /exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af-ipv4-label
- /exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af-ipv6-label
- /exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af-link-state
- /exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af-ipv4-mvpn
- /exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af-ipv6-mvpn

allowas-in

allowas-in

[no | default] allowas-in [<allowas-in-cnt>]

Syntax Description

no	(Optional) Negate a command or set its defaults
default	(Optional) Inherit values from a peer template
allowas-in	Accept as-path with my AS present in it
<i>allowas-in-cnt</i>	(Optional) Number of occurrences of AS number, default is 3

Command Mode

- /exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af-ipv4-mdt
- /exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af-l2vpn-vpls

allowed-locators

```
{ [ no ] allowed-locators { <rloc> | <rloc6> } + }
```

Syntax Description

no	(Optional) Negate a command or set its defaults
allowed-locators	List of locators from LISP site
<i>rloc</i>	IPv4 locator allowed in registered locator-set

Command Mode

- /exec/configure/lisp-site /exec/configure/vrf/lisp-site

allowed-vlans

allowed-vlans

```
allowed-vlans { <allow-vlans> | add <add-vlans> | except <except-vlans> | remove <remove-vlans> | all }
```

Syntax Description

allowed-vlans	Set list of allowed vlans that can be used for interface configuration
<i>allow-vlans</i>	VLAN ID 1-4094 or range(s) like: 1-5, 10 or 2-5,7-19
add	add VLANs to the current list
<i>add-vlans</i>	VLAN ID 1-4094 or range(s) like: 1-5, 10 or 2-5,7-19
except	all VLANs except the following
<i>except-vlans</i>	VLAN ID 1-4094 or range(s) like: 1-5, 10 or 2-5,7-19
remove	remove VLANs from the current list
<i>remove-vlans</i>	VLAN ID 1-4094 or range(s) like: 1-5, 10 or 2-5,7-19
all	all VLANs

Command Mode

- /exec/configure/vmt-conn

amt flush-routes

[no] amt flush-routes

Syntax Description

no	(Optional) Negate a command or set its defaults
amt	AMT global configuration commands
flush-routes	Remove routes when restarting AMT

Command Mode

- /exec/configure /exec/configure/vrf

amt pseudo-interface

{ { amt pseudo-interface <interface> } | { no amt pseudo-interface [<interface>] } }

Syntax Description

no	Negate a command or set its defaults
amt	AMT global configuration commands
pseudo-interface	Tunnel to relay for forwarding IGMP/MLD messages
<i>interface</i>	Internname name to used for AMT pseudo interface

Command Mode

- /exec/configure /exec/configure/vrf

analytics cluster

[no] analytics cluster <clustername> [vrf <vrfName>] [srcIf <src_intf>]

Syntax Description

no	(Optional) Negate a command or set its defaults
analytics	Feature Analytics
cluster	Analytics cluster
<i>clustername</i>	Cluster name
vrf	(Optional) VRF Name
<i>vrfName</i>	(Optional) VRF name
srcIf	(Optional) Source Interface
<i>src_intf</i>	(Optional) Source Interface

Command Mode

- /exec/configure

anonymous-id

anonymous-id

{ [no] anonymous-id <id> }

Syntax Description

anonymous-id	anonymous identity associated with this profile
<i>id</i>	identity name

Command Mode

- /exec/configure/dot1x-cred

append-after next

```
append-after <index> { next-address [ loose | strict ] <ipaddr> | exclude-address <ipaddr> }
```

Syntax Description

append-after	Append additional entry after specified index
<i>index</i>	Previous index number
next-address	Specify the next address in the path
loose	(Optional) Target address is loose
strict	(Optional) Target address is strict
exclude-address	Exclude an address from subsequent partial path segments
<i>ipaddr</i>	Enter IP address (A.B.C.D)

Command Mode

- /exec/configure/te/expl-path

apply profile

[no] apply profile { <all_conf_profile_name> } [include-profile <include-profile>] [{ param-instance <plistinst> | include-instance <plistinst> } +]

Syntax Description

no	(Optional) Negate a command or set its defaults
apply	Apply a config-profile
profile	Apply a config-profile
<i>all_conf_profile_name</i>	Enter the name of the profile
param-instance	(Optional) Enter the name of the param-instance
<i>plistinst</i>	(Optional) Enter the name of the instance
include-profile	(Optional) Enter the name of the include profile
<i>include-profile</i>	(Optional) Enter the name of the include profile
include-instance	(Optional) Enter the param-instance corresponding to the first included profile
<i>plistinst</i>	(Optional) Enter the name of the include instance

Command Mode

- /exec/configure

area-leader priority algorithm-id

[no] area-leader priority <priority> algorithm-id <algorithm-id>

Syntax Description

no	(Optional) Negate a command or set its defaults
area-leader	Configure dynamic-flooding area-leader
priority	Configure dynamic-flooding area-leader priority
<i>priority</i>	Set the priority for the area leader
algorithm-id	Configure Dynamic-flooding algorithm id
<i>algorithm-id</i>	Set the algorithm id

Command Mode

- /exec/configure/router-isis/df

area authentication

[no] area <area-id-ip> authentication [message-digest]

Syntax Description

no	(Optional) Negate a command or set its defaults
area	Configure area properties
<i>area-id-ip</i>	Area Id as an integer or ip address
authentication	Enable authentication for the area
message-digest	(Optional) Use message-digest authentication

Command Mode

- /exec/configure/router-ospf /exec/configure/router-ospf/vrf

area authentication

```
area <area-id-ip> authentication { disable | ipsec spi <spi_id> { md5 <akey> | sha1 <akey> } } | no area
<area-id-ip> authentication { disable | ipsec spi <spi_id> }
```

Syntax Description

no	Negate a command or set its defaults
area	Configure area properties
<i>area-id-ip</i>	Area Id as an integer or ip address
authentication	Enable Authentication
disable	Disable Authentication
ipsec	IPSec
spi	Security Parameter Index
<i>spi_id</i>	SPI Value
md5	Use the MD5 algorithm
<i>akey</i>	Authentication Key
sha1	Use the SHA1 algorithm
<i>akey</i>	Authentication Key

Command Mode

- /exec/configure/router-ospf3 /exec/configure/router-ospf3/vrf

area default-cost

area default-cost

{ { area <area-id-ip> default-cost <cost> } | { no area <area-id-ip> default-cost [<cost>] } }

Syntax Description

no	Negate a command or set its defaults
area	Configure area properties
<i>area-id-ip</i>	Area Id as an integer or ip address
default-cost	Specify default-cost for default summary LSA
<i>cost</i>	Cost value

Command Mode

- /exec/configure/router-ospf /exec/configure/router-ospf/vrf

area default-cost

```
{ { area <area-id-ip> default-cost <cost> } | { no area <area-id-ip> default-cost [ <cost> ] } }
```

Syntax Description

no	Negate a command or set its defaults
area	Configure area properties
<i>area-id-ip</i>	Area Id as an integer or ip address
default-cost	Specify default-cost for default inter-area-prefix LSA
<i>cost</i>	Cost value

Command Mode

- /exec/configure/router-ospf3/router-ospf3-af-ipv6 /exec/configure/router-ospf3/vrf/router-ospf3-af-ipv6

area filter-list route-map in

```
{ area <area-id-ip> filter-list route-map { <policy-name> | <rtr_pol_name> } { in | out } } | { no area
<area-id-ip> filter-list route-map { <policy-name> | <rtr_pol_name> } [ in | out ] }
```

Syntax Description

no	Negate a command or set its defaults
area	Configure area properties
<i>area-id-ip</i>	Area Id as an integer or ip address
filter-list	Filter prefixes between OSPF areas
route-map	Name of filter policy
<i>policy-name</i>	Route-map name
<i>rtr_pol_name</i>	An existing routing-rules policy
in	Filter networks sent to this area
out	Filter networks sent from this area

Command Mode

- /exec/configure/router-ospf /exec/configure/router-ospf/vrf

area filter-list route-map in

```
{ area <area-id-ip> filter-list route-map { <policy-name> | <rtr_pol_name> } { in | out } } | { no area
<area-id-ip> filter-list route-map { <policy-name> | <rtr_pol_name> } [ in | out ] }
```

Syntax Description

no	Negate a command or set its defaults
area	Configure area properties
<i>area-id-ip</i>	Area Id as an integer or ip address
filter-list	Filter prefixes between OSPF areas
route-map	Name of filter policy
<i>policy-name</i>	Route-map name
<i>rtr_pol_name</i>	An existing routing-rules policy
in	Filter networks sent to this area
out	Filter networks sent from this area

Command Mode

- /exec/configure/router-ospf3/router-ospf3-af-ipv6 /exec/configure/router-ospf3/vrf/router-ospf3-af-ipv6

area nssa

area nssa

[no] area <area-id-ip> nssa { [no-summary] [no-redistribution] [default-information-originate [route-map <policy-name>]] } +

Syntax Description

no	(Optional) Negate a command or set its defaults
area	Configure area properties
<i>area-id-ip</i>	Area Id as an integer or ip address
nssa	Configure area as NSSA
no-summary	(Optional) Do not send summary LSAs into NSSA area
no-redistribution	(Optional) Do not send redistributed LSAs into NSSA area
default-information-originate	(Optional) Originate Type-7 default LSA into NSSA area
route-map	(Optional) Policy to control distribution of default route
<i>policy-name</i>	(Optional) Route-map name

Command Mode

- /exec/configure/router-ospf /exec/configure/router-ospf/vrf

area nssa

[no] area <area-id-ip> nssa { [no-summary] [no-redistribution] [default-information-originate [route-map <policy-name>]] } +

Syntax Description

no	(Optional) Negate a command or set its defaults
area	Configure area properties
<i>area-id-ip</i>	Area Id as an integer or ip address
nssa	Configure area as NSSA
no-summary	(Optional) Do not send summary LSAs into NSSA area
no-redistribution	(Optional) Do not send redistributed LSAs into NSSA area
default-information-originate	(Optional) Originate Type-7 default LSA into NSSA area
route-map	(Optional) Policy to control distribution of default route
<i>policy-name</i>	(Optional) Route-map name

Command Mode

- /exec/configure/router-ospf3 /exec/configure/router-ospf3/vrf

```
area nssa translate type7 always never suppress-fa
```

area nssa translate type7 always never suppress-fa

{ area <area-id-ip> nssa translate type7 { always [suppress-fa] | never | suppress-fa } } | { no area <area-id-ip> nssa translate type7 [always [suppress-fa] | never | suppress-fa] }

Syntax Description

no	Negate a command or set its defaults
area	Configure area properties
<i>area-id-ip</i>	Area Id as an integer or ip address
nssa	Configure area as NSSA
translate	Translate LSA
type7	From NSSA-external (Type 7) to AS-external (Type 5)
always	Always translate LSAs
never	Never translate LSAs
suppress-fa	(Optional) Suppress forwarding address in translated LSAs

Command Mode

- /exec/configure/router-ospf3 /exec/configure/router-ospf3/vrf

area nssa translate type7 always never supress-fa

{ area <area-id-ip> nssa translate type7 { always [supress-fa] | never | supress-fa } } | { no area <area-id-ip> nssa translate type7 [always [supress-fa] | never | supress-fa] }

Syntax Description

no	Negate a command or set its defaults
area	Configure area properties
<i>area-id-ip</i>	Area Id as an integer or ip address
nssa	Configure area as NSSA
translate	Translate LSA
type7	From Type 7 to Type 5
always	Always translate LSAs
never	Never translate LSAs
supress-fa	(Optional) Supress forwarding address in translated LSAs

Command Mode

- /exec/configure/router-ospf /exec/configure/router-ospf/vrf

area range

[no] area <area-id-ip> range <ipv6-prefix> { [not-advertise] [cost <conf-cost>] } +

Syntax Description

no	(Optional) Negate a command or set its defaults
area	Configure area properties
<i>area-id-ip</i>	Area Id as an integer or ip address
range	Configure an address range for an area
not-advertise	(Optional) Suppress advertising the specified range
cost	(Optional) Cost to use for range
<i>conf-cost</i>	(Optional) Cost value

Command Mode

- /exec/configure/router-ospf3/router-ospf3-af-ipv6 /exec/configure/router-ospf3/vrf/router-ospf3-af-ipv6

area range

[no] area <area-id-ip> range { <ip-dest> <ip-mask> | <ip-prefix> } { [not-advertise] [cost <conf-cost>] }

Syntax Description

no	(Optional) Negate a command or set its defaults
area	Configure area properties
<i>area-id-ip</i>	Area Id as an integer or ip address
range	Configure an address range for an area
<i>ip-dest</i>	IP prefix format: i.i.i.i
<i>ip-mask</i>	IP network mask format: m.m.m.m
<i>ip-prefix</i>	IP prefix format: x.x.x.x/ml
not-advertise	(Optional) Suppress advertising the specified range
cost	(Optional) Cost to use for range
<i>conf-cost</i>	(Optional) Cost value

Command Mode

- /exec/configure/router-ospf /exec/configure/router-ospf/vrf

area segment-routing mpls

area segment-routing mpls

[no] area <area-id-ip> segment-routing { mpls | disable }

Syntax Description

no	(Optional) Negate a command or set its defaults
area	Configure area properties
<i>area-id-ip</i>	Area Id as an integer or ip address
segment-routing	Segment routing parameters
disable	Disable segment routing in area
mpls	Enable segment routing MPLS in area

Command Mode

- /exec/configure/router-ospf

area sham-link

[no] area <area-id-ip> sham-link <source-address> <dest-address>

Syntax Description

no	(Optional) Negate a command or set its defaults
area	Configure area properties
<i>area-id-ip</i>	Area Id as an integer or ip address
sham-link	Define a sham link and its parameters
<i>source-address</i>	IP addr associated with sham-link source
<i>dest-address</i>	IP addr associated with sham-link destination

Command Mode

- /exec/configure/router-ospf/vrf

area stub

[no] area <area-id-ip> stub [no-summary]

Syntax Description

no	(Optional) Negate a command or set its defaults
area	Configure area properties
<i>area-id-ip</i>	Area Id as an integer or ip address
stub	Configure area as a stub
no-summary	(Optional) Prevent ABR from sending summary LSAs into stub area

Command Mode

- /exec/configure/router-ospf /exec/configure/router-ospf/vrf

area stub

[no] area <area-id-ip> stub [no-summary]

Syntax Description

no	(Optional) Negate a command or set its defaults
area	Configure area properties
<i>area-id-ip</i>	Area Id as an integer or ip address
stub	Configure area as a stub
no-summary	(Optional) Prevent ABR from sending summary LSAs into stub area

Command Mode

- /exec/configure/router-ospf3 /exec/configure/router-ospf3/vrf

area virtual-link

area virtual-link

[no] area <area-id-ip> virtual-link <routerid>

Syntax Description

no	(Optional) Negate a command or set its defaults
area	Configure area properties
<i>area-id-ip</i>	Area Id as an integer or ip address
virtual-link	Define a virtual link and its parameters
<i>routerid</i>	Router ID associated with virtual link neighbor

Command Mode

- /exec/configure/router-ospf3/vrf

area virtual-link

[no] area <area-id-ip> virtual-link <routerid>

Syntax Description

no	(Optional) Negate a command or set its defaults
area	Configure area properties
<i>area-id-ip</i>	Area Id as an integer or ip address
virtual-link	Define a virtual link and its parameters
<i>routerid</i>	Router ID associated with virtual link neighbor

Command Mode

- /exec/configure/router-ospf3

area virtual-link

area virtual-link

[no] area <area-id-ip> virtual-link <routerid>

Syntax Description

no	(Optional) Negate a command or set its defaults
area	Configure area properties
<i>area-id-ip</i>	Area Id as an integer or ip address
virtual-link	Define a virtual link and its parameters
<i>routerid</i>	Router ID associated with virtual link neighbor

Command Mode

- /exec/configure/router-ospf

area virtual-link

[no] area <area-id-ip> virtual-link <routerid>

Syntax Description

no	(Optional) Negate a command or set its defaults
area	Configure area properties
<i>area-id-ip</i>	Area Id as an integer or ip address
virtual-link	Define a virtual link and its parameters
<i>routerid</i>	Router ID associated with virtual link neighbor

Command Mode

- /exec/configure/router-ospf/vrf

arp access-list

arp access-list

[no] arp access-list <name>

Syntax Description

no	(Optional) Negate a command or set its defaults
arp	ARP access-list configuration commands
access-list	Configure access list
<i>name</i>	List name

Command Mode

- /exec/configure

as-format asdot

as-format asdot | no as-format

Syntax Description

no	Negate a command or set its defaults
as-format	Configure the router's Autonomous system number (ASN) notation
asdot	Specifies the Autonomous system number (ASN) notation to asdot format

Command Mode

- /exec/configure

as-override

as-override

[no | default] as-override

Syntax Description

no	(Optional) Negate a command or set its defaults
default	(Optional) Inherit values from a peer template
as-override	Override matching AS-number while sending update

Command Mode

- /exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af
- /exec/configure/router-bgp/router-bgp-vrf-neighbor/router-bgp-vrf-neighbor-af-ipv4
- /exec/configure/router-bgp/router-bgp-vrf-neighbor/router-bgp-vrf-neighbor-af-ipv6
- /exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af-ipv4-label
- /exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af-ipv6-label
- /exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af-l2vpn-evpn

assign interface shared

```
{ assign interface { <sdn-eth-intf-list> | <sdn-pc-intf-list> } shared | no assign interface { <sdn-eth-intf-list> | <sdn-pc-intf-list> } }
```

Syntax Description

no	Negate a command or set its defaults
assign	Assign resource
interface	Resource of interface type
<i>sdn-eth-intf-list</i>	List of Interfaces
<i>sdn-pc-intf-list</i>	List of Interfaces
shared	Share interface with controller

Command Mode

- /exec/configure/controller-type

assign vlan dedicated

assign vlan dedicated

{ assign vlan <sdn-id> dedicated | no assign vlan <sdn-id> }

Syntax Description

no	Negate a command or set its defaults
assign	Assign reservation
vlan	Controller VLANs
<i>sdn-id</i>	vlan ID 2-4093 or range(s): 1-5, 10 or 2-5,7-19
dedicated	Dedicated VLANs

Command Mode

- /exec/configure/controller-type

assign vrf prefix number dedicated

{ assign vrf prefix <prefix-name> number <number-of-vrfs> dedicated | no assign vrf }

Syntax Description

no	Negate a command or set its defaults
assign	Assign reservation
vrf	VRFs
prefix	VRF prefix
<i>prefix-name</i>	String description of the prefix
number	Number of VRFs
<i>number-of-vrfs</i>	VRF ID range from 1 to 4095
dedicated	Dedicated VRFs

Command Mode

- /exec/configure/controller-type

association-group

[no] association-group

Syntax Description

no	(Optional) Negate a command or set its defaults
association-group	Candidate path association group

Command Mode

- /exec/configure/sr/te/color/cndpaths/pref/constraint

association-group

[no] association-group

Syntax Description

no	(Optional) Negate a command or set its defaults
association-group	Candidate path association group

Command Mode

- /exec/configure/sr/te/pol/cndpaths/pref/constraint

attach console module

attach console module

attach console module <module>

Syntax Description

attach	Connect to a specific linecard
console	Connect to the console
module	Connect to the module console
<i>module</i>	Enter module number

Command Mode

- /exec

attach module

attach module <module>

Syntax Description

attach	Connect to a specific linecard
module	Module number of the linecard
<i>module</i>	Enter module number

Command Mode

- /exec

attach module node

attach module node

```
attach module <module> node <i0>
```

Syntax Description

attach	Connect to a specific linecard
module	Module number of the linecard
<i>module</i>	Enter module number
node	Avanti node number on the linecard
<i>i0</i>	

Command Mode

- /exec

attach module port

attach module <module> port <i0>

Syntax Description

attach	Connect to a specific linecard
module	Module number of the linecard
<i>module</i>	Enter module number
port	Port number on the linecard
<i>i0</i>	

Command Mode

- /exec

auth-mechanism plain

auth-mechanism plain

[no] auth-mechanism { plain }

Syntax Description

no	(Optional) Negate a command or set its defaults
auth-mechanism	Set the authentication mechanism
plain	Set the authentication mechanism as plain(default)

Command Mode

- /exec/configure/ldap

authentication-check

[no] authentication-check

Syntax Description

no	(Optional) Negate a command or set its defaults
authentication-check	Check authentication on received LSP/CSNP/PSNP's

Command Mode

- /exec/configure/otv-isis/otv-isis-vrf-common

authentication-check

authentication-check

[no] authentication-check

Syntax Description

no	(Optional) Negate a command or set its defaults
authentication-check	Check authentication on received LSP/CSNP/PSNP's

Command Mode

- /exec/configure/l2mp-isis/l2mp-isis-vrf-common

authentication-check level-1

[no] authentication-check level-1

Syntax Description

no	(Optional) Negate a command or set its defaults
authentication-check	Check authentication on received LSP/CSNP/PSNP's
level-1	Specify authentication check for level-1 LSP, CSNP and PSNP

Command Mode

- /exec/configure/router-isis/router-isis-vrf-common

authentication-check level-2

authentication-check level-2

[no] authentication-check level-2

Syntax Description

no	(Optional) Negate a command or set its defaults
authentication-check	Check authentication on received LSP/CSNP/PSNP's
level-2	Specify authentication check for level-2 LSP, CSNP and PSNP

Command Mode

- /exec/configure/router-isis/router-isis-vrf-common

authentication-key

{ [no] authentication-key <key> }

Syntax Description

no	(Optional) Negate a command or set its defaults
authentication-key	Authentication key used by LISP site
<i>key</i>	SHA-1 password

Command Mode

- /exec/configure/lisp-site /exec/configure/vrf/lisp-site

authentication-key

authentication-key

{ { authentication-key <key> } | { no authentication-key [<key>] } }

Syntax Description

no	Negate a command or set its defaults
authentication-key	Configure the authentication key for the virtual-link
<i>key</i>	Authentication key

Command Mode

- /exec/configure/router-ospf/router-ospf-vlink /exec/configure/router-ospf/vrf/router-ospf-vlink

authentication-key

{ { authentication-key <key> } | { no authentication-key [<key>] } }

Syntax Description

no	Negate a command or set its defaults
authentication-key	Configure the authentication key for the sham-link
<i>key</i>	Authentication key

Command Mode

- /exec/configure/router-ospf/vrf/router-ospf-slink

authentication-type cleartext

{ authentication-type { cleartext | md5 } | no authentication-type [{ cleartext | md5 }] }

Syntax Description

no	Negate a command or set its defaults
authentication-type	Set authentication type
cleartext	Cleartext
md5	HMAC-MD5

Command Mode

- /exec/configure/l2mp-isis/l2mp-isis-vrf-common

authentication-type cleartext

```
{ authentication-type { cleartext | md5 } <level> | no authentication-type [ { cleartext | md5 } ] <level> }
```

Syntax Description

no	Negate a command or set its defaults
authentication-type	Set authentication type
cleartext	Cleartext
md5	HMAC-MD5
<i>level</i>	IS-IS level

Command Mode

- /exec/configure/router-isis/router-isis-vrf-common

authentication-type cleartext

{ authentication-type { cleartext | md5 } | no authentication-type [{ cleartext | md5 }] }

Syntax Description

no	Negate a command or set its defaults
authentication-type	Set authentication type
cleartext	Cleartext
md5	HMAC-MD5

Command Mode

- /exec/configure/otv-isis/otv-isis-vrf-common

authentication

```
authentication { ipsec spi <spi_id> { md5 <akey> | sha1 <akey> } } | no authentication ipsec spi <spi_id>
```

Syntax Description

no	Negate a command or set its defaults
authentication	Enable Authentication
ipsec	IPSec
spi	Security Parameter Index
<i>spi_id</i>	SPI Value
md5	Use the MD5 algorithm
<i>akey</i>	Authentication Key
sha1	Use the SHA1 algorithm
<i>akey</i>	Authentication Key

Command Mode

- /exec/configure/router-ospf3 /exec/configure/router-ospf3/vrf

authentication

```
authentication { [ text ] <secret> | md5 { key-chain <chain-name> | key-string [ 0 | 7 ] <key-name> [ compatibility ] [ timeout <sec> ] } } | no authentication
```

Syntax Description

no	Negate a command or set its defaults
authentication	Authentication
text	(Optional) Plain text authentication
<i>secret</i>	Plain text authentication string
md5	Use MD5 authentication
key-chain	Set key chain
<i>chain-name</i>	Name of key-chain
key-string	Set key string
0	(Optional) Specifies an UNENCRYPTED key string will follow
7	(Optional) Specifies a HIDDEN key string will follow
<i>key-name</i>	Key string (64 chars max)
compatibility	(Optional) Operate in compatibility mode for MD5 type-7 authentication
timeout	(Optional) Set timeout
<i>sec</i>	(Optional) (0-32767)Timeout until only accepting new key (seconds)

Command Mode

- /exec/configure/if-eth-any/hsrp_ipv4 /exec/configure/if-eth-any/hsrp_ipv6

authentication

```
authentication { disable | ipsec spi <spi_id> { md5 <akey> | sha1 <akey> } } | no authentication { disable | ipsec spi <spi_id> }
```

Syntax Description

no	Negate a command or set its defaults
authentication	Enable Authentication
disable	Disable Authentication
ipsec	IPSec
spi	Security Parameter Index
<i>spi_id</i>	SPI Value
md5	Use the MD5 algorithm
<i>akey</i>	Authentication Key
sha1	Use the SHA1 algorithm
<i>akey</i>	Authentication Key

Command Mode

- /exec/configure/router-ospf3/router-ospf3-vlink /exec/configure/router-ospf3/vrf/router-ospf3-vlink

authentication

[no] authentication { { key-chain <chain> } | { mode md5 } }

Syntax Description

no	(Optional) Negate a command or set its defaults
authentication	Configures EIGRP authentication subcommands
key-chain	key-chain
<i>chain</i>	name of key-chain
mode	mode
md5	Keyed message digest

Command Mode

- /exec/configure/router-eigrp/router-eigrp-vrf-common /exec/configure/router-eigrp/router-eigrp-af-common

authentication

[no] authentication [message-digest | null]

Syntax Description

no	(Optional) Negate a command or set its defaults
authentication	Authentication on the vlink
message-digest	(Optional) Use message-digest authentication
null	(Optional) Use null(disable) authentication

Command Mode

- /exec/configure/router-ospf/router-ospf-vlink /exec/configure/router-ospf/vrf/router-ospf-vlink

authentication

[no] authentication [message-digest | null]

Syntax Description

no	(Optional) Negate a command or set its defaults
authentication	Authentication on the slink
message-digest	(Optional) Use message-digest authentication
null	(Optional) Use null(disable) authentication

Command Mode

- /exec/configure/router-ospf/vrf/router-ospf-slink

authentication bind

[no] authentication { bind-first [append-with-basedn <s1>] | compare [password-attribute <s0>] }

Syntax Description

no	(Optional) Negate a command or set its defaults
authentication	Set the authentication method
bind-first	Set the authentication method to bind-first
append-with-basedn	(Optional) Change the default value (cn=\$userid)
<i>s1</i>	(Optional) append with dn value
compare	Change the default attribute
password-attribute	(Optional) Change the default password attribute (userPassword)
<i>s0</i>	(Optional) password attribute

Command Mode

- /exec/configure/ldap

authentication challenge

[no] authentication [neighbor <nbr>] challenge

Syntax Description

authentication	Configure RSVP neighbor cryptographic authentication
neighbor	(Optional) Configure RSVP neighbor
<i>nbr</i>	(Optional) RSVP Neighbor address
challenge	Perform challenge/response handshake with new RSVP neighbors

Command Mode

- /exec/configure/ip-rsvp

authentication key-chain

{ authentication key-chain <keychain> } | { no authentication key-chain [<keychain>] }

Syntax Description

no	Negate a command or set its defaults
authentication	Authentication on the slink
key-chain	Authentication password key-chain
<i>keychain</i>	Key-chain name

Command Mode

- /exec/configure/router-ospf/vrf/router-ospf-slink

authentication key-chain

```
{ authentication key-chain <auth-keychain> <level> | no authentication key-chain [ <auth-keychain> ] <level>
}
```

Syntax Description

no	Negate a command or set its defaults
authentication	Set authentication keychain string
key-chain	Set authentication keychain string
<i>auth-keychain</i>	authentication keychain
<i>level</i>	IS-IS level

Command Mode

- /exec/configure/router-isis/router-isis-vrf-common

authentication key-chain

authentication [neighbor <nbr>] key-chain <key-chain-name> | no authentication [neighbor <nbr>] key-chain

Syntax Description

authentication	Configure RSVP neighbor cryptographic authentication
neighbor	(Optional) Configure RSVP neighbor
<i>nbr</i>	(Optional) RSVP Neighbor address
key-chain	Authentication password key-chain
<i>key-chain-name</i>	Key-chain name

Command Mode

- /exec/configure/ip-rsvp

authentication key-chain

{ authentication key-chain <keychain> } | { no authentication key-chain [<keychain>] }

Syntax Description

no	Negate a command or set its defaults
authentication	Authentication on the vlink
key-chain	Authentication password key-chain
<i>keychain</i>	Key-chain name

Command Mode

- /exec/configure/router-ospf/router-ospf-vlink /exec/configure/router-ospf/vrf/router-ospf-vlink

authentication key-chain

{ authentication key-chain <auth-keychain> | no authentication key-chain [<auth-keychain>] }

Syntax Description

no	Negate a command or set its defaults
authentication	Set authentication keychain string
key-chain	Set authentication keychain string
<i>auth-keychain</i>	authentication keychain

Command Mode

- /exec/configure/otv-isis/otv-isis-vrf-common

authentication key-chain

{ authentication key-chain <auth-keychain> | no authentication key-chain [<auth-keychain>] }

Syntax Description

no	Negate a command or set its defaults
authentication	Set authentication keychain string
key-chain	Set authentication keychain string
<i>auth-keychain</i>	authentication keychain

Command Mode

- /exec/configure/l2mp-isis/l2mp-isis-vrf-common

authentication lifetime

[no] authentication [neighbor <nbr>] lifetime <time>

Syntax Description

authentication	Configure RSVP neighbor cryptographic authentication
neighbor	(Optional) Configure RSVP neighbor
<i>nbr</i>	(Optional) RSVP Neighbor address
lifetime	Maximum lifetime of neighbor authentication state
<i>time</i>	Lifetime value(in seconds)

Command Mode

- /exec/configure/ip-rsvp

authentication text

```
{ authentication text <authentication_pwd> | no authentication [ text <authentication_pwd> ] }
```

Syntax Description

no	Negate a command or set its defaults
authentication	Select authentication method
text	Set the authentication password (8 char max)
<i>authentication_pwd</i>	

Command Mode

- /exec/configure/if-eth-any/vrrp

authentication type md5

[no] authentication [neighbor <nbr>] type { md5 | sha-1 }

Syntax Description

authentication	Configure RSVP neighbor cryptographic authentication
neighbor	(Optional) Configure RSVP neighbor
<i>nbr</i>	(Optional) RSVP Neighbor address
type	Type of authentication algorithm
md5	RSA Message Digest 5 hash algorithm (default)
sha-1	NIST Secure Hash Algorithm 1

Command Mode

- /exec/configure/ip-rsvp

authentication window-size

authentication window-size

[no] authentication [neighbor <nbr>] window-size <value>

Syntax Description

authentication	Configure RSVP neighbor cryptographic authentication
neighbor	(Optional) Configure RSVP neighbor
<i>nbr</i>	(Optional) RSVP Neighbor address
window-size	Receive window size for authenticated messages
<i>value</i>	Maximum number of messages allowed in receive window

Command Mode

- /exec/configure/ip-rsvp

auto-bw

[no] auto-bw | auto-bw [{ [collect-bw | frequency <sec>] + } | { [frequency <sec> | min-bw <min-kbps> | max-bw <max-kbps>] + }]

Syntax Description

no	Negate a command or set its defaults
auto-bw	Specify automatic bandwidth configuration
collect-bw	(Optional) Just collect bandwidth info
frequency	(Optional) frequency to change LSP bandwidth
<i>sec</i>	(Optional) seconds between applying auto-bw
max-bw	(Optional) Set the maximum bandwidth for auto-bw
<i>max-kbps</i>	(Optional) Maximum bandwidth to apply (kbps)
min-bw	(Optional) Set the minimum bandwidth for auto-bw
<i>min-kbps</i>	(Optional) Minimum bandwidth to apply (kbps)

Command Mode

- /exec/configure/te/lsp-attr

auto-bw

[no] auto-bw | auto-bw [{ [collect-bw | frequency <sec>] + } | { [frequency <sec> | min-bw <min-kbps> | max-bw <max-kbps>] + }]

Syntax Description

no	Negate a command or set its defaults
auto-bw	Specify mpls tunnel should automatically change bw
collect-bw	(Optional) Just collect Bandwidth info on this tunnel
frequency	(Optional) Frequency to change tunnel BW
<i>sec</i>	(Optional) seconds between applying auto-bw
max-bw	(Optional) Set the Maximum Bandwidth for auto-bw on this tunnel
<i>max-kbps</i>	(Optional) Maximum kb/s that tunnel can be auto set to
min-bw	(Optional) Set the Minimum Bandwidth for auto-bw on this tunnel
<i>min-kbps</i>	(Optional) Min kb/s that tunnel can be auto set to

Command Mode

- /exec/configure/if-te

auto-bw timers frequency

[no] auto-bw timers { frequency } | auto-bw timers { frequency <sec> }

Syntax Description

no	Negate a command or set its defaults
auto-bw	auto-bw parameters
timers	Enable auto-bw timers
frequency	Interval between auto-bw data collection
<i>sec</i>	Seconds between auto-bw data collection

Command Mode

- /exec/configure/te

auto-cost reference-bandwidth

auto-cost reference-bandwidth

auto-cost reference-bandwidth { <ref-bw-mbps> [Mbps] | <ref-bw-gbps> Gbps } | no auto-cost reference-bandwidth [<ref-bw-mbps> [Mbps] | <ref-bw-gbps> Gbps]

Syntax Description

no	Negate a command or set its defaults
auto-cost	Calculate OSPFv3 cost according to bandwidth
reference-bandwidth	Reference bandwidth used to assign OSPFv3 cost
Mbps	(Optional) Specify rate in Mbps
Gbps	Specify rate in Gbps
<i>ref-bw-mbps</i>	Rate in Mbps (bandwidth) (Default)
<i>ref-bw-gbps</i>	Rate in Gbps (bandwidth)

Command Mode

- /exec/configure/router-ospf3 /exec/configure/router-ospf3/vrf

auto-cost reference-bandwidth

```
auto-cost reference-bandwidth { <ref-bw-mbps> [ Mbps ] | <ref-bw-gbps> Gbps } | no auto-cost  
reference-bandwidth [ <ref-bw-mbps> [ Mbps ] | <ref-bw-gbps> Gbps ]
```

Syntax Description

no	Negate a command or set its defaults
auto-cost	Calculate OSPF cost according to bandwidth
reference-bandwidth	Reference bandwidth used to assign OSPF cost
Mbps	(Optional) Specify rate in Mbps
Gbps	Specify rate in Gbps
<i>ref-bw-mbps</i>	Rate in Mbps (bandwidth) (Default)
<i>ref-bw-gbps</i>	Rate in Gbps (bandwidth)

Command Mode

- /exec/configure/router-ospf /exec/configure/router-ospf/vrf

auto-recovery

```
auto-recovery [ reload-delay <time-out> ] | no auto-recovery [ reload-delay <time-out> ]
```

Syntax Description

no	Negate a command or set its defaults
auto-recovery	vPC settings to enable auto recovery if peer is presumed non-operational
reload-delay	(Optional) Duration to wait before assuming peer dead and restoring vpcs
<i>time-out</i>	(Optional) Time-out for restoring vPC links (in seconds)

Command Mode

- /exec/configure/vpc-domain

auto-remap-replication-servers

[no] auto-remap-replication-servers

Syntax Description

no	(Optional) Negate a command or set its defaults
auto-remap-replication-servers	Automatically re-map replication servers on every replication server add

Command Mode

- /exec/configure/if-nve

autonomous-system

{ { autonomous-system <local-as> } | { no autonomous-system [<local-as>] } }

Syntax Description

no	Negate a command or set its defaults
autonomous-system	Specify AS number for Address Family
<i>local-as</i>	Local AS number

Command Mode

- /exec/configure/router-eigrp/router-eigrp-vrf-common /exec/configure/router-eigrp/router-eigrp-af-common

autoroute announce

[no] autoroute announce

Syntax Description

no	(Optional) Negate a command or set its defaults
autoroute	parameters for IGP routing over tunnel
announce	announce tunnel to IGP

Command Mode

- /exec/configure/if-te

autoroute metric

[no] autoroute metric | autoroute metric { <value> | relative <rel-value> }

Syntax Description

no	Negate a command or set its defaults
autoroute	parameters for IGP routing over tunnel
metric	Specify mpls tunnel metric
<i>value</i>	Set tunnel metric for autoroutes
relative	Adjust tunnel metric for autoroutes relative to IGP
<i>rel-value</i>	Relative metric value

Command Mode

- /exec/configure/if-te

autostate

[no] autostate

Syntax Description

no	(Optional) Negate a command or set its defaults
autostate	Enable or disable autostate for interface-vlan

Command Mode

- /exec/configure/if-vlan

autovlan enable

[no] autovlan enable

Syntax Description

no	(Optional) Negate a command or set its defaults
autovlan	Automatic creation/deletion of VLANs
enable	Enable auto creation/deletion of VLANs

Command Mode

- /exec/configure/vmt-conn

awk

| awk <expr>

Syntax Description

	Pipe command output to filter
awk	Mini AWK
<i>expr</i>	Edition command (script)

Command Mode

- /output

