



## D Commands

---

- dampen-igp-metric, on page 8
- dampening, on page 9
- dampening, on page 10
- dampening, on page 11
- data-pattern, on page 12
- data-pattern pad, on page 13
- data-source, on page 14
- database-mapping, on page 15
- databits, on page 16
- databits, on page 17
- datapath-id, on page 18
- datapath-id, on page 19
- dataplane mpls, on page 20
- dataplane mpls, on page 21
- db-jid, on page 22
- db-security user password, on page 23
- db-table, on page 24
- dead-interval, on page 25
- dead-interval, on page 26
- dead-interval, on page 27
- deadtime, on page 28
- deadtime, on page 29
- deadtime, on page 30
- default-information originate, on page 31
- default-information originate, on page 32
- default-information originate, on page 33
- default-information originate, on page 34
- default-information originate, on page 35
- default-information originate, on page 36
- default-information originate, on page 37
- default-information originate always rd route-target, on page 38
- default-metric, on page 39
- default-metric, on page 40

- default-metric, on page 41
- default-metric, on page 42
- default-metric, on page 43
- default-miss, on page 44
- default-originate, on page 45
- default echo revision, on page 46
- default permit, on page 47
- default permit, on page 48
- default permit, on page 49
- default permit, on page 50
- default permit, on page 51
- default permit, on page 52
- define, on page 53
- delay-restore time, on page 54
- delay, on page 55
- delay, on page 56
- delay, on page 57
- delay peer-link, on page 58
- delay restore, on page 59
- delay restore interface-vlan, on page 60
- delay restore orphan-port, on page 61
- delay up, on page 62
- delete, on page 63
- delete ca-certificate, on page 64
- delete certificate, on page 65
- delete crl, on page 66
- demand-circuit, on page 67
- depth, on page 68
- depth, on page 69
- description, on page 70
- description, on page 71
- description, on page 72
- description, on page 73
- description, on page 74
- description, on page 75
- description, on page 76
- description, on page 77
- description, on page 78
- description, on page 79
- description, on page 80
- description, on page 81
- description, on page 82
- description, on page 83
- description, on page 84
- description, on page 85
- description, on page 86

- [description, on page 87](#)
- [description, on page 88](#)
- [description, on page 89](#)
- [description, on page 90](#)
- [description, on page 91](#)
- [description, on page 92](#)
- [description, on page 93](#)
- [description, on page 94](#)
- [description, on page 95](#)
- [description, on page 96](#)
- [description, on page 97](#)
- [description, on page 98](#)
- [description, on page 99](#)
- [description, on page 100](#)
- [description, on page 101](#)
- [description, on page 102](#)
- [description, on page 103](#)
- [description, on page 104](#)
- [description, on page 105](#)
- [description, on page 106](#)
- [description, on page 107](#)
- [description, on page 108](#)
- [description, on page 109](#)
- [description, on page 110](#)
- [description, on page 111](#)
- [description, on page 112](#)
- [description, on page 113](#)
- [description, on page 114](#)
- [description, on page 115](#)
- [description, on page 116](#)
- [description, on page 117](#)
- [description, on page 118](#)
- [description description, on page 119](#)
- [dest-ipaddr, on page 120](#)
- [dest-ipaddr, on page 121](#)
- [dest-port, on page 122](#)
- [dest, on page 123](#)
- [destination-group, on page 124](#)
- [destination-profile, on page 125](#)
- [destination-profile, on page 126](#)
- [destination-profile CiscoTAC-1 alert-group, on page 127](#)
- [destination-profile CiscoTAC-1 email-addr, on page 128](#)
- [destination-profile CiscoTAC-1 http, on page 129](#)
- [destination-profile CiscoTAC-1 index email-addr, on page 130](#)
- [destination-profile CiscoTAC-1 index http, on page 131](#)
- [destination-profile CiscoTAC-1 message-level, on page 132](#)

- destination-profile CiscoTAC-1 message-size, on page 133
- destination-profile CiscoTAC-1 transport-method email, on page 134
- destination-profile CiscoTAC-1 transport-method http, on page 135
- destination-profile alert-group, on page 136
- destination-profile email-addr, on page 137
- destination-profile format, on page 138
- destination-profile full-txt-destination alert-group, on page 139
- destination-profile full-txt-destination email-addr, on page 140
- destination-profile full-txt-destination http, on page 141
- destination-profile full-txt-destination index email-addr, on page 142
- destination-profile full-txt-destination index http, on page 143
- destination-profile full-txt-destination message-level, on page 144
- destination-profile full-txt-destination message-size, on page 145
- destination-profile full-txt-destination transport-method email, on page 146
- destination-profile full-txt-destination transport-method http, on page 147
- destination-profile http, on page 148
- destination-profile index email-addr, on page 149
- destination-profile index http, on page 150
- destination-profile message-level, on page 151
- destination-profile message-size, on page 152
- destination-profile short-txt-destination alert-group, on page 153
- destination-profile short-txt-destination email-addr, on page 154
- destination-profile short-txt-destination http, on page 155
- destination-profile short-txt-destination index http, on page 156
- destination-profile short-txt-destination index email-addr, on page 157
- destination-profile short-txt-destination message-level, on page 158
- destination-profile short-txt-destination message-size, on page 159
- destination-profile short-txt-destination transport-method email, on page 160
- destination-profile short-txt-destination transport-method http, on page 161
- destination-profile transport-method email, on page 162
- destination-profile transport-method http, on page 163
- destination-sup interface, on page 164
- destination, on page 165
- destination1 interface, on page 166
- destination, on page 167
- destination, on page 168
- destination, on page 169
- destination, on page 170
- destination, on page 171
- destination, on page 172
- destination filter ip, on page 173
- destination filter ip any any, on page 174
- destination group, on page 175
- destination interface, on page 176
- destination ip, on page 177
- device-group, on page 178

- device-group, on page 179
- device-role, on page 180
- device-role, on page 181
- device-role, on page 182
- dfe-tuning-delay, on page 183
- diagnostic bootup level, on page 184
- diagnostic bootup level, on page 185
- diagnostic clear result module all diagnostic clear result module test, on page 186
- diagnostic monitor interval module test all hour min second, on page 187
- diagnostic monitor module test all, on page 188
- diagnostic monitor syslog, on page 189
- diagnostic ondemand action-on-failure continue failure-count diagnostic ondemand action-on-failure stop, on page 190
- diagnostic ondemand iteration, on page 191
- diagnostic ondemand test-parameter module test port\_lb packet-length, on page 192
- diagnostic start module test, on page 193
- diagnostic stop module test all, on page 194
- diagnostic test simulation module test diagnostic test simulation module test clear, on page 195
- diff-clean, on page 196
- diff-clean all-users, on page 197
- diff, on page 198
- dir, on page 199
- disable-connected-check, on page 200
- disable-fka, on page 201
- disable-peer-as-check, on page 202
- disable-policy-batching, on page 203
- disable, on page 204
- discard-route external, on page 205
- discard-route external, on page 206
- discovery, on page 207
- disjoint, on page 208
- disjoint, on page 209
- distance, on page 210
- distance, on page 211
- distance, on page 212
- distance, on page 213
- distance, on page 214
- distance, on page 215
- distance, on page 216
- distribute into route-map all, on page 217
- distribute into route-map all, on page 218
- distribute link-state, on page 219
- dns, on page 220
- domain-id, on page 221
- domain-id secondary, on page 222
- domain-tag, on page 223

- [dont-capability-negotiate](#), on page 224
- [dos2nxos](#), on page 225
- [dot1q](#), on page 226
- [dot1q](#), on page 227
- [dot1q](#), on page 228
- [dot1q default dynamic](#), on page 229
- [dot1x default](#), on page 230
- [dot1x default](#), on page 231
- [dot1x host-mode](#), on page 232
- [dot1x mac-auth-bypass](#), on page 233
- [dot1x mac-move](#), on page 234
- [dot1x max-reauth-req](#), on page 235
- [dot1x max-req](#), on page 236
- [dot1x pae](#), on page 237
- [dot1x port-control](#), on page 238
- [dot1x radius-accounting](#), on page 239
- [dot1x re-authenticate interface](#), on page 240
- [dot1x re-authentication](#), on page 241
- [dot1x re-authentication](#), on page 242
- [dot1x show credential](#), on page 243
- [dot1x start supplicant interface](#), on page 244
- [dot1x supplicant credential](#), on page 245
- [dot1x supplicant credential](#), on page 246
- [dot1x supplicant max-start](#), on page 247
- [dot1x supplicant max-start](#), on page 248
- [dot1x supplicant timeout auth-period](#), on page 249
- [dot1x supplicant timeout auth-period](#), on page 250
- [dot1x supplicant timeout held-period](#), on page 251
- [dot1x supplicant timeout held-period](#), on page 252
- [dot1x supplicant timeout start-period](#), on page 253
- [dot1x supplicant timeout start-period](#), on page 254
- [dot1x system-auth-control](#), on page 255
- [dot1x timeout inactivity-period](#), on page 256
- [dot1x timeout inactivity-period](#), on page 257
- [dot1x timeout quiet-period](#), on page 258
- [dot1x timeout quiet-period](#), on page 259
- [dot1x timeout ratelimit-period](#), on page 260
- [dot1x timeout re-authperiod](#), on page 261
- [dot1x timeout re-authperiod](#), on page 262
- [dot1x timeout server-timeout](#), on page 263
- [dot1x timeout supp-timeout](#), on page 264
- [dot1x timeout tx-period](#), on page 265
- [dot1x timeout tx-period](#), on page 266
- [down-bit-ignore](#), on page 267
- [downlink delay](#), on page 268
- [dpp set-qos-group](#), on page 269

- drop-trigger, on page 270
- droplist, on page 271
- droplist, on page 272
- dscp, on page 273
- dscp, on page 274
- dscp, on page 275
- dscp, on page 276
- dscp, on page 277
- dscp, on page 278
- dst-grp, on page 279
- dual-active exclude interface-vlan, on page 280
- duplex, on page 281
- duplex, on page 282
- duplicate-message throttle, on page 283
- dynamic-capability, on page 284
- dynamic-flooding, on page 285
- dynamic-med-interval, on page 286
- dynamic, on page 287
- dynamic, on page 288

# dampen-igp-metric

dampen-igp-metric <sec> | no dampen-igp-metric

## Syntax Description

no	Negate a command or set its defaults
dampen-igp-metric	Dampen IGP metric-related changes
<i>sec</i>	Time interval in seconds

## Command Mode

- /exec/configure/router-bgp/router-bgp-af

# dampening

[no] dampening [ { <half-life> <reuse-limit> <suppress-limit> <max-suppress-time> } | { route-map <rmap-name> } ]

## Syntax Description

no	(Optional) Negate a command or set its defaults
dampening	Configure route flap dampening
<i>half-life</i>	(Optional) Decay half life
<i>reuse-limit</i>	(Optional) Value to start reusing a route
<i>suppress-limit</i>	(Optional) Value to start suppressing a route
<i>max-suppress-time</i>	(Optional) Maximum suppress time for stable route
route-map	(Optional) Apply route-map to specify dampening criteria
<i>rmap-name</i>	(Optional) Route-map name

## Command Mode

- /exec/configure/router-bgp/router-bgp-af-ipv4-mdt /exec/configure/router-bgp/router-bgp-af-l2vpn-vpls

# dampening

[no] dampening | dampening [ { <half-life> [ { <reuse> <suppress> <max-suppress> } [ restart [ <penalty> ] ] } ] ]

## Syntax Description

no	Negate a command or set its defaults
dampening	configures dampening feature
<i>half-life</i>	(Optional) half-life time for the penalty
<i>reuse</i>	(Optional) Value to start reusing an interface
<i>suppress</i>	(Optional) Value to start suppressing an interface
<i>max-suppress</i>	(Optional) Maximum duration to suppress an interface
restart	(Optional) Enable restart penalty
<i>penalty</i>	(Optional) Penalty applied at restart

## Command Mode

- /exec/configure/if-igp

# dampening

[no] dampening [ { <half-life> <reuse-limit> <suppress-limit> <max-suppress-time> } | { route-map <rmap-name> } ]

## Syntax Description

no	(Optional) Negate a command or set its defaults
dampening	Configure route flap dampening
<i>half-life</i>	(Optional) Decay half life
<i>reuse-limit</i>	(Optional) Value to start reusing a route
<i>suppress-limit</i>	(Optional) Value to start suppressing a route
<i>max-suppress-time</i>	(Optional) Maximum suppress time for stable route
route-map	(Optional) Apply route-map to specify dampening criteria
<i>rmap-name</i>	(Optional) Route-map name

## Command Mode

- /exec/configure/router-bgp/router-bgp-af /exec/configure/router-bgp/router-bgp-af-vpnv4
- /exec/configure/router-bgp/router-bgp-af-vpnv6 /exec/configure/router-bgp/router-bgp-af-link-state
- /exec/configure/router-bgp/router-bgp-af-l2vpn-evpn /exec/configure/router-bgp/router-bgp-af-ipv4-mvpn
- /exec/configure/router-bgp/router-bgp-af-ipv6-mvpn

# data-pattern

{ { no | default } data-pattern | data-pattern <hex-pattern> }

## Syntax Description

no	
default	Set a command to its defaults
data-pattern	Data Pattern
<i>hex-pattern</i>	Data Pattern in Hex

## Command Mode

- /exec/configure/ip-sla/udp

# data-pattern pad

```
{ data-pattern pad <pad-val> }
```

## Syntax Description

data-pattern	Configure NGOAM ping payload
pad	Configure NGOAM payload test pattern pad
<i>pad-val</i>	Configure NGOAM payload test pad value

## Command Mode

- /exec/configure/configngoamconnectcheck

# data-source

{ data-source <type> } | { no data-source [ <type> ] }

## Syntax Description

no	Negate a command or set its defaults
data-source	Specify the data source
<i>type</i>	

## Command Mode

- /exec/configure/telemetry/sensor-group

# database-mapping

```
{ [ no ] database-mapping { <eid-prefix> | <eid-prefix6> } { redistribute | { { <locator> | <locator6> } priority <priority> weight <weight> } } }
```

## Syntax Description

no	(Optional) Negate a command or set its defaults
database-mapping	Configure EID-prefix and locator-set for dynamic-EID
<i>eid-prefix</i>	IP EID-prefix for RLOC static mapping
<i>locator</i>	IP address of LISP-VM routers
<i>priority</i>	Configures which Locators from a set are preferred
<i>priority</i>	Lower priority Locator takes preference
<i>weight</i>	Traffic load-spreading among Locators
<i>weight</i>	Specified in a percentage from 0 to 100
redistribute	Used for redistributing into routing protocols

## Command Mode

- /exec/configure/lisp-dynamic-eid /exec/configure/vrf/lisp-dynamic-eid

# databits

[no] databits <i0>

## Syntax Description

no	(Optional) Negate a command or set its defaults
databits	Set number of databits per character
<i>i0</i>	Number of data bits

## Command Mode

- /exec/configure/console

# databits

[no] databits <i0>

## Syntax Description

no	(Optional) Negate a command or set its defaults
databits	Set number of databits per character
<i>i0</i>	Number of data bits

## Command Mode

- /exec/configure/com1

# datapath-id

datapath-id <datapathid-val> | no datapath-id

## Syntax Description

no	Negate a command or set its defaults
datapath-id	Datapath ID
<i>datapathid-val</i>	64-bit hex value [0x1-0xfffffffffffffff]

## Command Mode

- /exec/configure/openflow/switch

# datapath-id

datapath-id <datapathid-val> | no datapath-id

## Syntax Description

no	Negate a command or set its defaults
datapath-id	Datapath ID
<i>datapathid-val</i>	64-bit hex value [0x1-0xfffffffffffffff]

## Command Mode

- /exec/configure/openflow/switch/sub-switch

**dataplane mpls**

[no] dataplane mpls

**Syntax Description**

no	(Optional) Negate a command or set its defaults
dataplane	Dataplane Candidate path-option
mpls	MPLS Dataplane Candidate path-option

**Command Mode**

- /exec/configure/sr/te/color/cndpaths/pref/constraint/sgmnt

# dataplane mpls

[no] dataplane mpls

## Syntax Description

no	(Optional) Negate a command or set its defaults
dataplane	Dataplane Candidate path-option
mpls	MPLS Dataplane Candidate path-option

## Command Mode

- /exec/configure/sr/te/pol/cndpaths/pref/constraint/sgmnt

# db-jid

[no] db-jid <jid> [ key-type <key-type> ]

## Syntax Description

no	(Optional) Negate a command or set its defaults
db-jid	Jabber ID of database
<i>jid</i>	Enter Jabber ID of database
key-type	(Optional) Query key type for this database
<i>key-type</i>	(Optional)

## Command Mode

- /exec/configure/fabric-db/server-xmpp

# db-security user password

[no] db-security user <user> password { 0 <clear> | 7 <encrypted> | <password> } [ shared-secret { 10 <clear> | 7 <encrypted> | <secret> } ]

## Syntax Description

no	(Optional) Negate a command or set its defaults
db-security	Database Security
user	User ID
<i>user</i>	Enter user ID
password	Password
0	Password that follows should be in clear text
<i>clear</i>	Password in clear text
7	Password that follows should be in encrypted text
<i>encrypted</i>	Encrypted password
<i>password</i>	Enter password in clear text
shared-secret	(Optional) Shared-secret
10	(Optional) Indicates that password that follows should be in clear text
<i>clear</i>	(Optional) Password in clear text
7	(Optional) Password that follows should be in encrypted text
<i>encrypted</i>	(Optional) Encrypted password
<i>secret</i>	(Optional) Enter shared-secret in clear text

## Command Mode

- /exec/configure/fabric-db/server-ldap

# db-table

[no] db-table <tablename> [ key-type <key-type> ]

## Syntax Description

no	(Optional) Negate a command or set its defaults
db-table	Table name to search
<i>tablename</i>	Enter table name to search
key-type	(Optional) Query key type for this table
<i>key-type</i>	(Optional)

## Command Mode

- /exec/configure/fabric-db/server-ldap

# dead-interval

```
{ { dead-interval <interval> } | { no dead-interval [ <interval> ] } }
```

## Syntax Description

no	Negate a command or set its defaults
dead-interval	Dead interval
<i>interval</i>	(seconds)

## Command Mode

- /exec/configure/router-ospf3/router-ospf3-vlink /exec/configure/router-ospf3/vrf/router-ospf3-vlink

**dead-interval**

# dead-interval

{ { dead-interval &lt;interval&gt; } | { no dead-interval [ &lt;interval&gt; ] } }

## Syntax Description

no	Negate a command or set its defaults
dead-interval	Dead interval
<i>interval</i>	(seconds)

## Command Mode

- /exec/configure/router-ospf/router-ospf-vlink /exec/configure/router-ospf/vrf/router-ospf-vlink

# dead-interval

```
{ { dead-interval <interval> } | { no dead-interval [ <interval> ] } }
```

## Syntax Description

no	Negate a command or set its defaults
dead-interval	Dead interval
<i>interval</i>	(seconds)

## Command Mode

- /exec/configure/router-ospf/vrf/router-ospf-slink

**deadtime**

# deadtime

[no] deadtime <i0>

## Syntax Description

no	(Optional) Negate a command or set its defaults
deadtime	duration for which non-reachable server is skipped
<i>i0</i>	Length of time, in minutes

## Command Mode

- /exec/configure/tacacs+

# deadtime

[no] deadtime <i0>

## Syntax Description

no	(Optional) Negate a command or set its defaults
deadtime	duration for which non-reachable server is skipped
<i>i0</i>	Length of time, in minutes

## Command Mode

- /exec/configure/ldap

**deadtime**

# deadtime

[no] deadtime <i0>

## Syntax Description

no	(Optional) Negate a command or set its defaults
deadtime	duration for which non-reachable server is skipped
<i>i0</i>	Length of time, in minutes

## Command Mode

- /exec/configure/radius

# default-information originate

[no] default-information originate [ always ] [ route-map <map-name> ]

## Syntax Description

no	(Optional) Negate a command or set its defaults
default-information	RIP control distribution of default route
originate	RIP distribute a default route
always	(Optional) RIP always advertise default route
route-map	(Optional) Policy to constrain redistribution
<i>map-name</i>	(Optional) Route-map name

## Command Mode

- /exec/configure/router-rip/router-rip-af-common /exec/configure/router-rip/router-rip-vrf-af-common

**default-information originate**

## default-information originate

[no] default-information originate [ always ] [ route-map <map-name> ]

### Syntax Description

no	(Optional) Negate a command or set its defaults
default-information	Control origination of a default route
originate	Originate a default route
always	(Optional) Always advertise default route
route-map	(Optional) Route-map to announce default routes
<i>map-name</i>	(Optional) A 'routing-rules' route-map name

### Command Mode

- /exec/configure/router-isis/router-isis-af-ipv4 /exec/configure/router-isis/router-isis-af-ipv6

# default-information originate

[no] default-information originate [ always ] [ route-map <map-name> ]

## Syntax Description

no	(Optional) Negate a command or set its defaults
default-information	Control origination of a default route
originate	Originate a default route
always	(Optional) Always advertise default route
route-map	(Optional) Route-map to announce default routes
<i>map-name</i>	(Optional) A 'routing-rules' route-map name

## Command Mode

- /exec/configure/router-isis/router-isis-vrf-common

**default-information originate**

## default-information originate

[no] default-information originate [ always ] [ route-map <policy-name> ]

### Syntax Description

no	(Optional) Negate a command or set its defaults
default-information	Control distribution of default route
originate	Distribute a default route
always	(Optional) Always advertise default route
route-map	(Optional) Policy to control distribution of default route
<i>policy-name</i>	(Optional) Route-map name

### Command Mode

- /exec/configure/router-ospf3/router-ospf3-af-ipv6 /exec/configure/router-ospf3/vrf/router-ospf3-af-ipv6

# default-information originate

[no] default-information originate [ always ] [ route-map <map> ]

## Syntax Description

no	(Optional) Negate a command or set its defaults
default-information	Control origination of a default route
originate	Originate a default route
always	(Optional) Always advertise default route
route-map	(Optional) Use a route-map for default route metrics
map	(Optional) Route-map name

## Command Mode

- /exec/configure/router-eigrp/router-eigrp-vrf-common /exec/configure/router-eigrp/router-eigrp-af-common

**default-information originate**

## default-information originate

[no] default-information originate [ always ] [ route-map <policy-name> ]

### Syntax Description

no	(Optional) Negate a command or set its defaults
default-information	Control distribution of default route
originate	Distribute a default route
always	(Optional) Always advertise default route
route-map	(Optional) Policy to control distribution of default route
<i>policy-name</i>	(Optional) Route-map name

### Command Mode

- /exec/configure/router-ospf /exec/configure/router-ospf/vrf

# default-information originate

[no] default-information originate

## Syntax Description

no	(Optional) Negate a command or set its defaults
default-information	Control distribution of default information
originate	Distribute a default route

## Command Mode

- /exec/configure/router-bgp/router-bgp-af /exec/configure/router-bgp/router-bgp-af-ipv6-label  
/exec/configure/router-bgp/router-bgp-af-ipv4-label

**default-information originate always rd route-target**

[no] default-information originate always rd { <ext-comm-rd-aa2nn4> | <ext-comm-rd-aa4nn2> } route-target { <ext-comm-rt-aa2nn4> | <ext-comm-rt-aa4nn2> }

#### Syntax Description

no	(Optional) Negate a command or set its defaults
default-information	Control distribution of default information
originate	Distribute a default route
always	Always advertise default route
rd	VPN Route Distinguisher
<i>ext-comm-rd-aa4nn2</i>	VPN route distinguisher in aa4:nn or ip:nn format
<i>ext-comm-rd-aa2nn4</i>	VPN route distinguisher in aa:nn format
route-target	Specify Target VPN Extended Communities
<i>ext-comm-rt-aa4nn2</i>	RT extcommunity in aa4:nn or ip:nn format
<i>ext-comm-rt-aa2nn4</i>	RT extcommunity in aa:nn format

#### Command Mode

- /exec/configure/router-bgp/router-bgp-af-vpnv4 /exec/configure/router-bgp/router-bgp-af-vpnv6

# default-metric

{ default-metric <cost> } | { no default-metric [ <cost> ] }

## Syntax Description

no	Negate a command or set its defaults
default-metric	Specify default metric for redistributed routes
<i>cost</i>	Metric value

## Command Mode

- /exec/configure/router-ospf3/router-ospf3-af-ipv6 /exec/configure/router-ospf3/vrf/router-ospf3-af-ipv6

# default-metric

default-metric <metric> | no default-metric [ <metric> ]

## Syntax Description

no	Negate a command or set its defaults
default-metric	RIP default metric
<i>metric</i>	RIP metric value

## Command Mode

- /exec/configure/router-rip/router-rip-af-common /exec/configure/router-rip/router-rip-vrf-af-common

# default-metric

```
{ { default-metric <bw> <delay> <rel> <load> <mtu> } | { no default-metric [ <bw> <delay> <rel> <load> <mtu> ] } }
```

## Syntax Description

no	Negate a command or set its defaults
default-metric	Set metric of redistributed routes
<i>bw</i>	Bandwidth in Kbits per second
<i>delay</i>	Delay metric
<i>rel</i>	Reliability metric where 255 is 100% reliable
<i>load</i>	Effective bandwidth metric (Loading) where 255 is 100% loaded
<i>mtu</i>	Maximum Transmission Unit metric of the path

## Command Mode

- /exec/configure/router-eigrp/router-eigrp-vrf-common /exec/configure/router-eigrp/router-eigrp-af-common

**default-metric**

# default-metric

{ default-metric &lt;cost&gt; } | { no default-metric [ &lt;cost&gt; ] }

## Syntax Description

no	Negate a command or set its defaults
default-metric	Specify default metric for redistributed routes
<i>cost</i>	Metric value

## Command Mode

- /exec/configure/router-ospf /exec/configure/router-ospf/vrf

# default-metric

[no] default-metric <metric>

## Syntax Description

no	(Optional) Negate a command or set its defaults
default-metric	Set metric of redistributed routes
<i>metric</i>	Default Metric

## Command Mode

- /exec/configure/router-bgp/router-bgp-af

default-miss

# default-miss

default-miss { continue-drop | continue-normal | continue-controller | drop | normal | controller } | no default-miss

## Syntax Description

no	Negate a command or set its defaults
default-miss	Set continue-drop/continue-normal/continue-controller/drop/normal/controller flow action
continue-drop	cascade drop to next table
continue-normal	cascade normal to next table
continue-controller	cascade punt to next table
drop	drop packet
normal	forward to normal dataplane
controller	punt to controller

## Command Mode

- /exec/configure/openflow/switch

# default-originate

[ no | default ] default-originate [ route-map <rmap-name> ]

## Syntax Description

no	(Optional) Negate a command or set its defaults
default	(Optional) Inherit values from a peer template
default-originate	Originate a default toward this peer
route-map	(Optional) Route-map to specify criteria for originating default
<i>rmap-name</i>	(Optional) Route-map name

## Command Mode

- /exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af
- /exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af-ipv4-label
- /exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af-ipv6-label

**default echo revision**

# default echo revision

```
default echo { revision | vendor-extension }
```

## Syntax Description

default	Set a command to its defaults
echo	Echo Request attributes
revision	Echo packet default revision
vendor-extension	Send Vendor Extension TLV with echo Req

## Command Mode

- /exec/configure/mpls-oam

# default permit

[no] default { permit | deny }

## Syntax Description

no	(Optional) Negate a command or set its defaults
default	Default Host Admission Policy
permit	Admission Permitted
deny	Admission Denied

## Command Mode

- /exec/configure/nbm-host-policy/sender

**default permit**

# default permit

[no] default { permit | deny }

## Syntax Description

no	(Optional) Negate a command or set its defaults
default	Default Host Admission Policy
permit	Admission Permitted
deny	Admission Denied

## Command Mode

- /exec/configure/nbm-vrf/nbm-host-policy/sender

# default permit

[no] default { permit | deny }

## Syntax Description

no	(Optional) Negate a command or set its defaults
default	Default Host Admission Policy
permit	Admission Permitted
deny	Admission Denied

## Command Mode

- /exec/configure/nbm-host-policy/receiver

**default permit**

# default permit

[no] default { permit | deny }

## Syntax Description

no	(Optional) Negate a command or set its defaults
default	Default Host Admission Policy
permit	Admission Permitted
deny	Admission Denied

## Command Mode

- /exec/configure/nbm-vrf/nbm-host-policy/receiver

# default permit

[no] default { permit | deny }

## Syntax Description

no	(Optional) Negate a command or set its defaults
default	Default Host Admission Policy
permit	Admission Permitted
deny	Admission Denied

## Command Mode

- /exec/configure/nbm-host-policy/pim

**default permit**

# default permit

[no] default { permit | deny }

## Syntax Description

no	(Optional) Negate a command or set its defaults
default	Default Host Admission Policy
permit	Admission Permitted
deny	Admission Denied

## Command Mode

- /exec/configure/nbm-vrf/nbm-host-policy/pim

# define

[no] define <paramname> [ <paramtype> ] [ <paramdesc> ]

## Syntax Description

no	(Optional) Negate a command or set its defaults
define	Define a parameter
<i>paramname</i>	Enter the name of the parameter
<i>paramtype</i>	(Optional) param type
<i>paramdesc</i>	(Optional) Enter the parameter description

## Command Mode

- /exec/configure/param-list

**delay-restore time**

[no] delay-restore time <sec>

**Syntax Description**

no	(Optional) Negate a command or set its defaults
delay-restore	delay-restore
time	time
<i>sec</i>	time in seconds

**Command Mode**

- /exec/configure/config-evpn-msite-bgw

# delay

delay <delay\_val> | no delay [ <delay\_val> ]

## Syntax Description

no	Negate a command or set its defaults
delay	Specify interface throughput delay
<i>delay_val</i>	Throughput delay (tens of microseconds)

## Command Mode

- /exec/configure/if-ethernet-all /exec/configure/if-eth-non-member /exec/configure/if-port-channel  
/exec/configure/if-ethernet-all /exec/configure/if-ethernet-p2p /exec/configure/if-remote-ethernet-sub  
/exec/configure/if-port-channel-range

# delay

delay <microseconds> | no delay

## Syntax Description

no	Negate a command or set its defaults
delay	Specify interface throughput delay
<i>microseconds</i>	Throughput delay (tens of microseconds)

## Command Mode

- /exec/configure/if-vlan-common

# delay

delay <delay\_val> | no delay [ <delay\_val> ]

## Syntax Description

no	Negate a command or set its defaults
delay	Specify interface throughput delay
<i>delay_val</i>	Throughput delay (tens of microseconds)

## Command Mode

- /exec/configure/if-ether-sub /exec/configure/if-ether-sub-p2p /exec/configure/if-port-channel-sub

**delay peer-link**

# delay peer-link

delay peer-link <time> | no delay peer-link

## Syntax Description

no	Negate a command or set its defaults
delay	Peer-link bringup delay
peer-link	Delay peer-link bringup
<i>time</i>	Delay in bringing up the peer-link (in seconds)

## Command Mode

- /exec/configure/vpc-domain

# delay restore

delay restore <time-out> | no delay restore

## Syntax Description

no	Negate a command or set its defaults
delay	Initialization delay
restore	Delay after restoring peer-link
<i>time-out</i>	Delay in bringing up the vPC links (in seconds)

## Command Mode

- /exec/configure/vpc-domain

**delay restore interface-vlan**

# delay restore interface-vlan

delay restore interface-vlan <time-out> | no delay restore interface-vlan

## Syntax Description

no	Negate a command or set its defaults
delay	Initialization delay
restore	Delay after restoring peer-link
interface-vlan	Delay in bringing-up interface-vlan
<i>time-out</i>	Delay in bringing up the interface-vlan (in seconds)

## Command Mode

- /exec/configure/vpc-domain

# delay restore orphan-port

delay restore orphan-port <delay\_time> | no delay restore orphan-port

## Syntax Description

no	Negate a command or set its defaults
delay	Initialization delay
restore	Delay after restoring peer-link
orphan-port	Configure vPC orphan-port delay bring-up timer
<i>delay_time</i>	Specify delay time in seconds

## Command Mode

- /exec/configure/vpc-domain

```
delay { { up <up_delay> [ down <down_delay> ] } | { down <down_delay> [ up <up_delay> ] } } | no delay
```

#### Syntax Description

no	Negate a command or set its defaults
delay	Tracking delay
up	Delay up change notification
<i>up_delay</i>	Seconds to delay
down	(Optional) Delay down change notification
<i>down_delay</i>	(Optional) Seconds to delay

#### Command Mode

- /exec/configure/track /exec/configure/tr-list-bool /exec/configure/tr-list-thrp /exec/configure/tr-list-thrw

# delete

```
delete { <uri0> | <uri1> | <uri2> } [ no-prompt ]
```

## Syntax Description

delete	delete a file or directory
<i>uri0</i>	Delete a file or directory
<i>uri1</i>	Delete a file or directory on expansion flash
<i>uri2</i>	Directory or filename on logflash
no-prompt	(Optional) Do not prompt for multiple deletion of files

## Command Mode

- /exec

**delete ca-certificate**`delete ca-certificate`**Syntax Description**

delete	Delete the certificates
ca-certificate	Delete the ca certificates

**Command Mode**

- /exec/configure/trustpoint

# delete certificate

delete certificate [ force ]

## Syntax Description

delete	Delete the certificates
certificate	Delete the identity certificate
force	(Optional) Force delete the identity certificate

## Command Mode

- /exec/configure/trustpoint

**delete crl**

delete crl

**Syntax Description**

delete	Delete the certificates
crl	Delete the CRL

**Command Mode**

- /exec/configure/trustpoint

# demand-circuit

[no] demand-circuit

## Syntax Description

no	(Optional) Negate a command or set its defaults
demand-circuit	OSPF Demand circuit

## Command Mode

- /exec/configure/router-ospf/vrf/router-ospf-slink

**depth**

# depth

{ [ no ] depth &lt;cells&gt; | no depth }

## Syntax Description

depth	Provide the number of cells for this INT queue_profile
<i>cells</i>	queue_profile depth (number of cells). Default is 300

## Command Mode

- /exec/configure/config-int-q-prof

# depth

```
{ [ no ] depth <cells> | no depth }
```

## Syntax Description

depth	Provide the number of cells for this POSTCARD queue_profile
<i>cells</i>	queue_profile depth (number of cells/packets). Default is 300

## Command Mode

- /exec/configure/config-postcard-q-prof

**description**

# description

{ [ no ] description &lt;line&gt; | no description }

## Syntax Description

description	Provide a description for this Flow Record
<i>line</i>	Record description string (63 characters maximum)

## Command Mode

- /exec/configure/config-fte-record

# description

```
{ [ no ] description <line> | no description }
```

## Syntax Description

description	Provide a description for this Flow Exporter
<i>line</i>	Monitor description string (63 characters maximum)

## Command Mode

- /exec/configure/config-int-exporter

**description**

# description

{ [ no ] description &lt;line&gt; | no description }

## Syntax Description

description	Provide a description for this INT Record
<i>line</i>	Record description string (63 characters maximum)

## Command Mode

- /exec/configure/config-int-record

# description

```
{ [ no ] description <line> | no description }
```

## Syntax Description

description	Provide a description for this INT Watchlist
<i>line</i>	Watchlist description string (63 characters maximum)

## Command Mode

- /exec/configure/config-int-watchlist

**description**

# description

{ [ no ] description &lt;line&gt; | no description }

## Syntax Description

description	Provide a description for this INT Monitor
<i>line</i>	Monitor description string (63 characters maximum)

## Command Mode

- /exec/configure/config-int-monitor

# description

```
{ [ no ] description <line> | no description }
```

## Syntax Description

description	Provide a description for this INT queue_profile
<i>line</i>	queue_profile description string (63 characters maximum)

## Command Mode

- /exec/configure/config-int-q-prof

# description

```
{ [ no ] description <line> | no description }
```

## Syntax Description

description	Provide a description for this INT flow-profile
<i>line</i>	flow-profile description string (63 characters maximum)

## Command Mode

- /exec/configure/config-int-flow-prof

# description

```
{ [ no ] description <line> | no description }
```

## Syntax Description

description	Provide a description for this FTE Monitor
<i>line</i>	Monitor description string (63 characters maximum)

## Command Mode

- /exec/configure/config-fte-monitor

**description**

# description

{ [ no ] description &lt;line&gt; | no description }

## Syntax Description

description	Provide a description for this FTE Event
<i>line</i>	Event description string (63 characters maximum)

## Command Mode

- /exec/configure/config-fte-event

# description

{ description <descr> } | { no description }

## Syntax Description

description	Configure description of the profile
<i>descr</i>	Description of maximum 64 characters

## Command Mode

- /exec/configure/configngoaamprofile

**description**

# description

description <desc\_line> | no description [ <desc\_line> ]

## Syntax Description

no	Negate a command or set its defaults
description	Enter description of maximum 80 characters
<i>desc_line</i>	Description of maximum 80 characters

## Command Mode

- /exec/configure/if-vfc

# description

description <descr> | no description

## Syntax Description

no	Negate a command or set its defaults
description	Session description (max 32 characters)
<i>descr</i>	Enter the description string(can include spaces)

## Command Mode

- /exec/configure/monitor-common

# description

description <desc\_line> | no description [ <desc\_line> ]

## Syntax Description

no	Negate a command or set its defaults
description	Enter description of maximum 254 characters
<i>desc_line</i>	Description of maximum 254 characters

## Command Mode

- /exec/configure/if-any-tunnel

# description

{ description <desc-str> | no description [ <desc-str> ] }

## Syntax Description

no	Negate a command or set its defaults
description	Class-Map description
<i>desc-str</i>	Description of this class-map (up to 200 characters)

## Command Mode

- /exec/configure/class-map

**description**

# description

[no] description <desc-str>

## Syntax Description

no	(Optional) Negate a command or set its defaults
description	Class-Map description
<i>desc-str</i>	Description of this class-map (up to 200 characters)

## Command Mode

- /exec/configure/class-map/type/queuing

# description

{ description <desc-str> | no description [ <desc-str> ] }

## Syntax Description

no	Negate a command or set its defaults
description	Table-Map description
<i>desc-str</i>	Description of this table-map (up to 200 characters)

## Command Mode

- /exec/configure/table-map

**description**

# description

{ description &lt;desc-str&gt; | no description [ &lt;desc-str&gt; ] }

**Syntax Description**

no	Negate a command or set its defaults
description	Policy-Map description
<i>desc-str</i>	Description of this policy-map (up to 200 characters)

**Command Mode**

- /exec/configure/policy-map

# description

{ description <desc-str> | no description [ <desc-str> ] }

## Syntax Description

no	Negate a command or set its defaults
description	Policy-Map description
<i>desc-str</i>	Description of this policy-map (up to 200 characters)

## Command Mode

- /exec/configure/policy-map/type/queuing

**description**

# description

{ [ no ] description &lt;line&gt; | no description }

## Syntax Description

description	Provide a description for this Flow Record
<i>line</i>	Record description string (63 characters maximum)

## Command Mode

- /exec/configure/nfm-record

# description

```
{ [ no ] description <line> | no description }
```

## Syntax Description

description	Provide a description for this Flow Monitor
<i>line</i>	Monitor description string (63 characters maximum)

## Command Mode

- /exec/configure/nfm-monitor

# description

```
{ [ no ] description <line> | no description }
```

## Syntax Description

description	Provide a description for this Flow Exporter
<i>line</i>	Monitor description string (63 characters maximum)

## Command Mode

- /exec/configure/nfm-exporter

# description

```
description [ port-profile ] <desc_line> | no description [ port-profile ] [ <desc_line> ]
```

## Syntax Description

no	Negate a command or set its defaults
description	Enter port-profile description of maximum 80 characters
port-profile	(Optional) Hack for conf-sync
<i>desc_line</i>	Enter port-profile description of maximum 80 characters

## Command Mode

- /exec/configure/port-profile

# description

{ description <desc-str> | no description [ <desc-str> ] }

## Syntax Description

no	Negate a command or set its defaults
description	Class-Map description
<i>desc-str</i>	Description of this class-map (up to 200 characters)

## Command Mode

- /exec/configure/class-map/type/uf

# description

{ description <desc-str> | no description [ <desc-str> ] }

## Syntax Description

no	Negate a command or set its defaults
description	Policy-Map description
<i>desc-str</i>	Description of this policy-map (up to 200 characters)

## Command Mode

- /exec/configure/policy-map/type/uf

# description

description <desc> | no description

## Syntax Description

no	Negate a command or set its defaults
description	Fabric Path topology description
<i>desc</i>	Description of maximum 80 characters

## Command Mode

- /exec/configure/fp-topology

# description

[no] description <description>

## Syntax Description

no	(Optional) Negate a command or set its defaults
description	Configure description for the policy
<i>description</i>	Description for the policy

## Command Mode

- /exec/configure/event-manager-applet

# description

[no] description

## Syntax Description

no	Negate a command or set its defaults
description	Configure description for the policy

## Command Mode

- /exec/configure/event-manager-applet

# description

```
{ [ no ] description <line> | no description }
```

## Syntax Description

description	Provide a description for this Flow Exporter
<i>line</i>	Monitor description string (63 characters maximum)

## Command Mode

- /exec/configure/nfm-exporter

**description**

# description

{ [ no ] description &lt;line&gt; | no description }

## Syntax Description

description	Provide a description for this Flow Record
<i>line</i>	Record description string (63 characters maximum)

## Command Mode

- /exec/configure/nfm-record

# description

```
{ [ no ] description <line> | no description }
```

## Syntax Description

description	Provide a description for this Flow Monitor
<i>line</i>	Monitor description string (63 characters maximum)

## Command Mode

- /exec/configure/nfm-monitor

# description

description <desc\_line> | no description

## Syntax Description

no	Negate a command or set its defaults
description	Interface specific description
<i>desc_line</i>	Up to 255 characters describing this interface

## Command Mode

- /exec/configure/if-vlan-common

# description

```
{ [ no ] description <line> | no description }
```

## Syntax Description

description	Provide a description for this Flow Exporter
<i>line</i>	Monitor description string (63 characters maximum)

## Command Mode

- /exec/configure/config-postcard-exporter

**description**

# description

{ [ no ] description &lt;line&gt; | no description }

## Syntax Description

description	Provide a description for this POSTCARD Watchlist
<i>line</i>	Watchlist description string (63 characters maximum)

## Command Mode

- /exec/configure/config-postcard-watchlist

# description

```
{ [ no ] description <line> | no description }
```

## Syntax Description

description	Provide a description for this POSTCARD Monitor
<i>line</i>	Monitor description string (63 characters maximum)

## Command Mode

- /exec/configure/config-postcard-monitor

**description**

# description

{ [ no ] description &lt;line&gt; | no description }

## Syntax Description

description	Provide a description for this POSTCARD queue_profile
<i>line</i>	queue_profile description string (63 characters maximum)

## Command Mode

- /exec/configure/config-postcard-q-prof

# description

```
{ [ no ] description <line> | no description }
```

## Syntax Description

description	Provide a description for this POSTCARD flow-profile
<i>line</i>	flow-profile description string (63 characters maximum)

## Command Mode

- /exec/configure/config-postcard-flow-prof

# description

description <line> | no description

## Syntax Description

no	Negate a command or set its defaults
description	Add a description for the role
<i>line</i>	Enter the description string(can include spaces)

## Command Mode

- /exec/configure/role

# description

{ description <line> | no description }

## Syntax Description

no	Negate a command or set its defaults
description	Description of the route-map
<i>line</i>	Route-map description string

## Command Mode

- /exec/configure/route-map

# description

description <desc\_line> | no description [ <desc\_line> ]

## Syntax Description

no	Negate a command or set its defaults
description	Enter description of maximum 254 characters
<i>desc_line</i>	Description of maximum 254 characters

## Command Mode

- /exec/configure/if-eth-base /exec/configure/if-port-channel /exec/configure/if-eth-port-channel /exec/configure/if-ether-sub /exec/configure/if-ether-sub-p2p /exec/configure/if-port-channel-sub /exec/configure/if-loopback /exec/configure/if-ethernet-all /exec/configure/if-ethernet-p2p /exec/configure/if-remote-ethernet-sub /exec/configure/if-port-channel-range

# description

description <desc\_line> | no description [ <desc\_line> ]

## Syntax Description

no	Negate a command or set its defaults
description	Enter description of maximum 254 characters
<i>desc_line</i>	Description of maximum 254 characters

## Command Mode

- /exec/configure/if-mgmt-ether

# description

description <desc\_line> | no description [ <desc\_line> ]

## Syntax Description

no	Negate a command or set its defaults
description	Enter description of maximum 254 characters
<i>desc_line</i>	Description of maximum 254 characters

## Command Mode

- /exec/configure/if-nve

# description

description <desc\_line> | no description [ <desc\_line> ]

## Syntax Description

no	Negate a command or set its defaults
description	Enter description of maximum 80 characters
<i>desc_line</i>	Description of maximum 80 characters

## Command Mode

- /exec/configure/if-overlay /exec/configure/if-te /exec/configure/if-nve

# description

[no] description [ <desc> ] | description <desc>

## Syntax Description

no	Negate a command or set its defaults
description	Group description
<i>desc</i>	(Optional) Up to 80 characters describing this group

## Command Mode

- /exec/configure/if-eth-any/vrrpv3

# description

{ description <line> } | { no description }

## Syntax Description

no	Negate a command or set its defaults
description	Description of the VRF
<i>line</i>	VRF description string

## Command Mode

- /exec/configure/vrf

# description

```
{ [ no ] description <descrip-string> }
```

## Syntax Description

no	(Optional) Negate a command or set its defaults
description	Provide a description string for the LISP site
<i>descrip-string</i>	Description string

## Command Mode

- /exec/configure/lisp-site /exec/configure/vrf/lisp-site

# description

description <describe> | no description

## Syntax Description

no	Negate a command or set its defaults
description	Description for the BMP server
<i>describe</i>	Upto 80 characters describing this server

## Command Mode

- /exec/configure/router-bgp/router-bgp-bmp-server

# description

```
description <describe> | { no | default } description [ <describe> ]
```

## Syntax Description

no	Negate a command or set its defaults
default	Inherit values from a peer template
description	Neighbor specific description
<i>describe</i>	Up to 80 characters describing this neighbor

## Command Mode

- /exec/configure/router-bgp/router-bgp-neighbor-sess

# description

```
{ [ no ] description <text> }
```

## Syntax Description

description	description for this profile
<i>text</i>	description

## Command Mode

- /exec/configure/dot1x-cred

# description

{ description <description\_text> | no description [ <description\_text> ] }

## Syntax Description

no	Negate a command or set its defaults
description	Virtual service description
<i>description_text</i>	Description of this virtual service

## Command Mode

- /exec/configure/virt-serv

# description description

[no] description | description <desc>

## Syntax Description

no	(Optional) Negate a command or set its defaults
description	Pathway description
<i>desc</i>	Up to 80 characters describing this pathway

## Command Mode

- /exec/configure/if-eth-any/vrrs

# dest-ipaddr

```
{ dest-ipaddr { <ip-address> | <hostname> } }
```

## Syntax Description

dest-ipaddr	Destination ip address
<i>ip-address</i>	IP address, broadcast disallowed
<i>hostname</i>	IP Hostname, broadcast disallowed

## Command Mode

- /exec/configure/ip-sla/udp /exec/configure/ip-sla/jitter

# dest-ipaddr

```
{ dest-ipaddr { <ip-address> | <hostname> | <ipv6-address> } }
```

## Syntax Description

dest-ipaddr	Destination ip address
<i>ip-address</i>	IP address, broadcast disallowed
<i>hostname</i>	IP Hostname, broadcast disallowed

## Command Mode

- /exec/configure/ip-sla/tcp

# dest-port

{ dest-port <port> }

## Syntax Description

dest-port	Destination port
<i>port</i>	udp port number

## Command Mode

- /exec/configure/ip-sla/udp /exec/configure/ip-sla/jitter /exec/configure/ip-sla/tcp

# dest

```
{ dest { { ip { <numeric10> | <numeric11> | unknown } } | { mac <dmac> <dot1qid> [ <intfid> ] } } }
```

## Syntax Description

dest	destination node
ip	ip address
<i>numeric10</i>	Ipv4 address of remote host / VTEP
unknown	Peer vtep ip is unknown, Applicable only for channel Nv03
mac	Mac
<i>dmac</i>	Destination mac address
<i>dot1qid</i>	Encapsulation dot1q/bd on which the mac is learnt
<i>intfid</i>	(Optional) Name of the interface for ngoam ping on which dot1q is configured

## Command Mode

- /exec/configure/configngoamconnectcheck

**destination-group**

# destination-group

[no] destination-group <dgrp-id>

## Syntax Description

no	(Optional) Negate a command or set its defaults
destination-group	Create destination group
<i>dgrp-id</i>	Identifier

## Command Mode

- /exec/configure/telemetry

# destination-profile

[no] destination-profile

## Syntax Description

no	(Optional) Negate a command or set its defaults
destination-profile	Specify the default destination profile

## Command Mode

- /exec/configure/telemetry

# destination-profile

[no] destination-profile <s0>

## Syntax Description

no	(Optional) Negate a command or set its defaults
destination-profile	Configure destination profiles
s0	User defined destination profile name

## Command Mode

- /exec/configure/callhome

# destination-profile CiscoTAC-1 alert-group

[no] destination-profile CiscoTAC-1 alert-group { All | Configuration | Diagnostic | EEM | Cisco-TAC | Environmental | Inventory | License | Linecard-Hardware | Supervisor-Hardware | Syslog-group-port | System | Test }

## Syntax Description

no	(Optional) Negate a command or set its defaults
destination-profile	Configure destination profiles
CiscoTAC-1	Configure destination profile for XML message
alert-group	Add alert group
All	This alert group consists of all of the callhome messages
Cisco-TAC	Events which are meant for Cisco TAC only
Environmental	Power,fan,temperature related events
Inventory	Inventory status events
License	Events related to licensing
Linecard-Hardware	Linecard related events
Supervisor-Hardware	Supervisor related events
Syslog-group-port	Events related to syslog messages filed by port manager
System	Software related events
Test	User generated test events
Configuration	Events related to Configuration
Diagnostic	Events related to Diagnostic
EEM	EEM events

## Command Mode

- /exec/configure/callhome

destination-profile CiscoTAC-1 email-addr

## destination-profile CiscoTAC-1 email-addr

destination-profile CiscoTAC-1 [ index <i0> ] email-addr <s0>

### Syntax Description

destination-profile	Configure destination profiles
CiscoTAC-1	Configure destination profile for XML message
email-addr	Add email addr
<i>s0</i>	Provide email address, example: jdow@xyz.com
index	(Optional) Configure an index(1 to 50) for email-id
<i>i0</i>	(Optional) Index between 1 to 50 associate with email-id

### Command Mode

- /exec/configure/callhome

# destination-profile CiscoTAC-1 http

destination-profile CiscoTAC-1 [ index <i0> ] http <s0>

## Syntax Description

destination-profile	Configure destination profiles
CiscoTAC-1	Configure destination profile for XML message
http	Add http or https url
s0	Provide http or https url, example1: http://site.com/services/callserv example2: https://site2.com/serv/CALL
index	(Optional) Configure an index(1 to 50) for http url
i0	(Optional) Index between 1 to 50 associate with http url

## Command Mode

- /exec/configure/callhome

destination-profile CiscoTAC-1 index email-addr

## destination-profile CiscoTAC-1 index email-addr

[no] destination-profile CiscoTAC-1 index <i0> email-addr

### Syntax Description

no	Negate a command or set its defaults
destination-profile	Configure destination profiles
CiscoTAC-1	Configure destination profile for XML message
email-addr	Add email addr
index	Delete email-id associated with index(1 to 50)
i0	Index between 1 to 50 associate with email-id

### Command Mode

- /exec/configure/callhome

# destination-profile CiscoTAC-1 index http

[no] destination-profile CiscoTAC-1 index <i0> http

## Syntax Description

no	Negate a command or set its defaults
destination-profile	Configure destination profiles
CiscoTAC-1	Configure destination profile for XML message
http	Add http or https url
index	Delete http url associated with index(1 to 50)
i0	Index between 1 to 50 associate with http url

## Command Mode

- /exec/configure/callhome

destination-profile CiscoTAC-1 message-level

## destination-profile CiscoTAC-1 message-level

[no] destination-profile CiscoTAC-1 message-level <i0>

### Syntax Description

no	(Optional) Negate a command or set its defaults
destination-profile	Configure destination profiles
CiscoTAC-1	Configure destination profile for XML message
message-level	Callhome message level(0-lowest urgency, 9-highest urgency)
<i>i0</i>	

### Command Mode

- /exec/configure/callhome

# destination-profile CiscoTAC-1 message-size

[no] destination-profile CiscoTAC-1 message-size <i0>

## Syntax Description

no	(Optional) Negate a command or set its defaults
destination-profile	Configure destination profiles
CiscoTAC-1	Configure destination profile for XML message
message-size	Configure maximum message size (default 5000000)
<i>i0</i>	Provide maximum possible message size

## Command Mode

- /exec/configure/callhome

destination-profile CiscoTAC-1 transport-method email

## destination-profile CiscoTAC-1 transport-method email

[no] destination-profile CiscoTAC-1 transport-method email

### Syntax Description

no	(Optional) Negate a command or set its defaults
destination-profile	Configure destination profiles
CiscoTAC-1	Configure destination profile for XML message
transport-method	Callhome message sending transport-method
email	email transport-method

### Command Mode

- /exec/configure/callhome

## destination-profile CiscoTAC-1 transport-method http

[no] destination-profile CiscoTAC-1 transport-method http

### Syntax Description

no	(Optional) Negate a command or set its defaults
destination-profile	Configure destination profiles
CiscoTAC-1	Configure destination profile for XML message
transport-method	Callhome message sending transport-method
http	http transport-method

### Command Mode

- /exec/configure/callhome

**destination-profile alert-group**

# destination-profile alert-group

[no] destination-profile <s0> alert-group { All | Configuration | Diagnostic | EEM | Cisco-TAC | Environmental | Inventory | License | Linecard-Hardware | Supervisor-Hardware | Syslog-group-port | System | Test }

## Syntax Description

no	(Optional) Negate a command or set its defaults
destination-profile	Configure destination profiles
s0	User defined destination profile name
alert-group	Add alert group
All	This alert group consists of all of the callhome messages
Cisco-TAC	Events which are meant for Cisco TAC only
Environmental	Power,fan,temperature related events
Inventory	Inventory status events
License	Events related to licensing
Linecard-Hardware	Linecard related events
Supervisor-Hardware	Supervisor related events
Syslog-group-port	Events related to syslog messages filed by port manager
System	Software related events
Test	User generated test events
Configuration	Events related to Configuration
Diagnostic	Events related to Diagnostic
EEM	EEM events

## Command Mode

- /exec/configure/callhome

# destination-profile email-addr

destination-profile <s0> [ index <i0> ] email-addr <s1>

## Syntax Description

destination-profile	Configure destination profiles
s0	User defined destination profile name
email-addr	Add email addr
s1	Provide email address, example: jdow@xyz.com
index	(Optional) Configure an index(1 to 50) for email-id
i0	(Optional) Index between 1 to 50 associate with email-id

## Command Mode

- /exec/configure/callhome

**destination-profile format**

# destination-profile format

destination-profile <s0> format { full-txt | short-txt | XML }

## Syntax Description

destination-profile	Configure destination profiles
s0	User defined destination profile name
format	Callhome message format (default XML)
full-txt	Plain text message format
short-txt	Short text message format
XML	XML message format

## Command Mode

- /exec/configure/callhome

# destination-profile full-txt-destination alert-group

[no] destination-profile full-txt-destination alert-group { All | Configuration | Diagnostic | EEM | Cisco-TAC | Environmental | Inventory | License | Linecard-Hardware | Supervisor-Hardware | Syslog-group-port | System | Test }

## Syntax Description

no	(Optional) Negate a command or set its defaults
destination-profile	Configure destination profiles
full-txt-destination	Configure destination profile for plain txt message
alert-group	Add alert group
All	This alert group consists of all of the callhome messages
Cisco-TAC	Events which are meant for Cisco TAC only
Environmental	Power,fan,temperature related events
Inventory	Inventory status events
License	Events related to licensing
Linecard-Hardware	Linecard related events
Supervisor-Hardware	Supervisor related events
Syslog-group-port	Events related to syslog messages filed by port manager
System	Software related events
Test	User generated test events
Configuration	Events related to Configuration
Diagnostic	Events related to Diagnostic
EEM	EEM events

## Command Mode

- /exec/configure/callhome

**destination-profile full-txt-destination email-addr**

## destination-profile full-txt-destination email-addr

destination-profile full-txt-destination [ index <i0> ] email-addr <s0>

### Syntax Description

destination-profile	Configure destination profiles
full-txt-destination	Configure destination profile for plain txt message
email-addr	Add email addr
<i>s0</i>	Provide email address, example: jdow@xyz.com
index	(Optional) Configure an index(1 to 50) for email-id
<i>i0</i>	(Optional) Index between 1 to 50 associate with email-id

### Command Mode

- /exec/configure/callhome

# destination-profile full-txt-destination http

destination-profile full-txt-destination [ index <i0> ] http <s0>

## Syntax Description

destination-profile	Configure destination profiles
full-txt-destination	Configure destination profile for plain txt message
http	Add http or https url
s0	Provide http or https url, example1: http://site.com/services/callserv example2: https://site2.com/serv/CALL
index	(Optional) Configure an index(1 to 50) for http url
i0	(Optional) Index between 1 to 50 associate with http url

## Command Mode

- /exec/configure/callhome

**destination-profile full-txt-destination index email-addr**

[no] destination-profile full-txt-destination index <i0> email-addr

#### Syntax Description

no	Negate a command or set its defaults
destination-profile	Configure destination profiles
full-txt-destination	Configure destination profile for plain txt message
email-addr	Add email addr
index	Delete email-id associated with index(1 to 50)
i0	Index between 1 to 50 associate with email-id

#### Command Mode

- /exec/configure/callhome

# destination-profile full-txt-destination index http

[no] destination-profile full-txt-destination index <i0> http

## Syntax Description

no	Negate a command or set its defaults
destination-profile	Configure destination profiles
full-txt-destination	Configure destination profile for plain txt message
http	Add http or https url
index	Delete http url associated with index(1 to 50)
i0	Index between 1 to 50 associate with http url

## Command Mode

- /exec/configure/callhome

**destination-profile full-txt-destination message-level**

[no] destination-profile full-txt-destination message-level <i0>

#### Syntax Description

no	(Optional) Negate a command or set its defaults
destination-profile	Configure destination profiles
full-txt-destination	Configure destination profile for plain txt message
message-level	Callhome message level(0-lowest urgency, 9-highest urgency)
<i>i0</i>	

#### Command Mode

- /exec/configure/callhome

# destination-profile full-txt-destination message-size

[no] destination-profile full-txt-destination message-size <i0>

## Syntax Description

no	(Optional) Negate a command or set its defaults
destination-profile	Configure destination profiles
full-txt-destination	Configure destination profile for plain txt message
message-size	Configure maximum message size (default 2500000)
<i>i0</i>	Provide maximum possible message size

## Command Mode

- /exec/configure/callhome

**destination-profile full-txt-destination transport-method email**

[no] destination-profile full-txt-destination transport-method email

**Syntax Description**

no	(Optional) Negate a command or set its defaults
destination-profile	Configure destination profiles
full-txt-destination	Configure destination profile for plain txt message
transport-method	Callhome message sending transport-method
email	email transport-method

**Command Mode**

- /exec/configure/callhome

# destination-profile full-txt-destination transport-method http

[no] destination-profile full-txt-destination transport-method http

## Syntax Description

no	(Optional) Negate a command or set its defaults
destination-profile	Configure destination profiles
full-txt-destination	Configure destination profile for plain txt message
transport-method	Callhome message sending transport-method
http	http transport-method

## Command Mode

- /exec/configure/callhome

**destination-profile http**

destination-profile <s4> [ index <i0> ] { http <s2> }

#### Syntax Description

destination-profile	Configure destination profiles
<i>s4</i>	User defined destination profile name
http	Add http or https url
<i>s2</i>	Provide http or https url, example1: http://site.com/services/callserv example2: https://site2.com/serv/CALL
index	(Optional) Configure an index(1 to 50) for http url
<i>i0</i>	(Optional) Index between 1 to 50 associate with http url

#### Command Mode

- /exec/configure/callhome

# destination-profile index email-addr

[no] destination-profile <s0> index <i0> email-addr | no destination-profile <s0> email-addr

## Syntax Description

no	Negate a command or set its defaults
destination-profile	Configure destination profiles
s0	User defined destination profile name
email-addr	Add email addr
index	Delete email-id associated with index(1 to 50)
i0	Index between 1 to 50 associate with email-id

## Command Mode

- /exec/configure/callhome

destination-profile index http

## destination-profile index http

[no] destination-profile <s4> index <i0> http | no destination-profile <s4> http

### Syntax Description

no	Negate a command or set its defaults
destination-profile	Configure destination profiles
s4	User defined destination profile name
http	Add http or https url
index	Delete http url associated with index(1 to 50)
i0	Index between 1 to 50 associate with http url

### Command Mode

- /exec/configure/callhome

# destination-profile message-level

[no] destination-profile <s0> message-level <i0>

## Syntax Description

no	(Optional) Negate a command or set its defaults
destination-profile	Configure destination profiles
s0	User defined destination profile name
message-level	Callhome message level(0-lowest urgency, 9-highest urgency)
i0	

## Command Mode

- /exec/configure/callhome

**destination-profile message-size**

# destination-profile message-size

[no] destination-profile <s0> message-size <i0>

## Syntax Description

no	(Optional) Negate a command or set its defaults
destination-profile	Configure destination profiles
s0	User defined destination profile name
message-size	Configure maximum message size (default 2500000)
i0	Provide maximum possible message size

## Command Mode

- /exec/configure/callhome

# destination-profile short-txt-destination alert-group

[no] destination-profile short-txt-destination alert-group { All | Configuration | Diagnostic | EEM | Cisco-TAC | Environmental | Inventory | License | Linecard-Hardware | Supervisor-Hardware | Syslog-group-port | System | Test }

## Syntax Description

no	(Optional) Negate a command or set its defaults
destination-profile	Configure destination profiles
short-txt-destination	Configure destination profile for short txt message
alert-group	Add alert group
All	This alert group consists of all of the callhome messages
Cisco-TAC	Events which are meant for Cisco TAC only
Environmental	Power,fan,temperature related events
Inventory	Inventory status events
License	Events related to licensing
Linecard-Hardware	Linecard related events
Supervisor-Hardware	Supervisor related events
Syslog-group-port	Events related to syslog messages filed by port manager
System	Software related events
Test	User generated test events
Configuration	Events related to Configuration
Diagnostic	Events related to Diagnostic
EEM	EEM events

## Command Mode

- /exec/configure/callhome

**destination-profile short-txt-destination email-addr**

destination-profile short-txt-destination [ index <i0> ] email-addr <s0>

#### Syntax Description

destination-profile	Configure destination profiles
short-txt-destination	Configure destination profile for short txt message
email-addr	Add email addr
s0	Provide email address, example: jdow@xyz.com
index	(Optional) Configure an index(1 to 50) for email-id
i0	(Optional) Index between 1 to 50 associate with email-id

#### Command Mode

- /exec/configure/callhome

# destination-profile short-txt-destination http

destination-profile short-txt-destination [ index <i0> ] http <s0>

## Syntax Description

destination-profile	Configure destination profiles
short-txt-destination	Configure destination profile for short txt message
http	Add http or https url
s0	Provide http or https url, example1: http://site.com/services/callserv example2: https://site2.com/serv/CALL
index	(Optional) Configure an index(1 to 50) for http url
i0	(Optional) Index between 1 to 50 associate with http url

## Command Mode

- /exec/configure/callhome

**destination-profile short-txt-destination index http**

[no] destination-profile short-txt-destination index <i0> http

#### Syntax Description

no	Negate a command or set its defaults
destination-profile	Configure destination profiles
short-txt-destination	Configure destination profile for short txt message
http	Add http or https url
index	Delete http url associated with index(1 to 50)
i0	Index between 1 to 50 associate with http url

#### Command Mode

- /exec/configure/callhome

# destination-profile short-txt-destination index email-addr

[no] destination-profile short-txt-destination index <i0> email-addr

## Syntax Description

no	Negate a command or set its defaults
destination-profile	Configure destination profiles
short-txt-destination	Configure destination profile for short txt message
email-addr	Add email addr
index	Delete email-id associated with index(1 to 50)
i0	Index between 1 to 50 associate with email-id

## Command Mode

- /exec/configure/callhome

**destination-profile short-txt-destination message-level**

[no] destination-profile short-txt-destination message-level <i0>

#### Syntax Description

no	(Optional) Negate a command or set its defaults
destination-profile	Configure destination profiles
short-txt-destination	Configure destination profile for short txt message
message-level	Callhome message level(0-lowest urgency, 9-highest urgency)
<i>i0</i>	

#### Command Mode

- /exec/configure/callhome

# destination-profile short-txt-destination message-size

[no] destination-profile short-txt-destination message-size <i0>

## Syntax Description

no	(Optional) Negate a command or set its defaults
destination-profile	Configure destination profiles
short-txt-destination	Configure destination profile for short txt message
message-size	Configure maximum message size (default 4000)
<i>i0</i>	

## Command Mode

- /exec/configure/callhome

**destination-profile short-txt-destination transport-method email**

# **destination-profile short-txt-destination transport-method email**

[no] destination-profile short-txt-destination transport-method email

## Syntax Description

no	(Optional) Negate a command or set its defaults
destination-profile	Configure destination profiles
short-txt-destination	Configure destination profile for short txt message
transport-method	Callhome message sending transport-method
email	email transport-method

## Command Mode

- /exec/configure/callhome

# destination-profile short-txt-destination transport-method http

[no] destination-profile short-txt-destination transport-method http

## Syntax Description

no	(Optional) Negate a command or set its defaults
destination-profile	Configure destination profiles
short-txt-destination	Configure destination profile for short txt message
transport-method	Callhome message sending transport-method
http	http transport-method

## Command Mode

- /exec/configure/callhome

**destination-profile transport-method email**

[no] destination-profile <s5> transport-method email

**Syntax Description**

no	(Optional) Negate a command or set its defaults
destination-profile	Configure destination profiles
s5	User defined destination profile name
transport-method	Callhome message sending transport-method
email	email transport-method

**Command Mode**

- /exec/configure/callhome

# destination-profile transport-method http

[no] destination-profile <s6> transport-method http

## Syntax Description

no	(Optional) Negate a command or set its defaults
destination-profile	Configure destination profiles
s6	User defined destination profile name
transport-method	Callhome message sending transport-method
http	http transport-method

## Command Mode

- /exec/configure/callhome

**destination-sup interface**

# destination-sup interface

[no] destination-sup interface <interface>

## Syntax Description

no	(Optional) Negate a command or set its defaults
destination-sup	Destination configuration
interface	Configure interfaces
<i>interface</i>	

## Command Mode

- /exec/configure/monitor-local-src /exec/configure/config-monitor  
/exec/configure/config-monitor-erspan-src

# destination

[no] destination | destination <ipaddr>

## Syntax Description

no	Negate a command or set its defaults
destination	destination of tunnel
<i>ipaddr</i>	ip address (A.B.C.D)

## Command Mode

- /exec/configure/if-te

**destination1 interface**

[no] destination1 interface <interface\_range>

**Syntax Description**

no	(Optional) Negate a command or set its defaults
destination1	Destination configuration
interface	Configure interfaces
<i>interface_range</i>	

**Command Mode**

- /exec/configure/monitor-local-dst

# destination

```
{ [ no ] destination { <ipaddr> } [ use-vrf { <vrf_name> | <vrf-known-name> } ] | no destination }
```

## Syntax Description

destination	Specify the destination address
<i>ipaddr</i>	Destination IP address for collector
use-vrf	(Optional) Optional VRF label
<i>vrf_name</i>	(Optional) VRF name
<i>vrf-known-name</i>	(Optional) Known VRF name

## Command Mode

- /exec/configure/config-int-exporter

# destination

```
{ [ no ] destination { <ipaddr> | <ipv6addr> } [ use-vrf { <vrf_name> | <vrf-known-name> } ] | no destination }
```

## Syntax Description

destination	Specify the destination address
<i>ipaddr</i>	Destination IP address for collector
use-vrf	(Optional) Optional VRF label
<i>vrf_name</i>	(Optional) VRF name
<i>vrf-known-name</i>	(Optional) Known VRF name

## Command Mode

- /exec/configure/config-fte-exporter

# destination

```
{ [ no ] destination { <ipaddr> | <ipv6addr> } [ use-vrf { <vrf_name> | <vrf-known-name> } ] | no destination }
```

## Syntax Description

destination	Specify the destination address
<i>ipaddr</i>	Destination IP address for collector
use-vrf	(Optional) Optional VRF label
<i>vrf_name</i>	(Optional) VRF name
<i>vrf-known-name</i>	(Optional) Known VRF name

## Command Mode

- /exec/configure/nfm-exporter

# destination

{ [ no ] destination <ipaddr> } [ use-vrf { <vrf-name> | <vrf-known-name> } ]

## Syntax Description

destination	Destination configuration
<i>ipaddr</i>	IP Address to be configured
use-vrf	(Optional) VRF label
<i>vrf-name</i>	(Optional) VRF name
<i>vrf-known-name</i>	(Optional) Known VRF name

## Command Mode

- /exec/configure/config-ssx-exporter

# destination

```
{ [ no ] destination { <ipaddr> | <ipv6addr> } [ use-vrf { <vrf_name> | <vrf-known-name> } ] | no destination }
```

## Syntax Description

destination	Specify the destination address
<i>ipaddr</i>	Destination IP address for collector
use-vrf	(Optional) Optional VRF label
<i>vrf_name</i>	(Optional) VRF name
<i>vrf-known-name</i>	(Optional) Known VRF name

## Command Mode

- /exec/configure/nfm-exporter

# destination

{ [ no ] destination { <ipaddr> } [ use-vrf { <vrf\_name> | <vrf-known-name> } ] | no destination }

## Syntax Description

destination	Specify the destination address
<i>ipaddr</i>	Destination IP address for collector
use-vrf	(Optional) Optional VRF label
<i>vrf_name</i>	(Optional) VRF name
<i>vrf-known-name</i>	(Optional) Known VRF name

## Command Mode

- /exec/configure/config-postcard-exporter

# destination filter ip

[no] destination filter ip { <ip-addr> <ip-mask> } [ ip | { { udp | tcp } { <port\_num> | any } } ] [ { arp | advertise } { enable | disable } ]

## Syntax Description

no	(Optional) Negate a command or set its defaults
destination	destination ip configuration
filter	list of ips to filter
ip	destination ip
<i>ip-addr</i>	IP address in format i.i.i.i
<i>ip-mask</i>	IP network mask in format m.m.m.m
ip	(Optional) IP Protocol
udp	(Optional) UDP Protocol
tcp	(Optional) TCP Protocol
<i>port_num</i>	(Optional) Port Number
any	(Optional) Any Port Number
arp	(Optional) ARP
advertise	(Optional) advertise
enable	(Optional) Enable
disable	(Optional) Disable

## Command Mode

- /exec/configure/smartz

**destination filter ip any any**

# destination filter ip any any

[no] destination filter ip any any

## Syntax Description

no	(Optional) Negate a command or set its defaults
destination	destination ip configuration
filter	list of ips to filter
ip	destination ip
any	Any IP

## Command Mode

- /exec/configure/smartz

# destination group

[no] destination group <group\_number>

## Syntax Description

no	(Optional) Negate a command or set its defaults
destination	Destination configuration
group	Configure destination group
<i>group_number</i>	

## Command Mode

- /exec/configure/monitor-local-dst

# destination interface

[no] destination interface <interface\_range>

## Syntax Description

no	(Optional) Negate a command or set its defaults
destination	Destination configuration
interface	Configure interfaces
<i>interface_range</i>	

## Command Mode

- /exec/configure/monitor-local-dst

# destination ip

[no] destination ip <ipaddress>

## Syntax Description

no	(Optional) Negate a command or set its defaults
destination	Destination configuration
ip	Configure remote IP address
<i>ipaddress</i>	

## Command Mode

- /exec/configure/config-monitor-erspan-src

# device-group

{ device-group <name> } | { no device-group <name> }

## Syntax Description

no	Negate a command or set its defaults
device-group	ITD device group
<i>name</i>	ITD device group name

## Command Mode

- /exec/configure/itd

# device-group

[no] device-group <group-name>

## Syntax Description

no	(Optional) Negate a command or set its defaults
device-group	PLB device group
<i>group-name</i>	Specify device-group name

## Command Mode

- /exec/configure/plb

# device-role

[no] device-role <dev\_role>

## Syntax Description

no	(Optional) Negate a command or set its defaults
<i>dev_role</i>	

## Command Mode

- /exec/configure/config-ra-guard

# device-role

[no] device-role <dev\_role>

## Syntax Description

no	(Optional) Negate a command or set its defaults
<i>dev_role</i>	

## Command Mode

- /exec/configure/config-snoop-policy

# device-role

[no] device-role <devrole>

## Syntax Description

no	(Optional) Negate a command or set its defaults
<i>devrole</i>	

## Command Mode

- /exec/configure/config-dhcp-guard

# dfe-tuning-delay

```
{ dfe-tuning-delay <delay-val> | no dfe-tuning-delay [ <delay-val> ] }
```

## Syntax Description

no	Negate a command or set its defaults
dfe-tuning-delay	Configure DFE Tuning delay for interface
<i>delay-val</i>	DFE tuning delay value (ms)

## Command Mode

- /exec/configure/if-ethernet-all /exec/configure/if-eth-base

# diagnostic bootup level

```
diagnostic bootup level { bypass | complete | minimal }
```

## Syntax Description

diagnostic	Diagnostic commands
bootup	Configure Diagnostic for bootup
level	Select diagnostic level
bypass	Skip all bootup test
complete	Complete level
minimal	Minimal level - no MacsecLoopBackTest

## Command Mode

- /exec/configure

# diagnostic bootup level

[no] diagnostic bootup level

## Syntax Description

no	Negate a command or set its defaults
diagnostic	Diagnostic commands
bootup	Configure Diagnostic for bootup
level	Select diagnostic level

## Command Mode

- /exec/configure

diagnostic clear result module all diagnostic clear result module test

# diagnostic clear result module all diagnostic clear result module test

diagnostic clear result module all | diagnostic clear result module <module> test { <test-id> | all }

## Syntax Description

diagnostic	Diagnostic commands
clear	Erase Diagnostic Test Results/Stats
result	Diagnostic test result
module	Module keyword
<i>module</i>	Module number
all	Select all
test	Diagnostic test selection
<i>test-id</i>	

## Command Mode

- /exec

# diagnostic monitor interval module test all hour min second

diagnostic monitor interval module <module> test { all | <name> | <test-id> } hour <hour-cntr> min <min-cntr> second <sec-cntr> | no diagnostic monitor interval module <module> test { all | <name> | <test-id> }

## Syntax Description

no	Negate a command or set its defaults
diagnostic	Diagnostic commands
monitor	Configure diagnostic monitoring test
interval	Configure diagnostic monitoring tests interval
module	Module Keyword
<i>module</i>	Module number
test	Diagnostic test selection
all	Select all test ID
<i>test-id</i>	
<i>name</i>	Test name
hour	Hour of the day
<i>hour-cntr</i>	Interval in hours
min	Minute of an hour
<i>min-cntr</i>	Interval in minutes
second	Second of a minute
<i>sec-cntr</i>	Interval in seconds

## Command Mode

- /exec/configure

# diagnostic monitor module test all

diagnostic monitor module <module> test { all | <name> | <test-id> } | no diagnostic monitor module <module> test { all | <name> | <test-id> }

## Syntax Description

no	Negate a command or set its defaults
diagnostic	Diagnostic commands
monitor	Configure diagnostic monitoring test
module	Module Keyword
<i>module</i>	Module number
test	Diagnostic test selection
all	Select all test ID
<i>test-id</i>	
<i>name</i>	Test name

## Command Mode

- /exec/configure

# diagnostic monitor syslog

[no] diagnostic monitor syslog

## Syntax Description

no	(Optional) Negate a command or set its defaults
diagnostic	Diagnostic command
monitor	Configure diagnostic monitoring for syslog
syslog	Diag test failure syslog

## Command Mode

- /exec/configure

```
■ diagnostic ondemand action-on-failure continue failure-count diagnostic ondemand action-on-failure stop
```

# **diagnostic ondemand action-on-failure continue failure-count**

## **diagnostic ondemand action-on-failure stop**

diagnostic ondemand action-on-failure continue failure-count <failure-cnt> | diagnostic ondemand action-on-failure stop

### Syntax Description

diagnostic	Diagnostic commands
ondemand	On demand diagnostic setting
action-on-failure	Set action to take if test fails
continue	Continue ondemand test until test failure limit is reached
failure-count	Continue failing tests this many times
stop	Stop ondemand tests immediately if a test fails
<i>failure-cnt</i>	Maximum number of test failures allowed

### Command Mode

- /exec

# diagnostic ondemand iteration

diagnostic ondemand iteration <iteration-count>

## Syntax Description

diagnostic	Diagnostic commands
ondemand	On demand diagnostic setting
iteration	Set number of times to repeat ondemand test list
<i>iteration-count</i>	Number of times to repeat ondemand test list

## Command Mode

- /exec

■ diagnostic ondemand test-parameter module test port\_lb packet-length

# diagnostic ondemand test-parameter module test port\_lb packet-length

diagnostic ondemand test-parameter module <module> test port\_lb packet-length <size>

## Syntax Description

diagnostic	Diagnostic commands
ondemand	Ondemand command
test-parameter	Set test parameter
module	Module keyword
<i>module</i>	Module number
test	Diagnostic test selection
port_lb	Port loop back test
packet-length	Size of the packet
<i>size</i>	Packet size for the selected module

## Command Mode

- /exec

# diagnostic start module test

diagnostic start module <module> test { all | <name> | <test-id> | non-disruptive | per-port } [ port { iall | <port-id> } ]

## Syntax Description

diagnostic	Diagnostic commands
start	Starting on demand diagnostic
module	Module keyword
<i>module</i>	Module Number
test	Diagnostic test selection
all	Select all test ID
<i>name</i>	Test name
<i>test-id</i>	
non-disruptive	Select the Non-Disruptive test suite [Attribute = N]
per-port	Select the Per-Port test suite [Attribute = P]
port	(Optional) Interface port selection
iall	(Optional) Select all ports
<i>port-id</i>	(Optional)

## Command Mode

- /exec

diagnostic stop module test all

# diagnostic stop module test all

diagnostic stop module <module> test { all | <name> | <test-id> }

## Syntax Description

diagnostic	Diagnostic commands
stop	Stopping diagnostic
module	Module keyword
<i>module</i>	Module Number
test	Diagnostic test selection
all	Select all test ID
<i>test-id</i>	
<i>name</i>	Test name

## Command Mode

- /exec

# diagnostic test simulation module test diagnostic test simulation module test clear

diagnostic test simulation module <module> test <test-id> [ port { <port-id> | all } { success | fail | random-fail } | diagnostic test simulation module <module> test <test-id> clear

## Syntax Description

diagnostic	Diagnostic commands
test	Diagnostic test selection
simulation	Simulating Diagnostic result
module	Module keyword
<i>module</i>	Module Number
test	Diagnostic test selection
<i>test-id</i>	
port	(Optional) Interface port selection
all	(Optional) Select all ports
<i>port-id</i>	(Optional)
success	pass test result
fail	fail test result
random-fail	fail test result randomly
clear	Stop simulation

## Command Mode

- /exec

# diff-clean

diff-clean [ all-sessions ]

## Syntax Description

diff-clean	remove temp files created by '  diff' filters
all-sessions	(Optional) remove '  diff' temp files from all sessions (past and present!) of current user

## Command Mode

- /exec

# diff-clean all-users

diff-clean all-users

## Syntax Description

diff-clean	remove temp files created by '  diff' filters
all-users	remove '  diff' temp files from all sessions (past and present!) of all users

## Command Mode

- /exec

# diff

| diff [ again | echo | -c [ <lines> ] | -b | -B | -i | -I <regexp> | -y | --left-column | -W <columns> | -q | -s ] +

## Syntax Description

	Pipe command output to filter
diff	show difference between current and previous invocation (creates temp files: remove them with 'diff-clean' command and dont use it on commands with big outputs, like 'show tech'!)
again	(Optional) dont create new file: use old ones, just change display options or add more filters
echo	(Optional) echo the current file (only effective if no old file)
-c	(Optional) set number of lines of context (default 3)
<i>lines</i>	(Optional) number of lines of context
-b	(Optional) Ignore changes in amount of white space
-B	(Optional) Ignore changes that just insert or delete blank lines
-i	(Optional) Ignore changes in case
-I	(Optional) Ignore changes that just insert or delete lines that match regexp
<i>regexp</i>	(Optional) regexp of lines to ignore
-y	(Optional) Use the side by side output format
--left-column	(Optional) Print only the left column of two common lines in side by side format
-W	(Optional) Use an output width of <columns> in side by side format
<i>columns</i>	(Optional) Use an output width of <columns> in side by side format
-q	(Optional) Report only whether the files differ, not the details of the differences
-s	(Optional) Report when two files are the same

## Command Mode

- /output

# dir

```
dir [ <uri0> | <uri1> | <uri2> ] [ __readonly__ { TABLE_dir <fsize> <timestring> <fname> } { <usage> <bytesused> <bytesfree> <bytestotal> } ]
```

## Syntax Description

dir	list files in a directory
<i>uri0</i>	(Optional) Directory or filename
<i>uri1</i>	(Optional) Directory or filename on expansion flash
<i>uri2</i>	(Optional) Directory or filename on log flash
<u>__readonly__</u>	(Optional) Read Only
TABLE_dir	(Optional) show dir
<i>fsizE</i>	(Optional) filesize
<i>timestring</i>	(Optional) time string
<i>fname</i>	(Optional) filename
<i>usage</i>	(Optional) usage
<i>bytesused</i>	(Optional) bytes used
<i>bytesfree</i>	(Optional) bytes free
<i>bytestotal</i>	(Optional) bytes total

## Command Mode

- /exec

# disable-connected-check

[ no | default ] disable-connected-check

## Syntax Description

no	(Optional) Negate a command or set its defaults
default	(Optional) Inherit values from a peer template
disable-connected-check	Disable check for directly connected peer

## Command Mode

- /exec/configure/router-bgp/router-bgp-neighbor-sess

# disable-fka

[no] disable-fka

## Syntax Description

no	(Optional) Negate a command or set its defaults
disable-fka	Disables verifying FIP Keep Alives

## Command Mode

- /exec/configure/if-vfc

# disable-peer-as-check

[ no | default ] disable-peer-as-check

## Syntax Description

no	(Optional) Negate a command or set its defaults
default	(Optional) Inherit values from a peer template
disable-peer-as-check	Disable checking of peer AS-number while advertising

## Command Mode

- /exec/configure/router-bgp/router-bgp-vrf-neighbor/router-bgp-vrf-neighbor-af-ipv4
- /exec/configure/router-bgp/router-bgp-vrf-neighbor/router-bgp-vrf-neighbor-af-ipv6
- /exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af
- /exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af-l2vpn-evpn
- /exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af-ipv4-label
- /exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af-ipv6-label
- /exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af-ipv4-mvpn
- /exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af-ipv6-mvpn

# disable-policy-batching

[no] disable-policy-batching [ nexthop | { { ipv4 | ipv6 } prefix-list <prfxlist-name> } ]

## Syntax Description

no	(Optional) Negate a command or set its defaults
disable-policy-batching	Disable batching evaluation of outbound policy for a peer
nexthop	(Optional) batching based on nexthop
ipv4	(Optional) IPv4 address-family
ipv6	(Optional) IPv6 address-family
prefix-list	(Optional) Apply prefix-list
<i>prfxlist-name</i>	(Optional) Name of prefix-list

## Command Mode

- /exec/configure/router-bgp

**disable**

# disable

disable

## Syntax Description

disable	disable callhome
---------	------------------

## Command Mode

- /exec/configure/callhome

# discard-route external

[no] discard-route { external | internal }

## Syntax Description

no	(Optional) Negate a command or set its defaults
discard-route	Install discard route
external	External route
internal	Internal route

## Command Mode

- /exec/configure/router-ospf3 /exec/configure/router-ospf3/vrf

**discard-route external**

# discard-route external

[no] discard-route { external | internal }

## Syntax Description

no	(Optional) Negate a command or set its defaults
discard-route	Install discard route
external	External route
internal	Internal route

## Command Mode

- /exec/configure/router-ospf /exec/configure/router-ospf/vrf

# discovery

discovery { quick-start | hello { holdtime <link-hello-holdtime> | interval <link-hello-intvl> } | targeted-hello { accept [ from <pfx-list> ] | tgt-holdtime <tgt-hello-holdtime> | tgt-interval <tgt-hello-intvl> } | ignore-transport-address | omit-transport-address | spoofing } | no discovery { quick-start | hello { holdtime | interval } | targeted-hello { accept | tgt-holdtime | tgt-interval } | ignore-transport-address | omit-transport-address | spoofing }

## Syntax Description

no	Negate a command or set its defaults
discovery	LDP discovery
quick-start	Enable quick LDP Hello transmissions on interface up
hello	LDP discovery Hello
interval	LDP discovery Hello interval
holdtime	LDP discovery Hello holdtime
<i>link-hello-holdtime</i>	Holdtime in seconds
<i>link-hello-intvl</i>	Hello interval in seconds
targeted-hello	LDP discovery Targeted Hello
accept	Accept targeted hellos
from	(Optional) Prefix list to specify acceptable targeted hello sources
<i>pfx-list</i>	(Optional) Name of prefix list
tgt-holdtime	LDP discovery Targeted Hello holdtime
<i>tgt-hello-holdtime</i>	Holdtime in seconds
tgt-interval	LDP discovery Targeted Hello interval
<i>tgt-hello-intvl</i>	Hello interval in seconds
ignore-transport-address	
omit-transport-address	
spoofing	

## Command Mode

- /exec/configure/ldp

# disjoint

[no] disjoint

## Syntax Description

no	(Optional) Negate a command or set its defaults
disjoint	Configure disjointness association type

## Command Mode

- /exec/configure/sr/te/pol/cndpaths/pref/constraint/assoc

# disjoint

[no] disjoint

## Syntax Description

no	(Optional) Negate a command or set its defaults
disjoint	Configure disjointness association type

## Command Mode

- /exec/configure/sr/te/color/cndpaths/pref/constraint/assoc

# distance

{ { distance <int-distance> <ext-distance> } | { no distance [ <int-distance> <ext-distance> ] } }

## Syntax Description

no	Negate a command or set its defaults
distance	Define an administrative distance
<i>int-distance</i>	Distance for internal routes
<i>ext-distance</i>	Distance for external routes

## Command Mode

- /exec/configure/router-eigrp/router-eigrp-vrf-common /exec/configure/router-eigrp/router-eigrp-af-common

# distance

distance <distance> | no distance [ <distance> ]

## Syntax Description

no	Negate a command or set its defaults
distance	RIP administrative distance
<i>distance</i>	RIP administrative distance

## Command Mode

- /exec/configure/router-rip/router-rip-af-common /exec/configure/router-rip/router-rip-vrf-af-common

# distance

distance <admin-dist> | no distance [ <admin-dist> ]

## Syntax Description

no	Negate a command or set its defaults
distance	Administrative distance
<i>admin-dist</i>	Distance value

## Command Mode

- /exec/configure/router-isis/router-isis-vrf-common

# distance

distance <admin-dist> | no distance [ <admin-dist> ]

## Syntax Description

no	Negate a command or set its defaults
distance	Administrative distance
<i>admin-dist</i>	Distance value

## Command Mode

- /exec/configure/router-isis/router-isis-af-ipv4 /exec/configure/router-isis/router-isis-af-ipv6

# distance

distance <admin-dist> | no distance [ <admin-dist> ]

## Syntax Description

no	Negate a command or set its defaults
distance	OSPFv3 administrative distance
<i>admin-dist</i>	administrative distance value

## Command Mode

- /exec/configure/router-ospf3/router-ospf3-af-ipv6 /exec/configure/router-ospf3/vrf/router-ospf3-af-ipv6

# distance

distance <admin-dist> | no distance [ <admin-dist> ]

## Syntax Description

no	Negate a command or set its defaults
distance	OSPF administrative distance
<i>admin-dist</i>	administrative distance value

## Command Mode

- /exec/configure/router-ospf /exec/configure/router-ospf/vrf

# distance

```
distance <ebgp-dist> <ibgp-dist> <local-dist> | no distance [ <ebgp-dist> <ibgp-dist> <local-dist> ]
```

## Syntax Description

no	Negate a command or set its defaults
distance	Configure administrative distance
<i>ebgp-dist</i>	Distance for EBGP routes
<i>ibgp-dist</i>	Distance for IBGP routes
<i>local-dist</i>	Distance for local routes

## Command Mode

- /exec/configure/router-bgp/router-bgp-af

# distribute into route-map all

```
{ { distribute <src-level> into <dst-level> { { route-map { <map-name> | <rtr_pol_name> } } | all } } | { no
distribute <src-level> into <dst-level> [ { route-map { <map-name> | <rtr_pol_name> } } | all ] } }
```

## Syntax Description

no	Negate a command or set its defaults
distribute	Distribute routes between ISIS levels
<i>src-level</i>	Route-distribution between levels
<i>dst-level</i>	Route-distribution between levels
route-map	Route Map to constrain distribution
into	from level-n into level-m
<i>map-name</i>	A 'routing-rules' route-map name
<i>rtr_pol_name</i>	An existing routing-rules policy
all	Distribute all level-n routes

## Command Mode

- /exec/configure/router-isis/router-isis-af-ipv4 /exec/configure/router-isis/router-isis-af-ipv6

**distribute into route-map all**

```
{ { distribute <src-level> into <dst-level> { { route-map { <map-name> | <rtr_pol_name> } } | all } } | { no
distribute <src-level> into <dst-level> [ { route-map { <map-name> | <rtr_pol_name> } } | all ] } }
```

#### Syntax Description

no	Negate a command or set its defaults
distribute	Distribute routes between ISIS levels
<i>src-level</i>	Route-distribution between levels
<i>dst-level</i>	Route-distribution between levels
route-map	Route Map to constrain distribution
into	from level-n into level-m
<i>map-name</i>	A 'routing-rules' route-map name
<i>rtr_pol_name</i>	An existing routing-rules policy
all	Distribute all level-n routes

#### Command Mode

- /exec/configure/router-isis/router-isis-vrf-common

# distribute link-state

[no] distribute link-state [ instance-id <instid> ] [ level <level> ] [ throttle <seconds> ]

## Syntax Description

no	(Optional) Negate a command or set its defaults
distribute	Distribute routes between ISIS levels
link-state	Distribute link-state
instance-id	(Optional) Instance ID of ISIS process
<i>instid</i>	(Optional) Instance ID of ISIS process
level	(Optional) Level to be distributed
<i>level</i>	(Optional) IS-IS level
throttle	(Optional) Throttle timer in seconds
<i>seconds</i>	(Optional) Throttle timer in seconds

## Command Mode

- /exec/configure/router-isis

# dns

[no] dns { <WORD> } { name-server { <hostname> | <ip-address> } } { [ source-ip { <source-ip-hostname> | <source-ip-address> } ] | [ source-port <src-port> ] } +

## Syntax Description

no	(Optional)
<i>source-ip</i>	(Optional) source-port
<i>src-port</i>	(Optional)
dns	DNS Operation
<i>WORD</i>	Target IP Address or Hostname
name-server	Name Server
<i>hostname</i>	Destination hostname, broadcast disallowed
<i>ip-address</i>	Destination IP address, broadcast disallowed
<i>source-ip-hostname</i>	(Optional) source IP hostname, broadcast disallowed
<i>source-ip-address</i>	(Optional) source IP address, broadcast disallowed
source-port	(Optional) Source Port

## Command Mode

- /exec/configure/ip-sla

# domain-id

domain-id { <id> | { type <dtype> value <dvalue> } | Null } | no domain-id [ <id> | { type <dtype> value <dvalue> } | Null ]

## Syntax Description

no	Negate a command or set its defaults
domain-id	OSPF domain-ID
<i>id</i>	OSPF domain ID in IP address format
type	OSPF domain ID type in Hex format
<i>dtype</i>	OSPF domain ID type in Hex format
value	OSPF domain ID ext. community value in Hex
<i>dvalue</i>	
Null	Null Domain-ID

## Command Mode

- /exec/configure/router-ospf/vrf

# domain-id secondary

domain-id { <id> | { type <dtype> value <dvalue> } | Null } secondary | no domain-id [ <id> | { type <dtype> value <dvalue> } | Null ] secondary

## Syntax Description

no	Negate a command or set its defaults
domain-id	OSPF domain-ID
<i>id</i>	OSPF domain ID in IP address format
type	OSPF domain ID type in Hex format
<i>dtype</i>	OSPF domain ID type in Hex format
value	OSPF domain ID ext. community value in Hex
<i>dvalue</i>	
Null	Null Domain-ID
secondary	Secondary Domain-ID

## Command Mode

- /exec/configure/router-ospf/vrf

# domain-tag

[no] domain-tag <as-number>

## Syntax Description

no	(Optional) Negate a command or set its defaults
domain-tag	Set OSPF process domain-tag
<i>as-number</i>	AS number

## Command Mode

- /exec/configure/router-ospf/vrf

**dont-capability-negotiate**

# dont-capability-negotiate

[ no | default ] dont-capability-negotiate

## Syntax Description

no	(Optional) Negate a command or set its defaults
default	(Optional) Inherit values from a peer template
dont-capability-negotiate	Don't negotiate capability with this neighbor

## Command Mode

- /exec/configure/router-bgp/router-bgp-neighbor-sess

# dos2nxos

dos2nxos <uri0>

## Syntax Description

dos2nxos	DOS to NXOS text file format converter
<i>uri0</i>	Filename to be displayed

## Command Mode

- /exec

[no] dot1q <vlan-id-sh>

#### Syntax Description

no	(Optional) Negate a command or set its defaults
dot1q	Configure a dot1q-based static host
<i>vlan-id-sh</i>	

#### Command Mode

- /exec/configure/static-host

# dot1q

{ dot1q <dot1q-id> [ <intf-id> ] } | { no dot1q }

## Syntax Description

no	Negate a command or set its defaults
dot1q	Encapsulation dot1q/bd
<i>dot1q-id</i>	Encapsulation dot1q/bd value
<i>intf-id</i>	(Optional) Name of the interface for ngoam on which dot1q is configured

## Command Mode

- /exec/configure/configngoamprofile

# dot1q

{ dot1q <vlan-id> [ cos <cos-val> ] } | { no dot1q }

## Syntax Description

no	Negate a command or set its defaults
dot1q	specify flow profile to include dot1q tag
<i>vlan-id</i>	specify flow profile vlan-id
cos	(Optional) specify class of service
<i>cos-val</i>	(Optional) class of service value

## Command Mode

- /exec/configure/configngoaamprofileflow

# dot1q default dynamic

{ dot1q default dynamic } | { no dot1q default }

## Syntax Description

no	Negate a command or set its defaults
dynamic	Dynamic Profile Map: Retrieve profile name from the external server
dot1q	Dot1Q Encapsulation
default	Default (wildcard). Match any dot1q when there is no specific dot1q mapping configured

## Command Mode

- /exec/configure/profile-map /exec/configure/profile-map-global

## dot1x default

dot1x default

### Syntax Description

dot1x	dot1x configuration commands
-------	------------------------------

### Command Mode

- /exec/configure/if-eth-base /exec/configure/if-ethernet-all

# dot1x default

dot1x default

## Syntax Description

dot1x	dot1x configuration commands
-------	------------------------------

## Command Mode

- /exec/configure

**dot1x host-mode**

## dot1x host-mode

dot1x host-mode <host\_mode> | no dot1x host-mode

### Syntax Description

dot1x	dot1x configuration commands
host-mode	role of 802.1x authenticating entity
<i>host_mode</i>	Host Mode

### Command Mode

- /exec/configure/if-eth-base /exec/configure/if-ether-all

# dot1x mac-auth-bypass

dot1x mac-auth-bypass [ eap ] | no dot1x mac-auth-bypass

## Syntax Description

no	Negate a command or set its defaults
dot1x	dot1x configuration commands
mac-auth-bypass	Configure Mac-Auth-Bypass
eap	(Optional) EAP Authentication

## Command Mode

- /exec/configure/if-eth-base /exec/configure/if-ethernet-all

## dot1x mac-move

dot1x mac-move <value> | no dot1x mac-move <value>

### Syntax Description

dot1x	dot1x configuration commands
mac-move	Enable or Disable Mac-moves
<i>value</i>	Mac Move

### Command Mode

- /exec/configure

## dot1x max-reauth-req

dot1x max-reauth-req <count> | no dot1x max-reauth-req

### Syntax Description

dot1x	dot1x configuration commands
max-reauth-req	Maximum Re-authentication Attempts Before Failing
<i>count</i>	number of retries

### Command Mode

- /exec/configure/if-eth-base /exec/configure/if-ethernet-all

**dot1x max-req**

## dot1x max-req

dot1x max-req <count> | no dot1x max-req

### Syntax Description

dot1x	dot1x configuration commands
max-req	Maximum Retries to Initiate Authentication
<i>count</i>	number of retries

### Command Mode

- /exec/configure/if-eth-base /exec/configure/if-ether-all

# dot1x pae

[no] dot1x pae <pae-value>

## Syntax Description

dot1x	dot1x configuration commands
pae	role of 802.1x authenticating entity
<i>pae-value</i>	role

## Command Mode

- /exec/configure/if-eth-base /exec/configure/if-ethernet-all

## dot1x port-control

[no] dot1x port-control <port-control-value>

### Syntax Description

dot1x	dot1x configuration commands
port-control	port control
<i>port-control-value</i>	set the port-control value

### Command Mode

- /exec/configure/if-eth-base /exec/configure/if-ether-all

# dot1x radius-accounting

[no] dot1x radius-accounting

## Syntax Description

dot1x	dot1x configuration commands
radius-accounting	accounting messages to RADIUS

## Command Mode

- /exec/configure

**dot1x re-authenticate interface****dot1x re-authenticate interface <if>****Syntax Description**

dot1x	dot1x configuration commands
re-authenticate	Manually re-authenticate an Interface
<i>if</i>	target interface

**Command Mode**

- /exec

# dot1x re-authentication

[no] dot1x re-authentication

## Syntax Description

dot1x	dot1x configuration commands
re-authentication	Enable or Disable Reauthentication for this port

## Command Mode

- /exec/configure

# dot1x re-authentication

[no] dot1x re-authentication

## Syntax Description

dot1x	dot1x configuration commands
re-authentication	Enable or Disable Reauthentication for this port

## Command Mode

- /exec/configure/if-eth-base /exec/configure/if-ethernet-all

# dot1x show credential

dot1x show credential <name>

## Syntax Description

dot1x	dot1x configuration commands
credential	supplicant credential profile
<i>name</i>	profile name

## Command Mode

- /exec/configure/dot1x-cred

**dot1x start supplicant interface**

# dot1x start supplicant interface

{ dot1x start supplicant interface &lt;if&gt; } | { dot1x start supplicant interface &lt;if&gt; credential &lt;name&gt; }

## Syntax Description

dot1x	dot1x configuration commands
start	start 802.1x client
supplicant	802.1x supplicant
<i>if</i>	target interface
credential	credential profile name
<i>name</i>	name

## Command Mode

- /exec

# dot1x supplicant credential

[no] dot1x supplicant credential <name>

## Syntax Description

dot1x	dot1x configuration commands
supplicant	802.1x supplicant
credential	supplicant credential profile

## Command Mode

- /exec/configure

**dot1x supplicant credential**

# dot1x supplicant credential

[no] dot1x supplicant credential <name>

## Syntax Description

dot1x	dot1x configuration commands
supplicant	802.1x supplicant
credential	credential profile name
<i>name</i>	name

## Command Mode

- /exec/configure/if-eth-base /exec/configure/if-ether-all

# dot1x supplicant max-start

[no] dot1x supplicant max-start <count>

## Syntax Description

dot1x	dot1x configuration commands
supplicant	802.1x supplicant
max-start	Maximum Start Requests
<i>count</i>	number

## Command Mode

- /exec/configure/if-eth-base /exec/configure/if-ethernet-all

**dot1x supplicant max-start**

## dot1x supplicant max-start

[no] dot1x supplicant max-start <count>

### Syntax Description

dot1x	dot1x configuration commands
supplicant	802.1x supplicant
max-start	Maximum Start Requests
<i>count</i>	number

### Command Mode

- /exec/configure

# dot1x supplicant timeout auth-period

[no] dot1x supplicant timeout auth-period <value>

## Syntax Description

dot1x	dot1x configuration commands
supplicant	802.1x supplicant
timeout	Various Timeouts
auth-period	waiting period for responses from authenticator
<i>value</i>	time interval in seconds

## Command Mode

- /exec/configure

dot1x supplicant timeout auth-period

## dot1x supplicant timeout auth-period

[no] dot1x supplicant timeout auth-period <value>

### Syntax Description

dot1x	dot1x configuration commands
supplicant	802.1x supplicant
timeout	Various Timeouts
auth-period	waiting period for responses from authenticator
<i>value</i>	time interval in seconds

### Command Mode

- /exec/configure/if-eth-base /exec/configure/if-etherne-all

# dot1x supplicant timeout held-period

[no] dot1x supplicant timeout held-period <value>

## Syntax Description

dot1x	dot1x configuration commands
supplicant	802.1x supplicant
timeout	Various Timeouts
held-period	waiting period for retrying, after failed authentication
<i>value</i>	time interval in seconds

## Command Mode

- /exec/configure

**dot1x supplicant timeout held-period**

[no] dot1x supplicant timeout held-period <value>

#### Syntax Description

dot1x	dot1x configuration commands
supplicant	802.1x supplicant
timeout	Various Timeouts
held-period	waiting period for retrying, after failed authentication
<i>value</i>	time interval in seconds

#### Command Mode

- /exec/configure/if-eth-base /exec/configure/if-ether-all

# dot1x supplicant timeout start-period

[no] dot1x supplicant timeout start-period <value>

## Syntax Description

dot1x	dot1x configuration commands
supplicant	802.1x supplicant
timeout	Various Timeouts
start-period	Interval Between Start Requests
<i>value</i>	time interval in seconds

## Command Mode

- /exec/configure

**dot1x supplicant timeout start-period**

[no] dot1x supplicant timeout start-period <value>

#### Syntax Description

dot1x	dot1x configuration commands
supplicant	802.1x supplicant
timeout	Various Timeouts
start-period	Interval Between Start Requests
<i>value</i>	time interval in seconds

#### Command Mode

- /exec/configure/if-eth-base /exec/configure/if-ethernet-all

# dot1x system-auth-control

[no] dot1x system-auth-control

## Syntax Description

dot1x	dot1x configuration commands
system-auth-control	Enable or Disable SysAuthControl

## Command Mode

- /exec/configure

**dot1x timeout inactivity-period****dot1x timeout inactivity-period <value> | no dot1x timeout inactivity-period****Syntax Description**

dot1x	dot1x configuration commands
timeout	Various Timeouts
inactivity-period	Timeout For Session Inactivity
<i>value</i>	time interval in seconds

**Command Mode**

- /exec/configure

# dot1x timeout inactivity-period

dot1x timeout inactivity-period <value> | no dot1x timeout inactivity-period

## Syntax Description

dot1x	dot1x configuration commands
timeout	Various Timeouts
inactivity-period	Timeout For Session Inactivity
<i>value</i>	time interval in seconds

## Command Mode

- /exec/configure/if-eth-base /exec/configure/if-ethernet-all

**dot1x timeout quiet-period**

## dot1x timeout quiet-period

dot1x timeout quiet-period <value> | no dot1x timeout quiet-period

### Syntax Description

dot1x	dot1x configuration commands
timeout	Various Timeouts
quiet-period	Timeout For Retrying Authentication After Failed Authentication
<i>value</i>	time interval in seconds

### Command Mode

- /exec/configure

# dot1x timeout quiet-period

dot1x timeout quiet-period <value> | no dot1x timeout quiet-period

## Syntax Description

dot1x	dot1x configuration commands
timeout	Various Timeouts
quiet-period	Timeout For Retrying Authentication After Failed Authentication
<i>value</i>	time interval in seconds

## Command Mode

- /exec/configure/if-eth-base /exec/configure/if-ethernet-all

**dot1x timeout ratelimit-period**

## dot1x timeout ratelimit-period

dot1x timeout ratelimit-period <value> | no dot1x timeout ratelimit-period

### Syntax Description

dot1x	dot1x configuration commands
timeout	Various Timeouts
ratelimit-period	Rate Limit period for EAPOL-Start
<i>value</i>	time interval in seconds

### Command Mode

- /exec/configure/if-eth-base /exec/configure/if-ether-all

# dot1x timeout re-authperiod

dot1x timeout re-authperiod <value> | no dot1x timeout re-authperiod

## Syntax Description

dot1x	dot1x configuration commands
timeout	Various Timeouts
re-authperiod	Timeout For Re-Authentication
<i>value</i>	time interval in seconds

## Command Mode

- /exec/configure/if-eth-base /exec/configure/if-ethernet-all

**dot1x timeout re-authperiod**

```
dot1x timeout re-authperiod <value> | no dot1x timeout re-authperiod
```

**Syntax Description**

dot1x	dot1x configuration commands
timeout	Various Timeouts
re-authperiod	Timeout For Re-Authentication
<i>value</i>	time interval in seconds

**Command Mode**

- /exec/configure

# dot1x timeout server-timeout

dot1x timeout server-timeout <value> | no dot1x timeout server-timeout

## Syntax Description

dot1x	dot1x configuration commands
timeout	Various Timeouts
server-timeout	Timeout for Radius Retries
<i>value</i>	time interval in seconds

## Command Mode

- /exec/configure/if-eth-base /exec/configure/if-ethernet-all

**dot1x timeout supp-timeout**

## dot1x timeout supp-timeout

dot1x timeout supp-timeout <value> | no dot1x timeout supp-timeout

### Syntax Description

dot1x	dot1x configuration commands
timeout	Various Timeouts
supp-timeout	Timeout for Supplicant retries
<i>value</i>	time interval in seconds

### Command Mode

- /exec/configure/if-eth-base /exec/configure/if-ether-all

# dot1x timeout tx-period

dot1x timeout tx-period <value> | no dot1x timeout tx-period

## Syntax Description

dot1x	dot1x configuration commands
timeout	Various Timeouts
tx-period	Timeout For Resending Requests To Supplicant
<i>value</i>	time interval in seconds

## Command Mode

- /exec/configure/if-eth-base /exec/configure/if-ethernet-all

**dot1x timeout tx-period**

## dot1x timeout tx-period

dot1x timeout tx-period <value> | no dot1x timeout tx-period

### Syntax Description

dot1x	dot1x configuration commands
timeout	Various Timeouts
tx-period	Timeout For Resending Requests To Supplicant
<i>value</i>	time interval in seconds

### Command Mode

- /exec/configure

# down-bit-ignore

{ down-bit-ignore } | { no down-bit-ignore }

## Syntax Description

no	Negate a command or set its defaults
down-bit-ignore	Configure a PE router to ignore the DN bit for network summary, external and NSSA external LSA

## Command Mode

- /exec/configure/router-ospf/vrf

**downlink delay**

# downlink delay

downlink delay <ena-dis-flg> [ timeout <time-out> ] | no downlink delay

## Syntax Description

no	Negate a command or set its defaults
downlink	Change downlink linkup time
delay	delay bringup of downlinks
<i>ena-dis-flg</i>	Enable/Disable downlink delay feature
timeout	(Optional) downlink ports enable delay in seconds
<i>time-out</i>	(Optional) Time out

## Command Mode

- /exec/configure

# dpp set-qos-group

[no] dpp set-qos-group <qos-group>

## Syntax Description

no	(Optional) Negate a command or set its defaults
dpp	Dynamic Packet Prioritization
set-qos-group	QoS group to be mapped
<i>qos-group</i>	QoS Group Value

## Command Mode

- /exec/configure/policy-map/type/uf/class

# drop-trigger

[no] drop-trigger { ingress-admission | egress-admission | wred }

## Syntax Description

no	(Optional) Negate the command
drop-trigger	Configure drop-trigger parameters
ingress-admission	Ingress Admission Drop
egress-admission	Egress Admission Drop
wred	Weighted Random Early Discard Drop

## Command Mode

- /exec/configure/pkt-drop

# droplist

[no] droplist <droplistname>

## Syntax Description

droplist	Specify INT droplist to use
<i>droplistname</i>	Name of droplist

## Command Mode

- /exec/configure/config-int-monitor

# droplist

[no] droplist <droplistname>

## Syntax Description

droplist	Specify POSTCARD droplist to use
<i>droplistname</i>	Name of droplist

## Command Mode

- /exec/configure/config-postcard-monitor

# dscp

{ [ no ] dscp <dscp> | no dscp }

## Syntax Description

dscp	Optional DSCP
<i>dscp</i>	Differentiated services codepoint value

## Command Mode

- /exec/configure/config-int-exporter

**dscp**

{ [ no ] dscp &lt;dscp&gt; | no dscp }

**Syntax Description**

dscp	Provide the dscp value for this INT flow-profile
<i>dscp</i>	flow-profile dscp (allowed values: 1, 2, 4, 8, 16, 32, 63). Default is 1

**Command Mode**

- /exec/configure/config-int-flow-prof

# dscp

{ [ no ] dscp <dscp> | no dscp }

## Syntax Description

dscp	Optional DSCP
<i>dscp</i>	Differentiated services codepoint value

## Command Mode

- /exec/configure/nfm-exporter

**dscp**

[no] dscp <dscp>

**Syntax Description**

dscp	DSCP
<i>dscp</i>	DSCP to be configured

**Command Mode**

- /exec/configure/config-ssx-exporter

# dscp

{ [ no ] dscp <dscp> | no dscp }

## Syntax Description

dscp	Optional DSCP
<i>dscp</i>	Differentiated services codepoint value

## Command Mode

- /exec/configure/nfm-exporter

# dscp

`dscp { <dscp-enum> | <dscp-val> } | { no | default } dscp [ { <dscp-enum> | <dscp-val> } ]`

## Syntax Description

no	Negate a command or set its defaults
default	Inherit values from a peer template
dscp	Set dscp value for tcp transport
<i>dscp-val</i>	Specify DSCP value for Locally Originated packets for IPv4 and IPv6
<i>dscp-enum</i>	

## Command Mode

- /exec/configure/router-bgp/router-bgp-neighbor-sess

# dst-grp

[no] dst-grp <d-grp-id>

## Syntax Description

no	(Optional) Negate a command or set its defaults
dst-grp	Associated destination group
<i>d-grp-id</i>	Identifier

## Command Mode

- /exec/configure/telemetry/subscription

**dual-active exclude interface-vlan**

## dual-active exclude interface-vlan

dual-active exclude interface-vlan <allow-vlans> | no dual-active exclude interface-vlan

### Syntax Description

no	Negate a command or set its defaults
dual-active	Configuration when peer link is down but peer is alive
interface-vlan	Interface vlan configuration
exclude	Interface vlans to exclude from suspension when dual-active
<i>allow-vlans</i>	Set allowed interface vlans

### Command Mode

- /exec/configure/vpc-domain

# duplex

duplex <duplex\_mode> | no duplex [ <duplex\_mode> ]

## Syntax Description

no	Negate a command or set its defaults
duplex	Enter the port duplex mode
<i>duplex_mode</i>	Interface duplex mode

## Command Mode

- /exec/configure/if-mgmt-ether

# duplex

duplex <duplex\_mode> | no duplex [ <duplex\_mode> ]

## Syntax Description

no	Negate a command or set its defaults
duplex	Enter the port duplex mode
<i>duplex_mode</i>	Interface duplex mode

## Command Mode

- /exec/configure/if-etherne-all /exec/configure/if-eth-non-member /exec/configure/if-port-channel

# duplicate-message throttle

[no] duplicate-message throttle

## Syntax Description

no	(Optional) Negate a command or set its defaults
duplicate-message	Configure throttling of duplicate callhome alert messages
throttle	Enable throttling of duplicate callhome alert messages

## Command Mode

- /exec/configure/callhome

# dynamic-capability

[ no | default ] dynamic-capability

## Syntax Description

no	(Optional) Negate a command or set its defaults
default	(Optional) Inherit values from a peer template
dynamic-capability	Dynamic capability

## Command Mode

- /exec/configure/router-bgp/router-bgp-neighbor-sess

# dynamic-flooding

[no] dynamic-flooding

## Syntax Description

no	(Optional) Negate a command or set its defaults
dynamic-flooding	Configure Dynamic-Flooding

## Command Mode

- /exec/configure/router-isis/router-isis-vrf-common

**dynamic-med-interval**

# dynamic-med-interval

[no] dynamic-med-interval <sec>

## Syntax Description

no	(Optional) Negate a command or set its defaults
dynamic-med-interval	Sets the interval for dampening of med changes
<i>sec</i>	Time interval in seconds

## Command Mode

- /exec/configure/router-bgp

# dynamic

[no] dynamic

## Syntax Description

no	(Optional) Negate a command or set its defaults
dynamic	Enter dynamic properties for path

## Command Mode

- /exec/configure/sr/te/color/cndpaths/pref

# dynamic

[no] dynamic

## Syntax Description

no	(Optional) Negate a command or set its defaults
dynamic	Enter dynamic properties for path

## Command Mode

- /exec/configure/sr/te/pol/cndpaths/pref