



F Commands

- [fabric-soo](#), on page 6
- [fabric database auto-pull dci node-id](#), on page 7
- [fabric database auto-pull dci vrf node-id](#), on page 8
- [fabric database auto-pull vni interface](#), on page 9
- [fabric database inherit-profile-map](#), on page 10
- [fabric database mobility-domain](#), on page 11
- [fabric database override-profile](#), on page 12
- [fabric database override-vrf-profile](#), on page 13
- [fabric database profile-map](#), on page 14
- [fabric database profile-map global](#), on page 15
- [fabric database refresh dot1q](#), on page 16
- [fabric database refresh vni](#), on page 17
- [fabric database static-host](#), on page 18
- [fabric database timer](#), on page 19
- [fabric database type bl-dci](#), on page 20
- [fabric database type cabling](#), on page 21
- [fabric database type host](#), on page 22
- [fabric database type network](#), on page 23
- [fabric database type partition](#), on page 24
- [fabric database type profile](#), on page 25
- [fabric forwarding admin-distance](#), on page 26
- [fabric forwarding anycast-gateway-mac](#), on page 27
- [fabric forwarding dup-host-ip-addr-detection](#), on page 28
- [fabric forwarding dup-host-recovery-timer recover-count](#), on page 29
- [fabric forwarding limit-vlan-mac](#), on page 30
- [fabric forwarding mode anycast-gateway](#), on page 31
- [fabric forwarding selective-host-probe](#), on page 32
- [fabric multicast event-history bgp](#), on page 33
- [fabric multicast event-history ha](#), on page 34
- [fabric multicast event-history hmm](#), on page 35
- [fabric multicast event-history isis](#), on page 36
- [fabric multicast event-history l2rib](#), on page 37
- [fabric multicast event-history m2rib](#), on page 38

- fabric multicast event-history m6rib, on page 39
- fabric multicast event-history mrrib, on page 40
- fabric multicast event-history pim, on page 41
- fabric multicast event-history pim6, on page 42
- failaction, on page 43
- failaction, on page 44
- fast-convergence, on page 45
- fast-convergence, on page 46
- fast-external-fallover, on page 47
- fast-flood enable, on page 48
- fast-flood enable, on page 49
- fast-flood enable, on page 50
- fast-flood interval, on page 51
- fast-flood interval, on page 52
- fast-flood interval, on page 53
- fast-reload, on page 54
- fast-reload network-os, on page 55
- fast-reroute, on page 56
- fast-reroute backup-prot-preempt optimize-bw, on page 57
- fcdroplacency network, on page 58
- fcoe, on page 59
- fcoe, on page 60
- fcoe enable-fex, on page 61
- fcoe fcf-priority, on page 62
- fcoe fcmmap, on page 63
- fcoe fka-adv-period, on page 64
- fcoe veloopback, on page 65
- fcoe vsan, on page 66
- fctimer D_S_TOV, on page 67
- fctimer E_D_TOV, on page 68
- fctimer R_A_TOV, on page 69
- fctimer abort, on page 70
- fctimer commit, on page 71
- fctimer distribute, on page 72
- feature-set, on page 73
- feature-set, on page 74
- feature, on page 75
- feature analytics, on page 76
- feature bash-shell, on page 77
- feature bfd, on page 78
- feature bgp, on page 79
- feature catena, on page 80
- feature container-tracker, on page 81
- feature dhcp, on page 82
- feature dot1x, on page 83
- feature eigrp, on page 84

- feature evb, on page 85
- feature evmed, on page 86
- feature fabric forwarding, on page 87
- feature flexlink, on page 88
- feature grpc, on page 89
- feature hardware-telemetry, on page 90
- feature hsrp, on page 91
- feature icam, on page 92
- feature imp, on page 93
- feature interface-vlan, on page 94
- feature isis, on page 95
- feature itd, on page 96
- feature lacp, on page 97
- feature ldap, on page 98
- feature lldp, on page 99
- feature macsec, on page 100
- feature mpls evpn, on page 101
- feature mpls l3vpn, on page 102
- feature mpls ldp, on page 103
- feature mpls oam, on page 104
- feature mpls segment-routing, on page 105
- feature mpls segment-routing traffic-engineering, on page 106
- feature mpls static, on page 107
- feature mpls traffic-engineering, on page 108
- feature msdp, on page 109
- feature mvpn, on page 110
- feature nat, on page 111
- feature nbm, on page 112
- feature netconf, on page 113
- feature netflow, on page 114
- feature ngmvpn, on page 115
- feature ngoam, on page 116
- feature ngoam, on page 117
- feature npiv, on page 118
- feature ntp, on page 119
- feature nv overlay, on page 120
- feature nxapi, on page 121
- feature nxdb, on page 122
- feature nxsdk, on page 123
- feature openflow, on page 124
- feature ospf, on page 125
- feature ospfv3, on page 126
- feature password encryption aes, on page 127
- feature pbr, on page 128
- feature pim, on page 129
- feature pim6, on page 130

- feature plb, on page 131
- feature pnp, on page 132
- feature poap, on page 133
- feature poe, on page 134
- feature pong, on page 135
- feature port-security, on page 136
- feature private-vlan, on page 137
- feature privilege, on page 138
- feature ptp, on page 139
- feature restconf, on page 140
- feature rip, on page 141
- feature scheduler, on page 142
- feature scp-server, on page 143
- feature sflow, on page 144
- feature sftp-server, on page 145
- feature signature-verification, on page 146
- feature sla responder, on page 147
- feature sla sender, on page 148
- feature sla twamp-server, on page 149
- feature smart-channel, on page 150
- feature srv6, on page 151
- feature ssh, on page 152
- feature tacacs, on page 153
- feature telemetry, on page 154
- feature telnet, on page 155
- feature tunnel, on page 156
- feature udd, on page 157
- feature vmtracker, on page 158
- feature vn-segment-vlan-based, on page 159
- feature vpc, on page 160
- feature vrrp, on page 161
- feature vrrpv3, on page 162
- feature vtp, on page 163
- fec, on page 164
- fec, on page 165
- fec, on page 166
- fhrp delay minimum, on page 167
- fhrp delay reload, on page 168
- filter, on page 169
- filter, on page 170
- filter access-group, on page 171
- filter ip, on page 172
- filter ipv6 access-group, on page 173
- filter out, on page 174
- filter tx control-packets, on page 175
- filter vlan, on page 176

- filter vlan include-untagged, on page 177
- find, on page 178
- fips debug errors debug, on page 179
- fips mode enable, on page 180
- flow-count, on page 181
- flow-count, on page 182
- flow exporter, on page 183
- flow exporter, on page 184
- flow filter, on page 185
- flow forward, on page 186
- flow monitor, on page 187
- flow monitor, on page 188
- flow profile, on page 189
- flow record, on page 190
- flow record, on page 191
- flow rtp timeout, on page 192
- flow system config, on page 193
- flow timeout, on page 194
- flowcontrol hardware, on page 195
- flowcontrol receive, on page 196
- flush-routes, on page 197
- flush-routes, on page 198
- flush-routes, on page 199
- flush-routes, on page 200
- flush-routes, on page 201
- flush-routes, on page 202
- follow, on page 203
- format, on page 204
- format bootflash, on page 205
- format bootflash check-filesystem, on page 206
- format usb1, on page 207
- forward, on page 208
- forwarding-adjacency, on page 209
- fragments, on page 210
- frequency, on page 211
- from to, on page 212
- from to, on page 213
- fte event, on page 214
- fte exporter, on page 215
- fte monitor, on page 216
- fte record, on page 217
- fte system monitor, on page 218
- ftrace, on page 219

fabric-soo

```
[no] fabric-soo { <ext-comm-soo-aa2nn4> | <ext-comm-soo-aa4nn2> }
```

Syntax Description

no	(Optional) Negate a command or set its defaults
fabric-soo	Fabric Site of Origin
<i>ext-comm-soo-aa4nn2</i>	VPN extcommunity in aa4:fabric_id format
<i>ext-comm-soo-aa2nn4</i>	VPN extcommunity in aa:fabric_id format

Command Mode

- /exec/configure/router-bgp

fabric database auto-pull dci node-id

fabric database auto-pull dci node-id <mgmt-ip-address>

Syntax Description

fabric	Fabric
database	Fabric Database
auto-pull	Pull configuration
dci	DCI profile
node-id	management ip address of this node
<i>mgmt-ip-address</i>	IP address in CIDR format

Command Mode

- /exec

fabric database auto-pull dci vrf node-id

```
fabric database auto-pull dci vrf <vrf-name> node-id <mgmt-ip-address> [ peer-id <peer-ip-address> ]
```

Syntax Description

<code>fabric</code>	Fabric
<code>database</code>	Fabric Database
<code>auto-pull</code>	Pull configuration
<code>dci</code>	DCI profile
<code>vrf</code>	Display per-VRF information
<i>vrf-name</i>	VRF name
<code>node-id</code>	management ip address of this node
<i>mgmt-ip-address</i>	IP address in CIDR format
<code>peer-id</code>	(Optional) management ip address of peer
<i>peer-ip-address</i>	(Optional) IP address in CIDR format

Command Mode

- /exec

fabric database auto-pull vni interface

```
fabric database auto-pull { vni <vni-id> | dot1q <vlan-id> } interface <interface-id> [ { overwrite-vlan |
overwrite-bd } <ow-vlan-id> ]
```

Syntax Description

fabric	Fabric
database	Fabric Database
auto-pull	Pull configuration
vni	Pull ethernet-tag vni configuration
<i>vni-id</i>	
dot1q	Pull ethernet-tag dot1q configuration
<i>vlan-id</i>	
interface	Applied interface
<i>interface-id</i>	Name of interface
overwrite-vlan	(Optional) Overwrite the system generate vlan
overwrite-bd	(Optional) Overwrite the system generate bd
<i>ow-vlan-id</i>	(Optional)

Command Mode

- /exec

fabric database inherit-profile-map

{ fabric database inherit-profile-map <id> } | { no fabric database inherit-profile-map }

Syntax Description

no	Negate a command or set its defaults
fabric	Fabric
database	Configure Fabric Database
inherit-profile-map	Inherit a profile map. All non-global mappings will be inherited.
<i>id</i>	Profile Map ID

Command Mode

- /exec/configure/if-eth-any /exec/configure/if-port-channel

fabric database mobility-domain

[no] fabric database mobility-domain <name>

Syntax Description

no	(Optional) Negate a command or set its defaults
fabric	Fabric
database	Configure Fabric Database
mobility-domain	Tag to identify mobility domain name
<i>name</i>	Mobility Domain Name

Command Mode

- /exec/configure

fabric database override-profile

[no] fabric database override-profile <profilename>

Syntax Description

no	(Optional) Negate a command or set its defaults
fabric	Fabric
database	Configure Fabric Database
override-profile	Override the network profile name
<i>profilename</i>	Enter the profile name to override network profile

Command Mode

- /exec/configure

fabric database override-vrf-profile

[no] fabric database override-vrf-profile <profilename>

Syntax Description

no	(Optional) Negate a command or set its defaults
fabric	Fabric
database	Configure Fabric Database
override-vrf-profile	Override the VRF (partition) profile name
<i>profilename</i>	Enter the profile name to override VRF profile

Command Mode

- /exec/configure

fabric database profile-map

[no] fabric database profile-map <id>

Syntax Description

no	(Optional) Negate a command or set its defaults
fabric	Fabric
database	Configure Fabric Database
profile-map	Configure a profile map
<i>id</i>	Profile Map ID

Command Mode

- /exec/configure

fabric database profile-map global

[no] fabric database profile-map global

Syntax Description

no	(Optional) Negate a command or set its defaults
fabric	Fabric
database	Configure Fabric Database
profile-map	Configure a profile map
global	Global profile (apply to all interfaces)

Command Mode

- /exec/configure

fabric database refresh dot1q

```
fabric database refresh dot1q <vlan-id> [ { mobility-domain <name> | interface <interface-id> } ]
```

Syntax Description

fabric	Fabric
database	Fabric Database
refresh	Refresh profile configuration
dot1q	Dot1Q Encapsulation
<i>vlan-id</i>	
interface	(Optional) Applied interface
<i>interface-id</i>	(Optional) Name of interface
mobility-domain	(Optional) Tag to identify mobility domain name
<i>name</i>	(Optional) Mobility Domain Name

Command Mode

- /exec

fabric database refresh vni

```
fabric database refresh { vni <vni-id> | include-vrf { <vrf-name> } }
```

Syntax Description

fabric	Fabric
database	Fabric Database
refresh	Refresh profile configuration
vni	Virtual Network Identifier
<i>vni-id</i>	
include-vrf	Include VRF name
<i>vrf-name</i>	VRF name

Command Mode

- /exec

fabric database static-host

[no] fabric database static-host

Syntax Description

no	(Optional) Negate a command or set its defaults
fabric	Fabric
database	Fabric Database
static-host	Configure a static host

Command Mode

- /exec/configure

fabric database timer

[no] fabric database timer { aging | cleanup | recovery | re-add } <timeout>

Syntax Description

no	(Optional) Negate a command or set its defaults
fabric	
database	
timer	HMM timers
cleanup	Delay in minutes before profile is deleted
recovery	Delay in minutes before recovered profile is deleted
re-add	Delay in minutes before new client requests (after un-apply) are accepted
aging	Delay in minutes before profile is checked for aging
<i>timeout</i>	Set timeout in minutes

Command Mode

- /exec/configure

fabric database type bl-dci

[no] fabric database type bl-dci

Syntax Description

no	(Optional) Negate a command or set its defaults
fabric	Fabric
database	Configure Fabric Database
type	Configure database type
bl-dci	Border Leaf - DCI

Command Mode

- /exec/configure

fabric database type cabling

[no] fabric database type cabling

Syntax Description

no	(Optional) Negate a command or set its defaults
fabric	Fabric
database	Configure Fabric Database
type	Configure database type
cabling	Cable Management Database

Command Mode

- /exec/configure

fabric database type host

[no] fabric database type host

Syntax Description

no	(Optional) Negate a command or set its defaults
fabric	Fabric
database	Configure Fabric Database
type	Configure database type
host	Host Database

Command Mode

- /exec/configure

fabric database type network

[no] fabric database type network

Syntax Description

no	(Optional) Negate a command or set its defaults
fabric	Fabric
database	Configure Fabric Database
type	Configure database type
network	Network Database

Command Mode

- /exec/configure

fabric database type partition

[no] fabric database type partition

Syntax Description

no	(Optional) Negate a command or set its defaults
fabric	Fabric
database	Configure Fabric Database
type	Configure database type
partition	Partition Database

Command Mode

- /exec/configure

fabric database type profile

[no] fabric database type profile

Syntax Description

no	(Optional) Negate a command or set its defaults
fabric	Fabric
database	Configure Fabric Database
type	Configure database type
profile	Port or Switch Profile Database

Command Mode

- /exec/configure

fabric forwarding admin-distance

{ fabric forwarding admin-distance <distance> } | { no fabric forwarding admin-distance }

Syntax Description

no	Negate a command or set its defaults
fabric	Fabric
forwarding	Fabric Forwarding Protocol: Host Mobility Manager (HMM)
admin-distance	Administrative distance for HMM host routes
<i>distance</i>	Set the administrative distance for HMM (default is 190)

Command Mode

- /exec/configure

fabric forwarding anycast-gateway-mac

```
{ fabric forwarding anycast-gateway-mac <mac-addr> } | { no fabric forwarding anycast-gateway-mac }
```

Syntax Description

no	Negate a command or set its defaults
fabric	Fabric
forwarding	Fabric Forwarding Protocol: Host Mobility Manager (HMM)
anycast-gateway-mac	Anycast Gateway MAC of the Switch
<i>mac-addr</i>	MAC address

Command Mode

- /exec/configure

fabric forwarding dup-host-ip-addr-detection

```
{ fabric forwarding dup-host-ip-addr-detection <mmoves> <nsecs> | no fabric forwarding
dup-host-ip-addr-detection }
```

Syntax Description

no	Negate a command or set its defaults
fabric	Fabric
forwarding	Fabric Forwarding Protocol: Host Mobility Manager (HMM)
dup-host-ip-addr-detection	To detect duplicate host address in n secs
<i>mmoves</i>	Set Number of host moves to be allowed in n secs. Default is 5
<i>nsecs</i>	Set the duplicate detection timeout in secs for host moves. Default is 180

Command Mode

- /exec/configure

fabric forwarding dup-host-recovery-timer recover-count

{ fabric forwarding dup-host-recovery-timer <timeout> recover-count <count> | no fabric forwarding dup-host-recovery-timer }

Syntax Description

no	Negate a command or set its defaults
fabric	Fabric
forwarding	Fabric Forwarding Protocol: Host Mobility Manager (HMM)
dup-host-recovery-timer	Refresh the frozen duplicate host
<i>timeout</i>	Set the timeout in secs to refresh the duplicate host. Default is 30 secs
recover-count	Maximum number of refreshes
<i>count</i>	Set the maximum number of host refresh. Default is 5.

Command Mode

- /exec/configure

fabric forwarding limit-vlan-mac

[no] fabric forwarding limit-vlan-mac <max-limit>

Syntax Description

no	(Optional) Negate a command or set its defaults
fabric	Fabric
forwarding	Fabric Forwarding Protocol: Host Mobility Manager (HMM)
limit-vlan-mac	Maximum number of end-hosts allowed to have the same (vlan, MAC) mapping in a given vrf (Default is 2048)
<i>max-limit</i>	Set max-limit

Command Mode

- /exec/configure

fabric forwarding mode anycast-gateway

{ fabric forwarding mode anycast-gateway } | { no fabric forwarding mode }

Syntax Description

no	Negate a command or set its defaults
fabric	Fabric
forwarding	Fabric Forwarding Protocol: Host Mobility Manager (HMM)
mode	Forwarding Modes
anycast-gateway	Anycast Gateway Forwarding Mode

Command Mode

- /exec/configure/if-vlan /exec/configure/if-vlan-range

fabric forwarding selective-host-probe

[no] fabric forwarding selective-host-probe

Syntax Description

no	(Optional) Negate a command or set its defaults
fabric	Fabric
forwarding	Fabric Forwarding Protocol: Host Mobility Manager (HMM)
selective-host-probe	Trigger unconditional host probe

Command Mode

- /exec/configure

fabric multicast event-history bgp

```
[no] fabric multicast event-history bgp { size { <size_in_text> | <size_in_kbytes> } }
```

Syntax Description

no	(Optional) Negate a command or set its defaults
fabric	Fabric
multicast	Configure multicast
event-history	Configure event-history buffer
bgp	BGP events for fabric multicast
size	Configure size
<i>size_in_text</i>	Buffer size
<i>size_in_kbytes</i>	Size in kbytes

Command Mode

- /exec/configure

fabric multicast event-history ha

```
[no] fabric multicast event-history ha { size { <size_in_text> | <size_in_kbytes> } }
```

Syntax Description

no	(Optional) Negate a command or set its defaults
fabric	Fabric
multicast	Configure multicast
event-history	Configure event-history buffer
ha	ha events for fabric multicast
size	Configure size
<i>size_in_text</i>	Buffer size
<i>size_in_kbytes</i>	Size in kbytes

Command Mode

- /exec/configure

fabric multicast event-history hmm

```
[no] fabric multicast event-history hmm { size { <size_in_text> | <size_in_kbytes> } }
```

Syntax Description

no	(Optional) Negate a command or set its defaults
fabric	Fabric
multicast	Configure multicast
event-history	Configure event-history buffer
hmm	HMM events for fabric multicast
size	Configure size
<i>size_in_text</i>	Buffer size
<i>size_in_kbytes</i>	Size in kbytes

Command Mode

- /exec/configure

fabric multicast event-history isis

[no] fabric multicast event-history isis { size { <size_in_text> | <size_in_kbytes> } }

Syntax Description

no	(Optional) Negate a command or set its defaults
fabric	Fabric
multicast	Configure multicast
event-history	Configure event-history buffer
isis	ISIS events for fabric multicast
size	Configure size
<i>size_in_text</i>	Buffer size
<i>size_in_kbytes</i>	Size in kbytes

Command Mode

- /exec/configure

fabric multicast event-history l2rib

```
[no] fabric multicast event-history l2rib { size { <size_in_text> | <size_in_kbytes> } }
```

Syntax Description

no	(Optional) Negate a command or set its defaults
fabric	Fabric
multicast	Configure multicast
event-history	Configure event-history buffer
l2rib	l2rib events for fabric multicast
size	Configure size
<i>size_in_text</i>	Buffer size
<i>size_in_kbytes</i>	Size in kbytes

Command Mode

- /exec/configure

fabric multicast event-history m2rib

[no] fabric multicast event-history m2rib { size { <size_in_text> | <size_in_kbytes> } }

Syntax Description

no	(Optional) Negate a command or set its defaults
fabric	Fabric
multicast	Configure multicast
event-history	Configure event-history buffer
m2rib	M2RIB events for fabric multicast
size	Configure size
<i>size_in_text</i>	Buffer size
<i>size_in_kbytes</i>	Size in kbytes

Command Mode

- /exec/configure

fabric multicast event-history m6rib

```
[no] fabric multicast event-history m6rib { size { <size_in_text> | <size_in_kbytes> } }
```

Syntax Description

no	(Optional) Negate a command or set its defaults
fabric	Fabric
multicast	Configure multicast
event-history	Configure event-history buffer
m6rib	M6RIB events for fabric multicast
size	Configure size
<i>size_in_text</i>	Buffer size
<i>size_in_kbytes</i>	Size in kbytes

Command Mode

- /exec/configure

fabric multicast event-history mrib

[no] fabric multicast event-history mrib { size { <size_in_text> | <size_in_kbytes> } }

Syntax Description

no	(Optional) Negate a command or set its defaults
fabric	Fabric
multicast	Configure multicast
event-history	Configure event-history buffer
mrib	MRIB events for fabric multicast
size	Configure size
<i>size_in_text</i>	Buffer size
<i>size_in_kbytes</i>	Size in kbytes

Command Mode

- /exec/configure

fabric multicast event-history pim

```
[no] fabric multicast event-history pim { size { <size_in_text> | <size_in_kbytes> } }
```

Syntax Description

no	(Optional) Negate a command or set its defaults
fabric	Fabric
multicast	Configure multicast
event-history	Configure event-history buffer
pim	PIM events for fabric multicast
size	Configure size
<i>size_in_text</i>	Buffer size
<i>size_in_kbytes</i>	Size in kbytes

Command Mode

- /exec/configure

fabric multicast event-history pim6

```
[no] fabric multicast event-history pim6 { size { <size_in_text> | <size_in_kbytes> } }
```

Syntax Description

no	(Optional) Negate a command or set its defaults
fabric	Fabric
multicast	Configure multicast
event-history	Configure event-history buffer
pim6	PIM6 events for fabric multicast
size	Configure size
<i>size_in_text</i>	Buffer size
<i>size_in_kbytes</i>	Size in kbytes

Command Mode

- /exec/configure

failaction

[no] failaction { { node { reassign | drop | least-bucket | per-bucket } } | { bucket { distribute } } | { cluster drop } }

Syntax Description

no	(Optional) Negate a command or set its defaults
failaction	ITD failaction
node	ITD failaction node
reassign	ITD failaction reassign
drop	ITD failaction drop
least-bucket	ITD failaction least-bucket node
per-bucket	ITD failaction per-bucket node
bucket	ITD failaction bucket reassign
distribute	ITD failaction distribute reassign
cluster	ITD failaction cluster

Command Mode

- /exec/configure/itd

failaction

[no] failaction { node { reassign | drop } | cluster drop } +

Syntax Description

no	(Optional) Negate a command or set its defaults
failaction	Configure failaction for PLB service
node	PLB failaction node
reassign	PLB failaction reassign
drop	PLB failaction drop
cluster	PLB failaction cluster

Command Mode

- /exec/configure/plb

fast-convergence

[no] fast-convergence

Syntax Description

no	(Optional) Negate a command or set its defaults
fast-convergence	Configure vPC fast convergence

Command Mode

- /exec/configure/vpc-domain

fast-convergence

fast-convergence | no fast-convergence

Syntax Description

no	Negate a command or set its defaults
fast-convergence	Enable vPC fast-convergence

Command Mode

- /exec/configure/vpc-domain

fast-external-fallover

[no] fast-external-fallover

Syntax Description

no	(Optional) Negate a command or set its defaults
fast-external-fallover	Immediately reset the session if the link to a directly connected BGP peer goes down

Command Mode

- /exec/configure/router-bgp

fast-flood enable

[no] fast-flood enable

Syntax Description

no	(Optional) Negate a command or set its defaults
fast-flood	Fast flood the LSP's
enable	Turn on fast-flooding

Command Mode

- /exec/configure/otv-isis/otv-isis-vrf-common

fast-flood enable

[no] fast-flood enable

Syntax Description

no	(Optional) Negate a command or set its defaults
fast-flood	Fast flood the LSP's
enable	Turn on fast-flooding

Command Mode

- /exec/configure/router-isis/router-isis-vrf-common

fast-flood enable

[no] fast-flood enable

Syntax Description

no	(Optional) Negate a command or set its defaults
fast-flood	Fast flood the LSP's
enable	Turn on fast-flooding

Command Mode

- /exec/configure/l2mp-isis/l2mp-isis-vrf-common

fast-flood interval

[no] fast-flood interval <interval>

Syntax Description

no	(Optional) Negate a command or set its defaults
fast-flood	Fast flood the LSP's
interval	Duration/interval of the fast-flood timer.
<i>interval</i>	Specify the value (ms)

Command Mode

- /exec/configure/l2mp-isis/l2mp-isis-vrf-common

fast-flood interval

[no] fast-flood interval <interval>

Syntax Description

no	(Optional) Negate a command or set its defaults
fast-flood	Fast flood the LSP's
interval	Duration/interval of the fast-flood timer.
<i>interval</i>	Specify the value (ms)

Command Mode

- /exec/configure/router-isis/router-isis-vrf-common

fast-flood interval

[no] fast-flood interval <interval>

Syntax Description

no	(Optional) Negate a command or set its defaults
fast-flood	Fast flood the LSP's
interval	Duration/interval of the fast-flood timer.
<i>interval</i>	Specify the value (ms)

Command Mode

- /exec/configure/otv-isis/otv-isis-vrf-common

fast-reload

```
fast-reload { [ nxos <uri> | trigger-gr | save-config | [ non-interruptive | nosrg ] ] + | force-all [ nxos <uri> ] +
} [ override ]
```

Syntax Description

fast-reload	fast-reload software
nxos	(Optional) boot-variable name
<i>uri</i>	(Optional) Enter image uri
non-interruptive	(Optional) Non-Interruptive image upgrade
nosrg	(Optional) nosrg
override	(Optional) Do fast-reload without impact check
trigger-gr	(Optional) Enable BGP GR for compatible peers
save-config	(Optional) Save running-config to startup-config before fast-reload
force-all	Force upgrade the system

Command Mode

- /exec

fast-reload network-os

fast-reload network-os <uri>

Syntax Description

fast-reload	fast-reload software
network-os	non-cisco OS
<i>uri</i>	Enter image uri

Command Mode

- /exec

fast-reroute

[no] fast-reroute | fast-reroute [node-protect | bw-protect] +

Syntax Description

no	Negate a command or set its defaults
fast-reroute	Specify mpls tunnel can be fast-rerouted
node-protect	(Optional) node protection desired
bw-protect	(Optional) bandwidth protection desired

Command Mode

- /exec/configure/if-te /exec/configure/tunnel-te/cbts-member

fast-reroute backup-prot-preempt optimize-bw

[no] fast-reroute backup-prot-preempt optimize-bw | no fast-reroute timers promotion | fast-reroute timers promotion <seconds>

Syntax Description

no	(Optional) Negate a command or set its defaults
fast-reroute	fast-reroute parameters
backup-prot-preempt	Preemption algorithm for backup tunnels
optimize-bw	Reduce bandwidth wastage (default: minimize LSPs preempted)
timers	configure fast-reroute timer
promotion	Configure how often we scan for LSP backup promotion
<i>seconds</i>	seconds between promotions (0 disables promotion.)

Command Mode

- /exec/configure/te

fcdroplateny network

[no] fcdroplateny { network <i0> [vsan <i1>] | switch <i2> }

Syntax Description

no	(Optional) Negate a command or set its defaults
fcdroplateny	configure switch or network latency
network	network latency in milliseconds
<i>i0</i>	network latency in milliseconds
vsan	(Optional) VSAN id range
<i>i1</i>	(Optional)
switch	switch latency in milliseconds
<i>i2</i>	switch latency in milliseconds

Command Mode

- /exec/configure

fcoe

[no] fcoe

Syntax Description

no	(Optional) Negate a command or set its defaults
fcoe	create fcoe associate between fex and switch

Command Mode

- /exec/configure/fex

fcoe

[no] fcoe

Syntax Description

no	(Optional) Negate a command or set its default
fcoe	FCOE Congiguration

Command Mode

- /exec/configure/vlan

fcoe enable-fex

[no] fcoe enable-fex

Syntax Description

no	(Optional) Negate a command or set its defaults
fcoe	FCOE command
enable-fex	Enables FCoE over FEX HIF interfaces

Command Mode

- /exec/configure

fcoe fcf-priority

fcoe fcf-priority <i0> | no fcoe fcf-priority

Syntax Description

no	Negate a command or set its defaults
fcoe	FCOE command
fcf-priority	FCF priority specification
<i>i0</i>	Enter FCF priority

Command Mode

- /exec/configure

fcoe fcmmap

fcoe fcmmap <i0> | no fcoe fcmmap

Syntax Description

no	Negate a command or set its defaults
fcoe	FCOE command
fcmmap	FC MAP specification
<i>i0</i>	Enter FCMAP

Command Mode

- /exec/configure

fcoe fka-adv-period

fcoe fka-adv-period <i0> | no fcoe fka-adv-period

Syntax Description

no	Negate a command or set its defaults
fcoe	FCOE command
fka-adv-period	FKA Advertisement Period
<i>i0</i>	FKA Advertisement Period (in sec)

Command Mode

- /exec/configure

fcoe vloopback

fcoe vloopback | no fcoe vloopback

Syntax Description

no	Negate a command or set its defaults
fcoe	FCOE command
vloopback	VFID check for VE ports

Command Mode

- /exec/configure

fcoe vsan

fcoe vsan <tran-id> | no fcoe vsan

Syntax Description

no	Negate a command or set its default
fcoe	FCOE Congiguration
vsan	Translated VSAN Status
<i>tran-id</i>	Enter VSAN-ID being associated with VLAN-ID

Command Mode

- /exec/configure/vlan

fctimer D_S_TOV

[no] fctimer D_S_TOV <i0> [vsan <i1>]

Syntax Description

no	(Optional) Negate a command or set its defaults
fctimer	configure fibre channel timers
D_S_TOV	D_S_TOV in milliseconds(5000-10000)
<i>i0</i>	D_S_TOV in milliseconds(5000-10000)
vsan	(Optional) Specify VSAN id
<i>i1</i>	(Optional) VSAN id

Command Mode

- /exec/configure

fctimer E_D_TOV

[no] fctimer E_D_TOV <i0> [vsan <i1>]

Syntax Description

no	(Optional) Negate a command or set its defaults
fctimer	configure fibre channel timers
E_D_TOV	E_D_TOV in milliseconds(1000-4000)
<i>i0</i>	E_D_TOV in milliseconds(1000-4000)
vsan	(Optional) Specify VSAN id
<i>i1</i>	(Optional) VSAN id

Command Mode

- /exec/configure

fctimer R_A_TOV

[no] fctimer R_A_TOV <i0> [vsan <i1>]

Syntax Description

no	(Optional) Negate a command or set its defaults
fctimer	configure fibre channel timers
R_A_TOV	R_A_TOV in milliseconds(5000-10000)
<i>i0</i>	R_A_TOV in milliseconds(5000-10000)
vsan	(Optional) Specify VSAN id
<i>i1</i>	(Optional) VSAN id

Command Mode

- /exec/configure

fctimer abort

[no] fctimer abort

Syntax Description

no	(Optional) Negate a command or set its defaults
fctimer	configure fibre channel timers
abort	abort the fctimer configuration commands

Command Mode

- /exec/configure

fctimer commit

[no] fctimer commit

Syntax Description

no	(Optional) Negate a command or set its defaults
fctimer	configure fibre channel timers
commit	commit the fctimer configuration commands

Command Mode

- /exec/configure

fctimer distribute

[no] fctimer distribute

Syntax Description

no	(Optional) Negate a command or set its defaults
fctimer	configure fibre channel timers
distribute	Enable distribution of fctimer configuration using CFS

Command Mode

- /exec/configure

feature-set

feature-set <fs>

Syntax Description

feature-set	Enable feature-set
<i>fs</i>	allow feature-set

Command Mode

- /exec/configure

feature-set

[no] feature-set <fs>

Syntax Description

no	Negate a command or set its defaults
feature-set	Enable feature-set
fs	allow feature-set

Command Mode

- /exec/configure

feature

[no] feature <arg1>

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Feature name
<i>arg1</i>	Enter feature name

Command Mode

- /exec/configure/rolefeaturegrp

feature analytics

[no] feature analytics

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
analytics	Enable/Disable Analytics!!!

Command Mode

- /exec/configure

feature bash-shell

[no] feature bash-shell

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
bash-shell	Enable/Disable bash-shell

Command Mode

- /exec/configure

feature bfd

[no] feature bfd

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
bfd	bfd

Command Mode

- /exec/configure

feature bgp

[no] feature bgp

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
bgp	Enable/Disable Border Gateway Protocol (BGP)

Command Mode

- /exec/configure

feature catena

[no] feature catena

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
catena	Enable/Disable catena

Command Mode

- /exec/configure

feature container-tracker

[no] feature container-tracker

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
container-tracker	Enable/Disable NXOS Container Tracker

Command Mode

- /exec/configure

feature dhcp

[no] feature dhcp

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
dhcp	Enable/Disable DHCP Manager

Command Mode

- /exec/configure

feature dot1x

[no] feature dot1x

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
dot1x	Enable/Disable dot1x

Command Mode

- /exec/configure

feature eigrp

[no] feature eigrp

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
eigrp	Enable/Disable Enhanced Interior Gateway Routing Protocol (EIGRP)

Command Mode

- /exec/configure

feature evb

[no] feature evb

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
evb	Enable/Disable Edge Virtual Bridge (EVB)

Command Mode

- /exec/configure

feature evmed

[no] feature evmed

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
evmed	Enable/Disable Generic event detectors

Command Mode

- /exec/configure

feature fabric forwarding

[no] feature fabric forwarding

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
fabric	Enable/Disable Fabric Services
forwarding	Enable/Disable Fabric Forwarding Protocol: Host Mobility Manager (HMM)

Command Mode

- /exec/configure

feature flexlink

[no] feature flexlink

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
flexlink	Enable/Disable Flexlink

Command Mode

- /exec/configure

feature grpc

[no] feature grpc

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
grpc	Enable/Disable grpc Services

Command Mode

- /exec/configure

feature hardware-telemetry

[no] feature hardware-telemetry

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
hardware-telemetry	Enable/Disable Hardware Telemetry

Command Mode

- /exec/configure

feature hsrp

[no] feature hsrp

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
hsrp	Enable/Disable Hot Standby Router Protocol (HSRP)

Command Mode

- /exec/configure

feature icam

[no] feature icam

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
icam	Enable/Disable icam

Command Mode

- /exec/configure

feature imp

[no] feature imp

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
imp	Enable/Disable IMP

Command Mode

- /exec/configure

feature interface-vlan

[no] feature interface-vlan

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
interface-vlan	Enable/Disable interface vlan

Command Mode

- /exec/configure

feature isis

[no] feature isis

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
isis	Enable/Disable IS-IS Unicast Routing Protocol (IS-IS)

Command Mode

- /exec/configure

feature itd

[no] feature itd

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
itd	Enable/Disable ITD

Command Mode

- /exec/configure

feature lacp

[no] feature lacp

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
lacp	Enable/Disable LACP

Command Mode

- /exec/configure

feature ldap

[no] feature ldap

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
ldap	Enable/Disable ldap

Command Mode

- /exec/configure

feature lldp

[no] feature lldp

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
lldp	Enable/Disable LLDP

Command Mode

- /exec/configure

feature macsec

[no] feature macsec

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
macsec	Enable/Disable CTS

Command Mode

- /exec/configure

feature mpls evpn

[no] feature mpls evpn

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
mpls	Enable/Disable MPLS Services
evpn	Enable MPLS EVPN

Command Mode

- /exec/configure

feature mpls l3vpn

[no] feature mpls l3vpn

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
mpls	Enable/Disable MPLS Services
l3vpn	Enable/Disable Layer 3 Virtual Private Networks

Command Mode

- /exec/configure

feature mpls ldp

[no] feature mpls ldp

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
mpls	Enable/Disable MPLS Services
ldp	Enable/Disable Label Distribution Protocol

Command Mode

- /exec/configure

feature mpls oam

[no] feature mpls oam

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
mpls	Enable/Disable MPLS Services
oam	Enable MPLS OAM

Command Mode

- /exec/configure

feature mpls segment-routing

[no] feature mpls segment-routing

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
mpls	Enable/Disable MPLS Services
segment-routing	Enable Segment-routing

Command Mode

- /exec/configure

feature mpls segment-routing traffic-engineering

[no] feature mpls segment-routing traffic-engineering

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
mpls	Enable/Disable MPLS Services
segment-routing	Enable Segment-routing
traffic-engineering	Enable/Disable segment-routing traffic-engineering

Command Mode

- /exec/configure

feature mpls static

[no] feature mpls static

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
mpls	Enable/Disable MPLS Services
static	Enable/Disable Static Labeled Paths

Command Mode

- /exec/configure

feature mpls traffic-engineering

[no] feature mpls traffic-engineering

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
mpls	Enable/Disable MPLS Services
traffic-engineering	Enable/Disable MPLS Traffic Engineering

Command Mode

- /exec/configure

feature msdp

[no] feature msdp

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
msdp	Enable/Disable Multicast Source Discovery Protocol (MSDP)

Command Mode

- /exec/configure

feature mvpn

[no] feature mvpn

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
mvpn	Multicast Virtual Private Networks.

Command Mode

- /exec/configure

feature nat

[no] feature nat

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
nat	Enable/Disable NAT

Command Mode

- /exec/configure

feature nbm

[no] feature nbm

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable a feature
nbm	Enable/Disable Non Blocking Multicast (NBM) feature

Command Mode

- /exec/configure

feature netconf

[no] feature netconf

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
netconf	Enable/Disable netconf Services

Command Mode

- /exec/configure

feature netflow

[no] feature netflow

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
netflow	Enable/Disable NetFlow

Command Mode

- /exec/configure

feature ngmvpn

[no] feature ngmvpn

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
ngmvpn	Enable/Disable EVPN/MVPN features

Command Mode

- /exec/configure

feature ngoam

[no] feature ngoam

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
ngoam	Enable/Disable ngoam

Command Mode

- /exec/configure

feature ngoam

[no] feature ngoam

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
ngoam	Enable/Disable ngoam

Command Mode

- /exec/configure

feature npiv

[no] feature npiv

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features

Command Mode

- /exec/configure

feature ntp

[no] feature ntp

Syntax Description

no	(Optional) Negate a command or set its default
feature	Command to enable/disable features
ntp	Enable/Disable NTP

Command Mode

- /exec/configure

feature nv overlay

[no] feature nv overlay

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
nv	Enable/Disable VxLAN
overlay	Enable/Disable VxLAN

Command Mode

- /exec/configure

feature nxapi

[no] feature nxapi

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
nxapi	Enable/Disable nxapi

Command Mode

- /exec/configure

feature nxdb

[no] feature nxdb

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
nxdb	Enable/Disable nxdb

Command Mode

- /exec/configure

feature nxsdk

[no] feature nxsdk

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
nxsdk	Enable/Disable nxsdk Services

Command Mode

- /exec/configure

feature openflow

[no] feature openflow

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
openflow	Enable/Disable OpenFlow agent

Command Mode

- /exec/configure

feature ospf

[no] feature ospf

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
ospf	Enable/Disable Open Shortest Path First Protocol (OSPF)

Command Mode

- /exec/configure

feature ospfv3

[no] feature ospfv3

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
ospfv3	Enable/Disable Open Shortest Path First Version 3 Protocol (OSPFv3)

Command Mode

- /exec/configure

feature password encryption aes

[no] feature password encryption aes

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Enable the feature
password	Credential(s) for the user(s)/device(s)
encryption	Strong encryption for credential(s)
aes	Encrypt using AES encryption standard

Command Mode

- /exec/configure

feature pbr

[no] feature pbr

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
pbr	Enable/Disable Policy Based Routing(PBR)

Command Mode

- /exec/configure

feature pim

[no] feature pim

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
pim	Enable/Disable Protocol Independent Multicast (PIM)

Command Mode

- /exec/configure

feature pim6

[no] feature pim6

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
pim6	Enable/Disable Protocol Independent Multicast(PIM) for IPv6

Command Mode

- /exec/configure

feature plb

[no] feature plb

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
plb	Enable/Disable Pervasive Load Balancing feature

Command Mode

- /exec/configure

feature pnp

[no] feature pnp

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
pnp	Enable/Disable PNP

Command Mode

- /exec/configure

feature poap

[no] feature poap

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
poap	Enable/Disable POAP

Command Mode

- /exec/configure

feature poe

[no] feature poe

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable a feature
poe	Enable/Disable Power over Ethernet(PoE) feature

Command Mode

- /exec/configure

feature pong

[no] feature pong

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
pong	Enable/Disable Pong

Command Mode

- /exec/configure

feature port-security

[no] feature port-security

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable eth port security features
port-security	Enable/Disable port-security

Command Mode

- /exec/configure

feature private-vlan

[no] feature private-vlan

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
private-vlan	Enable/Disable private-vlan

Command Mode

- /exec/configure

feature privilege

[no] feature privilege

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
privilege	Enable/Disable IOS type privilege level support

Command Mode

- /exec/configure

feature ptp

[no] feature ptp

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
ptp	Enable/Disable PTP

Command Mode

- /exec/configure

feature restconf

[no] feature restconf

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
restconf	Enable/Disable restconf Services

Command Mode

- /exec/configure

feature rip

[no] feature rip

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
rip	Enable/Disable Routing Information Protocol (RIP)

Command Mode

- /exec/configure

feature scheduler

[no] feature scheduler

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
scheduler	Enable/Disable scheduler

Command Mode

- /exec/configure

feature scp-server

[no] feature scp-server

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
scp-server	Enable/Disable SCP server

Command Mode

- /exec/configure

feature sflow

[no] feature sflow

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
sflow	Enable/Disable sFlow agent

Command Mode

- /exec/configure

feature sftp-server

[no] feature sftp-server

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
sftp-server	Enable/Disable SFTP server

Command Mode

- /exec/configure

feature signature-verification

[no] feature signature-verification

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
signature-verification	Enable image signature verification

Command Mode

- /exec/configure

feature sla responder

[no] feature sla responder

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
sla	Enable/Disable SLA
responder	Enable/Disable responder part of SLA

Command Mode

- /exec/configure

feature sla sender

[no] feature sla sender

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
sla	Enable/Disable SLA
sender	Enable/Disable sender part of SLA

Command Mode

- /exec/configure

feature sla twamp-server

[no] feature sla twamp-server

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
sla	Enable/Disable SLA
twamp-server	Enable/Disable twamp-server part of SLA

Command Mode

- /exec/configure

feature smart-channel

[no] feature smart-channel

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
smart-channel	Enable/Disable smart-channel

Command Mode

- /exec/configure

feature srv6

[no] feature srv6

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
srv6	Enable/Disable SRv6

Command Mode

- /exec/configure

feature ssh

[no] feature ssh

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
ssh	Enable/Disable ssh

Command Mode

- /exec/configure

feature tacacs

[no] feature tacacs +

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features

Command Mode

- /exec/configure

feature telemetry

[no] feature telemetry

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
telemetry	Enable/Disable Telemetry

Command Mode

- /exec/configure

feature telnet

[no] feature telnet

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
telnet	Enable/Disable telnet

Command Mode

- /exec/configure

feature tunnel

[no] feature tunnel

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
tunnel	Enable/Disable Tunnel Manager

Command Mode

- /exec/configure

feature udd

[no] feature udd

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
udd	Enable/Disable UDLD

Command Mode

- /exec/configure

feature vmtracker

[no] feature vmtracker

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
vmtracker	Enable/Disable VM Tracker feature

Command Mode

- /exec/configure

feature vn-segment-vlan-based

[no] feature vn-segment-vlan-based

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
vn-segment-vlan-based	Enable/Disable VLAN based VN segment

Command Mode

- /exec/configure

feature vpc

[no] feature vpc

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
vpc	Enable/Disable VPC (Virtual Port Channel)

Command Mode

- /exec/configure

feature vrrp

[no] feature vrrp

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
vrrp	Enable/Disable Virtual Router Redundancy Protocol (VRRP)

Command Mode

- /exec/configure

feature vrrpv3

[no] feature vrrpv3

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
vrrpv3	Enable/Disable Virtual Router Redundancy Protocol (VRRP) version 3

Command Mode

- /exec/configure

feature vtp

[no] feature vtp

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
vtp	Enable/Disable VTP

Command Mode

- /exec/configure

fec

fec <fec_val_old> | no fec [<fec_val_old>]

Syntax Description

no	Negate a command or set its defaults
fec	Forwarding error correction
<i>fec_val_old</i>	Interface FEC options

Command Mode

- /exec/configure/if-ethernet-all /exec/configure/if-eth-base

fec

fec <fec_val> | no fec [<fec_val>]

Syntax Description

no	Negate a command or set its defaults
fec	Forwarding error correction
<i>fec_val</i>	Interface FEC options

Command Mode

- /exec/configure/if-ethernet-all /exec/configure/if-eth-base

fec

fec <fec_val> | no fec [<fec_val>]

Syntax Description

no	Negate a command or set its defaults
fec	Forwarding error correction
<i>fec_val</i>	Interface FEC options

Command Mode

- /exec/configure/if-ethernet-all /exec/configure/if-eth-base

fhrp delay minimum

[no] fhrp delay minimum | fhrp delay minimum <delay>

Syntax Description

no	Negate a command or set its defaults
fhrp	FHRP interface configuration commands
delay	Configure FHRP delay
minimum	minimum delay
<i>delay</i>	Seconds to delay

Command Mode

- /exec/configure/if-eth-any /exec/configure/if-vlan

fhrp delay reload

[no] fhrp delay reload | fhrp delay reload <delay>

Syntax Description

no	Negate a command or set its defaults
fhrp	FHRP interface configuration commands
delay	Configure FHRP delay
reload	reload delay
<i>delay</i>	Seconds to delay

Command Mode

- /exec/configure/if-eth-any /exec/configure/if-vlan

filter

[no] filter <filtername>

Syntax Description

filter	Specify the filter to be applied
<i>filtername</i>	filter name to be applied

Command Mode

- /exec/configure/nfm-system

filter

[no] filter [subject-name <s0> | altname-email <s1> | altname-upn <s2>]

Syntax Description

no	(Optional) Negate a command or set its defaults
filter	Configure mapping filter
subject-name	(Optional) Subject name of the certificate
<i>s0</i>	(Optional) Subject name
altname-email	(Optional) Email id as an alternate name
<i>s1</i>	(Optional) Email id
altname-upn	(Optional) User principal name as an alternate name
<i>s2</i>	(Optional) User principal name

Command Mode

- /exec/configure/certmap-filter

filter access-group

[no] filter access-group <acl-name> [allow-sharing]

Syntax Description

no	(Optional) Negate a command or set its defaults
filter	Filter configuration
access-group	access control group
<i>acl-name</i>	access control list name
allow-sharing	(Optional) allow up to 4 access control groups on same source interface

Command Mode

- /exec/configure/monitor-local-src /exec/configure/config-monitor
/exec/configure/config-monitor-erspan-src

filter ip

[no] filter ip <src_ip> <src_mask> <dst_ip> <dst_mask>

Syntax Description

no	(Optional) Negate a command or set its defaults
filter	Set SPAN filter options
ip	Set SPAN IP filtering options
<i>src_ip</i>	Set source IP address
<i>src_mask</i>	Set source IP mask
<i>dst_ip</i>	Set destination IP address
<i>dst_mask</i>	Set destination IP mask

Command Mode

- /exec/configure/monitor-local-src /exec/configure/config-monitor
/exec/configure/config-monitor-erspan-src

filter ipv6 access-group

[no] filter ipv6 access-group <acl-name> [allow-sharing]

Syntax Description

no	(Optional) Negate a command or set its defaults
filter	Filter configuration
ipv6	ipv6 access group
access-group	access control group
<i>acl-name</i>	access control list name
allow-sharing	(Optional) allow up to 4 access control groups on same source interface

Command Mode

- /exec/configure/monitor-local-src /exec/configure/config-monitor
/exec/configure/config-monitor-erspan-src

filter out

```
[ no | default ] { filter-list <fltrlist-name> } { out | in }
```

Syntax Description

no	(Optional) Negate a command or set its defaults
default	(Optional) Inherit values from a peer template
filter-list	Apply AS-PATH filter-list
<i>fltrlist-name</i>	Name of filter-list
out	Apply policy to outgoing routes
in	Apply policy to incoming routes

Command Mode

- /exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af
- /exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af-vpnv4
- /exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af-ipv4-mdt
- /exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af-vpnv6
- /exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af-l2vpn-vpls
- /exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af-ipv4-mvpn
- /exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af-ipv6-mvpn
- /exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af-l2vpn-evpn
- /exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af-ipv4-label
- /exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af-ipv6-label

filter tx control-packets

[no] filter tx control-packets

Syntax Description

no	(Optional) Negate a command or set its defaults
filter	Set SPAN filter options
tx	Set SPAN tx filtering options
control-packets	Filter out CPU generated packets and SPAN only data packets

Command Mode

- /exec/configure/monitor-local-src /exec/configure/config-monitor
/exec/configure/config-monitor-erspan-src

filter vlan

[no] filter vlan <vlan_mrange> [include-untagged]

Syntax Description

no	(Optional) Negate a command or set its defaults
filter	Filter configuration
vlan	Vlan type
<i>vlan_mrange</i>	
include-untagged	(Optional) Include untagged frames on port with Layer 3 subinterfaces

Command Mode

- /exec/configure/monitor-local-src /exec/configure/config-monitor
/exec/configure/config-monitor-erspan-src

filter vlan include-untagged

[no] filter vlan include-untagged

Syntax Description

no	(Optional) Negate a command or set its defaults
filter	Filter configuration
vlan	Vlan type
include-untagged	Include untagged frames on port with Layer 3 subinterfaces

Command Mode

- /exec/configure/config-monitor

find

find <*s0*>

Syntax Description

find	Find a file below the current directory
<i>s0</i>	Enter the filename prefix to search

Command Mode

- /exec

fips debug errors debug

[no] fips debug errors { debug-lc-post-on-maint | reset-debug-lc-post-on-maint }

Syntax Description

no	(Optional) Negate a command or set its defaults
fips	Enable/Disable FIPS mode
debug	Introduce errors into FIPS tests
errors	Introduce errors
debug-lc-post-on-maint	Run the switch on debug mode for fips maintenance state
reset-debug-lc-post-on-maint	Reset the mode from debug-lc-post-on-maint

Command Mode

- /exec/

fips mode enable

[no] fips mode enable

Syntax Description

no	(Optional) Negate a command or set its defaults
fips	Enable/Disable FIPS mode
mode	FIPS mode
enable	Enable/Disable FIPS mode

Command Mode

- /exec/configure

flow-count

[no] flow-count <count>

Syntax Description

flow-count	Flow count throttle for drop events
<i>count</i>	<1-32767>

Command Mode

- /exec/configure/config-fte-event/group-drop-events

flow-count

[no] flow-count <count>

Syntax Description

flow-count	Flow count throttle for drop events
<i>count</i>	<1-32767>

Command Mode

- /exec/configure/config-fte-event/group-latency-events

flow exporter

[no] flow exporter <exportername>

Syntax Description

flow	Enable/Disable NetFlow configuration
exporter	Define a Flow Exporter
<i>exportername</i>	Name of Flow Exporter

Command Mode

- /exec/configure

flow exporter

[no] flow exporter <exportername>

Syntax Description

flow	Enable/Disable NetFlow configuration
exporter	Define a Flow Exporter
<i>exportername</i>	Name of Flow Exporter

Command Mode

- /exec/configure

flow filter

[no] flow filter <filtername>

Syntax Description

flow	Enable/Disable NetFlow configuration
filter	Define a Flow filter
<i>filtername</i>	Filter name

Command Mode

- /exec/configure

flow forward

[no] flow { forward | reverse }

Syntax Description

no	(Optional) Negate a command or set its defaults
flow	Configure ngoam flow
forward	Ngoam forward flow
reverse	Ngoam reverse flow

Command Mode

- /exec/configure/configngoamprofile

flow monitor

[no] flow monitor <monitorname>

Syntax Description

flow	Enable/Disable NetFlow configuration
monitor	Define a Flow Monitor
<i>monitorname</i>	Name of Flow Monitor

Command Mode

- /exec/configure

flow monitor

[no] flow monitor <monitorname>

Syntax Description

flow	Enable/Disable NetFlow configuration
monitor	Define a Flow Monitor
<i>monitorname</i>	Name of Flow Monitor

Command Mode

- /exec/configure

flow profile

[no] flow profile <profilename>

Syntax Description

flow	Enable/Disable NetFlow configuration
profile	Define a Flow Profile
<i>profilename</i>	Profile name

Command Mode

- /exec/configure

flow record

[no] flow record <recordname>

Syntax Description

flow	Enable/Disable NetFlow configuration
record	Define a Flow Record
<i>recordname</i>	Record name

Command Mode

- /exec/configure

flow record

[no] flow record <recordname>

Syntax Description

flow	Enable/Disable NetFlow configuration
record	Define a Flow Record
<i>recordname</i>	Record name

Command Mode

- /exec/configure

flow rtp timeout

{ [no] flow rtp timeout <time> | no flow rtp timeout }

Syntax Description

flow	Enable/Disable NetFlow configuration
rtp	Real-time Transport Protocol
timeout	Define RTP Flow Error Monitoring Duration
<i>time</i>	Time in Minutes. Enter 0 to keep the flows even if they are idle

Command Mode

- /exec/configure

flow system config

[no] flow system config

Syntax Description

flow	Enable/Disable NetFlow configuration
system	Define a Flow system
config	Define a Flow system config

Command Mode

- /exec/configure

flow timeout

{ [no] flow timeout <time> | no flow timeout }

Syntax Description

flow	Enable/Disable NetFlow configuration
timeout	Define a Flow Timeout
<i>time</i>	Time in seconds (flush-cache-Only)

Command Mode

- /exec/configure

flowcontrol hardware

[no] flowcontrol hardware

Syntax Description

no	(Optional) Negate a command or set its defaults
flowcontrol	Set flow control
hardware	Set hardware flowcontrol

Command Mode

- /exec/configure/com1

flowcontrol receive

```
flowcontrol { receive { <rx_flowctrl> } | send { <tx_flowctrl> } } | no flowcontrol { receive [ { <rx_flowctrl>
} ] | send [ { <tx_flowctrl> } ] }
```

Syntax Description

no	Negate a command or set its defaults
flowcontrol	Configure interface flowcontrol
receive	Receive pause frames
<i>rx_flowctrl</i>	Receive flow control
send	Send pause frames
<i>tx_flowctrl</i>	Send flow control

Command Mode

- /exec/configure/if-ethernet-all /exec/configure/if-eth-non-member /exec/configure/if-port-channel

flush-routes

[no] flush-routes

Syntax Description

no	(Optional) Negate a command or set its defaults
flush-routes	Flush routes in RIB during restart

Command Mode

- /exec/configure/router-eigrp

flush-routes

[no] flush-routes

Syntax Description

no	(Optional) Negate a command or set its defaults
flush-routes	Flush routes in RIB during restart

Command Mode

- /exec/configure/router-rip

flush-routes

[no] flush-routes

Syntax Description

no	(Optional) Negate a command or set its defaults
flush-routes	Flush routes on non-graceful controlled restart

Command Mode

- /exec/configure/router-isis

flush-routes

[no] flush-routes

Syntax Description

no	(Optional) Negate a command or set its defaults
flush-routes	Flush routes on a non-graceful controlled restart

Command Mode

- /exec/configure/router-ospf3

flush-routes

[no] flush-routes

Syntax Description

no	(Optional) Negate a command or set its defaults
flush-routes	Flush routes on a non-graceful controlled restart

Command Mode

- /exec/configure/router-ospf

flush-routes

[no] flush-routes

Syntax Description

no	(Optional) Negate a command or set its defaults
flush-routes	Flush routes in RIB upon controlled restart

Command Mode

- /exec/configure/router-bgp

follow

follow <name> | no follow

Syntax Description

no	Negate a command or set its defaults
follow	Group to be followed
<i>name</i>	master name string to follow

Command Mode

- /exec/configure/if-eth-any/hsrp_ipv4 /exec/configure/if-eth-any/hsrp_ipv6

format

format <uri>

Syntax Description

format	Format disks
<i>uri</i>	destination filesystem path

Command Mode

- /exec

format bootflash

format bootflash:

Syntax Description

format	Format disks
bootflash:	Format bootflash:

Command Mode

- /exec

format bootflash check-filesystem

format bootflash: check-filesystem

Syntax Description

format	Format disks
bootflash:	Format bootflash:
check-filesystem	Format bootflash: and fix any errors in file system

Command Mode

- /exec

format usb1

format usb1:

Syntax Description

format	Format disks
usb1:	Format usb1:

Command Mode

- /exec

forward

[no] forward

Syntax Description

no	(Optional) Negate a command or set its defaults
forward	Configure paths

Command Mode

- /exec/configure/mpls_static/ipv4/lsp/inlabel

forwarding-adjacency

[no] forwarding-adjacency | forwarding-adjacency [holdtime <msec>]

Syntax Description

no	Negate a command or set its defaults
forwarding-adjacency	Treat this tunnel as a Forwarding Adjacency
holdtime	(Optional) How long in msec to wait upon flooding a down Forwarding Adjacency
<i>msec</i>	(Optional) Holdtime on MPLS TE Down

Command Mode

- /exec/configure/if-te

fragments

[no] fragments <opt_type>

Syntax Description

no	(Optional) Negate a command or set its defaults
<i>opt_type</i>	frag_op_type

Command Mode

- /exec/configure/ipacl /exec/configure/ipv6acl

frequency

{ { no | default } frequency | frequency <seconds> }

Syntax Description

no	
default	Set a command to its defaults
frequency	Frequency of an operation
<i>seconds</i>	Frequency in seconds

Command Mode

- /exec/configure/ip-sla/udp /exec/configure/ip-sla/jitter /exec/configure/ip-sla/tcp
/exec/configure/ip-sla/icmpEcho /exec/configure/ip-sla/dns /exec/configure/ip-sla/fabricPathEcho
/exec/configure/ip-sla/http

from to

```
{ [ no ] { { from <frm-list> to <to-val> } | { default <value> } } } | default copy
```

Syntax Description

no	(Optional) Negate a command or set its defaults
from	Map values from this
<i>frm-list</i>	Original list of values which are to be mapped
to	Map values to this
<i>to-val</i>	New mapped value
default	map default values
<i>value</i>	default value to be set
copy	Do a default copy

Command Mode

- /exec/configure/def-tmap

from to

```
[no] { { from <frm-list> to <to-val> } | { default { <value> | copy | ignore } } }
```

Syntax Description

no	(Optional) Negate a command or set its defaults
from	Map values from this
<i>frm-list</i>	Original list of values which are to be mapped
to	Map values to this
<i>to-val</i>	New mapped value
default	map default values
<i>value</i>	default value to be set
copy	Do a default copy
ignore	Ignore any unspecified values

Command Mode

- /exec/configure/table-map

fte event

[no] fte event <eventname>

Syntax Description

fte	Enable/Disable FTE configuration
event	Define a FTE event
<i>eventname</i>	Event name

Command Mode

- /exec/configure/config-fte

fte exporter

[no] fte exporter <exportername>

Syntax Description

fte	Enable/Disable Flow Table Events configuration
exporter	Define a events Exporter
<i>exportername</i>	Name of event Exporter

Command Mode

- /exec/configure/config-fte

fte monitor

[no] fte monitor <monitorname>

Syntax Description

fte	Enable/Disable FTE configuration
monitor	Define a FTE Monitor
<i>monitorname</i>	Name of FTE Monitor

Command Mode

- /exec/configure/config-fte

fte record

[no] fte record <recordname>

Syntax Description

fte	Enable/Disable FTE configuration
record	Define a FTE Record
<i>recordname</i>	Record name

Command Mode

- /exec/configure/config-fte

fte system monitor

[no] fte system monitor <monitorname>

Syntax Description

fte	change fte global settings
system	global config
monitor	fte Monitor to be applied
<i>monitorname</i>	ssx Monitor to be applied

Command Mode

- /exec/configure/config-fte

ftrace

```
ftrace [ { set-opt { option <n0> <v0> | filter <f0> <v0> } { proc <p0> | buf_size <b0> } [ <s0> ] } | { reset { all | filter <f0> | trace <s0> } } | { enable { inband | kernel | lcnd <i0> | process <i0> | trace } } | { list { filters <f0> | curr_tracer | all } } | { debug { on | off } } | { dump { all | traces } } ]
```

Syntax Description

ftrace	Run ftrace tool to enable/disable kernel/process tracing
set-opt	(Optional) Set ftrace tracing options available
reset	(Optional) Reset ftrace options to defaults, disable tracing
enable	(Optional) Enable ftrace tracing with given options
list	(Optional) List ftrace available options/filters/events
debug	(Optional) Ftrace based debug trace enable/disable
dump	(Optional) Dump traces collected in ftrace circular buffer
all	(Optional) Act on all available datasets
lcnd	(Optional) Trace proc/pid specific lcnd inband driver calls
inband	(Optional) Trace inband driver + netstack functions
kernel	(Optional) Trace kernel function of sched, net, inband
process	(Optional) Trace proc/pid specific kernel function calls
trace	(Optional) Enable tracing_on in ftrace settings
option	(Optional) Name of ftrace option to be set
filter	(Optional) Set ftrace filter to be applied
proc	(Optional) Set ftrace process to be traced
buf_size	(Optional) Set ftrace buffer size limits
filters	(Optional) list available ftrace filters
curr_tracer	(Optional) Print ftrace current tracer
traces	(Optional) Dump ftrace trace buffer contents
on	(Optional) Enable ftrace based debug tracing
off	(Optional) Dump ftrace trace buffer contents
i0	(Optional) pid of process to trace
f0	(Optional) name of ftrace filter to list/set

<i>n0</i>	(Optional) name of ftrace option to be set
<i>v0</i>	(Optional) value of ftrace option/filter to be set
<i>p0</i>	(Optional) pid of ftrace proc to be set
<i>b0</i>	(Optional) value of ftrace buffer size limit to set
<i>s0</i>	(Optional) name of ftrace option to be set/reset

Command Mode

- /exec