



# Preface

---

This preface describes the audience, organization, and conventions of the *Cisco DCNM Installation Guide, Release 10.0(x)*. It also provides information on how to obtain related documentation.

This preface includes the following topics:

- [Audience, page 1](#)
- [Document Conventions, page 1](#)
- [Related Documentation, page 2](#)
- [Documentation Feedback, page 4](#)
- [Obtain Documentation and Submit a Service Request, page 4](#)

## Audience

This publication is for experienced network administrators who plan to install Cisco Data Center Network Manager (DCNM) Open Virtual Appliance, DCNM ISO Virtual Appliance, DCNM Windows Installer, and DCNM Linux Installer to configure, monitor, and maintain applications. Cisco Fabric works with only certain Cisco Nexus products. Consult your Cisco Fabric documentation for specific information about products that work with Cisco Fabric.

## Document Conventions

This document uses the following conventions:



**Note**

---

Means reader *take note*. Notes contain helpful suggestions or references to material not covered in the manual.

---



**Caution**

---

Means *reader be careful*. In this situation, you might do something that could result in equipment damage or loss of data.

---

In this document, the following shortened names are used:

- Cisco Data Center Network Manager is also referred to as Cisco DCNM.

- Cisco Data Center Network Manager Open Virtual Appliance is also referred to as Cisco DCNM Open Virtual Appliance.
- Cisco Dynamic Fabric Automation is also referred to as Cisco Fabric.

## Related Documentation

This section contains information about the documentation available for Cisco DCNM Open Virtual Appliance, and for the platforms that Cisco DCNM Open Virtual Appliance.

This section includes the following topics:

- [Cisco DCNM Documentation](#), page 2
- [Cisco Nexus 1000V Series Switch Documentation](#), page 2
- [Cisco Nexus 2000 Series Fabric Extender Documentation](#), page 3
- [Cisco Nexus 3000 Series Switch Documentation](#), page 3
- [Cisco Nexus 4000 Series Switch Documentation](#), page 3
- [Cisco Nexus 5000 Series Switch Documentation](#), page 3
- [Cisco Nexus 6000 Series Switch Documentation](#), page 3
- [Cisco Nexus 7000 Series Switch Documentation](#), page 3
- [Cisco Nexus 9000 Series Switch Documentation](#), page 3
- [Cisco UCS Manager Documentation](#), page 4
- [Cisco Network Services Controller Documentation](#), page 3
- [Cisco Dynamic Fabric Automation Documentation](#), page 4

## Cisco DCNM Documentation

The Cisco DCNM documentation is available at the following URL:

[http://www.cisco.com/en/US/products/ps9369/tsd\\_products\\_support\\_series\\_home.html](http://www.cisco.com/en/US/products/ps9369/tsd_products_support_series_home.html)

The documentation set for Cisco DCNM includes the following documents:

### Release Notes

*Cisco Prime DCNM Release Notes, Release 10.0.x*

### Cisco DCNM 10.0.x Fundamentals Guide

*Cisco Prime DCNM Fundamentals Guide, Release 10.0.x*

## Cisco Nexus 1000V Series Switch Documentation

The Cisco Nexus 1000V Series Switch documentation is available at the following URL:

[http://www.cisco.com/en/US/products/ps9902/tsd\\_products\\_support\\_series\\_home.html](http://www.cisco.com/en/US/products/ps9902/tsd_products_support_series_home.html)

## Cisco Nexus 2000 Series Fabric Extender Documentation

The Cisco Nexus 2000 Series Fabric Extender documentation is available at the following URL:  
[http://www.cisco.com/en/US/products/ps10110/tsd\\_products\\_support\\_series\\_home.html](http://www.cisco.com/en/US/products/ps10110/tsd_products_support_series_home.html)

## Cisco Nexus 3000 Series Switch Documentation

The Cisco Nexus 3000 Series switch documentation is available at the following URL:  
[http://www.cisco.com/en/US/products/ps11541/tsd\\_products\\_support\\_series\\_home.html](http://www.cisco.com/en/US/products/ps11541/tsd_products_support_series_home.html)

## Cisco Nexus 4000 Series Switch Documentation

The Cisco Nexus 4000 Series Switch documentation is available at the following URL:  
[http://www.cisco.com/en/US/products/ps10596/tsd\\_products\\_support\\_series\\_home.html](http://www.cisco.com/en/US/products/ps10596/tsd_products_support_series_home.html)

## Cisco Nexus 5000 Series Switch Documentation

The Cisco Nexus 5000 Series Switch documentation is available at the following URL:  
[http://www.cisco.com/en/US/products/ps9670/tsd\\_products\\_support\\_series\\_home.html](http://www.cisco.com/en/US/products/ps9670/tsd_products_support_series_home.html)

## Cisco Nexus 6000 Series Switch Documentation

Cisco Nexus 6000 Series Switch Documentation is available at the following URL:  
[http://www.cisco.com/en/US/products/ps12806/tsd\\_products\\_support\\_series\\_home.html](http://www.cisco.com/en/US/products/ps12806/tsd_products_support_series_home.html)

## Cisco Nexus 7000 Series Switch Documentation

The Cisco Nexus 7000 Series Switch documentation is available at the following URL:  
[http://www.cisco.com/en/US/products/ps9902/tsd\\_products\\_support\\_series\\_home.html](http://www.cisco.com/en/US/products/ps9902/tsd_products_support_series_home.html)

## Cisco Nexus 9000 Series Switch Documentation

The Cisco Nexus 9000 Series Switch documentation is available at the following URL:  
<http://www.cisco.com/c/en/us/support/switches/nexus-9000-series-switches/tsd-products-support-series-home.html>

## Cisco Network Services Controller Documentation

The Cisco Network Services Controller Documentation is available at the following URL:  
[http://www.cisco.com/en/US/partner/products/ps13213/tsd\\_products\\_support\\_series\\_home.html](http://www.cisco.com/en/US/partner/products/ps13213/tsd_products_support_series_home.html)

## Cisco Dynamic Fabric Automation Documentation

This Cisco Dynamic Fabric Automation documentation is available at the following URL:

[http://www.cisco.com/en/US/solutions/ns340/ns517/ns224/ns945/dynamic\\_fabric\\_automation.html#~Products](http://www.cisco.com/en/US/solutions/ns340/ns517/ns224/ns945/dynamic_fabric_automation.html#~Products)

## Cisco UCS Manager Documentation

The Cisco UCS Manager documentation is available at the following URL:

<http://www.cisco.com/c/en/us/support/servers-unified-computing/ucs-manager/tsd-products-support-series-home.html>

## Documentation Feedback

To provide technical feedback on this document, or to report an error or omission, please send your comments to: [dcnm-docfeedback@cisco.com](mailto:dcnm-docfeedback@cisco.com).

We appreciate your feedback.

## Obtain Documentation and Submit a Service Request

For information on obtaining documentation, using the Cisco Bug Search Tool (BST), submitting a service request, and gathering additional information, see *What's New in Cisco Product Documentation*.

To receive new and revised Cisco technical content directly to your desktop, you can subscribe to the [What's New in Cisco Product Documentation RSS feed](#). The RSS feeds are a free service.