



## **Cisco DCNM Installation and Upgrade Guide for Media Controller Deployment, Release 11.1(1)**

**First Published:** 2018-04-14

### **Americas Headquarters**

Cisco Systems, Inc.  
170 West Tasman Drive  
San Jose, CA 95134-1706  
USA  
<http://www.cisco.com>  
Tel: 408 526-4000  
800 553-NETS (6387)  
Fax: 408 527-0883

THE SPECIFICATIONS AND INFORMATION REGARDING THE PRODUCTS IN THIS MANUAL ARE SUBJECT TO CHANGE WITHOUT NOTICE. ALL STATEMENTS, INFORMATION, AND RECOMMENDATIONS IN THIS MANUAL ARE BELIEVED TO BE ACCURATE BUT ARE PRESENTED WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED. USERS MUST TAKE FULL RESPONSIBILITY FOR THEIR APPLICATION OF ANY PRODUCTS.

THE SOFTWARE LICENSE AND LIMITED WARRANTY FOR THE ACCOMPANYING PRODUCT ARE SET FORTH IN THE INFORMATION PACKET THAT SHIPPED WITH THE PRODUCT AND ARE INCORPORATED HEREIN BY THIS REFERENCE. IF YOU ARE UNABLE TO LOCATE THE SOFTWARE LICENSE OR LIMITED WARRANTY, CONTACT YOUR CISCO REPRESENTATIVE FOR A COPY.

The Cisco implementation of TCP header compression is an adaptation of a program developed by the University of California, Berkeley (UCB) as part of UCB's public domain version of the UNIX operating system. All rights reserved. Copyright © 1981, Regents of the University of California.

NOTWITHSTANDING ANY OTHER WARRANTY HEREIN, ALL DOCUMENT FILES AND SOFTWARE OF THESE SUPPLIERS ARE PROVIDED "AS IS" WITH ALL FAULTS. CISCO AND THE ABOVE-NAMED SUPPLIERS DISCLAIM ALL WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING, WITHOUT LIMITATION, THOSE OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NON-INFRINGEMENT OR ARISING FROM A COURSE OF DEALING, USAGE, OR TRADE PRACTICE.

IN NO EVENT SHALL CISCO OR ITS SUPPLIERS BE LIABLE FOR ANY INDIRECT, SPECIAL, CONSEQUENTIAL, OR INCIDENTAL DAMAGES, INCLUDING, WITHOUT LIMITATION, LOST PROFITS OR LOSS OR DAMAGE TO DATA ARISING OUT OF THE USE OR INABILITY TO USE THIS MANUAL, EVEN IF CISCO OR ITS SUPPLIERS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Any Internet Protocol (IP) addresses and phone numbers used in this document are not intended to be actual addresses and phone numbers. Any examples, command display output, network topology diagrams, and other figures included in the document are shown for illustrative purposes only. Any use of actual IP addresses or phone numbers in illustrative content is unintentional and coincidental.

This product includes cryptographic software written by Eric Young (eay@cryptsoft.com).

This product includes software developed by the OpenSSL Project for use in the OpenSSL Toolkit. (<http://www.openssl.org>)

This product includes software written by Tim Hudson (tjh@cryptsoft.com).

Cisco and the Cisco logo are trademarks or registered trademarks of Cisco and/or its affiliates in the U.S. and other countries. To view a list of Cisco trademarks, go to this URL: <http://www.cisco.com/go/trademarks>. Third-party trademarks mentioned are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (1110R)

© 2018 Cisco Systems, Inc. All rights reserved.



## CONTENTS

---

### CHAPTER 1

#### Overview 1

- Introduction 1
- Installation Options 2
- Deployment Options 2
- Upgrading the Cisco DCNM 2
- System Requirements for Cisco DCNM, Release 11.1(1) 3

---

### CHAPTER 2

#### Guidelines and Limitations 7

- Guidelines and Limitations 7

---

### CHAPTER 3

#### Prerequisites 9

- Prerequisites for DCNM Open Virtual Appliance 9
- Prerequisites for DCNM ISO Virtual Appliance 10
- Prerequisites for Cisco DCNM Virtual Appliance HA 10
  - Deploying Cisco DCNM Virtual Appliances in HA mode 10
- Availability of Virtual IP Addresses 11
- Installing an NTP Server 11

---

### CHAPTER 4

#### Installing Cisco DCNM 13

- Installing DCNM on Open Virtual Appliance 13
  - Downloading the Open Virtual Appliance File 13
  - Deploying the Open Virtual Appliance as an OVF Template 14
  - Installing the Cisco DCNM OVA in Standalone Mode 17
  - Installing the Cisco DCNM OVA in Native HA mode 19
- Installing DCNM on ISO Virtual Appliance 25
  - Downloading the ISO Virtual Appliance File 25

Installing the DCNM ISO Virtual Appliance on UCS (Bare Metal) 25

Installing the DCNM ISO Virtual Appliance on KVM 29

Installing Cisco DCNM ISO in Standalone Mode 31

Installing the Cisco DCNM ISO in Native HA mode 33

Installing Cisco DCNM Compute Node 39

---

**CHAPTER 5**

**Upgrading Cisco DCNM 43**

Upgrading ISO or OVA using the DCNM Upgrade Tool 44

    Downloading the DCNM Upgrade Tool 44

    Backup Using the Upgrade Tool 44

    Upgrading and Restoring DCNM Virtual Appliance in Standalone mode 45

    Upgrading and Restoring DCNM Virtual Appliance in Native HA Mode 47

Upgrading ISO or OVA through Inline Upgrade 52

    Inline Upgrade for DCNM Virtual Appliance in Standalone Mode 52

    Inline Upgrade for DCNM Virtual Appliance in Native HA Mode 53

---

**CHAPTER 6**

**Disaster Recovery (Backup and Restore) 57**

Backup and Restore Cisco DCNM and Application Data on Standalone DCNM setup 57

Backup and Restore Cisco DCNM and Application Data on Native HA setup 58

---

**CHAPTER 7**

**Running Cisco DCNM Behind a Firewall 61**

Running Cisco DCNM Behind a Firewall 61

---

**CHAPTER 8**

**Monitoring Devices 65**

Monitoring Devices in In-Band Network 65

---

**CHAPTER 9**

**Secure Client Communications for Cisco DCNM Servers 67**

Enabling SSL/HTTPS on Cisco DCNM in HA Environment on Virtual Appliance 67

---

**CHAPTER 10**

**Managing Applications in a High-Availability Environment 69**

Information About Application Level HA in the Cisco DCNM Open Virtual Appliance 69

    Automatic Failover 70

    Manually Triggered Failovers 70

Native HA Failover and Troubleshooting	70
Application High Availability Details	72
Data Center Network Management	73
RabbitMQ	74
Repositories	75

---

**CHAPTER 11****Managing Utility Services After DCNM Deployment 77**

Editing Network Properties Post DCNM Installation	77
Modifying Network Interfaces (eth0 and eth1) Post DCNM Installation	78
Configuring Enhanced-Fabric-Inband Interface (eth2) Post DCNM Installation	86
Changing the DCNM Password Post DCNM Installation	88
Utility Services Details	88
Device Power On Auto Provisioning	88
Managing Applications and Utility Services	89
Verifying the Application and Utility Services Status after Deployment	89
Stopping, Starting, and Resetting Utility Services	91





# CHAPTER 1

## Overview

---

Cisco Data Center Network Manager (DCNM) is a management system for Cisco NXOS-based Programmable Fabrics and Cisco NXOS-based Storage Fabrics. In addition to provisioning, monitoring, and troubleshooting the datacenter network infrastructure, the Cisco DCNM provides a comprehensive feature-set that meets the routing, switching, and storage administration needs of datacenters. It streamlines the provisioning for the Programmable Fabric and monitors the SAN components.

Cisco DCNM provides a high level of visibility and control through a single web-based management console for Cisco Nexus Series Switches, Cisco MDS, and Cisco Unified Computing System (UCS) products. Cisco DCNM also includes Cisco DCNM-SAN client and Device Manager functionality.

This section contains the following sections:

- [Introduction, on page 1](#)
- [Installation Options, on page 2](#)
- [Deployment Options, on page 2](#)
- [Upgrading the Cisco DCNM, on page 2](#)
- [System Requirements for Cisco DCNM, Release 11.1\(1\), on page 3](#)

## Introduction

Cisco DCNM provides an alternative to the command-line interface (CLI) for switch configuration commands.

Cisco DCNM includes these management applications:

### **Cisco DCNM Web UI**

Cisco DCNM Web UI allows operators to monitor and obtain reports for Cisco MDS and Nexus events, performance, and inventory from a remote location using a web browser. Licensing and discovery are part of the Cisco DCNM Web UI.

### **Performance Manager**

Performance Manager presents detailed traffic analysis by capturing data with SNMP. This data is compiled into various graphs and charts that can be viewed on the Cisco DCNM Web UI. Performance Manager stores data into Elastic search time series database. API access to Elastic search is not supported.

# Installation Options

Cisco DCNM Software images are packaged with the Cisco DCNM installer, signature certificate, and signature verification script. Unzip the desired Cisco DCNM Installer image zip file to a directory. Image signature can be verified by following the steps in README file. The installer from this package installs the Cisco DCNM software.

## DCNM Open Virtual Appliance (OVA) Installer

This installer is available as an Open Virtual Appliance file (.ova). The installer contains a pre-installed OS, DCNM and other applications needed for Programmable Fabric.

## DCNM ISO Virtual Appliance (ISO) Installer

This installer is available as an ISO image (.iso). The installer is a bundle of OS, DCNM and other applications needed for Dynamic Fabric Automation.

# Deployment Options

The installer available for Cisco DCNM can be deployed in one of the below modes.

## Standalone Server

All types of installers are packaged along with PostgreSQL database. The default installation steps for the respective installers result in this mode of deployment.

## High Availability for Virtual Appliances

The DCNM Virtual appliances, both OVA and ISO, can be deployed in High Availability mode to have resilience in case of application or OS failures.

# Upgrading the Cisco DCNM

Before Cisco DCNM Release 11.0(1), DCNM OVA, and ISO supported SAN functionality. From Cisco DCNM 11.0(1), OVA, and ISO does not ship with SAN support.

For Cisco DCNM SAN Management, you can upgrade to Release 11.1(1) only from DCNM Release 10.4(1), 10.4(2), and 11.0(1).

For Cisco DCNM Classic LAN, LAN Fabric, and Media Controller Deployments, you can upgrade to Release 11.1(1) only from DCNM Release 10.4(2) and 11.0(1).



---

**Note** Upgrade support from Cisco DCNM Release 10.4(1) is only for Windows/Linux.

---

The following table summarizes the type of upgrade that you must follow to upgrade to Release 11.1(1).

**Table 1: Type of Upgrade**

Current Release Number	Upgrade type to upgrade to Release 11.1(1)
11.0(1)	Inline Upgrade
10.4(2)	Upgrade using the DCNMUpgradeTool

The following table summarizes the upgrade options for Cisco DCNM Release 11.1(1) .

**Table 2: Upgrade Paths**

DCNM 10.4(2) Installation Option	DCNM 11.1(1) equivalent Deployment Option	Is SAN configured in 10.4(2)?	Is Bottom Up configured in 10.4(2)?	Is Top Down configured in 10.4(2)?	Can you Upgrade to DCNM 11.1(1)?
VXLAN	LAN Fabric	Not applicable	Not applicable	Not applicable	Yes
LAN, SAN, Auto-Config		Yes	Not relevant	Not relevant	No
		No	Yes	Not relevant	No
		No	No	Not relevant	Yes
LAN, SAN, Auto-Config	Classic LAN	Yes	Not relevant	Not relevant	No
		No	Yes	Not relevant	No
		No	No	Yes	No
		No	No	No	Yes
Not applicable	Media Controller	Not applicable	Not applicable	Not applicable	Old database cannot be migrated to 11.0(1) Release 11.0(1) can be upgraded to Release 11.1(1) using inline upgrade

## System Requirements for Cisco DCNM, Release 11.1(1)

### Server Requirements

Cisco DCNM, Release 11.1(1), supports the Cisco DCNM Server on these 64-bit operating systems:

- : LAN Fabric and Classic LAN Deployments:
  - Open Virtual Appliance (OVA) with an integrated CentOS Linux release 7.6.1810 (Core)

- ISO Virtual Appliance (ISO) with an integrated CentOS Linux release 7.6.1810 (Core)

Cisco DCNM Release 11.1(1) supports the following databases:

- PostgreSQL 9.4.5



**Note** Cisco DCNM 11.1(1) for LAN is not supported with an external database.



**Note** The ISO/OVA installation only supports the embedded PostgreSQL database.



**Note** The Cisco DCNM database size is not limited, and increases according to the number of nodes and ports that the DCNM manages with Performance Manager Collections enabled. You cannot restrict the database size.

Cisco DCNM Release 11.1(1) supports the ISO installation on a bare-metal server (no hypervisor) on the following server platforms:<sup>1</sup>

Server	Product ID (PID)	Recommended minimum memory, drive capacity, and CPU count
Cisco UCS C240M4	UCSC-C240-M4S	24G / 500G 8-vCPU Cores with Cisco hardware RAID Controller [UCSC-MRAID12G-1GB/2 GB] for the RAID operation (small)
Cisco UCS C240M4	UCSC-C240-M4L	32G / 500G 16-vCPU Cores with Cisco hardware RAID Controller [UCSC-MRAID12G- GB/2 GB] for the RAID operation (large)
Cisco UCS C240 M5S	UCSC-C240-M5SX	24G / 500G 8-vCPU Cores with Cisco hardware RAID Controller [UCSC-SAS-M5] for the RAID operation (small)
Cisco UCS C220 M5L	UCSC-C220-M5L	32G / 500G 16-vCPU Cores with Cisco hardware RAID Controller [UCSC-SAS-M5] for the RAID operation (small)

<sup>1</sup> Install the Cisco DCNM Compute node with 16vCPUs, 64G RAM, and 500GB hard disk. Ensure that you do not install the Compute node on 32G RAM server.



**Note** Cisco DCNM can work on an alternative computing hardware as well, despite Cisco is only testing on Cisco UCS.

Cisco DCNM Release 11.1(1) supports the running of the Cisco DCNM Server on the following hypervisors:

**Table 3: VMware Snapshot Support for DCNM LAN Fabric and DCNM LAN Classic Deployments**

VMware vSphere Hypervisor (ESXi)	6.0	6.5	6.7	6.7 update 1
VMware vCenter Server	6.0	6.5	6.7	6.7 update 1



**Note** Only Warm and Cold VMware snapshot is supported  
vCenter server is mandatory to deploy the Cisco DCNM OVA Installer.

### Server Resource Requirements

**Table 4: Server Resource Requirements**

Deployment	Deployment Type	Small (Lab or POC)	Large (Production)	Compute
IP for Media (IPFM)	<ul style="list-style-type: none"> <li>• OVA</li> <li>• ISO</li> </ul>	CPU: 8 vCPUs RAM: 24 GB DISK: 500 GB	CPU: 16 vCPUs RAM: 32 GB DISK: 500 GB	Not Applicable



**Note**

- Small deployment scenario for Classic LAN and SAN—Fewer than 50 switches
- Small deployment scenario for LAN Fabric—Fewer than 15 switches

### Supported Web Browsers

Cisco DCNM supports the following web browsers:

- Google Chrome version 71.0.3578.80
- Mozilla Firefox Version 63.0.3 (32/64 bit)
- Microsoft Internet Explorer 11.0.96 update version 11.0.90

### Other Supported Software

The following table lists the other software that is supported by Cisco DCNM, Release 11.1(1).

*Table 5: Other Supported Software*

Component	Features
Security	<ul style="list-style-type: none"><li>• ACS versions 4.0, 5.1, and 5.5</li><li>• Telnet Disabled: SSH Version 1, SSH Version 2, Global Enforce SNMP Privacy Encryption.</li><li>• Web Client Encryption: HTTPS with TLS 1, 1.1 and 1.2</li></ul>
OVA/ISO Installers	CentOS 7.6/Linux Kernel 3.10.x



## CHAPTER 2

# Guidelines and Limitations

---

- [Guidelines and Limitations, on page 7](#)

## Guidelines and Limitations

The guidelines and limitations for installing and upgrading Cisco DCNM are as follows:

### General Guidelines and Limitations

- Adhere to the following password requirements. If you do not comply with the requirements, the DCNM application might not function properly:
  - It must be at least 8 characters long and contain at least one alphabet and one numeral.
  - It can contain a combination of alphabets, numerals, and special characters.
  - Do not use any of these special characters in the DCNM password: <SPACE> " & \$ % ' ^ = < > ; : ` \ | / , . \*`
  - From Cisco DCNM Release 11.0(1), the characters that are allowed in the Administrative password is restricted for OVA and ISO installations. Therefore while upgrading, the old password used in DCNM 11.0(1) is not valid. However, different passwords are allowed during Upgrade.

The new Administrative password that is entered is used in the following scenarios.

—accessing the DCNM appliance via its console.

—accessing the appliance via SSH

—for applications running on the appliance, e.g. Postgres DBMS

However, after the upgrade, since Postgres DBMS is restored from the backup that is taken on DCNM 10.4(2), you must logon to the Cisco DCNM Web UI using the password used on DCNM Release 10.4(2) appliance.

- Do not interrupt the boot process (such as pressing the Ctrl+ALT + DELETE keys) when installing DCNM. If you interrupt, you must restart the installation process.
- Ensure that you configure the timezone after installation or upgrade, before performing any other operations on the Cisco DCNM Appliance. Use the NTP server for configuring timezones.

**Fresh Installation**

- For Virtual Appliances (OVA/ISO), the installer installs the Operating system and Cisco DCNM components.
- The DCNM OVA cannot be deployed by connecting the vSphere client directly to the ESXi server.



## CHAPTER 3

# Prerequisites

---

This chapter provides release-specific prerequisites information for your deployment of *Cisco Data Center Network Manager*.

- [Prerequisites for DCNM Open Virtual Appliance, on page 9](#)
- [Prerequisites for DCNM ISO Virtual Appliance, on page 10](#)
- [Prerequisites for Cisco DCNM Virtual Appliance HA, on page 10](#)

## Prerequisites for DCNM Open Virtual Appliance

Before you install the Cisco DCNM Open Virtual Appliance, you will need to meet following software and database requirements:

- VMware vCenter Server that is running on a Windows server (or alternatively, running as a virtual appliance).
- VMware ESXi host imported into vCenter.
- Three port groups on the ESXi host—DCNM Management Network, Enhanced Fabric Management Network, and InBand interface for EPL and Telemetry features.
- Determine the number of switches in your Cisco Programmable Fabric that will be managed by the Cisco DCNM Open Virtual Appliance.
- Ensure that no anti-virus software (such as McAfee) is running on the host where the VMware vCenter web client is launched for the DCNM OVA installation. If the anti-virus software is running, the DCNM installation might fail.
- The DCNM Open Virtual Appliance is compatible to be deployed in ESXi host as well. For deploying in the ESXi host, VMware vSphere Client application is mandatory.
- To upgrade from Release 10.4(2) to 11.1(1), you must download the **DCNMUpgradeTool**.



---

**Note** For more information about the CPU and memory requirements, see the *Server Resource Requirements* section of the Cisco DCNM Release Notes, Release 11.1(1).

---

## Prerequisites for DCNM ISO Virtual Appliance

Ensure that you do not add an additional Active or Standby node to an existing Active-Standby Native HA DCNM Appliance. The installation fails.

You have to set up the host or the hypervisor before you install the Cisco DCNM ISO Virtual Appliance. Based on the requirement, set up the setup Host machine or Hypervisor based on CPU and Memory requirement.

To upgrade from Release 10.4(2) to 11.1(1), you must download the **DCNMUpgradeTool**.




---

**Note** For more information about the CPU and memory requirements, see the *Server Resource Requirements* section of the Cisco DCNM Release Notes, Release 11.1(1).

---

You can set up one of the following hosts to install the DCNM ISO Virtual Appliance.

### VMware ESXi

The host machine is installed with ESXi and two port groups are created—one for EFM network and the other for DCNM Management network. Enhanced Fabric In-Band network is optional.

### Kernel-based Virtual Machine (KVM)

The host machine is installed with Red Hat Enterprise Linux (RHEL) 5.x or 6.x or 7.x, with KVM libraries and Graphical User Interface (GUI) access. The GUI allows you to access the Virtual Machine Manager, to deploy and manage the Cisco DCNM Virtual Appliances. Two networks are created—EFM network and DCNM Management network. Typically, the DCNM management network is bridged to gain access from other subnets. Refer the KVM documentation on how to create different types of networks.




---

**Note** KVM on other platforms like CentOS or Ubuntu will not be supported as it increases the compatibility matrix.

---

## Prerequisites for Cisco DCNM Virtual Appliance HA

This section contains the following topics that describe the prerequisites for obtaining a high-availability (HA) environment.

### Deploying Cisco DCNM Virtual Appliances in HA mode

You must deploy two standalone Virtual Appliance (OVA and ISO). When you deploy both Virtual Appliances, you must meet the following criteria:

- The eth0 of the active OVA must be in the same subnet as eth0 of the standby Virtual Appliance. The eth1 of the active Virtual Appliance must be in the same subnet as eth1 of the standby OVA. The eth2 of the active virtual appliance must be in the same subnet as the eth2 of the standby appliance.
- Both Virtual Appliances must be deployed with the same administrative password. This process ensures that both Virtual Appliances are duplicates of each other.

- If you try to add an additional Active or Standby node to an existing Active-Standby Native HA DCNM Appliance, the installation fails.

## Availability of Virtual IP Addresses

Two free IP addresses are needed to set up the server eth0 and eth1 interfaces. However, eth2 IP address is optional. The first IP address will be used in the management access network; it should be in the same subnet as the management access (eth0) interface of the OVAs. The second IP address should be in the same subnet as enhanced fabric management (eth1) interfaces (switch/POAP management network).

If you choose to configure inband management (eth2) for the DCNM Server, you must reserve another IP Address. For Native HA setup, the eth2 interface on Primary and Secondary servers must be in same subnet.

## Installing an NTP Server

For most of the HA functionality to work, you must synchronize the time on both OVAs by using an NTP server. The installation would typically be in the management access network (eth0) interfaces.





## CHAPTER 4

# Installing Cisco DCNM

---

This chapter contains the following sections:

- [Installing DCNM on Open Virtual Appliance, on page 13](#)
- [Installing DCNM on ISO Virtual Appliance, on page 25](#)
- [Installing Cisco DCNM Compute Node, on page 39](#)

## Installing DCNM on Open Virtual Appliance

This chapter contains the following sections:

### Downloading the Open Virtual Appliance File

The first step to install the Open Virtual Appliance is to download the `dcnm.ova` file. Point to that `dcnm.ova` file on your computer when deploying the OVF template.



---

**Note** If you plan to use HA application functions, you must deploy the `dcnm.ova` file twice.

---

#### Procedure

---

- Step 1** Go to the following site: <http://software.cisco.com/download/>.
  - Step 2** In the Select a Product search box, enter **Cisco Data Center Network Manager**.  
Click **Search** icon.
  - Step 3** Click **Data Center Network Manager** from the search results.  
A list of the latest release software for Cisco DCNM available for download is displayed.
  - Step 4** In the Latest Releases list, choose Release 11.1(1).
  - Step 5** Locate the DCNM Open Virtual Appliance Installer and click the **Download** icon.
  - Step 6** Save the `dcnm.ova` file to your directory that is easy to find when you start to deploy the OVF template.
-

## Deploying the Open Virtual Appliance as an OVF Template

After you download the Open Virtual Appliance file, you must deploy the OVF template from the vSphere Client application or the vCenter Server.




---

**Note** Deploy two OVAs for the HA setup.

---

### Procedure

---

**Step 1** Open the vCenter Server application and connect to the vCenter Server with your vCenter user credentials.

**Note** ESXi host must be added to the vCenter Server application.

If you're deploying OVF template using the ESXi 6.7, the installation fails if you use Internet Explorer browser with HTML5. Ensure that you one of the following options to successfully deploy OVF template with ESXi and 6.7:

- Mozilla Firefox browser, with HTML 5 support
- Mozilla Firefox browser, with flex\flash support
- Google Chrome browser, with HTML 5 support

**Step 2** Navigate to **Home > Inventory > Hosts and Clusters** and choose the host on which the OVF template is deployed.

**Step 3** On the correct Host, right-click and select **Deploy OVF Template**.

You can also choose **Actions > Deploy OVF Template**.

Deploy OVF Template Wizard opens.

**Step 4** On the Select template screen, navigate to the location where you have downloaded the OVA image.

You can choose the OVA file by one of the following methods:

- Select the **URL** radio button. Enter the path of the location of the image file.
- Select **Local File** radio button. Click **Browse**. Navigate to the directory where the image is stored. Click **OK**.

Click **Next**.

**Step 5** Verify the OVA template details and click **Next**.

**Step 6** On the End User License Agreement screen, read the license agreement.

Click **Accept** and click **Next**.

**Step 7** On the Select name and location screen, enter the following information:

- In the Name field, enter an appropriate name for the OVF.

**Note** Ensure that the VM name is unique within the Inventory.

- In the Browse tab, select **Datacenter** as the deployment location under the appropriate ESXi host.

Click **Next**.

**Step 8**

On the Select configuration screen, select the configuration from the drop-down list.

- Choose **Small** (Lab or POC) to configure the virtual machine with 8 vCPUs, 24GB RAM.

Choose Small for proof-of-concept and other small-scale environments with fewer switches that are not expected to grow with time.

- Choose **Large** (Production) to configure the virtual machine with 16 vCPUs, 32GB RAM.

We recommend that you use a Large deployment configuration when you are managing more devices to leverage better RAM, heap memory, and CPUs. For setups that could grow, choose Large.

Click **Next**.

**Step 9**

On the Select a resource screen, select the host on which you want to deploy the OVA template.

Click **Next**.

**Step 10**

On the Select storage screen, based on the Datastore and Available space choose the disk format and the destination storage for the virtual machine file.

- a) Select the virtual disk format from the drop-down list.

The available disk formats are:

**Note** Choose one of the thick provision types if you have enough storage capacity as required by the virtual appliance and want to set a specific allocation of space for the virtual disks.

- **Thick Provision Lazy Zeroed:** The space that is required for the virtual disk is allocated when the virtual disk is created. The data that remains on the physical device is not erased when the virtual disk is created but is zeroed out on demand later on first write from the virtual disk.
- **Thin Provision:** The disk space available is less than 100 GB. The initial disk consumption is 3GB and increases as the size of the database increases with the number of devices being managed.
- **Thick Provision Eager Zeroed:** The space that is required for the virtual disk is allocated when the virtual disk is created. Unlike the Lazy Zeroed option, the data that remains on the physical device is erased when the virtual disk is created.

**Note** With 500G, the DCNM installation will appear to be stuck with option Thick Provision Eager Zeroed. However, it takes longer time to complete.

- b) Select the VM storage policy from the drop-down list.

By default, no policy is selected.

- c) Check the **Show datastores from Storage DRS clusters** to view the clusters datastores.
- d) Select the destination storage for the virtual machine, available in the datastore.

Click **Next**.

**Step 11**

On the Select Networks screen, map the networks that are used in the OVF template to networks in your inventory.

- **dcnm-mgmt network**

This network provides connectivity (SSH, SCP, HTTP, HTTPS) to the Cisco DCNM Open Virtual Appliance. Associate this network with the portgroup that corresponds to the subnet that is associated with the DCNM Management network.

- **enhanced-fabric-mgmt**

This network provides enhanced fabric management of Nexus switches. You must associate this network with the port group that corresponds to management network of leaf and spine switches.

- **enhanced-fabric-inband**

This network provides in-band connection to the fabric. You must associate this network with port group that corresponds to a fabric in-band connection.

**Note** If you do not configure enhanced-fabric-inband network, Endpoint Locator and Telemetry features are not operational.

However, you can configure the network after installation, if required. For more information, see [Configuring Enhanced-Fabric-Inband Interface \(eth2\) Post DCNM Installation, on page 86](#).

From the Destination Network drop-down list, choose to associate the network mapping with the port group that corresponds to the subnet that is associated with the corresponding network.

If you are deploying more than one DCNM Open Virtual Appliance for HA functionality, you must meet the following criteria:

- Both OVAs must have their management access (eth0), enhanced fabric management (eth1) and inband management (eth2) interfaces in the same subnet.
- Each OVA must have their eth0-eth1 and eth2 interfaces in different subnets.
- Both OVAs must be deployed with the same administrative password. This is to ensure that both OVAs are duplicates of each other for application access. Do not use the following characters in your password: <SPACE> " & \$ % ' ^ = < > ; : ` \ | / , . \*

Click **Next**.

- Step 12** On the Customize template screen, enter the Management Properties information.  
Enter the **IP Address** (for the outside management address for DCNM), **Subnet Mask**, and **Default Gateway**.
- Note** During Native HA installation and upgrade, ensure that you provide appropriate Management Properties for both Active and Standby appliances.

Click **Next**.

- Step 13** On the Ready to Complete screen, review the deployment settings.  
Click **Back** to go to the previous screens and modify the configuration.  
Click **Finish** to deploy the OVF template.

You can see the deployment status in the Recent Tasks area on the vSphere Client.

**Note** If this deployment is a part of the upgrade process, do not Power on the VM. Edit and provide the 11.0(1) MAC address and power on the VM.

- Step 14** After the installation is complete, right click on the installed VM and select **Power > Power On**.

**Note** Before you power on the VM, ensure that you have reserved appropriate resources for the VM, such as CPU and memory, based on the chosen deployment configuration.

You can see the status in the Recent Tasks area.

**Step 15** Navigate to the Summary tab and click **Settings** icon and select **Launch Web Console**.

A message indicating that the DCNM appliance is configuring appears on the screen.

```
*****
Please point your web browser to
http://<IP-address>:<port-number>
to complete the application
*****
```

Copy and paste the URL to the browser to complete the installation, using the Web Installer.

---

### What to do next

You can choose to install DCNM in Standalone mode or Native HA mode. For more information, see [Installing the Cisco DCNM OVA in Standalone Mode, on page 17](#) or [Installing the Cisco DCNM OVA in Native HA mode, on page 19](#).

## Installing the Cisco DCNM OVA in Standalone Mode

Paste the URL displayed on the Console tab and hit Enter key. A welcome message appears.

To complete the installation of Cisco DCNM from the web installer, perform the following procedure.

### Procedure

---

**Step 1** On the Welcome to Cisco DCNM screen, click **Get Started**.

**Step 2** On the Cisco DCNM Installer screen, select **Fresh Installation – Standalone** radio button.

Click **Continue**.

**Step 3** On the Administration tab, enter the password that is used to connect to all the applications in the Cisco DCNM Open Virtual Appliance.

Adhere to the following password requirements. If you do not comply with the requirements, the DCNM application may not function properly.

- It must be at least eight characters long and contain at least one alphabet and one numeral.
- It can contain a combination of alphabets, numerals, and special characters.
- Do not use any of these special characters in the DCNM password for all platforms:

```
<SPACE> " & $ % ' ^ = < > ; : ` \ | / , . *
```

Select the **Show passwords in clear text** checkbox to view the password you have typed.


Click **Next**.

- Step 4** In the Install Mode tab, from the drop-down list, choose **Media Controller** installation mode for the OVA DCNM Appliance.
- Step 5** On the System Settings, configure the settings for the DCNM Appliance.
- In the Fully Qualified Hostname field, enter the hostname that is a fully qualified domain name (FQDN) as per RFC1123, section 2.1.
  - In the DNS Server Address field, enter the DNS IP address.
  - In the NTP Server field, enter the IP address of the NTP server.  
The value must be an IP address or RFC 1123 compliant name.

Click **Next**.

- Step 6** On the Network Settings tab, configure the network parameters.

**Figure 1: Cisco DCNM Management Network Interfaces**

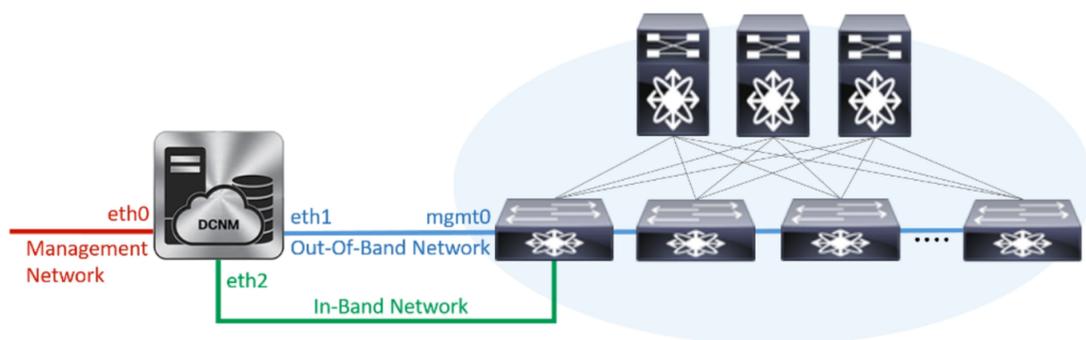

- a) In the Management Network area, verify if the auto-populated IP Address and Default Gateway address are correct. Modify, if necessary.
- (Optionally)** Enter a valid IPv6 address along with the prefix to configure the Management address and the Management Network Default IPv6 Gateway.
- b) In the Out-of-Band Network area, enter the IP address, gateway IP Address, and DNS server address. If DCNM is on the IPv6 network, configure the network with an IPv6 Address.
- Out-of-band management provides a connection to the device management ports (Typically mgmt0).
- c) In the In-Band Network area, enter the IP Address and gateway IP Address for the in-band network.
- The In-Band Network provides reachability to the devices via the front-panel ports.

**Note** If you do not configure in-band network, Endpoint Locator and Telemetry features are not operational.

However, you can configure the in-band network after installation, if necessary. For more information, see [Configuring Enhanced-Fabric-Inband Interface \(eth2\) Post DCNM Installation, on page 86](#).

**Note** To modify the already configured in-band network (eth2 interface), execute the **ifconfig eth2 0.0.0.0** command and run the **appmgr setup inband** command again. Refer to [Configuring Enhanced-Fabric-Inband Interface \(eth2\) Post DCNM Installation, on page 86](#) to run the **appmgr setup inband** command.

Click **Next**.

**Step 7** On the Summary tab, review the configuration details.

Click **Previous** to go to the previous tabs and modify the configuration. Click **Start Installation** to complete the Cisco DCNM OVA Installation for the chosen deployment mode.

A progress bar appears showing the completed percentage, description of the operation, and the elapsed time during the installation. After the progress bar shows 100%, click **Continue**.

A success message appears with the URL to access DCNM Web UI.

```
*****
Your Cisco Data Center Network Manager software has been installed.
DCNM Web UI is available at
https://<<IP Address>>:2443
You will be redirected there in 60 seconds.
Thank you
*****
```

**Note** If the Cisco DCNM is running behind a firewall, ensure that you open the port 2443 to launch Cisco DCNM Web UI.

**Note** If you try to access the DCNM Web UI using the Management IP address while the installation is still in progress, an error message appears on the console.

```
*****
*Preparing Appliance*
WRITE SAME Failed. Manually zeroing.
*****
```

### What to do next

Log on to the DCNM Web UI with appropriate credentials.

Click the **Settings** icon and choose **About DCNM**. You can view and verify the Installation type that you have deployed.

If you have configured inband management (eth2) IP addresses for device management, login to standalone server and configure the inband network reachability from eth2 of the server to the switches by using the following commands:

```
dcnm# appmgr setup inband-route --subnet switches-fabric-links-IP-subnet/mask
dcnm# appmgr setup inband-route --subnet switch-loopback-IP-subnet>/mask
```

For example: If you have four switches with all fabric links connected through 10.0.0.x/30 subnet, and if all switches are configured with the loopback interface for inband reachability in subnet 40.1.1.0/24, use the following commands:

```
dcnm# appmgr setup inband-route --subnet 10.0.0.0/24
dcnm# appmgr setup inband-route --subnet 40.1.1.0/24
```

## Installing the Cisco DCNM OVA in Native HA mode

The native HA is supported on DCNM appliances with ISO or OVA installation only.

By default, an embedded PostgreSQL database engine with the Cisco DCNM. The native HA feature allows two Cisco DCNM appliances to run as active and standby applications, with their embedded databases

synchronized in real time. Therefore, when the active DCNM is not functioning, the standby DCNM takes over with the same database data and resume the operation.

Perform the following task to set up Native HA for DCNM.

### Procedure

**Step 1** Deploy two DCNM Virtual Appliances (either OVA or ISO).

For example, let us indicate them as **dcnm1** and **dcnm2**.

**Step 2** Configure **dcnm1** as the Primary node. Paste the URL displayed on the Console tab of **dcnm1** and press **Enter** key.

A welcome message appears.

- a) On the Welcome to Cisco DCNM screen, click **Get Started**.
- b) On the Cisco DCNM Installer screen, select **Fresh Installation - HA Primary** radio button, to install **dcnm1** as Primary node.

Click **Continue**.

- c) On the Administration tab, enter the password that is used to connect to all the applications in the Cisco DCNM Open Virtual Appliance.

Adhere to the following password requirements. If you do not comply with the requirements, the DCNM application may not function properly.

- It must be at least eight characters long and contain at least one alphabet and one numeral.
- It can contain a combination of alphabets, numerals, and special characters.
- Do not use any of these special characters in the DCNM password for Linux, Windows, OVA, and ISO platforms:

```
<SPACE> " & $ % ' ^ = <> ; : ` \ | / , . *
```

Select the **Show passwords in clear text** checkbox to view the password you have typed.

Click **Next**.

- d) In the Install Mode tab, from the drop-down list, choose **Media Controller** installation mode for the DCNM Appliance.

Click **Next**.

- e) On the System Settings, configure the settings for the DCNM Appliance.


- In the Fully Qualified Hostname field, enter the hostname that is a fully qualified domain name (FQDN) as per RFC1123, section 2.1.
- In the DNS Server Address field, enter the DNS IP address.
- In the NTP Server field, enter the IP address of the NTP server.

The value must be an IP address or RFC 1123 compliant name.

Click **Next**.

- f) On the Network Settings tab, configure the network parameters.

**Figure 2: Cisco DCNM Management Network Interfaces**

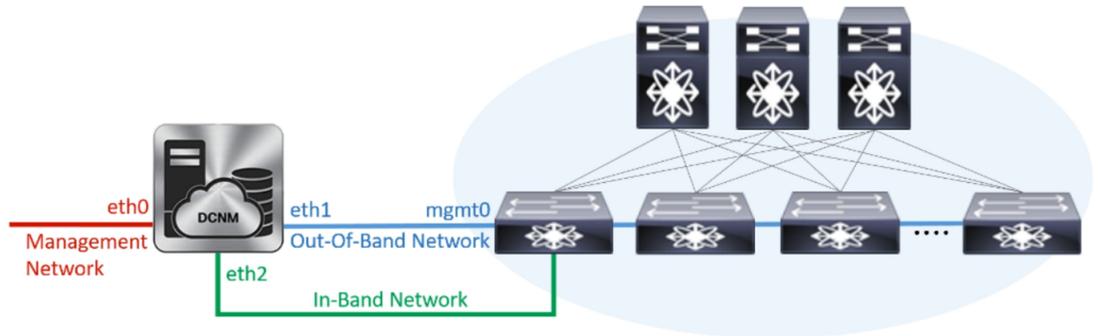

- In the Management Network area, verify if the auto-populated IP Address and Default gateway address are correct. Modify, if necessary.  
(Optionally) Enter a valid IPv6 address along with the prefix to configure the Management address and the Management Network Default IPv6 Gateway.
- In the Out-of-Band Network area, enter the IP address, gateway IP Address, and DNS server address. If DCNM is on the IPv6 network, configure the IP Address. Out-of-band management provides a connection to the device management ports (Typically mgmt0).
- In the In-Band Network area, enter the VIP Address and gateway IP Address for the in-band network. The In-Band Network provides reachability to the devices via the front-panel ports.

**Note** If you do not configure in-band network, Endpoint Locator and Telemetry features are not operational.

However, you can configure the in-band network after installation, if necessary. For more information, see [Configuring Enhanced-Fabric-Inband Interface \(eth2\) Post DCNM Installation, on page 86](#).

**Note** To modify the already configured in-band network (eth2 interface), execute the `ifconfig eth2 0.0.0.0` command and run the `appmgr setup inband` command again. Refer to [Configuring Enhanced-Fabric-Inband Interface \(eth2\) Post DCNM Installation, on page 86](#) to run the `appmgr setup inband` command

Click **Next**.

- g) On the HA Settings tab, a confirmation message appears.

You are installing the primary DCNM HA node.  
Please note that HA setup information will need to be provided when the secondary DCNM HA node is installed.

Click **Next**.

- h) On the Summary tab, review the configuration details.

Click **Previous** to go to the previous tabs and modify the configuration. Click **Start Installation** to complete the Cisco DCNM OVA Installation for the chosen deployment mode.

A progress bar appears to show the completed percentage, description of the operation, and the elapsed time during the installation. After the progress bar shows 100%, click **Continue**.

A warning message appears stating that the setup is not complete until you install the Secondary node.

```
WARNING: DCNM HA SETUP IS NOT COMPLETE!
Your Cisco Data Center Network Manager software has been installed on
this HA primary node.
However, the system will be ready to be used only after installation
of the secondary node has been completed.
Thank you.
```

**Step 3** Configure **dcnm2** as the Secondary node. Paste the URL displayed on the Console tab of **dcnm2** and hit Enter.

A welcome message appears.

- a) On the Welcome to Cisco DCNM screen, click **Get Started**.
- b) On the Cisco DCNM Installer screen, select **Fresh Installation - HA Secondary** radio button, to install **dcnm2** as Secondary node.

Click **Continue**.

- c) On the Administration tab, enter the password that is used to connect to all the applications in the Cisco DCNM Open Virtual Appliance.

**Note** The password for the secondary node must be the same as the Administrative password for primary, as entered in Step 2.c, on page 20.

Click **Next**.

- d) In the Install Mode tab, from the drop-down list, choose the same installation mode that you selected for the Primary node.

**Note** The HA installation fails if you do not choose the same installation mode as Primary node.

Click **Next**.


- e) On the System Settings, configure the settings for the DCNM Appliance.

- In the Fully Qualified Hostname field, enter the hostname that is a fully qualified domain name (FQDN) as per RFC1123, section 2.1.
- In the DNS Server Address field, enter the DNS IP address.
- In the NTP Server field, enter the IP address of the NTP server.  
The value must be an IP address or RFC 1123 compliant name.

Click **Next**.

- f) On the Network Settings tab, configure the network parameters.

Figure 3: Cisco DCNM Management Network Interfaces

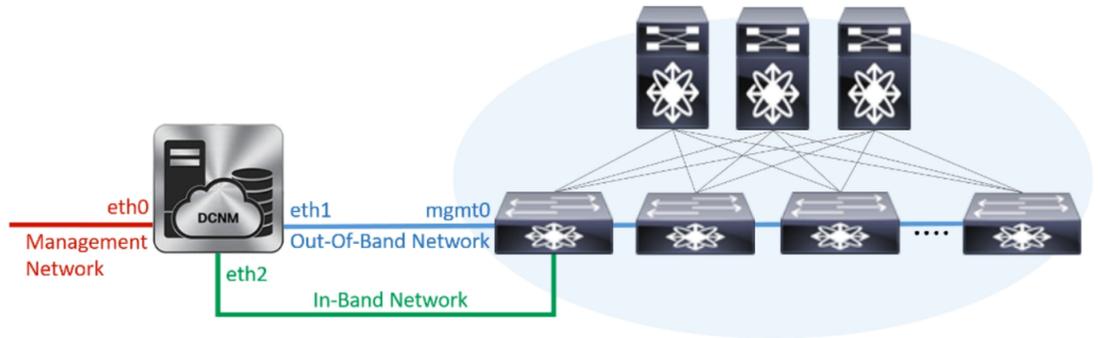

- In the Management Network area, verify if the auto-populated IP Address and Default gateway address are correct. Modify, if necessary.

**Note** Ensure that the IP Address belongs to the same Management Network as configured on the Primary node for HA setup to complete successfully.

(Optionally) Enter a valid IPv6 address along with the prefix to configure the Management address and the Management Network Default IPv6 Gateway.

- In the Out-of-Band Network area, enter the IP address, gateway IP Address, and DNS server address. If DCNM is on the IPv6 network, configure the IP Address. Out-of-band management provides a connection to the device management ports (Typically mgmt0).

**Note** Ensure that the IP Address, IP address gateway, and the IPv6 address belong to the same Out-of-Band Network as configured on the Primary node for HA setup to complete successfully.

You can also configure an IPv6 address for out-of-band management network.

- In the In-Band Network area, enter the IP Address and gateway IP Address for the in-band network. The In-Band Network provides reachability to the devices via the front-panel ports.

**Note** If you do not configure in-band network, Endpoint Locator and Telemetry features are not operational.

However, you can configure the in-band network after installation, if necessary. For more information, see [Configuring Enhanced-Fabric-Inband Interface \(eth2\) Post DCNM Installation, on page 86](#).

Click **Next**.

- g) On the HA Settings tab, configure the system settings..
  - In the Management IP Address of primary DCNM node field, enter the appropriate IP Address to access the DCNM UI.
  - In the VIP Fully qualified Host Name field, enter hostname that is a fully qualified domain name (FQDN) as per RFC1123, section 2.1.
  - Enter the Management Network VIP address, and OOB Network VIP address appropriately.
  - Enter OOB Network VIPv6 Address to configure IPv6 address for VIP.

- In the In-Band Network area, enter the VIP Address for the in-band network.

This is the VIP address for the In-Band network. This field is mandatory if you have provided an IP address for In-Band network in the Network Settings tab.

- Enter the HA ping IP address if necessary.

HA\_PING\_ADDRESS, must be different from the DCNM Active and Standby addresses.

You must configure the HA ping IP Address to avoid the Split Brain scenario. This address must belong to Enhanced Fabric management network.

Click **Next**.

- h) On the Summary tab, review the configuration details.

Click **Previous** to go to the previous tabs and modify the configuration. Click **Start Installation** to complete the Cisco DCNM OVA Installation for the chosen deployment mode.

A progress bar appears to show the completed percentage, description of the operation, and the elapsed time during the installation. After the progress bar shows 100%, click **Continue**.

A success message appears with the URL to access DCNM Web UI.

```
*****
Your Cisco Data Center Network Manager software has been installed.
DCNM Web UI is available at
https://<<IP Address>>:2443
You will be redirected there in 60 seconds.
Thank you
*****
```

**Note** If the Cisco DCNM is running behind a firewall, ensure that you open the port 2443 to launch Cisco DCNM Web UI.

---

## What to do next

Log on to the DCNM Web UI with appropriate credentials.

Click the **Settings** icon and choose **About DCNM**. You can view and verify the Installation type that you have deployed.

If you have configured inband management (eth2) IP addresses for device management, login to standalone server and configure the inband network reachability from eth2 of the server to the switches by using the following commands:

```
dcnm# appmgr setup inband-route --subnet switches-fabric-links-IP-subnet/mask
dcnm# appmgr setup inband-route --subnet switch-loopback-IP-subnet>/mask
```

For example: If you have four switches with all fabric links connected through 10.0.0.x/30 subnet, and if all switches are configured with the loopback interface for inband reachability in subnet 40.1.1.0/24, use the following commands:

```
dcnm# appmgr setup inband-route --subnet 10.0.0.0/24
dcnm# appmgr setup inband-route --subnet 40.1.1.0/24
```

# Installing DCNM on ISO Virtual Appliance

This chapter contains the following sections:

## Downloading the ISO Virtual Appliance File

The first step to installing the ISO Virtual Appliance is to download the `dcnm.iso` file. You must point to that `dcnm.iso` file on your computer when preparing the server for installing DCNM.



---

**Note** If you plan to use HA application functions, you must deploy the `dcnm.iso` file twice.

---

### Procedure

---

- Step 1** Go to the following site: <http://software.cisco.com/download/>.
  - Step 2** In the Select a Product search box, enter Cisco Data Center Network Manager.  
Click on Search icon.
  - Step 3** Click on **Data Center Network Manager** from the search results.  
A list of the latest release software for Cisco DCNM available for download is displayed.
  - Step 4** In the Latest Releases list, choose Release 11.1(1).
  - Step 5** Locate the DCNM ISO Virtual Appliance Installer and click the **Download** icon.
  - Step 6** Locate the DCNM VM templates at DCNM Virtual Appliance definition files for VMWare (.ovf) and KVM (domain XMLs) environment and click **Download**.
  - Step 7** Save the `dcnm.iso` file to your directory that will be easy to find when you being the installation.
- 

### What to do next

You can choose to install DCNM On KVM or Baremetal servers. Refer to [Installing the DCNM ISO Virtual Appliance on KVM, on page 29](#) or [Installing the DCNM ISO Virtual Appliance on UCS \(Bare Metal\), on page 25](#) for more information.

## Installing the DCNM ISO Virtual Appliance on UCS (Bare Metal)

Perform the following tasks to install the DCNM ISO virtual appliance on UCS.

### Procedure

---

- Step 1** Launch Cisco Integrated Management Controller (CIMC).
- Step 2** Click the **Launch KVM** button.

You can either launch Java-based KVM or HTML-based KVM.

**Step 3** Click the URL displayed on the window to continue loading the KVM client application.

**Step 4** On the Menu bar, click **Virtual Media > Activate Virtual Devices**.

**Step 5** Click **Virtual Media** and choose one of the following mediums to browse and upload DCNM ISO images from the following:

- Map CD/DVD
- Map Removable Disk
- Map Floppy Disk

Navigate to the location where the ISO image is located and load the ISO image.

**Step 6** Select **Power > Reset System (warm boot)** and Ok to continue and restart the UCS box.

**Step 7** Press **F6** interrupt the reboot process when the server starts to select a boot device. The boot selection menu appears.


For more information about using the UCS KVM Console window, see the Cisco UCS Server Configuration Utility, Release 3.1 User Guide at the following URL:

[https://www.cisco.com/c/en/us/td/docs/unified\\_computing/ucs/sw/ucsscu/user/guide/31/UCS\\_SCU/booting.html#wp1078073](https://www.cisco.com/c/en/us/td/docs/unified_computing/ucs/sw/ucsscu/user/guide/31/UCS_SCU/booting.html#wp1078073)

**Step 8** Use the arrow keys to select Cisco Virtual CD/DVD and press **Enter**. The server boots with the DCNM ISO image from the mapped location.

**Note** The following image highlights UEFI installation. However, you can also choose **Cisco vKVM-Mapped vDVD1.22** for BIOS installation. ISO can be booted in both modes, BIOS, and UEFI.

UEFI is mandatory for a system with minimum of 2TB disks.

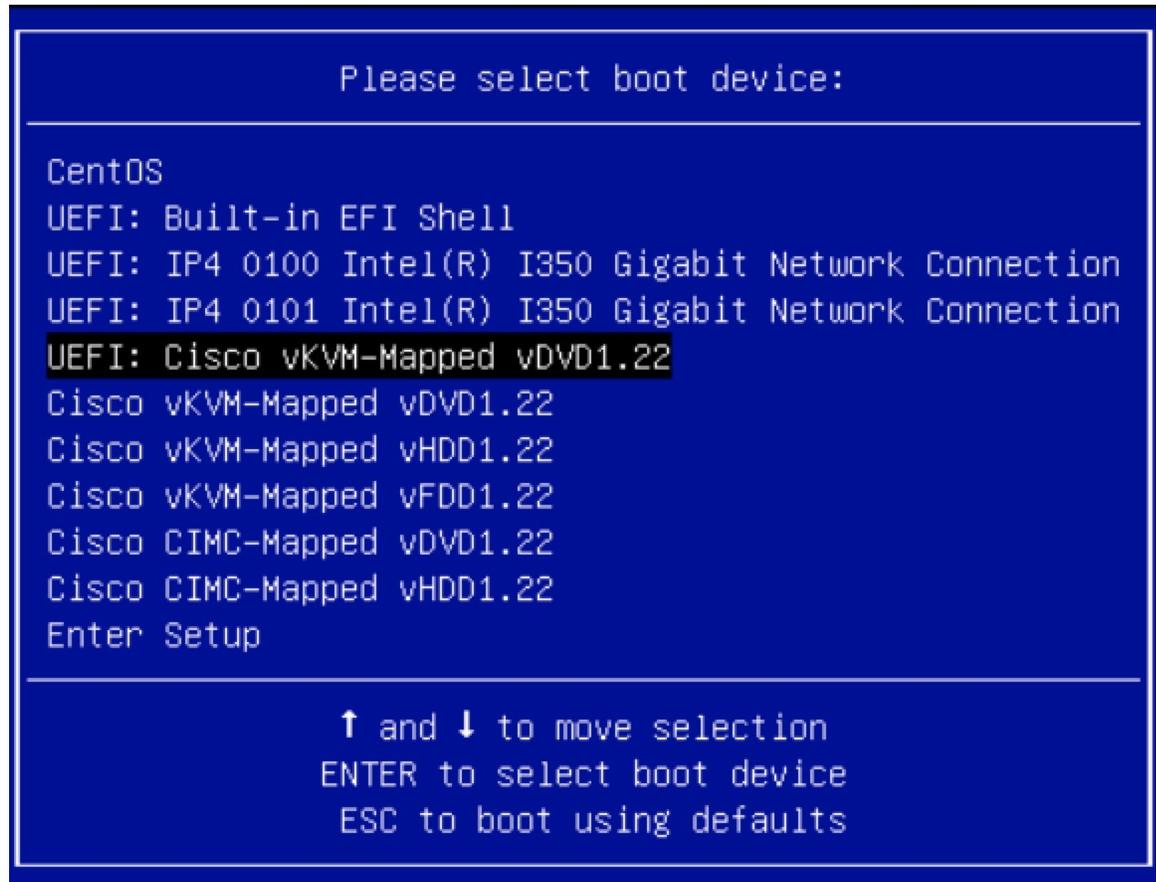

For Cisco UCS with the disk size of 2TB or higher and with 4K sector size drivers, the UEFI boot option is required. For more information, see [UEFI Boot Mode](#).

- Step 9** Select **Install Cisco Data Center Network Manager** using the up or down arrow keys. Press **Enter**.  
The option shown in the following image appears when the ISO image is booted with UEFI.

```

Boot existing Cisco Data Center Network Manager
Install Cisco Data Center Network Manager
Rescue Cisco Data Center Network Manager

Use the ▲ and ▼ keys to change the selection.
Press 'e' to edit the selected item, or 'c' for a command prompt.

```

- Step 10** On the Cisco Management Network Management screen, select the interface for the networks. The list of available interfaces is displayed on the screen.
- Choose the Management Interface (eth0) and Out-of-Band interface (eth1) from the Network Interface List. You can also configure the in-band interface (eth2) if necessary.

```

*****
Cisco Data Center Network Management
*****

Network Interface List
-----
1) 0b:00.0 Cisco Systems Inc VIC Ethernet NIC (rev a2)
   Address: 70:69:5a:f9:5e:19   Link:UP
2) 0c:00.0 Cisco Systems Inc VIC Ethernet NIC (rev a2)
   Address: 70:69:5a:f9:5e:1a   Link:DOWN
3) 01:00.0 Intel Corporation I350 Gigabit Network Connection (rev 01)
   Address: 00:be:75:49:c2:86   Link:UP
4) 01:00.1 Intel Corporation I350 Gigabit Network Connection (rev 01)
   Address: 00:be:75:49:c2:87   Link:UP

Please select the interfaces to use from the list above:
Management Interface (eth0) : 3
Out-Of-Band Interface (eth1) : 4

Configure In-Band Interface (eth2)? [y/n]: y
In-Band Interface (eth2) : 1

```

**Note** If you do not configure In-Band interface, Endpoint Locator and Telemetry features are not operational.

However, you can configure the network after installation, if required. For more information, see [Configuring Enhanced-Fabric-Inband Interface \(eth2\) Post DCNM Installation, on page 86](#).

- Step 11** Review the selected interfaces. Press **y** to confirm and continue with the installation.
- Step 12** Configure the Management Network for Cisco DCNM. Enter the IP address, Subnet Mask, and Gateway. Press **y** to continue with the installation.
- After the installation is complete, the system reboots and a message indicating that the DCNM appliance is configuring appears on the screen.
- ```
*****
Please point your web browser to
http://<IP-address>:<port-number>
to complete the application
*****
```
- Copy and paste the URL to the browser to complete the installation using the Web Installer.

---

### What to do next

You can choose to install DCNM in Standalone mode or Native HA mode. Refer to [Installing Cisco DCNM ISO in Standalone Mode, on page 31](#) or [Installing the Cisco DCNM ISO in Native HA mode, on page 33](#) for more information.

## Installing the DCNM ISO Virtual Appliance on KVM

Perform the following tasks to install the ISO virtual appliance on KVM.

### Procedure

---

- Step 1** Unzip and extract **dcnm-va-ovf-kvm-files.11.1.1.zip** and locate the **dcnm-kvm-vm.xml** file.
- Step 2** Upload this file on the RHEL server that is running KVM to the same location as the ISO.
- Step 3** Connect to the RHEL server running KVM via SCP File transfer terminal.
- Step 4** Upload the **dcnm-va.11.1.1.iso** and **dcnm-kvm-vm.xml** to the RHEL server.
- Step 5** Close the file transfer session.
- Step 6** Connect to the RHEL server running KVM via SSH terminal.
- Step 7** Navigate to the location where both the ISO and domain XMLs is downloaded.
- Step 8** Create the VM (or Domains, as they are known in the KVM terminology) using the **virsh** command.
- ```
sudo virsh define [{dcnm-kvm-vm-compute.xml | dcnm-kvm-vm-large.xml |
dcnm-kvm-vm-small.xml}]
```
- Step 9** Enable a VNC server and open the required firewall ports.
- Step 10** Close the SSH session.
- Step 11** Connect to the RHEL server running KVM via a VNC terminal.
- Step 12** Navigate to **Applications > System Tools > Virtual Machine Manager (VMM)**.  
A VM is created in the Virtual Machine Manager.
- Step 13** From Virtual Machine Manager, edit the VM by selecting the VM in the listing. Click **Edit > Virtual Machine Details > Show virtual hardware details**.

**Step 14** In the Virtual Hardware Details, navigate to **Add Hardware > Storage**.

**Step 15** Create a hard disk with Device type with the following specifications:

- device type: IDE disk
- cache-mode: default
- storage format: raw

We recommend that you use storage size of 500GB.

**Step 16** Select IDE CDROM on the edit window of the Virtual Machine and click **Connect**.

**Step 17** Navigate to dcnm-va.iso and click **OK**.

**Step 18** Select both the NICs and assign appropriate networks that are created.

**Step 19** Power on the Virtual Machine.

**Note** Before you power on the VM, ensure that you have reserved appropriate resources for the VM, such as CPU and memory, based on the chosen deployment configuration.

The operating system is installed.

**Step 20** On the Cisco Management Network Management screen, select the interface for the networks. The list of available interfaces is displayed on the screen.

Choose the Management Interface (eth0) and Out-of-Band interface (eth1) from the Network Interface List. You can also configure in-band interface (eth2) if necessary.

**Note** If you do not configure in-band interface (eth2), Endpoint Locator and Telemetry features are not operational.

However, you can configure the network after installation, if required. For more information, see [Configuring Enhanced-Fabric-Inband Interface \(eth2\) Post DCNM Installation, on page 86](#).

**Step 21** Press **y** to confirm and continue with the installation.

**Step 22** Configure the Management Network. Enter the IP address, Subnet Mask, and Gateway. Press **y** to continue with the installation.

After the installation is complete, the system reboots and a message indicating that the DCNM appliance is configuring appears on the screen.

```
*****
Please point your web browser to
http://<IP-address>:<port-number>
to complete the application
*****
```

Copy and paste the URL to the browser to complete the installation using the Web Installer.

---

### What to do next

You can choose to install DCNM in Standalone mode or Native HA mode. Refer to [Installing Cisco DCNM ISO in Standalone Mode, on page 31](#) or [Installing the Cisco DCNM ISO in Native HA mode, on page 33](#) for more information.

## Installing Cisco DCNM ISO in Standalone Mode

Paste the URL displayed on the Console tab and hit Enter key. A welcome message appears.


To complete the installation of Cisco DCNM from the web installer, perform the following procedure.

### Procedure

---

- Step 1** On the Welcome to Cisco DCNM screen, click **Get Started**.
- Step 2** On the Cisco DCNM Installer screen, select **Fresh Installation – Standalone** radio button.  
Click **Continue**.
- Step 3** On the Administration tab, enter the password that is used to connect to all the applications in the Cisco DCNM Open Virtual Appliance.  
Adhere to the following password requirements. If you do not comply with the requirements, the DCNM application may not function properly.
- It must be at least eight characters long and contain at least one alphabet and one numeral.
  - It can contain a combination of alphabets, numerals, and special characters.
  - Do not use any of these special characters in the DCNM password for all platforms:  
<SPACE> " & \$ % ' ^ = < > ; : ` \ | / , . \*
- Select the **Show passwords in clear text** checkbox to view the password you have typed.  
Click **Next**.
- Step 4** In the Install Mode tab, from the drop-down list, choose **Media Controller** installation mode for the OVA DCNM Appliance.
- Step 5** On the System Settings, configure the settings for the DCNM Appliance.
- In the Fully Qualified Hostname field, enter the hostname that is a fully qualified domain name (FQDN) as per RFC1123, section 2.1.
  - In the DNS Server Address field, enter the DNS IP address.
  - In the NTP Server field, enter the IP address of the NTP server.  
The value must be an IP address or RFC 1123 compliant name.
- Click **Next**.
- Step 6** On the Network Settings tab, configure the network parameters.

Figure 4: Cisco DCNM Management Network Interfaces

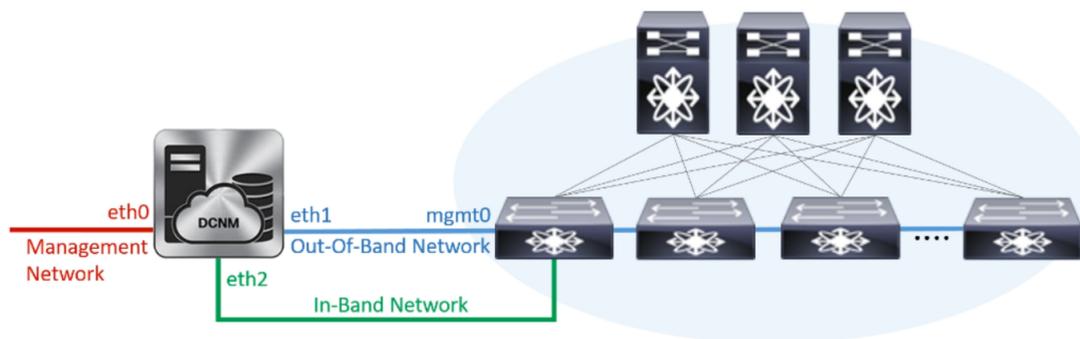

- a) In the Management Network area, verify if the auto-populated IP Address and Default Gateway address are correct. Modify, if necessary.

**(Optionally)** Enter a valid IPv6 address along with the prefix to configure the Management address and the Management Network Default IPv6 Gateway.

- b) In the Out-of-Band Network area, enter the IP address, gateway IP Address, and DNS server address. If DCNM is on the IPv6 network, configure the network with an IPv6 Address.

Out-of-band management provides a connection to the device management ports (Typically mgmt0).

- c) In the In-Band Network area, enter the IP Address and gateway IP Address for the in-band network.

The In-Band Network provides reachability to the devices via the front-panel ports.

**Note** If you do not configure in-band network, Endpoint Locator and Telemetry features are not operational.

However, you can configure the in-band network after installation, if necessary. For more information, see [Configuring Enhanced-Fabric-Inband Interface \(eth2\) Post DCNM Installation, on page 86](#).

**Note** To modify the already configured in-band network (eth2 interface), execute the **ifconfig eth2 0.0.0.0** command and run the **appmgr setup inband** command again. Refer to [Configuring Enhanced-Fabric-Inband Interface \(eth2\) Post DCNM Installation, on page 86](#) to run the **appmgr setup inband** command.

Click **Next**.

**Step 7** On the Summary tab, review the configuration details.

Click **Previous** to go to the previous tabs and modify the configuration. Click **Start Installation** to complete the Cisco DCNM OVA Installation for the chosen deployment mode.

A progress bar appears showing the completed percentage, description of the operation, and the elapsed time during the installation. After the progress bar shows 100%, click **Continue**.

A success message appears with the URL to access DCNM Web UI.

```
*****
Your Cisco Data Center Network Manager software has been installed.
DCNM Web UI is available at
https://<<IP Address>>:2443
You will be redirected there in 60 seconds.
```

Thank you

\*\*\*\*\*

**Note** If the Cisco DCNM is running behind a firewall, ensure that you open the port 2443 to launch Cisco DCNM Web UI.

**Note** If you try to access the DCNM Web UI using the Management IP address while the installation is still in progress, an error message appears on the console.

```
*****
*Preparing Appliance*
WRITE SAME Failed. Manually zeroing.
*****
```

### What to do next

Log on to the DCNM Web UI with appropriate credentials.

Click the **Settings** icon and choose **About DCNM**. You can view and verify the Installation type that you have deployed.

If you have configured inband management (eth2) IP addresses for device management, login to standalone server and configure the inband network reachability from eth2 of the server to the switches by using the following commands:

```
dcnm# appmgr setup inband-route --subnet switches-fabric-links-IP-subnet/mask
dcnm# appmgr setup inband-route --subnet switch-loopback-IP-subnet>/mask
```

For example: If you have four switches with all fabric links connected through 10.0.0.x/30 subnet, and if all switches are configured with the loopback interface for inband reachability in subnet 40.1.1.0/24, use the following commands:

```
dcnm# appmgr setup inband-route --subnet 10.0.0.0/24
dcnm# appmgr setup inband-route --subnet 40.1.1.0/24
```

## Installing the Cisco DCNM ISO in Native HA mode

The native HA is supported on DCNM appliances with ISO or OVA installation only.

By default, an embedded PostgreSQL database engine with the Cisco DCNM. The native HA feature allows two Cisco DCNM appliances to run as active and standby applications, with their embedded databases synchronized in real time. Therefore, when the active DCNM is not functioning, the standby DCNM takes over with the same database data and resume the operation.

Perform the following task to set up Native HA for DCNM.

### Procedure

- 
- Step 1** Deploy two DCNM Virtual Appliances (either OVA or ISO).  
For example, let us indicate them as **dcnm1** and **dcnm2**.
- Step 2** Configure **dcnm1** as the Primary node. Paste the URL displayed on the Console tab of **dcnm1** and press **Enter** key.

A welcome message appears.

- a) On the Welcome to Cisco DCNM screen, click **Get Started**.
- b) On the Cisco DCNM Installer screen, select **Fresh Installation - HA Primary** radio button, to install **dcnm1** as Primary node.

Click **Continue**.

- c) On the Administration tab, enter the password that is used to connect to all the applications in the Cisco DCNM Open Virtual Appliance.

Adhere to the following password requirements. If you do not comply with the requirements, the DCNM application may not function properly.

- It must be at least eight characters long and contain at least one alphabet and one numeral.
- It can contain a combination of alphabets, numerals, and special characters.
- Do not use any of these special characters in the DCNM password for Linux, Windows, OVA, and ISO platforms:

<SPACE> " & \$ % ' ^ = < > ; : ` \ | / , . \*`

Select the **Show passwords in clear text** checkbox to view the password you have typed.

Click **Next**.

- d) In the Install Mode tab, from the drop-down list, choose **Media Controller** installation mode for the DCNM Appliance.

Click **Next**.


- e) On the System Settings, configure the settings for the DCNM Appliance.

- In the Fully Qualified Hostname field, enter the hostname that is a fully qualified domain name (FQDN) as per RFC1123, section 2.1.
- In the DNS Server Address field, enter the DNS IP address.
- In the NTP Server field, enter the IP address of the NTP server.  
The value must be an IP address or RFC 1123 compliant name.

Click **Next**.

- f) On the Network Settings tab, configure the network parameters.

Figure 5: Cisco DCNM Management Network Interfaces

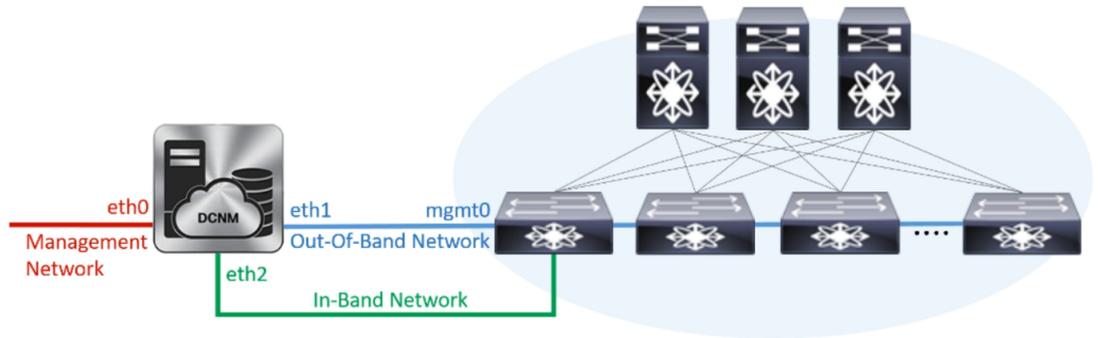

- In the Management Network area, verify if the auto-populated IP Address and Default gateway address are correct. Modify, if necessary.  
(Optionally) Enter a valid IPv6 address along with the prefix to configure the Management address and the Management Network Default IPv6 Gateway.
- In the Out-of-Band Network area, enter the IP address, gateway IP Address, and DNS server address. If DCNM is on the IPv6 network, configure the IP Address. Out-of-band management provides a connection to the device management ports (Typically mgmt0).
- In the In-Band Network area, enter the VIP Address and gateway IP Address for the in-band network. The In-Band Network provides reachability to the devices via the front-panel ports.

**Note** If you do not configure in-band network, Endpoint Locator and Telemetry features are not operational.

However, you can configure the in-band network after installation, if necessary. For more information, see [Configuring Enhanced-Fabric-Inband Interface \(eth2\) Post DCNM Installation, on page 86](#).

**Note** To modify the already configured in-band network (eth2 interface), execute the **ifconfig eth2 0.0.0.0** command and run the **appmgr setup inband** command again. Refer to [Configuring Enhanced-Fabric-Inband Interface \(eth2\) Post DCNM Installation, on page 86](#) to run the **appmgr setup inband** command

Click **Next**.

- g) On the HA Settings tab, a confirmation message appears.

```
You are installing the primary DCNM HA node.
Please note that HA setup information will need to
be provided when the secondary DCNM HA node is
installed.
```

Click **Next**.

- h) On the Summary tab, review the configuration details.

Click **Previous** to go to the previous tabs and modify the configuration. Click **Start Installation** to complete the Cisco DCNM OVA Installation for the chosen deployment mode.

A progress bar appears to show the completed percentage, description of the operation, and the elapsed time during the installation. After the progress bar shows 100%, click **Continue**.

A warning message appears stating that the setup is not complete until you install the Secondary node.

```
WARNING: DCNM HA SETUP IS NOT COMPLETE!
Your Cisco Data Center Network Manager software has been installed on
this HA primary node.
However, the system will be ready to be used only after installation
of the secondary node has been completed.
Thank you.
```

**Step 3** Configure **dcnm2** as the Secondary node. Paste the URL displayed on the Console tab of **dcnm2** and hit Enter.

A welcome message appears.

- a) On the Welcome to Cisco DCNM screen, click **Get Started**.
- b) On the Cisco DCNM Installer screen, select **Fresh Installation - HA Secondary** radio button, to install **dcnm2** as Secondary node.

Click **Continue**.

- c) On the Administration tab, enter the password that is used to connect to all the applications in the Cisco DCNM Open Virtual Appliance.

**Note** The password for the secondary node must be the same as the Administrative password for primary, as entered in Step 2.c, on page 34.

Click **Next**.

- d) In the Install Mode tab, from the drop-down list, choose the same installation mode that you selected for the Primary node.

**Note** The HA installation fails if you do not choose the same installation mode as Primary node.

Click **Next**.

- e) On the System Settings, configure the settings for the DCNM Appliance.


- In the Fully Qualified Hostname field, enter the hostname that is a fully qualified domain name (FQDN) as per RFC1123, section 2.1.
- In the DNS Server Address field, enter the DNS IP address.
- In the NTP Server field, enter the IP address of the NTP server.

The value must be an IP address or RFC 1123 compliant name.

Click **Next**.

- f) On the Network Settings tab, configure the network parameters.

Figure 6: Cisco DCNM Management Network Interfaces

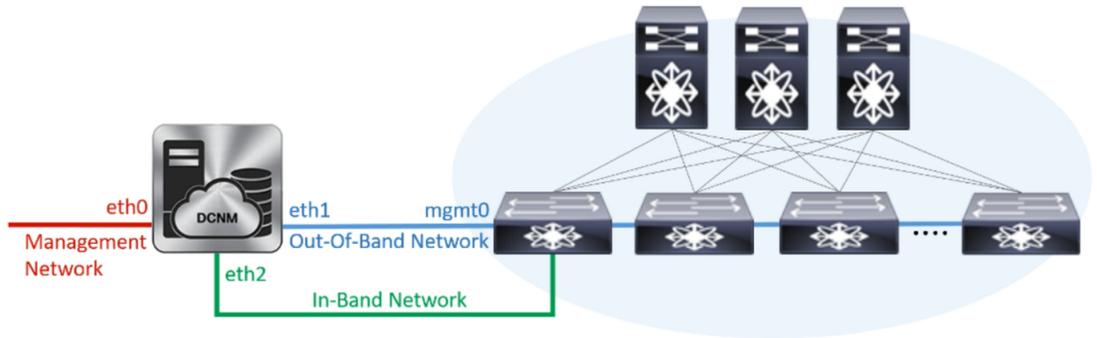

- In the Management Network area, verify the auto-populated IP Address and Default gateway address are correct. Modify, if necessary.

**Note** Ensure that the IP Address belongs to the same Management Network as configured on the Primary node for HA setup to complete successfully.

(Optionally) Enter a valid IPv6 address along with the prefix to configure the Management address and the Management Network Default IPv6 Gateway.

- In the Out-of-Band Network area, enter the IP address, gateway IP Address, and DNS server address. If DCNM is on the IPv6 network, configure the IP Address. Out-of-band management provides a connection to the device management ports (Typically mgmt0).

**Note** Ensure that the IP Address, IP address gateway, and the IPv6 address belong to the same Out-of-Band Network as configured on the Primary node for HA setup to complete successfully.

You can also configure an IPv6 address for out-of-band management network.

- In the In-Band Network area, enter the IP Address and gateway IP Address for the in-band network. The In-Band Network provides reachability to the devices via the front-panel ports.

**Note** If you do not configure in-band network, Endpoint Locator and Telemetry features are not operational.

However, you can configure the in-band network after installation, if necessary. For more information, see [Configuring Enhanced-Fabric-Inband Interface \(eth2\) Post DCNM Installation, on page 86](#).

Click **Next**.

- g) On the HA Settings tab, configure the system settings..
  - In the Management IP Address of primary DCNM node field, enter the appropriate IP Address to access the DCNM UI.
  - In the VIP Fully qualified Host Name field, enter hostname that is a fully qualified domain name (FQDN) as per RFC1123, section 2.1.
  - Enter the Management Network VIP address, and OOB Network VIP address appropriately.
  - Enter OOB Network VIPv6 Address to configure IPv6 address for VIP.

- In the In-Band Network area, enter the VIP Address for the in-band network.

This is the VIP address for the In-Band network. This field is mandatory if you have provided an IP address for In-Band network in the Network Settings tab.

- Enter the HA ping IP address if necessary.

HA\_PING\_ADDRESS, must be different from the DCNM Active and Standby addresses.

You must configure the HA ping IP Address to avoid the Split Brain scenario. This address must belong to Enhanced Fabric management network.

Click **Next**.

- h) On the Summary tab, review the configuration details.

Click **Previous** to go to the previous tabs and modify the configuration. Click **Start Installation** to complete the Cisco DCNM OVA Installation for the chosen deployment mode.

A progress bar appears to show the completed percentage, description of the operation, and the elapsed time during the installation. After the progress bar shows 100%, click **Continue**.

A success message appears with the URL to access DCNM Web UI.

```
*****
Your Cisco Data Center Network Manager software has been installed.
DCNM Web UI is available at
https://<<IP Address>>:2443
You will be redirected there in 60 seconds.
Thank you
*****
```

**Note** If the Cisco DCNM is running behind a firewall, ensure that you open the port 2443 to launch Cisco DCNM Web UI.

---

## What to do next

Log on to the DCNM Web UI with appropriate credentials.

Click the **Settings** icon and choose **About DCNM**. You can view and verify the Installation type that you have deployed.

If you have configured inband management (eth2) IP addresses for device management, login to standalone server and configure the inband network reachability from eth2 of the server to the switches by using the following commands:

```
dcnm# appmgr setup inband-route --subnet switches-fabric-links-IP-subnet/mask
dcnm# appmgr setup inband-route --subnet switch-loopback-IP-subnet>/mask
```

For example: If you have four switches with all fabric links connected through 10.0.0.x/30 subnet, and if all switches are configured with the loopback interface for inband reachability in subnet 40.1.1.0/24, use the following commands:

```
dcnm# appmgr setup inband-route --subnet 10.0.0.0/24
dcnm# appmgr setup inband-route --subnet 40.1.1.0/24
```

# Installing Cisco DCNM Compute Node

Paste the URL displayed on the Console tab and hit Enter key. A welcome message appears.



**Note** Compute nodes allow users to scale DCNM as application load can be shared across all the compute nodes instead of the usual 1 or 2 (if you have HA) nodes.

To complete the installation of Cisco DCNM Compute Node from the web installer, perform the following procedure.

## Before you begin

Ensure that you have 16 vCPUs, 64GB RAM and 500GB hard disc to install compute node.

## Procedure

- 
- Step 1** On the Welcome to Cisco DCNM screen, click **Get Started**.
- Step 2** On the Cisco DCNM Installer screen, select the **Fresh Installation – Standalone** radio button.  
Click **Continue**.
- Step 3** On the Administration tab, enter the password that is used to connect to all the applications in the Cisco DCNM Open Virtual Appliance.  
Adhere to the following password requirements. If you do not comply with the requirements, the DCNM application may not function properly.
- It must be at least eight characters long and contain at least one alphabet and one numeral.
  - It can contain a combination of alphabets, numerals, and special characters.
  - Do not use any of these special characters in the DCNM password for all platforms:  
<SPACE> " & \$ % ' ^ = < > ; : ` \ | / , . \*
- Select the **Show passwords in clear text** checkbox to view the password you have typed.  
Click **Next**.
- Step 4** In the Install Mode tab, from the drop-down list, choose **Compute** to deploy a DCNM Compute node.  
Click **Next**.
- Step 5** On the System Settings, configure the settings for the DCNM Compute node.
- In the Fully Qualified Hostname field, enter the hostname that is a fully qualified domain name (FQDN) as per RFC1123, section 2.1.
  - In the DNS Server Address field, enter the DNS IP address.
  - In the NTP Server field, enter the IP address of the NTP server.  
The value must be an IP address or RFC 1123 compliant name.


- In the DCNM Server IP address field, enter the IP address that is assigned to the DCNM Server on the Management Network.

**Note** If you are installing Compute node on a Cisco DCNM Native HA setup, enter the VIP address.

Click **Next**.

**Step 6** On the Network Settings tab, configure the network parameters.

**Figure 7: Cisco DCNM Management Network Interfaces**

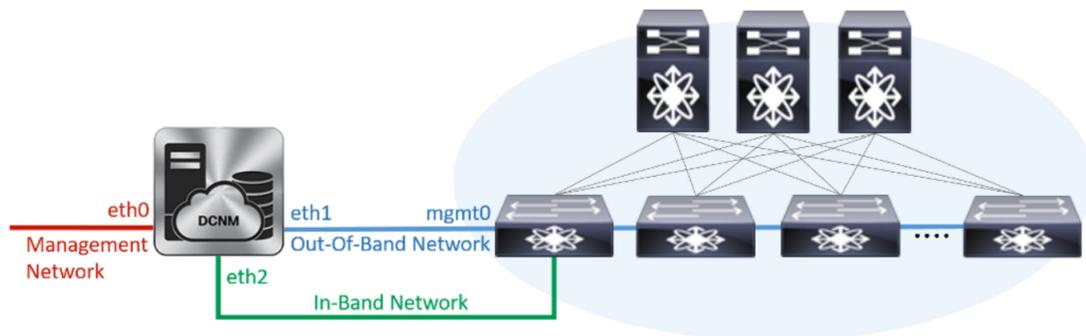

- In the Management Network area, verify if the autopopulated IP Address and Default gateway address are correct. Modify, if necessary.  
(Optionally) Enter a valid IPv6 address along with the prefix to configure the Management address and the Management Network Default IPv6 Gateway.
- In the Out-of-Band Network area, enter the IP address, gateway IP Address, and DNS server address. If DCNM is on the IPv6 network, configure the IP Address.  
Out-of-band management provides a connection to the device management ports (Typically mgmt0).
- (Optional) In the In-Band Network area, enter the IP Address and gateway IP Address for the in-band network.

The In-Band Network provides reachability to the devices via the front-panel ports.

**Note** If you do not configure in-band network, Endpoint Locator and Telemetry features are not operational.

However, you can configure the in-band network after installation, if necessary. For more information, see [Configuring Enhanced-Fabric-Inband Interface \(eth2\) Post DCNM Installation, on page 86](#).

Click **Next**.

**Step 7** On the Summary tab, review the configuration details.

Click **Previous** to go to the previous tabs and modify the configuration. Click **Start Installation** to complete the Cisco DCNM OVA Installation for the chosen deployment mode.

A progress bar appears to show the completed percentage, description of the operation, and the elapsed time during the installation. After the progress bar shows 100%, click **Continue**.

A success message appears with the URL to access DCNM Compute Node.

```
*****
Your Cisco DCNM Compute Node has been installed.
Click on the following link to go to DCNM GUI's Application page:
DCNM GUI's Applications
You will be redirected there in 60 seconds.
Thank you
*****
```

---

### What to do next

Log on to the DCNM Web UI with appropriate credentials.

Click the **Settings** icon and choose **About DCNM**. You can view and verify the Installation type that you have deployed.





# CHAPTER 5

## Upgrading Cisco DCNM

This section includes instructions for upgrading your Cisco DCNM Appliance installation in the following scenarios:

Cisco DCNM Installer version	Release from which you can upgrade
DCNM 11.1(1)	DCNM 11.0(1) using Inline Upgrade

The following table summarizes the upgrade options for Cisco DCNM Release 11.1(1).

**Table 6: Type of Upgrade**

Current Release Number	Upgrade type to upgrade to Release 11.1(1)
11.0(1)	Inline Upgrade
10.4(2)	Upgrade using the DCNMUpgradeTool

Adhere to the following password requirements. If you do not comply with the requirements, the DCNM application might not function properly:

- It must be at least 8 characters long and contain at least one alphabet and one numeral.
- It can contain a combination of alphabets, numerals, and special characters.
- Do not use any of these special characters in the DCNM password for all platforms:  
<SPACE> " & \$ % ' ^ = < > ; : ` \ | / , . \*
  - accessing the DCNM appliance via its console.
  - accessing the appliance via SSH
  - for applications running on the appliance, e.g. Postgres DBMS

This chapter contains the following:

- [Upgrading ISO or OVA using the DCNM Upgrade Tool, on page 44](#)
- [Upgrading ISO or OVA through Inline Upgrade, on page 52](#)

# Upgrading ISO or OVA using the DCNM Upgrade Tool

This section contains the procedure to download **DCNMUpgradeTool** and upgrade DCNM to the latest version.

## Downloading the DCNM Upgrade Tool

The first step to upgrading the DCNM is to download the DCNMUpgradeTool script.



**Note** If you plan to use HA application functions, you must deploy the `dcnm.ova` or `dcnm.iso` file twice.

### Procedure

- 
- Step 1** Go to the following site: <http://software.cisco.com/download/>.
  - Step 2** In the Select a Product search box, enter **Cisco Data Center Network Manager**.  
Click the **Search** icon.
  - Step 3** Click on **Data Center Network Manager** from the search results.  
A list of the latest release software for Cisco DCNM available for download is displayed.
  - Step 4** In the Latest Releases list, choose Release 11.1(1).
  - Step 5** Locate the DCNM Upgrade Tool and click **Download** icon.  
Save the file to the appliance `/root` directory.
- 

## Backup Using the Upgrade Tool

Beginning with Release 11.0(1), you can download the DCNMUpgradeTool from the Software Downloads page, to take a backup of the DCNM Appliance. This data from this backup file is restored after you upgrade the appliance to DCNM Release 11.1(1).

Perform the following task to run the DCNMUpgradeTool to take a backup of all the applications and data on DCNM 10.4(2).

### Before you begin

Ensure that you have copied the DCNMUpgradeTool script to the `/root` directory of your appliance. Enable read and write permissions on the script using the **chmod 777** or **chmod +x** command.

### Procedure

- 
- Step 1** Copy the **DCNMUpgradeTool** to the root folder of the Cisco DCNM server.

**Step 2** Execute the upgrade tool command.

```
dcnm1# ./DCNMUpgradeTool
```

The tool will analyse the DCNM appliance data and decide if you can upgrade to 11.1(1) or not.

**Note** The backup that is generated by using this tool can be used to restore data, after upgrade.

**Step 3** Enter **y** to continue.

**Example:**

```
Continue? [y/n] y
```

The tool inspects the systems, checks all constraints, and determines whether the appliance can be upgraded. It also checks for any SAN configuration and default fabrics. If the upgrade criteria is met, the system displays as shown below.

```
This system version: 10.4(2)
```

```
- Checking SAN config
- Checking default fabric
...
```

```
Congratulations! You can upgrade to DCNM 11.1(1)
```

If the criteria is not met, the upgrade is terminated.

**Step 4** Enter **y** to create a backup file.

```
Create backup file? [y/n]: y
```

After the backup is completed successfully, the following message is displayed.

```
*****
Backup is available at /root/backup.DD_MM_YYYY_HH_MM_SS.tar.gz
*****
```

Copy the backup file to a safe location and shut down the application.

## Upgrading and Restoring DCNM Virtual Appliance in Standalone mode



**Note** This procedure applied to both DCNM OVA and ISO upgrade.

Perform the following task to upgrade the DCNM appliance and restore data.

**Before you begin**

Ensure that you have copied the backup generated from `DCNMUpgradeTool` to a safe location.

**Procedure**

**Step 1** Update the interface MAC address of the Active and Standby appliance. Right-click on **VM > Edit Settings > Hardware**.

For both Network Adapters, update the MAC address to be the same as Cisco DCNM 10.4(2). This ensures that the same MAC address is used for the new Virtual Machine (VM); licenses on Cisco DCNM will not need to be regenerated in the event of an upgrade.

**Step 2** Right click on the OVF and select **Power > Power on**.

**Step 3** After the VM is powered on click on **Console** tab.

A message indicating that the DCNM appliance is configuring appears on the screen.

Copy and paste the URL to the browser to continue with restore process.

**Step 4** On the Cisco DCNM Web Installer UI, click **Get Started**.

**Step 5** On the Cisco DCNM Installer screen, select **Fresh Installation with backup file for upgrade or restore** radio button.

Click **Continue**.

**Step 6** Select the backup file that was generated using the `DCNMUpgradeTool`.

You can choose perform either on one of the following.

- Click **Upload backup file**. Navigate to the backup file generated for the Active node. Select the appropriate backup file. Click **OK**.
- Click **Copy remote backup file**. Provide the Remote machine information.

**Note** You must SSH or RSync must be installed on the Remote machine.

Click **OK**.

Verify if the correct backup filename appears in the Select backup file field. Click **Continue**.

**Note** If the backup file was generated without using the `DCNMUpgradeTool`, an error appears and you will not be able to upgrade the DCNM.

**Step 7** After the backup file is uploaded, the DCNM server will read and auto-populate the values in some fields.

The prefill is based on the content of the backup file that was provided. You can verify the values and modify if necessary.

**Step 8** In the Administration tab, ensure that the correct password is entered.

Click **OK** on the Note pop-up message.

Click **Next**.

**Step 9** In the Install Mode tab, from the drop-down list, choose Media Controller installation mode for the OVA DCNM Appliance.

**Note** Only the supported upgrade mode will appear in the drop down list. For more information, see [Upgrading the Cisco DCNM, on page 2](#).

Click **Next**.

**Step 10** On the System Settings, verify the Hostname, DNS Server Address and NTP server information.

Modify the configuration, if required and click **Next**.

**Step 11** On the Network Settings tab, verify the network settings configuration.

Modify the configuration if required and click **Next**.

**Step 12** On the Summary tab, review the configuration details.

Click **Previous** to go to the previous tabs and modify the configuration. Click **Start Installation** complete Cisco DCNM Virtual Appliance Installation for the chosen deployment mode.

A progress bar appears showing the completed percentage, description of the operation, and the elapsed time during the installation.

After the progress bar shows 100%, click **Continue**.

A warning message appears with information that the system is upgraded to DCNM 11.1(1).

```
Your Cisco Data Center Network Manager software has been installed.  
DCNM Web UI is available at  
https://<<IP-Address>>  
You will be redirected there in 60 seconds.  
Thank you.
```

---

### What to do next

Logon to the DCNM Web UI with appropriate credentials.



---

**Note** Logon to the Cisco DCNM Web UI using the password used on DCNM Release 10.4(2) appliance.

Ensure that you clear the browser cache before you launch the Cisco DCNM Web UI using the Management Network IP address.

Click **Settings** icon and choose **About DCNM**. You can view and verify the Installation type that you have deployed.

## Upgrading and Restoring DCNM Virtual Appliance in Native HA Mode

The native HA is only supported on DCNM appliances with ISO or OVA installation. Unlike HA mechanisms, it doesn't require any external dependencies like an Oracle database or a shared NFS file system.

The native HA feature allows two Cisco DCNM appliances to run as active and standby applications, with their embedded databases synchronized in real time. Therefore, when the active DCNM is not functioning, the standby DCNM takes over with the same database data and resume the operation.

Perform the following to upgrade the Cisco DCNM Native HA appliances to Release 11.1(1).

### Before you begin

- Ensure that both the Cisco DCNM 10.4(2) Active and Standby peers are up and running.
- Check and ensure that the Active and Standby servers are operational, by using the `appmgr show ha-role` command:

Example:

On the Active node:

```
dcnm1# appmgr show ha-role  
Native HA enabled.
```

```
Deployed role: Active
Current role: Active
```

On the Standby node:

```
dcnm2# appmgr show ha-role
Native HA enabled.
Deployed role: Standby
Current role: Standby
```

## Procedure

- 
- Step 1** Copy the DCNMUpgradeTool to the root folder of both Active and Standby servers.
- Note** For example, let us indicate Active and Standby appliances as **dcnm1** and **dcnm2** respectively.
- Step 2** Run the DCNMUpgradeTool on both the DCNM 10.4(2) appliances and save the backup to your local directory. For instructions, see [Backup Using the Upgrade Tool, on page 44](#).  
Check if separate .tar archives are stored in an external file system.
- Step 3** Copy the interface MAC address of the Active and Standby appliance. Right-click on **VM > Edit Settings > Hardware**.  
For both Network Adapters, update the MAC address to be the same as Cisco DCNM 10.4(2). This ensures that the same MAC address is used for the new Virtual Machine (VM); licenses on Cisco DCNM will not need to be regenerated for the appliances after upgrade.
- Step 4** Shut down both the appliances using the **shutdown -h** command.
- Note** Ensure that you shutdown the Standby appliance first, and then shutdown the Active appliance.
- ```
dcnm2# shutdown -h now
dcnm1# shutdown -h now
```
- You can also right on the VM, select **Power > Power Off**.
- Step 5** Install Cisco DCNM 11.1(1) on two appliances, one for Active and one for Standby.  
You can either deploy DCNM as OVA or ISO. You must first deploy OVA as an OVF template, or configure KVM or Baremetal for ISO installation. For instructions, see:
- OVA—[Deploying the Open Virtual Appliance as an OVF Template, on page 14](#)
  - ISO—either one of the following.
    - [Installing the DCNM ISO Virtual Appliance on KVM, on page 29](#)
    - [Installing the DCNM ISO Virtual Appliance on UCS \(Bare Metal\), on page 25](#)
- Note** If this deployment is a part of the upgrade process, do not Power on the VM. Edit and provide the 10.4(2) MAC address and power on the VM.
- Step 6** Update the interface MAC address of the Active and Standby appliance. Right-click on **VM > Edit Settings > Hardware**.  
For both Network Adapters, update the MAC address to be the same as Cisco DCNM 10.4(2). This ensures that the same MAC address is used for the new Virtual Machine (VM); licenses on Cisco DCNM will not need to be regenerated in the event of an upgrade.

**Step 7** After the VM or Baremetal is powered on, click **Console** tab.

**Note** Before you power on the VM, ensure that you have reserved appropriate resources for the VM, such as CPU and memory, based on the chosen deployment configuration.

A message indicating that the DCNM appliance is configuring appears on the screen.

Copy and paste the URL to the browser to continue with restore process.

**Step 8** On the Active node DCNM Web Installer UI, upload and validate the backup file.

- a) Click **Get Started**.
- b) On the Cisco DCNM Installer screen, select **Fresh Installation with backup file for upgrade or restore** radio button.

Click **Continue**.

- c) Select the Active node backup file that was generated using the `./DCNMUpgradeTool` script.

You can choose perform either on one of the following:

- Click **Upload backup file**. Navigate to the backup file generated for the Active node. Select the appropriate backup file. Click **OK**.
- Click **Copy remote backup file**. Provide the Remote machine information. Click **OK**.

Verify if the correct backup file name appears in the Select backup file field. Click **Continue**.

**Note** If the backup file was generated without using the DCNMUpgradeTool, an error appears and you will not be able to upgrade the DCNM.

- d) After the backup file is uploaded, the DCNM server will read and auto populate the values in some fields.

**Note** If the primary node was not in HA active state when the backup was taken, the system will not be restored correctly and you will experience data loss.

The prefill is based on the content of the backup file that was provided.

- e) In the Administration tab, ensure that the correct password is entered and click **Next**.  
Select the **Show passwords in clear text** checkbox to view the password entered.
- f) In the Install Mode tab, from the drop-down list, choose installation mode for the OVA DCNM Appliance.

**Note** Only the supported upgrade mode appears in the drop-down list. Refer to [Upgrading the Cisco DCNM, on page 2](#), for more information.

Click **Next**.

- g) On the System Settings, verify the Hostname, DNS Server Address, and NTP server information.  
Modify the configuration, if necessary and click **Next**.
- h) On the Network Settings tab, verify the network settings configuration.  
Modify the configuration if necessary and click **Next**.
- i) In the HA Settings tab, the following message is displayed.

```
You are installing the primary DCNM HA mode.  
Please note that HA setup information will need to be  
provided when the secondary DCNM HA node is installed.
```

- j) On the Summary tab, review the configuration details.

Click **Previous** to go to the previous tabs and modify the configuration. Click **Start Installation** complete Cisco DCNM Virtual Appliance Installation for the chosen deployment mode.

A progress bar appears showing the completed percentage, description of the operation, and the elapsed time during the installation.

After the progress bar shows 100%, click **Continue**.

A warning message appears with information that the system is not ready until the upgrade process on the Standby node is complete.

```
WARNING: RESTORE/UPGRADE IS NOT COMPLETE!
Your Cisco Data Center Network Manager software has been installed on this
HA primary node. However, the system will be ready to be used only after the
upgrade/restore of the secondary node has been completed.
Thank you.
```

### Step 9

On the Standby node DCNM Web Installer UI, upload and validate the backup file.

- a) Click **Get Started**.
- b) On the Cisco DCNM Installer screen, select **Fresh Installation with backup file for upgrade or restore** radio button.

Click **Continue**.

- c) Select the Standby node backup file that was generated using the `./DCNMUpgradeTool` script.

You can choose perform either on one of the following:

- Click **Upload backup file**. Navigate to the backup file generated for the Standby node. Select the appropriate backup file. Click **OK**.
- Click **Copy remote backup file**. Provide the Remote machine information. Click **OK**.

Verify if the correct backup file name appears in the Select backup file field. Click **Continue**.

If the backup file was generated without using the DCNMUpgradeTool, an error appears and you will not be able to upgrade the DCNM.

- d) After the backup file is uploaded, the DCNM server will read and auto populate the values in some fields.

**Note** If the standby node was not in HA active state when the backup was taken, the system will not be restored correctly and you will experience data loss.

The prefill is based on the content of the backup file that was provided.

- e) In the Administration tab, ensure that the correct password is entered and click **Next**.

**Note** This password must match the Administration Password of the Primary DCNM node for HA setup to complete successfully.

Select the **Show passwords in clear text** checkbox to view the password entered.

- f) In the Install Mode tab, from the drop-down list, choose installation mode for the OVA DCNM Appliance.

**Note** Ensure that you select the same installation mode for the standby node that was chosen for the primary node.

Click **Next**.

- g) On the System Settings, verify the Hostname, DNS Server Address, and NTP server information. Modify the configuration, if necessary and click **Next**.
- h) On the Network Settings tab, verify the network settings configuration. Modify the configuration if necessary and click **Next**.
- i) In the HA Settings tab, the following message is displayed.  
Enter a valid HA Ping IP Address, if necessary. Ensure that this IP address must be different from the DCNM Active and Standby IP addresses.  
**Note** If set, the **HA ping feature IP Address** must be pingable for DCNM services to be running in Native HA systems. This address must belong to Enhanced Fabric management network.
- j) On the Summary tab, review the configuration details.  
Click **Previous** to go to the previous tabs and modify the configuration. Click **Start Installation** complete Cisco DCNM Virtual Appliance Installation for the chosen deployment mode.  
A progress bar appears showing the completed percentage, description of the operation, and the elapsed time during the installation.  
After the progress bar shows 100%, click **Continue**.  
A success message appears with the URL to access DCNM Web UI.  

```
Your Cisco Data Center Network Manager software has been installed.
DCNM Web UI is available at https://<<IP Address>>
You will be redirected there in 60 seconds.
Thank you
```

- Step 10** After the data is restored, check the status using the **appmr status all** command on both Active and standby nodes.
- Step 11** Verify the role of the appliances using the **appmgr show ha-role** command.
- Step 12** Log on to the DCNM Web UI with appropriate credentials.

---

### What to do next

Logon to the DCNM Web UI with appropriate credentials.




---

**Note** After the upgrade, since Postgres DBMS is restored from the backup that is taken on DCNM 10.4(2), you must log on to the Cisco DCNM Web UI using the password used on DCNM Release 10.4(2) appliance.

---

Click **Settings** icon and choose **About DCNM**. You can view and verify the Installation type that you have deployed.

To gracefully onboard Cisco DCNM 10.4(2) or 11.0(1) managed VXLAN BGP EVPN fabric(s) comprising Cisco Nexus 9000 switches post upgrade to DCNM 11.1(1), see [Post DCNM 10.4\(2\) or 11.0\(1\) to DCNM 11.1\(1\) Upgrade for VXLAN BGP EVPN and MSD Fabrics](#).

# Upgrading ISO or OVA through Inline Upgrade

This section contains the procedure to upgrade the DCNM using the Inline Upgrade method.

## Inline Upgrade for DCNM Virtual Appliance in Standalone Mode

You can upgrade from Release 11.0(1) to Release 11.1(1) using the inline upgrade. Inline upgrade allows you to upgrade DCNM by imposing the new DCNM version to the existing DCNM. After the inline upgrade, ensure that you clear your browser cache before launching the DCNM application.

Perform the following task to upgrade the DCNM virtual appliance in standalone mode.

### Procedure

**Step 1** Log on to the Cisco DCNM appliance console.

- For OVA Installation: On the OVF template deployed for the host, right click and select **Settings > Launch Web Console**.
- For ISO Installation: Select the KVM console or UCS (Bare Metal) console.

**Caution** Do not perform an Inline Upgrade from an SSH Session. The session may timeout and result in an incomplete upgrade.

**Step 2** Take a backup of the application data using the **appmgr backup** command.

```
dcnm# appmgr backup
```

Copy the backup file to a safe location outside the DCNM server.

**Step 3** Unzip the `dcnm-va.11.1.1.iso.zip` file and upload the DCNM 11.1(1) ISO file to the `/root/` folder in the DCNM setup that you want to upgrade.

**Step 4** Create folder that is named `iso` using the **mkdir /mnt/iso** command.

```
dcnm# mkdir /mnt/iso
```

**Step 5** Mount the DCNM 11.1(1) ISO file on the standalone setup in the `/mnt/iso` folder.

**mount -o loop <DCNM 11.1(1) image> /mnt/iso**

```
dcnm# mount -o loop dcnm-va.11.1.1.iso /mnt/iso
```

```
dcnm#
```

**Step 6** Navigate to `/mnt/iso/packaged-files/scripts/` and run the **./inline-upgrade.sh** script.

```
dcnm# cd /mnt/iso/packaged-files/scripts/
```

```
dcnm# ./inline-upgrade.sh
```

**Note** If some services are still running, you will receive a prompt that the services will be stopped. When prompted, press `y` and continue.

```
Do you want to do the inline upgrade to 11.1(1)?
The DCNM and Elasticsearch will go down (if it is running) and come up after the upgrade
[y/n] n ? y
```

**Note** When upgrading to Cisco DCNM Release 11.2, the OS kernel is upgraded. At the end of the inline upgrade, the Cisco DCNM appliance reboots.

After the upgrade is complete, the appliance reboots.

**Step 7** Ensure that the DCNM application is functional with the **appmgr status all** command.

```
dcnm# appmgr status all
```

---

### What to do next

Logon to the DCNM Web UI with appropriate credentials.

Click **Settings** icon and choose **About DCNM**. You can view and verify the Installation type that you have deployed.

To gracefully onboard Cisco DCNM 10.4(2) or 11.0(1) managed VXLAN BGP EVPN fabric(s) comprising Cisco Nexus 9000 switches post upgrade to DCNM 11.1(1), see [Post DCNM 10.4\(2\) or 11.0\(1\) to DCNM 11.1\(1\) Upgrade for VXLAN BGP EVPN and MSD Fabrics](#).

## Inline Upgrade for DCNM Virtual Appliance in Native HA Mode

You can upgrade from Release 11.0(1) to Release 11.1(1) using the inline upgrade. Inline upgrade allows you to upgrade DCNM by imposing the new DCNM version to the existing DCNM. After the inline upgrade, ensure that you clear your browser cache before launching the DCNM application.

Perform the following task to upgrade the DCNM virtual appliance in Native HA mode.

### Before you begin

- Ensure that both the Cisco DCNM 11.0(1) Active and Standby peers are up and running.
- Check and ensure that the Active and Standby servers are operational, by using the **appmgr show ha-role** command:

Example:

On the Active node:

```
dcnm1# appmgr show ha-role
Native HA enabled.
Deployed role: Active
Current role: Active
```

On the Standby node:

```
dcnm2# appmgr show ha-role
Native HA enabled.
Deployed role: Standby
Current role: Standby
```

## Procedure

**Step 1** Unzip the `dcnm-va.11.1.1.iso.zip` file and upload the DCNM 11.1(1) ISO file to the `/root/` folder in both Active and Standby node of the DCNM setup that you want to upgrade.

**Note** For example, let us indicate Active and Standby appliances as **dcnm1** and **dcnm2** respectively.

**Step 2** Log on to the Cisco DCNM appliance console.

- For OVA Installation: On the OVF template that is deployed for the host, right click and select **Settings > Launch Web Console**.
- For ISO Installation: Select the KVM console or UCS (Bare Metal) console.

**Caution** Do not perform an Inline Upgrade from an SSH Session. The session may timeout and result in an incomplete upgrade.

**Step 3** Take a backup of the application data using the **appmgr backup** command on both Active and Standby appliances.

```
dcnm1# appmgr backup
dcnm2# appmgr backup
```

Copy the backup file to a safe location outside the DCNM server.

**Step 4** On the Active node, perform the inline upgrade.

a) Create a folder named **iso** using the **mkdir /mnt/iso** command.

```
dcnm1#mkdir /mnt/iso
```

b) Mount the DCNM 11.1(1) ISO file on the Active node in the `/mnt/iso` folder.

```
dcnm1# mount -o loop dcnm-va.11.1.1.iso /mnt/iso
```

c) (Optional) Stop the HA applications on the Standby appliance using the **appmgr stop ha-apps** command.

```
dcnm2# appmgr stop ha-apps
```

d) Navigate to `/mnt/iso/packaged-files/scripts/` location and run the `./inline-upgrade.sh` script.

```
dcnm1# cd /mnt/iso/packaged-files/scripts/
dcnm1# ./inline-upgrade.sh
```

**Note** If some services are still running, you will receive a prompt that the services will be stopped. When prompted, press **y** to continue.

```
Do you want to do the inline upgrade to 11.1(1)?
The DCNM and Elasticsearch will go down (if it is running) and
come up after the upgrade [y/n] n ? y
```

After the upgrade is complete, the appliance reboots. Verify the role of the appliance, using the following command:

```
dcnm1# appmgr show ha-role
Native HA enabled.
Deployed role: Active
Current role: Active
```

**Step 5** Ensure the DCNM application is functional with the **appmgr status all** command.

```
dcnm1# appmgr status all
```

**Note** Ensure that all the services are up and running on the Cisco DCNM Active node before proceeding to upgrade Standby node.

Verify the role of the Active node using the **appmgr show ha-role** command. After the Deployed and Current roles are Active, then proceed to standby node.

**Step 6** On the Standby node, perform the inline upgrade.

a) Create folder named **iso** using the **mkdir /mnt/iso** command.

```
dcnm2# mkdir /mnt/iso
```

b) Mount the DCNM 11.1(1) ISO file on the Standby node in the **/mnt/iso** folder.

```
dcnm2# mount -o loop dcnm-va.11.1.1.iso /mnt/iso
```

c) Navigate to **/mnt/iso/packaged-files/scripts/** location and run the **./inline-upgrade.sh** script.

```
dcnm2# cd /mnt/iso/packaged-files/scripts/
dcnm2# ./inline-upgrade.sh --standby
```

**Note** If some services are still running, you will receive a prompt that the services will be stopped. When prompted, press **y** and continue.

```
Do you want to do the inline upgrade to 11.1(1)?
The DCNM and Elasticsearch will go down (if it is running) and
come up after the upgrade [y/n] n ? y
```

After the upgrade is complete, the appliance reboots. Verify the role of the appliance, using the following command:

```
dcnm2# appmgr show ha-role
Native HA enabled.
Deployed role: Standby
Current role: Standby
```

## What to do next

Log on to the DCNM Web UI with appropriate credentials.

Click **Settings** icon and choose **About DCNM**. You can view and verify the Installation type that you have deployed.

Verify the role of both the appliances using the **appmgr show ha-role**

```
dcnm1# appmgr show ha-role
Native HA enabled.
Deployed role: Active
Current role: Active

dcnm2# appmgr show ha-role
Native HA enabled.
Deployed role: Standby
Current role: Standby
```

Verify the status of all applications using the **appmgr status all** command.

To gracefully onboard Cisco DCNM 10.4(2) or 11.0(1) managed VXLAN BGP EVPN fabric(s) comprising Cisco Nexus 9000 switches post upgrade to DCNM 11.1(1), see [Post DCNM 10.4\(2\) or 11.0\(1\) to DCNM 11.1\(1\) Upgrade for VXLAN BGP EVPN and MSD Fabrics](#).





## CHAPTER 6

# Disaster Recovery (Backup and Restore)

---

This chapter contains the following sections:

- [Backup and Restore Cisco DCNM and Application Data on Standalone DCNM setup, on page 57](#)
- [Backup and Restore Cisco DCNM and Application Data on Native HA setup, on page 58](#)

## Backup and Restore Cisco DCNM and Application Data on Standalone DCNM setup

You can take a backup of Cisco DCNM application data for analytics and troubleshooting.

Perform the following task to take a backup of Cisco DCNM and Application data.

### Procedure

---

- Step 1** Logon to the Cisco DCNM appliance using SSH.
- Step 2** Take a backup of the application data using the **appmgr backup** command.
- ```
dcnm# appmgr backup
```
- Copy the backup file to a safe location and shut down the DCNM Appliance.
- Step 3** Right click on the installed VM and select **Power > Power Off**.
- Step 4** Deploy the new DCNM appliance.
- Step 5** After the VM is powered on, click on **Console** tab.
- A message indicating that the DCNM appliance is configuring appears on the screen.
- Copy and paste the URL to the browser to continue with restore process.
- Step 6** On the DCNM Web Installer UI, click **Get Started**.
- Step 7** On the Cisco DCNM Installer screen, select **Fresh Installation with backup file for upgrade or restore** radio button.
- Select the backup file that was generated in Step [Step 2, on page 57](#).
- Continue to deploy the DCNM.
- Step 8** On the Summary tab, review the configuration details.

Click **Previous** to go to the previous tabs and modify the configuration. Click **Start Installation** complete Cisco DCNM Virtual Appliance Installation for the chosen deployment mode.

A progress bar appears showing the completed percentage, description of the operation, and the elapsed time during the installation.

After the progress bar shows 100%, click **Continue**.

**Step 9** After the data is restored, check the status using the **appmr status all** command.

## Backup and Restore Cisco DCNM and Application Data on Native HA setup

Perform the following task to take perform backup and restore of data in a Native HA setup.

### Before you begin

Ensure that the Active node is operating and functional.

### Procedure

- Step 1** Check if the Active node is operational. Otherwise, trigger a failover.
- Step 2** Logon to the Cisco DCNM appliance using SSH.
- Step 3** Take a backup of the application data using the **appmgr backup** command on both Active and Standby appliances.
- ```
dcnm1# appmgr backup
dcnm2 appmgr backup
```
- Copy the backup file of both active and standby appliances to a safe location and shut down the DCNM Appliance.
- Step 4** Right click on the installed VM and select **Power > Power Off**.
- Step 5** Deploy the new DCNM appliance in Native HA mode.
- Step 6** For both the Active and Standby appliances, after the VM is powered on, click on **Console** tab.
- A message indicating that the DCNM appliance is configuring appears on the screen.
- Copy and paste the URL to the browser to continue with restore process.
- Step 7** On the DCNM Web Installer UI, click **Get Started**.
- Step 8** On the Cisco DCNM Installer screen, select **Fresh Installation with backup file for upgrade or restore** radio button.
- Select the backup file that was generated in Step [Step 3, on page 58](#).
- The values for parameters are read from the backup file, and auto-populated. Modify the values, if required.
- Continue to deploy the DCNM.
- Step 9** On the Summary tab, review the configuration details.

Click **Previous** to go to the previous tabs and modify the configuration. Click **Start Installation** complete Cisco DCNM Virtual Appliance Installation for the chosen deployment mode.

A progress bar appears showing the completed percentage, description of the operation, and the elapsed time during the installation.

After the progress bar shows 100%, click **Continue**.

**Step 10**

After the data is restored, check the status using the **apmr status all** command.

---





## CHAPTER 7

# Running Cisco DCNM Behind a Firewall

This chapter provides information about running Cisco DCNM behind a firewall.

- [Running Cisco DCNM Behind a Firewall, on page 61](#)

## Running Cisco DCNM Behind a Firewall

Generally, an Enterprise (external world) and Data center is separated by a firewall, i.e., DCNM is configured behind a firewall. The Cisco DCNM Web Client and SSH connectivity must pass-through that firewall. Also, a firewall can be placed between the DCNM Server and DCNM-managed devices.

All Cisco DCNM Native HA nodes must be on the same side of the firewall. The internal DCNM Native HA ports are not listed, as it is not recommended to configure a firewall in between the Native HA nodes.



**Note** When you add or discover LAN devices in DCNM, ICMP echo packets are sent as part of the discovery process. If you have a firewall that blocks ICMP messages, the discovery process fails. You can skip sending the ICMP echo packets by setting the `cdp.discoverPingDisable` server property to `true`. For more information about how to set a server property, Cisco DCNM Web UI **Administration > DCNM Server > Server Properties**.

Any standard port where the Ingress traffic enters from clients cannot be modified unless you disable the local firewall.

The following table lists all ports that are used for communication between Cisco DCNM Web Client, SSH Client, and Cisco DCNM Server.

| Port Number | Protocol | Service Name | Direction of Communication | Remarks                                   |
|-------------|----------|--------------|----------------------------|-------------------------------------------|
| 22          | TCP      | SSH          | Client to DCNM Server      | SSH access to external world is optional. |
| 443         | TCP      | HTTPS        | Client to DCNM Server      | This is needed to reach DCNM Web Server.  |

The following table lists all ports that are used for communication between Cisco DCNM Server and other services.



**Note** The services can be hosted on either side of the firewall.

| Port Number | Protocol | Service Name    | Direction of Communication        | Remarks                                                                                                                                        |
|-------------|----------|-----------------|-----------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------|
| 49          | TCP/UDP  | TACACS+         | DCNM Server to DNS Server         | ACS Server can be either side of the firewall.                                                                                                 |
| 53          | TCP/UDP  | DNS             | DCNM Server to DNS Server         | DNS Server can be either side of the firewall.                                                                                                 |
| 123         | UDP      | NTP             | DCNM Server to NTP Server         | NTP Server can be either side of the firewall.                                                                                                 |
| 5000        | TCP      | Docker Registry | Incoming to DCNM Server           | Docker Registry Service on DCNM Server listening to requests from DCNM compute nodes.                                                          |
| 5432        | TCP      | Postgres        | DCNM Server to Postgres DB Server | Default installation of DCNM does not need this port.<br><br>This is needed only when Postgres is installed external to the DCNM host machine. |

The following table lists all ports that are used for communication between DCNM Server and managed devices:

| Port Number | Protocol | Service Name | Direction of Communication | Remarks                                                                               |
|-------------|----------|--------------|----------------------------|---------------------------------------------------------------------------------------|
| 22          | TCP      | SSH          | Both Direction             | DCNM Server to Device – To manage devices.<br><br>Device to DCNM Server – SCP (POAP). |

| Port Number | Protocol | Service Name | Direction of Communication | Remarks                                                                                                   |
|-------------|----------|--------------|----------------------------|-----------------------------------------------------------------------------------------------------------|
| 67          | UDP      | DHCP         | Device to DCNM Server      |                                                                                                           |
| 69          | TCP      | TFTP         | Device to DCNM Server      | Required for POAP                                                                                         |
| 161         | TCP/UDP  | SNMP         | Server to DCNM Device      | DCNM configured via <code>server.properties</code> to use TCP uses TCP port 161, instead of UDP port 161. |
| 514         | UDP      | Syslog       | Device to DCNM Server      |                                                                                                           |
| 2162        | UDP      | SNMP_TRAP    | Device to DCNM Server      |                                                                                                           |
| 33000-33499 | TCP      | gRPC         | Device to DCNM Server      | LAN Telemetry Streaming                                                                                   |





## CHAPTER 8

# Monitoring Devices

This chapter provides release-specific prerequisites information for your deployment of *Cisco Data Center Network Manager*.

- [Monitoring Devices in In-Band Network, on page 65](#)

## Monitoring Devices in In-Band Network

Perform the following task to monitor devices in the In-band network.

### Procedure

**Step 1** Deploy Cisco DCNM in Standalone mode or Native HA mode.

For more information, see [Installing Cisco DCNM, on page 13](#).

**Step 2** Configure In-band route on the DCNM server using the command:

```
appmgr setup inband-route subnet {fabric-links-subnet/maskloopback-IP-subnet/mask}
```

where,

- *fabric-links-subnet/mask* is IP address and subnet used for the switches ISL links.
- *loopback-IP-subnet/mask* is the IP address and subnet of loopback configured on switches for managing them in In-band network.

On switches, User may configure the same loopback Interface (like loopback x) and choose its IP address in a subnet with /32 mask or as appropriate for their network and while installing the DCNM server (s) also use the eth2 IPs and in native-ha bring up eth2 VIP IP also in same IP subnet as that of switch loopback IP subnet.

On Servers, User can use a summarized group mask (eg: /24 in this example) so that only a few static routes on the server are needed

**Note** In native HA setup run these two commands on both primary and secondary

Now ping from server to switch loopback IP or switch to the server (via vrf default) both ways ping should go through fine

**Step 3** Ping the switch loopback IP address from the DCNM server, or ping the server (via default vrf) to the switch.

Ensure that you can ping both the routes successfully.

**Step 4** Logon to the Cisco DCNM server.  
Navigate to the `/usr/local/cisco/dcm/fm/conf` directory.

**Step 5** Edit the trap registry values in the `server.properties` file.  
Set the `traps.registaddress=eth2-VIP-IPAddress`  
Save the `server.properties` file.

**Step 6** Restart the Cisco DCNM using the following commands:

```
appmgr stop all
```

```
appmgr start all
```

**Note** On a Native HA setup, follow the following order to restart services.

```
dcnm 2# appmgr stop all
```

```
dcnm1# appmgr stop all
```

```
dcnm1# appmgr start all
```

```
dcnm2# appmgr start all
```

**Step 7** On Cisco DCNM Web UI, discover the devices, based on loopback IP addresses of the Switch.  
Ensure that the discovery occurred through the server to the switch using inband connectivity

**Step 8** Edit the `pmn_telemetry_snmp` template and provide appropriate details.

```
Telemetry VRF=default  
Telemetry receiver IP=<native-HA/eth2-VIP-IP-address>  
snmp trap receiver=select check box  
Source Interface=Loopback x/y  
choose "copy running to startup" option
```

**Step 9** Deploy the modified configuration to the switch.

---



## CHAPTER 9

# Secure Client Communications for Cisco DCNM Servers

This section describes how to configure HTTPS on Cisco Data Center Network Manager Servers.



**Note** You must enable SSL/HTTPS on the Cisco DCNM before you add a CA signed SSL certificate. Therefore, perform the procedure in the below mentioned order.

This section includes the following topics:

- [Enabling SSL/HTTPS on Cisco DCNM in HA Environment on Virtual Appliance, on page 67](#)

## Enabling SSL/HTTPS on Cisco DCNM in HA Environment on Virtual Appliance

To enable SSL/HTTPS on a Virtual Appliance for Cisco DCNM in HA mode, perform the following:

### Procedure

**Step 1** Configure the primary server with a self signed SSL certificate.

**Note** In a CA signed certificate, each server has their own certificate generated. Ensure that the certificate is signed by the signing certificate chain which is common for both the servers.

**Step 2** On the secondary server, locate the keystore.

**Step 3** Rename the keystore located at

```
<DCNM_install_root>/dcm/wildfly-10.1.0.Final/standalone/configuration/fmserver.jks  
to  
<DCNM_install_root>/dcm/wildfly-10.1.0.Final/standalone/configuration/fmserver.jks.old
```

**Step 4** Copy the file `fmserver.jks` generated in primary server to secondary server into folders

```
<dcnm-home> /dcm/wildfly-10.1.0.Final/standalone/configuration/  
<dcnm-home>/dcm/fm/conf/cert/
```

---

### What to do next

If you have created a self-signed certificate or imported an SSL certificate to the keystore, you must copy the new `fmserver.jks` located at

`/usr/local/cisco/dcm/wildfly-10.1.0.Final/standalone/configuration/etc/elasticsearch`. If you do not copy the `fmserver.jks` file to the `elasticsearch` directory, you will not be able to get the Alarms and Policies. As the `elasticsearch` database will be stabilizing, you cannot configure any Alarm Policy on the Cisco DCNM **Web UI Monitor > Alarms > Alarm Policies**.



## CHAPTER 10

# Managing Applications in a High-Availability Environment

This chapter describes how to configure a high-availability (HA) environment in your Cisco DCNM Open Virtual Appliance deployment for your Cisco Programmable Fabric solution. It also includes details about the HA functionality for each of the applications bundled within the Cisco DCNM Open Virtual Appliance.



---

**Note** Ensure that the NTP server is synchronized between active and standby peers is essential for proper HA functioning in DCNM

---

This chapter contains the following sections:

- [Information About Application Level HA in the Cisco DCNM Open Virtual Appliance, on page 69](#)
- [Native HA Failover and Troubleshooting, on page 70](#)
- [Application High Availability Details, on page 72](#)

## Information About Application Level HA in the Cisco DCNM Open Virtual Appliance

To achieve HA for applications that are run on the Cisco DCNM Open Virtual Appliance, you can run two virtual appliances. You can run one in Active mode and the other in Standby mode.



---

**Note** This document refers to these appliances as OVA-A and OVA-B, respectively.

---

In this scenario:

1. All applications run on both appliances.

The application data is either constantly synchronized or applications share a common database as applicable.

2. Only one of the applications running on the two appliances serves the client requests. Initially this would be the applications running on OVA-A. The application continues to do so until one of the following happens:

- The application on OVA-A crashes.
  - The operating system on OVA-A crashes.
  - OVA-A is powered off for some reason.
3. At this point, the application running on the other appliance (OVA-B) takes over.
 

For DCNM REST API and AMQP, this transition is done by a load-balancing software that hides the interface address of the appliances using a Virtual IP (VIP) address.

For DHCP, when the first node fails, the second node starts serving the IP addresses.
  4. The existing connections to OVA-A are dropped and the new connections are routed to OVA-B.
 

This scenario demonstrates why one of the nodes (OVA-A) is initially referred to as the Active node and OVA-B is referred as the Standby node.

## Automatic Failover

The application-level and virtual machine (VM)-level and switchover process is as follows.

- If any of the applications managed by the load-balancing software (DCNM/AMQP) goes down on OVA-A, the Active node that handles the client requests detects the failure and redirects subsequent requests to the Standby node (OVA-B). This process provides an application-level switchover.
- If the Active node (OVA-A) fails or is powered-off for some reason, the Standby node (OVA-B) detects the failure and enables the VIP address for Cisco DCNM/AMQP on OVA-B. It also sends a gratuitous ARP to the local switch to indicate the new MAC address that is associated with the IP address. For applications not using VIP, the DHCPD running on OVA-B detects the failure of DHCPD on OVA-A and activates itself; whereas LDAP running on OVA-B continues running as LDAP is deployed Active-Active. Consequently, a VM-level failover is accomplished for all four applications (DCNM/AMQP/DHCP/LDAP).

## Manually Triggered Failovers

An application-level failover can also be triggered manually. For instance, you might want to run AMQP on OVA-B and the rest of the applications on OVA-A. In that case, you can log in to the SSH terminal of OVA-A and stop AMQP by using the **appmgr stop amqp** command.

This failover triggers the same process that is described in the [Automatic Failover, on page 70](#); subsequent requests to the AMQP Virtual IP address are redirected to OVA-B.

## Native HA Failover and Troubleshooting

When Cisco DCNM is deployed in Native HA mode, we recommend that you do not restart applications using the **appmgr restart all** or **appmgr restart ha-apps**.

Due to the nature of Native HA, the role of the host might alternate from Active to Standby or from Standby to Active.

The following sections provide information on troubleshooting in different use cases.

### Native HA Failover from Active Host to Standby Host

Perform the following steps when the Native HA failover occurs from Active to Standby host:

1. Log on to DCNM Web UI, and navigate to **Administrator > Native HA**.
2. Verify the status of HA. If the DCNM HA status is not in **OK** mode, you cannot perform Failover operation.  
Click **Failover**. The Cisco DCNM server will shutdown and the DCNM Standby appliance will be operational.
3. Refresh the Cisco DCNM Web UI.  
After the DCNM server is operational, you can log on to the DCNM Web UI.



---

**Note** We recommend that you do not run **appmgr stop all** or **appmgr stop ha-apps** commands on the Active host to trigger failover. If Cisco DCNM HA status is not in **OK** mode, a failover may cause loss of data, as the Standby DCNM appliance is not synchronized with the Active appliance before failover.

---

### Issue with DCNM Application Framework

If DCNM Web UI is not accessible, and a failover operation is necessary, execute one of the following commands under Linux console:

**appmgr failover**—This command triggers the HA heartbeat failover.

Or

**reboot -h now**—This command triggers the Linux host to reboot, which causes a failover.

However, we recommend that you use DCNM Web UI to perform failover, as all other methods carry a risk of data loss when both HA peers are not in sync.

### Stop and Restart DCNM

To completely stop DCNM and restart it, perform the following:

1. On the Standby appliance, stop all the applications by using the **appmgr stop all** command.
2. Check if all the applications have stopped, using the **appmgr status all** command.
3. On the Active appliance, stop all the applications using the **appmgr stop all** command.
4. Verify if all the applications are stopped using the **appmgr status all** command.
5. On the deployed Active host, start all the applications using the **appmgr start all** command.  
Verify if all the applications are running. Log on to the DCNM Web UI to check if it is operational.
6. On the deployed Standby host, start all the applications using the **appmgr start all** command.  
On the Web UI, navigate to **Administration > Native HA** and ensure that the HA status displays **OK**.

### Restart Standby Host

Perform this procedure to restart only the Standby host:

1. On the Standby host, stop all the applications using the **appmgr stop all** command.
2. Verify if all the applications have stopped using the **appmgr status all** command.
3. Start all the applications using the **appmgr start all**.

On the Web UI, navigate to **Administration > Native HA** and ensure that the HA status displays **OK**.

## Application High Availability Details

This section describes all of the Cisco Programmable Fabric HA applications.

Cisco DCNM Open Virtual Appliance has two interfaces: one that connects to the Open Virtual Appliance management network and one that connects to the enhanced Programmable Fabric network. Virtual IP addresses are defined for both interfaces.

- From the Open Virtual Appliance management network, the DCNM-REST API, DCNM interface, and AMQP are accessed through the VIP address
- From the enhanced fabric management network, LDAP and DHCP are accessed directly.

Only three Virtual IPs are defined:

- DCNM REST API (on dcnm management network)
- DCNM REST API (on enhanced fabric management network)
- AMQP (on dcnm management network)



### Note

Although DCNM Open Virtual Appliance in HA sets up a VIP, the VIP is intended to be used for the access of DCNM, REST API. For GUI access, we still recommend that you use the individual IP addresses of the DCNM HA peers and use the same to launch DCNM SAN Java clients, etc.

See the following table for a complete list of Programmable Fabric applications and their corresponding HA mechanisms.

| Programmable Fabric Application | HA Mechanism               | Use of Virtual IPs | Comments                                      |
|---------------------------------|----------------------------|--------------------|-----------------------------------------------|
| Data Center Network Manager     | DCNM Clustering/Federation | Yes                | Two VIPs defined, one on each network         |
| RabbitMQ                        | RabbitMQ Mirrored Queues   | Yes                | One VIP defined on the OVA management network |
| Repositories                    | —                          | —                  | External repositories have to be used         |

# Data Center Network Management

The data center network management function is provided by the Cisco Data Center Network Manager (DCNM) server. Cisco DCNM provides the setup, visualization, management, and monitoring of the data center infrastructure. Cisco DCNM can be accessed from your browser at [http://\[host/ip\]](http://[host/ip]).



---

**Note** For more information about Cisco DCNM, see <http://cisco.com/go/dcnm>.

---

## HA Implementation

Cisco DCNMs that run on both OVAs are configured in clustering and federated modes for HA. Cisco DCNM federation is the HA mechanism for SAN devices. Groups of SAN devices can be managed by each node in the DCNM federated setup. All the devices can be managed using a single client interface.

You can enable automatic failover in the Cisco DCNM UI by choosing: **Admin > Federation**. If you enable an automatic failover and the Cisco DCNM that is running on OVA-A fails, the automatic failover moves only the fabrics and shallow-discovered LANs that are managed by OVA-A to OVA-B automatically.

## DCNM Virtual IP Usage

An Open Virtual Appliance HA setup has two VIP addresses (one for each network) for the Cisco DCNM at the default HTTP port. These VIPs can be used for accessing the DCNM RESTful services on the Open Virtual Appliance management network and the enhanced fabric management network. For example, external systems such as Cisco UCS Director can point to the VIP in the Open Virtual Appliance management network and the request gets directed to the active Cisco DCNM. Similarly, the switches in an enhanced fabric management network access the VIP address on the enhanced fabric management network during the POAP process.

You can still directly connect to Cisco DCNM real IP addresses and use them as you would in a DCNM in a cluster/federated set up.



---

**Note** Cisco recommends that you must use VIP addresses only for accessing DCNM REST API. To access the Cisco DCNM Web or SAN client, you must connect using the IP address of the server.

---

## Licenses

For Cisco DCNM, we recommend that you have licenses on the first instance and a spare matching license on the second instance.

## Application Failovers

Enable an automatic failover option in the Cisco DCNM UI when an Open Virtual Appliance HA pair is set up by choosing: **Administration > DCNM Server > Native HA**. This process ensures that if the DCNM that is running on OVA-A fails, all the fabrics and shallow-discovered LANs managed by DCNM-A are managed by DCNM-B automatically after a given time interval (usually about 5 minutes after the failure of DCNM on OVA-A).

The Cisco DCNM VIP address still resides on OVA-A. The Representational State Transfer Web Services (REST) calls initially hit the VIP addresses on OVA-A and get redirected to the Cisco DCNM that is running on OVA-B.

### Application Failbacks

When the Cisco DCNM on OVA-A comes up, the VIP address automatically redirects the REST requests to DCNM-A.

### Virtual-IP Failovers

The VIP address that is configured for Cisco DCNM REST API on OVA-A can fail due to two reasons:

- The load-balancing software running on OVA-A fails.
- OVA-A fails.

The VIP address of Cisco DCNM automatically migrates to OVA-B. The only difference is which DCNM will be used after the failover.

- If a load-balancing software failure occurs, the VIP address on OVA-B directs the requests to DCNM-A.
- If an OVA-A failure occurs, the VIP address on OVA-B directs the requests to DCNM-B.

The automatic failover ensures that the ownership of all of the fabrics and shallow-discovered LANs managed by DCNM-A automatically change to DCNM-B.

### Virtual-IP Failbacks

When OVA-A is brought up and Cisco DCNM is running, the VIP addresses keep running on the Standby node. The failback of Virtual IP addresses from OVA-B to OVA-A occurs only in the following sequence.

1. OVA-A comes up.
2. Cisco DCNM runs on OVA-A.
3. OVA-B goes down or the load-balancing software fails on OVA-B.

## RabbitMQ

RabbitMQ is the message broker that provides the Advanced Messaging Queuing Protocol (AMQP).



#### Note

You need to stop and restart AMQP on both DCNM's server in HA within 30 seconds, otherwise AMQP may not start. For more information about RabbitMQ, go to <https://www.rabbitmq.com/documentation.html>.

### HA Implementation

Enabling the HA on the Open Virtual Appliance creates a VIP address in the Open Virtual Appliance management network. Orchestration systems such as vCloud Director, set their AMQP broker to the VIP address.

Enabling the HA on the Open Virtual Appliance also configures the RabbitMQ broker that runs on each node to be a duplicate of the broker that is running on the other node. Both OVAs act as “disk nodes” of a RabbitMQ cluster, which means that all the persistent messages stored in durable queues are replicated. The RabbitMQ policy ensures that all the queues are automatically replicated to all the nodes.

### Application Failovers

If RabbitMQ-A fails, the VIP address on OVA-A redirects the subsequent AMQP requests to RabbitMQ-B.

### Application Failbacks

When RabbitMQ-A comes up, the VIP address automatically starts directing the AMQP requests to RabbitMQ-A.

### Virtual-IP Failovers

The VIP address configured for the AMQP broker on OVA-A can fail due to two reasons:

- The load-balancing software running on OVA-A fails.
- OVA-A fails.

In both cases, the VIP address of the AMQP automatically migrates to OVA-B. The only difference is which AMQP broker will be used after the failover.

- In a load-balancing software failure, the VIP address on OVA-B directs the requests to RabbitMQ-A.
- In an OVA-A failure, the VIP address on OVA-B directs the requests to RabbitMQ-B.

### Virtual-IP Failbacks

When OVA-A is brought up and AMQP-A is running, the VIP addresses keep running on the OVA-B (directing the requests to AMQP-A). The failback of the RabbitMQ VIP from OVA-B to OVA-A occurs only in the following sequence.

1. OVA-A comes up.
2. RabbitMQ runs on OVA-A.
3. OVA-B goes down or the load-balancing software fails on OVA-B.

## Repositories

All repositories must be remote.





# CHAPTER 11

## Managing Utility Services After DCNM Deployment

This chapter describes how to verify and manage all of the utility services that provide DC3 (Programmable Fabric) central point of management functions after the DCNM is deployed.

**Table 7: Cisco DCNM Utility Services**

| Category           | Application                 | Username | Password                 | Protocol Implemented |
|--------------------|-----------------------------|----------|--------------------------|----------------------|
| Network Management | Data Center Network Manager | admin    | User choice <sup>2</sup> | Network Management   |

<sup>2</sup> User choice refers to the administration password entered by the user during the deployment.

This chapter contains the following sections:

- [Editing Network Properties Post DCNM Installation, on page 77](#)
- [Utility Services Details, on page 88](#)
- [Managing Applications and Utility Services , on page 89](#)

## Editing Network Properties Post DCNM Installation

The Cisco DCNM OVA or the ISO installation consists of 3 network interfaces:

- dcnm-mgmt network (eth0) interface

This network provides connectivity (SSH, SCP, HTTP, HTTPS) to the Cisco DCNM Open Virtual Appliance. Associate this network with the port group that corresponds to the subnet that is associated with the DCNM Management network.


- enhanced-fabric-mgmt (eth1) interface

This network provides enhanced fabric management of Nexus switches. Associate this network with the port group that corresponds to management network of leaf and spine switches.

- enhanced-fabric-inband (eth2) interface

This network provides in-band connection to fabric. Associate this network with the port group that corresponds to a fabric in-band connection.

The following figure shows the network diagram for the Cisco DCNM Management interfaces.

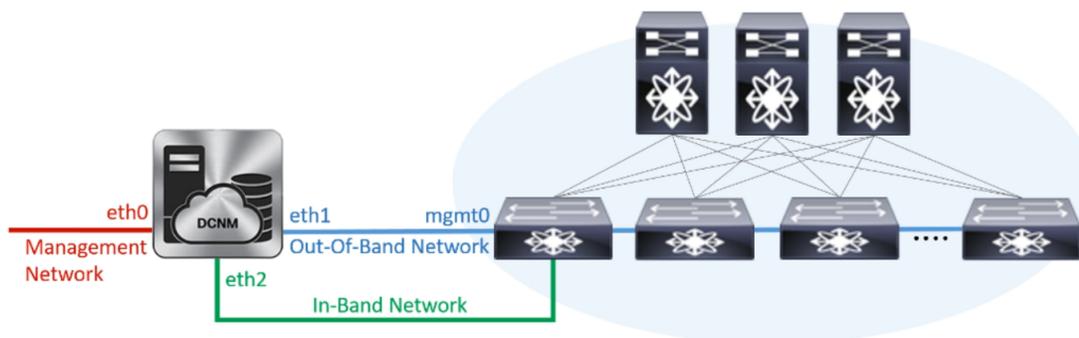

During Cisco DCNM installation for your deployment type, you can configure these interfaces. However, from Cisco DCNM Release 11.2(1), you can edit and modify the network settings post installation.

You can modify the parameters as explained in the following sections:

## Modifying Network Interfaces (eth0 and eth1) Post DCNM Installation

Along with the eth0 and eth1 IP address (IPv4 and/or IPv6), you can also modify the DNS and the NTP server configuration using the **appmgr update network-properties** command.

For step-by-step instructions on how to modify the network parameters using the **appmgr update network-properties** commands, see the following sections.

- [Modifying Network Properties on DCNM in Standalone Mode, on page 78](#)  
Sample Command Output for Modifying Network Parameters in the Cisco DCNM Standalone Setup, on page 79
- [Modifying Network Properties on DCNM in Native HA Mode, on page 80](#)  
Sample Command Output for Modifying Network Parameters in the Cisco DCNM Native HA Setup, on page 81

### Modifying Network Properties on DCNM in Standalone Mode

The following sample shows the output for the **appmgr update network-properties** command for a Cisco DCNM Standalone Appliance.



**Note** Execute the following commands on the DCNM Appliance console to avoid a premature session timeout.

1. Initiate a session on the console, using the following command:  
**appmgr update network-properties session start**
2. Update the Network Properties using the following command:  
**appmgr update network-properties set ipv4 {eth0|eth1} <ipv4-address> <network-mask> <gateway>**  
Enter the new IPv4 address for the Management (eth0) interface, along with the subnet mask and gateway IP addresses.

- View and verify the changes by using the following command:

```
appmgr update network-properties session show {config | changes | diffs}
```

- After you validate the changes, apply the configuration using the following command:

```
appmgr update network-properties session apply
```

Wait for a few minutes before you can logon to the Cisco DCNM Web UI using the eth0 Management Network IP address.

### Sample Command Output for Modifying Network Parameters in the Cisco DCNM Standalone Setup

The following sample example shows how to modify the network parameters post installation for a Cisco DCNM Standalone setup.

```
dcnm# appmgr update network-properties session start

dcnm# appmgr update network-properties set ipv4 eth0 172.28.10.244 255.255.255.0 172.28.10.1
dcnm# appmgr update network-properties set ipv4 eth1 100.0.0.244 255.0.0.0
*****
WARNING: fabric/poap configuration may need to be changed
manually after changes are applied.
*****

dcnm# appmgr update network-properties session show changes
eth0 IPv4 addr 172.28.10.246/255.255.255.0 -> 172.28.10.244/255.255.255.0
eth1 IPv4 addr 1.0.0.246/255.0.0.0 -> 100.0.0.244/255.0.0.0

dcnm# appmgr update network-properties session apply
*****
WARNING

Applications of both nodes of the DCNM HA system need to be stopped
for the changes to be applied properly.

PLEASE STOP ALL APPLICATIONS MANUALLY
*****

Have applications been stopped? [y/n]: y
Applying changes
DELETE 1
Node left the swarm.
Server configuration file loaded: /usr/local/cisco/dcm/fm//conf/server.properties
log4j:WARN No appenders could be found for logger (fms.db).
log4j:WARN Please initialize the log4j system properly.
log4j:WARN See http://logging.apache.org/log4j/1.2/faq.html#noconfig for more info.
UPDATE 1
UPDATE 1
DELETE 1
server signaled
INFO      : [ipv6_wait_tentative] Waiting for interface eth0 IPv6 address(es) to leave the
'tentative' state
INFO      : [ipv6_wait_tentative] Waiting for interface eth0 IPv6 address(es) to leave the
'tentative' state
*****
Please run 'appmgr start afw; appmgr start all' to restart your nodes.
*****

dcnm# appmgr start afw; appmgr start all
Started AFW Server Processes
```

```

Started AFW Agent Processes
Started AFW Server Processes
Started AFW Agent Processes
Started applications managed by heartbeat..
Check the status using 'appmgr status all'
Starting High-Availability services: INFO: Resource is stopped
Done.

Warning: PID file not written; -detached was passed.
AMQP User Check
Started AFW Server Processes
Started AFW Agent Processes
dcnm#

```

### Modifying Network Properties on DCNM in Native HA Mode

The following sample shows output to modify the network parameters using the **appmgr update network-properties** command for a Cisco DCNM Native HA Appliance.



#### Note

- Execute the following commands on the DCNM Active and Standby node console to avoid premature session timeout.
- Ensure that you execute the commands in the same order as mentioned in the following steps.

1. Stop the DCNM Applications on the Standby node by using the following command:

```
appmgr stop all
```

Wait until all the applications stop on the Standby node before you go proceed.

2. Stop the DCNM Applications on the Active node by using the following command:

```
appmgr stop all
```

3. Initiate a session on the Cisco DCNM console of both the Active and Standby nodes by using the following command:

```
appmgr update network-properties session start
```

4. On the Active node, modify the network interface parameters by using the following commands:

1. Configure the IP address for eth0 and eth1 address by using the following command:

```
appmgr update network-properties set ipv4 {eth0|eth1} <ipv4-address> <network-mask> <gateway>
```

Enter the new IPv4 or IPv6 address for the eth1 interface, along with the subnet mask and gateway IP addresses.

2. Configure the VIP IP address by using the following command:

```
appmgr update network-properties set ipv4 {vip0|vip1} <ipv4-address> <network-mask>
```

Enter the vip0 address for eth0 interface. Enter the vip1 address for eth1 interface.

3. Configure the peer IP address by using the following command:

```
appmgr update network-properties set ipv4 {peer0|peer1} <ipv4-address>
```

Enter the eth0 address of the Standby node as peer0 address for Active node. Enter the eth1 address of the Standby node as peer1 address for Active node.

4. View and validate the changes that you have made to the network parameters by using the following command:

```
appmgr update network-properties session show {config | changes | diffs}
```

View the changes that you have configured by using the following command:

5. On the Standby node, modify the network interface parameters using the commands described in [Step 4](#).

6. After you validate the changes, apply the configuration on the Active node by using the following command:

```
appmgr update network-properties session apply
```

Wait until the prompt returns, to confirm that the network parameters are updated.

7. After you validate the changes, apply the configuration on the Standby node by using the following command:

```
appmgr update network-properties session apply
```

8. Start all the applications on the Active node by using the following command:

```
appmgr start all
```




---

**Note** Wait until all the applications are running successfully on the Active node, before proceeding to the next step.

---

9. Start all the applications on the Standby node by using the following command:

```
appmgr start all
```

10. Establish peer trust key on the Active node by using the following command:

```
appmgr update ssh-peer-trust
```

11. Establish peer trust key on the Standby node by using the following command:

```
appmgr update ssh-peer-trust
```

### Sample Command Output for Modifying Network Parameters in the Cisco DCNM Native HA Setup

The following sample example shows how to modify the network parameters post installation for a Cisco DCNM Native HA setup.




---

**Note** For example, let us indicate Active and Standby appliances as **dcnm1** and **dcnm2** respectively.

---

```
[root@dcnm2]# appmgr stop all
Stopping AFW Applications...
Stopping AFW Server Processes
Stopping AFW Agent Processes
Stopped Application Framework...
Stopping High-Availability services: Done.
```

```

Stopping and halting node rabbit@dcnm2 ...
Note: Forwarding request to 'systemctl enable rabbitmq-server.service'.
Stopping AFW Applications...
Stopping AFW Server Processes
Stopping AFW Agent Processes
Stopped Application Framework...
[root@dcnm2]#

[root@dcnm1]# appmgr stop all
Stopping AFW Applications...
Stopping AFW Server Processes
Stopping AFW Agent Processes
Stopped Application Framework...
Stopping High-Availability services: Done.

Stopping and halting node rabbit@dcnm1 ...
Note: Forwarding request to 'systemctl enable rabbitmq-server.service'.
Stopping AFW Applications...
Stopping AFW Server Processes
Stopping AFW Agent Processes
Stopped Application Framework...
[root@dcnm1]#

[root@dcnm1]# appmgr update network-properties session start
[root@dcnm2]# appmgr update network-properties session start

[root@dcnm1]# appmgr update network-properties set ipv4 eth0 172.28.10.244 255.255.255.0 172.28.10.1
[root@dcnm1]# appmgr update network-properties set ipv4 eth1 100.0.0.244 255.0.0.0
*****
WARNING: fabric/poap configuration may need to be changed
manually after changes are applied.
*****
[root@dcnm1]# appmgr update network-properties set ipv4 vip0 172.28.10.238 255.255.255.0
[root@dcnm1]# appmgr update network-properties set ipv4 vip1 100.0.0.238 255.0.0.0
[root@dcnm1]# appmgr update network-properties set ipv4 peer0 172.28.10.245
[root@dcnm1]# appmgr update network-properties set ipv4 peer1 100.0.0.245
[root@dcnm1]# appmgr update network-properties session show changes

[root@dcnm2]# appmgr update network-properties set ipv4 eth0 172.28.10.245 255.255.255.0 172.28.10.1
[root@dcnm2]# appmgr update network-properties set ipv4 eth1 100.0.0.245 255.0.0.0
*****
WARNING: fabric/poap configuration may need to be changed
manually after changes are applied.
*****
[root@dcnm2]# appmgr update network-properties set ipv4 vip0 172.28.10.238 255.255.255.0
[root@dcnm2]# appmgr update network-properties set ipv4 vip1 100.0.0.238 255.0.0.0
[root@dcnm2]# appmgr update network-properties set ipv4 peer0 172.28.10.244
[root@dcnm2]# appmgr update network-properties set ipv4 peer1 100.0.0.244
[root@dcnm2]# appmgr update network-properties session show changes

[root@dcnm1]# appmgr update network-properties session show changes
eth0 IPv4 addr 172.28.10.246/255.255.255.0 -> 172.28.10.244/255.255.255.0
eth1 IPv4 addr 1.0.0.246/255.0.0.0 -> 100.0.0.244/255.0.0.0
eth0 VIP 172.28.10.248/24 -> 172.28.10.238/24
eth1 VIP 1.0.0.248/8 -> 100.0.0.238/8
Peer eth0 IP 172.28.10.247 -> 172.28.10.245
Peer eth1 IP 1.0.0.245 -> 100.0.0.245

[root@dcnm1]# appmgr update network-properties session show config
===== Current configuration =====

```

```

NTP Server      1.ntp.esl.cisco.com
eth0 IPv4 addr  172.28.10.246/255.255.255.0
eth0 IPv4 GW    172.28.10.1
eth0 DNS        171.70.168.183
eth0 IPv6 addr  2001:420:284:2004:4:112:210:20/112
eth0 IPv6 GW    2001:420:284:2004:4:112:210:1
eth1 IPv4 addr  1.0.0.246/255.0.0.0
eth1 IPv4 GW    1.0.0.246
eth1 DNS        1.0.0.246
eth1 IPv6 addr
eth2 IPv4 addr  /
eth2 IPv4 GW
Peer eth0 IP    172.28.10.247
Peer eth1 IP    1.0.0.247
Peer eth2 IP
eth0 VIP        172.28.10.248/24
eth1 VIP        1.0.0.248/8
eth2 VIP        /
eth0 VIPv6      /
eth1 VIPv6      /

```

```

===== Session configuration =====
NTP Server      1.ntp.esl.cisco.com
eth0 IPv4 addr  172.28.10.244/255.255.255.0
eth0 IPv4 GW    172.28.10.1
eth0 DNS        171.70.168.183
eth0 IPv6 addr  2001:420:284:2004:4:112:210:20/112
eth0 IPv6 GW    2001:420:284:2004:4:112:210:1
eth1 IPv4 addr  100.0.0.244/255.0.0.0
eth1 IPv4 GW
eth1 DNS        1.0.0.246
eth1 IPv6 addr
eth2 IPv4 addr  /
eth2 IPv4 GW
Peer eth0 IP    172.28.10.245
Peer eth1 IP    100.0.0.245
Peer eth2 IP
eth0 VIP        172.28.10.238/24
eth1 VIP        100.0.0.238/8
eth2 VIP        /
eth0 VIPv6      /
eth1 VIPv6      /
[root@dcnm1]#

```

```

[root@dcnm2]# appmgr update network-properties session show config
===== Current configuration =====
NTP Server      1.ntp.esl.cisco.com
eth0 IPv4 addr  172.28.10.247/255.255.255.0
eth0 IPv4 GW    172.28.10.1
eth0 DNS        171.70.168.183
eth0 IPv6 addr
eth0 IPv6 GW
eth1 IPv4 addr  1.0.0.247/255.0.0.0
eth1 IPv4 GW
eth1 DNS        1.0.0.247
eth1 IPv6 addr
eth2 IPv4 addr  /
eth2 IPv4 GW
Peer eth0 IP    172.28.10.246
Peer eth1 IP    1.0.0.246
Peer eth2 IP
eth0 VIP        172.28.10.248/24
eth1 VIP        1.0.0.248/8
eth2 VIP        /

```

```

eth0 VIPv6      /
eth1 VIPv6      /

===== Session configuration =====
NTP Server      1.ntp.esl.cisco.com
eth0 IPv4 addr  172.28.10.245/255.255.255.0
eth0 IPv4 GW    172.28.10.1
eth0 DNS        171.70.168.183
eth0 IPv6 addr
eth0 IPv6 GW
eth1 IPv4 addr  100.0.0.245/255.0.0.0
eth1 IPv4 GW
eth1 DNS        1.0.0.247
eth1 IPv6 addr
eth2 IPv4 addr  /
eth2 IPv4 GW
Peer eth0 IP    172.28.10.244
Peer eth1 IP    100.0.0.244
Peer eth2 IP
eth0 VIP        172.28.10.238/24
eth1 VIP        100.0.0.238/8
eth2 VIP        /
eth0 VIPv6      /
eth1 VIPv6      /
[root@dcnm2]#

[root@dcnm1]# appmgr update network-properties session apply
*****
                          WARNING

Applications of both nodes of the DCNM HA system need to be stopped
for the changes to be applied properly.

                          PLEASE STOP ALL APPLICATIONS MANUALLY
*****

Have applications been stopped? [y/n]: y
Applying changes
DELETE 1
Node left the swarm.
Server configuration file loaded: /usr/local/cisco/dcm/fm//conf/server.properties
log4j:WARN No appenders could be found for logger (fms.db).
log4j:WARN Please initialize the log4j system properly.
log4j:WARN See http://logging.apache.org/log4j/1.2/faq.html#noconfig for more info.
UPDATE 1
UPDATE 1
DELETE 1
server signaled
INFO      : [ipv6_wait_tentative] Waiting for interface eth0 IPv6 address(es) to leave the
'tentative' state
INFO      : [ipv6_wait_tentative] Waiting for interface eth0 IPv6 address(es) to leave the
'tentative' state
*****
Please run 'appmgr start afw; appmgr start all' to restart your nodes.
*****
Please run 'appmgr update ssh-peer-trust' on the peer node.
*****
[root@dcnm1]#

[root@dcnm2]# appmgr update network-properties session apply
*****
                          WARNING

```

Applications of both nodes of the DCNM HA system need to be stopped for the changes to be applied properly.

```

PLEASE STOP ALL APPLICATIONS MANUALLY
*****

Have applications been stopped? [y/n]: y
Applying changes
DELETE 1
Node left the swarm.
Server configuration file loaded: /usr/local/cisco/dcm/fm//conf/server.properties
log4j:WARN No appenders could be found for logger (fms.db).
log4j:WARN Please initialize the log4j system properly.
log4j:WARN See http://logging.apache.org/log4j/1.2/faq.html#noconfig for more info.
UPDATE 1
UPDATE 1
DELETE 1
afwnetplugin:0.1
server signaled
*****
Please run 'appmgr start afw; appmgr start all' to restart your nodes.
*****
Please run 'appmgr update ssh-peer-trust' on the peer node.
*****
[root@dcnm2]#

[root@dcnm1]# appmgr start afw; appmgr start all
Started AFW Server Processes
Started AFW Agent Processes
Started AFW Server Processes
Started AFW Agent Processes
Started applications managed by heartbeat..
Check the status using 'appmgr status all'
Starting High-Availability services: INFO: Resource is stopped
Done.

Warning: PID file not written; -detached was passed.
AMQP User Check
Started AFW Server Processes
Started AFW Agent Processes
[root@dcnm1]#

Wait until dcnm1 becomes active again.

[root@dcnm2]# appmgr start afw; appmgr start all
Started AFW Server Processes
Started AFW Agent Processes
Started AFW Server Processes
Started AFW Agent Processes
Started applications managed by heartbeat..
Check the status using 'appmgr status all'
Starting High-Availability services: INFO: Resource is stopped
Done.

Warning: PID file not written; -detached was passed.
AMQP User Check
Started AFW Server Processes
Started AFW Agent Processes
[root@dcnm2]#

[root@dcnm1]# appmgr update ssh-peer-trust
/usr/bin/ssh-copy-id: INFO: Source of key(s) to be installed: "/root/.ssh/id_rsa.pub"
Number of key(s) added: 1

```

```

Now try logging into the machine, with: "ssh -o 'StrictHostKeyChecking=no' '172.28.10.245'"
and check to make sure that only the key(s) you wanted were added.
/usr/bin/ssh-copy-id: INFO: Source of key(s) to be installed: "/root/.ssh/id_rsa.pub"
Number of key(s) added: 1

Now try logging into the machine, with: "ssh -o 'StrictHostKeyChecking=no' '100.0.0.245'"
and check to make sure that only the key(s) you wanted were added.
/usr/bin/ssh-copy-id: INFO: Source of key(s) to be installed: "/root/.ssh/id_rsa.pub"
Number of key(s) added: 1
Now try logging into the machine, with: "ssh -o 'StrictHostKeyChecking=no'
'dcnm-247.cisco.com'"
and check to make sure that only the key(s) you wanted were added.
[root@dcnm1]#

[root@dcnm2]# appmgr update ssh-peer-trust
/usr/bin/ssh-copy-id: INFO: Source of key(s) to be installed: "/root/.ssh/id_rsa.pub"
Number of key(s) added: 1

Now try logging into the machine, with: "ssh -o 'StrictHostKeyChecking=no' '172.28.10.244'"
and check to make sure that only the key(s) you wanted were added.
/usr/bin/ssh-copy-id: INFO: Source of key(s) to be installed: "/root/.ssh/id_rsa.pub"
Number of key(s) added: 1

Now try logging into the machine, with: "ssh -o 'StrictHostKeyChecking=no' '100.0.0.244'"
and check to make sure that only the key(s) you wanted were added.
/usr/bin/ssh-copy-id: INFO: Source of key(s) to be installed: "/root/.ssh/id_rsa.pub"
Number of key(s) added: 1

Now try logging into the machine, with: "ssh -o 'StrictHostKeyChecking=no'
'dcnm-246.cisco.com'"
and check to make sure that only the key(s) you wanted were added.
[root@dcnm2]#

```

## Configuring Enhanced-Fabric-Inband Interface (eth2) Post DCNM Installation

During the DCNM installation, you can configure the In-Band Management interface. You must associate this network with the port group that corresponds to a fabric in-band connection. The In-Band Network provides reachability to the devices via the front-panel ports.




---

**Note** If you need to modify the already configured in-band network (eth2 interface), execute the **ifconfig eth2 0.0.0.0** command and run the **appmgr setup inband** command again.

---




---

**Note** You cannot use Endpoint Locator and Telemetry features if the eth2 interface is not configured.

---

To configure the eth2 interface for the in-band management network, use the **appmgr setup inband** command.

The following example shows a sample output for the **appmgr setup inband** command for a Cisco DCNM Standalone Appliance.

```

[root@dcnm]# appmgr setup inband
Configuring Interface for InBand Connectivity...
Please enter the information as prompted:
InBand Physical IP [e.g. 2.2.2.69]: 2.0.0.250

```

```

InBand Network Mask [e.g. 255.255.255.0]: 255.0.0.0
InBand Gateway [e.g. 2.2.2.1]: 2.0.0.1
Validating Inputs ...

You have entered these values..
PIP=2.0.0.250
NETMASK=255.0.0.0
GATEWAY=2.0.0.1

Press 'y' to continue configuration, 'n' to discontinue [y] y
{"ResponseType":0,"Response":"Refreshed"}
{"ResponseType":0,"Response":{"AfwServerEnabled":true,"AfwServerReady":true,"InbandSubnet":"2.0.0.0/8",
"InbandGateway":"2.0.0.1","OutbandSubnet":"0.0.0.0/8","OutbandGateway":"0.0.0.0","UnclusteredMode":true}}

Done.
[root@dcnm]#

```

The following example shows a sample output for the **appmgr setup inband** command for a Cisco DCNM Native HA Appliance.

On Cisco DCNM Primary appliance:

```

[root@dcnm-primary]# appmgr setup inband
Configuring Interface for InBand Connectivity...
Please enter the information as prompted:
InBand Physical IP [e.g. 2.2.2.69]: 2.0.0.244
InBand Network Mask [e.g. 255.255.255.0]: 255.0.0.0
InBand Gateway [e.g. 2.2.2.1]: 2.0.0.1
InBand Virtual IP for HA setup [e.g. 2.2.2.60]: 2.0.0.243
InBand Virtual Network Mask [mandatory for HA setup] [e.g. 255.255.255.0]: 255.0.0.0
Peer Inband IP [mandatory for HA setup] [e.g. 2.2.2.59]: 2.0.0.244
Validating Inputs ...

You have entered these values..
PIP=2.0.0.244
NETMASK=255.0.0.0
GATEWAY=2.0.0.1
VIP=2.0.0.243
VIP_NETMASK=255.0.0.0
PEER_ETH2=2.0.0.244

Press 'y' to continue configuration, 'n' to discontinue [y] y

Done.
[root@dcnm-primary]#

```

On Cisco DCNM Secondary appliance:

```

[root@dcnm-secondary]# appmgr setup inband
Configuring Interface for InBand Connectivity...
Please enter the information as prompted:
InBand Physical IP [e.g. 2.2.2.69]: 2.0.0.245
InBand Network Mask [e.g. 255.255.255.0]: 255.0.0.0
InBand Gateway [e.g. 2.2.2.1]: 2.0.0.1
InBand Virtual IP for HA setup [e.g. 2.2.2.60]: 2.0.0.243
InBand Virtual Network Mask [mandatory for HA setup] [e.g. 255.255.255.0]: 255.0.0.0
Peer Inband IP [mandatory for HA setup] [e.g. 2.2.2.59]: 2.0.0.244
Validating Inputs ...

You have entered these values..
PIP=2.0.0.245
NETMASK=255.0.0.0
GATEWAY=2.0.0.1

```

```
VIP=2.0.0.243
VIP_NETMASK=255.0.0.0
PEER_ETH2=2.0.0.244

Press 'y' to continue configuration, 'n' to discontinue [y] y
HA Role is Active {"ResponseType":0,"Response":"Refreshed"}
Done.

[root@dcnm-secondary]#
```

## Changing the DCNM Password Post DCNM Installation

The password to access Cisco DCNM Web UI is configured while installing the Cisco DCNM for your deployment type. However, you can modify this password post installation also, if required.

To change the password post installation, perform the following steps:

### Procedure

- 
- Step 1** Stop the applications using the **appmgr stop all** command.
- Wait until all the applications stop running.
- Step 2** Change the password for the management interface by using the **appmgr change\_pwd ssh {root|poap}[password]** command.
- Ensure that the new password adheres to the following password requirements. If you do not comply with the requirements, the DCNM application might not function properly:
- It must be at least 8 characters long and contain at least one alphabet and one numeral.
  - It can contain a combination of alphabets, numerals, and special characters.
  - Do not use any of these special characters in the DCNM password: <SPACE> " & \$ % ' ^ = < > ; : ` \ | / , . \*
- Step 3** Start the application using the **appmgr start all** command.
- 

## Utility Services Details

This section describes the details of all the utility services within the functions they provide in Cisco DCNM. The functions are as follows:

### Device Power On Auto Provisioning

Power On Auto Provisioning (POAP) occurs when a switch boots without any startup configuration. It is accomplished by two components that were installed:

- DHCP Server

The DHCP server parcels out IP addresses to switches in the fabric and points to the location of the POAP database, which provides the Python script and associates the devices with images and configurations.

During the Cisco DCNM installation, you define the IP Address for the inside fabric management address or OOB management network and the subnets associated with the Cisco Programmable Fabric management.



---

**Note** You should always configure DHCP through Cisco DCNM web UI by choosing: **Configure > POAP > DHCP Scopes**. Editing the `/etc/dhcp/dhcp.conf` file from an SSH terminal might lead to unexpected behavior.

---

- Repositories

The TFTP server hosts boot scripts that are used for POAP.

The SCP server downloads the database files, configuration files, and the software images.

## Managing Applications and Utility Services

You can manage the applications and utility services for Cisco Programmable Fabric in the Cisco DCNM through commands in an SSH terminal.

Enter the **appmgr** command from the SSH terminal by using the following credentials:

- Username: **root**
- Password: **Administrative password provided during deployment**



---

**Note** For your reference, context sensitive help is available for the **appmgr** command. Use the **appmgr** command to display help.

---

Use the **appmgr tech\_support** command to produce a dump of the log files. You can then provide this information to the TAC team for troubleshooting and analysis of your setup.



---

**Note** This section does not describe commands for Network Services using Cisco Prime Network Services Controller.

---

This section includes the following:

## Verifying the Application and Utility Services Status after Deployment

After you deploy the OVA/ISO file, you can determine the status of various applications and utility services that were deployed in the file. You can use the **appmgr status** command in an SSH session to perform this procedure.



**Note** Context-sensitive help is available for the **appmgr status** command. Use the **appmgr status ?** command to display help.

**Procedure**

- Step 1** Open up an SSH session:
- a) Enter the **ssh root DCNM network IP address** command.
  - b) Enter the administrative password to login.

**Step 2** Check the status by using the following command:

**appmgr status all**

**Example:**

The following sample if taken from Cisco DCNM for Media Controller Deployment.

```

dcnm# appmgr status all

DCNM v11 will only use HTTPS. Insecure access via HTTP is disabled.
Please use the url https://<DCNM-IP-ADDRESS> or https://<HOSTNAME> to launch the DCNM UI.

DCNM Status

  PID  USER      PR  NI  VIRT    RES    SHR  S  %CPU  %MEM    TIME+  COMMAND
  ===  =====  ==  ==  =====  =====  =====  =  =====  =====  =====  =====
27724 root       20   0  12.2g   3.9g   49328  S   0.0  16.6   60:24.10  java

Elasticsearch Status

  PID  USER      PR  NI  VIRT    RES    SHR  S  %CPU  %MEM    TIME+  COMMAND
  ===  =====  ==  ==  =====  =====  =====  =  =====  =====  =====  =====
2861  elastic+  20   0  6858536  346396  16484  S   6.2   1.4   11:03.40  java

Telemetry Manager Status

  PID  USER      PR  NI  VIRT    RES    SHR  S  %CPU  %MEM    TIME+  COMMAND
  ===  =====  ==  ==  =====  =====  =====  =  =====  =====  =====  =====
2964  root       20   0   796984   5060   3416  S   0.0   0.0    1:06.11  telemetry-mgr.b

PMN Telemetry Status

  PID  USER      PR  NI  VIRT    RES    SHR  S  %CPU  %MEM    TIME+  COMMAND
  ===  =====  ==  ==  =====  =====  =====  =  =====  =====  =====  =====
3779  root       20   0   10.6g  233640  16236  S   0.0   1.0    0:06.82  java

TFTP Status

  PID  USER      PR  NI  VIRT    RES    SHR  S  %CPU  %MEM    TIME+  COMMAND
  ===  =====  ==  ==  =====  =====  =====  =  =====  =====  =====  =====
30377 root       20   0   27164   1072    820  S   0.0   0.0    0:00.00  xinetd

DHCP Status

  PID  USER      PR  NI  VIRT    RES    SHR  S  %CPU  %MEM    TIME+  COMMAND
  ===  =====  ==  ==  =====  =====  =====  =  =====  =====  =====  =====
30416 dhcpd    20   0  105616   5656   3448  S   0.0   0.0    0:25.32  dhcpd
    
```

AMQP Status

| PID   | USER     | PR | NI | VIRT    | RES   | SHR   | S | %CPU  | %MEM  | TIME+   | COMMAND  |
|-------|----------|----|----|---------|-------|-------|---|-------|-------|---------|----------|
| ===   | =====    | == | == | =====   | ===== | ===== | = | ===== | ===== | =====   | =====    |
| 32157 | rabbitmq | 20 | 0  | 5996960 | 78564 | 4272  | S | 0.0   | 0.3   | 9:30.39 | beam.smp |

## Stopping, Starting, and Resetting Utility Services

Use the following CLI commands for stopping, starting, and resetting utility services:

- To stop an application, use the **appmgr stop** command.

```
dcnm# appmgr stop dhcp
Shutting down dhcpd:      [ OK ]
```

- To start an application, use the **appmgr start** command.

```
dcnm# appmgr start amqp
Starting vsftpd for amqp: [ OK ]
```

- To restart an application use the **appmgr restart** command.

```
# appmgr restart tftp
Restarting TFTP...
Stopping xinetd:         [ OK ]
Starting xinetd:        [ OK ]
```



**Note** From Cisco DCNM Release 7.1.x, when you stop an application by using the **appmgr stop *app\_name*** command, the application will not start during successive reboots.

For example, if DHCP is stopped by using the **appmgr stop dhcp** command, and the OS is rebooted, the DHCP application will still be down after the OS is up and running.

To start again, use the command **appmgr start dhcp**. The DHCP application will be started after reboots also. This is to ensure that when an environment uses an application that is not packaged as part of the virtual appliance (like CPNR instead of DHCP), the application locally packaged with the virtual appliance will not interfere with its function after any OS reboots.



**Note** When a DCNM appliance (ISO/OVA) is deployed, the Cisco SMIS component will not get started by default. However, this component can be managed using the appmgr CLI: **appmgr start/stop dcnm-smis**  
**appmgr start/stop dcnm** will start or stop only the DCNM web component.

