



Certificates

- [Collecting PM Data, on page 1](#)

Collecting PM Data

To setup a shared rrd path to collect PM data, perform these steps:

Procedure

- Step 1** Locate the **server.properties** file under **C:\Program Files\Cisco Systems\dcm\fm\conf**.
 - Step 2** Add the **pm.rrdpath** property file information to the **server.properties** file. For example, add the server location that needs to be accessible from the DCNM server.
 - Step 3** Save the **server.properties** file.
 - Step 4** Restart the Cisco DCNM-SAN server.
-

What to do next

Once PM server is ready, the new shared location will be used by the PM server to save .rrd files. PM will create a new directory called db under pm. Ensure you do not open or change these .rrd files as PM server is actively writing into the .rrd files.

