



DCNM Integration with ServiceNow

- [DCNM Integration with ServiceNow, on page 1](#)


DCNM Integration with ServiceNow

ServiceNow offers applications for IT Service Management (ITSM) and IT Operations Management (ITOM). There are four primary modules - inventory discovery, incident management, event management & change management workflows. Starting from Cisco DCNM Release 11.3(1), we provide Cisco DCNM integration with ServiceNow. This enables you to integrate end-user IT data with the ServiceNow platform. The integration provides a default set of ServiceNow custom tables which are populated with configuration data.

To utilize this functionality, install the DCNM application in the ServiceNow customer instance and provide the DCNM mid-server details. Information or data regarding switch details, port details, and alarms, is retrieved to the ServiceNow Configuration Management Database (CMDB) tables. By default, data is retrieved every 15 minutes and displayed.

Details about the switches and ports of each switch are collected from the DCNM inventory. The alarms are collected by polling DCNM. Alarms are then filtered and categorized based on their type, such as, CPU, MEMORY, POWER, LINKSTATE, EXTERNAL, ICMP, SNMP, and SSH. The alarms are then stored in an Events table. These events are then used to generate incidents for the CPU, MEMORY, SNMP, and SSH categories. The source, description, severity and category of each alarm is stored. However, when an alarm ceases to exist in DCNM, the incident that was raised for it is not updated or cleared on the DCNM ServiceNow application. When polling of alarms is initiated for the first time, the alarms that were raised in the last seven days are pulled in from DCNM.

The DCNM application on ServiceNow runs scheduled scripts and connects with the mid-server which in turn connects with DCNM to retrieve data. DCNM sends the requested data to the mid-server which then passes on the data to the DCNM application on ServiceNow. The tables in the DCNM instance on ServiceNow are then populated with this retrieved data.

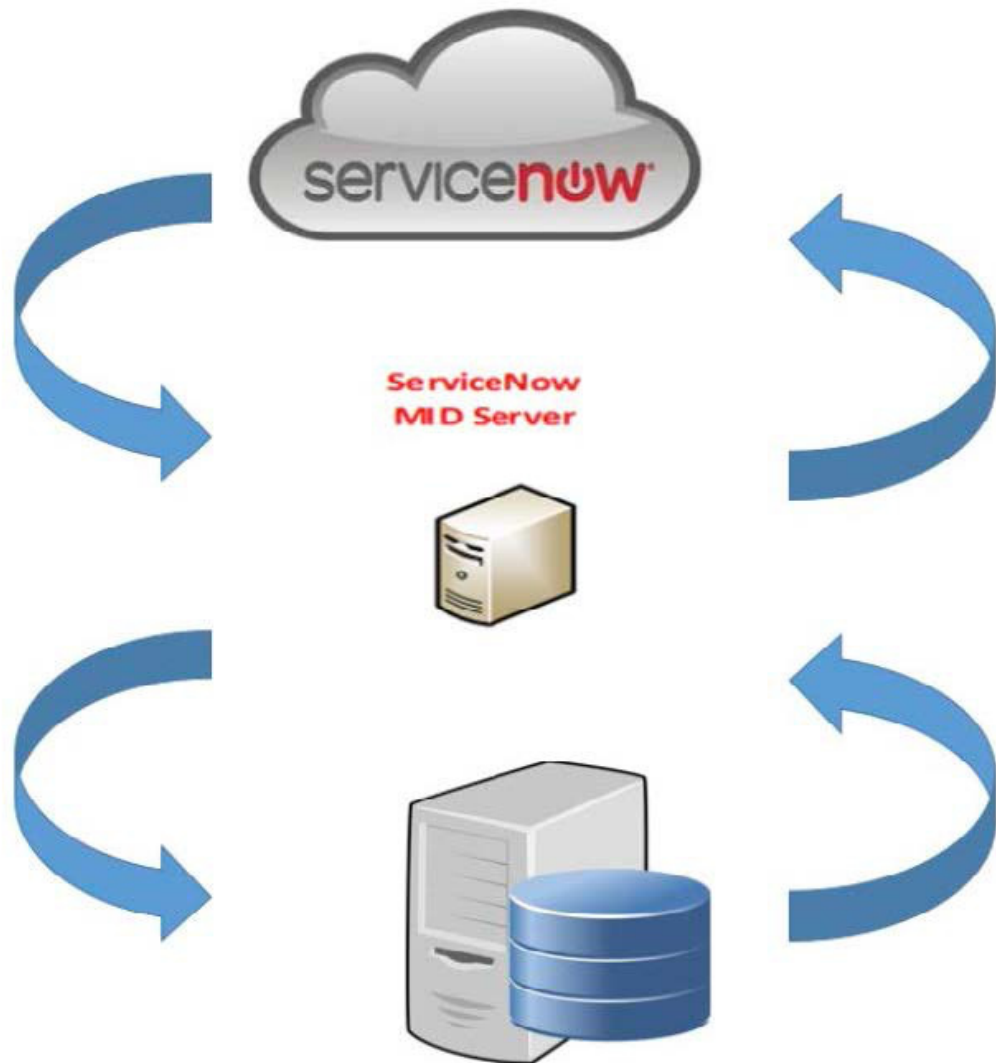

Guidelines and Limitations of DCNM Integration with ServiceNow

- In the ServiceNow Cisco DCNM Application version 1.0, details about only one MID server can be added in the **Cisco DCNM>Properties** table. Starting from Cisco DCNM Application version 1.1, multiple MID servers can be added in the **Cisco DCNM>Properties** table. This means that data can be retrieved from multiple DCNM setups at the same time. In the ServiceNow GUI, data from each DCNM is distinguished by the DCNM IP address.

| DCNM IP Address | MidServer Status | DCNM Connection Status |
|-----------------|------------------|------------------------|
| 10.106.177.145 | Up | Reachable |
| 10.106.228.223 | Up | Reachable |
| 10.106.228.226 | Up | Reachable |


- Scheduled scripts to retrieve data are run only after insertion of a server record in the **Cisco DCM>Properties** table.
- In case the mid-server IP Address and credentials in the **Cisco DCM>Properties** table are changed, the data that was imported using the previous mid-server is deleted from the application scope tables. However, data that was imported to the ServiceNow CMDB (global scope) remains and is not deleted.
- To ensure optimal performance in the ServiceNow database, each entry is matched with the switch database ID and IP Address ensuring that there is no duplication of entries.
- Entries in the `cmdb_ci_ip_switch` table have to be manually deleted in case a new server is added in the **Cisco DCM>Properties** table.

Installing and Configuring the Cisco DCM Application on ServiceNow


Procedure

- Step 1** Log in to <https://dcnm1.service-now.com>. Select **System Applications > Applications**. Install the **Cisco DCM Application** from the **All Apps** tab.

- Step 2** After installation is complete, verify that the Cisco DCM Properties and Dashboard tabs are appearing in the application.

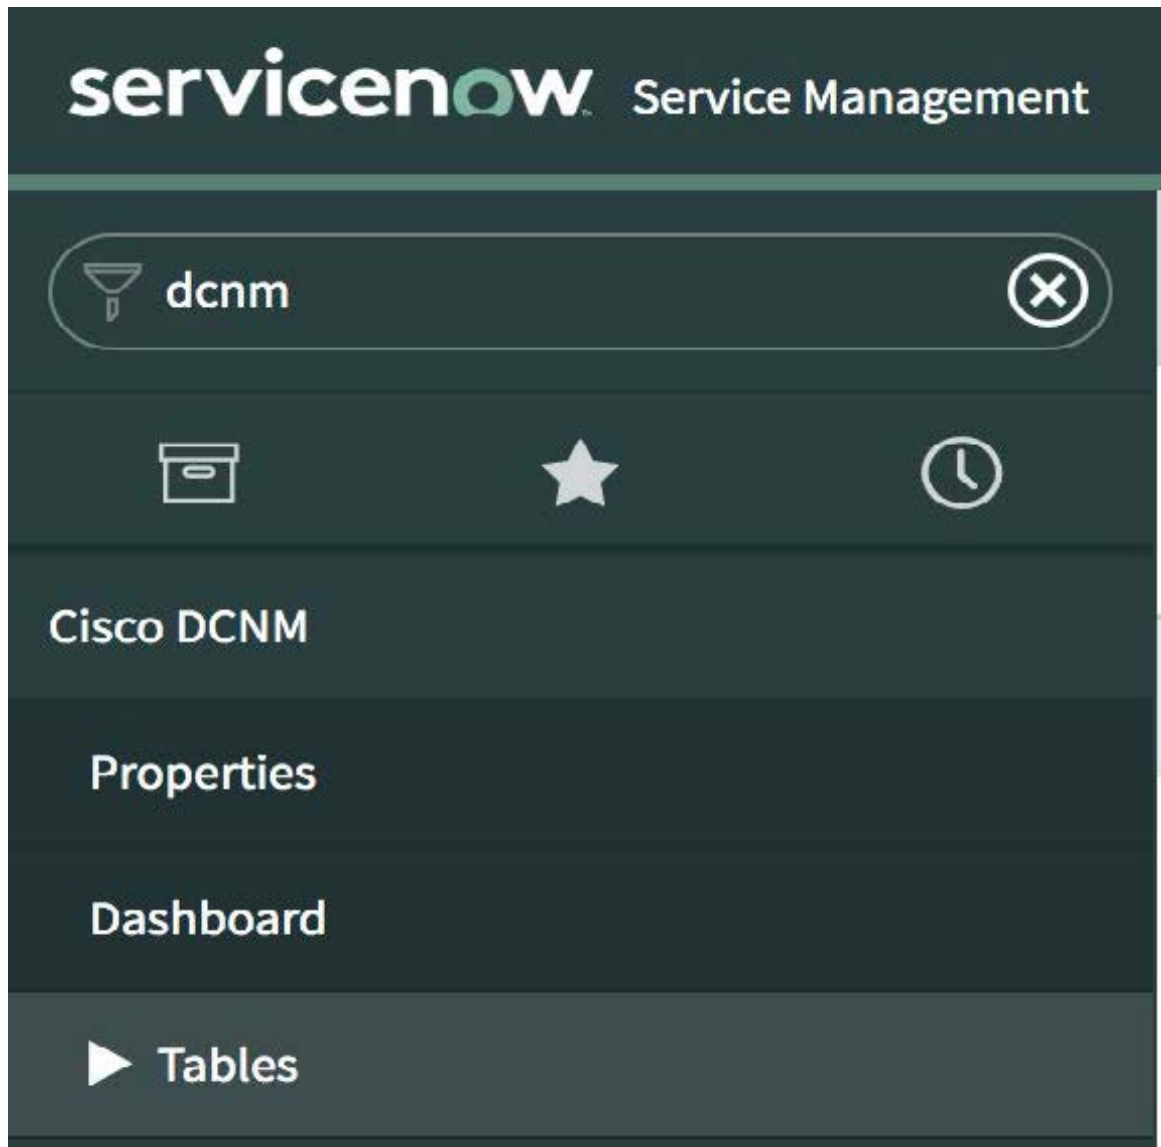

Step 3 Choose **MID Servers** and click the MID Server that is used for DCNM integration.

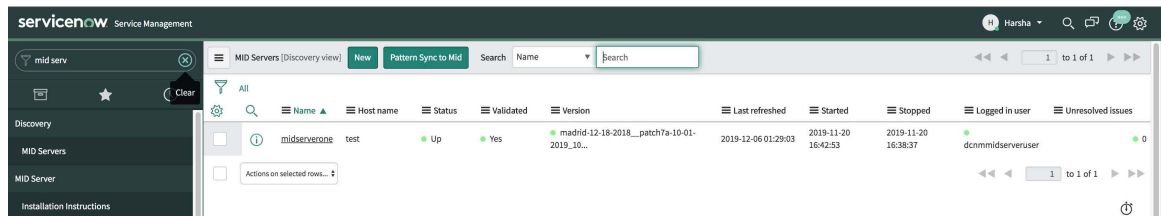

Step 4 Scroll down and click the **Properties** tab. Click **New** and add the property given below in the **MID Server Property New record** window. Click **Submit**.

| Name | Type | Value |
|---|------------|-------|
| glide.http.outbound.max_timeout.enabled | True/false | False |

The screenshot shows the ServiceNow interface for configuring a MID Server Property. The breadcrumb trail is 'dcnm > MID Server Property > New record'. A blue informational banner states: 'MID Server Properties allow administrators to configure a MID Server with additional configuration parameters to alter any default behavior. [More Info](#)'. The form contains the following fields:

- Application:** Global
- Name:** glide.http.outbound.max_timeout.enabled
- Value:** false
- MID server:** midserverone

A green 'Submit' button is located at the bottom left of the form area.

Step 5 Now, select the **Configuration Parameters** tab.

The screenshot shows the 'Configuration Parameters' tab for the MID Server 'midserverone'. The table lists the following parameters:

| Parameter name | Value |
|-----------------------|--------------------------------|
| mid_proxy_use_proxy | true |
| url | https://dcnm1.service-now.com/ |
| mid_proxy_port | 80 |
| mid_instance_username | dcnm1midserveruser |

A 'New' button is visible at the top left of the table.

Step 6 In the **Configuration Parameters** tab, click **New**. Enter the required details in the fields.

The screenshot shows the 'MID Server Configuration Parameter' form. The breadcrumb trail is 'dcnm > MID Server Configuration Parameter > New record'. The form contains the following fields:

- MID server:** midserverone
- Parameter name:** mid.disable_amb (Disable the AMB Client on the MID Server. Default: false)
- Domain:** global
- Value:** true

A green 'Submit' button is located at the bottom left of the form area.

Step 7 Click **Submit** to set up the MID Server.

Step 8 Choose **Cisco DCNM > Properties**. Click **New Server**. Enter the required parameters.

DCNM IP Address - IP Address of the DCM.

Username - Enter the username used to log in to DCM.

Password - Enter the password used to log in to DCM.

Note Access should be provided only for DCM admins.


Mid server - Specify the name of the mid server to be used. The name is auto-populated as you type. You can also click the search icon next to this field to bring the MID Servers window. You can then select a MID Server from the list that is displayed.

MidServer Status - Indicates whether the MID server is up or down.

DCM Connection Status - Indicates whether the DCM IP address that has been provided is reachable or not to retrieve data. This status field is populated when you click **Submit** after you have entered the required information. **Reachable** is displayed on successful communication with DCM, and **Unreachable**, in case the connection is unsuccessful.

Create Incident - Select this checkbox in case you need incidents to be raised automatically for alarm events.

User - Create a new user and add the user name in this field. The Caller field in the incidents that are created is populated with this user name. This field is auto-populated as you type. You can also click the search icon next to this field to bring the Users window. You can then select a user from the list that is displayed.

Category - Click the lock icon  to create incidents automatically for specific categories only.

Select the required category for which incidents have to be created from the drop-down list below the **Category** window. The available categories for creation of incidents are CPU, DEVICE_ACCESS_SNMP, DEVICE_ACCESS_SSH, and MEMORY. Refer the following table for more information on this.

Table 1: Events & Incidents

| Category | Data Collection in ServiceNow | Incident Raised | Incident Rule | ServiceNow Incident details |
|-----------|-------------------------------|-----------------|----------------------------------|---|
| CPU | Yes | Yes | DCNM Alarm severity = 'Critical' | Priority = 2 Urgency = 2 Impact = 2 |
| Memory | Yes | Yes | DCNM Alarm severity = 'Critical' | Priority = 2 Urgency = 2 Impact = 2 |
| Power | Yes | No | NA | NA |
| Linkstate | Yes | No | NA | NA |
| ICMP | Yes | No | NA | NA |
| SNMP | Yes | Yes | DCNM Alarm severity = 'Critical' | Priority = 2 Urgency = 2 Impact = 2 |
| SSH | Yes | Yes | DCNM Alarm severity = 'Critical' | Priority = 2 Urgency = 2 Impact = 2 |

Incidents will be created for the selected categories that have 'Critical' status from DCNM.

Category X

✓ -- None --

CPU

DEVICE_ACCESS_SNMP

DEVICE_ACCESS_SSH


MEMORY

Now, click **Submit**.


Viewing the Dashboard

Choose **Cisco DCNM>Dashboard** to display the dashboard. The **DCNM IP Address**, the **DCNM Connection Status** and the **MidServer Status** are displayed at the top of the dashboard.

Viewing the Dashboard

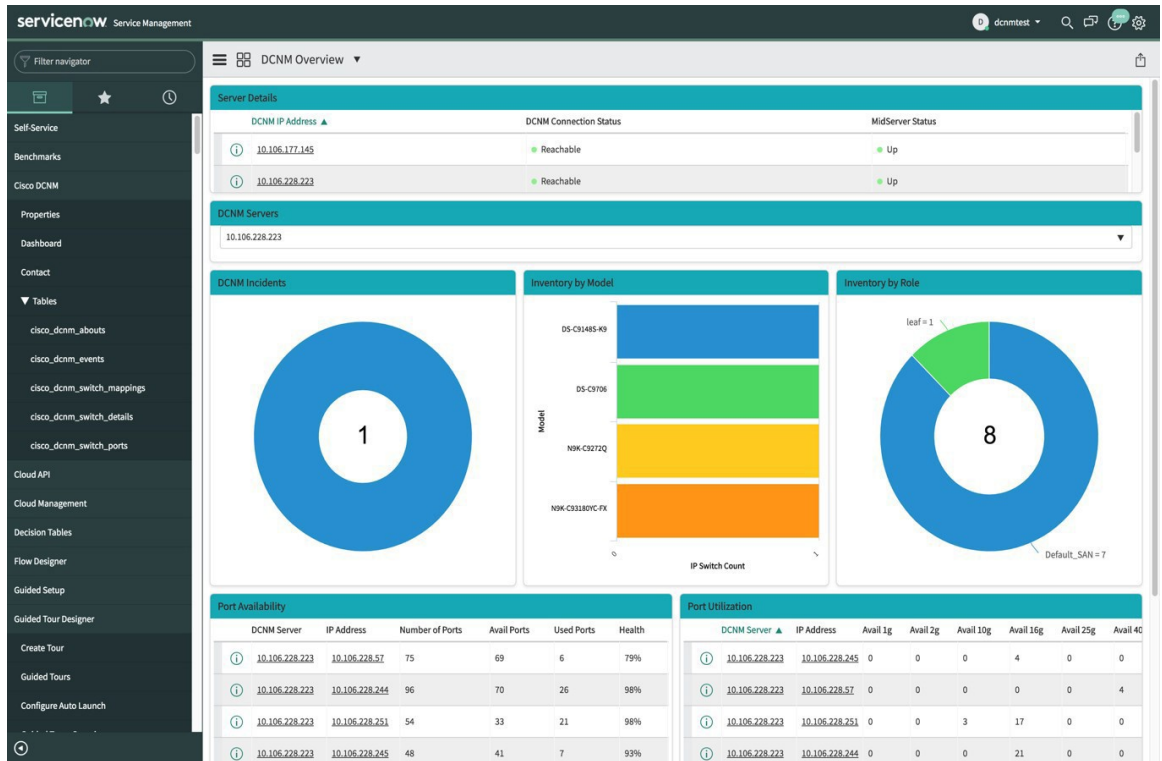


The **DCNM Servers** section displays the IP address of the DCNM server from which the data is being retrieved and displayed. Click the dropdown list to select any other DCNM server as per your requirement.

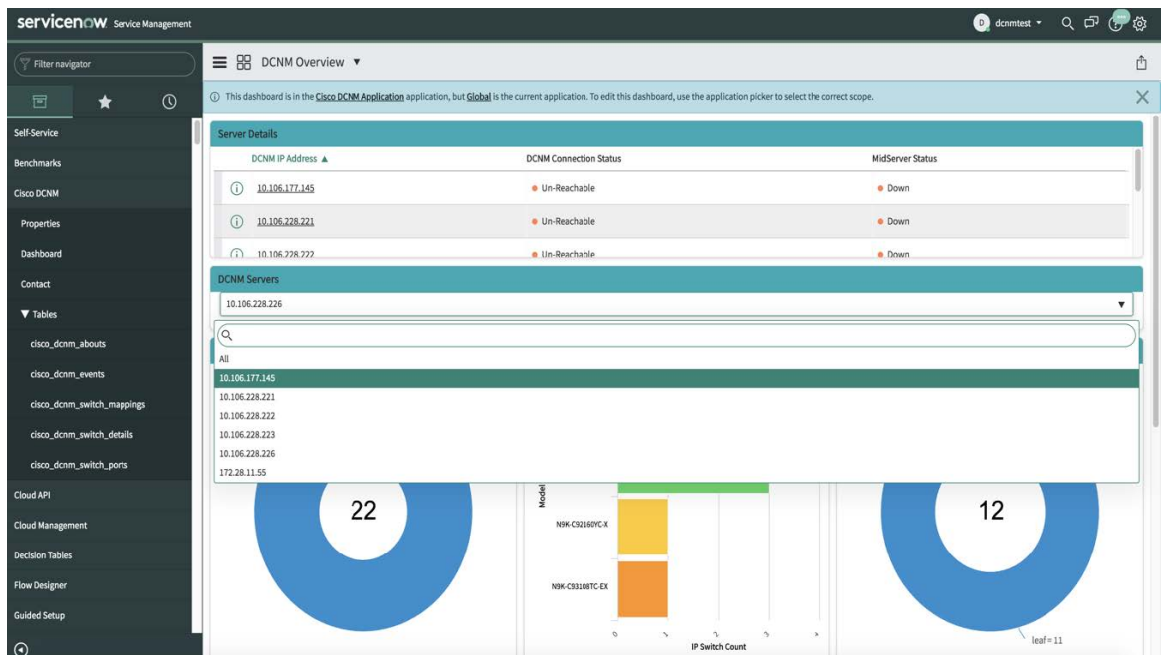


Click **All** to retrieve and display data from all the DCNM Servers that are displayed in the dropdown list. When the **All** option is selected, the number of incidents that are displayed in the DCNM Incidents donut are color-coded and displayed based on the different DCNM server IP addresses. The Inventory by Model and


Inventory by Role donuts also display data from all the DCNM servers. The Port Availability and Port Utilization donuts display data along with the DCNM Server that each IP address belongs to.

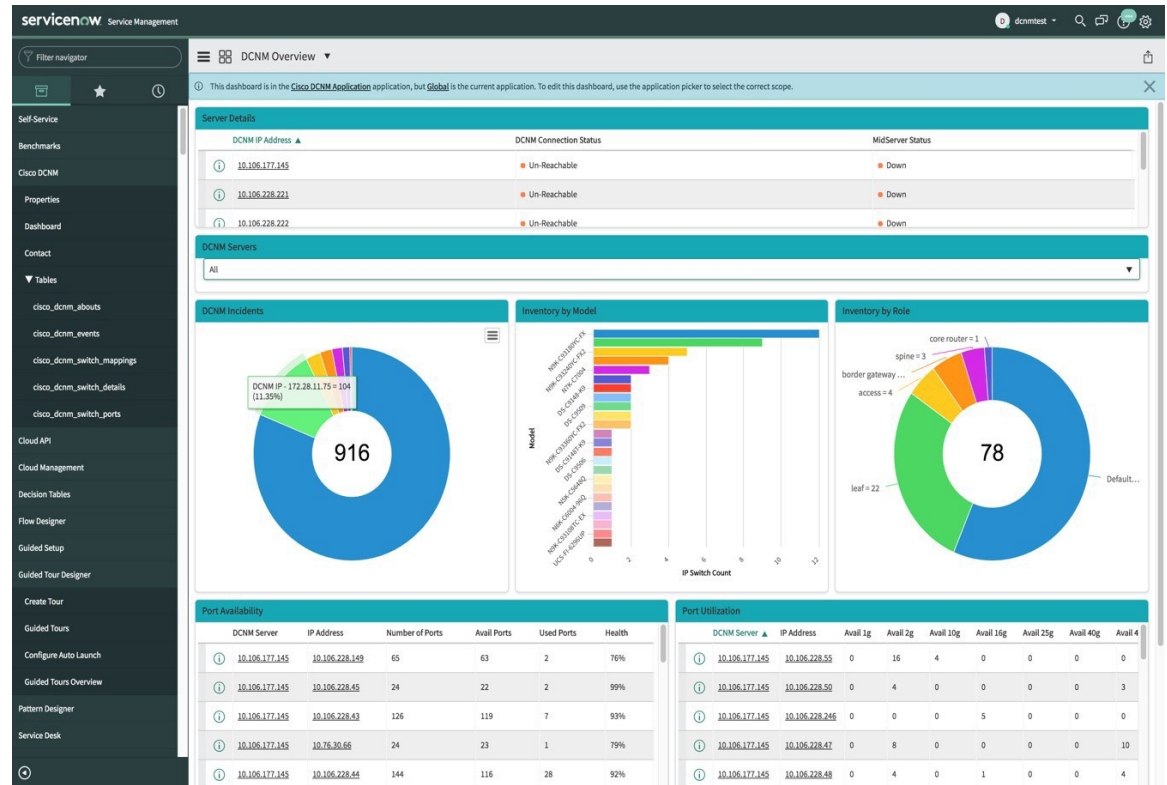

DCNM Incidents - This displays the number of incidents that have been raised based on the alarms retrieved from DCNM. Click the donut for more details about the

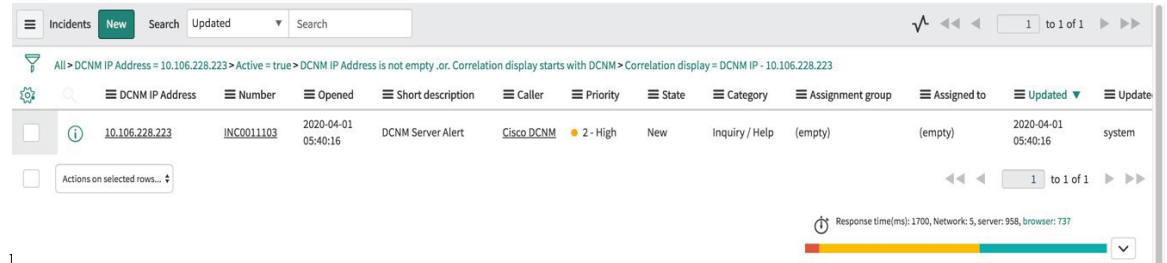

Inventory by Model - This displays the number and type of switches present in DCNM. Each band represents a device model. Click a band for more

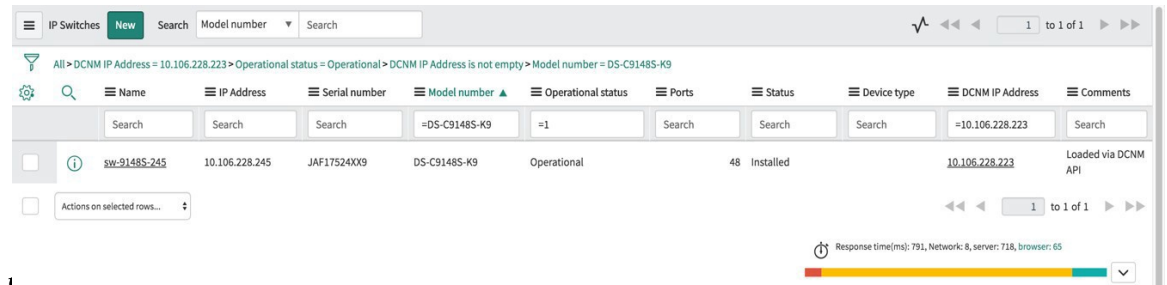

Inventory by Role - This displays the number and types of switch roles present in DCNM. Click the required section to display the number of roles that are operational and click on that pictorial representation to display more details about the roles.



Note The number that is displayed in the Inventory by Role donut does not change in case switches are removed from DCNM. The switches that are removed are displayed as Non Operational and there is no change in the number that is displayed in the donut.

| DCNM Server | IP Address | Switch DB ID | Switch Role | Number of Ports | Avail Ports | Used Ports | Peer | Peer Switch DB ID | VPC Domain | License Detail |
|----------------|---------------|--------------|-------------|-----------------|-------------|------------|------|-------------------|------------|----------------|
| 10.106.228.223 | 10.106.228.57 | 44520 | leaf | 75 | 71 | 4 | 0 | 0 | Permanent | |

Port Availability - This displays information about port availability. The DCNM server and IP address along with the total number of ports, available ports, used ports and health of the switch is displayed. Click an IP address to display more

| | | | |
|-----------------|----------------------|-------------------|------|
| Number of Ports | 75 | Peer | |
| Switch DB ID | 44520 | Peer Switch DB ID | 0 |
| Avail Ports | 71 | Switch Role | leaf |
| Health | 79% | Used Ports | 4 |
| License Detail | Permanent | VPC Domain | 0 |
| IP Address | 10.106.228.57 | | |
| DCNM Server | 10.106.228.223 | | |
| Comments | <input type="text"/> | | |

Port Utilization - This displays information about port utilization based on each IP address. The number of ports having 1G, 2G, 4G, 8G, 10G, 16G, 25G, 32G, 40G, and 100G availability, are displayed. Click an IP

address to display more

| | | | |
|--------------|----------------|-----------|-----|
| Switch DB ID | 60 | | |
| Avail 10g | 0 | Avail 16g | 4 |
| Avail 1g | 0 | Avail 25g | 0 |
| Avail 2g | 0 | Avail 32g | 0 |
| Avail 4g | 0 | Avail 40g | 0 |
| Avail 8g | 3 | Avail na | 0 |
| Avail 100g | 0 | Health | 94% |
| DCNM Server | 10.106.228.223 | | |
| Comments | | | |

Update Delete

Response time(ms): 1166, Network: 6, server: 1054, browser: 102

Contact Us

Choose **Cisco DCM>Contact** to display an email address and a telephone number that can be used to contact Cisco Systems for any queries.

servicenow Service Management

Filter navigator

- Self-Service
- Benchmarks
- Cisco DCM
- Properties
- Dashboard
- Contact

Cisco Data Center Network Manager

Contact Us:

Email: tac@cisco.com
Phone: +1408-526-7209


Response time(ms): 287, Network: 288, server: 766, browser: 30


Troubleshooting DCM Integration with ServiceNow

In case data is not being retrieved in the ServiceNow table:

- Check if the MID server is up or down.
- Check for information entries in system logs with the source “x_caci_cisco_dcnm”.
- Check the login credentials added in Cisco DCM Properties.
- Consider a scenario in which data is being displayed on the ServiceNow dashboard for the selected DCM server and then you want to display data for another DCM server. In such a scenario, the ServiceNow dashboard may take some time to load data from the other DCM server due to a delay in refreshing the cache. To refresh the data manually, click the **Refresh** icon that appears on the top right corner of the individual tiles when you hover the cursor over the tiles.



You can also refresh the whole dashboard by clicking on the **Dashboard Controls** icon  and then clicking **Refresh** to load the reports correctly.

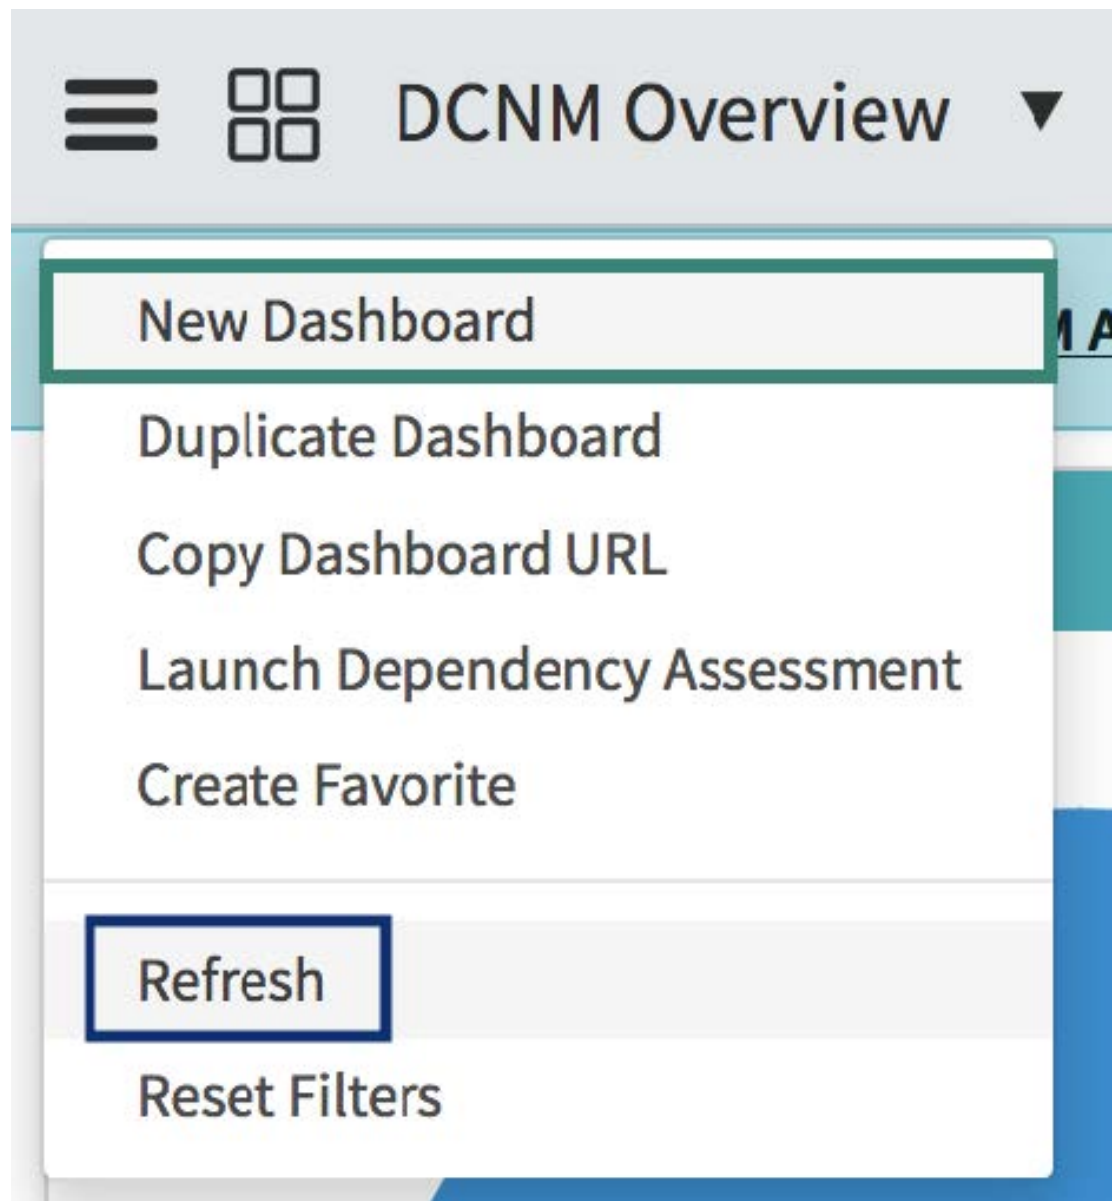

For more information on DCNM application integration with ServiceNow, [click here](#).

