

Send document comments to nexus7k-docfeedback@cisco.com.



G Commands

This chapter describes the Cisco NX-OS Multiprotocol Label Switching commands that begin with G.

[Send document comments to nexus7k-docfeedback@cisco.com.](mailto:nexus7k-docfeedback@cisco.com)

graceful-restart

To configure the graceful restart timer, use the **graceful-restart** command. To return to the default setting, use the **no** form of this command.

```
graceful-restart [timers {forwarding-holding seconds | max-recovery seconds | neighbor-liveness seconds}]
```

```
no graceful-restart [timers {forwarding-holding seconds | max-recovery seconds | neighbor-liveness seconds}]
```

Syntax Description		
timers	(Optional)	Specifies VPN routing.
forwarding-holding <i>seconds</i>		Specifies the forwarding state holding time. The range is from 30 to 600 seconds.
max-recovery <i>seconds</i>		Specifies the maximum recovery time. The range is from 15 to 600 seconds.
neighbor-liveness <i>seconds</i>		Specifies the neighbor lifetime. The range is from 5 to 300 seconds.

Defaults Enable

Command Modes LDP configuration mode

SupportedUserRoles network-admin
vdc-admin

Command History	Release	Modification
	5.2(1)	This command was introduced.

Usage Guidelines You must configure the MPLS VPN and VRFs before creating VRF-aware static labels. This command requires the MPLS Services license.

Examples This example shows how to configure the graceful restart timer:

```
switch(config-ldp)# configure terminal
switch(config)# mpls ldp configuration
switch(config-ldp)# graceful-restart timers forwarding-holding 30
switch(config-ldp)#
```

Send document comments to nexus7k-docfeedback@cisco.com.

Related Commands	Command	Description
	mpls ldp configuration	Configures the Multiprotocol Label Switching (MPLS) Label Distribution Protocol (LDP).

Send document comments to nexus7k-docfeedback@cisco.com.