



CHAPTER 1

Configuring Multicast Interoperation with N7K-F132-15 Modules

This chapter describes how multicasting interoperates in a chassis that contains both M Series and N7K-F132-15 modules.

This chapter includes the following sections:

- [Information About Multicast Interoperation, page 1-1](#)
- [Licensing Requirements for Multicast Interoperation, page 1-3](#)
- [Prerequisites for Multicast Interoperation, page 1-3](#)
- [Guidelines and Limitations, page 1-3](#)
- [Configuring Layer 3 Multicast Using a Mixed Chassis, page 1-3](#)
- [Verifying the Multicast Configuration, page 1-5](#)
- [Feature History for Multicast Interoperation, page 1-6](#)

Information About Multicast Interoperation

Beginning with Cisco NX-OS Release 5.1, you can add an N7K-F132-15 module, which is a Layer 2-only module, into the Cisco Nexus 7000 Series chassis. You can add this module to a chassis that already contains M Series modules to provide multicasting in a chassis that contains both N7K-F132-15 and M Series modules.

This section includes the following topics:

- [Multicast Interoperation with N7K-F132-15 and M Series Modules, page 1-2](#)
- [Virtualization Support, page 1-2](#)
- [High Availability, page 1-2](#)

[Send document comments to nexus7k-docfeedback@cisco.com](mailto:nexus7k-docfeedback@cisco.com)

Multicast Interoperation with N7K-F132-15 and M Series Modules



Note

You must install an N7K-M series module in the Cisco Nexus 7000 Series chassis to run Layer 3 routing and multicasting with the N7K-F132-15 module because you must have interfaces from both the M Series and the N7K-F132-15 modules in the same virtual device context (VDC). See the *Cisco Nexus 7000 Series Virtual Device Context Configuration Guide, Release 5.x*, for more information on VDCs.

Layer 3 routing and multicasting come up automatically when you have an N7K-M series module installed in the chassis with the N7K-F132-15 module. You can position a chassis with both N7K-F132-15 and M Series modules at the boundary between the Layer 2 and Layer 3 networks.

You must configure a VLAN interface for each VLAN on the N7K-F132-15 module that you want to use the proxy-routing functionality in a chassis that contains both N7K-F132-15 and M series modules. See the *Cisco Nexus 7000 Series Interfaces Configuration Guide, Release 5.x*, for information on configuring VLAN interfaces.

By default, all of the physical interfaces on the N7K-M series modules in the VDC become proxy routing ports for the VLANs that are configured with VLAN interfaces on the Layer 2-only N7K-F132-15 module in the same VDC. The physical interfaces on the M Series module can be administratively down and they still pass traffic as proxy routers.

Packets that enter an interface on the N7K-F132-15 module are automatically forwarded to one of the interfaces on the M Series modules in the same VDC to be routed. The interface on the M Series module also performs egress replication for Layer 3 multicast packets that enter an interface on the N7K-F132-15 module in the same VDC. See the *Cisco Nexus 7000 Series NX-OS Unicast Routing Configuration Guide, Release 5.x*, for additional information about the routing interoperation with the N7K-F132-15 module.

You can specify which interfaces on the M Series modules in the VDC where you want to perform the egress replication of VLAN interfaces for Layer 3 multicast packets. For multicast egress replication, the system automatically rebalances all the VLAN interfaces among all the available M Series proxy routing interfaces. You can specify automatic or manual rebalancing among the proxy multicast replicators. If you specify manual rebalancing, you trigger a rebalance by entering a command. This command is useful when you are inserting or removing modules.



Note

When you configure manual egress multicast replication load balancing and enter the rebalancing command, that command is not part of the configuration. It is not included in the commands that are copied when you enter the **copy running-config startup-config** command.

Virtualization Support

You must have interfaces from both the M Series and the N7K-F132-15 modules in the same VDC.

See the *Cisco Nexus 7000 Series Virtual Device Context Configuration Guide, Release 5.x*, for more information about VDCs.

High Availability

For information about high availability, see the *Cisco Nexus 7000 Series NX-OS High Availability and Redundancy Guide, Release 5.x*.

[Send document comments to nexus7k-docfeedback@cisco.com](mailto:nexus7k-docfeedback@cisco.com)

Licensing Requirements for Multicast Interoperation

The following table shows the licensing requirements for this feature:

Product	License Requirement
Cisco NX-OS	Multicast replication requires no license. However, PIM and PIM6 require an Enterprise Services license. For a complete explanation of the Cisco NX-OS licensing scheme and how to obtain and apply licenses, see the <i>Cisco NX-OS Licensing Guide</i> .

Prerequisites for Multicast Interoperation

For multicast interoperation, you must have at least one module of the following series in the Cisco Nexus 7000 Series chassis, as well as a valid license installed:

- M Series
- N7K-F132-15

Guidelines and Limitations

Multicasting has the following configuration guidelines and limitations:

- You must have interfaces from both the M Series and the N7K-F132-15 modules in the same VDC.

Configuring Layer 3 Multicast Using a Mixed Chassis

You can configure a Layer 3 gateway in a chassis with N7K-F132-15 and M series modules, by using the proxy routing functionality. You enable routing on a specific VLAN by configuring a VLAN interface. See the *Cisco Nexus 7000 Series NX-OS Interfaces Configuration Guide, Release 5.x*, for more information about Layer 3 routing and VLAN interfaces.

By default, Layer 3 routing and multicasting come up automatically when you have an N7K-M Series module installed in the chassis with the N7K-F132-15 module. Layer 3 routing, multicasting, and load balancing among the available N7K-M Series works by default using proxy routing on the N7K-M Series modules.

Optionally, you can specify which physical interfaces on the N7K-M Series modules that you want to use for egress multicast replication, as well as forcing rebalancing.

BEFORE YOU BEGIN

You must configure a VLAN interface for each VLAN on the N7K-F132-15 module where you want to use the proxy-routing functionality in a mixed chassis.

You must have interfaces from both the M Series and the N7K-F132-15 modules in the same VDC.

If you remove an interface from the VDC and then enter this command, the removed interface only display when you reload the VDC.

Send document comments to nexus7k-docfeedback@cisco.com

SUMMARY STEPS

1. `config t`
2. `hardware proxy layer-3 replication {use | exclude} {module mod-number | interface slot/port} [module-type f1]`
3. `hardware proxy layer-3 replication rebalance-mode {auto | manual}`
4. `hardware proxy layer-3 replication trigger rebalance`
5. `exit`
6. (Optional) show hardware proxy layer-3 detail
7. (Optional) copy running-config startup-config

DETAILED STEPS

	Command	Purpose
Step 1	<pre>config t</pre> <p>Example: <pre>switch# config t switch(config)#</pre></p>	Enters global configuration mode.
Step 2	<pre>hardware proxy layer-3 replication {use exclude} {module <i>mod-number</i> interface <i>slot/port</i>} [module-type <i>f1</i>]</pre> <p>Example: <pre>switch(config)# hardware proxy layer-3 replication exclude interface ethernet 2/1-16, ethernet 3/1, ethernet 4/1-2</pre></p>	Configures specific modules and physical interfaces on the N7K-M Series module to provide egress proxy replication of Layer 3 multicast packets on the N7K-F132-15 module.
Step 3	<pre>hardware proxy layer-3 replication rebalance-mode {auto manual}</pre> <p>Example: <pre>switch(config)# hardware proxy layer-3 replication rebalance-mode auto</pre></p>	<p>Configures the load balancing among the proxy routing replication interfaces. When you choose auto, the switch automatically rebalances the configured VLAN interface multicast replication traffic load among all the N7K-M Series replicators. The default value is manual.</p> <p>Note In the manual mode, the switch automatically balances all traffic among the available proxy routing interfaces on the M Series modules in the chassis when you first start up the switch.</p>
Step 4	<pre>hardware proxy layer-3 replication trigger rebalance</pre> <p>Example: <pre>switch(config)# hardware proxy layer-3 replication trigger rebalance</pre></p>	<p>When you configure manual again in Step 3, use this command to trigger one-time load balancing among all the proxy routing multicast replication interfaces. This command is not effective if you have configured auto in Step 3.</p> <p>Note This command is not saved in the configuration; it is a one-time event.</p>

Send document comments to nexus7k-docfeedback@cisco.com

	Command	Purpose
Step 5	exit Example: switch(config)# exit switch#	Exits configuration mode.
Step 6	show hardware proxy layer-3 detail Example: switch# show hardware proxy layer-3 detail	(Optional) Displays the information on the proxy Layer-3 functionality.
Step 7	copy running-config startup-config Example: switch# copy running-config startup-config	(Optional) Copies the running configuration to the startup configuration.

EXAMPLES

This example shows how to specify certain physical interfaces on the N7K-M Series modules to perform egress multicast replication for VLANs on the N7K-F132-15 module in a mixed chassis and to trigger a rebalance:

```
switch# config t
switch(config)# hardware proxy layer-3 replication exclude interface ethernet 2/1-16, 3/1,
4/1-2
switch(config)# hardware proxy layer-3 replication rebalance mode manual
switch(config)# hardware proxy layer-3 replication trigger rebalance
switch(config)#
```

Verifying the Multicast Configuration

To display multicast configuration information, perform one of the following tasks:

Command	Purpose
show hardware proxy layer-3 detail	Displays information about the Layer 3 proxy routing functionality in a mixed chassis with both M series and N7K-F132-15 modules.
show hardware proxy layer-3 counters {brief detail}	Displays information about the number of packets that are sent by the N7K-F132-15 modules to each of the M Series modules for proxy forwarding. Note Enter the clear hardware proxy layer-3 counters command to reset the counters to 0.

Send document comments to nexus7k-docfeedback@cisco.com

Feature History for Multicast Interoperation

Table 1-1 lists the release history for this feature.

Table 1-1 *Feature History for Multicast Interoperation*

Feature Name	Releases	Feature Information
Multicast interoperation between F Series and M Series modules in the Cisco Nexus 7000 Series chassis	5.1(1)	This feature, along with the N7K-F132-15 modules, was introduced in this release.