



CHAPTER 3

Configuring Layer 2 Interfaces

**Note**

Beginning with Cisco Release 5.2, the Cisco Nexus 7000 Series devices support FabricPath Layer 2 interfaces. See the *Cisco Nexus 7000 Series NX-OS FabricPath Command Reference* for complete information about the FabricPath feature and interfaces.

This chapter describes how to configure Layer 2 switching ports as access or trunk ports on Cisco NX-OS devices using Cisco Data Center Network Manager (DCNM).

**Note**

The Cisco NX-OS release that is running on a managed device may not support all the features or settings described in this chapter. For the latest feature information and caveats, see the documentation and release notes for your platform and software release.

Layer 2 interfaces are used for switching packets. You can configure a Layer 2 port as an access port, which carries only one VLAN, or a trunk port, which carries many VLANs. By default, a trunk port carries all VLANs that are configured on the device, and you configure the trunk port to carry only those VLANs that you want on that port. The device uses IEEE 802.1Q to tag packets. All trunk ports must be in the same device, and trunk ports cannot carry VLANs from different devices.

You identify a native VLAN for each trunk port. The trunk port carries the traffic for that specific VLAN as untagged packets. If you do not configure a native VLAN, the device uses the default VLAN to carry untagged traffic for that trunk port. You can also configure the device to drop all untagged traffic on trunk ports and to retain the tag for the native VLAN.

**Note**

Beginning with Cisco NX-OS Release 5.1, a Layer 2 port can function as either one of the following:

- A trunk port
- An access port
- A private VLAN port (see the *Cisco DCNM Layer 2 Switching Configuration Guide, Release 5.x*, for more information on private VLANs)
- A FabricPath port (see the *Cisco Nexus 7000 Series NX-OS FabricPath Configuration Guide, Release 5.x*, and the *Cisco DCNM FabricPath Configuration Guide, Release 5.x*, for information on FabricPath)

Beginning with Cisco NX-OS Release 5.2(1), a Layer 2 port can also function as a shared interface. You cannot configure an access interface as a shared interface. See the *Cisco NX-OS FCoE Configuration Guide for Cisco Nexus 7000 and Cisco MDS 9500* for information on shared interfaces.

**Note**

See the *Cisco DCNM FabricPath Configuration Guide, Release 5.x*, for more information on configuring the FabricPath feature.

**Note**

A Layer 2 port can function as either a trunk port, an access port, or a private VLAN port.

This chapter includes the following sections:

- [Information About Access and Trunk Interfaces, page 3-111](#)
- [Licensing Requirements for Layer 2 Port Modes, page 3-116](#)
- [Prerequisites for Layer 2 Interfaces, page 3-116](#)
- [Guidelines and Limitations, page 3-116](#)
- [Default Settings, page 3-117](#)
- [Platform Support, page 3-118](#)
- [Configuring Access and Trunk Interfaces, page 3-118](#)
- [Verifying the Interface Configuration, page 3-137](#)
- [Monitoring the Layer 2 Interfaces, page 3-137](#)
- [Example Configurations for Access and Trunk Ports, page 3-138](#)
- [Field Descriptions, page 3-138](#)
- [Additional References, page 3-139](#)
- [Feature History for Configuring Layer 2 Interfaces, page 3-140](#)

**Note**

See the *Cisco Nexus 7000 Series NX-OS System Management Configuration Guide, Release 5.x*, for information on configuring a SPAN destination interface.

For more information about the Data Center Network Manager features, see the *Fundamentals Configuration Guide, Cisco DCNM for LAN, Release 5.x*.

You can configure Layer 2 switching ports as access or trunk ports. Trunks carry the traffic of multiple VLANs over a single link and allow you to extend VLANs across an entire network. All Layer 2 switching ports maintain media access control (MAC) address tables.

**Note**

See the *Cisco Nexus 7000 Series NX-OS Layer 2 Switching Configuration Guide, Release 5.x*, for information on VLANs, MAC address tables, private VLANs, and the Spanning Tree Protocol.

**Note**

See the *Layer 2 Switching Configuration Guide, Cisco DCNM for LAN, Release 6.x*, for information on VLANs, private VLANs, and the Spanning Tree Protocol.

**Note**

A Layer 2 port can function as either a trunk port, an access port, or a private VLAN port. See the *Cisco Nexus 7000 Series NX-OS Layer 2 Switching Configuration Guide, Release 5.x*, for more information on private VLANs.

**Note**

A Layer 2 port can function as either a trunk port, an access port, or a private VLAN port. See the *Layer 2 Switching Configuration Guide, Cisco DCNM for LAN, Release 6.x*, for more information on private VLANs.

Information About Access and Trunk Interfaces

**Note**

See the *Cisco Nexus 7000 Series NX-OS High Availability and Redundancy Guide, Release 5.x*, for complete information on high-availability features.

This section includes the following topics:

- [Information About Access and Trunk Interfaces, page 3-111](#)
- [IEEE 802.1Q Encapsulation, page 3-113](#)
- [Access VLANs, page 3-113](#)
- [Native VLAN IDs for Trunk Ports, page 3-114](#)
- [Tagging Native VLAN Traffic, page 3-114](#)
- [Allowed VLANs, page 3-114](#)
- [High Availability, page 3-115](#)
- [Virtualization Support, page 3-115](#)
- [Default Interfaces, page 3-115](#)
- [SVI Autostate Exclude, page 3-116](#)

**Note**

The device supports only IEEE 802.1Q-type VLAN trunk encapsulation.

Information About Access and Trunk Interfaces

A Layer 2 port can be configured as an access or a trunk port as follows:

- An access port can have only one VLAN configured on that port; it can carry traffic for only one VLAN.
- A trunk port can have two or more VLANs configured on that port; it can carry traffic for several VLANs simultaneously.

By default, all ports on the device are Layer 3 ports.

You change the default port setting to Layer 2 using the command-line interface (CLI). See the *Layer 2 Switching Configuration Guide, Cisco DCNM for LAN, Release 6.x*, for information on changing the default port setting to Layer 2 for the system.

You can make all ports Layer 2 ports using the setup script or by entering the **system default switchport** command. See the *Cisco Nexus 7000 Series NX-OS Fundamentals Configuration Guide, Release 5.x*, for information on using the setup script. To configure the port as a Layer 2 port using the CLI, use the **switchport** command,


All ports in one trunk must be in the same virtual device context (VDC). See the *Cisco Nexus 7000 Series NX-OS Virtual Device Context Configuration Guide, Release 5.x*, for information on VDCs.

All ports in the same trunk must be in the same VDC, and trunk ports cannot carry VLANs from different VDCs.

All ports in the same trunk must be in the same device, and trunk ports cannot carry VLANs from different devices.

Figure 3-1 shows how you can use trunk ports in the network. The trunk port carries traffic for two or more VLANs.

Figure 3-1 Trunk and Access Ports and VLAN Traffic

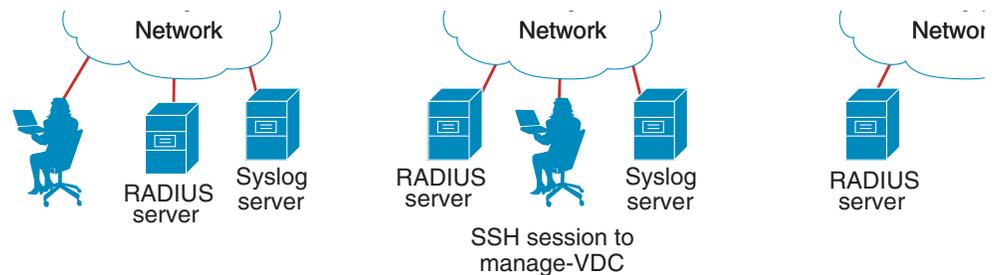

Note

See the *Cisco Nexus 7000 Series NX-OS Layer 2 Switching Configuration Guide, Release 5.x*, for information on VLANs.



Note

See the *Layer 2 Switching Configuration Guide, Cisco DCNM for LAN, Release 6.x*, for information on VLANs.

In order to correctly deliver the traffic on a trunk port with several VLANs, the device uses the IEEE 802.1Q encapsulation, or tagging, method (see the “[IEEE 802.1Q Encapsulation](#)” section on page 3-113 for more information).



Note

See the *Cisco Nexus 7000 Series NX-OS Unicast Routing Configuration Guide, Release 5.x*, for information on subinterfaces on Layer 3 interfaces.



Note

See the *Unicast Configuration Guide, Cisco DCNM for LAN, Release 6.x*, for information on subinterfaces on Layer 3 interfaces.

To optimize the performance on access ports, you can configure the port as a host port. Once the port is configured as a host port, it is automatically set as an access port, and channel grouping is disabled. Use the host designation to decrease the time that it takes the designated port to begin to forward packets.

Only an end station can be set as a host port; you will receive an error message if you attempt to configure other ports as hosts.

If an access port receives a packet with an 802.1Q tag in the header other than the access VLAN value, that port drops the packet without learning its MAC source address.

A Layer 2 interface can function as either an access port or a trunk port; it cannot function as both port types simultaneously.

When you change a Layer 2 interface back to a Layer 3 interface, that interface loses all the Layer 2 configuration and resumes the default VLAN configurations.

IEEE 802.1Q Encapsulation

**Note**

For information about VLANs, see the *Cisco Nexus 7000 Series NX-OS Layer 2 Switching Configuration Guide, Release 5.x*.

**Note**

For information about VLANs, see the *Layer 2 Switching Configuration Guide, Cisco DCNM for LAN, Release 6.x*.

A trunk is a point-to-point link between the switch and another networking device. Trunks carry the traffic of multiple VLANs over a single link and allow you to extend VLANs across an entire network.

To correctly deliver the traffic on a trunk port with several VLANs, the device uses the IEEE 802.1Q encapsulation, or tagging, method that uses a tag that is inserted into the frame header (see [Figure 3-1](#)). This tag carries information about the specific VLAN to which the frame and packet belong. This method allows packets that are encapsulated for several different VLANs to traverse the same port and maintain traffic separation between the VLANs. Also, the encapsulated VLAN tag allows the trunk to move traffic end-to-end through the network on the same VLAN.

Access VLANs

**Note**

If you assign an access VLAN that is also a primary VLAN for a private VLAN, all access ports with that access VLAN will also receive all the broadcast traffic for the primary VLAN in the private VLAN mode.

**Note**

See the *Cisco Nexus 7000 Series NX-OS Layer 2 Switching Configuration Guide, Release 5.x*, for complete information on private VLANs.

**Note**

See the *Layer 2 Switching Configuration Guide, Cisco DCNM for LAN, Release 6.x*, for complete information on private VLANs.

When you configure a port in access mode, you can specify which VLAN will carry the traffic for that interface. If you do not configure the VLAN for a port in access mode, or an access port, the interface carries traffic for the default VLAN (VLAN1).

You can change the access port membership in a VLAN by specifying the new VLAN. You must create the VLAN before you can assign it as an access VLAN for an access port. If you change the access VLAN on an access port to a VLAN that is not yet created, the system shuts that access port down.

If an access port receives a packet with an 802.1Q tag in the header other than the access VLAN value, that port drops the packet without learning its MAC source address.

Native VLAN IDs for Trunk Ports

A trunk port can carry nontagged packets simultaneously with the 802.1Q tagged packets. When you assign a default port VLAN ID to the trunk port, all untagged traffic travels on the default port VLAN ID for the trunk port, and all untagged traffic is assumed to belong to this VLAN. This VLAN is referred to as the native VLAN ID for a trunk port. That is, the native VLAN ID is the VLAN that carries untagged traffic on trunk ports.

**Note**

Native VLAN ID numbers *must* match on both ends of the trunk.

The trunk port sends an egressing packet with a VLAN that is equal to the default port VLAN ID as untagged; all the other egressing packets are tagged by the trunk port. If you do not configure a native VLAN ID, the trunk port uses the default VLAN.

**Note**

You cannot use an FCoE VLAN as a native VLAN for an Ethernet trunk switchport.

Tagging Native VLAN Traffic

The Cisco software supports the IEEE 802.1Q standard on trunk ports. In order to pass untagged traffic through the trunk ports, you must create a VLAN that does not tag any packets (or you can use the default VLAN). Untagged packets can pass through trunk ports and access ports.

However, all packets that enter the device with an 802.1Q tag that matches the value of the native VLAN on the trunk are stripped of any tagging and egress the trunk port as untagged packets. This situation can cause problems because you may want to retain the tagging on packets on the native VLAN for the trunk port.

You can configure the device to drop all untagged packets on the trunk ports and to retain the tagging of packets entering the device with 802.1Q values that are equal to that of the native VLAN ID. All control traffic still passes on the native VLAN. This configuration is global; trunk ports on the device either do or do not retain the tagging for the native VLAN.

Allowed VLANs

By default, a trunk port sends traffic to and receives traffic from all VLANs. All VLAN IDs are allowed on each trunk. However, you can remove VLANs from this inclusive list to prevent traffic from the specified VLANs from passing over the trunk. Later, you can add any specific VLANs that you may want the trunk to carry traffic for back to the list.

To partition the Spanning Tree Protocol (STP) topology for the default VLAN, you can remove VLAN1 from the list of allowed VLANs. Otherwise, VLAN1, which is enabled on all ports by default, will have a very big STP topology, which can result in problems during STP convergence. When you remove VLAN1, all data traffic for VLAN1 on this port is blocked, but the control traffic continues to move on the port.

**Note**

See the *Cisco Nexus 7000 Series NX-OS Layer 2 Switching Configuration Guide, Release 5.x*, for more information about STP.

**Note**

Beginning with Cisco Release 5.2, you can change the block of VLANs reserved for internal use. See the *Cisco Nexus 7000 Series NX-OS Layer 2 Switching Configuration Guide, Release 5.x*, for more information about changing the reserved VLANs.

**Note**

See the *Layer 2 Switching Configuration Guide, Cisco DCNM for LAN, Release 6.x*, for more information about STP.

High Availability

The software supports high availability for Layer 2 ports.

**Note**

See the *Cisco Nexus 7000 Series NX-OS High Availability and Redundancy Guide, Release 5.x*, for complete information on high availability features.

Virtualization Support

The device supports virtual device contexts (VDCs).

All ports in the same trunk must be in the same VDC, and trunk ports cannot carry VLANs from different VDCs.

All ports in the same trunk must be in the same device, and trunk ports cannot carry VLANs from different devices.

**Note**

See the *Cisco Nexus 7000 Series NX-OS Virtual Device Context Configuration Guide, Release 5.x*, for complete information on VDCs and assigning resources.

**Note**

See the *Virtual Device Context Configuration Guide, Cisco DCNM for LAN, Release 6.x*, for complete information on VDCs and assigning resources.

Default Interfaces

You can use the default interface feature to clear the configured parameters for both physical and logical interfaces such as the Ethernet, loopback, VLAN network, tunnel, and the port-channel interface.

**Note**

A maximum of 8 ports can be selected for the default interface. The default interfaces feature is not supported for management interfaces because the device could go to an unreachable state.

SVI Autostate Exclude

Ordinarily, when a VLAN interface has multiple ports in the VLAN, the SVI will go to the down state when all the ports in the VLAN go down. You can use the SVI Autostate Exclude feature to exclude specific ports and port channels while defining the status of the SVI (up or down) even if it belongs to the same VLAN. For example, even if the excluded port or port channel is in the up state and other ports are in the down state in the VLAN, the SVI state is changed to down.


Note

You can use the SVI Autostate Exclude feature only for switched physical Ethernet ports and port channels.

Licensing Requirements for Layer 2 Port Modes

The following table shows the licensing requirements for this feature:

Product	License Requirement
Cisco DCNM	Layer 2 port modes require no license. Any feature not included in a license package is bundled with the Cisco DCNM and is provided at no charge to you.
Cisco NX-OS	Layer 2 port modes require no license. Any feature not included in a license package is bundled with the Cisco NX-OS system images and is provided at no extra charge to you. For a complete explanation of the Cisco NX-OS licensing scheme, see the <i>Cisco NX-OS Licensing Guide</i> .


Note

Using VDCs requires an Advanced Services license.

Prerequisites for Layer 2 Interfaces

Layer 2 interfaces have the following prerequisites:

- You are logged onto the device.
- You must configure the port as a Layer 2 port before you can use the **switchport mode** command. By default, all ports on the NX-OS are Layer 3 ports.

Guidelines and Limitations

VLAN trunking has the following configuration guidelines and limitations:

- A port can be either a Layer 2 or a Layer 3 interface; it cannot be both simultaneously.
- When you change a Layer 3 port to a Layer 2 port or a Layer 2 port to a Layer 3 port, all layer-dependent configuration is lost. When you change an access or trunk port to a Layer 3 port, all information about the access VLAN, native VLAN, allowed VLANs, and so forth, is lost.
- Do not connect devices with access links because access links may partition a VLAN.

- When connecting Cisco devices through an 802.1Q trunk, make sure that the native VLAN for an 802.1Q trunk is the same on both ends of the trunk link. If the native VLAN on one end of the trunk is different from the native VLAN on the other end, spanning tree loops might result.
- Disabling spanning tree on the native VLAN of an 802.1Q trunk without disabling spanning tree on every VLAN in the network can cause spanning tree loops. You must leave spanning tree enabled on the native VLAN of an 802.1Q trunk. If you cannot leave spanning tree enabled, you must disable spanning tree on every VLAN in the network. Make sure that your network has no physical loops before you disable spanning tree.
- When you connect two Cisco devices through 802.1Q trunks, the devices exchange spanning tree bridge protocol data units (BPDUs) on each VLAN allowed on the trunks. The BPDUs on the native VLAN of the trunk are sent untagged to the reserved IEEE 802.1D spanning tree multicast MAC address (01-80-C2-00-00-00). The BPDUs on all other VLANs on the trunk are sent tagged to the reserved Cisco Shared Spanning Tree (SSTP) multicast MAC address (01-00-0c-cc-cc-cd).
- Non-Cisco 802.1Q devices maintain only a single instance of spanning tree (the Mono Spanning Tree) that defines the spanning tree topology for all VLANs. When you connect a Cisco switch to a non-Cisco switch through an 802.1Q trunk, the Mono Spanning Tree of the non-Cisco switch and the native VLAN spanning tree of the Cisco switch combine to form a single spanning tree topology known as the Common Spanning Tree (CST).
- Because Cisco devices transmit BPDUs to the SSTP multicast MAC address on VLANs other than the native VLAN of the trunk, non-Cisco devices do not recognize these frames as BPDUs and flood them on all ports in the corresponding VLAN. Other Cisco devices connected to the non-Cisco 802.1Q cloud receive these flooded BPDUs. This BPDU reception allows Cisco switches to maintain a per-VLAN spanning tree topology across a cloud of non-Cisco 802.1Q devices. The non-Cisco 802.1Q cloud that separates the Cisco devices is treated as a single broadcast segment between all devices connected to the non-Cisco 802.1Q cloud through 802.1Q trunks.
- Make certain that the native VLAN is the same on all of the 802.1Q trunks that connect the Cisco devices to the non-Cisco 802.1Q cloud.
- If you are connecting multiple Cisco devices to a non-Cisco 802.1Q cloud, all of the connections must be through 802.1Q trunks. You cannot connect Cisco devices to a non-Cisco 802.1Q cloud through access ports because doing so places the access port on the Cisco device into the spanning tree “port inconsistent” state and no traffic will pass through the port.
- You can group trunk ports into port-channel groups, but all trunks in the group must have the same configuration. When a group is first created, all ports follow the parameters set for the first port to be added to the group. If you change the configuration of one of these parameters, the device propagates that setting to all ports in the group, such as the allowed VLANs and the trunk status. For example, if one port in a port group ceases to be a trunk, all ports cease to be trunks.
- If you try to enable 802.1X on a trunk port, an error message appears, and 802.1X is not enabled. If you try to change the mode of an 802.1X-enabled port to trunk, the port mode is not changed.

Default Settings

Table 3-1 lists the default settings for device access and trunk port mode parameters.

Table 3-1 Default Access and Trunk Port Mode Parameters

Parameters	Default
Switchport mode	Access
Allowed VLANs	1 to 3967, 4048 to 4094
Access VLAN ID	VLAN1
Native VLAN ID	VLAN1
Native VLAN ID tagging	Disabled
Administrative state	Shut

Platform Support

The following platforms support this feature but may implement it differently. For platform-specific information, including guidelines and limitations, system defaults, and configuration limits, see the corresponding documentation.

Platform	Documentation
Cisco Nexus 1000V Series Switches	Cisco Nexus 1000V Series Switches Documentation
Cisco Nexus 3000 Series Switches	Cisco Nexus 3000 Series Switches Documentation
Cisco Nexus 4000 Series Switches	Cisco Nexus 4000 Series Switches Documentation
Cisco Nexus 5000 Series Switches	Cisco Nexus 5000 Series Switches Documentation
Cisco Nexus 7000 Series Switches	Cisco Nexus 7000 Series Switches Documentation
Cisco Catalyst 6500 Series Switches	Cisco Catalyst 6500 Series Switches Documentation

Configuring Access and Trunk Interfaces



Note

Beginning with Cisco NX-OS Release 5.1, you can configure Layer 2 interfaces as Fabricpath interfaces if you have an F Series module in your Cisco Nexus 7000 Series chassis. See the *Cisco DCNM FabricPath Configuration Guide* and the *Cisco Nexus 7000 Series NX-OS FabricPath Configuration Guide* for more information on configuring FabricPath.

This section includes the following topics:

- [Guidelines for Configuring Access and Trunk Interfaces, page 3-119](#)
- [Configuring a LAN Interface as a Layer 2 Access Port, page 3-119](#)
- [Configuring Access Host Ports, page 3-122](#)
- [Configuring Trunk Ports, page 3-123](#)
- [Configuring the Native VLAN for 802.1Q Trunking Ports, page 3-124](#)
- [Configuring the Allowed VLANs for Trunking Ports, page 3-126](#)
- [Configuring the Native VLAN for 802.1Q Trunking Ports, page 3-124](#)
- [Configuring a Default Interface, page 3-128](#)

- [Configuring SVI Autostate Exclude, page 3-130](#)
- [Configuring the Device to Tag Native VLAN Traffic, page 3-134](#)
- [Changing the System Default Port Mode to Layer 2, page 3-136](#)

**Note**

If you are familiar with the Cisco IOS CLI, be aware that the Cisco NX-OS commands for this feature might differ from the Cisco IOS commands that you would use.

Guidelines for Configuring Access and Trunk Interfaces

All VLANs on a trunk must be in the same VDC.

Configuring a LAN Interface as a Layer 2 Access Port

You can configure a Layer 2 port as an access port. An access port transmits packets on only one, untagged VLAN. You specify which VLAN traffic that the interface carries, which becomes the access VLAN. If you do not specify a VLAN for an access port, that interface carries traffic only on the default VLAN. The default VLAN is VLAN1.

The VLAN must exist before you can specify that VLAN as an access VLAN. The system shuts down an access port that is assigned to an access VLAN that does not exist.

BEFORE YOU BEGIN


Ensure that you are configuring a Layer 2 interface.

SUMMARY STEPS

1. **configure terminal**
2. **interface** *{{type slot/port} | {port-channel number}}*
3. **switchport mode** *{access | trunk}*
4. **switchport access vlan** *vlan-id*
5. **exit**
6. **(Optional) show interface**
7. **(Optional) copy running-config startup-config**

You use the Ethernet pane to configure a Layer 2 access port (see [Figure 3-2](#)).

Figure 3-2 Ethernet Pane, Port Mode Settings

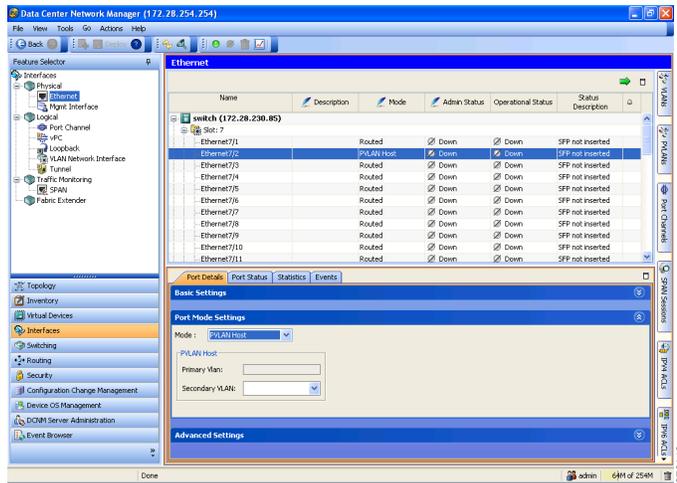

DETAILED STEPS

- Step 1** From the Feature Selector pane, choose **Interfaces > Physical > Ethernet** to open the Ethernet pane.
- Step 2** From the Contents pane, in the Summary pane, double-click the device to display the interfaces.
- Step 3** Click the slot to display the list of interfaces.
- Step 4** Click the interface.
The system highlights the interface in the Summary pane, and tabs appear in the Details pane.
- Step 5** In the Details pane, click the **Port Details** tab.
- Step 6** Click the **Port Mode Settings** section.
- Step 7** From the Mode drop-down list, choose **Access** to configure the port as an access port.
Routed is the default port mode.
- Step 8** In the Access VLAN field, specify the access VLAN by using a known VLAN, assigning a VLAN from among the VLANs on this device, or creating a new VLAN.
The default access VLAN is VLAN1. The range is VLAN 1 to 4094, excluding the internally assigned VLANs 3968 to 4047 and 4094.
- Step 9** From the menu bar, choose **File > Deploy** to apply your changes to the device.

	Command	Purpose
Step 1	configure terminal Example: switch# configure terminal switch(config)#	Enters configuration mode.
Step 2	interface {{type slot/port} {port-channel number}} Example: switch(config)# interface ethernet 3/1 switch(config-if)#	Specifies an interface to configure, and enters interface configuration mode.
Step 3	switchport mode {access trunk} Example: switch(config-if)# switchport mode access	Sets the interface as a nontrunking nontagged, single-VLAN Layer 2 interface. An access port can carry traffic in one VLAN only. By default, an access port carries traffic for VLAN1; to set the access port to carry traffic for a different VLAN, use the switchport access vlan command.
Step 4	switchport access vlan vlan-id Example: switch(config-if)# switchport access vlan 5	Specifies the VLAN for which this access port will carry traffic. If you do not enter this command, the access port carries traffic on VLAN1 only; use this command to <i>change</i> the VLAN for which the access port carries traffic.
Step 5	exit Example: switch(config-if)# exit switch(config)#	Exits the configuration mode.
Step 6	show interface Example: switch# show interface	(Optional) Displays the interface status and information.
Step 7	copy running-config startup-config Example: switch(config)# copy running-config startup-config	(Optional) Copies the running configuration to the startup configuration.

This example shows how to set Ethernet 3/1 as a Layer 2 access port that carries traffic for VLAN 5 only:

```
switch# configure terminal
switch(config)# interface ethernet 3/1
switch(config-if)# switchport mode access
switch(config-if)# switchport access vlan 5
switch(config-if)#
```

RELATED TOPICS

- [Configuring the Native VLAN for 802.1Q Trunking Ports](#)
- [Configuring the Device to Tag Native VLAN Traffic](#)

Configuring Access Host Ports


Note

You should apply the **switchport host** command only to interfaces connected to an end station.

You can optimize the performance of access ports that are connected to end stations by simultaneously setting that port as an access port. An access host port handles the STP like an edge port and immediately moves to the forwarding state without passing through the blocking and learning states. Configuring an interface as an access host port also disables port channeling on that interface.


Note

See [Chapter 5, “Configuring Port Channels”](#) for information on port-channel interfaces and the *Cisco Nexus 7000 Series NX-OS Layer 2 Switching Configuration Guide, Release 5.x*. For complete information on the Spanning Tree Protocol.

BEFORE YOU BEGIN

Ensure that you are configuring the correct interface to an interface that is an end station.

SUMMARY STEPS

1. **configure terminal**
2. **interface** *type slot/port*
3. **switchport host**
4. **exit**
5. (Optional) **show interface**
6. (Optional) **copy running-config startup-config**

DETAILED STEPS

	Command	Purpose
Step 1	configure terminal Example: switch# configure terminal switch(config)#	Enters configuration mode.
Step 2	interface <i>type slot/port</i> Example: switch(config)# interface ethernet 3/1 switch(config-if)#	Specifies an interface to configure, and enters interface configuration mode.
Step 3	switchport host Example: switch(config-if)# switchport host	Sets the interface to be an access host port, which immediately moves to the spanning tree forwarding state and disables port channeling on this interface. Note Apply this command only to end stations.

	Command	Purpose
Step 4	exit Example: switch(config-if)# exit switch(config)#	Exits the interface mode.
Step 5	show interface Example: switch# show interface	(Optional) Displays the interface status and information.
Step 6	copy running-config startup-config Example: switch(config)# copy running-config startup-config	(Optional) Copies the running configuration to the startup configuration.

This example shows how to set Ethernet 3/1 as a Layer 2 access port with PortFast enabled and port channel disabled:

```
switch# configure terminal
switch(config)# interface ethernet 3/1
switch(config-if)# switchport host
switch(config-if)#
```

Configuring Trunk Ports

You can configure a Layer 2 port as a trunk port. A trunk port transmits untagged packets for one VLAN plus encapsulated, tagged, packets for multiple VLANs. (See the “[IEEE 802.1Q Encapsulation](#)” section on page 3-113 for information about encapsulation.)



Note

The device supports 802.1Q encapsulation only.

BEFORE YOU BEGIN

Before you configure a trunk port, ensure that you are configuring a Layer 2 interface.

SUMMARY STEPS

1. **configure terminal**
2. **interface** {*type slot/port* | **port-channel** *number*}
3. **switchport mode** {**access** | **trunk**}
4. **exit**
5. (Optional) **show interface**
6. (Optional) **copy running-config startup-config**

DETAILED STEPS

	Command	Purpose
Step 1	configure terminal Example: switch# configure terminal switch(config)#	Enters configuration mode.
Step 2	interface { <i>type slot/port</i> port-channel number } Example: switch(config)# interface ethernet 3/1 switch(config-if)#	Specifies an interface to configure, and enters interface configuration mode.
Step 3	switchport mode { access trunk } Example: switch(config-if)# switchport mode trunk	Sets the interface as a Layer 2 trunk port. A trunk port can carry traffic in one or more VLANs on the same physical link (VLANs are based on the trunk-allowed VLANs list). By default, a trunk interface can carry traffic for all VLANs. To specify that only certain VLANs are allowed on the specified trunk, use the switchport trunk allowed vlan command.
Step 4	exit Example: switch(config-if)# exit switch(config)#	Exits the interface mode.
Step 5	show interface Example: switch# show interface	(Optional) Displays the interface status and information.
Step 6	copy running-config startup-config Example: switch(config)# copy running-config startup-config	(Optional) Copies the running configuration to the startup configuration.

This example shows how to set Ethernet 3/1 as a Layer 2 trunk port:

```
switch# configure terminal
switch(config)# interface ethernet 3/1
switch(config-if)# switchport mode trunk
switch(config-if)#
```

Configuring the Native VLAN for 802.1Q Trunking Ports

You can configure the native VLAN for 802.1Q trunk ports. If you do not configure this parameter, the trunk port uses the default VLAN as the native VLAN ID.



Note

You cannot configure an FCoE VLAN as a native VLAN for an Ethernet interface.

SUMMARY STEPS

1. **configure terminal**
2. **interface** {*type slot/port* | **port-channel number**}
3. **switchport trunk native vlan** *vlan-id*
4. **exit**
5. (Optional) **show vlan**
6. (Optional) **copy running-config startup-config**

DETAILED STEPS

	Command	Purpose
Step 1	configure terminal Example: switch# configure terminal switch(config)#	Enters configuration mode.
Step 2	interface { <i>type slot/port</i> port-channel number }	Specifies an interface to configure, and enters interface configuration mode.
	Example: switch(config)# interface ethernet 3/1 switch(config-if)#	
Step 3	switchport trunk native vlan <i>vlan-id</i> Example: switch(config-if)# switchport trunk native vlan 5	Sets the native VLAN for the 802.1Q trunk. Valid values are from 1 to 4094, except those VLANs reserved for internal use. The default value is VLAN1.
Step 4	exit Example: switch(config-if)# exit switch(config)#	Exits the interface mode.
Step 5	show vlan Example: switch# show vlan	(Optional) Displays the status and information of VLANs.
Step 6	copy running-config startup-config Example: switch(config)# copy running-config startup-config	(Optional) Copies the running configuration to the startup configuration.

This example shows how to set the native VLAN for the Ethernet 3/1, Layer 2 trunk port to VLAN 5:

```
switch# configure terminal
switch(config)# interface ethernet 3/1
switch(config-if)# switchport trunk native vlan 5
switch(config-if)#
```

Configuring the Allowed VLANs for Trunking Ports

You can specify the IDs for the VLANs that are allowed on the specific trunk port.



Note

The **switchport trunk allowed vlan** *vlan-list* command replaces the current VLAN list on the specified port with the new list. Consequently you are prompted for confirmation before the new list is applied.

As a side effect, if you are doing copy and paste of a large configuration then you may see some failures as the CLI is waiting for a confirmation before accepting other commands. To avoid this you can disable prompting using the **terminal dont-ask** command before you paste the configuration.

BEFORE YOU BEGIN

Before you configure the allowed VLANs for the specified trunk ports, ensure that you are configuring the correct interfaces and that the interfaces are trunks.



Note

Beginning with Cisco Release 5.2, you can change the block of VLANs reserved for internal use. See the *Cisco Nexus 7000 Series NX-OS Layer 2 Switching Configuration Guide, Release 5.x*, for more information about changing the reserved VLANs.

SUMMARY STEPS

1. **configure terminal**
2. **interface** { **ethernet** *slot/port* | **port-channel** *number* }
3. **switchport trunk allowed vlan** { *vlan-list* | **add** *vlan-list* | **all** | **except** *vlan-list* | **none** | **remove** *vlan-list* }
4. **exit**
5. (Optional) **show vlan**
6. (Optional) **copy running-config startup-config**

DETAILED STEPS

	Command	Purpose
Step 1	configure terminal Example: switch# configure terminal switch(config)#	Enters configuration mode.
Step 2	interface { ethernet <i>slot/port</i> port-channel <i>number</i> } Example: switch(config)# interface ethernet 3/1	Specifies an interface to configure, and enters interface configuration mode.

	Command	Purpose
Step 3	<pre>switchport trunk allowed vlan {vlan-list add vlan-list all except vlan-list none remove vlan-list}</pre> <p>Example: switch(config-if)# switchport trunk allowed vlan add 15-20#</p>	<p>Sets the allowed VLANs for the trunk interface. The default is to allow all VLANs on the trunk interface: 1 to 3967 and 4048 to 4094. VLANs 3968 to 4047 are the default VLANs reserved for internal use by default. By default, all VLANs are allowed on all trunk interfaces. Beginning with Cisco Release 5.2(1), the default reserved VLANs are 3968 to 4094, and you can change the block of reserved VLANs. See the <i>Cisco Nexus 7000 Series NX-OS Layer 2 Switching Configuration Guide, Release 5.x</i>, for more information.</p> <p>Note You cannot add internally allocated VLANs as allowed VLANs on trunk ports. The system returns a message if you attempt to list an internally allocated VLAN as an allowed VLAN.</p>
Step 4	<pre>exit</pre> <p>Example: switch(config-if)# exit switch(config)#</p>	Exits the interface mode.
Step 5	<pre>show vlan</pre> <p>Example: switch# show vlan</p>	(Optional) Displays the status and information for VLANs.
Step 6	<pre>copy running-config startup-config</pre> <p>Example: switch(config)# copy running-config startup-config</p>	(Optional) Copies the running configuration to the startup configuration.

This example shows how to add VLANs 15 to 20 to the list of allowed VLANs on the Ethernet 3/1, Layer 2 trunk port:

```
switch# configure terminal
switch(config)# interface ethernet 3/1
switch(config-if)# switchport trunk allowed vlan 15-20
switch(config-if)#
```

Configuring a Trunk Port and a FabricPath Port



Note

You can pre-provision a trunk port while the actual port is still in access mode. From the main menu, choose **Tools > Global Preferences > Pre Provisioning** to access or hide the screen that allows and displays this functionality. See the *Fundamentals Configuration Guide, Cisco DCNM for LAN, Release 5.x*, for information on pre-provisioning.

You can configure a Layer 2 port as a trunk port, which transmits untagged packets for one VLAN plus transmits encapsulated, tagged, packets for multiple VLANs.



Note The device supports 802.1Q encapsulation only.

You use the Ethernet pane to configure a Layer 2 trunk port (see [Figure 3-2](#)).

DETAILED STEPS

-
- Step 1** From the Feature Selector pane, choose **Interfaces > Physical > Ethernet** to open the Ethernet pane.
 - Step 2** From the Contents pane, in the Summary pane, double-click the device to display the interfaces.
 - Step 3** Click the slot to display the list of interfaces.
 - Step 4** Click the interface.
The system highlights the interface in the Summary pane, and tabs appear in the Details pane.
 - Step 5** In the Details pane, click the **Port Details** tab.
 - Step 6** Click the **Port Mode Settings** section.
 - Step 7** From the Mode drop-down list, choose **Trunk** to configure the port as a trunk port.



Note Do not change the dimmed value in the Encapsulation row from dot1q. The IEEE 802.1Q encapsulation method is the only supported encapsulation method.

- Step 8** In the Allowed VLAN field, enter the numbers of the VLANs or select the VLANs that are allowed to run on this trunk port.
VLANs 1 to 4094 are the default. VLANs 3968 to 4047 and 4094 are internally allocated for device use.
 - Step 9** In the Native VLAN field, specify, choose, or create the native VLAN for this trunk port.
The default native VLAN is VLAN1. The range is from VLAN 1 to 4094, excluding the internally assigned VLANs 3968 to 4047 and 4094.
 - Step 10** From the Mode drop-down list, choose **Fabricpath** to configure the port as a FabricPath port.
 - Step 11** From the menu bar, choose **File > Deploy** to apply your changes to the device.
-

Configuring a Default Interface

The default interface feature allows you to clear the existing configuration of multiple interfaces such as Ethernet, loopback, VLAN network, port-channel, and tunnel interfaces. All user configuration under a specified interface will be deleted. You can optionally create a checkpoint before clearing the interface configuration so that you can later restore the deleted configuration.



Note The default interface feature is not supported for management interfaces because the device could go to an unreachable state.

You can select a maximum of 8 ports for a default interface configuration. If you select more than 8 ports and click Set to Default, a dialog box appears (see [Figure 3-2](#)).

Figure 3-3 **Default Interfaces Dialog Box**



DETAILED STEPS

-
- Step 1** From the Feature Selector pane, choose **Interfaces > Logical > Tunnel** or **VLAN Network Interface** or **Loopback** or **Port-Channel**.
- Step 2** From the Contents pane, in the Summary pane, double click the device to display the interfaces.
- Step 3** Right-click and choose **Set to Default**.
-

SUMMARY STEPS

1. **configure terminal**
2. **default interface** *int-if* [**checkpoint name**]
3. **exit**
4. **(Optional) show interface**

DETAILED STEPS

	Command	Purpose
Step 1	configure terminal Example: switch# configure terminal switch(config)#	Enters configuration mode.
Step 2	default interface <i>int-if</i> [checkpoint <i>name</i>] Example: switch(config)# default interface ethernet 3/1 checkpoint test8	Deletes the configuration of the interface and restores the default configuration. Use the ? keyword to display the supported interfaces. Use the checkpoint keyword to store a copy of the running configuration of the interface before clearing the configuration.
Step 3	exit Example: switch(config)# exit switch#	Exits the configuration mode.
Step 4	show interface Example: switch# show interface	(Optional) Displays the interface status and information.

This example shows how to delete the configuration of an Ethernet interface while saving a checkpoint of the running configuration for rollback purposes:


```
switch# configure terminal
switch(config)# default interface ethernet 3/1 checkpoint test8
.....Done
switch(config)#
```

Configuring SVI Autostate Exclude

You can configure the SVI Autostate Exclude feature on an Ethernet interface or a port channel.

You can use the Autostate Exclude option to enable or disable the port from bringing up or down the SVI calculation and applying it to all VLANs that are enabled on the selected port. (see [Figure 3-4](#)).

Figure 3-4 Ethernet Interface

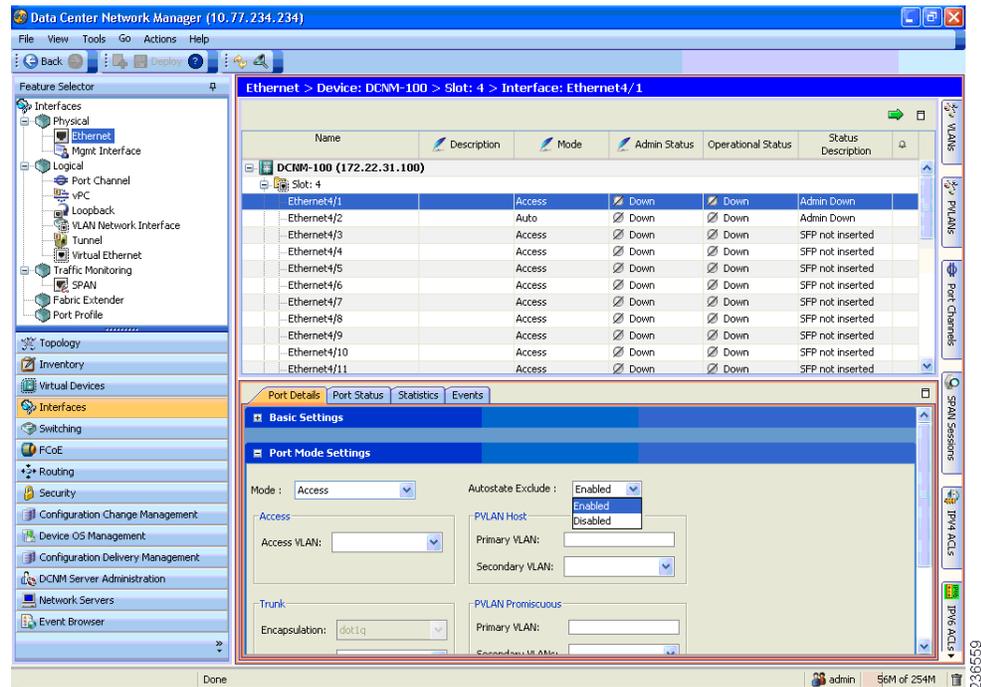


DETAILED STEPS

- Step 1** From the Feature Selector pane, choose **Interfaces > Physical > Ethernet** to open the Ethernet pane.
- Step 2** From the Summary pane, double-click the device to display the interfaces.
- Step 3** Click the slot to display the list of interfaces.
- Step 4** Click the interface.
The system highlights the interface in the Summary pane, and tabs appear in the Details pane.
- Step 5** In the Details pane, click the **Port Details** tab.
- Step 6** Expand the **Port Mode Settings** section.
- Step 7** From the Autostate exclude drop-down list, choose **Enabled** or **Disabled** to bring up or down the SVI calculation and apply it to all VLANs that are enabled on the selected port.

You can configure SVI Autostate Exclude on a port channel (see [Figure 3-5](#)).

Figure 3-5 SVI Port Channel

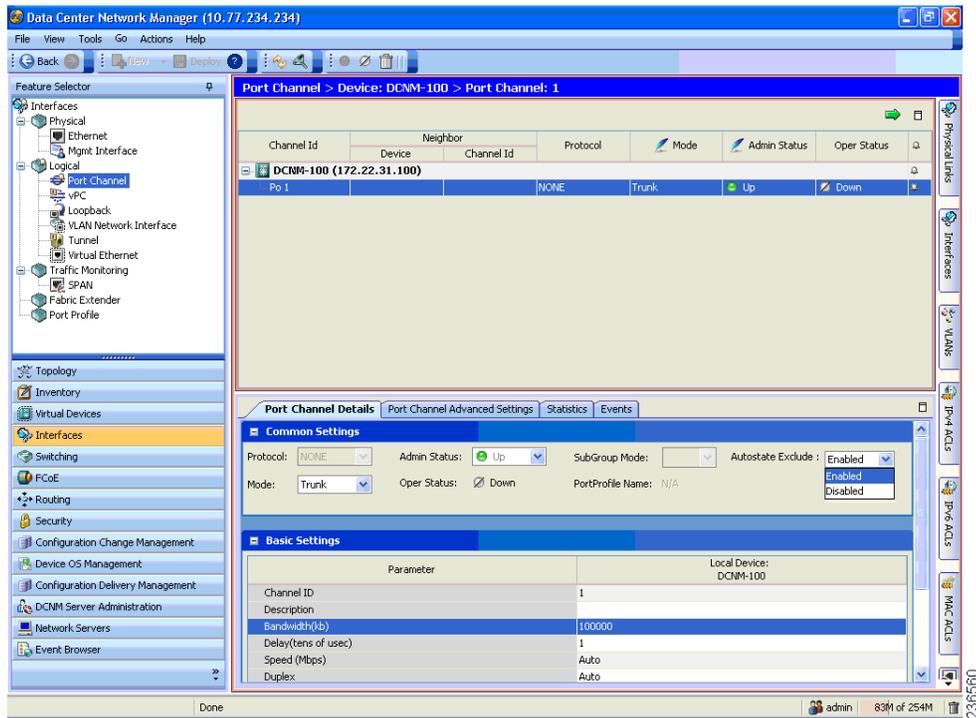

DETAILED STEPS

- Step 1** From the Feature Selector pane, choose **Interfaces > Logical > Port Channel** to open the Port Channel pane.
- Step 2** From the Summary pane, double-click the device to display the interfaces.
- Step 3** Click the slot to display the list of interfaces.
- Step 4** Click the interface.
The system highlights the interface in the Summary pane, and tabs appear in the Details pane.
- Step 5** From the Port Channel Details tab, expand the **Common Settings** section.
- Step 6** From the Autostate exclude drop-down list, choose **Enabled** or **Disabled** to bring up or down the SVI calculation and apply it to all VLANs that are enabled on the selected port.

SUMMARY STEPS

1. **configure terminal**
2. **interface** *{{type slot/port}}* | **{port-channel number}**
3. **switchport**
4. **switchport autostate exclude**
5. **exit**

6. (Optional) show running-config interface
7. (Optional) copy running-config startup-config

DETAILED STEPS

	Command	Purpose
Step 1	configure terminal Example: switch# configure terminal switch(config)#	Enters configuration mode.
Step 2	interface {{type slot/port} {port-channel number}} Example: switch(config)# interface ethernet 3/1 switch(config-if)#	Specifies an interface to configure, and enters interface configuration mode.
Step 3	switchport Example: switch(config-if)# switchport	Sets the interface as a Layer 2 interface.
Step 4	switchport autostate exclude Example: switch(config-if)# switchport autostate exclude	Excludes this port from the VLAN interface link-up calculation when there are multiple ports in the VLAN. To revert to the default settings, use the no form of this command.
Step 5	exit Example: switch(config-if)# exit switch(config)#	Exits the configuration mode.
Step 6	show running-config interface {{type slot/port} {port-channel number}} Example: switch(config)# show running-config interface ethernet 3/1	(Optional) Displays configuration information about the specified interface.
Step 7	copy running-config startup-config Example: switch(config)# copy running-config startup-config	(Optional) Copies the running configuration to the startup configuration.

This example shows how to exclude a port from the VLAN interface link-up calculation on the Cisco NX-OS device:

```
switch# configure terminal
switch(config)# interface ethernet 3/1
switch(config-if)# switchport
switch(config-if)# switchport autostate exclude
```

RELATED TOPICS

- [Configuring a LAN Interface as a Layer 2 Access Port](#)
- [Configuring the Device to Tag Native VLAN Traffic](#)

Configuring the Device to Tag Native VLAN Traffic

When you are working with 802.1Q trunked interfaces, you can maintain the tagging for all packets that enter with a tag that matches the value of the native VLAN ID and drops all untagged traffic (you will still carry control traffic on that interface). This feature applies to the entire device; you cannot apply it to selected VLANs on a device.

The **vlan dot1q tag native** global command changes the behavior of all native VLAN ID interfaces on all trunks on the device.



Note

If you enable 802.1Q tagging on one device and disable it on another device, all traffic is dropped on the device with this feature disabled. You must configure this feature identically on each device.

BEFORE YOU BEGIN

Ensure that you are in the correct VDC (or use the **switchto vdc** command). You can repeat VLAN names and IDs in different VDCs, so you must confirm that you are working in the correct VDC.

SUMMARY STEPS

1. **configure terminal**
2. **vlan dot1q tag native**
3. **exit**
4. (Optional) **show vlan**
5. (Optional) **copy running-config startup-config**

You use the VLAN pane to configure the device to maintain the tagging for all native VLANs for all trunking ports (see [Figure 3-6](#)).

Figure 3-6 VLAN Pane, Global Settings



DETAILED STEPS

-
- Step 1** From the Feature Selector pane, choose **Switching > VLAN** to open the VLAN pane.
- Step 2** In the Summary pane, click the **Device View** tab.
- Step 3** Click the device that you want to configure.
The system highlights the device in the Summary pane, and tabs appear in the Details pane.
- Step 4** In the Details pane, click the **Global Settings** tab.
- Step 5** From the Dot1Q Native Tag drop-down list, choose **Enabled** to configure the device to maintain the 802.1q tag on the native VLAN for all trunking ports.
The default is disabled.
- Step 6** From the menu bar, choose **File > Deploy** to apply your changes to the device.
-

	Command	Purpose
Step 1	configure terminal Example: switch# configure terminal switch(config)#	Enters configuration mode.
Step 2	vlan dot1q tag native Example: switch(config)# vlan dot1q tag native	Modifies the behavior of a 802.1Q trunked native VLAN ID interface. The interface <i>maintains</i> the taggings for all packets that enter with a tag that matches the value of the native VLAN ID and <i>drops</i> all untagged traffic. The control traffic is still carried on the native VLAN. The default is disabled.
Step 3	exit Example: switch(config)# exit switch#	Exits the configuration mode.
Step 4	show vlan Example: switch# show vlan	(Optional) Displays the status and information for VLANs.
Step 5	copy running-config startup-config Example: switch# copy running-config startup-config	(Optional) Copies the running configuration to the startup configuration.

This example shows how to change the behavior of the native VLAN on an 802.1Q trunked interface to maintain the tagged packets and drop all untagged traffic (except control traffic):

```
switch# configure terminal
switch(config)# vlan dot1q tag native
switch#
```

RELATED TOPICS

- [Configuring a LAN Interface as a Layer 2 Access Port](#)
- [Configuring the Native VLAN for 802.1Q Trunking Ports](#)

Changing the System Default Port Mode to Layer 2

You can set the system default port mode to Layer 2 access ports.

See the *Cisco NX-OS FCoE Configuration Guide for Cisco Nexus 7000 and Cisco MDS 9500* for information on setting the system default port mode to Fibre Channel in storage VDCs.

SUMMARY STEPS

1. **configure terminal**
2. **system default switchport [shutdown]**
3. **exit**
4. **(Optional) show interface brief**
5. **(Optional) copy running-config startup-config**

DETAILED STEPS

	Command	Purpose
Step 1	configure terminal Example: switch# configure terminal switch(config)#	Enters configuration mode.
Step 2	system default switchport [shutdown] Example: switch(config-if)# system default switchport	Sets the default port mode for all interfaces on the system to Layer 2 access port mode. By default, all the interfaces are Layer 3.
Step 3	exit Example: switch(config-if)# exit switch(config)#	Exits the interface mode.
Step 4	show interface brief Example: switch# show interface brief	(Optional) Displays the status and information for interfaces.
Step 5	copy running-config startup-config Example: switch(config)# copy running-config startup-config	(Optional) Copies the running configuration to the startup configuration.

This example shows how to set the system ports to be Layer 2 access ports by default:

```
switch# configure terminal
switch(config-if)# system default switchport
switch(config-if)#
```

Verifying the Interface Configuration

To display access and trunk interface configuration information, perform one of the following tasks:

Command	Purpose
show interface ethernet <i>slot/port</i> [brief counters debounce description flowcontrol mac-address status transceiver]	Displays the interface configuration
show interface brief	Displays interface configuration information, including the mode.
show interface switchport	Displays information, including access and trunk interface, information for all Layer 2 interfaces.
show interface trunk [module <i>module-number</i> vlan <i>vlan-id</i>]	Displays trunk configuration information.
show interface capabilities	Displays information on the capabilities of the interfaces.
show running-config interface ethernet <i>slot/port</i>	Displays configuration information about the specified interface.
show running-config interface port-channel <i>slot/port</i>	Displays configuration information about the specified port-channel interface.

For detailed information about these commands, see the *Cisco Nexus 7000 Series NX-OS Layer 2 Switching Command Reference*.

Monitoring the Layer 2 Interfaces

Use the following commands to display layer 2 interfaces:

Command	Purpose
clear counters [<i>interface</i>]	Clears the counters.
load-interval { interval <i>seconds</i> { 1 2 3 }}	Beginning with Cisco NX-OS Release 4.2(1) for the Cisco Nexus 7000 Series devices, sets three different sampling intervals to bit-rate and packet-rate statistics.
show interface counters [module <i>module</i>]	Displays input and output octets unicast packets, multicast packets, and broadcast packets.
show interface counters detailed [all]	Displays input packets, bytes, and multicast as well as output packets and bytes.
show interface counters errors [module <i>module</i>]	Displays information on the number of error packets.

See the *Cisco Nexus 7000 Series NX-OS Interfaces Command Reference*, for information on these commands.

To display statistical information, you can create the following charts, which appear in the Statistics tab:

- Traffic Statistics Chart—Displays information about ports, including unicast, multicast, discards, and so forth.
- Error Counters Chart—Displays errors about the access or trunk interface, including alignments, collisions, runts, giants, and so forth.
- SFP Diagnostic Chart—Displays diagnostic information about the SFP transceivers that are connected to this device.
- Trunk Statistics Chart—Displays information about the trunk when you select a trunk port, including unicast, multicast, and so forth.
- SOLM Statistics Chart—Displays data about the received and transmitted traffic for unicast and multicast.



Note The SOLM Statistics Chart is applicable only for the Cisco Nexus 4000 platform, beginning with the Cisco DCNM 4.2(3) release.

- FIP Statistics Chart – Displays FIP statistics for the selected Ethernet interface.

See the “[Working with Statistics and Charts](#)” section in the *Fundamentals Configuration Guide, Cisco DCNM for LAN, Release 5.x*, for more information on collecting statistics for this feature.

Example Configurations for Access and Trunk Ports

The following example shows how to configure a Layer 2 access interface and assign the access VLAN mode for that interface:

```
switch# configure terminal
switch(config)# interface ethernet 2/30
switch(config-if)# switchport
switch(config-if)# switchport mode access
switch(config-if)# switchport access vlan 5
switch(config-if)#
```

The following example shows how to configure a Layer 2 trunk interface, assign the native VLAN and the allowed VLANs, and configure the device to tag the native VLAN traffic on the trunk interface:

```
switch# configure terminal
switch(config)# interface ethernet 2/35
switch(config-if)# switchport
switch(config-if)# switchport mode trunk
switch(config-if)# switchport trunk native vlan 10
switch(config-if)# switchport trunk allowed vlan 5, 10
switch(config-if)# exit
switch(config)# vlan dot1q tag native
switch(config)#
```

Field Descriptions

The field descriptions for the fields discussed in this chapter are in [Chapter 2, “Configuring Basic Interface Parameters.”](#)

Additional References

For additional information related to implementing access and trunk port modes, see the following sections:

- [Related Documents, page 3-139](#)
- [Standards, page 3-139](#)
- [MIBs, page 3-140](#)

Related Documents

Related Topic	Document Title
Configuring Layer 3 interfaces	Chapter 4, “Configuring Layer 3 Interfaces”
Port channels	Chapter 5, “Configuring Port Channels”
VLANs, private VLANs, and STP	<i>Cisco Nexus 7000 Series NX-OS Layer 2 Switching Configuration Guide, Release 5.x</i>
VLANs, private VLANs, STP	<i>Layer 2 Switching Configuration Guide, Cisco DCNM for LAN, Release 6.x</i>
Command reference	<i>Cisco Nexus 7000 Series NX-OS Interfaces Command Reference</i>
Interfaces	<i>Interfaces Configuration Guide, Cisco DCNM for LAN, Release 6.x</i>
Interfaces	<i>Cisco Nexus 7000 Series NX-OS Interfaces Configuration Guide, Release 5.x</i>
System management	<i>Cisco Nexus 7000 Series NX-OS System Management Configuration Guide, Release 5.x</i>
High availability	<i>Cisco Nexus 7000 Series NX-OS High Availability and Redundancy Guide, Release 5.x</i>
VDCs	<i>Cisco Nexus 7000 Series NX-OS Virtual Device Context Configuration Guide, Release 5.x</i>
VDCs	<i>Virtual Device Context Configuration Guide, Cisco DCNM for LAN, Release 6.x</i>
Licensing	<i>Cisco NX-OS Licensing Guide</i>
Licensing	<i>Cisco DCNM Installation and Licensing Guide, Release 5.x</i>
Release Notes	<i>Cisco Nexus 7000 Series NX-OS Release Notes, Release 5.x</i>
Release Notes	<i>Cisco DCNM Release Notes, Release 7.x</i>

Standards

Standards	Title
No new or modified standards are supported by this feature, and support for existing standards has not been modified by this feature.	—

MIBs

MIBs	MIBs Link
<ul style="list-style-type: none"> • BRIDGE-MIB • IF-MIB • CISCO-IF-EXTENSION-MIB • ETHERLIKE-MIB 	<p>To locate and download MIBs, go to the following URL:</p> <p>http://www.cisco.com/public/sw-center/netmgmt/cmtk/mibs.shtml</p>

Feature History for Configuring Layer 2 Interfaces

Table 3-2 lists the release history for this feature.

Table 3-2 Feature History for Configuring Layer 2 Interfaces

Feature Name	Releases	Feature Information
Layer 2 interfaces	4.0(1)	This feature was introduced.
SFP Diagnostic and SOLM Statical charts	4.2(3)	This feature was introduced.
Three configurable sampling intervals for interface statistics	4.2(1)	Added the load-interval command.
Default interfaces	5.2(1)	Added the default interface command to clear configuration of multiple interfaces.
SVI autostate exclude	5.2(1)	Added the switchport autostate exclude command to prevent a port's state from affecting the up or down state of the SVI.