



# Preface

---

This preface describes the audience, organization, and conventions of the *Cisco DCNM Fundamentals Guide*. It also provides information on how to obtain related documentation.

## Audience

This guide is for experienced network administrators who are responsible for configuring and maintaining the Cisco MDS 9000 Family of multilayer directors and fabric switches.

## Organization

This *guide* is organized as follows:

Chapter	Title	Description
Chapter 1	<a href="#">Introduction to Cisco Data Center Network Manager</a>	Provides a brief overview of Cisco DCNM Fundamentals.
Chapter 2	<a href="#">Cisco DCNM Fundamentals Overview</a>	Provides a brief overview of Cisco DCNM-SAN.
Chapter 4	<a href="#">Cisco DCNM Web Client</a>	Provides a brief overview of Cisco DCNM-SAN.
Chapter 5	<a href="#">Configuring Cisco DCNM-SAN Server</a>	Provides in-depth descriptions of GUI and capabilities of Cisco DCNM-SAN Server.
Chapter 6	<a href="#">Configuring Authentication in Cisco DCNM-SAN</a>	Describes the authentication schemes between Cisco DCNM-SAN components and fabric switches.
Chapter 7	<a href="#">Configuring Cisco DCNM-SAN Client</a>	Provides in-depth descriptions of GUI and capabilities of Cisco DCNM-SAN.
Chapter 8	<a href="#">Device Manager</a>	Provides in-depth descriptions of GUI and capabilities of Device Manager.
Chapter 9	<a href="#">Configuring Performance Manager</a>	Provides overview of the Performance Manager architecture.
Chapter 10	<a href="#">Monitoring the Network</a>	Provides details on monitoring the network.

Chapter	Title	Description
Chapter 11	Monitoring Performance	Provides details on using Performance Manager.
Chapter 12	Software Images	Provides details on installing and upgrading software on switches.
Chapter 13	Management Software FAQ	Provides answers to some of the most frequently asked questions about Cisco Fabric Manager and Device Manager.
Chapter 14	Overview of DCNM-LAN	Provides an overview of what you need to do to start using Cisco Data Center Network Manager for LAN (DCNM-LAN).
Chapter 15	Installing and Launching the Cisco DCNM-LAN Client	Describes how to install and set up the Cisco DCNM-LAN client.
Chapter 16	Using the Cisco DCNM-LAN Client	Introduces the Cisco DCNM-LAN client and explains how to use it.
Chapter 17	Administering DCNM-LAN Authentication Settings	Describes how to administer the Cisco DCNM-LAN server user accounts.
Chapter 29	Administering Device Discovery	Describes how to use the Device Discovery feature.
Chapter 30	Administering Devices and Credentials	Describes how to use the Devices and Credentials feature.
Chapter 18	Working with Topology	Describes how to use the Topology feature.
Chapter 31	Administering Auto-Synchronization with Devices	Describes how to use the Auto-Synchronization with Devices feature.
Chapter 33	Working With Threshold Rules	Describes how to configure threshold rules.
Chapter 32	Administering Statistical Data Collection	Describes how to control statistical data collection.
Chapter 36	Working with Network Analysis	Describes how to track and monitor the latency between two specified switches.
Chapter 34	Administering DCNM-LAN Server Log Settings	Describes how to control Cisco DCNM-LAN server logs.
Chapter 27	Starting and Stopping Cisco DCNM-LAN Servers	Describes how to start and stop the Cisco DCNM-LAN server.
Chapter 37	Maintaining the Cisco DCNM-LAN Database	Describes how to maintain the Cisco DCNM-LAN database.
Chapter 38	Troubleshooting DCNM-LAN	Explains how to resolve problems that you might encounter with Cisco DCNM-LAN.
Appendix A	Cisco DCNM Unsupported Feature List	Provides a list of features and functions not supported by Cisco Fabric Manager or Device Manager.
Appendix B	Interface Nonoperational Reason Codes	Provides the nonoperational reason codes for why an interface is up and the operational state is down.

# Document Conventions

Command descriptions use these conventions:

<b>boldface font</b>	Commands and keywords are in boldface.
<i>italic font</i>	Arguments for which you supply values are in italics.
[ ]	Elements in square brackets are optional.
[ x   y   z ]	Optional alternative keywords are grouped in brackets and separated by vertical bars.

Screen examples use these conventions:

screen font	Terminal sessions and information the switch displays are in screen font.
<b>boldface screen font</b>	Information you must enter is in boldface screen font.
<i>italic screen font</i>	Arguments for which you supply values are in italic screen font.
< >	Nonprinting characters, such as passwords, are in angle brackets.
[ ]	Default responses to system prompts are in square brackets.
!, #	An exclamation point (!) or a pound sign (#) at the beginning of a line of code indicates a comment line.

This document uses the following conventions:



## Note

Means reader *take note*. Notes contain helpful suggestions or references to material not covered in the manual.



## Caution

Means *reader be careful*. In this situation, you might do something that could result in equipment damage or loss of data.

In this document, the following shortened names are used:

- Cisco Data Center Network Manager for SAN is also referred to as DCNM-SAN.
- Cisco Data Center Network Manager for LAN is also referred to as DCNM-LAN.

## Related Documentation

This section contains information about the documentation available for Cisco DCNM and for the platforms that Cisco DCNM manages.

This section includes the following topics:

- [Cisco DCNM Documentation, page 64](#)
- [Cisco Nexus 1000V Series Switch Documentation, page 65](#)
- [Cisco Nexus 2000 Series Fabric Extender Documentation, page 65](#)
- [Cisco Nexus 3000 Series Switch Documentation, page 65](#)

- [Cisco Nexus 4000 Series Switch Documentation](#), page 65
- [Cisco Nexus 5000 Series Switch Documentation](#), page 65
- [Cisco Nexus 7000 Series Switch Documentation](#), page 65

## Cisco DCNM Documentation

The Cisco DCNM documentation is available at the following URL:

[http://www.cisco.com/en/US/products/ps9369/tsd\\_products\\_support\\_series\\_home.html](http://www.cisco.com/en/US/products/ps9369/tsd_products_support_series_home.html)

The documentation set for Cisco DCNM includes the following documents:

### Release Notes

*Cisco DCNM Release Notes, Release 7.x*

## Cisco DCNM

The following publications support both Cisco DCNM for LAN and DCNM for SAN, and address the new licensing model, the new installation process, and the new features of Cisco DCNM:

- Cisco DCNM Fundamentals Guide, Release 7.1.x
- Cisco DCNM Installation Guide, Release 7.1.x

### Cisco DCNM for LAN Configuration Guides

FabricPath Configuration Guide, Cisco DCNM for LAN  
Interfaces Configuration Guide, Cisco DCNM for LAN  
Layer 2 Switching Configuration Guide, Cisco DCNM for LAN  
Security Configuration Guide, Cisco DCNM for LAN  
System Management Configuration Guide, Cisco DCNM for LAN  
Unicast Configuration Guide, Cisco DCNM for LAN  
Virtual Device Context Configuration Guide, Cisco DCNM for LAN  
Virtual Device Context Quick Start, Cisco DCNM for LAN  
Web Services API Guide, Cisco DCNM for LAN

### Cisco DCNM for SAN Configuration Guides

System Management Configuration Guide, Cisco DCNM for SAN  
Interfaces Configuration Guide, Cisco DCNM for SAN  
Fabric Configuration Guide, Cisco DCNM for SAN  
Quality of Service Configuration Guide, Cisco DCNM for SAN  
Security Configuration Guide, Cisco DCNM for SAN  
IP Services Configuration Guide, Cisco DCNM for SAN  
Intelligent Storage Services Configuration Guide, Cisco DCNM for SAN

High Availability and Redundancy Configuration Guide, Cisco DCNM for SAN  
Inter-VSAN Routing Configuration Guide, Cisco DCNM for SAN  
SMI-S and Web Services Programming Guide, Cisco DCNM for SAN

## Cisco Nexus 1000V Series Switch Documentation

The Cisco Nexus 1000V Series Switch documentation is available at the following URL:  
[http://www.cisco.com/en/US/products/ps9902/tsd\\_products\\_support\\_series\\_home.html](http://www.cisco.com/en/US/products/ps9902/tsd_products_support_series_home.html)

## Cisco Nexus 2000 Series Fabric Extender Documentation

The Cisco Nexus 2000 Series Fabric Extender documentation is available at the following URL:  
[http://www.cisco.com/en/US/products/ps10110/tsd\\_products\\_support\\_series\\_home.html](http://www.cisco.com/en/US/products/ps10110/tsd_products_support_series_home.html)

## Cisco Nexus 3000 Series Switch Documentation

The Cisco Nexus 3000 Series switch documentation is available at the following URL:  
[http://www.cisco.com/en/US/products/ps11541/tsd\\_products\\_support\\_series\\_home.html](http://www.cisco.com/en/US/products/ps11541/tsd_products_support_series_home.html)

## Cisco Nexus 4000 Series Switch Documentation

The Cisco Nexus 4000 Series Switch documentation is available at the following URL:  
[http://www.cisco.com/en/US/products/ps10596/tsd\\_products\\_support\\_series\\_home.html](http://www.cisco.com/en/US/products/ps10596/tsd_products_support_series_home.html)

## Cisco Nexus 5000 Series Switch Documentation

The Cisco Nexus 5000 Series Switch documentation is available at the following URL:  
[http://www.cisco.com/en/US/products/ps9670/tsd\\_products\\_support\\_series\\_home.html](http://www.cisco.com/en/US/products/ps9670/tsd_products_support_series_home.html)

## Cisco Nexus 7000 Series Switch Documentation

The Cisco Nexus 7000 Series Switch documentation is available at the following URL:  
[http://www.cisco.com/en/US/products/ps9902/tsd\\_products\\_support\\_series\\_home.html](http://www.cisco.com/en/US/products/ps9902/tsd_products_support_series_home.html)

## Additional Related Documentation for Cisco MDS 9000

The documentation set for the Cisco MDS 9000 Family includes the following documents. To find a document online, use the Cisco MDS NX-OS Documentation Locator at:

[http://www.cisco.com/en/US/docs/storage/san\\_switches/mds9000/roadmaps/doclocator.htm](http://www.cisco.com/en/US/docs/storage/san_switches/mds9000/roadmaps/doclocator.htm)

## Release Notes

- *Cisco MDS 9000 Family Release Notes for Cisco MDS NX-OS Releases*
- *Cisco MDS 9000 Family Release Notes for MDS SAN-OS Releases*
- *Cisco MDS 9000 Family Release Notes for Cisco MDS 9000 EPLD Images*

## Regulatory Compliance and Safety Information

- Regulatory Compliance and Safety Information for the Cisco MDS 9000 Family

## Compatibility Information

- Cisco Data Center Interoperability Support Matrix
- Cisco MDS 9000 NX-OS Hardware and Software Compatibility Information and Feature Lists
- *Cisco MDS 9000 Family Switch-to-Switch Interoperability Configuration Guide*

## Hardware Installation

- Cisco MDS 9500 Series Hardware Installation Guide
- Cisco MDS 9200 Series Hardware Installation Guide
- *Cisco MDS 9100 Series Hardware Installation Guide*
- Cisco MDS 9124 and Cisco MDS 9134 Multilayer Fabric Switch Quick Start Guide

## Software Installation and Upgrade

- Cisco MDS 9000 NX-OS Software Upgrade and Downgrade Guide

## Cisco NX-OS

- Cisco MDS 9000 Family NX-OS Licensing Guide
- Cisco MDS 9000 Family NX-OS Fundamentals Configuration Guide
- Cisco MDS 9000 Family NX-OS System Management Configuration Guide
- Cisco MDS 9000 Family NX-OS Interfaces Configuration Guide
- Cisco MDS 9000 Family NX-OS Fabric Configuration Guide
- Cisco MDS 9000 Family NX-OS Quality of Service Configuration Guide
- Cisco MDS 9000 Family NX-OS Security Configuration Guide
- Cisco MDS 9000 Family NX-OS IP Services Configuration Guide
- *Cisco MDS 9000 Family NX-OS Intelligent Storage Services Configuration Guide*
- Cisco MDS 9000 Family NX-OS High Availability and Redundancy Configuration Guide

- *Cisco MDS 9000 Family NX-OS Inter-VSAN Routing Configuration Guide*
- Cisco MDS 9000 Family Cookbook for Cisco MDS SAN-OS

## Command-Line Interface

- Cisco MDS 9000 Family Command Reference

## Intelligent Storage Networking Services Configuration Guides

- Cisco MDS 9000 Family I/O Acceleration Configuration Guide
- Cisco MDS 9000 Family SANTap Deployment Guide
- Cisco MDS 9000 Family Data Mobility Manager Configuration Guide
- Cisco MDS 9000 Family Storage Media Encryption Configuration Guide

## Troubleshooting and Reference

- Cisco MDS 9000 Family and Nexus 7000 Series System Messages Reference
- Cisco MDS 9000 Family SAN-OS Troubleshooting Guide
- Cisco MDS 9000 Family NX-OS MIB Quick Reference
- Cisco DCNM for SAN Database Schema Reference

## Obtaining Documentation and Submitting a Service Request

For information on obtaining documentation, submitting a service request, and gathering additional information, see the monthly *What's New in Cisco Product Documentation*, which also lists all new and revised Cisco technical documentation, at:

<http://www.cisco.com/en/US/docs/general/whatsnew/whatsnew.html>

Subscribe to the *What's New in Cisco Product Documentation* as a Really Simple Syndication (RSS) feed and set content to be delivered directly to your desktop using a reader application. The RSS feeds are a free service and Cisco currently supports RSS version 2.0.

