



Preface

This preface describes the audience, organization, and conventions of the *Cisco DCNM Installation Guide, Release 7.1.x*. It also provides information on how to obtain related documentation.

This preface includes the following topics:

- [Audience, page 9](#)
- [Document Conventions, page 9](#)
- [Document Conventions, page 9](#)
- [Related Documentation, page 10](#)
- [Documentation Feedback, page 13](#)
- [Obtaining Documentation and Submitting a Service Request, page 13](#)

Audience

This publication is for experienced network administrators who plan to install Cisco Data Center Network Manager (DCNM) Open Virtual Appliance, DCNM ISO Virtual Appliance, DCNM Windows Installer, and DCNM Linux Installer to configure, monitor, and maintain applications. Cisco Fabric works with only certain Cisco Nexus products. Consult your Cisco Fabric documentation for specific information about products that work with Cisco Fabric.

Document Conventions

This document uses the following conventions:



Note

Means reader *take note*. Notes contain helpful suggestions or references to material not covered in the manual.



Caution

Means *reader be careful*. In this situation, you might do something that could result in equipment damage or loss of data.

In this document, the following shortened names are used:

- Cisco Data Center Network Manager is also referred to as Cisco Prime DCNM.

- Cisco Data Center Network Manager Open Virtual Appliance is also referred to as Cisco Prime DCNM Open Virtual Appliance.
- Cisco Dynamic Fabric Automation is also referred to as Cisco Fabric.

Related Documentation

This section contains information about the documentation available for Cisco DCNM Open Virtual Appliance, and for the platforms that Cisco DCNM Open Virtual Appliance.

This section includes the following topics:

- [Cisco DCNM Documentation](#), page 10
- [Cisco Nexus 1000V Series Switch Documentation](#), page 11
- [Cisco Nexus 2000 Series Fabric Extender Documentation](#), page 11
- [Cisco Nexus 3000 Series Switch Documentation](#), page 11
- [Cisco Nexus 4000 Series Switch Documentation](#), page 11
- [Cisco Nexus 5000 Series Switch Documentation](#), page 12
- [Cisco Nexus 6000 Series Switch Documentation](#), page 12
- [Cisco Nexus 7000 Series Switch Documentation](#), page 12
- [Cisco Nexus 9000 Series Switch Documentation](#), page 12
- [Cisco UCS Manager Documentation](#), page 12
- [Cisco Network Services Controller Documentation](#), page 12
- [Cisco Dynamic Fabric Automation Documentation](#), page 12

Cisco DCNM Documentation

The Cisco DCNM documentation is available at the following URL:

http://www.cisco.com/en/US/products/ps9369/tsd_products_support_series_home.html

The documentation set for Cisco DCNM includes the following documents:

Release Notes

Cisco DCNM Release Notes, Release 7.x

Cisco Prime DCNM 7.0 Fundamentals Guide

Cisco DCNM 7.0 Fundamentals Guide

Cisco Prime DCNM for LAN Configuration Guides

FabricPath Configuration Guide, Cisco Prime DCNM for LAN

Interfaces Configuration Guide, Cisco Prime DCNM for LAN

Layer 2 Switching Configuration Guide, Cisco Prime DCNM for LAN

Security Configuration Guide, Cisco Prime DCNM for LAN

System Management Configuration Guide, Cisco Prime DCNM for LAN
Unicast Configuration Guide, Cisco Prime DCNM for LAN
Virtual Device Context Configuration Guide, Cisco Prime DCNM for LAN
Virtual Device Context Quick Start, Cisco Prime DCNM for LAN
Web Services API Guide, Cisco Prime DCNM for LAN

Cisco Prime DCNM for SAN Configuration Guides

System Management Configuration Guide, Cisco Prime DCNM for SAN
Interfaces Configuration Guide, Cisco Prime DCNM for SAN
Fabric Configuration Guide, Cisco Prime DCNM for SAN
Quality of Service Configuration Guide, Cisco Prime DCNM for SAN
Security Configuration Guide, Cisco Prime DCNM for SAN
IP Services Configuration Guide, Cisco Prime DCNM for SAN
Intelligent Storage Services Configuration Guide, Cisco Prime DCNM for SAN
High Availability and Redundancy Configuration Guide, Cisco Prime DCNM for SAN
Inter-VSAN Routing Configuration Guide, Cisco Prime DCNM for SAN
SMI-S and Web Services Programming Guide, Cisco Prime DCNM for SAN

Cisco Nexus 1000V Series Switch Documentation

The Cisco Nexus 1000V Series Switch documentation is available at the following URL:
http://www.cisco.com/en/US/products/ps9902/tsd_products_support_series_home.html

Cisco Nexus 2000 Series Fabric Extender Documentation

The Cisco Nexus 2000 Series Fabric Extender documentation is available at the following URL:
http://www.cisco.com/en/US/products/ps10110/tsd_products_support_series_home.html

Cisco Nexus 3000 Series Switch Documentation

The Cisco Nexus 3000 Series switch documentation is available at the following URL:
http://www.cisco.com/en/US/products/ps11541/tsd_products_support_series_home.html

Cisco Nexus 4000 Series Switch Documentation

The Cisco Nexus 4000 Series Switch documentation is available at the following URL:
http://www.cisco.com/en/US/products/ps10596/tsd_products_support_series_home.html

Cisco Nexus 5000 Series Switch Documentation

The Cisco Nexus 5000 Series Switch documentation is available at the following URL:

http://www.cisco.com/en/US/products/ps9670/tsd_products_support_series_home.html

Cisco Nexus 6000 Series Switch Documentation

Cisco Nexus 6000 Series Switch Documentation is available at the following URL:

http://www.cisco.com/en/US/products/ps12806/tsd_products_support_series_home.html

Cisco Nexus 7000 Series Switch Documentation

The Cisco Nexus 7000 Series Switch documentation is available at the following URL:

http://www.cisco.com/en/US/products/ps9902/tsd_products_support_series_home.html

Cisco Nexus 9000 Series Switch Documentation

The Cisco Nexus 9000 Series Switch documentation is available at the following URL:

<http://www.cisco.com/c/en/us/support/switches/nexus-9000-series-switches/tsd-products-support-series-home.html>

Cisco Network Services Controller Documentation

The Cisco Network Services Controller Documentation is available at the following URL:

http://www.cisco.com/en/US/partner/products/ps13213/tsd_products_support_series_home.html

Cisco Dynamic Fabric Automation Documentation

This Cisco Dynamic Fabric Automation documentation is available at the following URL:

http://www.cisco.com/en/US/solutions/ns340/ns517/ns224/ns945/dynamic_fabric_automation.html#~Product

Cisco UCS Manager Documentation

The Cisco UCS Manager documentation is available at the following URL:

<http://www.cisco.com/c/en/us/support/servers-unified-computing/ucs-manager/tsd-products-support-series-home.html>

Documentation Feedback

To provide technical feedback on this document, or to report an error or omission, please send your comments to: dcnm-docfeedback@cisco.com.

We appreciate your feedback.

Obtaining Documentation and Submitting a Service Request

For information on obtaining documentation, using the Cisco Bug Search Tool (BST), submitting a service request, and gathering additional information, see *What's New in Cisco Product Documentation* at: <http://www.cisco.com/c/en/us/td/docs/general/whatsnew/whatsnew.html>.

Subscribe to *What's New in Cisco Product Documentation*, which lists all new and revised Cisco technical documentation, as an RSS feed and deliver content directly to your desktop using a reader application. The RSS feeds are a free service.

