



Auto Smartports Configuration Guide

Cisco IOS Release 15.0(2)SE
August 2012

Americas Headquarters

Cisco Systems, Inc.
170 West Tasman Drive
San Jose, CA 95134-1706
USA
<http://www.cisco.com>
Tel: 408 526-4000
800 553-NETS (6387)
Fax: 408 527-0883

Text Part Number: OL-27650-01

THE SPECIFICATIONS AND INFORMATION REGARDING THE PRODUCTS IN THIS MANUAL ARE SUBJECT TO CHANGE WITHOUT NOTICE. ALL STATEMENTS, INFORMATION, AND RECOMMENDATIONS IN THIS MANUAL ARE BELIEVED TO BE ACCURATE BUT ARE PRESENTED WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED. USERS MUST TAKE FULL RESPONSIBILITY FOR THEIR APPLICATION OF ANY PRODUCTS.

THE SOFTWARE LICENSE AND LIMITED WARRANTY FOR THE ACCOMPANYING PRODUCT ARE SET FORTH IN THE INFORMATION PACKET THAT SHIPPED WITH THE PRODUCT AND ARE INCORPORATED HEREIN BY THIS REFERENCE. IF YOU ARE UNABLE TO LOCATE THE SOFTWARE LICENSE OR LIMITED WARRANTY, CONTACT YOUR CISCO REPRESENTATIVE FOR A COPY.

The Cisco implementation of TCP header compression is an adaptation of a program developed by the University of California, Berkeley (UCB) as part of UCB's public domain version of the UNIX operating system. All rights reserved. Copyright © 1981, Regents of the University of California.

NOTWITHSTANDING ANY OTHER WARRANTY HEREIN, ALL DOCUMENT FILES AND SOFTWARE OF THESE SUPPLIERS ARE PROVIDED "AS IS" WITH ALL FAULTS. CISCO AND THE ABOVE-NAMED SUPPLIERS DISCLAIM ALL WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING, WITHOUT LIMITATION, THOSE OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT OR ARISING FROM A COURSE OF DEALING, USAGE, OR TRADE PRACTICE.

IN NO EVENT SHALL CISCO OR ITS SUPPLIERS BE LIABLE FOR ANY INDIRECT, SPECIAL, CONSEQUENTIAL, OR INCIDENTAL DAMAGES, INCLUDING, WITHOUT LIMITATION, LOST PROFITS OR LOSS OR DAMAGE TO DATA ARISING OUT OF THE USE OR INABILITY TO USE THIS MANUAL, EVEN IF CISCO OR ITS SUPPLIERS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Cisco and the Cisco logo are trademarks or registered trademarks of Cisco and/or its affiliates in the U.S. and other countries. To view a list of Cisco trademarks, go to this URL: www.cisco.com/go/trademarks. Third-party trademarks mentioned are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (1110R)

Any Internet Protocol (IP) addresses and phone numbers used in this document are not intended to be actual addresses and phone numbers. Any examples, command display output, network topology diagrams, and other figures included in the document are shown for illustrative purposes only. Any use of actual IP addresses or phone numbers in illustrative content is unintentional and coincidental.

Auto Smartports Configuration Guide

© 2010–2012 Cisco Systems, Inc. All rights reserved.



CONTENTS

Preface	v
Conventions	v
Filtering show Command Output	vi
Related Publications	vi
Obtaining Documentation, Support, and Security Guidelines	vii
Auto Smartports and Static Smartports Macros	1-1
Auto Smartports Macros	1-1
Static Smartports Macros	1-1
Event Triggers	1-2
User-Defined Files	1-2
Macro Persistence	1-2
Managing Macros	1-3
Auto Smartports and Cisco Medianet	1-3
Device Classifier	1-3
Device Visibility Mode	1-4
Configuring Auto Smartports and Static Smartports Macros	2-1
Configuring Macros	2-1
Auto Smartports Configuration Guidelines	2-2
Enabling Auto Smartports Macros	2-3
Default Auto Smartports Configuration	2-4
Configuring Auto Smartports Parameter Values	2-7
Configuring MAC Address Groups	2-8
Configuring Macro Persistence	2-11
Configuring Built-In Macro Options	2-12
Creating User-Defined Event Triggers	2-16
Configuring Event Trigger Control	2-19
Configuring User-Defined Triggers for User-Defined Macros	2-22
Configuring User-Defined Macros	2-23
Applying Macros on a Switch	2-29
Default Static Smartports Configuration	2-33
Static Smartports Configuration Guidelines	2-33
NEAT Configuration	2-33
Applying Static Smartports Macros	2-34

Displaying Macros 2-36

Auto Smartports and Static Smartports Macros CLI Commands 3-1

- macro 3-2
- macro auto (CLI) 3-5
- macro auto apply (Cisco IOS shell scripting capability) 3-8
- macro auto config (Cisco IOS shell scripting capability) 3-10
- macro auto control 3-11
- macro auto device 3-13
- macro auto execute 3-15
- macro auto global control 3-21
- macro auto global processing 3-23
- macro auto mac-address-group 3-25
- macro auto monitor 3-27
- macro auto processing 3-28
- macro auto sticky 3-30
- macro auto trigger 3-32
- macro description 3-34
- macro global 3-35
- macro global description 3-38
- shell trigger 3-39
- show macro auto 3-41
- show macro auto monitor clients 3-44
- show macro auto monitor device 3-46
- show macro auto monitor type 3-48
- show parser macro 3-51
- show shell 3-54



Preface

If your switch is stacking-capable (for example, a Catalyst 3750-X, 3750-E, or 2960-S switch), unless otherwise noted, the term *switch* refers to a standalone switch and to a switch stack.

This document describes how to configure Auto and static Smartports macros. It does not describe how to install your switch. For information, see the hardware installation guide for your switch.

- Catalyst 3750-X and 3560-X switches
- Catalyst 3750-E and 3560-E switches
- Catalyst 3750, 3560, 2960-S, and 2960 switches
- Catalyst 2918 switches

For information about the Cisco IOS commands, see the Cisco IOS documentation set on Cisco.com.

This guide does not describe how to use the embedded device manager GUIs or Cisco Network Assistant (hereafter referred to as *Network Assistant*). For information about the device manager, see the switch online help. For information about Network Assistant, see *Getting Started with Cisco Network Assistant* on Cisco.com.

You can use CiscoWorks LAN Management Solution (LMS) to configure and manage Auto Smartports. For information about using CiscoWorks LMS and Auto Smartports:

http://www.cisco.com/en/US/prod/collateral/netmgtsw/ps6504/ps6528/ps2425/white_paper_c11-542881_ps11200_Products_White_Paper.html#wp9000042

Conventions

This publication uses these conventions to convey instructions and information:

For command descriptions

- Commands and keywords are in **boldface** text.
- Arguments for which you supply values are in *italic*.
- Square brackets ([]) mean optional elements.
- Braces ({ }) group required choices, and vertical bars (|) separate the alternative elements.
- Braces and vertical bars within square brackets ({ | }) mean a required choice within an optional element.

For interactive examples

- Terminal sessions and system displays are in *screen* font.
- Information that you enter is in **boldface screen** font.
- Nonprinting characters, such as passwords or tabs, are in angle brackets (<>).

Notes, cautions, and warnings use these conventions and symbols:



Note

Means *reader take note*. Notes contain helpful suggestions or references to materials not contained in this manual.



Caution

Means *reader be careful*. In this situation, you might do something that could result in equipment damage or loss of data.

Filtering show Command Output

The **show** commands have optional output modifiers to filter the command output.

- **| begin**—Display begins with the line that matches the *expression*.
- **| exclude**—Display excludes with the line that matches the *expression*.
- **| include**—Display includes with the line that matches the *expression*.
- *expression*—Expression in the output to use as a reference point.

Expressions are case sensitive. If you enter **| exclude output**, the lines that contain *output* are not displayed, but the lines that contain *Output* are displayed.

Related Publications

For information about Cisco network devices running Auto Smartports, see the switch-specific documentation on Cisco.com:

<http://www.cisco.com/cisco/web/support/index.html>.



Note

Before installing, configuring, or upgrading the switch, router, or other Cisco device, see these documents:

- For initial configuration information, see the “Using Express Setup” section in the getting started guide or the “Configuring the Switch with the CLI-Based Setup Program” appendix in the hardware installation guide.
 - For device manager requirements, see the “System Requirements” section in the release notes.
 - For Network Assistant requirements, see the *Getting Started with Cisco Network Assistant*.
 - For cluster requirements, see the *Release Notes for Cisco Network Assistant*.
 - For upgrading information, see the “Downloading Software” section in the release notes.
-

Obtaining Documentation, Support, and Security Guidelines

For information on obtaining documentation, submitting a service request, and gathering additional information, see the monthly *What's New in Cisco Product Documentation*, which also lists all new and revised Cisco technical documentation:

<http://www.cisco.com/en/US/docs/general/whatsnew/whatsnew.html>

Subscribe to the *What's New in Cisco Product Documentation* as a Really Simple Syndication (RSS) feed, and set content to be delivered directly to your desktop by a reader application. The RSS feeds are a free service, and Cisco supports RSS version 2.0.



CHAPTER 1

Auto Smartports and Static Smartports Macros

- [Auto Smartports Macros, page 1-1](#)
- [Static Smartports Macros, page 1-1](#)
- [Event Triggers, page 1-2](#)
- [User-Defined Files, page 1-2](#)
- [Macro Persistence, page 1-2](#)
- [Auto Smartports and Cisco Medianet, page 1-3](#)
- [Device Classifier, page 1-3](#)

Auto Smartports Macros

Auto Smartports macros dynamically configure ports based on the device type detected on the port. When the switch detects a new device on a port, it applies the appropriate macro. When there is a link-down event, the switch removes the macro. For example, when you connect a Cisco IP phone to a port, Auto Smartports applies the IP phone macro. The IP phone macro enables quality of service (QoS), security features, and a dedicated voice VLAN to ensure proper treatment of delay-sensitive voice traffic. Auto Smartports uses event triggers to map devices to port macros.

You can also manually configure and apply global macros.

The macros embedded in the switch software are groups of CLI commands.

You can also create user-defined macros by using the Cisco IOS Shell scripting capability, which is a BASH-like language syntax for command automation and variable replacement.

For information, see Chapter 2, “Configuring Auto Smartports and Static Smartports Macros.”

Static Smartports Macros

Static Smartports macros provide port configurations that you apply manually based on the device connected to the port. When you apply a static macro, the macro CLI commands are added to the existing port configuration. When there is a link-down event on the port, the switch does not remove the static macro configuration.

Event Triggers

Auto Smartports uses event triggers to map macros to the source port of the event. The most common triggers are based on Cisco Discovery Protocol (CDP) messages received from another device. A CDP event trigger occurs when these devices are detected:

- Cisco switch
- Cisco router
- Cisco IP Phone
- Cisco Wireless Access Points, including autonomous and lightweight access points
- Cisco IP video surveillance camera
- Cisco digital media player

Additional event triggers for Cisco and third-party devices are user-defined MAC address groups, MAC authentication bypass (MAB) messages, 802.1x authentication messages, and Link Layer Discovery Protocol (LLDP) messages.

LLDP supports a set of attributes used to discover neighbor devices. These type, length, and value attributes and descriptions are referred to as TLVs. LLDP-supported devices use TLVs to receive and send information. This protocol advertises details such as device configuration information, capabilities, and identity. Auto Smartports uses the LLDP *system capabilities* TLV as the event trigger. Use the event trigger control feature to specify if the switch applies a macro based on the detection method, device type, or configured trigger.

For more information about configuring the LLDP system capabilities TLV attributes for Auto Smartports, see the “Configuring LLDP, LLDP-MED, and Wired Location Service” chapter in the switch-specific software configuration guides.

For devices that do not support CDP, MAB, or 802.1x authentication, such as network printers, LLDP, or legacy Cisco Digital Media Players, you can configure a MAC address group with a MAC operationally unique identifier (OUI)-based trigger. You map the MAC address to a built-in or user-defined macro that has the desired configuration.

Beginning with Cisco IOS Release 15.0(1)SE, Auto Smartports can detect devices based on Dynamic Host Control Protocol (DHCP) options. There are predefined and customizable macros for devices detected through DHCP options.

User-Defined Files

You can designate a remote server location for user-defined macro files. You can then update and maintain one set of macro files for use by multiple switches across the network.

Macro Persistence

The macro persistence feature causes macro configurations to remain enabled on the switch ports regardless of a link-down event. This eliminates multiple system log and configuration change notifications when the switch has link-up and link-down events or is a domain member or an end point in an EnergyWise network.


Managing Macros

You can use the Cisco LAN management system (LMS) tools to deploy macros to switches. When you define a custom macro, you must also configure and associate a trigger for it. For information on configuring user-defined triggers, see the “[Configuring User-Defined Triggers for User-Defined Macros](#)” section on page 2-22.

Auto Smartports and Cisco Medianet

Cisco Medianet enables intelligent services in the network infrastructure for a variety of video applications. A service of Medianet is autoprovisioning for Cisco Digital Media Players and Cisco IP video surveillance cameras through Auto Smartports. The switch identifies Cisco and third-party video devices by using CDP, 802.1x, MAB, LLDP, and MAC addresses (Figure 1-1). The switch applies the applicable macro to enable the appropriate VLAN, standard quality of service (QoS), and auto-QoS settings for the device. The switch also uses a built-in MAC address group to detect the legacy Cisco digital media player (DMP), based on an OUI of of4400 or 23ac00. You can also create custom user-defined macros for any video device.

Figure 1-1 Cisco Medianet Deployment Example

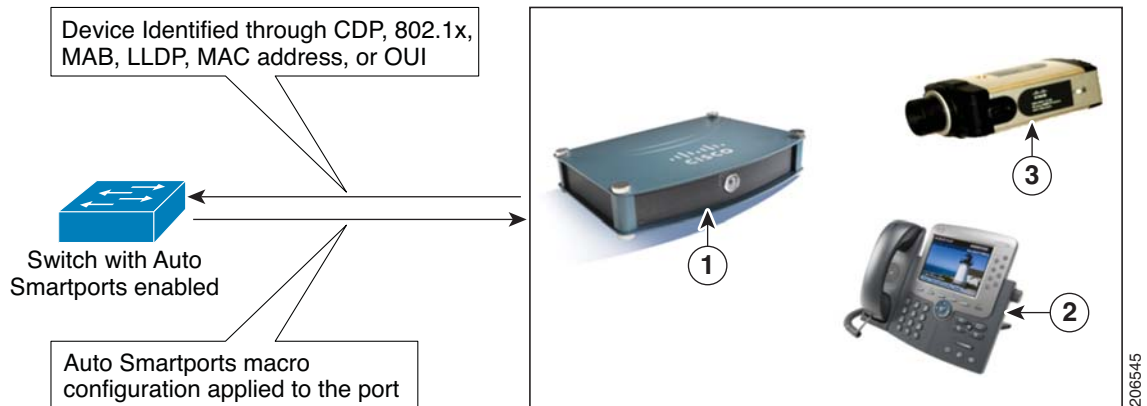

1	Wireless access point	3	Cisco IP video surveillance camera
2	Cisco IP phone		

Device Classifier

Beginning with Cisco IOS Release 15.0(1) SE, the device classifier (DC) feature is enabled by default on the switch.

The DC collects information from MAC-OUI and protocols such as CDP, LLDP, and DHCP to identify devices. You must enable CDP and LLDP on the switch. To make DHCP options information available to the DC, you must enable the DHCP snooping feature on the switch. The device attributes collected from these protocols are evaluated against a set of profiles available to the DC to find the best match. The best-matched profile is used for device identification.

Device-classifier uses profile definitions—built-in and default profiles. The built-in profiles contain the device profiles that are known to the Auto Smartports module, comprising a limited set of Cisco devices. They are built into Cisco IOS and cannot be changed. The default profiles are stored as a text file in nonvolatile storage and allow the DC to identify a much larger set of devices. The default profiles are updated as part of the Cisco IOS archive download.

When a new device is detected, the corresponding shell trigger executes the Auto Smartports configuration macro. Auto Smartports has built-in mappings for a large set of devices. You can use the commands described in the [“Configuring User-Defined Triggers for User-Defined Macros” section on page 2-22](#) to create new mappings. You can create the trigger mappings based on the profile name or device name that is provided by the DC.

For switch stacks, the DC runs only on the stack master. All the attributes for devices connected to stack master and stack member switch ports are available to the DC on the stack master. The device classification results are available only on the stack master. During a stack master failover event, the new stack master reclassifies all the devices. The device attributes for the existing and any new devices are available to the DC on the new stack master.

Device Visibility Mode

The DC function is enabled on the switch by default. You can disable it by using the **no macro auto monitor** global configuration command. The DC feature provides **show** commands to display the devices that are connected to the switch. It also provides information about the physical port to which the device is connected, along with device MAC address and other vendor information. Only directly connected devices, such as another Layer 2 switch, are classified on nonaccess ports. On access ports that are connected to hubs, device classification is limited to 32 devices.

When you enable Auto Smartports, the DC is automatically enabled.



CHAPTER 2

Configuring Auto Smartports and Static Smartports Macros

- [Configuring Macros, page 2-1](#)
- [Displaying Macros, page 2-36](#)

Configuring Macros

- [Auto Smartports Configuration Guidelines, page 2-2](#)
- [Enabling Auto Smartports Macros, page 2-3](#)
- [Default Auto Smartports Configuration, page 2-4](#)
- [Configuring Auto Smartports Parameter Values, page 2-7](#)
- [Configuring MAC Address Groups, page 2-8](#)
- [Configuring Macro Persistence, page 2-11](#)
- [Configuring Built-In Macro Options, page 2-12](#)
- [Creating User-Defined Event Triggers, page 2-16](#)
- [Configuring Event Trigger Control, page 2-19](#)
- [Configuring User-Defined Triggers for User-Defined Macros, page 2-22](#)
- [Configuring User-Defined Macros, page 2-23](#)
- [Applying Macros on a Switch, page 2-29](#)
- [Default Static Smartports Configuration, page 2-33](#)
- [Static Smartports Configuration Guidelines, page 2-33](#)
- [NEAT Configuration, page 2-33](#)
- [Applying Static Smartports Macros, page 2-34](#)

Auto Smartports Configuration Guidelines

- You cannot delete or change the built-in macros. However, you can override a built-in macro by creating a user-defined macro with the same name. To restore the original built-in macro, delete the user-defined macro.
- If you enable both the **macro auto device** and the **macro auto execute** global configuration commands, the parameters specified in the command last executed are applied to the switch. Only one command is active on the switch.
- To avoid system conflicts when macros are applied, remove all port configurations except for 802.1x authentication. Be sure to enter the commands that remove port security and Bridge Protocol Data Unit (BPDU) guard features *before* you enable Auto Smartports macros on a port.
- Do not configure port security when you enable device-specific Auto Smartports on the switch. The switch applies the appropriate port-based commands.
- If the macro conflicts with the original configuration, either the macro does not apply some of the original configuration commands, or the antimacro does not remove them. (The antimacro is the portion of the applied macro that removes the macro at a link-down event.)

For example, if 802.1x authentication is enabled, you cannot remove the **switchport-mode access** configuration. Remove the 802.1x authentication before removing the **switchport mode** configuration.

- A port cannot be a member of an EtherChannel when you apply Auto Smartports macros. If you use EtherChannels, disable Auto Smartports on the EtherChannel interface by using the **no macro auto processing** interface configuration command.
- The built-in-macro default data VLAN is VLAN 1. The built-in macro default voice VLAN is VLAN 2. If your switch uses different access, native, or voice VLANs, use the **macro auto device** or the **macro auto execute** global configuration commands to configure the values.
- If you use the VLAN name in a macro, it must be the same name that is in the VLAN database for all switches in the VLAN Trunking Protocol (VTP) domain.
- Use the **show macro auto device** privileged EXEC command to display the default macros with the default parameter values, current values, and the configurable parameter list for each macro. You can also use the **show shell functions** privileged EXEC command to see the built-in-macro default values.
- To use 802.1x authentication or MAC authentication bypass (MAB) to detect non-Cisco devices, configure the RADIUS server to support the Cisco attribute-value pair **auto-smart-port=event trigger**.
- For stationary devices that do not support CDP, MAB, or 802.1x authentication, such as network printers, configure a MAC address group with a MAC OUI-based trigger and map it to a user-defined macro with the desired configuration.
- An 802.1x-authentication-based trigger takes precedence over all other event triggers, such as Cisco Discovery Protocol (CDP) messages, Link Layer Discovery Protocol (LLDP) messages, or user-defined MAC address groups.
- The switch supports Auto Smartports macros only on directly connected devices. If multiple devices are connected, (for example, through a hub) the applied macro is associated with the first detected device.
- If authentication is enabled on a port, the switch ignores a MAC address trigger if authentication fails.

- When using MAC-address-based detection, ensure that Auto Smartports is enabled *only* on ports facing access devices and not on ports that face the network or an intermediate gateway switch.
- The order of CLI commands within the macro and the corresponding antimacro can be different.
- When the device identity is configured and the device is authenticated on a switch port, these RADIUS attributes could be downloaded:
 - VLAN ID and switch ACL name or number from the Cisco access control server (ACS)
 - ASP trigger name in an attribute-value (AV) pair.

After the AV pair is downloaded, the switch applies the macro on the port.

The downloaded VLAN ID or ACL name could conflict with the settings in the user-defined or builtin macro applied by the switch.

- Auto Smartports does not support lightweight access points in the Remote Edge Access Point (REAP) or Hybrid Remote Edge Access Point (HREAP) mode.

Enabling Auto Smartports Macros

Follow this required procedure to enable macros globally on the switch.

Beginning in privileged EXEC mode:

	Command	Purpose
Step 1	configure terminal Example: Switch# configure terminal	Enters global configuration mode.
Step 2	macro auto global processing Example: Switch(config)# macro auto global processing	Globally enables macros on the switch.
Step 3	end Example: Switch(config)# end	Returns to privileged EXEC mode.
Step 4	show running-config Example: Switch# show running-config	Verifies that Auto Smartports is enabled.
Step 5	copy running-config startup-config Example: Switch# copy running-config startup-config	(Optional) Saves your entries in the configuration file.

To return to the default setting, use the **no macro auto global processing** global configuration command.

To disable macros on a specific port, use the **no macro auto processing** interface configuration command.

You can use the **show macro auto device**, the **show shell functions**, and the **show shell triggers** privileged EXEC commands to display the event triggers and the built-in macros.

This example shows how to enable macros on the switch and then how to disable macros on a specific interface:

```
Switch(config)# macro auto global processing
Switch(config)# interface interface_id
Switch(config-if)# no macro auto processing
```

Default Auto Smartports Configuration

- Auto Smartports is globally disabled and is enabled per interface.
- Macro persistence is globally disabled and is enabled per interface.
- Cisco IOS shell is enabled.
- The switch uses these built-in macros (the defaults) when Auto Smartports is enabled for the specific devices.

Table 2-1 Device-Specific Built-In Macros

Macro Name	Description
CISCO_AP_AUTO_SMARTPORT	This macro applies the wireless access point macro for Cisco access points. It enables standard QoS, auto-QoS, and 802.1q encapsulated trunking. It configures the native VLAN on the interface. It also enables macro persistence so that the macro remains active after a link-down event.
CISCO_DMP_AUTO_SMARTPORT	This macro applies the digital media player macro for Cisco digital media players. It enables QoS trust, auto-QoS, port security, and spanning-tree protection. It configures the access VLAN for the interface and provides network protection from unknown unicast packets. Note If you enter the auto qos video media-player interface configuration command, the switch automatically uses the CDP to detect the presence or absence of a Cisco digital media player.
CISCO_IPVSC_AUTO_SMARTPORT	This macro applies the IP camera macro for Cisco IP video surveillance cameras. It enables QoS trust, auto-QoS, port security, and spanning-tree protection. It configures the access VLAN for the interface and provides network protection from unknown unicast packets.
CISCO_LWAP_AUTO_SMARTPORT	This macro applies the lightweight wireless access point macro for Cisco lightweight wireless access points. It enables QoS, port security, storm control, DHCP snooping, and spanning-tree protection. It configures the access VLAN for the interface and provides network protection from unknown unicast packets.
CISCO_PHONE_AUTO_SMARTPORT	This macro applies the IP phone macro for Cisco IP phones. It enables QoS, port security, storm control, DHCP snooping, and spanning-tree protection. It also configures the access and voice VLANs for that interface.

Table 2-1 Device-Specific Built-In Macros (continued)

Macro Name	Description
CISCO_ROUTER_AUTO_SMARTPORT	This macro applies the router macro for Cisco routers. It enables QoS and trunking with 802.1Q encapsulation and spanning-tree bridge protocol data unit (BPDU) protection.
CISCO_SWITCH_AUTO_SMARTPORT	This macro applies the switch macro for Cisco switches. It enables QoS and trunking with 802.1q encapsulation. It also configures the native VLAN on the interface.

Use these macros when the switch does not use device-specific macros.

Table 2-2 Global and Custom Macros

Macro Name	Description
CISCO_CUSTOM_AUTO_SMARTPORT	This macro applies the per-port user-defined settings after the antimacro ¹ is applied on a switch port. You specify the settings in the macro.
CISCO_LAST_RESORT_AUTO_SMARTPORT	This macro applies a per-port device-specific macro when the switch does not have built-in macro for the device. It has a basic configuration with a data VLAN.
CISCO_SWITCH_AAA_ACCOUNTING	This macro applies the authentication, authorization, and accounting (AAA) accounting settings.
CISCO_SWITCH_AAA_AUTHENTICATION	This macro applies the authentication, authorization, and accounting (AAA) authentication settings.
CISCO_SWITCH_AAA_AUTHORIZATION	This macro applies the authentication, authorization, and accounting (AAA) authorization settings.
CISCO_SWITCH_AUTO_IP_CONFIG	This macro applies the IP settings
CISCO_SWITCH_AUTO_PCI_CONFIG	This macro applies Payment Card Industry (PCI)-compliant settings.
CISCO_SWITCH_DOMAIN_NAME_CONFIG	This macro applies the domain name.
CISCO_SWITCH_ETHERCHANNEL_CONFIG	This macro applies the EtherChannel settings.
CISCO_SWITCH_HOSTNAME_CONFIG	This macro applies the hostname.
CISCO_SWITCH_HTTP_SERVER_CONFIG	This macro applies the HTTP server settings.
CISCO_SWITCH_LOGGING_SERVER_CONFIG	This macro applies the logging server settings.
CISCO_SWITCH_MGMT_VLAN_CONFIG	This macro applies the management VLAN settings.
CISCO_SWITCH_NAME_SERVER_CONFIG	This macro applies the name server settings.
CISCO_SWITCH_NTP_SERVER_CONFIG	This macro applies the Network Time Protocol (NTP) server settings. Note If the Virtual Private Network (VPN) routing/forwarding instance (VRF) name is not configured, the ntp server global configuration command is not applied.

Table 2-2 Global and Custom Macros (continued)

Macro Name	Description
CISCO_SWITCH_RADIUS_SERVER_CONFIG	This macro applies the RADIUS server settings.
CISCO_SWITCH_SETUP_SNMP_TRAPS	This macro applies the Simple Network Management Protocol (SNMP) trap settings.
CISCO_SWITCH_SETUP_USR_CONFIG	This macro applies user settings.
CISCO_SWITCH_SNMP_SOURCE_CONFIG	This macro applies the SNMP source interface settings.
CISCO_SWITCH_TACACS_SERVER_CONFIG	This macro applies the TACACS server settings.
CISCO_SWITCH_USER_PASS_CONFIG	This macro applies the username and password settings.

1. The antimacro is the portion of the applied macro that removes the macro at a link-down event.

In Cisco IOS Release 12.2(55)SE and later

- The switch applies the CISCO_PHONE_AUTO_SMARTPORT macro to Cisco IP phones.
- The access point macros have these enhancements:
 - The switch determines the access point type (autonomous or lightweight) and then applies the appropriate macro.
 - To reduce overrun errors at the ingress interface on an access point Ethernet receiver, the switch adds the QoS bandwidth setting to the access point macros when it receives a CDP message with the auto-QoS type, length, and value attributes (TLVs). QoS derives the bandwidth value from the auto-QoS TLVs.

If the CDP messages does not have the auto-QoS TLVs, the switch does not add the bandwidth setting to the macros.



Note

If you do not upgrade the access point image to one that has the auto-QoS TLVs, the switch does not add the bandwidth setting to the access point macros. When you configure the bandwidth before the link to the receiver goes down, the setting is removed when the link comes up.

If you add a macro command that sets the QoS bandwidth and the switch applies the macro to an access point that does not support the auto-QoS TLVs, the command is not applied to the access point. We recommend that you create a user-defined macro without that command.

- When a Catalyst 3750-E and 3560-E switch is connected to a Cisco Aironet 1250 access point, the switch applies a power setting to allocate up to 20 W.

When a switch running Cisco IOS Release 12.2(58)SE applies the CISCO_DMP_AUTO_SMARTPORT macro to a CDP-capable digital media player, it generates an auto-QoS configuration for the digital media player.

In Cisco IOS Release 15.0(1)SE and later, the access point macros support the Control and Provisioning of Wireless Access Points (CAPWAP) protocol.

Configuring Auto Smartports Parameter Values

The switch automatically maps from event triggers to built-in device-specific macros. You can follow this optional procedure to replace macro default parameter values with values that are specific to your switch.

Beginning in privileged EXEC mode:

	Command	Purpose
Step 1	show macro auto device Example: Switch# show macro auto device	Displays the macro default parameter values.
Step 2	configure terminal Example: Switch# configure terminal	Enters global configuration mode.
Step 3	macro auto device {access-point ip-camera lightweight-ap media-player phone router switch} [parameter=value] Example: Switch(config)# macro auto device router	Replaces the specified macro default parameter values. Enter new values in the form of a name-value pair separated by spaces: [<name1>=<value1> <name2>=<value2>...]. You can enter the VLAN ID or the VLAN name when specifying VLAN parameter values. Default values are shown for each macro default parameter value. <ul style="list-style-type: none"> • access-point <i>NATIVE_VLAN=1</i> • ip-camera <i>ACCESS_VLAN=1</i> • lightweight-ap <i>ACCESS_VLAN=1</i> • media-player <i>ACCESS_VLAN=1</i> • phone <i>ACCESS_VLAN=1 VOICE_VLAN=2</i> • router <i>NATIVE_VLAN=1</i> • switch <i>NATIVE_VLAN=1</i> Note You must enter the correct parameter name (for example, VOICE_VLAN) because this text string must match the text string in the built-in macro definition.
Step 4	end Example: Switch(config)# end	Returns to privileged EXEC mode.

	Command	Purpose
Step 5	show macro auto device Example: Switch# show macro auto device	Verifies your entries.
Step 6	copy running-config startup-config Example: Switch# copy running-config startup-config	(Optional) Saves your entries in the configuration file.

This example shows how to see the IP phone macro parameter values and how to change the default voice VLAN to 20. When you change the default values, they are not immediately applied on the interfaces with existing applied macros. The configured values are applied at the next link-up event. Note that the exact text string was used for VOICE_VLAN. The entry is case sensitive.

```
Switch# show macro auto device phone
Device:phone
Default Macro:CISCO_PHONE_AUTO_SMARTPORT
Current Macro:CISCO_PHONE_AUTO_SMARTPORT
Configurable Parameters:ACCESS_VLAN VOICE_VLAN
Defaults Parameters:ACCESS_VLAN=1 VOICE_VLAN=2
Current Parameters:ACCESS_VLAN=1 VOICE_VLAN=2

Switch# configure terminal
Enter configuration commands, one per line. End with CNTL/Z.
Switch(config)# macro auto device phone VOICE_VLAN=20
Switch(config)# end
Switch# show macro auto device phone
Device:phone
Default Macro:CISCO_PHONE_AUTO_SMARTPORT
Current Macro:CISCO_PHONE_AUTO_SMARTPORT
Configurable Parameters:ACCESS_VLAN VOICE_VLAN
Defaults Parameters:ACCESS_VLAN=1 VOICE_VLAN=2
Current Parameters:voice_vlan=20
```

Configuring MAC Address Groups

For devices such as printers that do not support neighbor discovery protocols such as CDP or LLDP, use the MAC-address-based trigger configurations. This optional procedure requires these steps:

1. Configure a MAC-address-based trigger by using the **macro auto mac-address** global configuration command.
2. Associate the MAC address trigger to a built-in or a user-defined macro by using the **macro auto execute** global configuration command.



Note

A switch running Cisco IOS Release 12.2(58)SE or later applies the macro as soon as it learns a MAC address in the MAC address group.

A switch running a release earlier than Cisco IOS Release 12.2(58)SE applies the macro after it learns a MAC address in the MAC address group and waits 60 seconds.

Beginning in privileged EXEC mode:

	Command	Purpose
Step 1	configure terminal Example: Switch# configure terminal	Enters global configuration mode.
Step 2	macro auto mac-address-group name Example: Switch(config)# macro auto mac-address-group address_trigger	Specifies the group name, and enter MAC address configuration mode.
Step 3	[mac-address list list] [oui [list list range start-value size number]] Example: Switch(config-addr-grp-mac)# mac-address list 2222.3333.3334 22.33.44 a.b.c	Configures a list of MAC addresses separated by spaces. Specify an operationally unique identifier (OUI) list or range . The OUI is the first three bytes of the MAC address and identifies the manufacturer of the product. Specifying the OUI allows devices that do not support neighbor discovery protocols to be recognized. <ul style="list-style-type: none"> • list—Enter an OUI list in hexadecimal format separated by spaces. • range—Enter the starting OUI hexadecimal value (<i>start-value</i>). • size—Enter the length of the range (<i>number</i>) from 1 to 5 to create a list of sequential addresses.
Step 4	exit Example: Switch(mac-adress-config) exit	Returns to configuration mode.
Step 5	macro auto execute address_trigger built-in macro name Example: Switch(config)# macro auto execute address_trigger builtin CISCO_PHONE_AUTO_SMARTPORT	Maps the MAC address-group trigger to a built-in or user-defined macro. The MAC address trigger is applied to an interface after 65 seconds. The switch uses this hold time to apply a CDP- or LLDP-based event trigger instead of the MAC address trigger.
Step 6	end Example: Switch(config)# end	Returns to privileged EXEC mode.

	Command	Purpose
Step 7	show macro auto address-group <i>name</i> Example: Switch# show macro auto address-group group2	Verifies your entries.
Step 8	copy running-config startup-config Example: Switch# copy running-config startup-config	(Optional) Saves your entries in the configuration file.

This example shows how to create a MAC-address-group event trigger called *address_trigger*, map it to the built in phone macro, and verify your entries:

```
Switch# configure terminal
Enter configuration commands, one per line. End with CNTL/Z.
Switch(config)# macro auto mac-address-group address_trigger
Switch(config-addr-grp-mac)# mac-address list 2222.3333.3334 22.33.44 a.b.c
Switch(config-addr-grp-mac)# oui list 455555 233244
Switch(config-addr-grp-mac)# oui range 333333 size 2
Switch(config-addr-grp-mac)# exit
Switch(config)# macro auto execute address_trigger builtin CISCO_PHONE_AUTO_SMARTPORT
Switch(config)# end
Switch# show running configuration | include macro
macro auto mac-address-group address_trigger
mac auto mac-address-group hel
mac auto execute address_trigger builtin CISCO_PHONE_AUTO_SMARTPORT
macro description CISCO_DMP_EVENT
mac description CISCO_SWITCH_EVENT
!
<output truncated>
```

The example shows how to create an OUI list with five sequential addresses starting with 00000A and how to verify your entries:

```
Switch# configure terminal
Enter configuration commands, one per line. End with CNTL/Z.
Switch(config)# macro auto mac-address-group size5ouilist
Switch(config-addr-grp-mac)# oui range 00000A size 5
Switch(config-addr-grp-mac)# exit
Switch(config)# mac auto execute size5-ouilist builtin macro
Switch(config)# macro auto execute address_trigger builtin CISCO_PHONE_AUTO_SMARTPORT
Switch(config)# end
Switch# show running configuration | include oui
oui list 00000E
oui list 00000D
oui list 00000C
oui list 00000B
oui list 00000A
```

Configuring Macro Persistence

When you enable Auto Smartports on the switch, by default the macro configuration is applied at a link-up event and removed at a link-down event. When you enable macro persistence, the configuration is applied at link-up and is not removed at link-down. The applied configuration remains. Macro persistence remains configured after a reboot if you have saved the running configuration file.

Follow this optional procedure so that enable macros remain active on the switch after a link-down event.

Beginning in privileged EXEC mode:

	Command	Purpose
Step 1	configure terminal Example: Switch# <code>configure terminal</code>	Enters global configuration mode.
Step 2	interface <i>interface-id</i> Example: Switch(config)# <code>interface gigabitethernet 2/0/1</code>	Specifies an interface and enters interface configuration mode.
Step 3	macro auto sticky Example: Switch(config-if)# <code>macro auto port sticky</code>	Enables macros to remain active on the interface after a link-down event.
Step 4	end Example: Switch(config)# <code>end</code>	Returns to privileged EXEC mode.
Step 5	show running-config interface <i>interface-id</i> Example: Switch# <code>show running-config interface gigabit ethernet 2/0/1</code>	Verifies your entries.
Step 6	copy running-config startup-config Example: Switch# <code>copy running-config startup-config</code>	(Optional) Saves your entries in the configuration file.

This example shows how to enable macro persistence on an interface:

```
Switch# configure terminal
Enter configuration commands, one per line. End with CNTL/Z.
Switch(config)# interface gigabitethernet 2/0/1
Switch(config-if)# macro auto port sticky
Switch(config-if)# exit
Switch(config)# end
```

```
Switch# show running-config interface gigabitethernet 2/0/1
Building configuration...

Current configuration : 243 bytes
!
<output truncated>
!
interface GigabitEthernet2/0/1
 srr-queue bandwidth share 1 30 35 5
 queue-set 2
 priority-queue out
 mls qos trust device cisco-phone
 mls qos trust cos
 macro auto port sticky
  service-policy input AUTOQOS-ENHANCED-CISCOPHONE-POLICY
end

<output truncated>

Switch#
```

Configuring Built-In Macro Options

Use this procedure to map event triggers to built-in macros and to replace the built-in macro default parameters with values that are specific to your switch. If you need to *replace* default parameters values in a macro, use the **macro auto device** global configuration command. All commands in this procedure are optional.

Beginning in privileged EXEC mode:

	Command	Purpose
Step 1	configure terminal	Enters global configuration mode.
	Example: Switch# configure terminal	
Step 2	macro auto execute event trigger builtin built-in macro name [parameter=value] [parameter=value]	<p>Defines mapping from an event trigger to a built-in macro.</p> <p>Specify an <i>event trigger</i>:</p> <ul style="list-style-type: none"> • CISCO_CUSTOM_EVENT • CISCO_DMP_EVENT • CISCO_IPVSC_EVENT • CISCO_LAST_RESORT_EVENT • CISCO_PHONE_EVENT • CISCO_ROUTER_EVENT • CISCO_SWITCH_EVENT • CISCO_WIRELESS_AP_EVENT • CISCO_WIRELESS_LIGHTWEIGHT_AP_EVENT • WORD—Apply a user-defined event trigger. <p>Specify a builtin <i>built-in macro name</i>:</p> <p>Enter new values in the form of <i>name value pair</i> separated by spaces: [<i><name1>=<value1> <name2>=<value2>...</i>]. Default values are shown exactly as they should be entered.</p> <ul style="list-style-type: none"> • CISCO_AP_AUTO_SMARTPORT Specify the parameter value: <i>NATIVE_VLAN=1</i>. • CISCO_DMP_AUTO_SMARTPORT Specify the parameter value: <i>ACCESS_VLAN=1</i>. • CISCO_IPVSC_AUTO_SMARTPORT Specify the parameter value: <i>ACCESS_VLAN=1</i>. • CISCO_LWAP_AUTO_SMARTPORT Specify the parameter value: <i>ACCESS_VLAN=1</i>. • CISCO_PHONE_AUTO_SMARTPORT Specify the parameter values: <i>ACCESS_VLAN=1</i> and <i>VOICE_VLAN=2</i>. • CISCO_ROUTER_AUTO_SMARTPORT Specify the parameter value: <i>NATIVE_VLAN=1</i>. • CISCO_SWITCH_AUTO_SMARTPORT Specify the parameter value: <i>NATIVE_VLAN=1</i>.
	Example: Switch(config)# macro auto execute CISCO_PHONE_EVENT builtin CISCO_PHONE_AUTO_SMARTPORT ACCESS_VLAN=10 VOICE_VLAN=20	

	Command	Purpose
Step 3	remote url Example: Switch(config)# remote nvram://user:password@/C/macros	Specifies a remote server location for the remote macro file: <ul style="list-style-type: none"> The syntax for the local flash file system on the standalone switch or the stack master: flash: The syntax for the local flash file system on a stack member: flash member number: The syntax for the FTP: ftp:[[/username[:password]@location]/directory]/filename The syntax for an HTTP server: http://[[username:password]@]{hostname host-ip}/[directory]/filename The syntax for a secure HTTP server: https://[[username:password]@]{hostname host-ip}/[directory]/filename The syntax for NVRAM: nvram://[[username:password]@]/[directory]/filename The syntax for the Remote Copy Protocol (RCP): rcp:[[/username@location]/directory]/filename The syntax for the Secure Copy Protocol (SCP): scp:[[/username@location]/directory]/filename The syntax for the TFTP: tftp:[[/location]/directory]/filename
Step 4	end Example: Switch(config)# end	Returns to privileged EXEC mode.
Step 5	show running-config Example: Switch# show running-config	Verifies that Auto Smartports is enabled.
Step 6	copy running-config startup-config Example: Switch# copy running-config startup-config	(Optional) Saves your entries in the configuration file.

This example shows how to use two built-in macros to connect Cisco switches and Cisco IP phones to the switch. This example modifies the default voice VLAN, access VLAN, and native VLAN for the trunk interface:

```
Switch# configure terminal
Enter configuration commands, one per line. End with CNTL/Z.
Switch(config)#!!! the next command modifies the access and voice vlans
Switch(config)#!!! for the built in Cisco IP phone auto smartport macro
Switch(config)# macro auto execute CISCO_PHONE_EVENT builtin CISCO_PHONE_AUTO_SMARTPORT
ACCESS_VLAN=10 VOICE_VLAN=20
Switch(config)#
Switch(config)#!!! the next command modifies the Native vlan used for inter switch trunks
```

```

Switch(config)# macro auto execute CISCO_SWITCH_EVENT builtin CISCO_SWITCH_AUTO_SMARTPORT
NATIVE_VLAN=10
Switch(config)#
Switch(config)#! the next command enables auto smart ports globally
Switch(config)# macro auto global processing
Switch(config)#
Switch(config)# exit

Switch# !!! here is the running configuration of the interface connected
Switch# !!! to another Cisco Switch after the Macro is applied
Switch#
Switch# show running-config interface gigabitethernet1/0/1
Building configuration...

Current configuration : 284 bytes
!
interface GigabitEthernet1/0/1
switchport trunk encapsulation dot1q
switchport trunk native vlan 10
switchport mode trunk
srr-queue bandwidth share 10 10 60 20
queue-set 2
priority-queue out
mls qos trust cos
auto qos voip trust
macro description CISCO_SWITCH_EVENT
end

```

This example shows how to configure the remote macro for native VLAN 5.

- a. Configure the remote macro in the macro.txt file.
- b. Use the **macro auto execute** configuration command to specify the remote location for the macro file.

Macro.txt file

```

if [[ $LINKUP -eq YES ]]; then
  conf t
    interface $INTERFACE
      macro description $TRIGGER
      auto qos voip trust
      switchport trunk encapsulation dot1q
      switchport trunk native vlan $NATIVE_VLAN
      switchport trunk allowed vlan ALL
      switchport mode trunk
    exit
  end
else
  conf t
    interface $INTERFACE
      no macro description
      no auto qos voip trust
      no switchport mode trunk
      no switchport trunk encapsulation dot1q
      no switchport trunk native vlan $NATIVE_VLAN
      no switchport trunk allowed vlan ALL
    exit
  end

Switch(config)# macro auto execute CISCO_SWITCH_EVENT remote tftp://<ip_address>/macro.txt
NATIVE_VLAN=5

Switch# show running configuration | include macro
macro auto execute CISCO_SWITCH_EVENT remote tftp://<ip_address>/macro.txt

```

```
NATIVE_VLAN=5
Switch#
```

Creating User-Defined Event Triggers

When using MAB or 802.1x authentication as an event trigger, create a trigger that corresponds to the Cisco attribute-value pair (*auto-smart-port=event trigger*) sent by the RADIUS server. This procedure is optional.

Beginning in privileged EXEC mode:

	Command	Purpose
Step 1	configure terminal Example: Switch# configure terminal	Enters global configuration mode.
Step 2	shell trigger <i>identifier description</i> Example: Switch(config)# shell trigger RADIUS_MAB_EVENT MAC_AuthBypass Event	Specifies the event trigger identifier and description. The identifier should have no spaces or hyphens between words.
Step 3	end Example: Switch(config)# end	Returns to privileged EXEC mode.
Step 4	show shell triggers Example: Switch# show shell triggers	Displays the event triggers on the switch.
Step 5	copy running-config startup-config Example: Switch# copy running-config startup-config	(Optional) Saves your entries in the configuration file.

This example shows how to map a user-defined event trigger called RADIUS_MAB_EVENT to the built-in macro CISCO_AP_AUTO_SMARTPORT, to replace the default VLAN with VLAN 10, and how to verify the entries.

- a. Connect the device to a MAB-enabled switch port.
- b. On the RADIUS server, set the attribute-value pair to **auto-smart-port=RADIUS_MAB_EVENT**.
- c. On the switch, create the event trigger RADIUS_MAB_EVENT.
- d. The switch recognizes the attribute-value pair=RADIUS_MAB_EVENT response from the RADIUS server and applies the macro CISCO_AP_AUTO_SMARTPORT.

```
Switch# configure terminal
Enter configuration commands, one per line. End with CNTL/Z.
```

```

Switch(config)# !!! create a user defined trigger and map
Switch(config)# !!! a system defined macro to it
Switch(config)# !!! first create the trigger event
Switch(config)# shell trigger RADIUS_MAB_EVENT MAC_AuthBypass Event
Switch(config)#
Switch(config)#!!! map a system defined macro to the trigger event
Switch(config)# macro auto execute RADIUS_MAB_EVENT builtin ?
    CISCO_AP_AUTO_SMARTPORT          Configure native vlan and trust cos
    CISCO_CUSTOM_AUTOSMARTPORT       Configure user defined parameters
    CISCO_DMP_AUTO_SMARTPORT         Configure access vlan, qos and port-security
    CISCO_IP_CAMERA_AUTO_SMARTPORT   Configure access vlan, qos and port-security
    CISCO_LAST_RESORT_SMARTPORT      Configure access vlan
    CISCO_LWAP_AUTO_SMARTPORT        Configure native vlan, qos, port-security and
                                      storm-control
    CISCO_PHONE_AUTO_SMARTPORT       Configure access vlan, voice vlan, trust
                                      device, interface bandwidth, port-security
    CISCO_ROUTER_AUTO_SMARTPORT      Configure native vlan, spanning tree
                                      port-fast,trunk mode and trust dscp
    CISCO_SWITCH_AUTO_SMARTPORT      Configure native vlan, trunk mode
Switch(config)# macro auto execute RADIUS_MAB_EVENT builtin CISCO_AP_AUTO_SMARTPORT
ACCESS_VLAN=10
Switch(config)# exit
Switch# show shell triggers
User defined triggers
-----
Trigger Id: RADIUS_MAB_EVENT
Trigger description: MAC_AuthBypass Event
Trigger environment:
Trigger mapping function: CISCO_AP_SMARTPORT
<output truncated>

```

This example shows how to use the **show shell triggers** privileged EXEC command to view the event triggers in the switch software:

```

Switch# show shell triggers
User defined triggers
-----
Built-in triggers
-----
Trigger Id: CISCO_AUTO_CONSOLE_EVENT
Trigger namespace: ASP_TRIG_GLOBAL_FUTURE
Trigger description: Console password
Trigger mapping function:
Parameters:
Current version: 1
Negotiated version: 1
Mapped Function: CISCO_AUTO_CONSOLE_PASSWD

Trigger Id: CISCO_AUTO_TIMEZONE_CONFIG
Trigger namespace: ASP_TRIG_GLOBAL_USR
Trigger description: timezone parameters
Trigger mapping function:
Parameters:
Current version: 1
Negotiated version: 1
Mapped Function: CISCO_AUTO_TIMEZONE

Trigger Id: CISCO_CUSTOM_EVENT
Trigger namespace: ASP_TRIG
Trigger description: Custom macro event to apply user defined configuration
Trigger mapping function:
Parameters:
Current version: 1
Negotiated version: 1

```

```

Mapped Function: CISCO_CUSTOM_AUTOSMARTPORT

Trigger Id: CISCO_DMP_EVENT
Trigger namespace: ASP_TRIG
Trigger description: Digital media-player device event to apply port configurati
on
Trigger mapping function:
Parameters: ACCESS_VLAN=1
Current version: 1
Negotiated version: 1
Mapped Function: CISCO_DMP_AUTO_SMARTPORT

Trigger Id: CISCO_IPVSC_EVENT
Trigger namespace: ASP_TRIG
Trigger description: IP-camera device event to apply port configuration
Trigger mapping function:
Parameters: ACCESS_VLAN=1
Current version: 1
Negotiated version: 1
Mapped Function: CISCO_IP_CAMERA_AUTO_SMARTPORT

Trigger Id: CISCO_LAST_RESORT_EVENT
Trigger namespace: ASP_TRIG
Trigger description: Last resort event to apply port configuration
Trigger mapping function:
Parameters: ACCESS_VLAN=1
Current version: 1
Negotiated version: 1
Mapped Function: CISCO_LAST_RESORT_SMARTPORT

Trigger Id: CISCO_PHONE_EVENT
Trigger namespace: ASP_TRIG
Trigger description: IP-phone device event to apply port configuration
Trigger mapping function:
Parameters: ACCESS_VLAN=1 VOICE_VLAN=2
Current version: 1
Negotiated version: 1
Mapped Function: CISCO_PHONE_AUTO_SMARTPORT

<output truncated>

```

This example shows how to use the **show shell functions** privileged EXEC command to view the built-in macros in the switch software:

```

Switch# show shell functions
#User defined functions:

#Built-in functions:
function CISCO_AP_AUTO_SMARTPORT () {
    if [[ $LINKUP -eq YES ]]; then
        conf t
            interface $INTERFACE
                macro description $TRIGGER
                switchport trunk encapsulation dot1q
                switchport trunk native vlan $NATIVE_VLAN
                switchport trunk allowed vlan ALL
                switchport mode trunk
                switchport nonegotiate
                auto qos voip trust
                mls qos trust cos
            if [[ $LIMIT -eq 0 ]]; then
                default srr-queue bandwidth limit
            else
                srr-queue bandwidth limit $LIMIT
            fi
        fi
    fi
}

```

```

        fi
        if [[ $SW_POE -eq YES ]]; then
            if [[ $AP125X -eq AP125X ]]; then
                macro description AP125X
                macro auto port sticky
                power inline port maximum 20000
            fi
        fi
    fi
    exit
end
fi
if [[ $LINKUP -eq NO ]]; then
    conf t
        interface $INTERFACE
            no macro description
            no switchport nonegotiate
            no switchport trunk native vlan $NATIVE_VLAN
            no switchport trunk allowed vlan ALL
            no auto qos voip trust
            no mls qos trust cos
            default srr-queue bandwidth limit
            if [[ $AUTH_ENABLED -eq NO ]]; then
                no switchport mode
                no switchport trunk encapsulation
            fi
            if [[ $STICKY -eq YES ]]; then
                if [[ $SW_POE -eq YES ]]; then
                    if [[ $AP125X -eq AP125X ]]; then
                        no macro auto port sticky
                        no power inline port maximum
                    fi
                fi
            fi
        fi
    fi
    exit
end
fi
}
<output truncated>

```

Configuring Event Trigger Control

Use event trigger control to specify when the switch applies macros. By default, the switch maps built-in and user-defined macros to these triggers:

- Detection method (for example, MAC address groups, MAB messages, 802.1x authentication messages, and LLDP messages)
- Device type (for example, Cisco switches, routers, and IP phones)
- Configured triggers

Beginning with Cisco IOS Release 15.0(1)SE, the **macro auto global control detection [cdp | lldp]** global and interface configuration commands are no longer supported. To configure a MAC address-based trigger, use the **macro auto global control device** global or interface configuration command.

When you select triggers, the switch applies macros only when those triggers map to macros.

On a Switch

Beginning in privileged EXEC mode:

	Command	Purpose
Step 1	configure terminal Example: Switch# configure terminal	Enters global configuration mode.
Step 2	macro auto global control { device [access-point] [ip-camera] [lightweight-ap] [mac-address] [media-player] [phone] [router] [switch] trigger [last-resort] } Example: Switch(config)# macro auto global control mac-address	Specifies when the switch applies a macro based on the detection method, device type, or trigger. <ul style="list-style-type: none"> • device—Uses one or more of these devices as an event trigger: <ul style="list-style-type: none"> – (Optional) access-point—Autonomous access point – (Optional) ip-camera—Cisco IP video surveillance camera – (Optional) lightweight-ap—Lightweight access point – (Optional) mac-address—Device MAC address – (Optional) media-player—Digital media player – (Optional) phone—Cisco IP phone – (Optional) router—Cisco router – (Optional) switch—Cisco switch • trigger—Uses a specific event trigger. <ul style="list-style-type: none"> – (Optional) last-resort—Last-resort trigger. <p>By default, the switch uses the device type as the event trigger. If the switch cannot determine the device type, it uses MAC address groups, MAB messages, 802.1x authentication messages, and LLDP messages in random order.</p>
Step 3	end Example: Switch(config)# end	Returns to privileged EXEC mode.
Step 4	show running-config Example: Switch# show running-config	Verifies that Auto Smartports is enabled.
Step 5	copy running-config startup-config Example: Switch# copy running-config startup-config	(Optional) Saves your entries in the configuration file.

To configure the switch to apply the CISCO_AP_AUTO_SMARTPORT macro only when it detects an autonomous access point:

```
Switch# configure terminal
```



```
Enter configuration commands, one per line. End with CNTL/Z.
Switch(config)# macro auto global control device access-point
Switch(config)# end
```

To configure the switch to apply the CISCO_AP_AUTO_SMARTPORT macro only when it detects an autonomous access point or a Cisco IP phone:

```
Switch# configure terminal
Enter configuration commands, one per line. End with CNTL/Z.
Switch(config)# macro auto global control device access-point phone
Switch(config)# end
```

On an Interface

Beginning in privileged EXEC mode:

	Command	Purpose
Step 1	configure terminal Example: Switch# configure terminal	Enters global configuration mode.
Step 2	interface <i>interface_id</i> Example: Switch(config)# interface gigabitethernet 2/0/2	Specifies an interface and enters interface configuration mode.
Step 3	macro auto control { device [access-point] [ip-camera] [lightweight-ap] [mac-address] [media-player] [phone] [router] [switch] trigger [last-resort] } Example: Switch(config)# macro auto global control mac-address	Specifies when the switch applies a macro based on the detection method, device type, or trigger. <ul style="list-style-type: none"> • device—Use one or more of these devices as an event trigger: <ul style="list-style-type: none"> – (Optional) access-point—Autonomous access point – (Optional) ip-camera—Cisco IP video surveillance camera – (Optional) lightweight-ap—Lightweight access point – (Optional) mac-address—Device MAC address – (Optional) media-player—Digital media player – (Optional) phone—Cisco IP phone – (Optional) router—Cisco router – (Optional) switch—Cisco switch • trigger—Use a specific event trigger. <ul style="list-style-type: none"> – (Optional) last-resort—Last-resort trigger. <p>By default, the switch uses the device type as the event trigger. If the switch cannot determine the device type, it uses MAC address groups, MAB messages, 802.1x authentication messages, and LLDP messages in random order.</p>

	Command	Purpose
Step 4	exit Example: Switch(config-if)# exit	Returns to global configuration mode.
Step 5	end Example: Switch(config)# end	Returns to privileged EXEC mode.
Step 6	show macro auto Example: Switch# show macro auto	Verifies your entries.
Step 7	copy running-config startup-config Example: Switch# copy running-config startup-config	(Optional) Saves your entries in the configuration file.

To configure the switch to apply the CISCO_AP_AUTO_SMARTPORT or CISCO_PHONE_AUTO_SMARTPORT macro only when it detects a lightweight access point or a Cisco IP phone:

```
Switch# configure terminal
Enter configuration commands, one per line. End with CNTL/Z.
Switch(config)# interface gigabitethernet 5/0/1
Switch(config-if)# macro auto control device lightweight-ap phone
Switch(config-if)# exit
Switch(config)# end
```

Configuring User-Defined Triggers for User-Defined Macros

Beginning with Cisco IOS Release 15.0(1)SE, you can configure user-defined trigger groups for profiles and devices. The name of the trigger group is used to associate a user-defined macro.

Beginning in privileged EXEC mode, follow these steps to configure a user-defined event trigger for a user-defined macro.

	Command	Purpose
Step 1	configure terminal Example: Switch# configure terminal	Enters global configuration mode.
Step 2	macro auto trigger <i>trigger_name</i> [device exit no profile] Example: Switch(config)# macro auto trigger DMP Switch(config-macro-trigger)# profile mediaplayer-DMP	Enters macro trigger configuration mode. In that mode, you can specify a user-defined event trigger that maps to a user-defined macro. <ul style="list-style-type: none"> • device—Specifies a device name to map to the named trigger. • exit—Exits device group configuration mode. • no—Removes any configured device. • profile—Specifies a profile name to map to the named trigger.
Step 3	end Example: Switch(config)# end	Returns to privileged EXEC mode.
Step 4	show running-config Example: Switch# show running-config	Verifies that Auto Smartports is enabled.
Step 5	copy running-config startup-config Example: Switch# copy running-config startup-config	(Optional) Saves your entries in the configuration file.

Example: User-Defined Event Trigger

This example shows how to configure a user-defined event trigger called DMP_EVENT:

```
Switch(config)# macro auto trigger DMP_EVENT mediaplayer
```

Configuring User-Defined Macros

The Cisco IOS shell has basic scripting capabilities for configuring user-defined macros. These macros can contain multiple lines and can include any CLI command. You can also define variable-substitution, conditionals, functions, and triggers within the macro. This procedure is optional.



Note

When configuring macros, you must enter a description. If the link is down (command **\$LINKUP -eq NO**), you must enter the **no macro description** command. These commands are mandatory for Auto Smartports to work.

Beginning in privileged EXEC mode, follow these steps to map a user-defined event trigger to a user-defined macro.

	Command	Purpose
Step 1	<p>configure terminal</p> <p>Example: Switch# configure terminal</p>	Enters global configuration mode.
Step 2	<p>macro auto execute event trigger [<i>parameter=value</i>] {<i>function contents</i>}</p> <p>Example: Switch(config)# macro auto execute DMP_EVENT { if [[\$LINKUP -eq YES]]; then conf t interface \$INTERFACE macro description \$TRIGGER switchport access vlan 1 switchport mode access switchport port-security switchport port-security maximum 1 switchport port-security violation restrict switchport port-security aging time 2 switchport port-security aging type inactivity spanning-tree portfast spanning-tree bpduguard enable exit fi if [[\$LINKUP -eq NO]]; then conf t interface \$INTERFACE no macro description no switchport access vlan 1 if [[\$AUTH_ENABLED -eq NO]]; then no switchport mode access fi no switchport port-security no switchport port-security maximum 1 no switchport port-security violation restrict no switchport port-security aging time 2 no switchport port-security aging type inactivity no spanning-tree portfast no spanning-tree bpduguard enable exit fi }</p>	<p>Specifies a user-defined macro that maps to an event trigger.</p> <p>{<i>function contents</i>} Specify a user-defined macro to associate with the trigger. Enter the macro contents within braces. Begin the Cisco IOS shell commands with the left brace and end the command grouping with the right brace.</p> <p>(Optional) <i>parameter=value</i>—Replace default values that begin with \$, and enter new values in the form of name value pair separated by spaces: [<i><name1>=<value1> <name2>=<value2>...</i>].</p>

	Command	Purpose
Step 3	end Example: Switch(config)# end	Returns to privileged EXEC mode.
Step 4	show running-config Example: Switch# show running-config	Verifies that Auto Smartports is enabled.
Step 5	copy running-config startup-config Example: Switch# copy running-config startup-config	(Optional) Saves your entries in the configuration file.

Example: User-Defined Event Trigger and Macro

This example shows how to map a user-defined event trigger called media player to a user-defined macro.

1. Connect the media player to an 802.1x- or MAB-enabled switch port.
2. On the RADIUS server, set the attribute-value pair to **auto-smart-port =DMP_EVENT**.
3. On the switch, create the event trigger DMP_EVENT, and enter the user-defined macro commands in the CLI example.
4. The switch recognizes the attribute-value pair=DMP_EVENT response from the RADIUS server and applies the macro associated with this event trigger.

```
Switch(config)# shell trigger DMP_EVENT mediaplayer
Switch(config)# macro auto execute DMP_EVENT {
if [[ $LINKUP -eq YES ]]; then
conf t
interface $INTERFACE
macro description $TRIGGER
switchport access vlan 1
switchport mode access
switchport port-security
switchport port-security maximum 1
switchport port-security violation restrict
switchport port-security aging time 2
switchport port-security aging type inactivity
spanning-tree portfast
spanning-tree bpduguard enable
exit
fi
if [[ $LINKUP -eq NO ]]; then
conf t
interface $INTERFACE
no macro description
no switchport access vlan 1
if [[ $AUTH_ENABLED -eq NO ]]; then
no switchport mode access
fi
no switchport port-security
no switchport port-security maximum 1
```

```

no switchport port-security violation restrict
no switchport port-security aging time 2
no switchport port-security aging type inactivity
no spanning-tree portfast
no spanning-tree bpdguard enable
exit
fi
}
Switch(config)# end

```

Example: Last-Resort Event Trigger and Macro

The last-resort event trigger is applied when a device is classified by Device Classifier using CDP, LLDP or DHCP, but has no built-in macro.

To map the CISCO_LAST_RESORT_AUTO_SMARTPORT macro to the last-resort trigger:

```
Switch(config)# macro auto global control trigger last-resort
```

CISCO_LAST_RESORT_AUTO_SMARTPORT macro:

```

function CISCO_LAST_RESORT_SMARTPORT () {
  if [[ $LINKUP -eq YES ]]; then
    conf t
      interface $INTERFACE
        macro description $TRIGGER
        switchport access vlan $ACCESS_VLAN
        switchport mode access
        load-interval 60
        no shutdown
      exit
    end
  fi
  if [[ $LINKUP -eq NO ]]; then
    conf t
      interface $INTERFACE
        no macro description
        no switchport access vlan $ACCESS_VLAN
        no switchport mode access
        no load-interval 60
      exit
    end
  fi
}

```

Example of user-defined mapping of a MAC address trigger to map a last-resort macro:

```

Switch(config)#macro auto mac
Switch(config)#macro auto mac-address-group Laptop
Switch(config-addr-grp-mac)#mac-address list 0000.0011.2233
Switch(config-addr-grp-mac)#exit
Switch(config)#macro auto execute laptop builtin CISCO_LAST_RESORT_SMARTPORT
ACCESS_VLAN=10
Switch(config)#end
Switch#

```

Example: Custom Event Trigger and CISCO_CUSTOM_AUTO_SMARTPORT Macro

Default CISCO_CUSTOM_AUTO_SMARTPORT macro:

```

if [[ $LINKUP -eq YES ]]; then
  conf t

```

```

        interface $INTERFACE
        exit
    end
fi
if [[ $LINKUP -eq NO ]]; then
    conf t
        interface $INTERFACE
        exit
    end
fi

```

To create a user-defined macro with the same name as the custom macro, override the CISCO_CUSTOM_AUTO_SMARTPORT macro, and set the parameters for your switch, including the mapping from an event trigger to the macro.

```

Config# macro auto execute CISCO_CUSTOM_EVENT {
    if [[ $LINKUP -eq YES ]]; then
        conf t
            interface $INTERFACE
            description asp3-link-UP i.e. Custom Macro OFF
            no macro description
            switchport
            switchport mode access
            switchport access vlan $ACCESS_VLAN
            spanning-tree portfast
            exit
        end
    fi
    if [[ $LINKUP -eq NO ]]; then
        conf t
            interface $INTERFACE
            macro description $TRIGGER
            switchport access vlan $ACCESS_VLAN
            description asp3-link-DOWN i.e. Custom Macro ON
            exit
        end
    fi
}

```

Table 2-3 Supported Cisco IOS Shell Keywords

Command	Description
{	Begin the command grouping.
}	End the command grouping.
[[Use as a conditional construct.
]]	Use as a conditional construct.
else	Use as a conditional construct.
-eq	Use as a conditional construct.
fi	Use as a conditional construct.
if	Use as a conditional construct.
then	Use as a conditional construct.
-z	Use as a conditional construct.

Table 2-3 Supported Cisco IOS Shell Keywords (continued)

Command	Description
\$	Variables that begin with the \$ character are replaced with a parameter value.
#	Use the # character to enter comment text.

Table 2-4 Unsupported Cisco IOS Shell Reserved Keywords

Command	Description
	Pipeline.
case	Conditional construct.
esac	Conditional construct.
for	Looping construct.
function	Shell function.
in	Conditional construct.
select	Conditional construct.
time	Pipeline.
until	Looping construct.
while	Looping construct.

Applying Macros on a Switch

You can use the CLI or the Cisco IOS shell scripting capability to set the macro parameters and to apply the macro.

Using the CLI

Beginning in privileged EXEC mode:

	Command	Purpose
Step 1	macro auto config ?	(Optional) Displays the global macros.
	Example: Switch# macro auto config ?	

	Command	Purpose
Step 2	macro auto config <i>global macro</i> Example: Switch# macro auto config CISCO_SWITCH_HOSTNAME_CONFIG	Sets the macro parameters. Follow the prompts in the CLI.
Step 3	copy running-config startup-config Example: Switch# copy running-config startup-config	(Optional) Saves your entries in the configuration file.

Example: One Macro

To display the global macros:

```
Switch# macro auto apply ?
CISCO_SWITCH_AAA_ACCOUNTING          Configure aaa accounting parameters
CISCO_SWITCH_AAA_AUTHENTICATION      Configure aaa authentication parameters
CISCO_SWITCH_AAA_AUTHORIZATION       Configure aaa authorization parameters
CISCO_SWITCH_AUTO_IP_CONFIG          Configure the ip parameters
CISCO_SWITCH_AUTO_PCI_CONFIG         Configure PCI compliant parameters
CISCO_SWITCH_DOMAIN_NAME_CONFIG     Configure domain name
CISCO_SWITCH_ETHERCHANNEL_CONFIG     Configure the etherchannel parameters
CISCO_SWITCH_HOSTNAME_CONFIG        Configure hostname
CISCO_SWITCH_HTTP_SERVER_CONFIG      Configure http server
CISCO_SWITCH_LOGGING_SERVER_CONFIG   Configure logging server
CISCO_SWITCH_MGMT_VLAN_CONFIG        Configure management vlan parameters
CISCO_SWITCH_NAME_SERVER_CONFIG      Configure name server parameters
CISCO_SWITCH_NTP_SERVER_CONFIG       Configure NTP server
CISCO_SWITCH_RADIUS_SERVER_CONFIG    Configure radius server
CISCO_SWITCH_SETUP_SNMP_TRAPS        Configure SNMP trap parameters
CISCO_SWITCH_SETUP_USR_CONFIG        Configure the user parameters
CISCO_SWITCH_SNMP_SOURCE_CONFIG      Configure snmp source interface
CISCO_SWITCH_TACACS_SERVER_CONFIG    Configure tacacs server
CISCO_SWITCH_USER_PASS_CONFIG        Configure username and password

Switch# macro auto config ?
CISCO_SWITCH_AAA_ACCOUNTING          Configure aaa accounting parameters
CISCO_SWITCH_AAA_AUTHENTICATION      Configure aaa authentication parameters
CISCO_SWITCH_AAA_AUTHORIZATION       Configure aaa authorization parameters
CISCO_SWITCH_AUTO_IP_CONFIG          Configure the ip parameters
CISCO_SWITCH_AUTO_PCI_CONFIG         Configure PCI compliant parameters
CISCO_SWITCH_DOMAIN_NAME_CONFIG     Configure domain name
CISCO_SWITCH_ETHERCHANNEL_CONFIG     Configure the etherchannel parameters
CISCO_SWITCH_HOSTNAME_CONFIG        Configure hostname
CISCO_SWITCH_HTTP_SERVER_CONFIG      Configure http server
CISCO_SWITCH_LOGGING_SERVER_CONFIG   Configure logging server
CISCO_SWITCH_MGMT_VLAN_CONFIG        Configure management vlan parameters
CISCO_SWITCH_NAME_SERVER_CONFIG      Configure name server parameters
CISCO_SWITCH_NTP_SERVER_CONFIG       Configure NTP server
CISCO_SWITCH_RADIUS_SERVER_CONFIG    Configure radius server
CISCO_SWITCH_SETUP_SNMP_TRAPS        Configure SNMP trap parameters
CISCO_SWITCH_SETUP_USR_CONFIG        Configure the user parameters
CISCO_SWITCH_SNMP_SOURCE_CONFIG      Configure snmp source interface
CISCO_SWITCH_TACACS_SERVER_CONFIG    Configure tacacs server
CISCO_SWITCH_USER_PASS_CONFIG        Configure username and password
```

```
Switch# macro auto config CISCO_SWITCH_HOSTNAME_CONFIG
Enter system's network name: CISCO
Do you want to apply the parameters? [yes/no]: yes
Enter configuration commands, one per line. End with CNTL/Z.
Switch# macro auto apply CISCO_SWITCH_HOSTNAME_CONFIG
Enter configuration commands, one per line. End with CNTL/Z.
CISCO#
```

Example: Combined Macros

```
Switch# macro auto config CISCO_SWITCH_AUTO_IP_CONFIG
Do you want to configure default domain name? [yes/no]: yes
Enter the domain name: cisco.com
Do you want to configure Name server ipv4 address? [yes/no]: yes
Enter the IPv4 address[a.b.c.d]: 10.77.11.34
Enter IP address of the logging host: 10.77.11.36
Do you want to configure VPN Routing/Forwarding Instance name? [yes/no]: no
Enter the ip address of NTP server[a.b.c.d]: 10.77.11.37
Do you want to apply the parameters? [yes/no]: yes
Enter configuration commands, one per line. End with CNTL/Z.
Enter configuration commands, one per line. End with CNTL/Z.
Enter configuration commands, one per line. End with CNTL/Z.
Enter configuration commands, one per line. End with CNTL/Z.
Switch# macro auto apply CISCO_SWITCH_AUTO_IP_CONFIG
Enter configuration commands, one per line. End with CNTL/Z.
Switch#
```

Using the Cisco IOS Shell

Beginning in privileged EXEC mode:

	Command	Purpose
Step 1	Use one of the following <ul style="list-style-type: none"> macro auto config ? macro auto apply ? <p>Example: Switch# macro auto config ? Switch# macro auto apply ?</p>	(Optional) Displays the global macros.
Step 2	macro auto config <i>macro-name</i> <i>parameter=value</i> [<i>parameter=value</i>] ...	Sets the macro parameters. Follow the prompts in the CLI.
	<p>Example: Switch# macro auto config CISCO_SWITCH_HOSTNAME_CONFIG HOSTNAME=CISCO</p>	
Step 3	macro auto apply <i>macro-name</i>	Applies the macro to the switch.
	<p>Example: Switch# macro auto apply CISCO_SWITCH_HOSTNAME_CONFIG</p>	

	Command	Purpose
Step 4	show macro auto Example: Switch# show macro auto	Verifies your entries. The user-defined values appear only in the show command output.
Step 5	copy running-config startup-config Example: Switch# copy running-config startup-config	(Optional) Saves your entries in the configuration file.

Example: One Single Shell Parameter for One Macro

```
Switch# macro auto config CISCO_SWITCH_HOSTNAME_CONFIG HOSTNAME=CISCO
Switch# macro auto apply CISCO_SWITCH_HOSTNAME_CONFIG
Enter configuration commands, one per line. End with CNTL/Z.
CISCO#
```

Example: Multiple Shell Parameters and Values for One Macro

```
Switch# macro auto config CISCO_SWITCH_ETHERCHANNEL_CONFIG PORT_CH_ID=1 PORT_CH_TYPE=2
EC_PROTO=Y EC_PROTO_TYPE=PAGP NO_OF_INT=3 MODE=AUTO INTERFACE=Gig2/0/1,Gig2/0/2,Gig2/0/3
NON_SILENT=Y EC_APPLY=YES
Switch# macro auto apply CISCO_SWITCH_ETHERCHANNEL_CONFIG
Enter configuration commands, one per line. End with CNTL/Z.
Switch#
```

Example: Combined Macros

```
Switch# macro auto config CISCO_SWITCH_AUTO_IP_CONFIG CISCO_SWITCH_DOMAIN_NAME_CONFIG
DOMAIN_NAME=cisco.com
Switch# macro auto config CISCO_SWITCH_AUTO_IP_CONFIG CISCO_SWITCH_LOGGING_SERVER_CONFIG
HOST_IP=10.77.11.36
Switch# macro auto config CISCO_SWITCH_AUTO_IP_CONFIG CISCO_SWITCH_NAME_SERVER_CONFIG
IP_V4_ADDR=10.77.11.37
Switch# macro auto config CISCO_SWITCH_AUTO_IP_CONFIG CISCO_SWITCH_NTP_SERVER_CONFIG
IP_ADDRESS=10.77.11.38 VRF=NO
Switch# macro auto apply CISCO_SWITCH_AUTO_IP_CONFIG
Enter configuration commands, one per line. End with CNTL/Z.
Switch#
```

Default Static Smartports Configuration

There are no static Smartports macros enabled on the switch.

Table 2-5 *Default Static Smartports Macros*

Macro Name ¹	Description
cisco-global	Use this global configuration macro to enable rapid per-VLAN spanning-tree plus (PVST+), loop guard, and dynamic port-error recovery for link state failures.
cisco-desktop	Use this interface configuration macro for increased network security and reliability when connecting a desktop device, such as a PC, to a switch port.
cisco-phone	Use this interface configuration macro when connecting a desktop device such as a PC with a Cisco IP Phone to a switch port. This macro is an extension of the cisco-desktop macro and provides the same security and resiliency feature and also dedicated voice VLANs to ensure proper treatment of delay-sensitive voice traffic.
cisco-switch	Use this interface configuration macro when connecting an access switch and a distribution switch or between access switches connected through small form-factor pluggable (SFP) modules.
cisco-router	Use this interface configuration macro when connecting the switch and a WAN router.
cisco-wireless	Use this interface configuration macro when connecting the switch and a wireless access point.

1. Cisco-default Smartports macros vary, depending on the software version running on your switch.

Static Smartports Configuration Guidelines

- When a macro is applied globally to a switch or to a switch interface, the existing configuration on the interface is retained. This is helpful when applying an incremental configuration.
- If a command fails because of a syntax or a configuration error, the macro continues to apply the remaining commands. You can use the **macro global trace macro-name** global configuration command or the **macro trace macro-name** interface configuration command to apply and then debug the macro to find any syntax or configuration errors.
- Some CLI commands are specific to certain interface types. If you apply a macro to an interface that does not accept the configuration, the macro fails the syntax or the configuration check, and the switch returns an error message.
- Applying a macro to an interface range is the same as applying a macro to a single interface. When you use an interface range, the macro is applied sequentially to each interface within the range. If a macro command fails on one interface, it is still applied to the remaining interfaces.
- When you apply a macro to a switch or a switch interface, the macro name is automatically added to the switch or interface. You can display the macro names and applied commands using the **show running-config** user EXEC command.

NEAT Configuration

The Network Edge Access Topology (NEAT) feature extends identity to areas outside the wiring closet (such as conference rooms).

In a NEAT scenario, when 802.1x authentication is successful and an ASP macro is sent from the Access Control Server (ACS) to the switch, you must make one of the following configurations:

- Change the host mode to multi-host.
- Enable trunk configuration on the authenticator switch by configuring the cisco-av-pair as *device-traffic-class=switch* at the ACS.

Applying Static Smartports Macros

Beginning in privileged EXEC mode, follow these steps to apply a static Smartports macro:

	Command	Purpose
Step 1	show parser macro Example: Switch# show parser macro	Displays the Cisco-default static Smartports macros embedded in the switch software.
Step 2	show parser macro name <i>macro-name</i> Example: Switch# show parser macro name cisco-desktop	Displays the specific macro that you want to apply.
Step 3	configure terminal Example: Switch# configure terminal	Enters global configuration mode.
Step 4	macro global {apply trace} <i>macro-name</i> [parameter { <i>value</i> }] [parameter { <i>value</i> }] [parameter { <i>value</i> }] Example: Switch(config)# macro global apply cisco-desktop \$access_vlan 25	Applies a macro on the switch: <ul style="list-style-type: none"> • To only apply each individual macro command, use the macro global apply <i>macro-name</i> command. • To apply and then debug a macro to find any syntax or configuration errors, use the macro global trace <i>macro-name</i> command. Append the macro with the required values by using the parameter value keywords. Keywords that begin with \$ require a unique parameter value. You can use the macro global apply <i>macro-name</i> ? command to display a list of any required values for the macro. If you apply a macro without entering the keyword values, the commands are invalid and are not applied. (Optional) Specify unique parameter values that are specific to the switch. You can enter up to three keyword-value pairs. Parameter keyword matching is case sensitive. The corresponding value replaces all matching occurrences of the keyword.
Step 5	interface <i>interface-id</i> Example: Switch(config)# interface gigabitethernet 2/0/5	(Optional) Specifies an interface and enters interface configuration mode.

	Command	Purpose
Step 6	default interface <i>interface-id</i> Example: Switch(config)# default interface 2/1/4	(Optional) Clears all configuration from the specified interface.
Step 7	macro { apply trace } <i>macro-name</i> [parameter { <i>value</i> }] [parameter { <i>value</i> }] [parameter { <i>value</i> }] Example: Switch(config-if)# macro apply cisco-desktop \$access_vlan 25	Applies a macro on the interface: <ul style="list-style-type: none"> To only apply each individual macro command, use the macro apply <i>macro-name</i> command. To apply and then debug a macro to find any syntax or configuration errors, use the macro trace <i>macro-name</i> command. Append the macro with the required values by using the parameter value keywords. Keywords that begin with \$ require a unique parameter value. You can use the macro global apply <i>macro-name</i> ? command to display a list of any required values for the macro. If you apply a macro without entering the keyword values, the commands are invalid and are not applied. (Optional) Specify unique parameter values that are specific to the switch. You can enter up to three keyword-value pairs. Parameter keyword matching is case sensitive. The corresponding value replaces all matching occurrences of the keyword.
Step 8	end Example: Switch(config)# end	Returns to privileged EXEC mode.
Step 9	show running-config interface <i>interface-id</i> Example: Switch# show running-config interface gigabit ethernet 1/0/4	Verifies that Auto Smartports is enabled.
Step 10	copy running-config startup-config Example: Switch# copy running-config startup-config	(Optional) Saves your entries in the configuration file.

You can only delete a global macro-applied configuration on a switch by entering the **no** version of each command in the macro. You can delete a macro-applied configuration on a port by entering the **default interface** *interface-id* interface configuration command.

This example shows how to display the **cisco-desktop** macro, to apply the macro, and to set the access VLAN ID to 25 on an interface:

```
Switch# show parser macro name cisco-desktop
-----
Macro name : cisco-desktop
Macro type : default interface
```

```

# macro keywords $access_vlan
# Basic interface - Enable data VLAN only
# Recommended value for access vlan should not be 1
switchport access vlan $access_vlan
switchport mode access
# Enable port security limiting port to a single
# MAC address -- that of desktop
switchport port-security
switchport port-security maximum 1
# Ensure port-security age is greater than one minute
# and use inactivity timer
switchport port-security violation restrict
switchport port-security aging time 2
switchport port-security aging type inactivity
# Configure port as an edge network port
spanning-tree portfast
spanning-tree bpduguard enable
-----
Switch#
Switch# configure terminal
Enter configuration commands, one per line. End with CNTL/Z.
Switch(config)# interface gigabitethernet1/0/4
Switch(config-if)# macro apply cisco-desktop $access_vlan 25

```

Displaying Macros

Table 2-6 Commands for Displaying Auto Smartports and Static Smartports Macros

Command	Purpose
show macro auto ?	Displays information about Auto Smartports macros. <ul style="list-style-type: none"> • device: Displays device macro information • event: Displays macro event-related commands • global: Displays global macro information • interface: Displays interface Auto Smartports status
show parser macro	Displays all static smartports macros.
show parser macro name <i>macro-name</i>	Displays a specific static Smartports macro.
show parser macro brief	Displays the static Smartports macro names.

Table 2-6 Commands for Displaying Auto Smartports and Static Smartports Macros (continued)

Command	Purpose
show parser macro description [interface <i>interface-id</i>]	Displays the static Smartports macro description for all interfaces or for a specified interface.
show shell ?	<p>Displays information about Auto Smartports event triggers and macros.</p> <ul style="list-style-type: none"> • data-path: Displays data paths for <i>fetch</i> • environment: Displays shell environment information • functions: Displays shell functions information • triggers: Displays shell triggers information <p>Note The show shell command is a feature at the Cisco IOS level. You may first have to enable Cisco IOS Shell by entering the terminal shell command before you can enter the show shell command. For more information, see the Cisco IOS Shell configuration guide on Cisco.com: http://www.cisco.com/en/US/docs/ios/netmgmt/configuration/guide/nm_ios_shell.pdf</p>



CHAPTER 3

Auto Smartports and Static Smartports Macros CLI Commands

- [macro](#), page 3-2
- [macro auto \(CLI\)](#), page 3-5
- [macro auto control](#), page 3-11
- [macro auto device](#), page 3-13
- [macro auto execute](#), page 3-15
- [macro auto global control](#), page 3-21
- [macro auto global processing](#), page 3-23
- [macro auto mac-address-group](#), page 3-25
- [macro auto monitor](#), page 3-27
- [macro auto processing](#), page 3-28
- [macro auto sticky](#), page 3-30
- [macro auto trigger](#), page 3-32
- [macro description](#), page 3-34
- [macro global](#), page 3-35
- [macro global description](#), page 3-38
- [shell trigger](#), page 3-39
- [show macro auto](#), page 3-41
- [show macro auto monitor clients](#), page 3-44
- [show macro auto monitor device](#), page 3-46
- [show macro auto monitor type](#), page 3-48
- [show parser macro](#), page 3-51
- [show shell](#), page 3-54

macro

To apply a macro to an interface or to apply and debug a macro on an interface, use the **macro** interface configuration command.

```
macro {apply | trace} macro-name [parameter {value}] [parameter {value}]
      [parameter {value}]
```

Syntax Description

apply	Applies a macro to an interface.
trace	Applies a macro to an interface and then debugs it.
<i>macro-name</i>	Specifies the name of the macro.
parameter value	(Optional) Specifies unique parameter values that are specific to the interface. You can enter up to three keyword-value pairs. Parameter keyword matching is case sensitive. All matching occurrences of the keyword are replaced with the corresponding value.

Command Default

This command has no default setting.

Command Modes

Interface configuration

Command History

Release	Modification
12.1(19)EA1	This command was introduced on Catalyst 3750 and 3560 switches.
12.2(18)SE	The parameter value keywords were added on Catalyst 3750 and 3560 switches.
12.2(25)FX	This command was introduced on Catalyst 2960 switches.
12.2(44)SE	This command was introduced on Catalyst 2918 switches.
12.2(46)EX	This command was introduced on Catalyst 2975 switches.
12.2(35)SE2	This command was introduced on the Catalyst 3750-E and 3560-E switches.
12.2(53)SE2	This command was introduced on the Catalyst 3750-X and 3560-X switches.

Usage Guidelines

You can use the **macro apply** *macro-name* interface configuration command to apply and show the macros running on an interface.

You can use the **macro trace** *macro-name* interface configuration command to apply and then debug the macro to find any syntax or configuration errors.

If a command fails because of a syntax error or a configuration error when you apply a macro, the macro continues to apply the remaining commands to the interface.

When creating a macro that requires the assignment of unique values, use the **parameter value** keywords to designate values specific to the interface.

Keyword matching is case sensitive. All matching occurrences of the keyword are replaced with the corresponding value. Any full match of a keyword, even if it is part of a larger string, is considered a match and is replaced by the corresponding value.

Some macros might contain keywords that require a parameter value. You can use the **macro apply macro-name ?** command to display a list of any required values in the macro. If you apply a macro without entering the keyword values, the commands are invalid and are not applied.

There are Cisco-default Smartports macros embedded in the switch software. You can display these macros and the commands that they contain by using the **show parser macro** user EXEC command.

Follow these guidelines when you apply a Cisco-default Smartports macro on an interface:

- Display all macros on the switch by using the **show parser macro** user EXEC command. Display the contents of a specific macro by using the **show parser macro name macro-name** user EXEC command.
- Keywords that begin with \$ mean that a unique parameter value is required. Append the Cisco-default macro with the required values by using the **parameter value** keywords.

The Cisco-default macros use the \$ character to identify required keywords. You can use the \$ character to define keywords when you create a macro.

When you apply a macro to an interface, the macro name is automatically added to the interface. You can display the applied commands and macro names by using the **show running-config interface interface-id** user EXEC command.

A macro applied to an interface range behaves the same way as a macro applied to a single interface. When you use an interface range, the macro is applied sequentially to each interface within the range. If a macro command fails on one interface, it is still applied to the remaining interfaces.

You can delete a macro-applied configuration on an interface by entering the **default interface interface-id** interface configuration command.

Examples

After you use the **macro name** global configuration command, you can apply it to an interface. This example shows how to apply a user-created macro called *duplex* to an interface:

```
Switch(config-if)# macro apply duplex
```

To debug a macro, use the **macro trace** interface configuration command to find any syntax or configuration errors in the macro as it is applied to an interface.

```
Switch(config-if)# macro trace duplex
Applying command...`duplex auto`
%Error Unknown error.
Applying command...`speed nonegotiate`
```

This example shows how to display the Cisco-default *cisco-desktop* macro and how to apply the macro and set the access VLAN ID to 25 on an interface:

```
Switch# show parser macro cisco-desktop
-----
Macro name : cisco-desktop
Macro type : default

# Basic interface - Enable data VLAN only
# Recommended value for access vlan (AVID) should not be 1
switchport access vlan $AVID
switchport mode access

# Enable port security limiting port to a single
# MAC address -- that of desktop
```

```

switchport port-security
switchport port-security maximum 1

# Ensure port-security age is greater than one minute
# and use inactivity timer
switchport port-security violation restrict
switchport port-security aging time 2
switchport port-security aging type inactivity

# Configure port as an edge network port
spanning-tree portfast
spanning-tree bpduguard enable
-----
Switch#
Switch# configure terminal
Enter configuration commands, one per line. End with CNTL/Z.
Switch(config)# interface gigabitethernet1/0/4
Switch(config-if)# macro apply cisco-desktop $AVID 25

```

Related Commands

Command	Description
macro description	Adds a description about the macros that are applied to an interface. This is a mandatory command for Auto Smartports to work.
macro global	Applies a macro on a switch or applies and traces a macro on a switch.
macro global description	Adds a description about the macros that are applied to the switch.
show parser macro	Displays the macro definition for all macros or for the specified macro.

macro auto (CLI)

To configure and apply a global macro using the CLI, use the **macro auto** privileged EXEC command. Use the **no** form of this command to return to the default setting.

macro auto {**apply** | **config**} *macro-name*

Syntax Description		
	apply	Applies the macro.
	config	Enters the macro parameters.
	<i>macro-name</i>	Specifies the macro name.

Command Default No macros are applied to the switch.

Command Modes Privileged EXEC

Command History	Release	Modification
	12.2(55)SE	This command was introduced on the Catalyst 3750-X, 3750-E, 3750, 3560-X, 3560-E, 3560, 2975, 2960, and 2918 switches.

Usage Guidelines

To remove the macro from the switch, enter the **no** forms of the macro commands.

If you enter the **macro auto config macro-name** command, you are prompted to enter values for all the macro parameters.

Use the exact text string when entering the *macro-name*. The entries are case sensitive.

The user-defined values appear only in the **show macro auto** or **show running-config** command output.

Examples To display global macros:

```
Switch# macro auto apply ?
 CISCO_SWITCH_AAA_ACCOUNTING      Configure aaa accounting parameters
 CISCO_SWITCH_AAA_AUTHENTICATION  Configure aaa authentication parameters
 CISCO_SWITCH_AAA_AUTHORIZATION   Configure aaa authorization parameters
 CISCO_SWITCH_AUTO_IP_CONFIG      Configure the ip parameters
 CISCO_SWITCH_AUTO_PCI_CONFIG     Configure PCI compliant parameters
 CISCO_SWITCH_DOMAIN_NAME_CONFIG  Configure domain name
 CISCO_SWITCH_ETHERCHANNEL_CONFIG Configure the etherchannel parameters
 CISCO_SWITCH_HOSTNAME_CONFIG     Configure hostname
 CISCO_SWITCH_HTTP_SERVER_CONFIG  Configure http server
 CISCO_SWITCH_LOGGING_SERVER_CONFIG Configure logging server
 CISCO_SWITCH_MGMT_VLAN_CONFIG    Configure management vlan parameters
 CISCO_SWITCH_NAME_SERVER_CONFIG  Configure name server parameters
 CISCO_SWITCH_NTP_SERVER_CONFIG   Configure NTP server
 CISCO_SWITCH_RADIUS_SERVER_CONFIG Configure radius server
 CISCO_SWITCH_SETUP_SNMP_TRAPS    Configure SNMP trap parameters
 CISCO_SWITCH_SETUP_USR_CONFIG    Configure the user parameters
 CISCO_SWITCH_SNMP_SOURCE_CONFIG  Configure snmp source interface
```

```
CISCO_SWITCH_TACACS_SERVER_CONFIG    Configure tacacs server
CISCO_SWITCH_USER_PASS_CONFIG        Configure username and password
```

```
Switch# macro auto config ?
CISCO_SWITCH_AAA_ACCOUNTING          Configure aaa accounting parameters
CISCO_SWITCH_AAA_AUTHENTICATION      Configure aaa authentication parameters
CISCO_SWITCH_AAA_AUTHORIZATION       Configure aaa authorization parameters
CISCO_SWITCH_AUTO_IP_CONFIG          Configure the ip parameters
CISCO_SWITCH_AUTO_PCI_CONFIG         Configure PCI compliant parameters
CISCO_SWITCH_DOMAIN_NAME_CONFIG      Configure domain name
CISCO_SWITCH_ETHERCHANNEL_CONFIG     Configure the etherchannel parameters
CISCO_SWITCH_HOSTNAME_CONFIG         Configure hostname
CISCO_SWITCH_HTTP_SERVER_CONFIG      Configure http server
CISCO_SWITCH_LOGGING_SERVER_CONFIG   Configure logging server
CISCO_SWITCH_MGMT_VLAN_CONFIG        Configure management vlan parameters
CISCO_SWITCH_NAME_SERVER_CONFIG      Configure name server parameters
CISCO_SWITCH_NTP_SERVER_CONFIG       Configure NTP server
CISCO_SWITCH_RADIUS_SERVER_CONFIG    Configure radius server
CISCO_SWITCH_SETUP_SNMP_TRAPS        Configure SNMP trap parameters
CISCO_SWITCH_SETUP_USR_CONFIG        Configure the user parameters
CISCO_SWITCH_SNMP_SOURCE_CONFIG      Configure snmp source interface
CISCO_SWITCH_TACACS_SERVER_CONFIG    Configure tacacs server
CISCO_SWITCH_USER_PASS_CONFIG        Configure username and password
```

To display the parameters for a specific macro:

```
Switch# macro auto config CISCO_SWITCH_AUTO_IP_CONFIG ?
CISCO_SWITCH_DOMAIN_NAME_CONFIG      domain name parameters
CISCO_SWITCH_LOGGING_SERVER_CONFIG   logging host parameters
CISCO_SWITCH_NAME_SERVER_CONFIG      name server parameters
CISCO_SWITCH_NTP_SERVER_CONFIG       ntp server parameters
LINE                                  Provide parameters of form [Parameters
                                     name=value]

<cr>
```

```
Switch# macro auto config CISCO_SWITCH_AUTO_PCI_CONFIG ?
CISCO_SWITCH_AAA_ACCOUNTING          aaa accounting parameters
CISCO_SWITCH_AAA_AUTHENTICATION      aaa authentication parameters
CISCO_SWITCH_AAA_AUTHORIZATION       aaa authorization parameters
CISCO_SWITCH_HTTP_SERVER_CONFIG      http server parameters
CISCO_SWITCH_RADIUS_SERVER_CONFIG    radius server parameters
CISCO_SWITCH_TACACS_SERVER_CONFIG    tacacs server parameters
LINE                                  Provide parameters of form [Parameters
                                     name=value]

<cr>
```

```
Switch# macro auto config CISCO_SWITCH_SETUP_SNMP_TRAPS ?
CISCO_SWITCH_SNMP_SOURCE_CONFIG      snmp source parameters
LINE                                  Provide parameters of form [Parameters
                                     name=value]

<cr>
```

```
Switch# macro auto config CISCO_SWITCH_SETUP_USR_CONFIG ?
CISCO_AUTO_TIMEZONE_CONFIG           timezone parameters
CISCO_SWITCH_HOSTNAME_CONFIG         hostname parameter
LINE                                  Provide parameters of form [Parameters
                                     name=value]

<cr>
```

To set macro parameters and apply the macro using the CLI:

```
Switch# macro auto config CISCO_SWITCH_ETHERCHANNEL_CONFIG
Enter the port channel id[1-48] for 3K & 2350, [1-6] for 2K: 2
Enter the port channel type, Layer:[2-3(L3 not supported on 2K)]: 2
```



```

Enter etherchannel mode for the interface[auto/desirable/on/active/passive]: active
Enter the channel protocol[lacp/none]: lacp
Enter the number of interfaces to join the etherchannel[8-PAGP/MODE:ON,16-LACP]: 7
Enter interface name[GigabitEthernet3/0/3]: gigabitethernet1/0/1
Enter interface name[GigabitEthernet3/0/3]: gigabitethernet1/0/2
Enter interface name[GigabitEthernet3/0/3]: gigabitethernet1/0/3
Enter interface name[GigabitEthernet3/0/3]: gigabitethernet1/0/4
Enter interface name[GigabitEthernet3/0/3]: gigabitethernet1/0/5
Enter interface name[GigabitEthernet3/0/3]: gigabitethernet1/0/6
Enter interface name[GigabitEthernet3/0/3]: gigabitethernet1/0/7
Do you want to apply the parameters? [yes/no]: yes
Enter configuration commands, one per line. End with CNTL/Z.
Enter configuration commands, one per line. End with CNTL/Z.
Enter configuration commands, one per line. End with CNTL/Z.
Enter configuration commands, one per line. End with CNTL/Z.
Enter configuration commands, one per line. End with CNTL/Z.
Enter configuration commands, one per line. End with CNTL/Z.
Enter configuration commands, one per line. End with CNTL/Z.
Switch# macro auto apply CISCO_SWITCH_ETHERCHANNEL_CONFIG
Enter configuration commands, one per line. End with CNTL/Z.
Switch#

```

Related Commands

Command	Description
macro auto execute	Configures mapping from an event trigger to a built-in macro.
macro auto global processing	Enables Auto Smartports on a switch.
show macro auto	Displays information about macros.
show shell	Displays information about event triggers and macros.

macro auto apply (Cisco IOS shell scripting capability)

To configure and apply a global macro using the Cisco IOS shell scripting capability, use the **macro auto apply** privileged EXEC command. Use the **no** form of this command to return to the default setting.

macro auto apply *macro-name*

Syntax Description

apply	Applies the macro.
<i>macro-name</i>	Specifies the macro name.

Command Default

No macros are applied to the switch.

Command Modes

Privileged EXEC

Command History

Release	Modification
12.2(55)SE	This command was introduced on the Catalyst 3750-X, 3750-E, 3750, 3560-X, 3560-E, 3560, 2975, 2960, and 2918 switches.

Usage Guidelines

To remove the macro from the switch, enter the **no** forms of the macro commands.

Use the exact text string when entering the *macro-name*. The entries are case sensitive.

The user-defined values appear only in the **show macro auto** or **show running-config** command output.

You can also use the Cisco IOS shell scripting capability to set the parameters. For examples, see the “Configuring and Applying Global Macros” section in the “Configuring Auto Smartports and Static Smartports Macros” chapter.

Examples

To display global macros:

```
Switch# macro auto apply ?
  CISCO_SWITCH_AAA_ACCOUNTING      Configure aaa accounting parameters
  CISCO_SWITCH_AAA_AUTHENTICATION  Configure aaa authentication parameters
  CISCO_SWITCH_AAA_AUTHORIZATION   Configure aaa authorization parameters
  CISCO_SWITCH_AUTO_IP_CONFIG      Configure the ip parameters
  CISCO_SWITCH_AUTO_PCI_CONFIG     Configure PCI compliant parameters
  CISCO_SWITCH_DOMAIN_NAME_CONFIG  Configure domain name
  CISCO_SWITCH_ETHERCHANNEL_CONFIG Configure the etherchannel parameters
  CISCO_SWITCH_HOSTNAME_CONFIG     Configure hostname
  CISCO_SWITCH_HTTP_SERVER_CONFIG  Configure http server
  CISCO_SWITCH_LOGGING_SERVER_CONFIG Configure logging server
  CISCO_SWITCH_MGMT_VLAN_CONFIG    Configure management vlan parameters
  CISCO_SWITCH_NAME_SERVER_CONFIG  Configure name server parameters
  CISCO_SWITCH_NTP_SERVER_CONFIG   Configure NTP server
  CISCO_SWITCH_RADIUS_SERVER_CONFIG Configure radius server
  CISCO_SWITCH_SETUP_SNMP_TRAPS    Configure SNMP trap parameters
  CISCO_SWITCH_SETUP_USR_CONFIG    Configure the user parameters
  CISCO_SWITCH_SNMP_SOURCE_CONFIG  Configure snmp source interface
```

```
CISCO_SWITCH_TACACS_SERVER_CONFIG    Configure tacacs server
CISCO_SWITCH_USER_PASS_CONFIG        Configure username and password
```

Related Commands

Command	Description
macro auto execute	Configures mapping from an event trigger to a built-in macro.
macro auto global processing	Enables Auto Smartports on a switch.
show macro auto	Displays information about macros.
show shell	Displays information about event triggers and macros.

macro auto config (Cisco IOS shell scripting capability)

To configure and apply a global macro, use the **macro auto config** privileged EXEC command. Use the **no** form of this command to return to the default setting.

macro auto config *macro-name* [*parameter=value* [*parameter=value*] ...]

Syntax Description

config	Enters the macro parameters.
<i>macro-name</i>	Specifies the macro name.
<i>parameter=value</i> [<i>parameter=value</i>] ...	<i>parameter=value</i> —Replaces values for global macro parameter values. Enter values in the form of name value pair separated by a space: <name1>=<value1> [<name2>=<value2>...].

Command Default

No macros are applied to the switch.

Command Modes

Privileged EXEC

Command History

Release	Modification
12.2(55)SE	This command was introduced on the Catalyst 3750-X, 3750-E, 3750, 3560-X, 3560-E, 3560, 2975, 2960, and 2918 switches.

Usage Guidelines

To remove the macro from the switch, enter the **no** forms of the macro commands.

If you enter the **macro auto config** *macro-name* command, you are prompted to enter values for all the macro parameters.

Use the exact text string when entering the *macro-name* and *parameters*. The entries are case sensitive.

The user-defined values appear only in the **show macro auto** or **show running-config** command output.

For more information, see the “Configuring and Applying Global Macros” section in the “Configuring Auto Smartports and Static Smartports Macros” chapter.

Related Commands

Command	Description
macro auto execute	Configures mapping from an event trigger to a built-in macro.
macro auto global processing	Enables Auto Smartports on a switch.
show macro auto	Displays information about macros.
show shell	Displays information about event triggers and macros.

macro auto control

To specify when the switch applies an Auto Smartports macro based on the detection method, device type, or trigger (referred to as event trigger control), use the **macro auto control** interface configuration command. Use the **no** form of this command to disable trigger-to-macro mapping. The switch then does not apply macros based on event triggers.

```
macro auto control { detection [cdp] [lldp] [mac-address] | device [access-point] [ip-camera]
[lightweight-ap] [media-player] [phone] [router] [switch] | trigger [last-resort]}
```

```
no macro auto control { detection [cdp] [lldp] [mac-address] | device [access-point] [ip-camera]
[lightweight-ap] [media-player] [phone] [router] [switch] | trigger [last-resort]}
```

Syntax Description	
detection [cdp] [lldp] [mac-address]	detection —Sets one or more of these as an event trigger: <ul style="list-style-type: none"> (Optional) cdp—CDP messages (Optional) lldp—LLDP messages (Optional) mac-address—User-defined MAC address groups
device [access-point] [ip-camera] [lightweight-ap] [media-player] [phone] [router] [switch]	device —Sets one or more of these devices as an event trigger: <ul style="list-style-type: none"> (Optional) access-point—Autonomous access point (Optional) ip-camera—Cisco IP video surveillance camera (Optional) lightweight-ap—Lightweight access point (Optional) media-player—Digital media player (Optional) phone—Cisco IP phone (Optional) router—Cisco router (Optional) switch—Cisco switch
trigger [last-resort]	trigger —Sets a specific event trigger. <ul style="list-style-type: none"> (Optional) last-resort—Last-resort trigger.

Command Default The switch uses the device type as the event trigger. If the switch cannot determine the device type, it uses MAC address groups, MAB messages, 802.1x authentication messages, and LLDP messages in random order.

Command Modes Interface configuration

Command History	Release	Modification
	12.2(55)SE	This command was introduced on the Catalyst 3750-X, 3750-E, 3750, 3560-X, 3560-E, 3560, 2975, 2960, and 2918 switches.

Usage Guidelines

If you do not set event triggers, the switch uses the device type as the event trigger. If the switch cannot determine the device type, it uses MAC address groups, MAB messages, 802.1x authentication messages, and LLDP messages in random order.

To verify that a macro is applied to an interface, use the **show macro auto interface** user EXEC command.

Examples

To set LLDP messages and MAC address groups as event triggers:

```
Switch# configure terminal
Enter configuration commands, one per line. End with CNTL/Z.
Switch(config)# interface gigabitethernet 5/0/2
Switch(config-if)# macro auto control detection lldp mac-address
Switch(config-if)# exit
Switch(config)# end
```

To set access points, video surveillance cameras, and digital media players as event triggers:

```
Switch# configure terminal
Enter configuration commands, one per line. End with CNTL/Z.
Switch(config)# interface gigabitethernet 5/0/1
Switch(config-if)# macro auto control device access-point ip-camera media-player
Switch(config-if)# exit
Switch(config)# end
```

The switch applies a built-in macro only when it detects an access point, video surveillance camera, or digital media player.

Related Commands

Command	Description
macro auto execute	Configures mapping from an event trigger to a built-in macro.
macro auto global processing	Enables Auto Smartports on a switch.
macro auto mac-address-group	Configures MAC address groups.
macro auto sticky	Configures macro persistence.
shell trigger	Creates event triggers.
show macro auto	Displays information about macros.
show shell	Displays information about event triggers and macros.

macro auto device

To replace macro default parameter values with values that are specific to your switch, use the **macro auto device** global configuration command. Use the **no** form of this command to remove the parameter values.

```
macro auto device {access-point | ip-camera | lightweight-ap | media-player | phone | router |
switch} [parameter=value]
```

```
no macro auto device {access-point | ip-camera | lightweight-ap | media-player | phone | router
| switch} [parameter=value]
```

Syntax Description

access-point	Replaces the access-point default parameter value: NATIVE_VLAN=1
ip-camera	Replaces the IP video surveillance camera default parameter value: ACCESS_VLAN=1
lightweight-ap	Replaces the lightweight access point default parameter value: ACCESS_VLAN=1
media-player	Replaces the digital media player default parameter value: ACCESS_VLAN=1
phone	Replaces the IP phone default parameter values: ACCESS_VLAN=1 VOICE_VLAN=2
router	Replaces the router default parameter value: NATIVE_VLAN=1
switch	Replaces the switch default parameter value: NATIVE_VLAN=1
<i>parameter=value</i>	(Optional) Replaces the macro default parameter values. Enter new values in the form of name value pair separated by spaces: [<i><name1>=<value1> <name2>=<value2>...</i>]

Command Default

Macro default parameter values are defined previously.

Command Modes

Global configuration

Command History

Release	Modification
12.2(52)SE	This command was introduced on the Catalyst 3750-E, 3750, 3560-E, 3560, 2975, 2960, and 2918 switches.
12.2(53)SE2	This command was introduced on the Catalyst 3750-X and 3560-X switches.

Usage Guidelines

Use the **macro auto device** global configuration command to replace macro default parameter values with values that are specific to your switch. Use the **no** form of this command to remove the parameter values.

Use the **show macro device** privileged EXEC command to display the contents of the macros. Use the *parameter=value* keywords to replace default parameter values within a specific macro.

You can also use the **macro auto execute** global configuration command to specify default parameter values. This command also requires that you specify an event trigger and a built-in or user-defined macro. If you enable both the **macro auto device** and the **macro auto execute** commands, the parameters specified in the command last executed is applied to the switch. Only one command is active on the switch.

To verify that a macro is applied to an interface, use the **show macro auto interface** user EXEC command.

Examples

This example shows how to display the IP phone macro parameter values, enable the IP phone macro, and change the default voice VLAN to 20:

```
Switch# show macro auto device phone
Device:phone
Default Macro:CISCO_PHONE_AUTO_SMARTPORT
Current Macro:CISCO_PHONE_AUTO_SMARTPORT
Configurable Parameters:ACCESS_VLAN VOICE_VLAN
Defaults Parameters:ACCESS_VLAN=1 VOICE_VLAN=2
Current Parameters:ACCESS_VLAN=1 VOICE_VLAN=2

Switch# configure terminal
Enter configuration commands, one per line. End with CNTL/Z.
Switch(config)# macro auto device phone VOICE_VLAN=20
Switch(config)# end
Switch# show macro auto device phone
Device:phone
Default Macro:CISCO_PHONE_AUTO_SMARTPORT
Current Macro:CISCO_PHONE_AUTO_SMARTPORT
Configurable Parameters:ACCESS_VLAN VOICE_VLAN
Defaults Parameters:ACCESS_VLAN=1 VOICE_VLAN=2
Current Parameters:VOICE_VLAN=20
```

Related Commands

Command	Description
macro auto execute	Configures mapping from an event trigger to a built-in macro.
macro auto global processing	Enables Auto Smartports on a switch.
macro auto mac-address-group	Configures MAC address groups.
macro auto sticky	Configures macro persistence.
shell trigger	Creates event triggers.
show macro auto	Displays information about macros.
show shell	Displays information about event triggers and macros.

macro auto execute

To replace built-in macro default values and to configure mapping from an event trigger to a built-in or user-defined macro, use the **macro auto execute** global configuration command.

```
macro auto execute event trigger {[builtin built-in macro name] | [remote url]} [parameter=value]
[function contents]
```

```
no macro auto execute event trigger {[builtin built-in macro name] | [remote url]}
[parameter=value] [function contents]
```

Syntax Description	
<i>event trigger</i>	<p>Defines mapping from an event trigger to a built-in macro.</p> <p>Specifies an <i>event trigger</i>:</p> <ul style="list-style-type: none"> • CISCO_CUSTOM_EVENT • CISCO_DMP_EVENT • CISCO_IPVSC_EVENT • CISCO_LAST_RESORT_EVENT • CISCO_PHONE_EVENT • CISCO_ROUTER_EVENT • CISCO_SWITCH_EVENT • CISCO_WIRELESS_AP_EVENT • CISCO_WIRELESS_LIGHTWEIGHT_AP_EVENT • WORD—Apply a user-defined event trigger such as a MAC address group.
builtin <i>built-in macro name</i>	<p>(Optional) Specifies a builtin <i>built-in macro name</i>:</p> <ul style="list-style-type: none"> • CISCO_AP_AUTO_SMARTPORT Specify the parameter value: NATIVE_VLAN=1. • CISCO_DMP_AUTO_SMARTPORT Specify the parameter value: ACCESS_VLAN=1. • CISCO_IPVSC_AUTO_SMARTPORT Specify the parameter value: ACCESS_VLAN=1. • CISCO_LWAP_AUTO_SMARTPORT Specify the parameter value: ACCESS_VLAN=1. • CISCO_PHONE_AUTO_SMARTPORT Specify the parameter values: ACCESS_VLAN=1 and VOICE_VLAN=2. • CISCO_ROUTER_AUTO_SMARTPORT Specify the parameter value: NATIVE_VLAN=1. • CISCO_SWITCH_AUTO_SMARTPORT Specify the parameter value: NATIVE_VLAN=1.
<i>parameter=value</i>	<p>(Optional) <i>parameter=value</i>—Replaces default values for parameter values shown for the <i>builtin-macro name</i>, for example, ACCESS_VLAN=1. Enter new values in the form of name value pair separated by a space: [<name1>=<value1> <name2>=<value2>...].</p>

<i>{function contents}</i>	(Optional) <i>{function contents}</i> Specifies a user-defined macro to associate with the trigger. Enter the macro contents within braces. Begin the Cisco IOS shell commands with the left brace and end the command grouping with the right brace.
remote url	(Optional) Specifies a remote server location: <ul style="list-style-type: none"> The syntax for the local flash file system on the standalone switch or the stack master: flash: The syntax for the local flash file system on a stack member: flash member number: The syntax for the FTP: ftp:[[/username[:password]]@location]/directory]/filename The syntax for an HTTP server: http://[[username:password]@]{hostname host-ip}[/directory]/filename The syntax for a secure HTTP server: https://[[username:password]@]{hostname host-ip}[/directory]/filename The syntax for the NVRAM: nvrाम://[[username:password]@][directory]/filename The syntax for the Remote Copy Protocol (RCP): rрp:[[/username@location]/directory]/filename The syntax for the Secure Copy Protocol (SCP): scp:[[/username@location]/directory]/filename The syntax for the TFTP: tftp:[[/location]/directory]/filename

Command Default

This command has no default setting.

Command Modes

Global configuration

Command History

Release	Modification
12.2(50)SE	This command was introduced on the Catalyst 3750-E, 3750, 3560-E, 3560, 2960, and 2918 switches. It replaced the macro name global configuration command.
12.2(52)SE	The remote keyword and <i>url</i> argument were added on the Catalyst 3750-E, 3750, 3560-E, 3560, 2960, and 2918 switches. The command was introduced on Catalyst 2975 switches.
12.2(53)SE2	This command was introduced on the Catalyst 3750-X and 3560-X switches.

Usage Guidelines

Use the **macro auto execute** global configuration command to replace the built-in macro default values with values that are specific to your switch.

The switch automatically maps from event triggers to built-in macros. The built-in macros are system-defined macros in the software image. You can also create user-defined macros by using the Cisco IOS shell scripting capability.

You can create new event triggers by using the **shell trigger** global configuration commands. Use the **show shell triggers** privileged EXEC command to display the contents of the user-defined triggers and macros.

You can use the **macro auto mac-address-group** global configuration command to create event triggers for devices that do not support Cisco Discovery Protocol (CDP) or Link Layer Discovery Protocol (LLDP).

You can use the remote macro feature to store macros in a central location for designated network switches to use. You can then maintain and update the macro files for use by multiple switches. Use **remote url** to configure the remote server location and macro path information. There are no specific file extension requirements for saved macro files.

Auto Smartports macros and antimacros (the antimacro is the portion of the applied macro that removes it at link down) have these guidelines and limitations:

- You can delete or change the built-in macros. However, you can override a built-in macro by creating a user-defined macro with the same name. To restore the original built-in macro, delete the user-defined macro.
- If you enable both the **macro auto device** and the **macro auto execute** global configuration commands, the parameters specified in the command last executed are applied to the switch. Only one command is active on the switch.
- To avoid system conflicts when macros are applied, remove all port configurations except for 802.1x authentication.
- Do not configure port security when enabling Auto Smartports on the switch.
- If the macro conflicts with the original configuration, either the macro does not apply some of the original configuration commands, or the antimacro does not remove them. (The antimacro is the portion of the applied macro that removes the macro at a link-down event.)

For example, if 802.1x authentication is enabled, you cannot remove the switchport-mode access configuration. Remove the 802.1x authentication before removing the switchport mode configuration.

- A port cannot be a member of an EtherChannel when you apply Auto Smartports macros.
- The built-in-macro default data VLAN is VLAN 1. The default voice VLAN is VLAN 2. If your switch uses different access, native, or voice VLANs, use the **macro auto device** or the **macro auto execute** global configuration commands to configure the values.
- For 802.1x authentication or MAC authentication bypass (MAB), to detect non-Cisco devices, configure the RADIUS server to support the Cisco attribute-value pair **auto-smart-port=event trigger**.
- The switch supports Auto Smartport macros only on directly connected devices. Multiple device connections, such as hubs, are not supported.
- If authentication is enabled on a port, the switch ignores a MAC address trigger if authentication fails.
- The order of CLI commands within the macro and the corresponding antimacro can be different.

Examples

This example shows how to use two built-in macros for connecting Cisco switches and Cisco IP phones to the switch. This example modifies the default voice VLAN, access VLAN, and native VLAN for the trunk interface:

```
Switch# configure terminal  
Enter configuration commands, one per line. End with CNTL/Z.
```

```

Switch(config)#!!! the next command modifies the access and voice vlans
Switch(config)#!!! for the built in Cisco IP phone auto smartport macro
Switch(config)# macro auto execute CISCO_PHONE_EVENT builtin CISCO_PHONE_AUTO_SMARTPORT
ACCESS_VLAN=10 VOICE_VLAN=20
Switch(config)#
Switch(config)#!!! the next command modifies the Native vlan used for inter switch trunks
Switch(config)# macro auto execute CISCO_SWITCH_EVENT builtin CISCO_SWITCH_AUTO_SMARTPORT
NATIVE_VLAN=10
Switch(config)#
Switch(config)#!!! the next command enables auto smart ports globally
Switch(config)# macro auto global processing
Switch(config)#
Switch(config)# exit

Switch# !!! here is the running configuration of the interface connected
Switch# !!! to another Cisco Switch after the Macro is applied
Switch#
Switch# show running-config interface gigabitethernet1/0/1
Building configuration...

Current configuration : 284 bytes
!
interface GigabitEthernet1/0/1
 switchport trunk encapsulation dot1q
 switchport trunk native vlan 10
 switchport mode trunk
 srr-queue bandwidth share 10 10 60 20
 queue-set 2
 priority-queue out
 mls qos trust cos
 auto qos voip trust
 macro description CISCO_SWITCH_EVENT
end

```

This example shows how to map a user-defined event trigger called media player to a user-defined macro.

1. Connect the media player to an 802.1x- or MAB-enabled switch port.
2. On the RADIUS server, set the attribute-value pair to **auto-smart-port=DMP_EVENT**.
3. On the switch, create the event trigger **DMP_EVENT**, and enter the user-defined macro commands.
4. The switch recognizes the attribute-value pair=**DMP_EVENT** response from the RADIUS server and applies the macro associated with this event trigger.

```

Switch(config)# shell trigger DMP_EVENT mediaplayer
Switch(config)# macro auto execute DMP_EVENT {
if [[ $LINKUP -eq YES ]]; then
conf t
 interface $INTERFACE
  macro description $TRIGGER
  switchport access vlan 1
  switchport mode access
  switchport port-security
  switchport port-security maximum 1
  switchport port-security violation restrict
  switchport port-security aging time 2
  switchport port-security aging type inactivity
  spanning-tree portfast
  spanning-tree bpduguard enable
  exit
fi
if [[ $LINKUP -eq NO ]]; then
conf t

```

```

interface $INTERFACE
  no macro description $TRIGGER
  no switchport access vlan 1
  if [[ $AUTH_ENABLED -eq NO ]]; then
    no switchport mode access
  fi
  no switchport port-security
  no switchport port-security maximum 1
  no switchport port-security violation restrict
  no switchport port-security aging time 2
  no switchport port-security aging type inactivity
  no spanning-tree portfast
  no spanning-tree bpduguard enable
  exit
fi

```

Table 3-1 Supported Cisco IOS Shell Keywords

Command	Description
{	Begin the command grouping.
}	End the command grouping.
[[Use as a conditional construct.
]]	Use as a conditional construct.
else	Use as a conditional construct.
-eq	Use as a conditional construct.
fi	Use as a conditional construct.
if	Use as a conditional construct.
then	Use as a conditional construct.
-z	Use as a conditional construct.
\$	Variables that begin with the \$ character are replaced with a parameter value.
#	Use the # character to enter comment text.

Table 3-2 *Unsupported Cisco IOS Shell Reserved Keywords*

Command	Description
	Pipeline.
case	Conditional construct.
esac	Conditional construct.
for	Looping construct.
function	Shell function.
in	Conditional construct.
select	Conditional construct.
time	Pipeline.
until	Looping construct.
while	Looping construct.

Related Commands

Command	Description
macro auto device	Configures macro default parameter values.
macro auto global processing	Enables Auto Smartports on a switch.
macro auto mac-address-group	Configures MAC address groups.
macro auto sticky	Configures macro persistence.
shell trigger	Creates event triggers.
show macro auto	Displays information about macros.
show shell	Displays information about event triggers and macros.

macro auto global control

To specify when the switch applies an Auto Smartports macro based on the device type or trigger (referred to as event trigger control), use the **macro auto global control** global configuration command. Use the **no** form of this command to disable trigger-to-macro mapping.

```
macro auto global control { device [access-point] [ip-camera] [lightweight-ap] [mac-address]
[media-player] [phone] [router] [switch] | trigger [last-resort] }
```

```
no macro auto global control { device [access-point] [ip-camera] [lightweight-ap]
[mac-address] [media-player] [phone] [router] [switch] | trigger [last-resort] }
```

Syntax Description

device [access-point] [ip-camera] [lightweight-ap] [mac-address] [media-player] [phone] [router] [switch]	<p>device—Sets one or more of these devices as an event trigger:</p> <ul style="list-style-type: none"> (Optional) access-point—Autonomous access point (Optional) ip-camera—Cisco IP video surveillance camera (Optional) lightweight-ap—Lightweight access point (Optional) mac-address—User-defined MAC address groups (Optional) media-player—Digital media player (Optional) phone—Cisco IP phone (Optional) router—Cisco router (Optional) switch—Cisco switch
trigger [last-resort]	<p>trigger—Sets a specific event trigger.</p> <ul style="list-style-type: none"> (Optional) last-resort—Last-resort trigger

Command Default

The switch uses the device type as the event trigger. If the switch cannot determine the device type, it uses MAC address groups, MAB messages, 802.1x authentication messages, and LLDP messages in random order.

Command Modes

Global configuration

Command History

Release	Modification
12.2(55)SE	This command was introduced on the Catalyst 3750-X, 3750-E, 3750, 3560-X, 3560-E, 3560, 2975, 2960, and 2918 switches.

Usage Guidelines

If you do not set event triggers, the switch uses the device type as the event trigger. If the switch cannot determine the device type, it uses MAC address groups, MAB messages, 802.1x authentication messages, and LLDP messages in random order.

To verify that a macro is applied to a switch, use the **show macro auto global** user EXEC command.

Examples

To set CDP messages, LLDP messages and MAC address groups as event triggers:

```
Switch# configure terminal
Enter configuration commands, one per line. End with CNTL/Z.
Switch(config)# macro auto global control detection cdp lldp mac-address
Switch(config)# end
```

To set autonomous access points, lightweight access points, and IP phones:

```
Switch# configure terminal
Enter configuration commands, one per line. End with CNTL/Z.
Switch(config)# macro auto global control device access-point lightweight-ap phone
Switch(config)# end
```

Related Commands

Command	Description
macro auto execute	Configures mapping from an event trigger to a built-in macro.
macro auto global processing	Enables Auto Smartports on a switch.
macro auto mac-address-group	Configures MAC address groups.
macro auto sticky	Configures macro persistence.
shell trigger	Creates event triggers.
show macro auto	Displays information about macros.
show shell	Displays information about event triggers and macros.

macro auto global processing

To enable Auto Smartports macros on the switch, use the **macro auto global processing** global configuration command. Use the **no** form of this command to disable the macros.

macro auto global processing

no macro auto global processing

Syntax Description This command has no arguments or keywords.

Command Default Auto Smartports is disabled.

Command Modes Global configuration

Command History	Release	Modification
	12.2(50)SE	This command was introduced on the Catalyst 3750-E, 3750, 3560-E, 3560, 2960, and 2918 switches.
	12.2(52)SE	The command changed from macro auto global processing [cdp-fallback] to macro auto global processing [fallback cdp] on Catalyst 3750-E, 3750, 3560-E, 3560, 2960, and 2918 switches. The command was introduced on Catalyst 2975 switches.
	12.2(53)SE2	This command was introduced on Catalyst 3750-X and 3560-X switches.
	12.2(58)SE	The fallback cdp keywords are no longer supported.

Usage Guidelines Use the **macro auto global processing** global configuration command to globally enable macros on the *switch*. To disable macros on a specific *port*, use the **no macro auto processing** command in interface mode.

When using 802.1x or MAB authentication, you need to configure the RADIUS server to support the Cisco attribute-value pair **auto-smart-port=event trigger**. If authentication fails, the macro is not applied. If the 802.1x or MAB authentication fails on the interface, the switch does not use the fallback CDP event trigger.

When CDP-identified devices advertise multiple capabilities, the switch chooses a capability first by switch and then by router.

To verify that a macro is applied to an interface, use the **show macro auto interface** privileged EXEC command.

Examples This example shows how enable Auto Smartports on the switch and to disable the feature on a specific interface:

```
Switch(config)# macro auto global processing
Switch(config)# interface interface_id
```

■ macro auto global processing

```
Switch(config-if)# no macro auto processing
```

Related Commands

Command	Description
macro auto device	Configures macro default parameter values.
macro auto execute	Configures mapping from an event trigger to a built-in macro.
macro auto mac-address-group	Configures MAC address groups.
macro auto sticky	Configures macro persistence.
shell trigger	Creates event triggers.
show macro auto	Displays information about macros.
show shell	Displays information about event triggers and macros.

macro auto mac-address-group

To create an event trigger for devices that do not support Cisco Discovery Protocol (CDP) or Link Layer Discover Protocol (LLDP), use the **macro auto mac-address-group** global configuration command. Use the **no** form of this command to delete the group.

```
macro auto mac-address-group name [mac-address list list] | [oui [list list | range start-value size number]]
```

```
no macro auto mac-address-group name [mac-address list list] | [oui [list list | range start-value size number]]
```

Syntax Description

<i>name</i>	Specifies the group name.
oui	(Optional) Specifies an operationally unique identifier (OUI) list or range . <ul style="list-style-type: none"> list—Enter an OUI list in hexadecimal format separated by spaces. range—Enter the starting OUI hexadecimal value (<i>start-value</i>). size—Enter the length of the range (<i>number</i>) from 1 to 5 to create a list of sequential addresses.
mac-address list <i>list</i>	(Optional) Configures a list of MAC addresses separated by a space.

Command Default

No groups are defined.

Command Modes

Group configuration

Command History

Release	Modification
12.2(52)SE	This command was introduced on the Catalyst 3750-E, 3750, 3560-E, 3560, 2975, 2960, and 2918 switches.
12.2(53)SE2	This command was introduced on the Catalyst 3750-X and 3560-X switches.

Usage Guidelines

Use the **macro auto mac-address-group** global configuration command to create an event trigger for devices that do not support CDP or LLDP. Use the MAC address group as a trigger to map to a built-in or user-defined macro by using the **macro auto execute** global configuration command. At link-up the switch detects the device type and applies the specified macro.

The switch supports up to ten MAC address groups. Each group can have up to 32 OUI and 32 MAC configured addresses.

Examples

This example shows how to create a MAC-address-group event trigger called *address_trigger* and how to verify your entries:

```
Switch# configure terminal
Enter configuration commands, one per line. End with CNTL/Z.
Switch(config)# macro auto address-group mac address_trigger
```

macro auto mac-address-group

```

Switch(config-addr-grp-mac)# mac-address list 2222.3333.3334 22.33.44 a.b.c
Switch(config-addr-grp-mac)# oui list 455555 233244
Switch(config-addr-grp-mac)# oui range 333333 size 2
Switch(config-addr-grp-mac)# exit
Switch(config)# end
Switch# show running configuration
!
!macro auto mac-address-group address_trigger
  oui list 333334
  oui list 333333
  oui list 233244
  oui list 455555
  mac-address list 000A.000B.000C
  mac-address list 0022.0033.0044
  mac-address list 2222.3333.3334
!

<output truncated>

```

Related Commands

Command	Description
macro auto device	Configures macro default parameter values.
macro auto execute	Configures mapping from an event trigger to a built-in macro.
macro auto global processing	Enables Auto Smartports on a switch.
macro auto sticky	Configures macro persistence.
shell trigger	Creates event triggers.
show macro auto	Displays information about macros.
show shell	Displays information about event triggers and macros.

macro auto monitor

To enable the device classifier, use the **macro auto monitor** global configuration command. Use the **no** form of this command to disable the device classifier.

macro auto monitor

no macro auto monitor

Syntax Description This command has no arguments or keywords.

Command Default Device classifier is enabled.

Command Modes Global configuration

Command History	Release	Modification
	15.0(1)SE	This command was introduced on the Catalyst 3750-E, 3750-X, 3750, 3560-E, 3560-X, 3560, 2960, 2960-S, and 2360 switches.

Usage Guidelines Use the **no macro auto monitor** global configuration command to disable the device classifier. You cannot disable the device classifier while it is being used by features such as ASP.

Examples This example shows how to enable the ASP device classifier on a switch:

```
Switch# configure terminal
Enter configuration commands, one per line. End with CNTL/Z.
Switch(config)# macro auto monitor
Switch(config)# end
```

Related Commands	Command	Description
	show macro auto monitor clients	Displays the clients using the device classifier facility on the switch.
	show macro auto monitor device	Displays the devices connected to a switch, along with their properties and classifications.
	show macro auto monitor type	Displays all the device types known to the device classification agent.
	show shell	Displays information about event triggers and macros.

macro auto processing

To enable Auto Smartports macros on an interface, use the **macro auto processing** interface configuration command. Use the **no** form of this command to disable the macros.

macro auto processing

no macro auto processing

Syntax Description This command has no arguments or keywords.

Command Default Auto Smartports is disabled.

Command Modes Interface configuration

Command History

Release	Modification
12.2(50)SE	This command was introduced on the Catalyst 3750-E, 3750, 3560-E, 3560, 2960, and 2918 switches.
12.2(52)SE	The command changed from macro auto global processing [cdp-fallback] to macro auto processing [fallback cdp] on Catalyst 3750-E, 3750, 3560-E, 3560, 2960, and 2918 switches. The command was introduced on Catalyst 2975 switches.
12.2(53)SE2	This command was introduced on Catalyst 3750-X and 3560-X switches.
12.2(58)SE	The fallback cdp keywords are no longer supported.

Usage Guidelines

Use the **macro auto processing** interface configuration command to enable macros on a specific interface. To disable macros on a specific interface, use the **no macro auto processing** interface configuration command.

A port cannot be a member of an EtherChannel when you apply Auto Smartports macros. If you use EtherChannels, disable Auto Smartports on the EtherChannel interface by using the **no macro auto processing** interface configuration command. The EtherChannel interface applies the configuration to the member interfaces.

To verify that a macro is applied to an interface, use the **show macro auto interface** privileged EXEC command.

Examples

This example shows how to enable Auto Smartports on the switch and to disable the feature on a specific interface:

```
Switch(config)# interface gigabitethernet 0/1
Switch(config-if)# no macro auto processing
Switch(config-if)# exit
Switch(config)# macro auto global processing
```

Related Commands

Command	Description
macro auto device	Configures macro default parameter values.
macro auto execute	Configures mapping from an event trigger to a built-in macro.
macro auto mac-address-group	Configures MAC address groups.
macro auto sticky	Configures macro persistence.
shell trigger	Creates event triggers.
show macro auto	Displays information about macros.
show shell	Displays information about event triggers and macros.

macro auto sticky

To configure macros to remain active after a link-down event, referred to as *macro persistence*, use the **macro auto sticky** global configuration command. Use the **no** form of this command to disable the macro persistence.

macro auto sticky

no macro auto sticky

Syntax Description This command has no arguments or keywords.

Command Default Macro persistence is disabled.

Command Modes Global configuration

Command History	Release	Modification
	12.2(52)SE	This command was introduced on the Catalyst 3750-E, 3750, 3560-E, 3560, 2975, 2960, and 2918 switches.
	12.2(53)SE2	This command was introduced on the Catalyst 3750-X and 3560-X switches.

Usage Guidelines Use the **macro auto sticky** global configuration command so that macros remain active after a link-down event.

Examples This example shows how to enable macro persistence on an interface:

```
Switch# configure terminal
Enter configuration commands, one per line. End with CNTL/Z.
Switch(config)# interface gigabitethernet 2/0/1
Switch(config-if)# macro auto port sticky
Switch(config-if)# exit
Switch(config)# end
```

Related Commands	Command	Description
	macro auto device	Configures macro default parameter values.
	macro auto execute	Configures mapping from an event trigger to a built-in macro.
	macro auto global processing	Enables Auto Smartports on a switch.
	macro auto mac-address-group	Configures MAC address groups.
	shell trigger	Creates event triggers.

Command	Description
show macro auto	Displays information about macros.
show shell	Displays information about event triggers and macros.

macro auto trigger

To enter the configure-macro-trigger mode and define a trigger for a device that has no built-in trigger and associate the trigger with a device or profile, use the **macro auto trigger** global configuration command. To remove the user-defined trigger, use the **no** form of this command.

```
macro auto trigger trigger_name [device | exit | no | profile]
```

```
no macro auto trigger trigger_name [device | exit | no | profile]
```

Syntax Description

<i>trigger_name</i>	Specifies a trigger to be associated with the device type or profile name.
device	Specifies a device name to map to the named trigger.
exit	Exits device group configuration mode.
no	Removes any configured device.
profile	Specifies a profile name to map to the named trigger.

Command Default

No user-defined triggers are configured.

Command Modes

Global configuration

Command History

Release	Modification
15.0(1)SE	This command was introduced on the Catalyst 3750-E, 3750-X, 3750, 3560-E, 3560-X, 3560, 2960, 2960-S, 2360, and 2918 switches.

Usage Guidelines

If a device is classified by the Device Classifier, but does not have a built-in trigger defined, use the **macro auto trigger** global configuration command to define a trigger based on a device name or a profile name. After you enter the command, the switch is in the configure-macro-trigger mode and the **device**, **exit**, **no**, and **profile** keywords are visible. In this mode, you can provide a device name or a profile name to map to the trigger. It is not necessary to map the trigger to both a device name and a profile name. If you map the trigger to both names, the trigger-to-profile name mapping has preference for macro application.

You must use this command to configure a trigger when you configure a user-defined macro. The trigger name is required for the custom macro configuration.

Only the full *profile_name* and *device_name* string match is supported in Cisco IOS Release 15.0(1)SE. After the device is profiled, you must add the complete string to the device-group database.

Examples

This example shows how to configure a user-defined trigger for a profile called DMP_EVENTmediaplayer for use with a media player that has no built-in trigger:

```
Switch# configure terminal
Enter configuration commands, one per line. End with CNTL/Z.
Switch(config)# macro auto trigger DMP
```

```
Switch(config-macro-trigger)# profile mediaplayer-DMP
Switch(config-macro-trigger)# exit
Switch(config)# end
```

Related Commands

Command	Description
macro auto device	Configures macro default parameter values.
macro auto execute	Configures mapping from an event trigger to a built-in macro.
macro auto global processing	Enables Auto Smartports on a switch.
macro auto mac-address-group	Configures MAC address groups.
shell trigger	Creates event triggers.
show macro auto	Displays information about macros.
show macro auto monitor device	Displays the devices connected to a switch, along with their properties and classifications.
show macro auto monitor type	Displays all the device types known to the device classification agent.
show shell	Displays information about event triggers and macros.

macro description

To enter a description about which macros are applied to an interface, use the **macro description** interface configuration command. Use the **no** form of this command to remove the description. This command is mandatory for Auto Smartports to work.

macro description *text*

no macro description *text*

Syntax Description

description *text* Enters a description about the macros that are applied to the specified interface.

Command Default

This command has no default setting.

Command Modes

Interface configuration

Command History

Release	Modification
12.1(19)EA1	This command was introduced on the Catalyst 3750 and 3560 switches.
12.2(25)FX	This command was introduced on the Catalyst 2960 switches.
12.2(44)SE	This command was introduced on the Catalyst 2918 switches.
12.2(46)EX	This command was introduced on the Catalyst 2975 switches.
12.2(35)SE2	This command was introduced on the Catalyst 3750-E and 3560-E switches.
12.2(53)SE2	This command was introduced on the Catalyst 3750-X and 3560-X switches.

Usage Guidelines

Use the **description** keyword to associate comment text or the macro name with an interface. When multiple macros are applied on a single interface, the description text is from the last applied macro. You can verify your settings by entering the **show parser macro description** privileged EXEC command.

Examples

This example shows how to add a description to an interface:

```
Switch(config-if)# macro description duplex settings
```

Related Commands

Command	Description
macro apply	Applies a macro on an interface.
macro global	Applies a macro on a switch or applies and traces a macro on a switch
macro global description	Adds a description about the macros that are applied to the switch.
macro trace	Applies and traces a macro on an interface.
show parser macro	Displays the macro definition for all macros or for the specified macro.

macro global

To apply a macro to a switch or to apply and debug a macro on a switch, use the **macro global** global configuration command.

```
macro global {apply | trace} macro-name [parameter {value}] [parameter {value}]
[parameter {value}]
```

Syntax Description

apply	Applies a macro to the switch.
trace	Applies a macro to a switch and debugs the macro.
<i>macro-name</i>	Specifies the name of the macro.
parameter value	(Optional) Specifies unique parameter values that are specific to the switch. You can enter up to three keyword-value pairs. Parameter keyword matching is case sensitive. All matching occurrences of the keyword are replaced with the corresponding value.

Command Default

This command has no default setting.

Command Modes

Global configuration

Command History

Release	Modification
12.2(20)SE	This command was introduced on the Catalyst 3750 and 3560 switches.
12.2(25)FX	This command was introduced on the Catalyst 2960 switches.
12.2(44)SE	This command was introduced on the Catalyst 2918 switches.
12.2(46)EX	This command was introduced on the Catalyst 2975 switches.
12.2(35)SE2	This command was introduced on the Catalyst 3750-E and 3560-E switches.
12.2(53)SE2	This command was introduced on the Catalyst 3750-X and 3560-X switches.

Usage Guidelines

Use the **macro global apply** *macro-name* global configuration command to apply the macro to an interface.

Use the **macro global trace** *macro-name* global configuration command to apply and then debug the macro to find any syntax or configuration errors.

If a command fails when you apply a macro because of a syntax error or a configuration error, the macro continues to apply the remaining commands to the switch.

When creating a macro that requires the assignment of unique values, use the **parameter value** keywords to designate values specific to the switch.

Keyword matching is case sensitive. All matching occurrences of the keyword are replaced with the corresponding value. Any full match of a keyword, even if it is part of a larger string, is considered a match and is replaced by the corresponding value.

Some macros might contain keywords that require a parameter value. You can use the **macro global apply macro-name ?** command to display a list of any required values in the macro. If you apply a macro without entering the keyword values, the commands are invalid and are not applied.

There are Cisco-default Smartports macros embedded in the switch software. You can display these macros and the commands they contain by using the **show parser macro** user EXEC command.

Follow these guidelines when you apply a Cisco-default Smartports macro on a switch:

- Display all macros on the switch by using the **show parser macro** user EXEC command. Display the contents of a specific macro by using the **show parser macro name macro-name** user EXEC command.
- Keywords that begin with \$ mean that a unique parameter value is required. Append the Cisco-default macro with the required values by using the **parameter value** keywords.

The Cisco-default macros use the \$ character to help identify required keywords. There is no restriction on using the \$ character to define keywords when you create a macro.

When you apply a macro to a switch, the macro name is automatically added to the switch. You can display the applied commands and macro names by using the **show running-config** user EXEC command.

You can delete a global macro-applied configuration on a switch only by entering the **no** version of each command in the macro.

Examples

After you have created a new macro by using the **macro auto execute** global configuration command, you can apply it to a switch. This example shows how to see the **snmp** macro, how to apply the macro, set the hostname to test-server, and set the IP precedence value to 7:

```
Switch# show parser macro name snmp
Macro name : snmp
Macro type : customizable

#enable port security, linkup, and linkdown traps
snmp-server enable traps port-security
snmp-server enable traps linkup
snmp-server enable traps linkdown
#set snmp-server host
snmp-server host ADDRESS
#set SNMP trap notifications precedence
snmp-server ip precedence VALUE

-----
Switch(config)# macro global apply snmp ADDRESS test-server VALUE 7
```

To debug a macro, use the **macro global trace** global configuration command to find any syntax or configuration errors in the macro when you apply it to a switch. In this example, the **ADDRESS** parameter value was not entered, the **snmp-server host** command failed, and the remainder of the macro is applied to the switch:

```
Switch(config)# macro global trace snmp VALUE 7
Applying command...'snmp-server enable traps port-security'
Applying command...'snmp-server enable traps linkup'
Applying command...'snmp-server enable traps linkdown'
Applying command...'snmp-server host'
%Error Unknown error.
Applying command...'snmp-server ip precedence 7'
```

Related Commands

Command	Description
macro apply	Applies a macro on an interface.
macro description	Adds a description about the macros that are applied to an interface.
macro global description	Adds a description about the macros that are applied to the switch.
macro trace	Applies and traces a macro on an interface.
show parser macro	Displays the macro definition for all macros or for the specified macro.

macro global description

To enter a description about the macros that are applied to a switch, use the **macro global description** global configuration command. Use the **no** form of this command to remove the description.

macro global description *text*

no macro global description *text*

Syntax Description

description *text* Enters a description about the macros that are applied to the switch.

Command Default

This command has no default setting.

Command Modes

Global configuration

Command History

Release	Modification
12.2(20)SE	This command was introduced on the Catalyst 3750 and 3560 switches.
12.2(25)FX	This command was introduced on the Catalyst 2960 switches.
12.2(44)SE	This command was introduced on the Catalyst 2918 switches.
12.2(46)EX	This command was introduced on the Catalyst 2975 switches.
12.2(35)SE2	This command was introduced on the Catalyst 3750-E and 3560-E switches.
12.2(53)SE2	This command was introduced on the Catalyst 3750-X and 3560-X switches.

Usage Guidelines

Use the **description** keyword to associate comment text or the macro name with a switch. When multiple macros are applied on a switch, the description text is from the last applied macro.

You can verify your settings by entering the **show parser macro description** privileged EXEC command.

Examples

This example shows how to add a description to a switch:

```
Switch(config)# macro global description udlld aggressive mode enabled
```

Related Commands

Command	Description
macro apply	Applies a macro on an interface.
macro description	Adds a description about the macros that are applied to an interface.
macro global	Applies a macro on a switch or applies and traces a macro on a switch.
macro trace	Applies and debugs a macro on an interface.
show parser macro	Displays the macro definition for all macros or for the specified macro.

shell trigger

To create an event trigger, use the **shell trigger** global configuration command. Use the **no** form of this command to delete the trigger.

shell trigger *identifier* *description*

no shell trigger *identifier* *description*

Syntax Description	<i>identifier</i>	Specifies the event trigger identifier. The identifier should have no spaces or hyphens between words.
	<i>description</i>	Specifies the event trigger description text.

Command Default	System-defined event triggers: <ul style="list-style-type: none"> • CISCO_DMP_EVENT • CISCO_IPVSC_AUTO_EVENT • CISCO_PHONE_EVENT • CISCO_SWITCH_EVENT • CISCO_ROUTER_EVENT • CISCO_WIRELESS_AP_EVENT • CISCO_WIRELESS_LIGHTWEIGHT_AP_EVENT
-----------------	---

Command Modes	Global configuration
---------------	----------------------

Command History	Release	Modification
	12.2(50)SE	This command was introduced on the Catalyst 3750-E, 3750, 3560-E, 3560, and 2960 switches.
	12.2(52)SE	This command was introduced on the Catalyst 2975 switches.
	12.2(53)SE2	This command was introduced on the Catalyst 3750-X and 3560-X switches.

Usage Guidelines	Use this command to create user-defined event triggers for use with the macro auto device and the macro auto execute global configuration commands. To support dynamic device discovery when using IEEE 802.1x authentication, you need to configure the RADIUS authentication server to support the Cisco attribute-value pair: auto-smart-port= <i>event trigger</i> .
------------------	--

Examples

This example shows how to create a user-defined event trigger called RADIUS_MAB_EVENT:

```
Switch# configure terminal
Enter configuration commands, one per line. End with CNTL/Z.
Switch(config)# shell trigger RADIUS_MAB_EVENT MAC_AuthBypass Event
Switch(config)# end
```

Related Commands

Command	Description
macro auto device	Configures macro default parameter values.
macro auto execute	Configures mapping from an event trigger to a built-in macro.
macro auto global processing	Enables Auto Smartports on a switch.
macro auto mac-address-group	Configures MAC address groups.
macro auto sticky	Configures macro persistence.
shell trigger	Creates event triggers.
show macro auto	Displays information about macros.
show shell	Displays information about event triggers and macros.

show macro auto

To display Auto Smartports macro information, use the **show macro auto** user EXEC command.

```
show macro auto { address-group [address-group-name] | device [access-point] [ip-camera]
[lightweight-ap] [media-player] [phone] [router] [switch] | global [event_trigger] | interface
[interface_id]}
```

Syntax Description	
address-group [<i>address-group-name</i>]	Displays address-group information. (Optional) <i>address-group-name</i> —Displays information for the specified address group.
device [access-point] [ip-camera] [lightweight-ap] [media-player] [phone] [router] [switch]	Displays device information about one or more devices. <ul style="list-style-type: none"> • (Optional) access-point—Autonomous access point • (Optional) ip-camera—Cisco IP video surveillance camera • (Optional) lightweight-ap—Lightweight access point • (Optional) media-player—Digital media player • (Optional) phone—Cisco IP phone • (Optional) router—Cisco router • (Optional) switch—Cisco switch
global [<i>event_trigger</i>]	Displays Auto Smartports information about the switch. (Optional) <i>event_trigger</i> —Displays information about the specified event trigger.
interface [<i>interface_id</i>]	Displays interface status. (Optional) <i>interface_id</i> —Displays information about the specified interface.

Command Modes	
	User EXEC Privileged EXEC

Command History	Release	Modification
	12.2(52)SE	This command was introduced on the Catalyst 3750-E, 3750, 3560-E, 3560, 2975, 2960, and 2918 switches.
	12.2(53)SE2	This command was introduced on the Catalyst 3750-X and 3560-X switches.
	12.2(55)SE	The global keyword was added on the Catalyst 3750-X, 3750-E, 3750, 3560-X, 3560-E, 3560, 2975, 2960, and 2918 switches. The address-group , device , event manager , and interface keywords are not optional.

Usage Guidelines

Use this command to display the Auto Smartports information for the switch. Use the **show macro auto device** privileged EXEC command to display the configurable parameters for a device.

Examples

This example shows how to use the **show macro auto device** privileged EXEC command to view the configuration on the switch:

```
Switch# show macro auto device
Device:lightweight-ap
Default Macro:CISCO_LWAP_AUTO_SMARTPORT
Current Macro:CISCO_LWAP_AUTO_SMARTPORT
Configurable Parameters:ACCESS_VLAN
Defaults Parameters:ACCESS_VLAN=1
Current Parameters:ACCESS_VLAN=1

Device:access-point
Default Macro:CISCO_AP_AUTO_SMARTPORT
Current Macro:CISCO_AP_AUTO_SMARTPORT
Configurable Parameters:NATIVE_VLAN
Defaults Parameters:NATIVE_VLAN=1
Current Parameters:NATIVE_VLAN=1

Device:phone
Default Macro:CISCO_PHONE_AUTO_SMARTPORT
Current Macro:CISCO_PHONE_AUTO_SMARTPORT
Configurable Parameters:ACCESS_VLAN VOICE_VLAN
Defaults Parameters:ACCESS_VLAN=1 VOICE_VLAN=2
Current Parameters:ACCESS_VLAN=1 VOICE_VLAN=2

Device:router
Default Macro:CISCO_ROUTER_AUTO_SMARTPORT
Current Macro:CISCO_ROUTER_AUTO_SMARTPORT
Configurable Parameters:NATIVE_VLAN
Defaults Parameters:NATIVE_VLAN=1
Current Parameters:NATIVE_VLAN=1

Device:switch
Default Macro:CISCO_SWITCH_AUTO_SMARTPORT
Current Macro:CISCO_SWITCH_AUTO_SMARTPORT
Configurable Parameters:NATIVE_VLAN
Defaults Parameters:NATIVE_VLAN=1
Current Parameters:NATIVE_VLAN=1

Device:ip-camera
Default Macro:CISCO_IP_CAMERA_AUTO_SMARTPORT
Current Macro:CISCO_IP_CAMERA_AUTO_SMARTPORT
Configurable Parameters:ACCESS_VLAN
Defaults Parameters:ACCESS_VLAN=1
Current Parameters:ACCESS_VLAN=1

Device:media-player
Default Macro:CISCO_DMP_AUTO_SMARTPORT
Current Macro:CISCO_DMP_AUTO_SMARTPORT
Configurable Parameters:ACCESS_VLAN
Defaults Parameters:ACCESS_VLAN=1
Current Parameters:ACCESS_VLAN=1
```

This example shows how to use the **show macro auto address-group** *name* privileged EXEC command to view the TEST3 address group configuration on the switch:

```
Switch# show macro auto address-group TEST3
MAC Address Group Configuration:
```

Group Name	OUI	MAC ADDRESS
TEST3	2233.33	0022.0022.0022
	2233.34	

Related Commands

Command	Description
macro auto device	Configures macro default parameter values.
macro auto execute	Configures mapping from an event trigger to a built-in macro.
macro auto global processing	Enables Auto Smartports on a switch.
macro auto mac-address-group	Configures MAC address groups.
macro auto sticky	Configures macro persistence.
shell trigger	Creates event triggers.
show shell	Displays information about event triggers and macros.

show macro auto monitor clients

To display the clients using the device classifier facility on the switch, use the **show macro auto monitor clients** user EXEC command.

show macro auto monitor clients

Syntax Description This command has no arguments or keywords.

Command Default User EXEC
Privileged EXEC

Command History	Release	Modification
	15.0(1)SE	This command was introduced on the Catalyst 3750-E, 3750-X, 3750, 3560-E, 3560-X, 3560, 2960, 2960-S, and 2360 switches.

Usage Guidelines Device classifier (DC) is enabled by default when you enable a client application (for example, Auto Smartports) that uses its functionality. Use the **show macro auto monitor clients** command to display the clients that are using the DC feature on the switch.

As long as any clients are using the DC, you cannot disable it by using the **no macro auto monitor** command. If you attempt to disable the DC while a client is using it, an error message appears.

Examples This example shows how to use the **show macro auto monitor clients** privileged EXEC command to view the clients using the DC on the switch:

```
Switch# show macro auto monitor clients
Client Name
=====
Auto Smart Ports
```

This example shows the error message that appears when you attempt to disable DC while a client is using it:

```
Switch(config)# no macro auto monitor
These subsystems should be disabled before disabling Device classifier
Auto Smart Ports

% Error - device classifier is not disabled
```

Related Commands	Command	Description
	macro auto device	Configures macro default parameter values.
	macro auto execute	Configures mapping from an event trigger to a built-in macro.
	macro auto global processing	Enables Auto Smartports on a switch.

Command	Description
macro auto mac-address-group	Configures MAC address groups.
macro auto sticky	Configures macro persistence.
shell trigger	Creates event triggers.
show macro auto monitor type	Displays all the device types recognized by the device classifier.
show shell	Displays information about event triggers and macros.

show macro auto monitor device

To display the devices connected to a switch and their associated properties, use the **show macro auto monitor device** user EXEC command.

```
show macro auto monitor device [detail | filter string | interface interface_id | mac-address
                               mac_address]
```

Syntax Description	Parameter	Description
	detail	Displays detailed device classifier information.
	filter <i>string</i>	Displays information for devices that match the filter.
	interface <i>interface_id</i>	Displays information about devices attached to the specified interface.
	mac <i>mac_address</i>	Displays device information for the specified endpoint.

Command Modes	Mode
	User EXEC
	Privileged EXEC

Command History	Release	Modification
	15.0(1)SE	This command was introduced on the Catalyst 3750-E, 3750-X, 3750, 3560-E, 3560-X, 3560, 2960, 2960-S, and 2360 switches.

Usage Guidelines	Guidelines
	Use this command to display the devices connected to a switch. Use the show macro auto device privileged EXEC command to display the configurable parameters for a device.

Examples	Description
	This example shows how to use the show macro auto monitor device privileged EXEC command with no optional keywords to view the devices connected to the switch:

```
Switch# show macro auto monitor device
MAC_Address      Port_Id      Profile Name
=====
000a.b8c6.1e07   Gi1/0/2     Cisco-Device
001f.9e90.1250   Gi1/0/4     Cisco-AP-Aironet-1130
=====
```

This example shows how to use the **show macro auto monitor device** privileged EXEC command with the optional **mac-address** keyword to view summary information about the connected device with the specified MAC address:

```
Switch# show macro auto monitor device mac-address 001f.9e90.1250
MAC_Address      Port_Id      Profile Name
=====
001f.9e90.1250   Gi1/0/4     Cisco-AP-Aironet-1130
=====
```


This example shows how to use the **show macro auto monitor device** privileged EXEC command with the optional **mac-address** and **detail** keywords to view detailed information about the connected device with the specified MAC address:

```
Switch# show macro auto monitor device mac-address 001f.9e90.1250 detail
MAC_Address      Port_Id      Certainty Parent  ProfileType Profile Name
Device_Name
=====
001f.9e90.1250   Gi1/0/4      40         2         Built-in     Cisco-AP-Aironet-1130
cisco AIR-LAP1131AG-E-K9
=====
```

This example shows how to use the **show macro auto monitor device** privileged EXEC command with the optional **interface** keyword to view summary information about the device connected to the specified interface:

```
Switch# show macro auto monitor device interface gi 1/0/2
MAC_Address      Port_Id      Profile Name
=====
000a.b8c6.1e07   Gi1/0/2      Cisco-Device
=====
```

This example shows how to use the **show macro auto monitor device** privileged EXEC command with the optional **interface** and **detail** keywords to view detailed information about the device connected to the specified interface:

```
Switch# show macro auto monitor device interface gi 1/0/2 detail
MAC_Address      Port_Id      Certainty Parent  ProfileType Profile Name
Device_Name
=====
000a.b8c6.1e07   Gi1/0/2      10         0         Default      Cisco-Device      cisco
WS-C2960-48TT-L
=====
```

Related Commands

Command	Description
macro auto device	Configures macro default parameter values.
macro auto execute	Configures mapping from an event trigger to a built-in macro.
macro auto global processing	Enables Auto Smartports on a switch.
macro auto mac-address-group	Configures MAC address groups.
macro auto sticky	Configures macro persistence.
shell trigger	Creates event triggers.
show macro auto monitor type	Displays all the device types recognized by the device classifier.
show shell	Displays information about event triggers and macros.

show macro auto monitor type

To display all the device types recognized by the device classifier, use the **show macro auto monitor type** user EXEC command.

show macro auto monitor type [**table** [*built-in* | *default*] | **string** *filter_string*]

Syntax Description	table	Displays device classification in a table.
	<i>built-in</i>	Displays device classification information from the built-in device table.
	<i>default</i>	Displays device classification information from the default device table.
	filter <i>string</i>	Displays information for devices that match the filter.

Command Modes	User EXEC Privileged EXEC
---------------	------------------------------

Command History	Release	Modification
	15.0(1)SE	This command was introduced on the Catalyst 3750-E, 3750-X, 3750, 3560-E, 3560-X, 3560, 2960, 2960-S, and 2360 switches.

Usage Guidelines	This command displays all the device types recognized by the device classification engine. The number of available device types is the number of profiles stored on the switch. Because the number of profiles can be very large, you can use the filter keyword to limit the command output.
------------------	--

Examples	This example shows how to use the show macro auto monitor type privileged EXEC command with no optional keywords to view the devices recognized by the device classifier:
----------	--

```
Switch# show macro auto monitor type table
  Valid      Type      Profile Name      min Conf  ID
  =====  =====  =====
  Valid      Default   Apple-Device      10        0
  Valid      Default   Aruba-Device      10        1
  Valid      Default   Avaya-Device      10        2
  Valid      Default   Avaya-IP-Phone    20        3
  Valid      Default   BlackBerry         20        4
  Valid      Default   Cisco-Device      10        5
  Valid      Default   Cisco-IP-Phone    20        6
  Valid      Default   Cisco-IP-Phone-7902  70        7
  Valid      Default   Cisco-IP-Phone-7905  70        8
  Valid      Default   Cisco-IP-Phone-7906  70        9
  Valid      Default   Cisco-IP-Phone-7910  70       10
  Valid      Default   Cisco-IP-Phone-7911  70       11
  Valid      Default   Cisco-IP-Phone-7912  70       12
  Valid      Default   Cisco-IP-Phone-7940  70       13
  Valid      Default   Cisco-IP-Phone-7941  70       14
  Valid      Default   Cisco-IP-Phone-7942  70       15
```

Valid	Default	Cisco-IP-Phone-7945	70	16
Valid	Default	Cisco-IP-Phone-7945G	70	17
Valid	Default	Cisco-IP-Phone-7960	70	18
Valid	Default	Cisco-IP-Phone-7961	70	19
Valid	Default	Cisco-IP-Phone-7962	70	20
Valid	Default	Cisco-IP-Phone-7965	70	21
Valid	Default	Cisco-IP-Phone-7970	70	22
Valid	Default	Cisco-IP-Phone-7971	70	23
Valid	Default	Cisco-IP-Phone-7975	70	24
Valid	Default	Cisco-IP-Phone-7985	70	25
Valid	Default	Cisco-IP-Phone-9971	70	26
Valid	Default	Cisco-WLC-2100-Series	40	27
Valid	Default	DLink-Device	10	28
Valid	Default	Enterasys-Device	10	29
Valid	Default	HP-Device	10	30
Valid	Default	HP-JetDirect-Printer	30	31
Valid	Default	Lexmark-Device	10	32
Valid	Default	Lexmark-Printer-E260dn	30	33
Valid	Default	Microsoft-Device	10	34
Valid	Default	Netgear-Device	10	35
Valid	Default	NintendoWII	10	36
Valid	Default	Nortel-Device	10	37
Valid	Default	Nortel-IP-Phone-2000-Series	20	38
Valid	Default	SonyPS3	10	39
Valid	Default	XBOX360	20	40
Valid	Default	Xerox-Device	10	41
Valid	Default	Xerox-Printer-Phaser3250	30	42
Valid	Default	Aruba-AP	20	43
Valid	Default	Cisco-Access-Point	10	44
Valid	Default	Cisco-IP-Conference-Station-7935	70	45
Valid	Default	Cisco-IP-Conference-Station-7936	70	46
Valid	Default	Cisco-IP-Conference-Station-7937	70	47
Valid	Default	DLink-DAP-1522	20	48
Valid	Default	Cisco-AP-Aironet-1130	30	49
Valid	Default	Cisco-AP-Aironet-1240	30	50
Valid	Default	Cisco-AP-Aironet-1250	30	51
Valid	Default	Cisco-AIR-LAP	25	52
Valid	Default	Cisco-AIR-LAP-1130	30	53
Valid	Default	Cisco-AIR-LAP-1240	50	54
Valid	Default	Cisco-AIR-LAP-1250	50	55
Valid	Default	Cisco-AIR-AP	25	56
Valid	Default	Cisco-AIR-AP-1130	30	57
Valid	Default	Cisco-AIR-AP-1240	50	58
Valid	Default	Cisco-AIR-AP-1250	50	59
Invalid	Default	Sun-Workstation	10	60
Valid	Default	Linksys-Device	20	61
Valid	Default	LinksysWAP54G-Device	30	62
Valid	Default	HTC-Device	10	63
Valid	Default	MotorolaMobile-Device	10	64
Valid	Default	VMWare-Device	10	65
Valid	Default	ISE-Appliance	10	66
Valid	Built-in	Cisco-Device	10	0
Valid	Built-in	Cisco-Router	10	1
Valid	Built-in	Router	10	2
Valid	Built-in	Cisco-IP-Camera	10	3
Valid	Built-in	Cisco-IP-Camera-2xxx	30	4
Valid	Built-in	Cisco-IP-Camera-2421	50	5
Valid	Built-in	Cisco-IP-Camera-2500	50	6
Valid	Built-in	Cisco-IP-Camera-2520	50	7
Valid	Built-in	Cisco-IP-Camera-2530	50	8
Valid	Built-in	Cisco-IP-Camera-4xxx	50	9
Valid	Built-in	Cisco-Transparent-Bridge	8	10
Valid	Built-in	Transparent-Bridge	8	11
Valid	Built-in	Cisco-Source-Bridge	10	12

■ show macro auto monitor type

Valid	Built-in	Cisco-Switch	10	13
Valid	Built-in	Cisco-IP-Phone	20	14
Valid	Built-in	IP-Phone	20	15
Valid	Built-in	Cisco-DMP	10	16
Valid	Built-in	Cisco-DMP-4305G	70	17
Valid	Built-in	Cisco-DMP-4310G	70	18
Valid	Built-in	Cisco-DMP-4400G	70	19
Valid	Built-in	Cisco-WLC-2100-Series	40	20
Valid	Built-in	Cisco-Access-Point	10	21
Valid	Built-in	Cisco-AIR-LAP	30	22
Valid	Built-in	Cisco-AIR-AP	30	23
Valid	Built-in	Linksys-Device	20	24

Related Commands

Command	Description
macro auto device	Configures macro default parameter values.
macro auto execute	Configures mapping from an event trigger to a built-in macro.
macro auto global processing	Enables Auto Smartports on a switch.
macro auto mac-address-group	Configures MAC address groups.
macro auto sticky	Configures macro persistence.
macro auto trigger	Specifies a trigger to be associated with the device type or profile name.
shell trigger	Creates event triggers.
show macro auto monitor device	Displays information about the devices connected to the switch.
show shell	Displays information about event triggers and macros.

show parser macro

To display the parameters for all configured macros or for one macro on the switch, use the **show parser macro** user EXEC command.

```
show parser macro [{brief | description [interface interface-id] | name macro-name}]
```

Syntax Description		
brief	(Optional)	Displays the name of each macro.
description [interface <i>interface-id</i>]	(Optional)	Displays all macro descriptions or the description of a specific interface.
name <i>macro-name</i>	(Optional)	Displays information about a single macro identified by the macro name.

Command Modes	
	User EXEC Privileged EXEC

Command History	Release	Modification
	12.1(19)EA1	This command was introduced on the Catalyst 3750 and 3560 switches.
	12.2(25)FX	This command was introduced on the Catalyst 2960 switches.
	12.2(44)SE	This command was introduced on the Catalyst 2918 switches.
	12.2(46)EX	This command was introduced on the Catalyst 2975 switches.
	12.2(35)SE2	This command was introduced on the Catalyst 3750-E and 3560-E switches.
	12.2(53)SE2	This command was introduced on the Catalyst 3750-X and 3560-X switches.

Examples This is a partial output example from the **show parser macro** command. The output for the Cisco-default macros varies depending on the switch platform and the software image running on the switch:

```
Switch# show parser macro
Total number of macros = 6
-----
Macro name : cisco-global
Macro type : default global
# Enable dynamic port error recovery for link state
# failures
errdisable recovery cause link-flap
errdisable recovery interval 60

<output truncated>

-----
Macro name : cisco-desktop
Macro type : default interface
# macro keywords $AVID
# Basic interface - Enable data VLAN only
# Recommended value for access vlan (AVID) should not be 1
switchport access vlan $AVID
switchport mode access
```

<output truncated>

```
-----
Macro name : cisco-phone
Macro type : default interface
# Cisco IP phone + desktop template
# macro keywords $AVID $VVID
# VoIP enabled interface - Enable data VLAN
# and voice VLAN (VVID)
# Recommended value for access vlan (AVID) should not be 1
switchport access vlan $AVID
switchport mode access
```

<output truncated>

```
-----
Macro name : cisco-switch
Macro type : default interface
# macro keywords $NVID
# Access Uplink to Distribution
# Do not apply to EtherChannel/Port Group
# Define unique Native VLAN on trunk ports
# Recommended value for native vlan (NVID) should not be 1
switchport trunk native vlan $NVID
```

<output truncated>

```
-----
Macro name : cisco-router
Macro type : default interface
# macro keywords $NVID
# Access Uplink to Distribution
# Define unique Native VLAN on trunk ports
# Recommended value for native vlan (NVID) should not be 1
switchport trunk native vlan $NVID
```

<output truncated>

```
-----
Macro name : snmp
Macro type : customizable

#enable port security, linkup, and linkdown traps
snmp-server enable traps port-security
snmp-server enable traps linkup
snmp-server enable traps linkdown
#set snmp-server host
snmp-server host ADDRESS
#set SNMP trap notifications precedence
snmp-server ip precedence VALUE
```

This is an example of output from the **show parser macro name** command:

```
Switch# show parser macro name standard-switch10
Macro name : standard-switch10
Macro type : customizable
macro description standard-switch10
# Trust QoS settings on VOIP packets
auto qos voip trust
# Allow port channels to be automatically formed
channel-protocol pagp
```

This is an example of output from the **show parser macro brief** command:

```
Switch# show parser macro brief
default global      : cisco-global
default interface: cisco-desktop
default interface: cisco-phone
default interface: cisco-switch
default interface: cisco-router
customizable       : snmp
```

This is an example of output from the **show parser macro description** command:

```
Switch# show parser macro description
Global Macro(s): cisco-global
Interface      Macro Description(s)
-----
Gi1/0/1        standard-switch10
Gi1/0/2        this is test macro
-----
```

This is an example of output from the **show parser macro description interface** command:

```
Switch# show parser macro description interface gigabitethernet1/0/2
Interface      Macro Description
-----
Gi1/0/2        this is test macro
-----
```

Related Commands

Command	Description
macro apply	Applies a macro on an interface or applies and traces a macro on an interface.
macro description	Adds a description about the macros that are applied to an interface.
macro global	Applies a macro on a switch or applies and traces a macro on a switch.
macro global description	Adds a description about the macros that are applied to the switch.
show running-config	Displays the operating configuration.

show shell

To display shell information, use the **show shell** user EXEC command.

show shell [**environment** | **functions** [**brief** | *shell_function*] | **triggers**]

Syntax Description	environment	(Optional) Displays shell environment information.
	functions [brief <i>shell_function</i>]	(Optional) Displays macro information. <ul style="list-style-type: none"> • brief—Names of the shell functions. • <i>shell_function</i>—Name of a shell function.
	triggers	(Optional) Displays event trigger information.

Command Modes	User EXEC Privileged EXEC
---------------	------------------------------

Command History	Release	Modification
	12.2(50)SE	This command was introduced on the Catalyst 3750-E, 3750, 3560-E, 3560, 2960, and 2918 switches.
	12.2(52)SE	This command was introduced on the Catalyst 2975 switches.
	12.2(53)SE2	This command was introduced on the Catalyst 3750-X and 3560-X switches.

Usage Guidelines	Use this command to display the shell information for the switch. The show shell command is a feature at the Cisco IOS level. You may first have to enable Cisco IOS Shell by entering the terminal shell command before you can enter the show shell command. For more information, see the Cisco IOS Shell configuration guide on Cisco.com: http://www.cisco.com/en/US/docs/ios/netmgmt/configuration/guide/nm_ios_shell.pdf
------------------	---

Examples	This example shows how to use the show shell triggers privileged EXEC command to view the event triggers in the switch software:
----------	---

```
Switch# show shell triggers
User defined triggers
-----
Built-in triggers
-----
Trigger Id: CISCO_CUSTOM_EVENT
Trigger description: Custom macroevent to apply user defined configuration
Trigger environment: User can define the macro
Trigger mapping function: CISCO_CUSTOM_AUTOSMARTPORT

Trigger Id: CISCO_DMP_EVENT
Trigger description: Digital media-player device event to apply port configuration
Trigger environment: Parameters that can be set in the shell - $ACCESS_VLAN=(1)
The value in the parenthesis is a default value
Trigger mapping function: CISCO_DMP_AUTO_SMARTPORT
```



```
Trigger Id: CISCO_IPVSC_EVENT
Trigger description: IP-camera device event to apply port configuration
Trigger environment: Parameters that can be set in the shell - $ACCESS_VLAN=(1)
The value in parenthesis is a default value
Trigger mapping function: CISCO_IP_CAMERA_AUTO_SMARTPORT

Trigger Id: CISCO_LAST_RESORT_EVENT
Trigger description: Last resortevent to apply port configuration
Trigger environment: Parameters that can be set in the shell - $ACCESS_VLAN=(1)
The value in the parenthesis is a default value
Trigger mapping function: CISCO_LAST_RESORT_SMARTPORT

Trigger Id: CISCO_PHONE_EVENT
Trigger description: IP-phone device event to apply port configuration
Trigger environment: Parameters that can be set in the shell - $ACCESS_VLAN=(1)
and $VOICE_VLAN=(2), The value in the parenthesis is a default value
Trigger mapping function: CISCO_PHONE_AUTO_SMARTPORT

Trigger Id: CISCO_ROUTER_EVENT
Trigger description: Router device event to apply port configuration
Trigger environment: Parameters that can be set in the shell - $NATIVE_VLAN=(1)
The value in the parenthesis is a default value
Trigger mapping function: CISCO_ROUTER_AUTO_SMARTPORT

Trigger Id: CISCO_SWITCH_ETHERCHANNEL_CONFIG
Trigger description: etherchannel parameter
Trigger environment: $INTERFACE_LIST=(), $PORT-CHANNEL_ID=(),
                    $EC_MODE=(), $SEC_PROTOCOLTYPE=(),
                    PORT-CHANNEL_TYPE=()
Trigger mapping function: CISCO_ETHERCHANNEL_AUTOSMARTPORT

Trigger Id: CISCO_SWITCH_EVENT
Trigger description: Switch device event to apply port configuration
Trigger environment: Parameters that can be set in the shell - $NATIVE_VLAN=(1)
The value in the parenthesis is a default value
Trigger mapping function: CISCO_SWITCH_AUTO_SMARTPORT

Trigger Id: CISCO_WIRELESS_AP_EVENT
Trigger description: Autonomous ap device event to apply port configuration
Trigger environment: Parameters that can be set in the shell - $NATIVE_VLAN=(1)
The value in the parenthesis is a default value
Trigger mapping function: CISCO_AP_AUTO_SMARTPORT

Trigger Id: CISCO_WIRELESS_LIGHTWEIGHT_AP_EVENT
Trigger description: Lightweight-ap device event to apply port configuration
Trigger environment: Parameters that can be set in the shell - $ACCESS_VLAN=(1)
The value in the parenthesis is a default value
Trigger mapping function: CISCO_LWAP_AUTO_SMARTPORT

Trigger Id: word
Trigger description: word
Trigger environment:
Trigger mapping function:
```

This example shows how to use the **show shell functions** privileged EXEC command to view the built-in macros in the switch software:

```
Switch# show shell functions
#User defined functions:

#Built-in functions:
function CISCO_AP_AUTO_SMARTPORT () {
    if [[ $LINKUP -eq YES ]]; then
        conf t
            interface $INTERFACE
                macro description $TRIGGER
                switchport trunk encapsulation dot1q
                switchport trunk native vlan $NATIVE_VLAN
                switchport trunk allowed vlan ALL
                switchport mode trunk
                switchport nonegotiate
                auto qos voip trust
                mls qos trust cos
                if [[ $LIMIT -eq 0 ]]; then
                    default srr-queue bandwidth limit
                else
                    srr-queue bandwidth limit $LIMIT
                fi
                if [[ $SW_POE -eq YES ]]; then
                    if [[ $AP125X -eq AP125X ]]; then
                        macro description AP125X
                        macro auto port sticky
                        power inline port maximum 20000
                    fi
                fi
            exit
        end
    fi
    if [[ $LINKUP -eq NO ]]; then
        conf t
            interface $INTERFACE
                no macro description
                no switchport nonegotiate
                no switchport trunk native vlan $NATIVE_VLAN
                no switchport trunk allowed vlan ALL
                no auto qos voip trust
                no mls qos trust cos
                default srr-queue bandwidth limit
                if [[ $AUTH_ENABLED -eq NO ]]; then
                    no switchport mode
                    no switchport trunk encapsulation
                fi
                if [[ $STICKY -eq YES ]]; then
                    if [[ $SW_POE -eq YES ]]; then
                        if [[ $AP125X -eq AP125X ]]; then
                            no macro auto port sticky
                            no power inline port maximum
                        fi
                    fi
                fi
            exit
        end
    fi
}
<output truncated>
```

Related Commands	Command	Description
	macro auto device	Configures macro default parameter values.
	macro auto execute	Configures mapping from an event trigger to a built-in macro.
	macro auto global processing	Enables Auto Smartports on a switch.
	macro auto mac-address-group	Configures MAC address groups.
	macro auto sticky	Configures macro persistence.
	shell trigger	Creates event triggers.
	show macro auto	Displays information about macros.

■ show shell