



## INDEX

---

### A

aaa accounting dot1x command [1](#)  
aaa authentication dot1x command [3](#)  
aaa authorization network command [5, 16, 21, 23, 25, 27, 109, 423, 5, 35](#)  
AAA methods [3](#)  
abort command [757](#)  
access control entries  
    See ACEs  
access control lists  
    See ACLs  
access groups  
    IP [167](#)  
    MAC, displaying [532](#)  
access mode [710](#)  
access ports [710](#)  
ACEs [100, 358](#)  
ACLs  
    deny [98](#)  
    displaying [406](#)  
    for non-IP protocols [261](#)  
    IP [167](#)  
    on Layer 2 interfaces [167](#)  
    permit [356](#)  
address aliasing [337](#)  
aggregate-port learner [350](#)  
allowed VLANs [725](#)  
apply command [757](#)  
archive download-sw command [6](#)  
archive tar command [9](#)  
archive upload-sw command [12](#)  
arp access-list command [14](#)

authentication control-direction command [16](#)  
authentication event command [18](#)  
authentication failed VLAN  
    See dot1x auth-fail vlan  
authentication fallback command [21](#)  
authentication host-mode command [23](#)  
authentication open command [25](#)  
authentication order command [27](#)  
authentication periodic command [29](#)  
authentication port-control command [31](#)  
authentication priority command [33](#)  
authentication timer command [35](#)  
authentication violation command [37](#)  
auth-fail max-attempts  
    See dot1x auth-fail max-attempts  
auth-fail vlan  
    See dot1x auth-fail vlan  
auth open command [25](#)  
auth order command [27](#)  
authorization state of controlled port [126](#)  
auth timer command [35](#)  
autonegotiation of duplex mode [137](#)  
auto qos voip command [39](#)

---

### B

BackboneFast, for STP [645](#)  
backup interfaces  
    configuring [704](#)  
    displaying [473](#)  
boot (boot loader) command [2](#)  
boot config-file command [43](#)  
boot enable-break command [44](#)

boot helper command 45

boot helper-config file command 46

booting

- Cisco IOS image 49
- displaying environment variables 419
- interrupting 44
- manually 47

boot loader

- accessing 1
- booting
  - Cisco IOS image 2
  - helper image 45
- directories
  - creating 14
  - displaying a list of 7
  - removing 18
- displaying
  - available commands 12
  - memory heap utilization 13
  - version 25
- environment variables
  - described 19
  - displaying settings 19
  - location of 20
  - setting 19
  - unsetting 23
- files
  - copying 5
  - deleting 6
  - displaying a list of 7
  - displaying the contents of 4, 15, 22
  - renaming 16
- file system
  - formatting 10
  - initializing flash 9
  - running a consistency check 11
- prompt 1
- resetting the system 17

boot manual command 47

boot private-config-file command 48

boot system command 49

BPDU filtering, for spanning tree 646, 681

BPDU guard, for spanning tree 648, 681

broadcast storm control 699

---

## C

candidate switches

- See clusters

cat (boot loader) command 4

channel-group command 50

channel-protocol command 53

Cisco SoftPhone

- auto-QoS configuration 39
- trusting packets sent from 329

CISP

- See Client Information Signalling Protocol

cisp

- debug platform cisp command 35

cisp enable command 54

class command 55

class-map command 57

class maps

- creating 57
- defining the match criteria 290
- displaying 424

class of service

- See CoS

clear dot1x command 59

clear eap sessions command 60

clear energywise neighbors command 61

clear errdisable interface 62

clear ip arp inspection log command 63

clear ip arp inspection statistics command 64

clear ip dhcp snooping database command 65

clear lacp command 67

clear mac address-table command 68, 70

clear nmsp statistics command 71

- clear pagp command [72](#)
  - clear port-security command [73](#)
  - clear spanning-tree counters command [75](#)
  - clear spanning-tree detected-protocols command [76](#)
  - clear vmps statistics command [77](#)
  - clear vtp counters command [78](#)
  - Client Information Signalling Protocol [54, 109, 423, 5, 35](#)
  - cluster commander-address command [79](#)
  - cluster discovery hop-count command [81](#)
  - cluster enable command [82](#)
  - cluster holdtime command [83](#)
  - cluster member command [84](#)
  - cluster outside-interface command [86](#)
  - cluster run command [87](#)
  - clusters
    - adding candidates [84](#)
    - binding to HSRP group [88](#)
    - building manually [84](#)
    - communicating with
      - devices outside the cluster [86](#)
      - members by using Telnet [382](#)
    - debug messages, display [6](#)
    - displaying
      - candidate switches [427](#)
      - debug messages [6](#)
      - member switches [429](#)
      - status [425](#)
    - hop-count limit for extended discovery [81](#)
    - HSRP standby groups [88](#)
    - redundancy [88](#)
    - SNMP trap [635](#)
  - cluster standby-group command [88](#)
  - cluster timer command [90](#)
  - command modes defined [1](#)
  - command switch
    - See clusters
  - configuration files
    - password recovery disable considerations [1](#)
    - specifying the name [43, 48](#)
  - configuring multiple interfaces [163](#)
  - config-vlan mode
    - commands [746](#)
    - description [4](#)
    - entering [745](#)
    - summary [2](#)
  - copy (boot loader) command [5](#)
  - CoS
    - assigning default value to incoming packets [299](#)
    - overriding the incoming value [299](#)
  - CoS-to-DSCP map [303](#)
  - CPU ASIC statistics, displaying [431](#)
  - crashinfo files [156](#)
- 
- ## D
- debug auto qos command [2](#)
  - debug backup command [4](#)
  - debug cisp command [5](#)
  - debug cluster command [6](#)
  - debug dot1x command [8](#)
  - debug dtp command [10](#)
  - debug eap command [11](#)
  - debug etherchannel command [12](#)
  - debug ilpower command [14](#)
  - debug interface command [15](#)
  - debug ip dhcp snooping command [17](#)
  - debug ip igmp filter command [18](#)
  - debug ip igmp max-groups command [19](#)
  - debug ip igmp snooping command [20](#)
  - debug lacp command [21](#)
  - debug lldp packets command [22](#)
  - debug mac-notification command [23](#)
  - debug matm command [24](#)
  - debug matm move update command [25](#)
  - debug monitor command [26](#)
  - debug mvrdbg command [28](#)
  - debug nmsp command [30](#)
  - debug nvramp command [31](#)

- debug pagp command [32](#)
- debug platform acl command [33](#)
- debug platform backup interface command [34](#)
- debug platform cisp command [35](#)
- debug platform configuration command [41](#)
- debug platform cpu-queues command [36](#)
- debug platform dot1x command [38](#)
- debug platform etherchannel command [39](#)
- debug platform forw-tcam command [40](#)
- debug platform ip arp inspection command [43](#)
- debug platform ip dhcp command [44](#)
- debug platform ip igmp snooping command [45](#)
- debug platform ip source-guard command [47](#)
- debug platform led command [48](#)
- debug platform matm command [49](#)
- debug platform messaging application command [51](#)
- debug platform phy command [52](#)
- debug platform pm command [54](#)
- debug platform port-asic command [56](#)
- debug platform port-security command [57](#)
- debug platform qos-acl-tcam command [58](#)
- debug platform resource-manager command [59](#)
- debug platform snmp command [60](#)
- debug platform span command [61](#)
- debug platform supervisor-asic command [62](#)
- debug platform sw-bridge command [63](#)
- debug platform tcam command [64](#)
- debug platform udld command [66](#)
- debug platform vlan command [67](#)
- debug pm command [68](#)
- debug port-security command [70](#)
- debug qos-manager command [71](#)
- debug spanning-tree backbonefast command [74](#)
- debug spanning-tree bpdu command [75](#)
- debug spanning-tree bpdu-opt command [76](#)
- debug spanning-tree command [72](#)
- debug spanning-tree mstp command [77](#)
- debug spanning-tree switch command [79](#)
- debug spanning-tree uplinkfast command [81](#)
- debug sw-vlan command [82](#)
- debug sw-vlan ifs command [84](#)
- debug sw-vlan notification command [86](#)
- debug sw-vlan vtp command [88](#)
- debug udld command [90](#)
- debug vqpc command [92](#)
- define interface-range command [92](#)
- delete (boot loader) command [6](#)
- delete command [94](#)
- deny (ARP access-list configuration) command [96](#)
- deny command [98](#)
- detect mechanism, causes [148](#)
- DHCP snooping
  - accepting untrusted packets from edge switch [195](#)
  - enabling
    - on a VLAN [201](#)
    - option 82 [193, 195](#)
    - trust on an interface [199](#)
  - error recovery timer [154](#)
  - rate limiting [197](#)
- DHCP snooping binding database
  - binding file, configuring [191](#)
  - bindings
    - adding [189](#)
    - deleting [189](#)
    - displaying [491](#)
  - clearing database agent statistics [65](#)
  - database agent, configuring [191](#)
  - displaying
    - binding entries [491](#)
    - database agent status [494, 496](#)
  - renewing [386](#)
- dir (boot loader) command [7](#)
- directories, deleting [94](#)
- domain name, VTP [764, 768](#)
- dot1x auth-fail max-attempts [103](#)
- dot1x auth-fail vlan [105](#)
- dot1x command [101](#)
- dot1x control-direction command [107](#)

- dot1x credentials (global configuration) command [109](#)
- dot1x critical global configuration command [110](#)
- dot1x critical interface configuration command [112](#)
- dot1x default command [114](#)
- dot1x fallback command [115](#)
- dot1x guest-vlan command [116](#)
- dot1x host-mode command [118](#)
- dot1x initialize command [120](#)
- dot1x mac-auth-bypass command [121](#)
- dot1x max-reauth-req command [123](#)
- dot1x max-req command [124](#)
- dot1x pae command [125](#)
- dot1x port-control command [126](#)
- dot1x re-authenticate command [128](#)
- dot1x reauthentication command [129](#)
- dot1x test eapol-capable command [130](#)
- dot1x test timeout command [131](#)
- dot1x timeout command [132](#)
- dot1x violation-mode command [135](#)
- DSCP-to-CoS map [303](#)
- DSCP-to-DSCP-mutation map [303](#)
- DTP [711](#)
- DTP flap
  - error detection for [148](#)
  - error recovery timer [154](#)
- DTP negotiation [712](#)
- dual-purpose uplink ports
  - displaying configurable options [475](#)
  - displaying the active media [480](#)
  - selecting the type [293](#)
- duplex command [136](#)
- dynamic-access ports
  - configuring [702](#)
  - restrictions [703](#)
- dynamic ARP inspection
  - ARP ACLs
    - apply to a VLAN [175](#)
    - define [14](#)
    - deny packets [96](#)
    - display [410](#)
    - permit packets [354](#)
  - clear
    - log buffer [63](#)
    - statistics [64](#)
  - display
    - ARP ACLs [410](#)
    - configuration and operating state [486](#)
    - log buffer [486](#)
    - statistics [486](#)
    - trust state and rate limit [486](#)
  - enable per VLAN [185](#)
  - log buffer
    - clear [63](#)
    - configure [179](#)
    - display [486](#)
  - rate-limit incoming ARP packets [177](#)
  - statistics
    - clear [64](#)
    - display [486](#)
  - trusted interface state [181](#)
  - type of packet logged [186](#)
  - validation checks [183](#)
- dynamic auto VLAN membership mode [710](#)
- dynamic desirable VLAN membership mode [710](#)
- Dynamic Host Configuration Protocol (DHCP)
  - See DHCP snooping
- Dynamic Trunking Protocol
  - See DTP

**E**

## EAP-request/identity frame

- maximum number to send [124](#)
- response time before retransmitting [132](#)

energywise (global configuration) command [138, 140](#)energywise domain command [142](#)energywise query command [144](#)environment variables, displaying [419](#)errdisable detect cause command [148](#)errdisable detect cause small-frame command [151](#)errdisable recovery cause small-frame [153](#)errdisable recovery command [154](#)error conditions, displaying [462](#)error disable detection [148](#)error-disabled interfaces, displaying [473](#)

## EtherChannel

- assigning Ethernet interface to channel group [50](#)

creating port-channel logical interface [161](#)debug EtherChannel/PAgP, display [12](#)debug platform-specific events, display [39](#)displaying [466](#)interface information, displaying [473](#)

## LACP

- clearing channel-group information [67](#)

debug messages, display [21](#)displaying [523](#)modes [50](#)port priority for hot-standby ports [244](#)restricting a protocol [53](#)system priority [246](#)load-distribution methods [365](#)

## PAgP

- aggregate-port learner [350](#)

clearing channel-group information [72](#)debug messages, display [32](#)displaying [583](#)error detection for [148](#)error recovery timer [154](#)

## EtherChannel (continued)

- learn method [350](#)

modes [50](#)physical-port learner [350](#)priority of interface for transmitted traffic [352](#)Ethernet controller, internal register display [433](#)Ethernet statistics, collecting [390](#)exception crashinfo command [156](#)exit command [757](#)extended discovery of candidate switches [81](#)

## extended-range VLANs

- and allowed VLAN list [725](#)

and pruning-eligible list [725](#)configuring [745](#)extended system ID for STP [654](#)**F**fallback profile command [157](#)fallback profiles, displaying [469](#)fan information, displaying [459](#)file name, VTP [764](#)files, deleting [94](#)flash\_init (boot loader) command [9](#)flexible authentication ordering [27](#)

## Flex Links

- configuring [704](#)

configuring preferred VLAN [706](#)displaying [473](#)flowcontrol command [159](#)format (boot loader) command [10](#)forwarding results, display [5](#)frame forwarding information, displaying [5](#)fsock (boot loader) command [11](#)

**G**

global configuration mode [2, 3](#)

**H**

hardware ACL statistics [406](#)

help (boot loader) command [12](#)

hierarchical policy maps [364](#)

hop-count limit for clusters [81](#)

host connection, port configuration [709](#)

Hot Standby Router Protocol

See HSRP

HSRP

binding HSRP group to cluster [88](#)

standby group [88](#)

**I**

IEEE 802.1x

and switchport modes [711](#)

violation error recovery [154](#)

See also port-based authentication

IEEE 802.1X Port Based Authentication

enabling guest VLAN supplicant [104, 115, 158](#)

IGMP filters

applying [202](#)

debug messages, display [18](#)

IGMP groups, setting maximum [204](#)

IGMP maximum groups, debugging [19](#)

IGMP profiles

creating [206](#)

displaying [499](#)

IGMP snooping

adding ports as a static member of a group [223](#)

displaying [500, 505, 507](#)

enabling [208](#)

enabling the configurable-leave timer [210](#)

enabling the Immediate-Leave feature [219](#)

IGMP snooping (continued)

flooding query count [216](#)

interface topology change notification behavior [218](#)

multicast table [503](#)

querier [212](#)

query solicitation [216](#)

report suppression [214](#)

switch topology change notification behavior [216](#)

images

See software images

Immediate-Leave feature, MVR [339](#)

immediate-leave processing [219](#)

Immediate-Leave processing, IPv6 [242](#)

interface configuration mode [2, 4](#)

interface port-channel command [161](#)

interface range command [163](#)

interface-range macros [92](#)

interfaces

assigning Ethernet interface to channel group [50](#)

configuring [136](#)

configuring multiple [163](#)

creating port-channel logical [161](#)

debug messages, display [15](#)

disabling [631](#)

displaying the MAC address table [544](#)

restarting [631](#)

interface speed, configuring [691](#)

interface vlan command [166](#)

internal registers, displaying [433, 442](#)

Internet Group Management Protocol

See IGMP

invalid GBIC

error detection for [148](#)

error recovery timer [154](#)

ip access-group command [167](#)

ip address command [169](#)

IP addresses, setting [169](#)

ip admission command [171](#)

ip admission name proxy http command [173](#)

- ip arp inspection filter vlan command [175](#)
  - ip arp inspection limit command [177](#)
  - ip arp inspection log-buffer command [179](#)
  - ip arp inspection trust command [181](#)
  - ip arp inspection validate command [183](#)
  - ip arp inspection vlan command [185](#)
  - ip arp inspection vlan logging command [186](#)
  - IP DHCP snooping
    - See DHCP snooping
  - ip dhcp snooping binding command [189](#)
  - ip dhcp snooping command [188](#)
  - ip dhcp snooping database command [191](#)
  - ip dhcp snooping information option allow-untrusted command [195](#)
  - ip dhcp snooping information option command [193](#)
  - ip dhcp snooping limit rate command [197](#)
  - ip dhcp snooping trust command [199](#)
  - ip dhcp snooping verify command [200](#)
  - ip dhcp snooping vlan command [201](#)
  - ip igmp filter command [202](#)
  - ip igmp max-groups command [204](#)
  - ip igmp profile command [206](#)
  - ip igmp snooping command [208](#)
  - ip igmp snooping last-member-query-interval command [210](#)
  - ip igmp snooping querier command [212](#)
  - ip igmp snooping report-suppression command [214](#)
  - ip igmp snooping tcn command [216](#)
  - ip igmp snooping tcn flood command [218](#)
  - ip igmp snooping vlan immediate-leave command [219](#)
  - ip igmp snooping vlan mrouter command [221](#)
  - ip igmp snooping vlan static command [223](#)
  - IP multicast addresses [336](#)
  - IP phones
    - auto-QoS configuration [39](#)
    - trusting packets sent from [329](#)
  - IP-precedence-to-DSCP map [303](#)
  - ip source binding command [225](#)
  - IP source guard
    - disabling [229](#)
    - displaying
      - binding entries [509](#)
      - configuration [511](#)
      - dynamic binding entries only [491](#)
    - enabling [229](#)
    - static IP source bindings [225](#)
  - ip ssh command [227](#)
  - ipv6 mld snooping command [230](#)
  - ipv6 mld snooping last-listener-query count command [232](#)
  - ipv6 mld snooping last-listener-query-interval command [234](#)
  - ipv6 mld snooping listener-message-suppression command [236](#)
  - ipv6 mld snooping robustness-variable command [238](#)
  - ipv6 mld snooping tcn command [240](#)
  - ipv6 mld snooping vlan command [242](#)
  - IPv6 SDM template [391](#)
  - ip verify source command [229](#)
- 
- ## J
- jumbo frames
    - See MTU
- 
- ## L
- LACP
    - See EtherChannel
  - lACP port-priority command [244](#)
  - lACP system-priority command [246](#)
  - Layer 2 traceroute
    - IP addresses [736](#)
    - MAC addresses [733](#)
  - line configuration mode [2, 5](#)
  - Link Aggregation Control Protocol
    - See EtherChannel



link flap

- error detection for [148](#)
- error recovery timer [154](#)

link state group command [252](#)

link state track command [254](#)

load-distribution methods for EtherChannel [365](#)

location (global configuration) command [248](#)

location (interface configuration) command [250](#)

logging event command [255](#)

logging event power-inline-status command [256](#)

logging file command [257](#)

logical interface [161](#)

loopback error

- detection for [148](#)
- recovery timer [154](#)

loop guard, for spanning tree [656, 660](#)

## M

mac access-group command [259](#)

MAC access-groups, displaying [532](#)

MAC access list configuration mode [261](#)

mac access-list extended command [261](#)

MAC access lists [98](#)

MAC addresses

- disabling MAC address learning per VLAN [264](#)
- displaying
  - aging time [538](#)
  - all [536](#)
  - dynamic [542](#)
  - MAC address-table move updates [547](#)
  - notification settings [546, 549](#)
  - number of addresses in a VLAN [540](#)
  - per interface [544](#)
  - per VLAN [553](#)
  - static [551](#)
  - static and dynamic entries [534](#)

MAC addresses (continued)

- dynamic
  - aging time [263](#)
  - deleting [68](#)
  - displaying [542](#)
  - enabling MAC address notification [268](#)
  - enabling MAC address-table move update [266](#)
  - static
    - adding and removing [270](#)
    - displaying [551](#)
    - dropping on an interface [271](#)
  - tables [536](#)
- MAC address notification, debugging [23](#)
- mac address-table aging-time [259](#)
- mac address-table aging-time command [263](#)
- mac address-table learning command [264](#)
- mac address-table move update command [266](#)
- mac address-table notification command [268](#)
- mac address-table static command [270](#)
- mac address-table static drop command [271](#)
- macro apply command [273](#)
- macro auto execute command [276](#)
- macro auto global processing command [281](#)
- macro description command [283](#)
- macro global command [284](#)
- macro global description command [287](#)
- macro name command [288](#)
- macros
  - adding a description [283](#)
  - adding a global description [287](#)
  - applying [284](#)
  - creating [288](#)
  - displaying [585](#)
  - interface range [92, 163](#)
  - specifying parameter values [284](#)
  - tracing [284](#)

- maps
  - QoS
    - defining [303](#)
    - displaying [563](#)
- match (class-map configuration) command [290](#)
- maximum transmission unit
  - See MTU
- mdix auto command [292](#)
- media-type command [293](#)
- member switches
  - See clusters
- memory (boot loader) command [13](#)
- mkdir (boot loader) command [14](#)
- MLD snooping
  - configuring [236, 238](#)
  - configuring queries [232, 234](#)
  - configuring topology change notification [240](#)
  - displaying [513, 515, 517, 519](#)
  - enabling [230](#)
- MLD snooping on a VLAN, enabling [242](#)
- mls qos aggregate-policer command [297](#)
- mls qos command [295](#)
- mls qos cos command [299](#)
- mls qos dscp-mutation command [301](#)
- mls qos map command [303](#)
- mls qos queue-set output buffers command [307](#)
- mls qos queue-set output threshold command [309](#)
- mls qos rewrite ip dscp command [311](#)
- mls qos srr-queue input bandwidth command [313](#)
- mls qos srr-queue input buffers command [315](#)
- mls qos-srr-queue input cos-map command [317](#)
- mls qos-srr-queue input dscp-map command [319](#)
- mls qos-srr-queue input priority-queue command [321](#)
- mls qos-srr-queue input threshold command [323](#)
- mls qos-srr-queue output cos-map command [325](#)
- mls qos-srr-queue output dscp-map command [327](#)
- mls qos trust command [329](#)
- mode, MVR [336](#)
- Mode button, and password recovery [393](#)
- modes, commands [1](#)
- monitor session command [331](#)
- more (boot loader) command [15](#)
- MSTP
  - displaying [605](#)
  - interoperability [76](#)
  - link type [658](#)
  - MST region
    - aborting changes [664](#)
    - applying changes [664](#)
    - configuration name [664](#)
    - configuration revision number [664](#)
    - current or pending display [664](#)
    - displaying [605](#)
    - MST configuration mode [664](#)
    - VLANs-to-instance mapping [664](#)
  - path cost [666](#)
  - protocol mode [662](#)
  - restart protocol migration process [76](#)
  - root port
    - loop guard [656](#)
    - preventing from becoming designated [656](#)
    - restricting which can be root [656](#)
    - root guard [656](#)
  - root switch
    - affects of extended system ID [654](#)
    - hello-time [669, 677](#)
    - interval between BDPU messages [670](#)
    - interval between hello BPDU messages [669, 677](#)
    - max-age [670](#)
    - maximum hop count before discarding BPDU [671](#)
    - port priority for selection of [673](#)
    - primary or secondary [677](#)
    - switch priority [676](#)

## MSTP (continued)

## state changes

- blocking to forwarding state [683](#)
- enabling BPDU filtering [646, 681](#)
- enabling BPDU guard [648, 681](#)
- enabling Port Fast [681, 683](#)
- forward-delay time [668](#)
- length of listening and learning states [668](#)
- rapid transition to forwarding [658](#)
- shutting down Port Fast-enabled ports [681](#)

state information display [604](#)

## MTU

- configuring size [730](#)
- displaying global setting [613](#)

multicast group address, MVR [339](#)

multicast groups, MVR [337](#)

## Multicast Listener Discovery

See MLD

multicast router learning method [221](#)

multicast router ports, configuring [221](#)

multicast router ports, IPv6 [242](#)

multicast storm control [699](#)

multicast VLAN, MVR [337](#)

multicast VLAN registration

See MVR

## Multiple Spanning Tree Protocol

See MSTP

## MVR

- and address aliasing [337](#)
- configuring [336](#)
- configuring interfaces [339](#)
- debug messages, display [28](#)
- displaying [572](#)
- displaying interface information [574](#)
- members, displaying [576](#)

mvr (global configuration) command [336](#)

mvr (interface configuration) command [339](#)

mvr vlan group command [340](#)

---

**N**

native VLANs [725](#)

Network Admission Control Software Configuration Guide [172, 174](#)

network-policy (global configuration) command [343](#)

network-policy command [342](#)

network-policy profile (network-policy configuration) command [345](#)

nmsp attachment suppress command [349](#)

nmsp command [347](#)

nonegotiate, speed [691](#)

nonegotiating DTP messaging [712](#)

## non-IP protocols

denying [98](#)

forwarding [356](#)

non-IP traffic access lists [261](#)

## non-IP traffic forwarding

denying [98](#)

permitting [356](#)

normal-range VLANs [745, 750](#)

no vlan command [745, 754](#)

---

**O**

## online diagnostics

## global configuration mode

clearing health monitoring diagnostic test schedule [63](#)

setting health monitoring diagnostic testing [63](#)

setting up health monitoring diagnostic test schedule [63](#)

---

**P**

## PAGP

See EtherChannel

pagp learn-method command [350](#)

pagp port-priority command [352](#)

password, VTP [764, 768](#)

- password-recovery mechanism, enabling and disabling [393](#)
- permit (ARP access-list configuration) command [354](#)
- permit (MAC access-list configuration) command [356](#)
- per-VLAN spanning-tree plus
  - See STP
- physical-port learner [350](#)
- PID, displaying [485](#)
- PIM-DVMRP, as multicast router learning method [221](#)
- PoE
  - configuring the power budget [370](#)
  - configuring the power management mode [367](#)
  - displaying controller register values [440](#)
  - displaying power management information [593](#)
  - logging of status [256](#)
  - monitoring power [372](#)
  - policing power consumption [372](#)
- police aggregate command [361](#)
- police command [359](#)
- policed-DSCP map [303](#)
- policy-map command [363](#)
- policy maps
  - applying to an interface [395, 399](#)
  - creating [363](#)
  - displaying [588](#)
  - hierarchical [364](#)
  - policers
    - displaying [556](#)
    - for a single class [359](#)
    - for multiple classes [297, 361](#)
    - policed-DSCP map [303](#)
  - traffic classification
    - defining the class [55](#)
    - defining trust states [738](#)
    - setting DSCP or IP precedence values [397](#)
- Port Aggregation Protocol
  - See EtherChannel
- port-based authentication
  - AAA method list [3](#)
  - configuring violation modes [135](#)
  - debug messages, display [8](#)
  - enabling IEEE 802.1x
    - globally [101](#)
    - per interface [126](#)
  - guest VLAN [116](#)
  - host modes [118](#)
  - IEEE 802.1x AAA accounting methods [1](#)
  - initialize an interface [120, 131](#)
  - MAC authentication bypass [121](#)
  - manual control of authorization state [126](#)
  - PAE as authenticator [125](#)
  - periodic re-authentication
    - enabling [129](#)
    - time between attempts [132](#)
  - quiet period between failed authentication exchanges [132](#)
  - re-authenticating IEEE 802.1x-enabled ports [128](#)
  - resetting configurable IEEE 802.1x parameters [114](#)
  - switch-to-authentication server retransmission time [132](#)
  - switch-to-client frame-retransmission number [123 to 124](#)
  - switch-to-client retransmission time [132](#)
  - test for IEEE 802.1x readiness [130](#)
- port-channel load-balance command [365](#)
- Port Fast, for spanning tree [683](#)
- port ranges, defining [92](#)
- ports, debugging [68](#)
- ports, protected [723](#)
- port security
  - aging [719](#)
  - debug messages, display [70](#)
  - enabling [714](#)
  - violation error recovery [154](#)
- port trust states for QoS [329](#)
- port types, MVR [339](#)
- power information, displaying [459](#)

power inline command [367](#)  
 power inline consumption command [370](#)  
 power inline police command [372](#)  
 Power over Ethernet  
   See PoE  
 priority-queue command [375](#)  
 privileged EXEC mode [2, 3](#)  
 product identification information, displaying [485](#)  
 protected ports, displaying [478](#)  
 pruning  
   VLANs [725](#)  
   VTP  
     displaying interface information [473](#)  
     enabling [764, 768](#)  
 pruning-eligible VLAN list [726](#)  
 PVST+  
   See STP

## Q

### QoS

auto-QoS  
   configuring [39](#)  
   debug messages, display [2](#)  
   displaying [415](#)  
 class maps  
   creating [57](#)  
   defining the match criteria [290](#)  
   displaying [424](#)  
 defining the CoS value for an incoming packet [299](#)  
 displaying configuration information [415, 555](#)  
 DSCP transparency [311](#)  
 DSCP trusted ports  
   applying DSCP-to-DSCP-mutation map to [301](#)  
   defining DSCP-to-DSCP-mutation map [303](#)  
 egress queues  
   allocating buffers [307](#)  
   defining the CoS output queue threshold map [325](#)

### QoS (continued)

  defining the DSCP output queue threshold map [327](#)  
   displaying buffer allocations [559](#)  
   displaying CoS output queue threshold map [563](#)  
   displaying DSCP output queue threshold map [563](#)  
   displaying queueing strategy [559](#)  
   displaying queue-set settings [566](#)  
   enabling bandwidth shaping and scheduling [695](#)  
   enabling bandwidth sharing and scheduling [697](#)  
   limiting the maximum output on a port [693](#)  
   mapping a port to a queue-set [377](#)  
   mapping CoS values to a queue and threshold [325](#)  
   mapping DSCP values to a queue and threshold [327](#)  
   setting maximum and reserved memory allocations [309](#)  
   setting WTD thresholds [309](#)  
 enabling [295](#)  
 ingress queues  
   allocating buffers [315](#)  
   assigning SRR scheduling weights [313](#)  
   defining the CoS input queue threshold map [317](#)  
   defining the DSCP input queue threshold map [319](#)  
   displaying buffer allocations [559](#)  
   displaying CoS input queue threshold map [563](#)  
   displaying DSCP input queue threshold map [563](#)  
   displaying queueing strategy [559](#)  
   displaying settings for [557](#)  
   enabling the priority queue [321](#)  
   mapping CoS values to a queue and threshold [317](#)  
   mapping DSCP values to a queue and threshold [319](#)  
   setting WTD thresholds [323](#)

## QoS (continued)

## maps

- defining [303, 317, 319, 325, 327](#)

- displaying [563](#)

## policy maps

- applying an aggregate policer [361](#)

- applying to an interface [395, 399](#)

- creating [363](#)

- defining policers [297, 359](#)

- displaying policers [556](#)

- displaying policy maps [588](#)

- hierarchical [364](#)

- policed-DSCP map [303](#)

- setting DSCP or IP precedence values [397](#)

- traffic classifications [55](#)

- trust states [738](#)

- port trust states [329](#)

- queues, enabling the expedite [375](#)

## statistics

- in-profile and out-of-profile packets [559](#)

- packets enqueued or dropped [559](#)

- sent and received CoS values [559](#)

- sent and received DSCP values [559](#)

- trusted boundary for IP phones [329](#)

## quality of service

- See QoS

- querytime, MVR [336](#)

- queue-set command [377](#)

**R**

- radius-server dead-criteria command [378](#)

- radius-server host command [380](#)

- rapid per-VLAN spanning-tree plus

- See STP

- rapid PVST+

- See STP

- rcommand command [382](#)

- re-authenticating IEEE 802.1x-enabled ports [128](#)

- re-authentication

- periodic [129](#)

- time between attempts [132](#)

- receiver ports, MVR [339](#)

- receiving flow-control packets [159](#)

- recovery mechanism

- causes [154](#)

- display [62, 421, 460, 464](#)

- timer interval [154](#)

- redundancy for cluster switches [88](#)

- remote-span command [384](#)

- Remote Switched Port Analyzer

- See RSPAN

- rename (boot loader) command [16](#)

- renew ip dhcp snooping database command [386](#)

- reset (boot loader) command [17](#)

- reset command [757](#)

- resource templates, displaying [598](#)

- restricted VLAN

- See dot1x auth-fail vlan

- rmdir (boot loader) command [18](#)

- rmon collection stats command [390](#)

- root guard, for spanning tree [656](#)

- RSPAN

- configuring [331](#)

- displaying [569](#)

- filter RSPAN traffic [331](#)

- remote-span command [384](#)

- sessions

- displaying [569](#)

**S**

- sdm prefer command [391](#)

- SDM templates

- displaying [598](#)

- dual IPv4 and IPv6 [391](#)

- secure ports, limitations [716](#)

- sending flow-control packets [159](#)

- service password-recovery command [393](#)
- service-policy command [395](#)
- set (boot loader) command [19](#)
- set command [397](#)
- setup command [399](#)
- setup express command [402](#)
- shell trigger command [404](#)
- show access-lists command [406](#)
- show archive status command [409](#)
- show arp access-list command [410](#)
- show authentication command [411](#)
- show auto qos command [415](#)
- show boot command [419](#)
- show cable-diagnostics tdr command [421](#)
- show changes command [757](#)
- show cisp command [423](#)
- show class-map command [424](#)
- show cluster candidates command [427](#)
- show cluster command [425](#)
- show cluster members command [429](#)
- show controllers cpu-interface command [431](#)
- show controllers ethernet-controller command [433](#)
- show controllers power inline command [440](#)
- show controllers team command [442](#)
- show controller utilization command [444](#)
- show current command [757](#)
- show dot1x command [446](#)
- show dtp [450](#)
- show eap command [452](#)
- show energywise command [455](#)
- show env command [459](#)
- show errdisable detect command [460](#)
- show errdisable flap-values command [462](#)
- show errdisable recovery command [464](#)
- show etherchannel command [466](#)
- show fallback profile command [469](#)
- show flowcontrol command [471](#)
- show interfaces command [473](#)
- show interfaces counters command [482](#)
- show inventory command [485](#)
- show ip arp inspection command [486](#)
- show ip dhcp snooping binding command [491](#)
- show ip dhcp snooping command [490](#)
- show ip dhcp snooping database command [494, 496](#)
- show ip igmp profile command [499](#)
- show ip igmp snooping address command [515](#)
- show ip igmp snooping command [500, 513](#)
- show ip igmp snooping groups command [503](#)
- show ip igmp snooping mrouter command [505, 517](#)
- show ip igmp snooping querier command [507, 519](#)
- show ip source binding command [509](#)
- show ipv6 route updated [521](#)
- show ip verify source command [511](#)
- show lacp command [523](#)
- show link state group command [530](#)
- show location [527](#)
- show mac access-group command [532](#)
- show mac address-table address command [536](#)
- show mac address-table aging time command [538](#)
- show mac address-table command [534](#)
- show mac address-table count command [540](#)
- show mac address-table dynamic command [542](#)
- show mac address-table interface command [544](#)
- show mac address-table learning command [546](#)
- show mac address-table move update command [547](#)
- show mac address-table notification command [70, 549, 25](#)
- show mac address-table static command [551](#)
- show mac address-table vlan command [553](#)
- show mls qos aggregate-policer command [556](#)
- show mls qos command [555](#)
- show mls qos input-queue command [557](#)
- show mls qos interface command [559](#)
- show mls qos maps command [563](#)
- show mls qos queue-set command [566](#)
- show mls qos vlan command [568](#)
- show monitor command [569](#)
- show mvr command [572](#)
- show mvr interface command [574](#)

- show mvr members command [576](#)
- show network-policy profile command [578](#)
- show nmsp command [580](#)
- show pagp command [583](#)
- show parser macro command [585](#)
- show platform acl command [2](#)
- show platform backup interface command [3](#)
- show platform etherchannel command [4](#)
- show platform forward command [5](#)
- show platform igmp snooping command [7](#)
- show platform layer4op command [9](#)
- show platform mac-address-table command [10](#)
- show platform messaging command [11](#)
- show platform monitor command [12](#)
- show platform mvr table command [13](#)
- show platform pm command [14](#)
- show platform port-asic command [15](#)
- show platform port-security command [20](#)
- show platform qos command [21](#)
- show platform resource-manager command [22](#)
- show platform snmp counters command [24](#)
- show platform spanning-tree command [25](#)
- show platform stack manager command [27](#)
- show platform stp-instance command [26](#)
- show platform team command [28](#)
- show platform vlan command [30](#)
- show policy-map command [588](#)
- show port security command [590](#)
- show power inline command [593](#)
- show proposed command [757](#)
- show sdm prefer command [598](#)
- show setup express command [600](#)
- show shell command [601](#)
- show spanning-tree command [604](#)
- show storm-control command [610](#)
- show system mtu command [613](#)
- show trust command [738](#)
- show udd command [615](#)
- show version command [618](#)
- show vlan command [620](#)
- show vlan command, fields [621](#)
- show vmps command [623](#)
- show vtp command [626](#)
- shutdown command [631](#)
- shutdown vlan command [632](#)
- small violation-rate command [633](#)
- Smartports macros
  - See macros
- SNMP host, specifying [639](#)
- SNMP informs, enabling the sending of [635](#)
- snmp-server enable traps command [635](#)
- snmp-server host command [639](#)
- snmp trap mac-notification command [643](#)
- SNMP traps
  - enabling MAC address notification trap [643](#)
  - enabling the MAC address notification feature [268](#)
  - enabling the sending of [635](#)
- SoftPhone
  - See Cisco SoftPhone
- software images
  - deleting [94](#)
  - downloading [6](#)
  - upgrading [6](#)
  - uploading [12](#)
- software version, displaying [618](#)
- source ports, MVR [339](#)
- SPAN
  - configuring [331](#)
  - debug messages, display [26](#)
  - displaying [569](#)
  - filter SPAN traffic [331](#)
  - sessions
    - add interfaces to [331](#)
    - displaying [569](#)
    - start new [331](#)
- spanning-tree backbonefast command [645](#)
- spanning-tree bpdudfilter command [646](#)
- spanning-tree bpduguard command [648](#)



- spanning-tree cost command [650](#)
  - spanning-tree etherchannel command [652](#)
  - spanning-tree extend system-id command [654](#)
  - spanning-tree guard command [656](#)
  - spanning-tree link-type command [658](#)
  - spanning-tree loopguard default command [660](#)
  - spanning-tree mode command [662](#)
  - spanning-tree mst configuration command [664](#)
  - spanning-tree mst cost command [666](#)
  - spanning-tree mst forward-time command [668](#)
  - spanning-tree mst hello-time command [669](#)
  - spanning-tree mst max-age command [670](#)
  - spanning-tree mst max-hops command [671](#)
  - spanning-tree mst port-priority command [673](#)
  - spanning-tree mst pre-standard command [675](#)
  - spanning-tree mst priority command [676](#)
  - spanning-tree mst root command [677](#)
  - spanning-tree portfast (global configuration) command [681](#)
  - spanning-tree portfast (interface configuration) command [683](#)
  - spanning-tree port-priority command [679](#)
  - Spanning Tree Protocol
    - See STP
  - spanning-tree transmit hold-count command [685](#)
  - spanning-tree uplinkfast command [686](#)
  - spanning-tree vlan command [688](#)
  - speed command [691](#)
  - srr-queue bandwidth limit command [693](#)
  - srr-queue bandwidth share command [697](#)
  - SSH, configuring version [227](#)
  - static-access ports, configuring [702](#)
  - statistics, Ethernet group [390](#)
  - sticky learning, enabling [714](#)
  - storm-control command [699](#)
- STP
- BackboneFast [645](#)
  - counters, clearing [75](#)
  - debug messages, display
    - BackboneFast events [74](#)
    - MSTP [77](#)
    - optimized BPDUs handling [76](#)
    - spanning-tree activity [72](#)
    - switch shim [79](#)
    - transmitted and received BPDUs [75](#)
    - UplinkFast [81](#)
  - detection of indirect link failures [645](#)
  - EtherChannel misconfiguration [652](#)
  - extended system ID [654](#)
  - path cost [650](#)
  - protocol modes [662](#)
  - root port
    - accelerating choice of new [686](#)
    - loop guard [656](#)
    - preventing from becoming designated [656](#)
    - restricting which can be root [656](#)
    - root guard [656](#)
    - UplinkFast [686](#)
  - root switch
    - affects of extended system ID [654, 689](#)
    - hello-time [688](#)
    - interval between BPDU messages [688](#)
    - interval between hello BPDU messages [688](#)
    - max-age [688](#)
    - port priority for selection of [679](#)
    - primary or secondary [688](#)
    - switch priority [688](#)
  - state changes
    - blocking to forwarding state [683](#)
    - enabling BPDU filtering [646, 681](#)
    - enabling BPDU guard [648, 681](#)
    - enabling Port Fast [681, 683](#)
    - enabling timer to recover from error state [154](#)
    - forward-delay time [688](#)

## STP (continued)

length of listening and learning states [688](#)

shutting down Port Fast-enabled ports [681](#)

state information display [604](#)

VLAN options [676, 688](#)

## Switched Port Analyzer

See SPAN

switchport access command [702](#)

switchport backup interface command [704](#)

switchport block command [708](#)

switchport host command [709](#)

switchport mode command [710](#)

switchport nonegotiate command [712](#)

switchport port-security aging command [719](#)

switchport port-security command [714](#)

switchport priority extend command [721](#)

switchport protected command [723](#)

switchports, displaying [473](#)

switchport trunk command [725](#)

switchport voice vlan command [728](#)

system message logging [256](#)

system message logging, save message to flash [257](#)

system mtu command [730](#)

system resource templates [391](#)

**T**

tar files, creating, listing, and extracting [9](#)

TDR, running [732](#)

Telnet, using to communicate to cluster switches [382](#)

temperature information, displaying [459](#)

templates, SDM [392](#)

templates, system resources [391](#)

test cable-diagnostics tdr command [732](#)

test relay [733](#)

traceroute mac command [733](#)

traceroute mac ip command [736](#)

trunking, VLAN mode [710](#)

trunk mode [710](#)

trunk ports [710](#)

trunks, to non-DTP device [711](#)

trusted boundary for QoS [329](#)

trusted port states for QoS [329](#)

type (boot loader) command [22](#)

**U**

## UDLD

aggressive mode [740, 742](#)

debug messages, display [90](#)

enable globally [740](#)

enable per interface [742](#)

error recovery timer [154](#)

message timer [740](#)

normal mode [740, 742](#)

reset a shutdown interface [744](#)

status [615](#)

udld command [740](#)

udld port command [742](#)

udld reset command [744](#)

unicast storm control [699](#)

## UniDirectional Link Detection

See UDLD

unknown multicast traffic, preventing [708](#)

unknown unicast traffic, preventing [708](#)

unset (boot loader) command [23](#)

## upgrading

software images

downloading [6](#)

monitoring status of [409](#)

UplinkFast, for STP [686](#)

user EXEC mode [2, 3](#)

## V

version (boot loader) command [25](#)

vlan (global configuration) command [745](#)

vlan (VLAN configuration) command [750](#)

VLAN configuration

rules [748, 752](#)

saving [745, 754](#)

VLAN configuration mode

commands

VLAN [750](#)

VTP [768](#)

description [5](#)

entering [756](#)

summary [2](#)

vlan database command [756](#)

VLAN ID range [745, 750](#)

VLAN Query Protocol

See VQP

VLANs

adding [745](#)

configuring [745, 750](#)

debug messages, display

ISL [86](#)

VLAN IOS file system error tests [84](#)

VLAN manager activity [82](#)

VTP [88](#)

displaying configurations [620](#)

enabling guest VLAN supplicant [104, 115, 158](#)

extended-range [745](#)

MAC addresses

displaying [553](#)

number of [540](#)

media types [747, 752](#)

normal-range [745, 750](#)

restarting [632](#)

saving the configuration [745](#)

shutting down [632](#)

SNMP traps for VTP [637, 640](#)

VLANs (continued)

suspending [632](#)

variables [750](#)

VLAN Trunking Protocol

See VTP

VMPS

configuring servers [762](#)

displaying [623](#)

error recovery timer [154](#)

reconfirming dynamic VLAN assignments [759](#)

vmps reconfirm (global configuration) command [760](#)

vmps reconfirm (privileged EXEC) command [759](#)

vmps retry command [761](#)

vmps server command [762](#)

voice VLAN

configuring [728](#)

setting port priority [721](#)

VQP

and dynamic-access ports [703](#)

clearing client statistics [77](#)

displaying information [623](#)

per-server retry count [761](#)

reconfirmation interval [760](#)

reconfirming dynamic VLAN assignments [759](#)

VTP

changing characteristics [764](#)

clearing pruning counters [78](#)

configuring

domain name [764, 768](#)

file name [764](#)

mode [764, 768](#)

password [764, 768](#)

counters display fields [627](#)

displaying information [626](#)

enabling

pruning [764, 768](#)

Version 2 [764, 768](#)

mode [764, 768](#)

pruning [764, 768](#)

VTP (continued)

    saving the configuration [745, 754](#)

    statistics [626](#)

    status [626](#)

    status display fields [629](#)

vtp (global configuration) command [764](#)

vtp (VLAN configuration) command [768](#)