



INDEX

A

aaa accounting dot1x command [1](#)
aaa authentication dot1x command [3](#)
aaa authorization network command [5, 16, 21, 23, 25, 27, 109, 423, 5, 35](#)
AAA methods [3](#)
abort command [757](#)
access control entries
 See ACEs
access control lists
 See ACLs
access groups
 IP [167](#)
 MAC, displaying [532](#)
access mode [710](#)
access ports [710](#)
ACEs [100, 358](#)
ACLs
 deny [98](#)
 displaying [406](#)
 for non-IP protocols [261](#)
 IP [167](#)
 on Layer 2 interfaces [167](#)
 permit [356](#)
address aliasing [337](#)
aggregate-port learner [350](#)
allowed VLANs [725](#)
apply command [757](#)
archive download-sw command [6](#)
archive tar command [9](#)
archive upload-sw command [12](#)
arp access-list command [14](#)

authentication control-direction command [16](#)
authentication event command [18](#)
authentication failed VLAN
 See dot1x auth-fail vlan
authentication fallback command [21](#)
authentication host-mode command [23](#)
authentication open command [25](#)
authentication order command [27](#)
authentication periodic command [29](#)
authentication port-control command [31](#)
authentication priority command [33](#)
authentication timer command [35](#)
authentication violation command [37](#)
auth-fail max-attempts
 See dot1x auth-fail max-attempts
auth-fail vlan
 See dot1x auth-fail vlan
auth open command [25](#)
auth order command [27](#)
authorization state of controlled port [126](#)
auth timer command [35](#)
autonegotiation of duplex mode [137](#)
auto qos voip command [39](#)

B

BackboneFast, for STP [645](#)
backup interfaces
 configuring [704](#)
 displaying [473](#)
boot (boot loader) command [2](#)
boot config-file command [43](#)
boot enable-break command [44](#)

boot helper command [45](#)
 boot helper-config file command [46](#)
 booting
 Cisco IOS image [49](#)
 displaying environment variables [419](#)
 interrupting [44](#)
 manually [47](#)
 boot loader
 accessing [1](#)
 booting
 Cisco IOS image [2](#)
 helper image [45](#)
 directories
 creating [14](#)
 displaying a list of [7](#)
 removing [18](#)
 displaying
 available commands [12](#)
 memory heap utilization [13](#)
 version [25](#)
 environment variables
 described [19](#)
 displaying settings [19](#)
 location of [20](#)
 setting [19](#)
 unsetting [23](#)
 files
 copying [5](#)
 deleting [6](#)
 displaying a list of [7](#)
 displaying the contents of [4, 15, 22](#)
 renaming [16](#)
 file system
 formatting [10](#)
 initializing flash [9](#)
 running a consistency check [11](#)
 prompt [1](#)
 resetting the system [17](#)
 boot manual command [47](#)

boot private-config-file command [48](#)
 boot system command [49](#)
 BPDU filtering, for spanning tree [646, 681](#)
 BPDU guard, for spanning tree [648, 681](#)
 broadcast storm control [699](#)

C

candidate switches
 See clusters
 cat (boot loader) command [4](#)
 channel-group command [50](#)
 channel-protocol command [53](#)
 Cisco SoftPhone
 auto-QoS configuration [39](#)
 trusting packets sent from [329](#)
 CISP
 See Client Information Signalling Protocol
 cisp
 debug platform cisp command [35](#)
 cisp enable command [54](#)
 class command [55](#)
 class-map command [57](#)
 class maps
 creating [57](#)
 defining the match criteria [290](#)
 displaying [424](#)
 class of service
 See CoS
 clear dot1x command [59](#)
 clear eap sessions command [60](#)
 clear energywise neighbors command [61](#)
 clear errdisable interface [62](#)
 clear ip arp inspection log command [63](#)
 clear ip arp inspection statistics command [64](#)
 clear ip dhcp snooping database command [65](#)
 clear lacp command [67](#)
 clear mac address-table command [68, 70](#)
 clear nmsp statistics command [71](#)

- clear pagp command [72](#)
 - clear port-security command [73](#)
 - clear spanning-tree counters command [75](#)
 - clear spanning-tree detected-protocols command [76](#)
 - clear vmps statistics command [77](#)
 - clear vtp counters command [78](#)
 - Client Information Signalling Protocol [54, 109, 423, 5, 35](#)
 - cluster commander-address command [79](#)
 - cluster discovery hop-count command [81](#)
 - cluster enable command [82](#)
 - cluster holdtime command [83](#)
 - cluster member command [84](#)
 - cluster outside-interface command [86](#)
 - cluster run command [87](#)
 - clusters
 - adding candidates [84](#)
 - binding to HSRP group [88](#)
 - building manually [84](#)
 - communicating with
 - devices outside the cluster [86](#)
 - members by using Telnet [382](#)
 - debug messages, display [6](#)
 - displaying
 - candidate switches [427](#)
 - debug messages [6](#)
 - member switches [429](#)
 - status [425](#)
 - hop-count limit for extended discovery [81](#)
 - HSRP standby groups [88](#)
 - redundancy [88](#)
 - SNMP trap [635](#)
 - cluster standby-group command [88](#)
 - cluster timer command [90](#)
 - command modes defined [1](#)
 - command switch
 - See clusters
 - configuration files
 - password recovery disable considerations [1](#)
 - specifying the name [43, 48](#)
 - configuring multiple interfaces [163](#)
 - config-vlan mode
 - commands [746](#)
 - description [4](#)
 - entering [745](#)
 - summary [2](#)
 - copy (boot loader) command [5](#)
 - CoS
 - assigning default value to incoming packets [299](#)
 - overriding the incoming value [299](#)
 - CoS-to-DSCP map [303](#)
 - CPU ASIC statistics, displaying [431](#)
 - crashinfo files [156](#)
-
- ## D
- debug auto qos command [2](#)
 - debug backup command [4](#)
 - debug cisp command [5](#)
 - debug cluster command [6](#)
 - debug dot1x command [8](#)
 - debug dtp command [10](#)
 - debug eap command [11](#)
 - debug etherchannel command [12](#)
 - debug ilpower command [14](#)
 - debug interface command [15](#)
 - debug ip dhcp snooping command [17](#)
 - debug ip igmp filter command [18](#)
 - debug ip igmp max-groups command [19](#)
 - debug ip igmp snooping command [20](#)
 - debug lacp command [21](#)
 - debug lldp packets command [22](#)
 - debug mac-notification command [23](#)
 - debug matm command [24](#)
 - debug matm move update command [25](#)
 - debug monitor command [26](#)
 - debug mvrdbg command [28](#)
 - debug nmsp command [30](#)
 - debug nvramp command [31](#)

- debug pagp command [32](#)
- debug platform acl command [33](#)
- debug platform backup interface command [34](#)
- debug platform cisp command [35](#)
- debug platform configuration command [41](#)
- debug platform cpu-queues command [36](#)
- debug platform dot1x command [38](#)
- debug platform etherchannel command [39](#)
- debug platform forw-tcam command [40](#)
- debug platform ip arp inspection command [43](#)
- debug platform ip dhcp command [44](#)
- debug platform ip igmp snooping command [45](#)
- debug platform ip source-guard command [47](#)
- debug platform led command [48](#)
- debug platform matm command [49](#)
- debug platform messaging application command [51](#)
- debug platform phy command [52](#)
- debug platform pm command [54](#)
- debug platform port-asic command [56](#)
- debug platform port-security command [57](#)
- debug platform qos-acl-tcam command [58](#)
- debug platform resource-manager command [59](#)
- debug platform snmp command [60](#)
- debug platform span command [61](#)
- debug platform supervisor-asic command [62](#)
- debug platform sw-bridge command [63](#)
- debug platform tcam command [64](#)
- debug platform udld command [66](#)
- debug platform vlan command [67](#)
- debug pm command [68](#)
- debug port-security command [70](#)
- debug qos-manager command [71](#)
- debug spanning-tree backbonefast command [74](#)
- debug spanning-tree bpdu command [75](#)
- debug spanning-tree bpdu-opt command [76](#)
- debug spanning-tree command [72](#)
- debug spanning-tree mstp command [77](#)
- debug spanning-tree switch command [79](#)
- debug spanning-tree uplinkfast command [81](#)
- debug sw-vlan command [82](#)
- debug sw-vlan ifs command [84](#)
- debug sw-vlan notification command [86](#)
- debug sw-vlan vtp command [88](#)
- debug udld command [90](#)
- debug vqpc command [92](#)
- define interface-range command [92](#)
- delete (boot loader) command [6](#)
- delete command [94](#)
- deny (ARP access-list configuration) command [96](#)
- deny command [98](#)
- detect mechanism, causes [148](#)
- DHCP snooping
 - accepting untrusted packets from edge switch [195](#)
 - enabling
 - on a VLAN [201](#)
 - option 82 [193, 195](#)
 - trust on an interface [199](#)
 - error recovery timer [154](#)
 - rate limiting [197](#)
- DHCP snooping binding database
 - binding file, configuring [191](#)
 - bindings
 - adding [189](#)
 - deleting [189](#)
 - displaying [491](#)
 - clearing database agent statistics [65](#)
 - database agent, configuring [191](#)
 - displaying
 - binding entries [491](#)
 - database agent status [494, 496](#)
 - renewing [386](#)
- dir (boot loader) command [7](#)
- directories, deleting [94](#)
- domain name, VTP [764, 768](#)
- dot1x auth-fail max-attempts [103](#)
- dot1x auth-fail vlan [105](#)
- dot1x command [101](#)
- dot1x control-direction command [107](#)

- dot1x credentials (global configuration) command [109](#)
- dot1x critical global configuration command [110](#)
- dot1x critical interface configuration command [112](#)
- dot1x default command [114](#)
- dot1x fallback command [115](#)
- dot1x guest-vlan command [116](#)
- dot1x host-mode command [118](#)
- dot1x initialize command [120](#)
- dot1x mac-auth-bypass command [121](#)
- dot1x max-reauth-req command [123](#)
- dot1x max-req command [124](#)
- dot1x pae command [125](#)
- dot1x port-control command [126](#)
- dot1x re-authenticate command [128](#)
- dot1x reauthentication command [129](#)
- dot1x test eapol-capable command [130](#)
- dot1x test timeout command [131](#)
- dot1x timeout command [132](#)
- dot1x violation-mode command [135](#)
- DSCP-to-CoS map [303](#)
- DSCP-to-DSCP-mutation map [303](#)
- DTP [711](#)
- DTP flap
 - error detection for [148](#)
 - error recovery timer [154](#)
- DTP negotiation [712](#)
- dual-purpose uplink ports
 - displaying configurable options [475](#)
 - displaying the active media [480](#)
 - selecting the type [293](#)
- duplex command [136](#)
- dynamic-access ports
 - configuring [702](#)
 - restrictions [703](#)
- dynamic ARP inspection
 - ARP ACLs
 - apply to a VLAN [175](#)
 - define [14](#)
 - deny packets [96](#)
 - display [410](#)
 - permit packets [354](#)
 - clear
 - log buffer [63](#)
 - statistics [64](#)
 - display
 - ARP ACLs [410](#)
 - configuration and operating state [486](#)
 - log buffer [486](#)
 - statistics [486](#)
 - trust state and rate limit [486](#)
 - enable per VLAN [185](#)
 - log buffer
 - clear [63](#)
 - configure [179](#)
 - display [486](#)
 - rate-limit incoming ARP packets [177](#)
 - statistics
 - clear [64](#)
 - display [486](#)
 - trusted interface state [181](#)
 - type of packet logged [186](#)
 - validation checks [183](#)
- dynamic auto VLAN membership mode [710](#)
- dynamic desirable VLAN membership mode [710](#)
- Dynamic Host Configuration Protocol (DHCP)
 - See DHCP snooping
- Dynamic Trunking Protocol
 - See DTP

E

EAP-request/identity frame

- maximum number to send [124](#)
- response time before retransmitting [132](#)

energywise (global configuration) command [138, 140](#)energywise domain command [142](#)energywise query command [144](#)environment variables, displaying [419](#)errdisable detect cause command [148](#)errdisable detect cause small-frame command [151](#)errdisable recovery cause small-frame [153](#)errdisable recovery command [154](#)error conditions, displaying [462](#)error disable detection [148](#)error-disabled interfaces, displaying [473](#)

EtherChannel

- assigning Ethernet interface to channel group [50](#)

- creating port-channel logical interface [161](#)

- debug EtherChannel/PAgP, display [12](#)

- debug platform-specific events, display [39](#)

- displaying [466](#)

- interface information, displaying [473](#)

LACP

- clearing channel-group information [67](#)

- debug messages, display [21](#)

- displaying [523](#)

- modes [50](#)

- port priority for hot-standby ports [244](#)

- restricting a protocol [53](#)

- system priority [246](#)

- load-distribution methods [365](#)

PAgP

- aggregate-port learner [350](#)

- clearing channel-group information [72](#)

- debug messages, display [32](#)

- displaying [583](#)

- error detection for [148](#)

- error recovery timer [154](#)

EtherChannel (continued)

- learn method [350](#)

- modes [50](#)

- physical-port learner [350](#)

- priority of interface for transmitted traffic [352](#)

Ethernet controller, internal register display [433](#)Ethernet statistics, collecting [390](#)exception crashinfo command [156](#)exit command [757](#)extended discovery of candidate switches [81](#)

extended-range VLANs

- and allowed VLAN list [725](#)

- and pruning-eligible list [725](#)

- configuring [745](#)

extended system ID for STP [654](#)**F**fallback profile command [157](#)fallback profiles, displaying [469](#)fan information, displaying [459](#)file name, VTP [764](#)files, deleting [94](#)flash_init (boot loader) command [9](#)flexible authentication ordering [27](#)

Flex Links

- configuring [704](#)

- configuring preferred VLAN [706](#)

- displaying [473](#)

flowcontrol command [159](#)format (boot loader) command [10](#)forwarding results, display [5](#)frame forwarding information, displaying [5](#)fsock (boot loader) command [11](#)

G

global configuration mode [2, 3](#)

H

hardware ACL statistics [406](#)

help (boot loader) command [12](#)

hierarchical policy maps [364](#)

hop-count limit for clusters [81](#)

host connection, port configuration [709](#)

Hot Standby Router Protocol

See HSRP

HSRP

binding HSRP group to cluster [88](#)

standby group [88](#)

I

IEEE 802.1x

and switchport modes [711](#)

violation error recovery [154](#)

See also port-based authentication

IEEE 802.1X Port Based Authentication

enabling guest VLAN supplicant [104, 115, 158](#)

IGMP filters

applying [202](#)

debug messages, display [18](#)

IGMP groups, setting maximum [204](#)

IGMP maximum groups, debugging [19](#)

IGMP profiles

creating [206](#)

displaying [499](#)

IGMP snooping

adding ports as a static member of a group [223](#)

displaying [500, 505, 507](#)

enabling [208](#)

enabling the configurable-leave timer [210](#)

enabling the Immediate-Leave feature [219](#)

IGMP snooping (continued)

flooding query count [216](#)

interface topology change notification behavior [218](#)

multicast table [503](#)

querier [212](#)

query solicitation [216](#)

report suppression [214](#)

switch topology change notification behavior [216](#)

images

See software images

Immediate-Leave feature, MVR [339](#)

immediate-leave processing [219](#)

Immediate-Leave processing, IPv6 [242](#)

interface configuration mode [2, 4](#)

interface port-channel command [161](#)

interface range command [163](#)

interface-range macros [92](#)

interfaces

assigning Ethernet interface to channel group [50](#)

configuring [136](#)

configuring multiple [163](#)

creating port-channel logical [161](#)

debug messages, display [15](#)

disabling [631](#)

displaying the MAC address table [544](#)

restarting [631](#)

interface speed, configuring [691](#)

interface vlan command [166](#)

internal registers, displaying [433, 442](#)

Internet Group Management Protocol

See IGMP

invalid GBIC

error detection for [148](#)

error recovery timer [154](#)

ip access-group command [167](#)

ip address command [169](#)

IP addresses, setting [169](#)

ip admission command [171](#)

ip admission name proxy http command [173](#)

- ip arp inspection filter vlan command [175](#)
 - ip arp inspection limit command [177](#)
 - ip arp inspection log-buffer command [179](#)
 - ip arp inspection trust command [181](#)
 - ip arp inspection validate command [183](#)
 - ip arp inspection vlan command [185](#)
 - ip arp inspection vlan logging command [186](#)
 - IP DHCP snooping
 - See DHCP snooping
 - ip dhcp snooping binding command [189](#)
 - ip dhcp snooping command [188](#)
 - ip dhcp snooping database command [191](#)
 - ip dhcp snooping information option allow-untrusted command [195](#)
 - ip dhcp snooping information option command [193](#)
 - ip dhcp snooping limit rate command [197](#)
 - ip dhcp snooping trust command [199](#)
 - ip dhcp snooping verify command [200](#)
 - ip dhcp snooping vlan command [201](#)
 - ip igmp filter command [202](#)
 - ip igmp max-groups command [204](#)
 - ip igmp profile command [206](#)
 - ip igmp snooping command [208](#)
 - ip igmp snooping last-member-query-interval command [210](#)
 - ip igmp snooping querier command [212](#)
 - ip igmp snooping report-suppression command [214](#)
 - ip igmp snooping tcn command [216](#)
 - ip igmp snooping tcn flood command [218](#)
 - ip igmp snooping vlan immediate-leave command [219](#)
 - ip igmp snooping vlan mrouter command [221](#)
 - ip igmp snooping vlan static command [223](#)
 - IP multicast addresses [336](#)
 - IP phones
 - auto-QoS configuration [39](#)
 - trusting packets sent from [329](#)
 - IP-precedence-to-DSCP map [303](#)
 - ip source binding command [225](#)
 - IP source guard
 - disabling [229](#)
 - displaying
 - binding entries [509](#)
 - configuration [511](#)
 - dynamic binding entries only [491](#)
 - enabling [229](#)
 - static IP source bindings [225](#)
 - ip ssh command [227](#)
 - ipv6 mld snooping command [230](#)
 - ipv6 mld snooping last-listener-query count command [232](#)
 - ipv6 mld snooping last-listener-query-interval command [234](#)
 - ipv6 mld snooping listener-message-suppression command [236](#)
 - ipv6 mld snooping robustness-variable command [238](#)
 - ipv6 mld snooping tcn command [240](#)
 - ipv6 mld snooping vlan command [242](#)
 - IPv6 SDM template [391](#)
 - ip verify source command [229](#)
-
- ## J
- jumbo frames
 - See MTU
-
- ## L
- LACP
 - See EtherChannel
 - lACP port-priority command [244](#)
 - lACP system-priority command [246](#)
 - Layer 2 traceroute
 - IP addresses [736](#)
 - MAC addresses [733](#)
 - line configuration mode [2, 5](#)
 - Link Aggregation Control Protocol
 - See EtherChannel

link flap
 error detection for [148](#)
 error recovery timer [154](#)

link state group command [252](#)

link state track command [254](#)

load-distribution methods for EtherChannel [365](#)

location (global configuration) command [248](#)

location (interface configuration) command [250](#)

logging event command [255](#)

logging event power-inline-status command [256](#)

logging file command [257](#)

logical interface [161](#)

loopback error
 detection for [148](#)
 recovery timer [154](#)

loop guard, for spanning tree [656, 660](#)

M

mac access-group command [259](#)

MAC access-groups, displaying [532](#)

MAC access list configuration mode [261](#)

mac access-list extended command [261](#)

MAC access lists [98](#)

MAC addresses
 disabling MAC address learning per VLAN [264](#)
 displaying
 aging time [538](#)
 all [536](#)
 dynamic [542](#)
 MAC address-table move updates [547](#)
 notification settings [546, 549](#)
 number of addresses in a VLAN [540](#)
 per interface [544](#)
 per VLAN [553](#)
 static [551](#)
 static and dynamic entries [534](#)

MAC addresses (continued)
 dynamic
 aging time [263](#)
 deleting [68](#)
 displaying [542](#)
 enabling MAC address notification [268](#)
 enabling MAC address-table move update [266](#)
 static
 adding and removing [270](#)
 displaying [551](#)
 dropping on an interface [271](#)
 tables [536](#)

MAC address notification, debugging [23](#)

mac address-table aging-time [259](#)

mac address-table aging-time command [263](#)

mac address-table learning command [264](#)

mac address-table move update command [266](#)

mac address-table notification command [268](#)

mac address-table static command [270](#)

mac address-table static drop command [271](#)

macro apply command [273](#)

macro auto execute command [276](#)

macro auto global processing command [281](#)

macro description command [283](#)

macro global command [284](#)

macro global description command [287](#)

macro name command [288](#)

macros
 adding a description [283](#)
 adding a global description [287](#)
 applying [284](#)
 creating [288](#)
 displaying [585](#)
 interface range [92, 163](#)
 specifying parameter values [284](#)
 tracing [284](#)

- maps
 - QoS
 - defining [303](#)
 - displaying [563](#)
- match (class-map configuration) command [290](#)
- maximum transmission unit
 - See MTU
- mdix auto command [292](#)
- media-type command [293](#)
- member switches
 - See clusters
- memory (boot loader) command [13](#)
- mkdir (boot loader) command [14](#)
- MLD snooping
 - configuring [236, 238](#)
 - configuring queries [232, 234](#)
 - configuring topology change notification [240](#)
 - displaying [513, 515, 517, 519](#)
 - enabling [230](#)
- MLD snooping on a VLAN, enabling [242](#)
- mls qos aggregate-policer command [297](#)
- mls qos command [295](#)
- mls qos cos command [299](#)
- mls qos dscp-mutation command [301](#)
- mls qos map command [303](#)
- mls qos queue-set output buffers command [307](#)
- mls qos queue-set output threshold command [309](#)
- mls qos rewrite ip dscp command [311](#)
- mls qos srr-queue input bandwidth command [313](#)
- mls qos srr-queue input buffers command [315](#)
- mls qos-srr-queue input cos-map command [317](#)
- mls qos srr-queue input dscp-map command [319](#)
- mls qos srr-queue input priority-queue command [321](#)
- mls qos srr-queue input threshold command [323](#)
- mls qos-srr-queue output cos-map command [325](#)
- mls qos srr-queue output dscp-map command [327](#)
- mls qos trust command [329](#)
- mode, MVR [336](#)
- Mode button, and password recovery [393](#)
- modes, commands [1](#)
- monitor session command [331](#)
- more (boot loader) command [15](#)
- MSTP
 - displaying [605](#)
 - interoperability [76](#)
 - link type [658](#)
 - MST region
 - aborting changes [664](#)
 - applying changes [664](#)
 - configuration name [664](#)
 - configuration revision number [664](#)
 - current or pending display [664](#)
 - displaying [605](#)
 - MST configuration mode [664](#)
 - VLANs-to-instance mapping [664](#)
 - path cost [666](#)
 - protocol mode [662](#)
 - restart protocol migration process [76](#)
 - root port
 - loop guard [656](#)
 - preventing from becoming designated [656](#)
 - restricting which can be root [656](#)
 - root guard [656](#)
 - root switch
 - affects of extended system ID [654](#)
 - hello-time [669, 677](#)
 - interval between BDPU messages [670](#)
 - interval between hello BPDU messages [669, 677](#)
 - max-age [670](#)
 - maximum hop count before discarding BPDU [671](#)
 - port priority for selection of [673](#)
 - primary or secondary [677](#)
 - switch priority [676](#)

MSTP (continued)

- state changes
 - blocking to forwarding state [683](#)
 - enabling BPDU filtering [646, 681](#)
 - enabling BPDU guard [648, 681](#)
 - enabling Port Fast [681, 683](#)
 - forward-delay time [668](#)
 - length of listening and learning states [668](#)
 - rapid transition to forwarding [658](#)
 - shutting down Port Fast-enabled ports [681](#)
- state information display [604](#)

MTU

- configuring size [730](#)
- displaying global setting [613](#)

multicast group address, MVR [339](#)

multicast groups, MVR [337](#)

Multicast Listener Discovery

See MLD

multicast router learning method [221](#)

multicast router ports, configuring [221](#)

multicast router ports, IPv6 [242](#)

multicast storm control [699](#)

multicast VLAN, MVR [337](#)

multicast VLAN registration

See MVR

Multiple Spanning Tree Protocol

See MSTP

MVR

- and address aliasing [337](#)
- configuring [336](#)
- configuring interfaces [339](#)
- debug messages, display [28](#)
- displaying [572](#)
- displaying interface information [574](#)
- members, displaying [576](#)

mvr (global configuration) command [336](#)

mvr (interface configuration) command [339](#)

mvr vlan group command [340](#)

N

native VLANs [725](#)

Network Admission Control Software Configuration Guide [172, 174](#)

network-policy (global configuration) command [343](#)

network-policy command [342](#)

network-policy profile (network-policy configuration) command [345](#)

nmosp attachment suppress command [349](#)

nmosp command [347](#)

nonegotiate, speed [691](#)

nonegotiating DTP messaging [712](#)

non-IP protocols

denying [98](#)

forwarding [356](#)

non-IP traffic access lists [261](#)

non-IP traffic forwarding

denying [98](#)

permitting [356](#)

normal-range VLANs [745, 750](#)

no vlan command [745, 754](#)

O

online diagnostics

global configuration mode

clearing health monitoring diagnostic test schedule [63](#)

setting health monitoring diagnostic testing [63](#)

setting up health monitoring diagnostic test schedule [63](#)

P

PAGP

See EtherChannel

pagp learn-method command [350](#)

pagp port-priority command [352](#)

password, VTP [764, 768](#)

- password-recovery mechanism, enabling and disabling [393](#)
- permit (ARP access-list configuration) command [354](#)
- permit (MAC access-list configuration) command [356](#)
- per-VLAN spanning-tree plus
 - See STP
- physical-port learner [350](#)
- PID, displaying [485](#)
- PIM-DVMRP, as multicast router learning method [221](#)
- PoE
 - configuring the power budget [370](#)
 - configuring the power management mode [367](#)
 - displaying controller register values [440](#)
 - displaying power management information [593](#)
 - logging of status [256](#)
 - monitoring power [372](#)
 - policing power consumption [372](#)
- police aggregate command [361](#)
- police command [359](#)
- policed-DSCP map [303](#)
- policy-map command [363](#)
- policy maps
 - applying to an interface [395, 399](#)
 - creating [363](#)
 - displaying [588](#)
 - hierarchical [364](#)
 - policers
 - displaying [556](#)
 - for a single class [359](#)
 - for multiple classes [297, 361](#)
 - policed-DSCP map [303](#)
 - traffic classification
 - defining the class [55](#)
 - defining trust states [738](#)
 - setting DSCP or IP precedence values [397](#)
- Port Aggregation Protocol
 - See EtherChannel
- port-based authentication
 - AAA method list [3](#)
 - configuring violation modes [135](#)
 - debug messages, display [8](#)
 - enabling IEEE 802.1x
 - globally [101](#)
 - per interface [126](#)
 - guest VLAN [116](#)
 - host modes [118](#)
 - IEEE 802.1x AAA accounting methods [1](#)
 - initialize an interface [120, 131](#)
 - MAC authentication bypass [121](#)
 - manual control of authorization state [126](#)
 - PAE as authenticator [125](#)
 - periodic re-authentication
 - enabling [129](#)
 - time between attempts [132](#)
 - quiet period between failed authentication exchanges [132](#)
 - re-authenticating IEEE 802.1x-enabled ports [128](#)
 - resetting configurable IEEE 802.1x parameters [114](#)
 - switch-to-authentication server retransmission time [132](#)
 - switch-to-client frame-retransmission number [123 to 124](#)
 - switch-to-client retransmission time [132](#)
 - test for IEEE 802.1x readiness [130](#)
- port-channel load-balance command [365](#)
- Port Fast, for spanning tree [683](#)
- port ranges, defining [92](#)
- ports, debugging [68](#)
- ports, protected [723](#)
- port security
 - aging [719](#)
 - debug messages, display [70](#)
 - enabling [714](#)
 - violation error recovery [154](#)
- port trust states for QoS [329](#)
- port types, MVR [339](#)
- power information, displaying [459](#)

power inline command [367](#)
 power inline consumption command [370](#)
 power inline police command [372](#)
 Power over Ethernet
 See PoE
 priority-queue command [375](#)
 privileged EXEC mode [2, 3](#)
 product identification information, displaying [485](#)
 protected ports, displaying [478](#)
 pruning
 VLANs [725](#)
 VTP
 displaying interface information [473](#)
 enabling [764, 768](#)
 pruning-eligible VLAN list [726](#)
 PVST+
 See STP

Q

QoS

auto-QoS
 configuring [39](#)
 debug messages, display [2](#)
 displaying [415](#)
 class maps
 creating [57](#)
 defining the match criteria [290](#)
 displaying [424](#)
 defining the CoS value for an incoming packet [299](#)
 displaying configuration information [415, 555](#)
 DSCP transparency [311](#)
 DSCP trusted ports
 applying DSCP-to-DSCP-mutation map to [301](#)
 defining DSCP-to-DSCP-mutation map [303](#)
 egress queues
 allocating buffers [307](#)
 defining the CoS output queue threshold map [325](#)

QoS (continued)

 defining the DSCP output queue threshold map [327](#)
 displaying buffer allocations [559](#)
 displaying CoS output queue threshold map [563](#)
 displaying DSCP output queue threshold map [563](#)
 displaying queueing strategy [559](#)
 displaying queue-set settings [566](#)
 enabling bandwidth shaping and scheduling [695](#)
 enabling bandwidth sharing and scheduling [697](#)
 limiting the maximum output on a port [693](#)
 mapping a port to a queue-set [377](#)
 mapping CoS values to a queue and threshold [325](#)
 mapping DSCP values to a queue and threshold [327](#)
 setting maximum and reserved memory allocations [309](#)
 setting WTD thresholds [309](#)
 enabling [295](#)
 ingress queues
 allocating buffers [315](#)
 assigning SRR scheduling weights [313](#)
 defining the CoS input queue threshold map [317](#)
 defining the DSCP input queue threshold map [319](#)
 displaying buffer allocations [559](#)
 displaying CoS input queue threshold map [563](#)
 displaying DSCP input queue threshold map [563](#)
 displaying queueing strategy [559](#)
 displaying settings for [557](#)
 enabling the priority queue [321](#)
 mapping CoS values to a queue and threshold [317](#)
 mapping DSCP values to a queue and threshold [319](#)
 setting WTD thresholds [323](#)

QoS (continued)

maps

- defining [303, 317, 319, 325, 327](#)

- displaying [563](#)

policy maps

- applying an aggregate policer [361](#)

- applying to an interface [395, 399](#)

- creating [363](#)

- defining policers [297, 359](#)

- displaying policers [556](#)

- displaying policy maps [588](#)

- hierarchical [364](#)

- policed-DSCP map [303](#)

- setting DSCP or IP precedence values [397](#)

- traffic classifications [55](#)

- trust states [738](#)

- port trust states [329](#)

- queues, enabling the expedite [375](#)

statistics

- in-profile and out-of-profile packets [559](#)

- packets enqueued or dropped [559](#)

- sent and received CoS values [559](#)

- sent and received DSCP values [559](#)

- trusted boundary for IP phones [329](#)

quality of service

- See QoS

- querytime, MVR [336](#)

- queue-set command [377](#)

R

- radius-server dead-criteria command [378](#)

- radius-server host command [380](#)

- rapid per-VLAN spanning-tree plus

- See STP

- rapid PVST+

- See STP

- rcommand command [382](#)

- re-authenticating IEEE 802.1x-enabled ports [128](#)

- re-authentication

- periodic [129](#)

- time between attempts [132](#)

- receiver ports, MVR [339](#)

- receiving flow-control packets [159](#)

- recovery mechanism

- causes [154](#)

- display [62, 421, 460, 464](#)

- timer interval [154](#)

- redundancy for cluster switches [88](#)

- remote-span command [384](#)

- Remote Switched Port Analyzer

- See RSPAN

- rename (boot loader) command [16](#)

- renew ip dhcp snooping database command [386](#)

- reset (boot loader) command [17](#)

- reset command [757](#)

- resource templates, displaying [598](#)

- restricted VLAN

- See dot1x auth-fail vlan

- rmdir (boot loader) command [18](#)

- rmon collection stats command [390](#)

- root guard, for spanning tree [656](#)

- RSPAN

- configuring [331](#)

- displaying [569](#)

- filter RSPAN traffic [331](#)

- remote-span command [384](#)

- sessions

- displaying [569](#)

S

- sdm prefer command [391](#)

- SDM templates

- displaying [598](#)

- dual IPv4 and IPv6 [391](#)

- secure ports, limitations [716](#)

- sending flow-control packets [159](#)

- service password-recovery command [393](#)
- service-policy command [395](#)
- set (boot loader) command [19](#)
- set command [397](#)
- setup command [399](#)
- setup express command [402](#)
- shell trigger command [404](#)
- show access-lists command [406](#)
- show archive status command [409](#)
- show arp access-list command [410](#)
- show authentication command [411](#)
- show auto qos command [415](#)
- show boot command [419](#)
- show cable-diagnostics tdr command [421](#)
- show changes command [757](#)
- show cisp command [423](#)
- show class-map command [424](#)
- show cluster candidates command [427](#)
- show cluster command [425](#)
- show cluster members command [429](#)
- show controllers cpu-interface command [431](#)
- show controllers ethernet-controller command [433](#)
- show controllers power inline command [440](#)
- show controllers team command [442](#)
- show controller utilization command [444](#)
- show current command [757](#)
- show dot1x command [446](#)
- show dtp [450](#)
- show eap command [452](#)
- show energywise command [455](#)
- show env command [459](#)
- show errdisable detect command [460](#)
- show errdisable flap-values command [462](#)
- show errdisable recovery command [464](#)
- show etherchannel command [466](#)
- show fallback profile command [469](#)
- show flowcontrol command [471](#)
- show interfaces command [473](#)
- show interfaces counters command [482](#)
- show inventory command [485](#)
- show ip arp inspection command [486](#)
- show ip dhcp snooping binding command [491](#)
- show ip dhcp snooping command [490](#)
- show ip dhcp snooping database command [494, 496](#)
- show ip igmp profile command [499](#)
- show ip igmp snooping address command [515](#)
- show ip igmp snooping command [500, 513](#)
- show ip igmp snooping groups command [503](#)
- show ip igmp snooping mrouter command [505, 517](#)
- show ip igmp snooping querier command [507, 519](#)
- show ip source binding command [509](#)
- show ipv6 route updated [521](#)
- show ip verify source command [511](#)
- show lacp command [523](#)
- show link state group command [530](#)
- show location [527](#)
- show mac access-group command [532](#)
- show mac address-table address command [536](#)
- show mac address-table aging time command [538](#)
- show mac address-table command [534](#)
- show mac address-table count command [540](#)
- show mac address-table dynamic command [542](#)
- show mac address-table interface command [544](#)
- show mac address-table learning command [546](#)
- show mac address-table move update command [547](#)
- show mac address-table notification command [70, 549, 25](#)
- show mac address-table static command [551](#)
- show mac address-table vlan command [553](#)
- show mls qos aggregate-policer command [556](#)
- show mls qos command [555](#)
- show mls qos input-queue command [557](#)
- show mls qos interface command [559](#)
- show mls qos maps command [563](#)
- show mls qos queue-set command [566](#)
- show mls qos vlan command [568](#)
- show monitor command [569](#)
- show mvr command [572](#)
- show mvr interface command [574](#)

- show mvr members command [576](#)
- show network-policy profile command [578](#)
- show nmsp command [580](#)
- show pagp command [583](#)
- show parser macro command [585](#)
- show platform acl command [2](#)
- show platform backup interface command [3](#)
- show platform etherchannel command [4](#)
- show platform forward command [5](#)
- show platform igmp snooping command [7](#)
- show platform layer4op command [9](#)
- show platform mac-address-table command [10](#)
- show platform messaging command [11](#)
- show platform monitor command [12](#)
- show platform mvr table command [13](#)
- show platform pm command [14](#)
- show platform port-asic command [15](#)
- show platform port-security command [20](#)
- show platform qos command [21](#)
- show platform resource-manager command [22](#)
- show platform snmp counters command [24](#)
- show platform spanning-tree command [25](#)
- show platform stack manager command [27](#)
- show platform stp-instance command [26](#)
- show platform team command [28](#)
- show platform vlan command [30](#)
- show policy-map command [588](#)
- show port security command [590](#)
- show power inline command [593](#)
- show proposed command [757](#)
- show sdm prefer command [598](#)
- show setup express command [600](#)
- show shell command [601](#)
- show spanning-tree command [604](#)
- show storm-control command [610](#)
- show system mtu command [613](#)
- show trust command [738](#)
- show udd command [615](#)
- show version command [618](#)
- show vlan command [620](#)
- show vlan command, fields [621](#)
- show vmps command [623](#)
- show vtp command [626](#)
- shutdown command [631](#)
- shutdown vlan command [632](#)
- small violation-rate command [633](#)
- Smartports macros
 - See macros
- SNMP host, specifying [639](#)
- SNMP informs, enabling the sending of [635](#)
- snmp-server enable traps command [635](#)
- snmp-server host command [639](#)
- snmp trap mac-notification command [643](#)
- SNMP traps
 - enabling MAC address notification trap [643](#)
 - enabling the MAC address notification feature [268](#)
 - enabling the sending of [635](#)
- SoftPhone
 - See Cisco SoftPhone
- software images
 - deleting [94](#)
 - downloading [6](#)
 - upgrading [6](#)
 - uploading [12](#)
- software version, displaying [618](#)
- source ports, MVR [339](#)
- SPAN
 - configuring [331](#)
 - debug messages, display [26](#)
 - displaying [569](#)
 - filter SPAN traffic [331](#)
 - sessions
 - add interfaces to [331](#)
 - displaying [569](#)
 - start new [331](#)
- spanning-tree backbonefast command [645](#)
- spanning-tree bpdudfilter command [646](#)
- spanning-tree bpduguard command [648](#)

- spanning-tree cost command [650](#)
 - spanning-tree etherchannel command [652](#)
 - spanning-tree extend system-id command [654](#)
 - spanning-tree guard command [656](#)
 - spanning-tree link-type command [658](#)
 - spanning-tree loopguard default command [660](#)
 - spanning-tree mode command [662](#)
 - spanning-tree mst configuration command [664](#)
 - spanning-tree mst cost command [666](#)
 - spanning-tree mst forward-time command [668](#)
 - spanning-tree mst hello-time command [669](#)
 - spanning-tree mst max-age command [670](#)
 - spanning-tree mst max-hops command [671](#)
 - spanning-tree mst port-priority command [673](#)
 - spanning-tree mst pre-standard command [675](#)
 - spanning-tree mst priority command [676](#)
 - spanning-tree mst root command [677](#)
 - spanning-tree portfast (global configuration) command [681](#)
 - spanning-tree portfast (interface configuration) command [683](#)
 - spanning-tree port-priority command [679](#)
 - Spanning Tree Protocol
 - See STP
 - spanning-tree transmit hold-count command [685](#)
 - spanning-tree uplinkfast command [686](#)
 - spanning-tree vlan command [688](#)
 - speed command [691](#)
 - srr-queue bandwidth limit command [693](#)
 - srr-queue bandwidth share command [697](#)
 - SSH, configuring version [227](#)
 - static-access ports, configuring [702](#)
 - statistics, Ethernet group [390](#)
 - sticky learning, enabling [714](#)
 - storm-control command [699](#)
- STP
- BackboneFast [645](#)
 - counters, clearing [75](#)
 - debug messages, display
 - BackboneFast events [74](#)
 - MSTP [77](#)
 - optimized BPDUs handling [76](#)
 - spanning-tree activity [72](#)
 - switch shim [79](#)
 - transmitted and received BPDUs [75](#)
 - UplinkFast [81](#)
 - detection of indirect link failures [645](#)
 - EtherChannel misconfiguration [652](#)
 - extended system ID [654](#)
 - path cost [650](#)
 - protocol modes [662](#)
 - root port
 - accelerating choice of new [686](#)
 - loop guard [656](#)
 - preventing from becoming designated [656](#)
 - restricting which can be root [656](#)
 - root guard [656](#)
 - UplinkFast [686](#)
 - root switch
 - affects of extended system ID [654, 689](#)
 - hello-time [688](#)
 - interval between BPDU messages [688](#)
 - interval between hello BPDU messages [688](#)
 - max-age [688](#)
 - port priority for selection of [679](#)
 - primary or secondary [688](#)
 - switch priority [688](#)
 - state changes
 - blocking to forwarding state [683](#)
 - enabling BPDU filtering [646, 681](#)
 - enabling BPDU guard [648, 681](#)
 - enabling Port Fast [681, 683](#)
 - enabling timer to recover from error state [154](#)
 - forward-delay time [688](#)

STP (continued)

- length of listening and learning states [688](#)

- shutting down Port Fast-enabled ports [681](#)

- state information display [604](#)

- VLAN options [676, 688](#)

Switched Port Analyzer

- See SPAN

- switchport access command [702](#)

- switchport backup interface command [704](#)

- switchport block command [708](#)

- switchport host command [709](#)

- switchport mode command [710](#)

- switchport nonegotiate command [712](#)

- switchport port-security aging command [719](#)

- switchport port-security command [714](#)

- switchport priority extend command [721](#)

- switchport protected command [723](#)

- switchports, displaying [473](#)

- switchport trunk command [725](#)

- switchport voice vlan command [728](#)

- system message logging [256](#)

- system message logging, save message to flash [257](#)

- system mtu command [730](#)

- system resource templates [391](#)

T

- tar files, creating, listing, and extracting [9](#)

- TDR, running [732](#)

- Telnet, using to communicate to cluster switches [382](#)

- temperature information, displaying [459](#)

- templates, SDM [392](#)

- templates, system resources [391](#)

- test cable-diagnostics tdr command [732](#)

- test relay [733](#)

- traceroute mac command [733](#)

- traceroute mac ip command [736](#)

- trunking, VLAN mode [710](#)

- trunk mode [710](#)

- trunk ports [710](#)

- trunks, to non-DTP device [711](#)

- trusted boundary for QoS [329](#)

- trusted port states for QoS [329](#)

- type (boot loader) command [22](#)

U

UDLD

- aggressive mode [740, 742](#)

- debug messages, display [90](#)

- enable globally [740](#)

- enable per interface [742](#)

- error recovery timer [154](#)

- message timer [740](#)

- normal mode [740, 742](#)

- reset a shutdown interface [744](#)

- status [615](#)

- udld command [740](#)

- udld port command [742](#)

- udld reset command [744](#)

- unicast storm control [699](#)

UniDirectional Link Detection

- See UDLD

- unknown multicast traffic, preventing [708](#)

- unknown unicast traffic, preventing [708](#)

- unset (boot loader) command [23](#)

upgrading

- software images

- downloading [6](#)

- monitoring status of [409](#)

- UplinkFast, for STP [686](#)

- user EXEC mode [2, 3](#)

V

version (boot loader) command [25](#)

vlan (global configuration) command [745](#)

vlan (VLAN configuration) command [750](#)

VLAN configuration

rules [748, 752](#)

saving [745, 754](#)

VLAN configuration mode

commands

VLAN [750](#)

VTP [768](#)

description [5](#)

entering [756](#)

summary [2](#)

vlan database command [756](#)

VLAN ID range [745, 750](#)

VLAN Query Protocol

See VQP

VLANs

adding [745](#)

configuring [745, 750](#)

debug messages, display

ISL [86](#)

VLAN IOS file system error tests [84](#)

VLAN manager activity [82](#)

VTP [88](#)

displaying configurations [620](#)

enabling guest VLAN supplicant [104, 115, 158](#)

extended-range [745](#)

MAC addresses

displaying [553](#)

number of [540](#)

media types [747, 752](#)

normal-range [745, 750](#)

restarting [632](#)

saving the configuration [745](#)

shutting down [632](#)

SNMP traps for VTP [637, 640](#)

VLANs (continued)

suspending [632](#)

variables [750](#)

VLAN Trunking Protocol

See VTP

VMPS

configuring servers [762](#)

displaying [623](#)

error recovery timer [154](#)

reconfirming dynamic VLAN assignments [759](#)

vmmps reconfirm (global configuration) command [760](#)

vmmps reconfirm (privileged EXEC) command [759](#)

vmmps retry command [761](#)

vmmps server command [762](#)

voice VLAN

configuring [728](#)

setting port priority [721](#)

VQP

and dynamic-access ports [703](#)

clearing client statistics [77](#)

displaying information [623](#)

per-server retry count [761](#)

reconfirmation interval [760](#)

reconfirming dynamic VLAN assignments [759](#)

VTP

changing characteristics [764](#)

clearing pruning counters [78](#)

configuring

domain name [764, 768](#)

file name [764](#)

mode [764, 768](#)

password [764, 768](#)

counters display fields [627](#)

displaying information [626](#)

enabling

pruning [764, 768](#)

Version 2 [764, 768](#)

mode [764, 768](#)

pruning [764, 768](#)

VTP (continued)

 saving the configuration [745, 754](#)

 statistics [626](#)

 status [626](#)

 status display fields [629](#)

vtp (global configuration) command [764](#)

vtp (VLAN configuration) command [768](#)