

Configuring Boot Fast

- Finding Feature Information, on page 1
- Configuring Boot Fast on the switch, on page 1

Finding Feature Information

Your software release may not support all the features documented in this module. For the latest caveats and feature information, see Bug Search Tool and the release notes for your platform and software release. To find information about the features documented in this module, and to see a list of the releases in which each feature is supported, see the feature information table at the end of this module.

Use Cisco Feature Navigator to find information about platform support and Cisco software image support. To access Cisco Feature Navigator, go to http://www.cisco.com/go/cfn. An account on Cisco.com is not required.

Configuring Boot Fast on the switch

This features when enabled, helps the switch to Boot up fast. The Memory test is performed for a limited range, the switch Skips File system check (FSCK) and Skips Post test.



Note

When Fast boot is enabled, you can still run the POST tests manually from the command line interface, once the switch has booted up, using **diagnostic start** command.

Enabling Boot Fast

To enable the boot fast feature, perform the following steps:

SUMMARY STEPS

- 1. enable
- 2. configure terminal
- 3. boot fast
- 4. end

DETAILED STEPS

	Purpose
enable	Enables privileged EXEC mode.
Example:	• Enter your password if prompted.
Switch> enable	
configure terminal	Enters global configuration mode.
Example:	
Switch# configure terminal	
boot fast	Enables fast boot feature
Example:	Performs Memory test for a limited range, Skips File system
Switch(config)# boot fast	check (FSCK) and Skips Post test.
end	Returns to privileged EXEC mode.
Example:	
Switch(config)# end	
	configure terminal Example: Switch# configure terminal boot fast Example: Switch(config)# boot fast end Example:

Disabling Boot Fast

To disable the boot fast feature, perform the following steps:

SUMMARY STEPS

- 1. enable
- 2. configure terminal
- 3. no boot fast
- 4. end

DETAILED STEPS

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
	Example:	Enter your password if prompted.
	Switch> enable	

	Command or Action	Purpose	
Step 2	configure terminal	Enters global configuration mode.	
	Example:		
	Switch# configure terminal		
Step 3	no boot fast	Disables the boot fast feature.	
	Example:		
	Switch(config)# no boot fast		
Step 4	end	Returns to privileged EXEC mode.	
	Example:		
	Switch(config)# end		

Disabling Boot Fast