



NetFlow Lite Command Reference, Cisco IOS Release 15.2(2)E (Catalyst 2960-XR Switch)

First Published: August 08, 2013

Americas Headquarters

Cisco Systems, Inc.
170 West Tasman Drive
San Jose, CA 95134-1706
USA
<http://www.cisco.com>
Tel: 408 526-4000
800 553-NETS (6387)
Fax: 408 527-0883

Text Part Number: OL-32587-01

THE SPECIFICATIONS AND INFORMATION REGARDING THE PRODUCTS IN THIS MANUAL ARE SUBJECT TO CHANGE WITHOUT NOTICE. ALL STATEMENTS, INFORMATION, AND RECOMMENDATIONS IN THIS MANUAL ARE BELIEVED TO BE ACCURATE BUT ARE PRESENTED WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED. USERS MUST TAKE FULL RESPONSIBILITY FOR THEIR APPLICATION OF ANY PRODUCTS.

THE SOFTWARE LICENSE AND LIMITED WARRANTY FOR THE ACCOMPANYING PRODUCT ARE SET FORTH IN THE INFORMATION PACKET THAT SHIPPED WITH THE PRODUCT AND ARE INCORPORATED HEREIN BY THIS REFERENCE. IF YOU ARE UNABLE TO LOCATE THE SOFTWARE LICENSE OR LIMITED WARRANTY, CONTACT YOUR CISCO REPRESENTATIVE FOR A COPY.

The Cisco implementation of TCP header compression is an adaptation of a program developed by the University of California, Berkeley (UCB) as part of UCB's public domain version of the UNIX operating system. All rights reserved. Copyright © 1981, Regents of the University of California.

NOTWITHSTANDING ANY OTHER WARRANTY HEREIN, ALL DOCUMENT FILES AND SOFTWARE OF THESE SUPPLIERS ARE PROVIDED "AS IS" WITH ALL FAULTS. CISCO AND THE ABOVE-NAMED SUPPLIERS DISCLAIM ALL WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING, WITHOUT LIMITATION, THOSE OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT OR ARISING FROM A COURSE OF DEALING, USAGE, OR TRADE PRACTICE.

IN NO EVENT SHALL CISCO OR ITS SUPPLIERS BE LIABLE FOR ANY INDIRECT, SPECIAL, CONSEQUENTIAL, OR INCIDENTAL DAMAGES, INCLUDING, WITHOUT LIMITATION, LOST PROFITS OR LOSS OR DAMAGE TO DATA ARISING OUT OF THE USE OR INABILITY TO USE THIS MANUAL, EVEN IF CISCO OR ITS SUPPLIERS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Any Internet Protocol (IP) addresses and phone numbers used in this document are not intended to be actual addresses and phone numbers. Any examples, command display output, network topology diagrams, and other figures included in the document are shown for illustrative purposes only. Any use of actual IP addresses or phone numbers in illustrative content is unintentional and coincidental.

Cisco and the Cisco logo are trademarks or registered trademarks of Cisco and/or its affiliates in the U.S. and other countries. To view a list of Cisco trademarks, go to this URL: <http://www.cisco.com/go/trademarks>. Third-party trademarks mentioned are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (1110R)

© 2014 Cisco Systems, Inc. All rights reserved.



CONTENTS

Preface

Preface vii

Document Conventions vii

Related Documentation ix

Obtaining Documentation and Submitting a Service Request ix

CHAPTER 1

Using the Command-Line Interface 1

Information About Using the Command-Line Interface 1

Command Modes 1

Using the Help System 3

Understanding Abbreviated Commands 4

No and Default Forms of Commands 5

CLI Error Messages 5

Configuration Logging 5

How to Use the CLI to Configure Features 6

Configuring the Command History 6

Changing the Command History Buffer Size 6

Recalling Commands 6

Disabling the Command History Feature 7

Enabling and Disabling Editing Features 7

Editing Commands Through Keystrokes 9

Editing Command Lines That Wrap 10

Searching and Filtering Output of show and more Commands 11

Accessing the CLI on a Switch Stack 12

Accessing the CLI Through a Console Connection or Through Telnet 12

CHAPTER 2

NetFlow Lite Commands 13

cache 15

clear flow exporter	18
clear flow monitor	19
collect counter	21
collect flow sampler	23
collect interface	25
collect timestamp sys-uptime	26
collect transport tcp flags	28
datalink flow monitor	30
debug flow exporter	32
debug flow monitor	33
debug sampler	34
description	35
destination	36
dscp	38
export-protocol netflow-v9	39
exporter	40
flow exporter	41
flow monitor	42
flow record	43
ip flow monitor	44
ipv6 flow monitor	46
match datalink ethertype	48
match datalink mac	50
match ipv4	52
match ipv4 destination address	54
match ipv4 source address	55
match ipv6	56
match ipv6 destination address	57
match ipv6 source address	58
match transport	59
mode	60
option	62
record	64
sampler	65
show flow exporter	67

show flow interface	69
show flow monitor	71
show flow record	77
show sampler	78
source	80
statistics packet protocol	82
template data timeout	83
transport	84
ttl	85



Preface

- [Document Conventions](#), page vii
- [Related Documentation](#), page ix
- [Obtaining Documentation and Submitting a Service Request](#), page ix

Document Conventions

This document uses the following conventions:

Convention	Description
^ or Ctrl	Both the ^ symbol and Ctrl represent the Control (Ctrl) key on a keyboard. For example, the key combination ^D or Ctrl-D means that you hold down the Control key while you press the D key. (Keys are indicated in capital letters but are not case sensitive.)
bold font	Commands and keywords and user-entered text appear in bold font .
<i>Italic font</i>	Document titles, new or emphasized terms, and arguments for which you supply values are in <i>italic font</i> .
Courier font	Terminal sessions and information the system displays appear in <i>courier font</i> .
Bold Courier font	Bold Courier font indicates text that the user must enter.
[x]	Elements in square brackets are optional.
...	An ellipsis (three consecutive nonbolded periods without spaces) after a syntax element indicates that the element can be repeated.
	A vertical line, called a pipe, indicates a choice within a set of keywords or arguments.
[x y]	Optional alternative keywords are grouped in brackets and separated by vertical bars.

Convention	Description
{x y}	Required alternative keywords are grouped in braces and separated by vertical bars.
[x {y z}]	Nested set of square brackets or braces indicate optional or required choices within optional or required elements. Braces and a vertical bar within square brackets indicate a required choice within an optional element.
string	A nonquoted set of characters. Do not use quotation marks around the string or the string will include the quotation marks.
<>	Nonprinting characters such as passwords are in angle brackets.
[]	Default responses to system prompts are in square brackets.
!, #	An exclamation point (!) or a pound sign (#) at the beginning of a line of code indicates a comment line.

Reader Alert Conventions

This document may use the following conventions for reader alerts:



Note

Means *reader take note*. Notes contain helpful suggestions or references to material not covered in the manual.



Tip

Means *the following information will help you solve a problem*.



Caution

Means *reader be careful*. In this situation, you might do something that could result in equipment damage or loss of data.



Timesaver

Means *the described action saves time*. You can save time by performing the action described in the paragraph.



Warning

IMPORTANT SAFETY INSTRUCTIONS

This warning symbol means danger. You are in a situation that could cause bodily injury. Before you work on any equipment, be aware of the hazards involved with electrical circuitry and be familiar with standard practices for preventing accidents. Use the statement number provided at the end of each warning to locate its translation in the translated safety warnings that accompanied this device. Statement 1071

SAVE THESE INSTRUCTIONS

Related Documentation

**Note**

Before installing or upgrading the switch, refer to the switch release notes.

- Catalyst 2960-XR Switch documentation, located at:
http://www.cisco.com/go/cat2960xr_docs
- Cisco SFP and SFP+ modules documentation, including compatibility matrixes, located at:
http://www.cisco.com/en/US/products/hw/modules/ps5455/tsd_products_support_series_home.html
- Error Message Decoder, located at:
<https://www.cisco.com/cgi-bin/Support/Errordecoder/index.cgi>

Obtaining Documentation and Submitting a Service Request

For information on obtaining documentation, submitting a service request, and gathering additional information, see the monthly *What's New in Cisco Product Documentation*, which also lists all new and revised Cisco technical documentation, at:

<http://www.cisco.com/c/en/us/td/docs/general/whatsnew/whatsnew.html>

Subscribe to the *What's New in Cisco Product Documentation* as a Really Simple Syndication (RSS) feed and set content to be delivered directly to your desktop using a reader application. The RSS feeds are a free service and Cisco currently supports RSS version 2.0.



Using the Command-Line Interface

- [Information About Using the Command-Line Interface, page 1](#)
- [How to Use the CLI to Configure Features, page 6](#)

Information About Using the Command-Line Interface

Command Modes

The Cisco IOS user interface is divided into many different modes. The commands available to you depend on which mode you are currently in. Enter a question mark (?) at the system prompt to obtain a list of commands available for each command mode.

You can start a CLI session through a console connection, through Telnet, a SSH, or by using the browser.

When you start a session, you begin in user mode, often called user EXEC mode. Only a limited subset of the commands are available in user EXEC mode. For example, most of the user EXEC commands are one-time commands, such as **show** commands, which show the current configuration status, and **clear** commands, which clear counters or interfaces. The user EXEC commands are not saved when the switch reboots.

To have access to all commands, you must enter privileged EXEC mode. Normally, you must enter a password to enter privileged EXEC mode. From this mode, you can enter any privileged EXEC command or enter global configuration mode.

Using the configuration modes (global, interface, and line), you can make changes to the running configuration. If you save the configuration, these commands are stored and used when the switch reboots. To access the various configuration modes, you must start at global configuration mode. From global configuration mode, you can enter interface configuration mode and line configuration mode.

This table describes the main command modes, how to access each one, the prompt you see in that mode, and how to exit the mode.

Table 1: Command Mode Summary

Mode	Access Method	Prompt	Exit Method	About This Mode
User EXEC	Begin a session using Telnet, SSH, or console.	Switch>	Enter logout or quit .	Use this mode to <ul style="list-style-type: none"> • Change terminal settings. • Perform basic tests. • Display system information.
Privileged EXEC	While in user EXEC mode, enter the enable command.	Switch#	Enter disable to exit.	Use this mode to verify commands that you have entered. Use a password to protect access to this mode.
Global configuration	While in privileged EXEC mode, enter the configure command.	Switch(config)#	To exit to privileged EXEC mode, enter exit or end , or press Ctrl-Z .	Use this mode to configure parameters that apply to the entire switch.
VLAN configuration	While in global configuration mode, enter the vlan <i>vlan-id</i> command.	Switch(config-vlan)#	To exit to global configuration mode, enter the exit command. To return to privileged EXEC mode, press Ctrl-Z or enter end .	Use this mode to configure VLAN parameters. When VTP mode is transparent, you can create extended-range VLANs (VLAN IDs greater than 1005) and save configurations in the switch startup configuration file.
Interface configuration	While in global configuration mode, enter the interface command (with a specific interface).	Switch(config-if)#		Use this mode to configure parameters for the Ethernet ports.

Mode	Access Method	Prompt	Exit Method	About This Mode
			To exit to global configuration mode, enter exit . To return to privileged EXEC mode, press Ctrl-Z or enter end .	
Line configuration	While in global configuration mode, specify a line with the line vty or line console command.	Switch(config-line)#	To exit to global configuration mode, enter exit . To return to privileged EXEC mode, press Ctrl-Z or enter end .	Use this mode to configure parameters for the terminal line.

Using the Help System

You can enter a question mark (?) at the system prompt to display a list of commands available for each command mode. You can also obtain a list of associated keywords and arguments for any command.

SUMMARY STEPS

1. **help**
2. *abbreviated-command-entry ?*
3. *abbreviated-command-entry <Tab>*
4. **?**
5. *command ?*
6. *command keyword ?*

DETAILED STEPS

	Command or Action	Purpose
Step 1	help Example: Switch# help	Obtains a brief description of the help system in any command mode.
Step 2	<i>abbreviated-command-entry ?</i> Example: Switch# di? dir disable disconnect	Obtains a list of commands that begin with a particular character string.
Step 3	<i>abbreviated-command-entry <Tab></i> Example: Switch# sh conf<tab> Switch# show configuration	Completes a partial command name.
Step 4	? Example: Switch> ?	Lists all commands available for a particular command mode.
Step 5	<i>command ?</i> Example: Switch> show ?	Lists the associated keywords for a command.
Step 6	<i>command keyword ?</i> Example: Switch(config)# cdp holdtime ? <10-255> Length of time (in sec) that receiver must keep this packet	Lists the associated arguments for a keyword.

Understanding Abbreviated Commands

You need to enter only enough characters for the switch to recognize the command as unique.

This example shows how to enter the **show configuration** privileged EXEC command in an abbreviated form:

```
Switch# show conf
```

No and Default Forms of Commands

Almost every configuration command also has a **no** form. In general, use the **no** form to disable a feature or function or reverse the action of a command. For example, the **no shutdown** interface configuration command reverses the shutdown of an interface. Use the command without the keyword **no** to reenable a disabled feature or to enable a feature that is disabled by default.

Configuration commands can also have a **default** form. The **default** form of a command returns the command setting to its default. Most commands are disabled by default, so the **default** form is the same as the **no** form. However, some commands are enabled by default and have variables set to certain default values. In these cases, the **default** command enables the command and sets variables to their default values.

CLI Error Messages

This table lists some error messages that you might encounter while using the CLI to configure your switch.

Table 2: Common CLI Error Messages

Error Message	Meaning	How to Get Help
% Ambiguous command: "show con"	You did not enter enough characters for your switch to recognize the command.	Reenter the command followed by a question mark (?) without any space between the command and the question mark. The possible keywords that you can enter with the command appear.
% Incomplete command.	You did not enter all of the keywords or values required by this command.	Reenter the command followed by a question mark (?) with a space between the command and the question mark. The possible keywords that you can enter with the command appear.
% Invalid input detected at '^' marker.	You entered the command incorrectly. The caret (^) marks the point of the error.	Enter a question mark (?) to display all of the commands that are available in this command mode. The possible keywords that you can enter with the command appear.

Configuration Logging

You can log and view changes to the switch configuration. You can use the Configuration Change Logging and Notification feature to track changes on a per-session and per-user basis. The logger tracks each configuration command that is applied, the user who entered the command, the time that the command was entered, and the parser return code for the command. This feature includes a mechanism for asynchronous

notification to registered applications whenever the configuration changes. You can choose to have the notifications sent to the syslog.



Note Only CLI or HTTP changes are logged.

How to Use the CLI to Configure Features

Configuring the Command History

The software provides a history or record of commands that you have entered. The command history feature is particularly useful for recalling long or complex commands or entries, including access lists. You can customize this feature to suit your needs.

Changing the Command History Buffer Size

By default, the switch records ten command lines in its history buffer. You can alter this number for a current terminal session or for all sessions on a particular line. This procedure is optional.

SUMMARY STEPS

1. `terminal history [size number-of-lines]`

DETAILED STEPS

	Command or Action	Purpose
Step 1	terminal history [size number-of-lines] Example: Switch# <code>terminal history size 200</code>	Changes the number of command lines that the switch records during the current terminal session in privileged EXEC mode. You can configure the size from 0 to 256.

Recalling Commands

To recall commands from the history buffer, perform one of the actions listed in this table. These actions are optional.



Note The arrow keys function only on ANSI-compatible terminals such as VT100s.

SUMMARY STEPS

1. **Ctrl-P** or use the **up arrow** key
2. **Ctrl-N** or use the **down arrow** key
3. **show history**

DETAILED STEPS

	Command or Action	Purpose
Step 1	Ctrl-P or use the up arrow key	Recalls commands in the history buffer, beginning with the most recent command. Repeat the key sequence to recall successively older commands.
Step 2	Ctrl-N or use the down arrow key	Returns to more recent commands in the history buffer after recalling commands with Ctrl-P or the up arrow key. Repeat the key sequence to recall successively more recent commands.
Step 3	show history Example: Switch# show history	Lists the last several commands that you just entered in privileged EXEC mode. The number of commands that appear is controlled by the setting of the terminal history global configuration command and the history line configuration command.

Disabling the Command History Feature

The command history feature is automatically enabled. You can disable it for the current terminal session or for the command line. This procedure is optional.

SUMMARY STEPS

1. **terminal no history**

DETAILED STEPS

	Command or Action	Purpose
Step 1	terminal no history Example: Switch# terminal no history	Disables the feature during the current terminal session in privileged EXEC mode.

Enabling and Disabling Editing Features

Although enhanced editing mode is automatically enabled, you can disable it and reenble it.

SUMMARY STEPS

1. terminal editing
2. terminal no editing

DETAILED STEPS

	Command or Action	Purpose
Step 1	terminal editing Example: Switch# <code>terminal editing</code>	Reenables the enhanced editing mode for the current terminal session in privileged EXEC mode.
Step 2	terminal no editing Example: Switch# <code>terminal no editing</code>	Disables the enhanced editing mode for the current terminal session in privileged EXEC mode.

Editing Commands Through Keystrokes

The keystrokes help you to edit the command lines. These keystrokes are optional.


Note

The arrow keys function only on ANSI-compatible terminals such as VT100s.

Table 3: Editing Commands

Editing Commands	Description
Ctrl-B or use the left arrow key	Moves the cursor back one character.
Ctrl-F or use the right arrow key	Moves the cursor forward one character.
Ctrl-A	Moves the cursor to the beginning of the command line.
Ctrl-E	Moves the cursor to the end of the command line.
Esc B	Moves the cursor back one word.
Esc F	Moves the cursor forward one word.
Ctrl-T	Transposes the character to the left of the cursor with the character located at the cursor.
Delete or Backspace key	Erases the character to the left of the cursor.
Ctrl-D	Deletes the character at the cursor.
Ctrl-K	Deletes all characters from the cursor to the end of the command line.
Ctrl-U or Ctrl-X	Deletes all characters from the cursor to the beginning of the command line.
Ctrl-W	Deletes the word to the left of the cursor.
Esc D	Deletes from the cursor to the end of the word.
Esc C	Capitalizes at the cursor.
Esc L	Changes the word at the cursor to lowercase.
Esc U	Capitalizes letters from the cursor to the end of the word.

Ctrl-V or Esc Q	Designates a particular keystroke as an executable command, perhaps as a shortcut.
Return key	Scrolls down a line or screen on displays that are longer than the terminal screen can display. Note The More prompt is used for any output that has more lines than can be displayed on the terminal screen, including show command output. You can use the Return and Space bar keystrokes whenever you see the More prompt.
Space bar	Scrolls down one screen.
Ctrl-L or Ctrl-R	Redisplays the current command line if the switch suddenly sends a message to your screen.

Editing Command Lines That Wrap

You can use a wraparound feature for commands that extend beyond a single line on the screen. When the cursor reaches the right margin, the command line shifts ten spaces to the left. You cannot see the first ten characters of the line, but you can scroll back and check the syntax at the beginning of the command. The keystroke actions are optional.

To scroll back to the beginning of the command entry, press **Ctrl-B** or the left arrow key repeatedly. You can also press **Ctrl-A** to immediately move to the beginning of the line.



Note

The arrow keys function only on ANSI-compatible terminals such as VT100s.

The following example shows how to wrap a command line that extends beyond a single line on the screen.

SUMMARY STEPS

1. **access-list**
2. **Ctrl-A**
3. **Return** key

DETAILED STEPS

	Command or Action	Purpose
Step 1	access-list Example: Switch(config)# access-list 101 permit tcp	Displays the global configuration command entry that extends beyond one line. When the cursor first reaches the end of the line, the line is shifted ten spaces to the left and redisplayed. The dollar sign (\$) shows that the

	Command or Action	Purpose
	<pre>10.15.22.25 255.255.255.0 10.15.22.35 Switch(config)# \$ 101 permit tcp 10.15.22.25 255.255.255.0 10.15.22.35 255.25 Switch(config)# \$t tcp 10.15.22.25 255.255.255.0 131.108.1.20 255.255.255.0 eq Switch(config)# \$15.22.25 255.255.255.0 10.15.22.35 255.255.255.0 eq 45</pre>	line has been scrolled to the left. Each time the cursor reaches the end of the line, the line is again shifted ten spaces to the left.
Step 2	<p>Ctrl-A</p> <p>Example:</p> <pre>Switch(config)# access-list 101 permit tcp 10.15.22.25 255.255.255.0 10.15.25\$</pre>	<p>Checks the complete syntax.</p> <p>The dollar sign (\$) appears at the end of the line to show that the line has been scrolled to the right.</p>
Step 3	Return key	<p>Execute the commands.</p> <p>The software assumes that you have a terminal screen that is 80 columns wide. If you have a different width, use the terminal width privileged EXEC command to set the width of your terminal.</p> <p>Use line wrapping with the command history feature to recall and modify previous complex command entries.</p>

Searching and Filtering Output of show and more Commands

You can search and filter the output for **show** and **more** commands. This is useful when you need to sort through large amounts of output or if you want to exclude output that you do not need to see. Using these commands is optional.

SUMMARY STEPS

1. `{show | more} command | {begin | include | exclude} regular-expression`

DETAILED STEPS

	Command or Action	Purpose
Step 1	<pre>{show more} command {begin include exclude} regular-expression</pre> <p>Example:</p> <pre>Switch# show interfaces include protocol Vlan1 is up, line protocol is up Vlan10 is up, line protocol is down GigabitEthernet1/0/1 is up, line protocol is down GigabitEthernet1/0/2 is up, line protocol is up</pre>	<p>Searches and filters the output.</p> <p>Expressions are case sensitive. For example, if you enter exclude output, the lines that contain output are not displayed, but the lines that contain OUTPUT appear.</p>

Accessing the CLI on a Switch Stack

You can access the CLI through a console connection, through Telnet, a SSH, or by using the browser.

You manage the switch stack and the stack member interfaces through the stack master. You cannot manage stack members on an individual switch basis. You can connect to the stack master through the console port or the Ethernet management port of one or more stack members. Be careful with using multiple CLI sessions on the stack master. Commands that you enter in one session are not displayed in the other sessions. Therefore, it is possible to lose track of the session from which you entered commands.

**Note**

We recommend using one CLI session when managing the switch stack.

If you want to configure a specific stack member port, you must include the stack member number in the CLI command interface notation.

Accessing the CLI Through a Console Connection or Through Telnet

Before you can access the CLI, you must connect a terminal or a PC to the switch console or connect a PC to the Ethernet management port and then power on the switch, as described in the hardware installation guide that shipped with your switch.

If your switch is already configured, you can access the CLI through a local console connection or through a remote Telnet session, but your switch must first be configured for this type of access.

You can use one of these methods to establish a connection with the switch:

- Connect the switch console port to a management station or dial-up modem, or connect the Ethernet management port to a PC. For information about connecting to the console or Ethernet management port, see the switch hardware installation guide.
- Use any Telnet TCP/IP or encrypted Secure Shell (SSH) package from a remote management station. The switch must have network connectivity with the Telnet or SSH client, and the switch must have an enable secret password configured.
 - The switch supports up to 16 simultaneous Telnet sessions. Changes made by one Telnet user are reflected in all other Telnet sessions.
 - The switch supports up to five simultaneous secure SSH sessions.

After you connect through the console port, through the Ethernet management port, through a Telnet session or through an SSH session, the user EXEC prompt appears on the management station.



NetFlow Lite Commands

- [cache](#), page 15
- [clear flow exporter](#), page 18
- [clear flow monitor](#), page 19
- [collect counter](#), page 21
- [collect flow sampler](#), page 23
- [collect interface](#), page 25
- [collect timestamp sys-uptime](#), page 26
- [collect transport tcp flags](#), page 28
- [datalink flow monitor](#), page 30
- [debug flow exporter](#), page 32
- [debug flow monitor](#), page 33
- [debug sampler](#), page 34
- [description](#), page 35
- [destination](#), page 36
- [dscp](#), page 38
- [export-protocol netflow-v9](#), page 39
- [exporter](#), page 40
- [flow exporter](#), page 41
- [flow monitor](#), page 42
- [flow record](#), page 43
- [ip flow monitor](#), page 44
- [ipv6 flow monitor](#), page 46
- [match datalink ethertype](#), page 48
- [match datalink mac](#), page 50

- [match ipv4](#), page 52
- [match ipv4 destination address](#), page 54
- [match ipv4 source address](#), page 55
- [match ipv6](#), page 56
- [match ipv6 destination address](#), page 57
- [match ipv6 source address](#), page 58
- [match transport](#), page 59
- [mode](#), page 60
- [option](#), page 62
- [record](#), page 64
- [sampler](#), page 65
- [show flow exporter](#), page 67
- [show flow interface](#), page 69
- [show flow monitor](#), page 71
- [show flow record](#), page 77
- [show sampler](#), page 78
- [source](#), page 80
- [statistics packet protocol](#), page 82
- [template data timeout](#), page 83
- [transport](#), page 84
- [ttl](#), page 85

cache

To configure a flow cache parameter for a flow monitor, use the **cache** command in flow monitor configuration mode. To remove a flow cache parameter for a flow monitor, use the **no** form of this command.

```
cache {entries number| timeout {active| inactive| update} seconds| type {normal| permanent}}
no cache {entries| timeout {active| inactive| update} | type}
```

Syntax Description

entries <i>number</i>	Specifies the maximum number of entries in the flow monitor cache. The range is 16 to 1048576. The default is 16640 for each switch in the stack.
timeout	Specifies the flow timeout.
active	Specifies the active flow timeout.
inactive	Specifies the inactive flow timeout.
update	Specifies the update timeout for a permanent flow cache.
<i>seconds</i>	The timeout value in seconds. The range is 30 to 604800 (7 days) for a normal flow cache. For a permanent flow cache the range is 1 to 604800 (7 days).
type	Specifies the type of the flow cache.
normal	Configures a normal cache type. The entries in the flow cache will be aged out according to the timeout active seconds and timeout inactive seconds settings. This is the default cache type.
permanent	Configures a permanent cache type. This cache type disables flow removal from the flow cache.

Command Default

The default flow monitor flow cache parameters are used.

The following flow cache parameters for a flow monitor are enabled:

- Cache type: normal
- Maximum number of entries in the flow monitor cache: 16640
- Active flow timeout: 1800 seconds
- Inactive flow timeout: 30 seconds
- Update timeout for a permanent flow cache: 1800 seconds

Command Modes

Flow monitor configuration

Command History

Release	Modification
Cisco IOS 15.0(2)EX1	This command was introduced.

Usage Guidelines

Each flow monitor has a cache that it uses to store all the flows it monitors. Each cache has various configurable elements, such as the time that a flow is allowed to remain in it. When a flow times out, it is removed from the cache and sent to any exporters that are configured for the corresponding flow monitor.

If a cache is already active (that is, you have applied the flow monitor to at least one interface in the switch), your changes to the parameters will not take effect until you either reboot the switch or remove the flow monitor from every interface and then reapply it. Therefore, whenever possible you should customize the parameters for the cache before you apply the flow monitor to an interface. You can modify the timers, flow exporters, and statistics parameters for a cache while the cache is active.

The **cache timeout active** command controls the aging behavior of the normal type of cache. If a flow has been active for a long time, it is usually desirable to age it out (starting a new flow for any subsequent packets in the flow). This age out process allows the monitoring application that is receiving the exports to remain up to date. By default, this timeout is 1800 seconds (30 minutes), but it can be adjusted according to system requirements. A larger value ensures that long-lived flows are accounted for in a single flow record; a smaller value results in a shorter delay between starting a new long-lived flow and exporting some data for it. When you change the active flow timeout, the new timeout value takes effect immediately.

The **cache timeout inactive** command also controls the aging behavior of the normal type of cache. If a flow has not seen any activity for a specified amount of time, that flow will be aged out. By default, this timeout is 30 seconds, but this value can be adjusted depending on the type of traffic expected. If a large number of short-lived flows is consuming many cache entries, reducing the inactive timeout can reduce this overhead. If a large number of flows frequently get aged out before they have finished collecting their data, increasing this timeout can result in better flow correlation. When you change the inactive flow timeout, the new timeout value takes effect immediately.

The **cache timeout update** command controls the periodic updates sent by the permanent type of cache. This behavior is similar to the active timeout, except that it does not result in the removal of the cache entry from the cache. By default, this timer value is 1800 seconds (30 minutes).

The **cache type normal** command specifies the normal cache type. This is the default cache type. The entries in the cache will be aged out according to the **timeout active seconds** and **timeout inactive seconds** settings. When a cache entry is aged out, it is removed from the cache and exported via any exporters configured for the monitor associated with the cache.

To return a cache to its default settings, use the **default cache** flow monitor configuration command.

**Note**

When a cache becomes full, new flows will not be monitored. If this occurs, a Flows not added statistic will appear in the cache statistics.

**Note**

A permanent cache uses update counters rather than delta counters. When a flow is exported, the counters represent the totals seen for the full lifetime of the flow and not the additional packets and bytes seen since the last export was sent.

Examples

The following example shows how to configure the active timeout for the flow monitor cache:

```
Switch(config)# flow monitor FLOW-MONITOR-1
Switch(config-flow-monitor)# cache timeout active 4800
```

The following example shows how to configure the inactive timer for the flow monitor cache:

```
Switch(config)# flow monitor FLOW-MONITOR-1
Switch(config-flow-monitor)# cache timeout inactive 30
```

The following example shows how to configure the permanent cache update timeout:

```
Switch(config)# flow monitor FLOW-MONITOR-1
Switch(config-flow-monitor)# cache timeout update 5000
```

The following example shows how to configure a normal cache:

```
Switch(config)# flow monitor FLOW-MONITOR-1
Switch(config-flow-monitor)# cache type normal
```

Related Commands

Command	Description
flow monitor	Creates a flow monitor, or modifies an existing flow monitor, and enters flow monitor configuration mode.

clear flow exporter

To clear the statistics for a NetFlow Lite flow exporter, use the **clear flow exporter** command in privileged EXEC mode.

clear flow exporter *[[name] exporter-name] statistics*

Syntax Description

name	(Optional) Specifies the name of a flow exporter.
<i>exporter-name</i>	(Optional) Name of a flow exporter that was previously configured.
statistics	Clears the flow exporter statistics.

Command Modes

Privileged EXEC

Command History

Release	Modification
Cisco IOS 15.0(2)EX1	This command was introduced.

Usage Guidelines

The **clear flow exporter** command removes all statistics from the flow exporter. These statistics will not be exported and the data gathered in the cache will be lost.

You can view the flow exporter statistics by using the **show flow exporter statistics** privileged EXEC command.

Examples

The following example clears the statistics for all of the flow exporters configured on the switch:

```
Switch# clear flow exporter statistics
```

The following example clears the statistics for the flow exporter named FLOW-EXPORTER-1:

```
Switch# clear flow exporter FLOW-EXPORTER-1 statistics
```

Related Commands

Command	Description
debug flow exporter	Enables debugging output for NetFlow Lite flow exporters.

clear flow monitor

To clear a flow monitor cache or flow monitor statistics and to force the export of the data in the flow monitor cache, use the **clear flow monitor** command in privileged EXEC mode.

clear flow monitor [**name**] *monitor-name* [[**cache**] **force-export**| **statistics**]

Syntax Description

name	Specifies the name of a flow monitor.
<i>monitor-name</i>	Name of a flow monitor that was previously configured.
cache	(Optional) Clears the flow monitor cache information.
force-export	(Optional) Forces the export of the flow monitor cache statistics.
statistics	(Optional) Clears the flow monitor statistics.

Command Modes

Privileged EXEC

Command History

Release	Modification
Cisco IOS 15.0(2)EX1	This command was introduced.

Usage Guidelines

The **clear flow monitor cache** command removes all entries from the flow monitor cache. These entries will not be exported and the data gathered in the cache will be lost.



Note

The statistics for the cleared cache entries are maintained.

The **clear flow monitor force-export** command removes all entries from the flow monitor cache and exports them using all flow exporters assigned to the flow monitor. This action can result in a short-term increase in CPU usage. Use this command with caution.

The **clear flow monitor statistics** command clears the statistics for this flow monitor.



Note

The current entries statistic will not be cleared by the **clear flow monitor statistics** command because this is an indicator of how many entries are in the cache and the cache is not cleared with this command.

You can view the flow monitor statistics by using the **show flow monitor statistics** privileged EXEC command.

Examples

The following example clears the statistics and cache entries for the flow monitor named FLOW-MONITOR-1:

```
Switch# clear flow monitor name FLOW-MONITOR-1
```

The following example clears the statistics and cache entries for the flow monitor named FLOW-MONITOR-1 and forces an export:

```
Switch# clear flow monitor name FLOW-MONITOR-1 force-export
```

The following example clears the cache for the flow monitor named FLOW-MONITOR-1 and forces an export:

```
Switch# clear flow monitor name FLOW-MONITOR-1 cache force-export
```

The following example clears the statistics for the flow monitor named FLOW-MONITOR-1:

```
Switch# clear flow monitor name FLOW-MONITOR-1 statistics
```

Related Commands

Command	Description
debug flow monitor	Enables debugging output for NetFlow Lite flow monitors.

collect counter

To configure the number of bytes or packets in a flow as a non-key field for a flow record, use the **collect counter** command in flow record configuration mode. To disable the use of the number of bytes or packets in a flow (counters) as a non-key field for a flow record, use the **no** form of this command.

collect counter {bytes| packets} {long| permanent}

no collect counter {bytes| packets} {long| permanent}

Syntax Description

bytes	Configures the number of bytes seen in a flow as a non-key field and enables collecting the total number of bytes from the flow.
packets	Configures the number of packets seen in a flow as a non-key field and enables collecting the total number of packets from the flow.
long	Enables collecting the total number of bytes or packets from the flow using a 64-bit counter. After collection the counter resets to 0.
permanent	Enables collecting the total number of bytes or packets from the flow using a 64-bit counter. After collection the counter does not reset.

Command Default

The number of bytes or packets in a flow is not configured as a non-key field.

Command Modes

Flow record configuration

Command History

Release	Modification
Cisco IOS 15.0(2)EX1	This command was introduced.

Usage Guidelines

Flow packets are exported after cache timeout interval. After they are exported, the count restarts from 0 if the **long** keyword is specified. If the **permanent** keyword is specified, the counter increments for each byte or packet seen in the flow.

To return this command to its default settings, use the **no collect counter** or **default collect counter** flow record configuration command.

Examples

The following example configures the total number of bytes in the flows as a non-key field:

```
Switch(config)# flow record FLOW-RECORD-1
Switch(config-flow-record)#collect counter bytes long
```

The following example configures the total number of packets from the flows as a non-key field:

```
Switch(config)# flow record FLOW-RECORD-1  
Switch(config-flow-record)# collect counter packets long
```

Related Commands

Command	Description
flow record	Creates a NetFlow Lite flow record, or modifies an existing NetFlow Lite flow record, and enters NetFlow Lite flow record configuration mode.

collect flow sampler

To configure the flow sampler ID as a non-key field and enable the collection of the ID of the sampler that is assigned to the flow monitor, use the **collect flow sampler** command in flow record configuration mode. To disable the use of the flow sampler ID as a non-key field for a flow record, use the **no** form of this command.

collect flow sampler

no collect flow sampler

Syntax Description This command has no arguments or keywords.

Command Default The flow sampler ID is not configured as a non-key field.

Command Modes Flow record configuration

Command History	Release	Modification
	Cisco IOS 15.0(2)EX1	This command was introduced.

Usage Guidelines The NetFlow Lite **collect** commands are used to configure non-key fields for the flow monitor record and to enable capturing the values in the fields for the flow created with the record. The values in non-key fields are added to flows to provide additional information about the traffic in the flows. A change in the value of a non-key field does not create a new flow. In most cases, the values for non-key fields are taken from only the first packet in the flow.

The **collect flow sampler** command is useful when more than one flow sampler is being used with different sampling rates. The **option sampler-table** flow exporter command exports options records with mappings of the flow sampler ID to sampling rate so the collector can calculate the scaled counters for each flow.

To return this command to its default settings, use the **no collect flow sampler** or **default collect flow sampler** flow record configuration command.

Examples The following example configures the ID of the flow sampler that is assigned to the flow as a non-key field:

```
Switch(config)# flow record FLOW-RECORD-1
Switch(config-flow-record)# collect flow sampler
```

Related Commands	Command	Description
	flow exporter	Creates a NetFlow Lite flow exporter, or modifies an existing NetFlow Lite flow exporter, and enters NetFlow Lite flow exporter configuration mode.

Command	Description
flow record	Creates a NetFlow Lite flow record, or modifies an existing NetFlow Lite flow record, and enters NetFlow Lite flow record configuration mode.

collect interface

To configure the input interface name as a non-key field for a flow record, use the **collect interface** command in flow record configuration mode. To disable the use of the input interface as a non-key field for a flow record, use the **no** form of this command.

collect interface input

no collect interface input

Syntax Description

input	Configures the input interface name as a non-key field and enables collecting the input interface from the flows.
--------------	---

Command Default

The input interface name is not configured as a non-key field.

Command Modes

Flow record configuration

Command History

Release	Modification
Cisco IOS 15.0(2)EX1	This command was introduced.

Usage Guidelines

The NetFlow Lite **collect** commands are used to configure non-key fields for the flow monitor record and to enable capturing the values in the fields for the flow created with the record. The values in non-key fields are added to flows to provide additional information about the traffic in the flows. A change in the value of a non-key field does not create a new flow. In most cases, the values for non-key fields are taken from only the first packet in the flow.

To return this command to its default settings, use the **no collect interface** or **default collect interface** flow record configuration command.

Examples

The following example configures the input interface as a non-key field:

```
Switch(config)# flow record FLOW-RECORD-1
Switch(config-flow-record)# collect interface input
```

Related Commands

Command	Description
flow record	Creates a NetFlow Lite flow record, or modifies an existing NetFlow Lite flow record, and enters NetFlow Lite flow record configuration mode.

collect timestamp sys-uptime

To configure the system uptime of the first seen or last seen packet in a flow as a nonkey field for a flow record, use the **collect timestamp sys-uptime** command in flow record configuration mode. To disable the use of the first seen or last seen packet in a flow as a nonkey field for a flow record, use the **no** form of this command.

collect timestamp sys-uptime {first|last}

no collect timestamp sys-uptime {first|last}

Syntax Description

first	Configures the system uptime for the time the first packet was seen from the flows as a nonkey field and enables collecting time stamps based on the system uptime for the time the first packet was seen from the flows.
last	Configures the system uptime for the time the last packet was seen from the flows as a nonkey field and enables collecting time stamps based on the system uptime for the time the most recent packet was seen from the flows.

Command Default

The system uptime field is not configured as a nonkey field.

Command Modes

Flow record configuration

Command History

Release	Modification
Cisco IOS 15.0(2)EX1	This command was introduced.

Usage Guidelines

The NetFlow Lite **collect** commands are used to configure nonkey fields for the flow monitor record and to enable capturing the values in the fields for the flow created with the record. The values in nonkey fields are added to flows to provide additional information about the traffic in the flows. A change in the value of a nonkey field does not create a new flow. In most cases, the values for nonkey fields are taken from only the first packet in the flow.

To return this command to its default settings, use the **no collect timestamp sys-uptime** or **default collect timestamp sys-uptime** flow record configuration command.

Examples

The following example configures time stamps based on the system uptime for the time the first packet was seen from the flows as a nonkey field:

```
Switch(config)# flow record FLOW-RECORD-1
Switch(config-flow-record)# collect timestamp sys-uptime first
```

The following example configures the time stamps based on the system uptime for the time the most recent packet was seen from the flows as a nonkey field:

```
Switch(config)# flow record FLOW-RECORD-1
Switch(config-flow-record)# collect timestamp sys-uptime last
```

Related Commands

Command	Description
flow record	Creates a NetFlow Lite flow record, or modifies an existing NetFlow Lite flow record, and enters NetFlow Lite flow record configuration mode.

collect transport tcp flags

To configure one or more TCP flags as a non-key field for a flow record and enable the collecting of values from the flow, use the **collect transport tcp flags** command in flow record configuration mode. To disable the use of one or more of the TCP fields as a non-key field for a flow record and disable collecting the values from the flow, use the **no** form of this command.

collect transport tcp flags [ack| cwr| ece| fin| psh| rst| syn| urg]

no collect transport tcp flags [ack| cwr| ece| fin| psh| rst| syn| urg]

Syntax Description

ack	(Optional) Configures the TCP acknowledgment flag as a non-key field.
cwr	(Optional) Configures the TCP congestion window reduced flag as a non-key field.
ece	(Optional) Configures the TCP Explicit Congestion Notification echo (ECE) flag as a non-key field.
fin	(Optional) Configures the TCP finish flag as a non-key field.
psh	(Optional) Configures the TCP push flag as a non-key field.
rst	(Optional) Configures the TCP reset flag as a non-key field.
syn	(Optional) Configures the TCP synchronize flag as a non-key field.
urg	(Optional) Configures the TCP urgent flag as a non-key field.

Command Default

The transport layer fields are not configured as a non-key field.

Command Modes

Flow record configuration

Command History

Release	Modification
Cisco IOS 15.0(2)EX1	This command was introduced.

Usage Guidelines

The values of the transport layer fields are taken from all packets in the flow. You cannot specify which TCP flag to collect. You can only specify to collect transport TCP flags. All TCP flags will be collected with this command. The following transport TCP flags are collected:

- **ack**—TCP acknowledgement flag
- **cwr**—TCP congestion window reduced flag

- **ece**—TCP ECN echo flag
- **fin**—TCP finish flag
- **psh**—TCP push flag
- **rst**—TCP reset flag
- **syn**—TCP synchronize flag
- **urg**—TCP urgent flag

To return this command to its default settings, use the **no collect collect transport tcp flags** or **default collect collect transport tcp flags** flow record configuration command.

Examples

The following example configures the TCP acknowledgment flag as a non-key field:

```
Switch(config)# flow record FLOW-RECORD-1
Switch(config-flow-record)# collect transport tcp flags ack
```

The following example configures the TCP finish flag as a non-key field:

```
Switch(config)# flow record FLOW-RECORD-1
Switch(config-flow-record)# collect transport tcp flags fin
```

The following example configures the TCP reset flag as a non-key field:

```
Switch(config)# flow record FLOW-RECORD-1
Switch(config-flow-record)# collect transport tcp flags rst
```

Related Commands

Command	Description
flow record	Creates a NetFlow Lite flow record, or modifies an existing NetFlow Lite flow record, and enters NetFlow Lite flow record configuration mode.

datalink flow monitor

To apply a NetFlow Lite flow monitor to an interface, use the **datalink flow monitor** command in interface configuration mode. To disable a NetFlow Lite flow monitor, use the **no** form of this command.

datalink flow monitor *monitor-name* **sampler** *sampler-name* **input**

no datalink flow monitor *monitor-name* **sampler** *sampler-name* **input**

Syntax Description

<i>monitor-name</i>	Name of the flow monitor to apply to the interface.
sampler <i>sampler-name</i>	Enables the specified flow sampler for the flow monitor.
input	Monitors traffic that the switch receives on the interface.

Command Default

A flow monitor is not enabled.

Command Modes

Interface configuration

Command History

Release	Modification
Cisco IOS 15.0(2)EX1	This command was introduced.

Usage Guidelines

Before you apply a flow monitor to an interface with the **datalink flow monitor** command, you must have already created the flow monitor using the **flow monitor** global configuration command and the flow sampler using the **sampler** global configuration command.

To enable a flow sampler for the flow monitor, you must have already created the sampler.



Note

The **datalink flow monitor** command only monitors non-IPv4 and non-IPv6 traffic. To monitor IPv4 traffic, use the **ip flow monitor** command. To monitor IPv6 traffic, use the **ipv6 flow monitor** command.

Examples

This example shows how to enable NetFlow Lite datalink monitoring on an interface:

```
Switch(config)# interface gigabitethernet1/0/1
Switch(config-if)# datalink flow monitor FLOW-MONITOR-1 sampler FLOW-SAMPLER-1 input
```

Related Commands

Command	Description
flow monitor	Creates a flow monitor, or modifies an existing flow monitor, and enters flow monitor configuration mode.

debug flow exporter

To enable debugging output for NetFlow Lite flow exporters, use the **debug flow exporter** command in privileged EXEC mode. To disable debugging output, use the **no** form of this command.

debug flow exporter [[**name**] *exporter-name*] [**error**| **event**| **packets** *number*]

no debug flow exporter [[**name**] *exporter-name*] [**error**| **event**| **packets** *number*]

Syntax Description

name	(Optional) Specifies the name of a flow exporter.
<i>exporter-name</i>	(Optional) The name of a flow exporter that was previously configured.
error	(Optional) Enables debugging for flow exporter errors.
event	(Optional) Enables debugging for flow exporter events.
packets	(Optional) Enables packet-level debugging for flow exporters.
<i>number</i>	(Optional) The number of packets to debug for packet-level debugging of flow exporters. The range is 1 to 65535.

Command Modes

Privileged EXEC

Command History

Release	Modification
Cisco IOS 15.0(2)EX1	This command was introduced.

Examples

The following example indicates that a flow exporter packet has been queued for process send:

```
Switch# debug flow exporter
May 21 21:29:12.603: FLOW EXP: Packet queued for process send
```

Related Commands

Command	Description
clear flow exporter	Clears the statistics for a NetFlow Lite flow exporter.

debug flow monitor

To enable debugging output for NetFlow Lite flow monitors, use the **debug flow monitor** command in privileged EXEC mode. To disable debugging output, use the **no** form of this command.

```
debug flow monitor [error] [name] monitor-name [cache [error]] error| packets packets]]
```

```
no debug flow monitor [error] [name] monitor-name [cache [error]] error| packets packets]]
```

Syntax Description

error	(Optional) Enables debugging for flow monitor errors for all flow monitors or for the specified flow monitor.
name	(Optional) Specifies the name of a flow monitor.
<i>monitor-name</i>	(Optional) Name of a flow monitor that was previously configured.
cache	(Optional) Enables debugging for the flow monitor cache.
cache error	(Optional) Enables debugging for flow monitor cache errors.
packets	(Optional) Enables packet-level debugging for flow monitors.
<i>packets</i>	(Optional) Number of packets to debug for packet-level debugging of flow monitors. The range is 1 to 65535.

Command Modes

Privileged EXEC

Command History

Release	Modification
Cisco IOS 15.0(2)EX1	This command was introduced.

Examples

The following example shows that the cache for FLOW-MONITOR-1 was deleted:

```
Switch# debug flow monitor FLOW-MONITOR-1 cache
May 21 21:53:02.839: FLOW MON: 'FLOW-MONITOR-1' deleted cache
```

Related Commands

Command	Description
clear flow monitor	Clears a flow monitor cache or flow monitor statistics and forces the export of the data in the flow monitor cache.

debug sampler

To enable debugging output for NetFlow Lite samplers, use the **debug sampler** command in privileged EXEC mode. To disable debugging output, use the **no** form of this command.

debug sampler [**detailed**| **error**| [**name**] *sampler-name* [**detailed**| **error**| **sampling** *samples*]]

no debug sampler [**detailed**| **error**| [**name**] *sampler-name* [**detailed**| **error**| **sampling**]]

Syntax Description

detailed	(Optional) Enables detailed debugging for sampler elements.
error	(Optional) Enables debugging for sampler errors.
name	(Optional) Specifies the name of a sampler.
<i>sampler-name</i>	(Optional) Name of a sampler that was previously configured.
sampling <i>samples</i>	(Optional) Enables debugging for sampling and specifies the number of samples to debug.

Command Modes

Privileged EXEC

Command History

Release	Modification
Cisco IOS 15.0(2)EX1	This command was introduced.

Examples

The following sample output shows that the debug process has obtained the ID for the sampler named SAMPLER-1:

```
Switch# debug sampler detailed
*May 28 04:14:30.883: Sampler: Sampler(SAMPLER-1: flow monitor FLOW-MONITOR-1 (ip,Et1/0,O)
get ID succeeded:1
*May 28 04:14:30.971: Sampler: Sampler(SAMPLER-1: flow monitor FLOW-MONITOR-1 (ip,Et0/0,I)
get ID succeeded:1
```

description

To configure a description for a flow monitor, flow exporter, or flow record, use the **description** command in the appropriate configuration mode. To remove a description, use the **no** form of this command.

description *description*

no description *description*

Syntax Description

<i>description</i>	Text string that describes the flow monitor, flow exporter, or flow record.
--------------------	---

Command Default

The default description for a flow sampler, flow monitor, flow exporter, or flow record is "User defined."

Command Modes

The following command modes are supported:

Flow exporter configuration

Flow monitor configuration

Flow record configuration

Command History

Release	Modification
Cisco IOS 15.0(2)EX1	This command was introduced.

Usage Guidelines

To return this command to its default setting, use the **no description** or **default description** command in the appropriate configuration mode.

Examples

The following example configures a description for a flow monitor:

```
Switch(config)# flow monitor FLOW-MONITOR-1
Switch(config-flow-monitor)# description Monitors traffic to 172.16.0.1 255.255.0.0
```

Related Commands

Command	Description
flow exporter	Creates a NetFlow Lite flow exporter, or modifies an existing NetFlow Lite flow exporter, and enters NetFlow Lite flow exporter configuration mode.
flow monitor	Creates a flow monitor, or modifies an existing flow monitor, and enters flow monitor configuration mode.
flow record	Creates a NetFlow Lite flow record, or modifies an existing NetFlow Lite flow record, and enters NetFlow Lite flow record configuration mode.

destination

To configure an export destination for a flow exporter, use the **destination** command in flow exporter configuration mode. To remove an export destination for a flow exporter, use the **no** form of this command.

destination {*hostname*| *ip-address*}

no destination {*hostname*| *ip-address*}

Syntax Description

<i>hostname</i>	Hostname of the device to which you want to send the NetFlow information.
<i>ip-address</i>	IPv4 address of the workstation to which you want to send the NetFlow information.

Command Default

An export destination is not configured.

Command Modes

Flow exporter configuration

Command History

Release	Modification
Cisco IOS 15.0(2)EX1	This command was introduced.

Usage Guidelines

Each flow exporter can have only one destination address or hostname.

When you configure a hostname instead of the IP address for the device, the hostname is resolved immediately and the IPv4 address is stored in the running configuration. If the hostname-to-IP-address mapping that was used for the original Domain Name System (DNS) name resolution changes dynamically on the DNS server, the switch does not detect this, and the exported data continues to be sent to the original IP address, resulting in a loss of data.

To return this command to its default setting, use the **no destination** or **default destination** command in flow exporter configuration mode.

Examples

The following example shows how to configure the networking device to export the NetFlow Lite cache entry to a destination system:

```
Switch(config)# flow exporter FLOW-EXPORTER-1
Switch(config-flow-exporter)# destination 10.0.0.4
```

Related Commands

Command	Description
flow exporter	Creates a NetFlow Lite flow exporter, or modifies an existing NetFlow Lite flow exporter, and enters NetFlow Lite flow exporter configuration mode.

dscp

To configure a differentiated services code point (DSCP) value for flow exporter datagrams, use the **dscp** command in flow exporter configuration mode. To remove a DSCP value for flow exporter datagrams, use the **no** form of this command.

dscp *dscp*

no dscp *dscp*

Syntax Description

<i>dscp</i>	DSCP to be used in the DSCP field in exported datagrams. The range is 0 to 63. The default is 0.
-------------	--

Command Default

The differentiated services code point (DSCP) value is 0.

Command Modes

Flow exporter configuration

Command History

Release	Modification
Cisco IOS 15.0(2)EX1	This command was introduced.

Usage Guidelines

To return this command to its default setting, use the **no dscp** or **default dscp** flow exporter configuration command.

Examples

The following example sets 22 as the value of the DSCP field in exported datagrams:

```
Switch(config)# flow exporter FLOW-EXPORTER-1
Switch(config-flow-exporter)# dscp 22
```

Related Commands

Command	Description
flow exporter	Creates a NetFlow Lite flow exporter, or modifies an existing NetFlow Lite flow exporter, and enters NetFlow Lite flow exporter configuration mode.

export-protocol netflow-v9

To configure NetFlow Version 9 export as the export protocol for a NetFlow Lite exporter, use the **export-protocol netflow-v9** command in flow exporter configuration mode.

export-protocol netflow-v9

Syntax Description This command has no arguments or keywords.

Command Default NetFlow Version 9 is enabled.

Command Modes Flow exporter configuration

Command History	Release	Modification
	Cisco IOS 15.0(2)EX1	This command was introduced.

Usage Guidelines The switch does not support NetFlow v5 export format, only NetFlow v9 export format is supported.

Examples The following example configures NetFlow Version 9 export as the export protocol for a NetFlow exporter:

```
Switch(config)# flow exporter FLOW-EXPORTER-1
Switch(config-flow-exporter)# export-protocol netflow-v9
```

Related Commands	Command	Description
	flow exporter	Creates a NetFlow Lite flow exporter, or modifies an existing NetFlow Lite flow exporter, and enters NetFlow Lite flow exporter configuration mode.

exporter

To add a flow exporter for a flow monitor, use the **exporter** command in the appropriate configuration mode. To remove a flow exporter for a flow monitor, use the **no** form of this command.

exporter *exporter-name*

no exporter *exporter-name*

Syntax Description

<i>exporter-name</i>	Name of a flow exporter that was previously configured.
----------------------	---

Command Default

An exporter is not configured.

Command Modes

Flow monitor configuration

Command History

Release	Modification
Cisco IOS 15.0(2)EX1	This command was introduced.

Usage Guidelines

You must have already created a flow exporter by using the **flow exporter** command before you can apply the flow exporter to a flow monitor with the **exporter** command.

To return this command to its default settings, use the **no exporter** or **default exporter** flow monitor configuration command.

Examples

The following example configures an exporter for a flow monitor:

```
Switch(config)# flow monitor FLOW-MONITOR-1
Switch(config-flow-monitor)# exporter EXPORTER-1
```

Related Commands

Command	Description
flow exporter	Creates a NetFlow Lite flow exporter, or modifies an existing NetFlow Lite flow exporter, and enters NetFlow Lite flow exporter configuration mode.
flow monitor	Creates a flow monitor, or modifies an existing flow monitor, and enters flow monitor configuration mode.

flow exporter

To create a NetFlow Lite flow exporter, or to modify an existing NetFlow Lite flow exporter, and enter NetFlow Lite flow exporter configuration mode, use the **flow exporter** command in global configuration mode. To remove a NetFlow Lite flow exporter, use the **no** form of this command.

flow exporter *exporter-name*

no flow exporter *exporter-name*

Syntax Description

<i>exporter-name</i>	Name of the flow exporter that is being created or modified.
----------------------	--

Command Default

NetFlow Lite flow exporters are not present in the configuration.

Command Modes

Global configuration

Command History

Release	Modification
Cisco IOS 15.0(2)EX1	This command was introduced.

Usage Guidelines

Flow exporters export the data in the flow monitor cache to a remote system, such as a server running NetFlow collector, for analysis and storage. Flow exporters are created as separate entities in the configuration. Flow exporters are assigned to flow monitors to provide data export capability for the flow monitors. You can create several flow exporters and assign them to one or more flow monitors to provide several export destinations. You can create one flow exporter and apply it to several flow monitors.

Examples

The following example creates a flow exporter named FLOW-EXPORTER-1 and enters NetFlow Lite flow exporter configuration mode:

```
Switch(config)# flow exporter FLOW-EXPORTER-1
Switch(config-flow-exporter)#
```

Related Commands

Command	Description
clear flow exporter	Clears the statistics for a NetFlow Lite flow exporter.
debug flow exporter	Enables debugging output for NetFlow Lite flow exporters.
show flow exporter	Displays flow exporter status and statistics.

flow monitor

To create a flow monitor, or to modify an existing flow monitor, and enter flow monitor configuration mode, use the **flow monitor** command in global configuration mode. To remove a flow monitor, use the **no** form of this command.

flow monitor *monitor-name*

no flow monitor *monitor-name*

Syntax Description

<i>monitor-name</i>	Name of the flow monitor that is being created or modified.
---------------------	---

Command Default

NetFlow Lite flow monitors are not present in the configuration.

Command Modes

Global configuration

Command History

Release	Modification
Cisco IOS 15.0(2)EX1	This command was introduced.

Usage Guidelines

Flow monitors are the NetFlow Lite component that is applied to interfaces to perform network traffic monitoring. Flow monitors consist of a flow record and a cache. You add the record to the flow monitor after you create the flow monitor. The flow monitor cache is automatically created at the time the flow monitor is applied to the first interface. Flow data is collected from the network traffic during the monitoring process based on the key and nonkey fields in the flow monitor's record and stored in the flow monitor cache.

Examples

The following example creates a flow monitor named FLOW-MONITOR-1 and enters flow monitor configuration mode:

```
Switch(config)# flow monitor FLOW-MONITOR-1
Switch(config-flow-monitor)#
```

Related Commands

Command	Description
clear flow monitor	Clears a flow monitor cache or flow monitor statistics and forces the export of the data in the flow monitor cache.
debug flow monitor	Enables debugging output for NetFlow Lite flow monitors.
show flow monitor	Displays the status and statistics for a NetFlow Lite flow monitor.

flow record

To create a NetFlow Lite flow record, or to modify an existing NetFlow Lite flow record, and enter NetFlow Lite flow record configuration mode, use the **flow record** command in global configuration mode. To remove a NetFlow Lite record, use the **no** form of this command.

flow record *record-name*

no flow record *record-name*

Syntax Description

<i>record-name</i>	Name of the flow record that is being created or modified.
--------------------	--

Command Default

A NetFlow Lite flow record is not configured.

Command Modes

Global configuration

Command History

Release	Modification
Cisco IOS 15.0(2)EX1	This command was introduced.

Usage Guidelines

A flow record defines the keys that NetFlow Lite uses to identify packets in the flow, as well as other fields of interest that NetFlow Lite gathers for the flow. You can define a flow record with any combination of keys and fields of interest. The switch supports a rich set of keys. A flow record also defines the types of counters gathered per flow. You can configure 64-bit packet or byte counters.

Examples

The following example creates a flow record named FLOW-RECORD-1, and enters NetFlow Lite flow record configuration mode:

```
Switch(config)# flow record FLOW-RECORD-1
Switch(config-flow-record)#
```

Related Commands

Command	Description
show flow record	Displays the status and statistics for a NetFlow Lite flow record.

ip flow monitor

To enable a NetFlow Lite flow monitor for IPv4 traffic that the switch is receiving, use the **ip flow monitor** command in interface configuration mode. To disable a flow monitor, use the **no** form of this command.

ip flow monitor *monitor-name* **sampler** *sampler-name* **input**

no ip flow monitor *monitor-name* **sampler** *sampler-name* **input**

Syntax Description

<i>monitor-name</i>	Name of the flow monitor to apply to the interface.
sampler <i>sampler-name</i>	Enables the specified flow sampler for the flow monitor.
input	Monitors IPv4 traffic that the switch receives on the interface.

Command Default

A flow monitor is not enabled.

Command Modes

Interface configuration

Command History

Release	Modification
Cisco IOS 15.0(2)EX1	This command was introduced.

Usage Guidelines

Before you can apply a flow monitor to an interface with the **ip flow monitor** command, you must have already created the flow monitor using the **flow monitor** global configuration command.

When you add a sampler to a flow monitor, only packets that are selected by the named sampler will be entered into the cache to form flows. Each use of a sampler causes separate statistics to be stored for that usage.



Note

The statistics for each flow must be scaled to give the expected true usage. For example, with a 1 in 100 sampler it is expected that the packet and byte counters will have to be multiplied by 100.

Examples

The following example enables a flow monitor for monitoring input traffic, with a sampler to limit the input packets that are sampled:

```
Switch(config)# interface gigabitethernet1/0/1
Switch(config-if)# ip flow monitor FLOW-MONITOR-1 sampler SAMPLER-1 input
```

Related Commands

Command	Description
flow monitor	Creates a flow monitor, or modifies an existing flow monitor, and enters flow monitor configuration mode.
sampler	Creates a NetFlow Lite flow sampler, or modifies an existing NetFlow Lite flow sampler.

ipv6 flow monitor

To enable a flow monitor for IPv6 traffic that the switch is receiving, use the **ipv6 flow monitor** command in interface configuration mode. To disable a flow monitor, use the **no** form of this command.

ipv6 flow monitor *monitor-name* **sampler** *sampler-name* **input**

no ipv6 flow monitor *monitor-name* **sampler** *sampler-name* **input**

Syntax Description

<i>monitor-name</i>	Name of the flow monitor to apply to the interface.
sampler <i>sampler-name</i>	Enables the specified flow sampler for the flow monitor.
input	Monitors IPv6 traffic that the switch receives on the interface.

Command Default

A flow monitor is not enabled.

Command Modes

Interface configuration

Command History

Release	Modification
Cisco IOS 15.0(2)EX1	This command was introduced.

Usage Guidelines

Before you can apply a flow monitor to the interface with the **ipv6 flow monitor** command, you must have already created the flow monitor using the **flow monitor** global configuration command.

When you add a sampler to a flow monitor, only packets that are selected by the named sampler will be entered into the cache to form flows. Each use of a sampler causes separate statistics to be stored for that usage.

You cannot add a sampler to a flow monitor after the flow monitor has been enabled on the interface. You must first remove the flow monitor from the interface and then enable the same flow monitor with a sampler.



Note

The statistics for each flow must be scaled to give the expected true usage. For example, with a 1 in 100 sampler it is expected that the packet and byte counters will have to be multiplied by 100.

Examples

The following example enables a flow monitor for monitoring input traffic, with a sampler to limit the input packets that are sampled:

```
Switch(config)# interface gigabitethernet1/0/1
Switch(config-if)# ipv6 flow monitor FLOW-MONITOR-1 sampler SAMPLER-1 input
```

Related Commands

Command	Description
flow monitor	Creates a flow monitor, or modifies an existing flow monitor, and enters flow monitor configuration mode.
sampler	Creates a NetFlow Lite flow sampler, or modifies an existing NetFlow Lite flow sampler.

match datalink ethertype

To configure the EtherType of the packet as a key field for a flow record, use the **match datalink ethertype** command in flow record configuration mode. To disable the EtherType of the packet as a key field for a flow record, use the **no** form of this command.

match datalink ethertype

no match datalink ethertype

Syntax Description This command has no arguments or keywords.

Command Default The EtherType of the packet is not configured as a key field.

Command Modes Flow record configuration

Command History	Release	Modification
	Cisco IOS 15.0(2)EX1	This command was introduced.

Usage Guidelines A flow record requires at least one key field before it can be used in a flow monitor. The key fields distinguish flows, with each flow having a unique set of values for the key fields. The key fields are defined using the **match** command.

When you configure the EtherType of the packet as a key field for a flow record using the **match datalink ethertype** command, the traffic flow that is created is based on the type of flow monitor that is assigned to the interface:

- When a datalink flow monitor is assigned to an interface using the **datalink flow monitor** interface configuration command, it creates unique flows for different Layer 2 protocols.
- When an IP flow monitor is assigned to an interface using the **ip flow monitor** interface configuration command, it creates unique flows for different IPv4 protocols.
- When an IPv6 flow monitor is assigned to an interface using the **ipv6 flow monitor** interface configuration command, it creates unique flows for different IPv6 protocols.

To return this command to its default settings, use the **no match datalink ethertype** or **default match datalink ethertype** flow record configuration command.

Examples The following example configures the EtherType of the packet as a key field for a NetFlow Lite flow record:

```
Switch(config)# flow record FLOW-RECORD-1
Switch(config-flow-record)# match datalink ethertype
```

Related Commands

Command	Description
flow record	Creates a NetFlow Lite flow record, or modifies an existing NetFlow Lite flow record, and enters NetFlow Lite flow record configuration mode.

match datalink mac

To configure the use of MAC addresses as a key field for a flow record, use the **match datalink mac** command in flow record configuration mode. To disable the use of MAC addresses as a key field for a flow record, use the **no** form of this command.

match datalink mac {destination address input| source address input}

no match datalink mac {destination address input| source address input}

Syntax Description

destination address	Configures the use of the destination MAC address as a key field.
input	Specifies the MAC address of input packets.
source address	Configures the use of the source MAC address as a key field.

Command Default

MAC addresses are not configured as a key field.

Command Modes

Flow record configuration

Command History

Release	Modification
Cisco IOS 15.0(2)EX1	This command was introduced.

Usage Guidelines

A flow record requires at least one key field before it can be used in a flow monitor. The key fields distinguish flows, with each flow having a unique set of values for the key fields. The key fields are defined using the **match** command.

The **input** keyword is used to specify the observation point that is used by the **match datalink mac** command to create flows based on the unique MAC addresses in the network traffic.



Note

When a datalink flow monitor is assigned to an interface or VLAN record, it creates flows only for non-IPv6 or non-IPv4 traffic.

To return this command to its default settings, use the **no match datalink mac** or **default match datalink mac** flow record configuration command.

Examples

The following example configures the use of the destination MAC address of packets that are received by the switch as a key field for a flow record:

```
Switch(config)# flow record FLOW-RECORD-1
Switch(config-flow-record)# match datalink mac destination address input
```

Related Commands

Command	Description
flow record	Creates a NetFlow Lite flow record, or modifies an existing NetFlow Lite flow record, and enters NetFlow Lite flow record configuration mode.

match ipv4

To configure one or more of the IPv4 fields as a key field for a flow record, use the **match ipv4** command in flow record configuration mode. To disable the use of one or more of the IPv4 fields as a key field for a flow record, use the **no** form of this command.

match ipv4 {destination address| protocol| source address| tos| version}

no match ipv4 {destination address| protocol| source address| tos| version}

Syntax Description

destination address	Configures the IPv4 destination address as a key field. For more information see match ipv4 destination address, on page 54 .
protocol	Configures the IPv4 protocol as a key field.
source address	Configures the IPv4 destination address as a key field. For more information see match ipv4 source address, on page 55 .
tos	Configures the IPv4 ToS as a key field.
version	Configures the IP version from IPv4 header as a key field.

Command Default

The use of one or more of the IPv4 fields as a key field for a user-defined flow record is not enabled.

Command Modes

Flow record configuration

Command History

Release	Modification
Cisco IOS 15.0(2)EX1	This command was introduced.

Usage Guidelines

A flow record requires at least one key field before it can be used in a flow monitor. The key fields distinguish flows, with each flow having a unique set of values for the key fields. The key fields are defined using the **match** command.

Examples

The following example configures the IPv4 protocol as a key field:

```
Switch(config)# flow record FLOW-RECORD-1
Switch(config-flow-record)# match ipv4 protocol
```

Related Commands

Command	Description
flow record	Creates a NetFlow Lite flow record, or modifies an existing NetFlow Lite flow record, and enters NetFlow Lite flow record configuration mode.

match ipv4 destination address

To configure the IPv4 destination address as a key field for a flow record, use the **match ipv4 destination address** command in flow record configuration mode. To disable the IPv4 destination address as a key field for a flow record, use the **no** form of this command.

match ipv4 destination address

no match ipv4 destination address

Syntax Description This command has no arguments or keywords.

Command Default The IPv4 destination address is not configured as a key field.

Command Modes Flow record configuration

Command History	Release	Modification
	Cisco IOS 15.0(2)EX1	This command was introduced.

Usage Guidelines A flow record requires at least one key field before it can be used in a flow monitor. The key fields distinguish flows, with each flow having a unique set of values for the key fields. The key fields are defined using the **match** command.

To return this command to its default settings, use the **no match ipv4 destination address** or **default match ipv4 destination address** flow record configuration command.

Examples The following example configures the IPv4 destination address as a key field for a flow record:

```
Switch(config)# flow record FLOW-RECORD-1
Switch(config-flow-record)# match ipv4 destination address
```

Related Commands	Command	Description
	flow record	Creates a NetFlow Lite flow record, or modifies an existing NetFlow Lite flow record, and enters NetFlow Lite flow record configuration mode.

match ipv4 source address

To configure the IPv4 source address as a key field for a flow record, use the **match ipv4 source address** command in flow record configuration mode. To disable the use of the IPv4 source address as a key field for a flow record, use the **no** form of this command.

match ipv4 source address

no match ipv4 source address

Syntax Description This command has no arguments or keywords.

Command Default The IPv4 source address is not configured as a key field.

Command Modes Flow record configuration

Command History	Release	Modification
	Cisco IOS 15.0(2)EX1	This command was introduced.

Usage Guidelines A flow record requires at least one key field before it can be used in a flow monitor. The key fields distinguish flows, with each flow having a unique set of values for the key fields. The key fields are defined using the **match** command.

To return this command to its default settings, use the **no match ipv4 source address** or **default match ipv4 source address** flow record configuration command.

Examples The following example configures the IPv4 source address as a key field:

```
Switch(config)# flow record FLOW-RECORD-1
Switch(config-flow-record)# match ipv4 source address
```

Related Commands	Command	Description
	flow record	Creates a NetFlow Lite flow record, or modifies an existing NetFlow Lite flow record, and enters NetFlow Lite flow record configuration mode.

match ipv6

To configure one or more of the IPv6 fields as a key field for a flow record, use the **match ipv6** command in flow record configuration mode. To disable the use of one or more of the IPv6 fields as a key field for a flow record, use the **no** form of this command.

match ipv6 {destination address| flow-label| protocol| source address}

no match ipv6 {destination address| flow-label| protocol| source address}

Syntax Description

destination address	Configures the IPv4 destination address as a key field. For more information see match ipv6 destination address, on page 57 .
flow-label	Configures the IPv6 flow-label as a key field.
protocol	Configures the IPv6 protocol as a key field.
source address	Configures the IPv4 destination address as a key field. For more information see match ipv6 source address, on page 58 .

Command Default

The IPv6 fields are not configured as a key field.

Command Modes

Flow record configuration

Command History

Release	Modification
Cisco IOS 15.0(2)EX1	This command was introduced.

Usage Guidelines

A flow record requires at least one key field before it can be used in a flow monitor. The key fields distinguish flows, with each flow having a unique set of values for the key fields. The key fields are defined using the **match** command.

Examples

The following example configures the IPv6 protocol field as a key field:

```
Switch(config)# flow record FLOW-RECORD-1
Switch(config-flow-record)# match ipv6 protocol
```

Related Commands

Command	Description
flow record	Creates a NetFlow Lite flow record, or modifies an existing NetFlow Lite flow record, and enters NetFlow Lite flow record configuration mode.

match ipv6 destination address

To configure the IPv6 destination address as a key field for a flow record, use the **match ipv6 destination address** command in flow record configuration mode. To disable the IPv6 destination address as a key field for a flow record, use the **no** form of this command.

match ipv6 destination address

no match ipv6 destination address

Syntax Description This command has no arguments or keywords.

Command Default The IPv6 destination address is not configured as a key field.

Command Modes Flow record configuration

Command History	Release	Modification
	Cisco IOS 15.0(2)EX1	This command was introduced.

Usage Guidelines A flow record requires at least one key field before it can be used in a flow monitor. The key fields distinguish flows, with each flow having a unique set of values for the key fields. The key fields are defined using the **match** command.

To return this command to its default settings, use the **no match ipv6 destination address** or **default match ipv6 destination address** flow record configuration command.

Examples The following example configures the IPv6 destination address as a key field:

```
Switch(config)# flow record FLOW-RECORD-1
Switch(config-flow-record)# match ipv6 destination address
```

Related Commands	Command	Description
	flow record	Creates a NetFlow Lite flow record, or modifies an existing NetFlow Lite flow record, and enters NetFlow Lite flow record configuration mode.

match ipv6 source address

To configure the IPv6 source address as a key field for a flow record, use the **match ipv6 source address** command in flow record configuration mode. To disable the use of the IPv6 source address as a key field for a flow record, use the **no** form of this command.

match ipv6 source address

no match ipv6 source address

Syntax Description This command has no arguments or keywords.

Command Default The IPv6 source address is not configured as a key field.

Command Modes Flow record configuration

Command History	Release	Modification
	Cisco IOS 15.0(2)EX1	This command was introduced.

Usage Guidelines A flow record requires at least one key field before it can be used in a flow monitor. The key fields distinguish flows, with each flow having a unique set of values for the key fields. The key fields are defined using the **match** command.

To return this command to its default settings, use the **no match ipv6 source address** or **default match ipv6 source address** flow record configuration command.

Examples The following example configures a IPv6 source address as a key field:

```
Switch(config)# flow record FLOW-RECORD-1
Switch(config-flow-record)# match ipv6 source address
```

Related Commands	Command	Description
	flow record	Creates a NetFlow Lite flow record, or modifies an existing NetFlow Lite flow record, and enters NetFlow Lite flow record configuration mode.

match transport

To configure one or more of the transport fields as a key field for a flow record, use the **match transport** command in flow record configuration mode. To disable the use of one or more of the transport fields as a key field for a flow record, use the **no** form of this command.

```
match transport {destination-port| source-port}
```

```
no match transport {destination-port| source-port}
```

Syntax Description

destination-port	Configures the transport destination port as a key field.
source-port	Configures the transport source port as a key field.

Command Default

The transport fields are not configured as a key field.

Command Modes

Flow record configuration

Command History

Release	Modification
Cisco IOS 15.0(2)EX1	This command was introduced.

Usage Guidelines

A flow record requires at least one key field before it can be used in a flow monitor. The key fields distinguish flows, with each flow having a unique set of values for the key fields. The key fields are defined using the **match** command.

Examples

The following example configures the destination port as a key field:

```
Switch(config)# flow record FLOW-RECORD-1
Switch(config-flow-record)# match transport destination-port
```

The following example configures the source port as a key field:

```
Switch(config)# flow record FLOW-RECORD-1
Switch(config-flow-record)# match transport source-port
```

Related Commands

Command	Description
flow record	Creates a NetFlow Lite flow record, or modifies an existing NetFlow Lite flow record, and enters NetFlow Lite flow record configuration mode.

mode

To specify the type of sampling and the packet interval for a NetFlow Lite sampler, use the **mode** command in sampler configuration mode. To remove the type of sampling and the packet interval information for a NetFlow Lite sampler, use the **no** form of this command.

mode {**deterministic**| **random**} **1 out-of** *window-size*

no mode

Syntax Description

deterministic	Enables deterministic mode sampling for the sampler.
random	Enables random mode sampling for the sampler.
1 out-of <i>window-size</i>	Specifies the window size from which to select packets. The range is 32 to 1022.

Command Default

The mode and the packet interval for a sampler are not configured.

Command Modes

Sampler configuration

Command History

Release	Modification
Cisco IOS 15.0(2)EX1	This command was introduced.

Usage Guidelines

A total of four unique samplers (random or deterministic) are supported on the switch.

In deterministic mode, packets are chosen periodically based on the configured interval. This mode has less overhead than random mode and can be useful when the switch samples traffic that is random in nature.

In random mode, packets are chosen in a manner that should eliminate any bias from traffic patterns and counter any attempt by users to avoid monitoring.

When you attach a monitor using a deterministic sampler, every attachment with the same sampler uses one new free sampler from the switch out of four available samplers. You cannot attach a monitor with any sampler beyond four attachments. When you attach a monitor using a random sampler, only the first attachment uses a new sampler from the switch. The remainder of all of the attachments using the same sampler, share the same sampler. Because of this behavior, when using a deterministic sampler, you can always make sure that the correct number of flows are sampled by comparing the sampling rate and what the switch sends. If the same random sampler is used with multiple interfaces, flows from any interface can always be sampled, and flows from other interfaces can always be skipped.

Examples

The following example enables deterministic sampling with a window size of 1000:

```
Switch(config)# sampler SAMPLER-1  
Switch(config-sampler)# mode deterministic 1 out-of 1000
```

The following example enables random sampling with a window size of 1000:

```
Switch(config)# sampler SAMPLER-1  
Switch(config-sampler)# mode random 1 out-of 1000
```

Related Commands

Command	Description
debug sampler	Enables debugging output for NetFlow Lite samplers.
show sampler	Displays the status and statistics for a NetFlow Lite sampler.

option

To configure optional data parameters for a flow exporter for NetFlow Lite, use the **option** command in flow exporter configuration mode. To remove optional data parameters for a flow exporter, use the **no** form of this command.

option {**exporter-stats**| **interface-table**| **sampler-table**} [**timeout** *seconds*]

no option {**exporter-stats**| **interface-table**| **sampler-table**}

Syntax Description

exporter-stats	Configures the exporter statistics option for flow exporters.
interface-table	Configures the interface table option for flow exporters.
sampler-table	Configures the export sampler table option for flow exporters.
timeout <i>seconds</i>	(Optional) Configures the option resend time in seconds for flow exporters. The range is 1 to 86400. The default is 600.

Command Default

The timeout is 600 seconds. All other optional data parameters are not configured.

Command Modes

Flow exporter configuration

Command History

Release	Modification
Cisco IOS 15.0(2)EX1	This command was introduced.

Usage Guidelines

The **option exporter-stats** command causes the periodic sending of the exporter statistics, including the number of records, bytes, and packets sent. This command allows the collector to estimate packet loss for the export records it receives. The optional timeout alters the frequency at which the reports are sent.

The **option interface-table** command causes the periodic sending of an options table, which allows the collector to map the interface SNMP indexes provided in the flow records to interface names. The optional timeout can alter the frequency at which the reports are sent.

The **option sampler-table** command causes the periodic sending of an options table, which details the configuration of each sampler and allows the collector to map the sampler ID provided in any flow record to a configuration that it can use to scale up the flow statistics. The optional timeout can alter the frequency at which the reports are sent.

To return this command to its default settings, use the **no option** or **default option** flow exporter configuration command.

Examples

The following example shows how to enable the periodic sending of the sampler option table, which allows the collector to map the sampler ID to the sampler type and rate:

```
Switch(config)# flow exporter FLOW-EXPORTER-1
Switch(config-flow-exporter)# option sampler-table
```

The following example shows how to enable the periodic sending of the exporter statistics, including the number of records, bytes, and packets sent:

```
Switch(config)# flow exporter FLOW-EXPORTER-1
Switch(config-flow-exporter)# option exporter-stats
```

The following example shows how to enable the periodic sending of an options table, which allows the collector to map the interface SNMP indexes provided in the flow records to interface names:

```
Switch(config)# flow exporter FLOW-EXPORTER-1
Switch(config-flow-exporter)# option interface-table
```

Related Commands

Command	Description
flow exporter	Creates a NetFlow Lite flow exporter, or modifies an existing NetFlow Lite flow exporter, and enters NetFlow Lite flow exporter configuration mode.

record

To add a flow record for a NetFlow Lite flow monitor, use the **record** command in flow monitor configuration mode. To remove a flow record for a NetFlow Lite flow monitor, use the **no** form of this command.

record *record-name*

no record

Syntax Description

<i>record-name</i>	Name of a user-defined flow record that was previously configured.
--------------------	--

Command Default

A flow record is not configured.

Command Modes

Flow monitor configuration

Command History

Release	Modification
Cisco IOS 15.0(2)EX1	This command was introduced.

Usage Guidelines

Each flow monitor requires a record to define the contents and layout of its cache entries. The flow monitor can use one of the wide range of predefined record formats, or advanced users may create their own record formats.



Note

You must use the **no ip flow monitor** command to remove a flow monitor from all of the interfaces to which you have applied it before you can modify the parameters for the **record** command for the flow monitor.

Examples

The following example configures the flow monitor to use FLOW-RECORD-1:

```
Switch(config)# flow monitor FLOW-MONITOR-1
Switch(config-flow-monitor)# record FLOW-RECORD-1
```

Related Commands

Command	Description
flow monitor	Creates a flow monitor, or modifies an existing flow monitor, and enters flow monitor configuration mode.

sampler

To create a NetFlow Lite flow sampler, or to modify an existing NetFlow Lite flow sampler, and to enter NetFlow Lite sampler configuration mode, use the **sampler** command in global configuration mode. To remove a sampler, use the **no** form of this command.

sampler *sampler-name*

no sampler *sampler-name*

Syntax Description

<i>sampler-name</i>	Name of the flow sampler that is being created or modified.
---------------------	---

Command Default

NetFlow Lite flow samplers are not configured.

Command Modes

Global configuration

Command History

Release	Modification
Cisco IOS 15.0(2)EX1	This command was introduced.

Usage Guidelines

Flow samplers are used to reduce the load placed by NetFlow Lite on the networking device to monitor traffic by limiting the number of packets that are analyzed. You configure a rate of sampling that is 1 out of a range of 32 to 1022 packets. Flow samplers are applied to interfaces in conjunction with a flow monitor to implement sampled NetFlow Lite.

To enable flow sampling, you configure the record that you want to use for traffic analysis and assign it to a flow monitor. When you apply a flow monitor with a sampler to an interface, the sampled packets are analyzed at the rate specified by the sampler and compared with the flow record associated with the flow monitor. If the analyzed packets meet the criteria specified by the flow record, they are added to the flow monitor cache.

Examples

The following example creates a flow sampler name SAMPLER-1:

```
Switch(config)# sampler SAMPLER-1
Switch(config-sampler)#
```

Related Commands

Command	Description
debug sampler	Enables debugging output for NetFlow Lite samplers.
mode	Specifies the type of sampling and the packet interval for a NetFlow Lite sampler.

Command	Description
show sampler	Displays the status and statistics for a NetFlow Lite sampler.

show flow exporter

To display flow exporter status and statistics, use the **show flow exporter** command in privileged EXEC mode.

show flow exporter [**export-ids netflow-v9**] [**name**] *exporter-name* [**statistics**| **templates**]| **statistics**| **templates**]

Syntax Description

export-ids netflow-v9	(Optional) Displays the NetFlow Version 9 export fields that can be exported and their IDs.
name	(Optional) Specifies the name of a flow exporter.
<i>exporter-name</i>	(Optional) Name of a flow exporter that was previously configured.
statistics	(Optional) Displays statistics for all flow exporters or for the specified flow exporter.
templates	(Optional) Displays template information for all flow exporters or for the specified flow exporter.

Command Default

None

Command Modes

Privileged EXEC

Command History

Release	Modification
Cisco IOS 15.0(2)EX1	This command was introduced.

Examples

The following example displays the status and statistics for all of the flow exporters configured on a switch:

```
Switch# show flow exporter
Flow Exporter FLOW-EXPORTER-1:
  Description:           Exports to the datacenter
  Export protocol:       NetFlow Version 9
  Transport Configuration:
    Destination IP address: 192.168.0.1
    Source IP address:     192.168.0.2
    Transport Protocol:    UDP
    Destination Port:      9995
    Source Port:           55864
    DSCP:                  0x0
    TTL:                   255
    Output Features:       Used
```

This table describes the significant fields shown in the display:

Table 4: show flow exporter Field Descriptions

Field	Description
Flow Exporter	The name of the flow exporter that you configured.
Description	The description that you configured for the exporter, or the default description User defined.
Transport Configuration	The transport configuration fields for this exporter.
Destination IP address	The IP address of the destination host.
Source IP address	The source IP address used by the exported packets.
Transport Protocol	The transport layer protocol used by the exported packets.
Destination Port	The destination UDP port to which the exported packets are sent.
Source Port	The source UDP port from which the exported packets are sent.
DSCP	The differentiated services code point (DSCP) value.
TTL	The time-to-live value.
Output Features	Specifies whether the output-features command, which causes the output features to be run on Flexible NetFlow export packets, has been used or not.

The following example displays the status and statistics for all of the flow exporters configured on a switch:

```
Switch# show flow exporter name FLOW-EXPORTER-1 statistics
Flow Exporter FLOW-EXPORTER-1:
  Packet send statistics (last cleared 2w6d ago):
    Successfully sent:      0                (0 bytes)
```

Related Commands

Command	Description
clear flow exporter	Clears the statistics for a NetFlow Lite flow exporter.
debug flow exporter	Enables debugging output for NetFlow Lite flow exporters.
flow exporter	Creates a NetFlow Lite flow exporter, or modifies an existing NetFlow Lite flow exporter, and enters NetFlow Lite flow exporter configuration mode.

show flow interface

To display the NetFlow Lite configuration and status for an interface, use the **show flow interface** command in privileged EXEC mode.

```
show flow interface [type number]
```

Syntax Description

<i>type</i>	(Optional) The type of interface on which you want to display NetFlow Lite accounting configuration information.
<i>number</i>	(Optional) The number of the interface on which you want to display NetFlow Lite accounting configuration information.

Command Modes

Privileged EXEC

Command History

Release	Modification
Cisco IOS 15.0(2)EX1	This command was introduced.

Examples

The following example displays the NetFlow Lite accounting configuration on Ethernet interfaces 0/0 and 0/1:

```
Switch# show flow interface gigabitethernet1/0/1
Interface Ethernet1/0
  monitor:          FLOW-MONITOR-1
  direction:       Output
  traffic(ip):      on
Switch# show flow interface gigabitethernet1/0/2
Interface Ethernet0/0
  monitor:          FLOW-MONITOR-1
  direction:       Input
  traffic(ip):      sampler SAMPLER-2#
```

The table below describes the significant fields shown in the display.

Table 5: show flow interface Field Descriptions

Field	Description
Interface	The interface to which the information applies.
monitor	The name of the flow monitor that is configured on the interface.

Field	Description
direction:	<p>The direction of traffic that is being monitored by the flow monitor.</p> <p>The possible values are:</p> <ul style="list-style-type: none"> • Input—Traffic is being received by the interface. • Output—Traffic is being transmitted by the interface.
traffic(ip)	<p>Indicates if the flow monitor is in normal mode or sampler mode.</p> <p>The possible values are:</p> <ul style="list-style-type: none"> • on—The flow monitor is in normal mode. • sampler—The flow monitor is in sampler mode (the name of the sampler will be included in the display).

Related Commands

Command	Description
show flow monitor	Displays the status and statistics for a NetFlow Lite flow monitor.

show flow monitor

To display the status and statistics for a NetFlow Lite flow monitor, use the **show flow monitor** command in privileged EXEC mode.

```
show flow monitor [[name] monitor-name [cache [format {csv| record| table}]] [statistics]]
```

Syntax Description

name	(Optional) Specifies the name of a flow monitor.
<i>monitor-name</i>	(Optional) Name of a flow monitor that was previously configured.
cache	(Optional) Displays the contents of the cache for the flow monitor.
format	(Optional) Specifies the use of one of the format options for formatting the display output.
csv	(Optional) Displays the flow monitor cache contents in comma-separated variables (CSV) format.
record	(Optional) Displays the flow monitor cache contents in record format.
table	(Optional) Displays the flow monitor cache contents in table format.
statistics	(Optional) Displays the statistics for the flow monitor.

Command Modes

Privileged EXEC

Command History

Release	Modification
Cisco IOS 15.0(2)EX1	This command was introduced.

Usage Guidelines

The **cache** keyword uses the record format by default.

The uppercase field names in the display output of the **show flowmonitor monitor-name cache** command are key fields that NetFlow Lite uses to differentiate flows. The lowercase field names in the display output of the **show flow monitor monitor-name cache** command are nonkey fields from which NetFlow Lite collects values as additional data for the cache.

Examples

The following example displays the status for a flow monitor:

```
Switch# show flow monitor FLOW-MONITOR-1
Flow Monitor FLOW-MONITOR-1:
  Description:      Used for basic traffic analysis
```

```

Flow Record:      flow-record-1
Flow Exporter:    flow-exporter-1
                  flow-exporter-2

Cache:
  Type:           normal
  Status:         allocated
  Size:           4096 entries / 311316 bytes
  Inactive Timeout: 15 secs
  Active Timeout:  1800 secs
  Update Timeout: 1800 secs

```

This table describes the significant fields shown in the display.

Table 6: show flow monitor monitor-name Field Descriptions

Field	Description
Flow Monitor	Name of the flow monitor that you configured.
Description	Description that you configured or the monitor, or the default description User defined.
Flow Record	Flow record assigned to the flow monitor.
Flow Exporter	Exporters that are assigned to the flow monitor.
Cache	Information about the cache for the flow monitor.
Type	Flow monitor cache type. The possible values are: <ul style="list-style-type: none"> • immediate—Flows are expired immediately. • normal—Flows are expired normally. • Permanent—Flows are never expired.
Status	Status of the flow monitor cache. The possible values are: <ul style="list-style-type: none"> • allocated—The cache is allocated. • being deleted—The cache is being deleted. • not allocated—The cache is not allocated.
Size	Current cache size.
Inactive Timeout	Current value for the inactive timeout in seconds.
Active Timeout	Current value for the active timeout in seconds.
Update Timeout	Current value for the update timeout in seconds.

The following example displays the status, statistics, and data for the flow monitor named FLOW-MONITOR-1:

```
Switch# show flow monitor FLOW-MONITOR-1 cache
Cache type:                               Normal
Cache size:                               4096
Current entries:                          8
High Watermark:                           10
Flows added:                              1560
Flows aged:                               1552
- Active timeout ( 1800 secs)             24
- Inactive timeout ( 15 secs)             1528
- Event aged                              0
- Watermark aged                          0
- Emergency aged                          0
IP TOS:                                   0x00
IP PROTOCOL:                              6
IPV4 SOURCE ADDRESS:                      10.0.0.1
IPV4 DESTINATION ADDRESS:                 172.16.0.1
TRNS SOURCE PORT:                         20
TRNS DESTINATION PORT:                    20
INTERFACE INPUT:                          Et0/0
FLOW SAMPLER ID:                          0
ip source as:                             0
ip destination as:                        0
ipv4 next hop address:                    172.16.0.2
ipv4 source mask:                         /0
ipv4 destination mask:                    /24
tcp flags:                                0x00
interface output:                         Et1/0
counter bytes:                            198520
counter packets:                          4963
timestamp first:                          10564356
timestamp last:                           12154104
```

This table describes the significant fields shown in the display.

Table 7: show flow monitor monitor-name cache Field Descriptions

Field	Description
Cache type	Flow monitor cache type. The possible values are: <ul style="list-style-type: none"> • Immediate—Flows are expired immediately. • Normal—Flows are expired normally. • Permanent—Flows are never expired.
Cache Size	Number of entries in the cache.
Current entries	Number of entries in the cache that are in use.
High Watermark	Highest number of cache entries seen.
Flows added	Flows added to the cache since the cache was created.
Flows aged	Flows expired from the cache since the cache was created.
Active timeout	Current value for the active timeout in seconds.

Field	Description
Inactive timeout	Current value for the inactive timeout in seconds.
Event aged	Number of flows that have been aged by an event such as using the force-export option for the clear flow monitor command.
Watermark aged	Number of flows that have been aged because they exceeded the maximum high watermark value.
Emergency aged	Number of flows that have been aged because the cache size was exceeded.
IP TOS	IP type of service (ToS) value.
IP PROTOCOL	Protocol number.
IPV4 SOURCE ADDRESS	IPv4 source address.
IPV4 DESTINATION ADDRESS	IPv4 destination address.
TRNS SOURCE PORT	Source port for the transport protocol.
TRNS DESTINATION PORT	Destination port for the transport protocol.
INTERFACE INPUT	Interface on which the input is received.
FLOW SAMPLER ID	Flow sampler ID number.
ip source as	Border Gateway Protocol (BGP) source autonomous system number.
ip destination as	BGP destination autonomous system number.
ipv4 next hop address	IPv4 address of the next hop to which the packet is forwarded.
ipv4 source mask	IPv4 source address mask.
ipv4 destination mask	IPv4 destination address mask.
tcp flags	Value of the TCP flags.
interface output	Interface on which the input is transmitted.
counter bytes	Number of bytes that have been counted.
counter packets	Number of packets that have been counted.
timestamp first	Time stamp of the first packet in the flow.

Field	Description
timestamp last	Time stamp of the last packet in the flow.

The following example displays the status, statistics, and data for the flow monitor named FLOW-MONITOR-1 in a table format:

```
Switch# show flow monitor FLOW-MONITOR-1 cache format table

Cache type:                               Normal
Cache size:                               4096
Current entries:                           4
High Watermark:                            6
Flows added:                               90
Flows aged:                                86
- Active timeout ( 1800 secs)              0
- Inactive timeout ( 15 secs)              86
- Event aged                               0
- Watermark aged                           0
- Emergency aged                           0
IP TOS   IP PROT   IPV4 SRC ADDR   IPV4 DST ADDR   TRNS SRC PORT   TRNS DST PORT
=====  =====  =====
0x00     1    10.251.10.1    172.16.10.2    0                02
0x00     1    10.251.10.1    172.16.10.2    0                20484
0xC0     17   172.16.6.1     224.0.0.9      520              5202
0x00     6    10.10.11.1     172.16.10.5    25               252
```

The following example displays the status, statistics, and data for the flow monitor named FLOW-MONITOR-IPv6 (the cache contains IPv6 data) in record format:

```
Switch# show flow monitor name FLOW-MONITOR-IPv6 cache format record

Cache type:                               Normal
Cache size:                               4096
Current entries:                           6
High Watermark:                            8
Flows added:                               1048
Flows aged:                                1042
- Active timeout ( 1800 secs)              11
- Inactive timeout ( 15 secs)              1031
- Event aged                               0
- Watermark aged                           0
- Emergency aged                           0
IPV6 FLOW LABEL:                          0
IPV6 EXTENSION MAP:                       0x00000040
IPV6 SOURCE ADDRESS:                      2001:DB8:1:ABCD::1
IPV6 DESTINATION ADDRESS:                 2001:DB8:4:ABCD::2
TRNS SOURCE PORT:                         3000
TRNS DESTINATION PORT:                   55
INTERFACE INPUT:                          Et0/0
FLOW DIRECTION:                           Input
FLOW SAMPLER ID:                          0
IP PROTOCOL:                              17
IP TOS:                                    0x00
ip source as:                              0
ip destination as:                         0
ipv6 next hop address:                    ::
ipv6 source mask:                         /48
ipv6 destination mask:                    /0
tcp flags:                                0x00
interface output:                         Null
counter bytes:                             521192
counter packets:                           9307
timestamp first:                           9899684
timestamp last:                           11660744
```

The following example displays the status and statistics for a flow monitor:

```
Switch# show flow monitor FLOW-MONITOR-1 statistics
Cache type:                               Normal
Cache size:                               4096
Current entries:                           4
High Watermark:                            6
Flows added:                               116
Flows aged:                                112
- Active timeout ( 1800 secs)              0
- Inactive timeout ( 15 secs)              112
- Event aged                               0
- Watermark aged                           0
- Emergency aged                           0
```

Related Commands

Command	Description
clear flow monitor	Clears a flow monitor cache or flow monitor statistics and forces the export of the data in the flow monitor cache.
debug flow monitor	Enables debugging output for NetFlow Lite flow monitors.

show flow record

To display the status and statistics for a NetFlow Lite flow record, use the **show flow record** command in privileged EXEC mode.

```
show flow record [[name] record-name]
```

Syntax Description

name	(Optional) Specifies the name of a flow record.
<i>record-name</i>	(Optional) Name of a user-defined flow record that was previously configured.

Command Default

None

Command Modes

Privileged EXEC

Command History

Release	Modification
Cisco IOS 15.0(2)EX1	This command was introduced.

Examples

The following example displays the status and statistics for FLOW-RECORD-1:

```
Switch# show flow record FLOW-RECORD-1
flow record FLOW-RECORD-1:
  Description:      User defined
  No. of users:    0
  Total field space: 24 bytes
  Fields:
    match ipv6 destination address
    match transport source-port
    collect interface input
```

Related Commands

Command	Description
record	Configures a flow record for a NetFlow Lite flow monitor.

show sampler

To display the status and statistics for a NetFlow Lite sampler, use the **show sampler** command in privileged EXEC mode.

show sampler *[[name] sampler-name]*

Syntax Description

name	(Optional) Specifies the name of a sampler.
<i>sampler-name</i>	(Optional) Name of a sampler that was previously configured.

Command Default

None

Command Modes

Privileged EXEC

Command History

Release	Modification
Cisco IOS 15.0(2)EX1	This command was introduced.

Examples

The following example displays the status and statistics for all of the flow samplers configured:

```
Switch# show sampler
Sampler SAMPLER-1:
  ID:                2083940135
  export ID:         0
  Description:       User defined
  Type:              Invalid (not in use)
  Rate:              1 out of 32
  Samples:           0
  Requests:          0
  Users (0):

Sampler SAMPLER-2:
  ID:                3800923489
  export ID:         1
  Description:       User defined
  Type:              random
  Rate:              1 out of 100
  Samples:           1
  Requests:          124
  Users (1):
    flow monitor FLOW-MONITOR-1 (datalink,vlan1) 0 out of 0
```

This table describes the significant fields shown in the display.

Table 8: show sampler Field Descriptions

Field	Description
ID	ID number of the flow sampler.
Export ID	ID of the flow sampler export.
Description	Description that you configured for the flow sampler, or the default description User defined.
Type	Sampling mode that you configured for the flow sampler.
Rate	Window size (for packet selection) that you configured for the flow sampler. The range is 2 to 32768.
Samples	Number of packets sampled since the flow sampler was configured or the switch was restarted. This is equivalent to the number of times a positive response was received when the sampler was queried to determine if the traffic needed to be sampled. See the explanation of the Requests field in this table.
Requests	Number of times the flow sampler was queried to determine if the traffic needed to be sampled.
Users	Interfaces on which the flow sampler is configured.

Related Commands

Command	Description
debug sampler	Enables debugging output for NetFlow Lite samplers.
sampler	Creates a NetFlow Lite flow sampler, or modifies an existing NetFlow Lite flow sampler.

source

To configure the source IP address interface for all of the packets sent by a NetFlow Lite flow exporter, use the **source** command in flow exporter configuration mode. To remove the source IP address interface for all of the packets sent by a NetFlow Lite flow exporter, use the **no** form of this command.

source *interface-type interface-number*

no source

Syntax Description

<i>interface-type</i>	Type of interface whose IP address you want to use for the source IP address of the packets sent by a NetFlow Lite flow exporter.
<i>interface-number</i>	Interface number whose IP address you want to use for the source IP address of the packets sent by a NetFlow Lite flow exporter.

Command Default

The IP address of the interface over which the NetFlow Lite datagram is transmitted is used as the source IP address.

Command Modes

Flow exporter configuration

Command History

Release	Modification
Cisco IOS 15.0(2)EX1	This command was introduced.

Usage Guidelines

The benefits of using a consistent IP source address for the datagrams that NetFlow Lite sends include the following:

- The source IP address of the datagrams exported by NetFlow Lite is used by the destination system to determine from which switch the NetFlow Lite data is arriving. If your network has two or more paths that can be used to send NetFlow Lite datagrams from the switch to the destination system and you do not specify the source interface from which the source IP address is to be obtained, the switch uses the IP address of the interface over which the datagram is transmitted as the source IP address of the datagram. In this situation the destination system might receive NetFlow Lite datagrams from the same switch, but with different source IP addresses. When the destination system receives NetFlow Lite datagrams from the same switch with different source IP addresses, the destination system treats the NetFlow Lite datagrams as if they were being sent from different switches. To avoid having the destination system treat the NetFlow Lite datagrams as if they were being sent from different switches, you must configure the destination system to aggregate the NetFlow Lite datagrams it receives from all of the possible source IP addresses in the switch into a single NetFlow Lite flow.
- If your switch has multiple interfaces that can be used to transmit datagrams to the destination system, and you do not configure the **source** command, you will have to add an entry for the IP address of each

interface into any access lists that you create for permitting NetFlow Lite traffic. Creating and maintaining access lists for permitting NetFlow Lite traffic from known sources and blocking it from unknown sources is easier when you limit the source IP address for NetFlow Lite datagrams to a single IP address for each switch that is exporting NetFlow Lite traffic.

**Caution**

The interface that you configure as the **source** interface must have an IP address configured, and it must be up.

**Tip**

When a transient outage occurs on the interface that you configured with the **source** command, the NetFlow Lite exporter reverts to the default behavior of using the IP address of the interface over which the datagrams are being transmitted as the source IP address for the datagrams. To avoid this problem, use a loopback interface as the source interface because loopback interfaces are not subject to the transient outages that can occur on physical interfaces.

To return this command to its default settings, use the **no source** or **default source** flow exporter configuration command.

Examples

The following example shows how to configure NetFlow Lite to use a loopback interface as the source interface for NetFlow traffic:

```
Switch(config)# flow exporter FLOW-EXPORTER-1
Switch(config-flow-exporter)# source loopback 0
```

Related Commands

Command	Description
flow exporter	Creates a NetFlow Lite flow exporter, or modifies an existing NetFlow Lite flow exporter, and enters NetFlow Lite flow exporter configuration mode.

statistics packet protocol

To collect protocol distribution statistics for a flow monitor, use the **statistics packet protocol** command in flow monitor configuration mode. To disable collecting protocol distribution statistics and size distribution statistics for a flow monitor, use the **no** form of this command.

statistics packet protocol

no statistics packet protocol

Syntax Description This command has no arguments or keywords.

Command Default The collection of protocol distribution statistics for a flow monitor is not enabled by default.

Command Modes Flow monitor configuration

Command History	Release	Modification
	Cisco IOS 15.0(2)EX1	This command was introduced.

Usage Guidelines Before you can collect protocol distribution statistics for a flow monitor with the **statistics packet protocol** command, you must define the protocol, source and destination ports, first and last time stamps and packet and bytes counters in the flow record. If you do not define these fields, you will get the following warning:

Warning: Cannot set protocol distribution with this Flow Record. Require protocol, source and destination ports, first and last timestamps and packet and bytes counters.

To return this command to its default settings, use the **no statistics packet protocol** or **default statistics packet protocol** flow monitor configuration command.

Examples The following example enables the collection of protocol distribution statistics for flow monitors:

```
Switch(config)# flow monitor FLOW-MONITOR-1
Switch(config-flow-monitor)# statistics packet protocol
```

Related Commands	Command	Description
	flow exporter	Creates a NetFlow Lite flow exporter, or modifies an existing NetFlow Lite flow exporter, and enters NetFlow Lite flow exporter configuration mode.

template data timeout

To specify a timeout period for resending flow exporter template data, use the **template data timeout** command in flow exporter configuration mode. To remove the template resend timeout for a flow exporter, use the **no** form of this command.

template data timeout *seconds*

no template data timeout *seconds*

Syntax Description	
<i>seconds</i>	Timeout value in seconds. The range is 1 to 86400. The default is 600.

Command Default The default template resend timeout for a flow exporter is 600 seconds.

Command Modes Flow exporter configuration

Command History	Release	Modification
	Cisco IOS 15.0(2)EX1	This command was introduced.

Usage Guidelines Flow exporter template data describes the exported data records. Data records cannot be decoded without the corresponding template. The **template data timeout** command controls how often those templates are exported. To return this command to its default settings, use the **no template data timeout** or **default template data timeout** flow record exporter command.

Examples The following example configures resending templates based on a timeout of 1000 seconds:

```
Switch(config)# flow exporter FLOW-EXPORTER-1
Switch(config-flow-exporter)# template data timeout 1000
```

Related Commands	Command	Description
	flow exporter	Creates a NetFlow Lite flow exporter, or modifies an existing NetFlow Lite flow exporter, and enters NetFlow Lite flow exporter configuration mode.

transport

To configure the transport protocol for a flow exporter for NetFlow Lite, use the **transport** command in flow exporter configuration mode. To remove the transport protocol for a flow exporter, use the **no** form of this command.

transport udp *udp-port*

no transport udp *udp-port*

Syntax Description

udp <i>udp-port</i>	Specifies User Datagram Protocol (UDP) as the transport protocol and the UDP port number.
----------------------------	---

Command Default

Flow exporters use UDP on port 9995.

Command Modes

Flow exporter configuration

Command History

Release	Modification
Cisco IOS 15.0(2)EX1	This command was introduced.

Usage Guidelines

To return this command to its default settings, use the **no transport** or **default transport flow exporter** configuration command.

Examples

The following example configures UDP as the transport protocol and a UDP port number of 250:

```
Switch(config)# flow exporter FLOW-EXPORTER-1
Switch(config-flow-exporter)# transport udp 250
```

Related Commands

Command	Description
flow exporter	Creates a NetFlow Lite flow exporter, or modifies an existing NetFlow Lite flow exporter, and enters NetFlow Lite flow exporter configuration mode.

ttl

To configure the time-to-live (TTL) value, use the **ttl** command in flow exporter configuration mode. To remove the TTL value, use the **no** form of this command.

ttl *ttl*

no ttl *ttl*

Syntax Description	<i>ttl</i>	Time-to-live (TTL) value for exported datagrams. The range is 1 to 255. The default is 255.
Command Default	Flow exporters use a TTL of 255.	
Command Modes	Flow exporter configuration	
Command History	Release	Modification
	Cisco IOS 15.0(2)EX1	This command was introduced.
Usage Guidelines	To return this command to its default settings, use the no ttl or default ttl flow exporter configuration command.	
Examples	<p>The following example specifies a TTL of 15:</p> <pre>Switch(config)# flow exporter FLOW-EXPORTER-1 Switch(config-flow-exporter)# ttl 15</pre>	
Related Commands	Command	Description
	flow exporter	Creates a NetFlow Lite flow exporter, or modifies an existing NetFlow Lite flow exporter, and enters NetFlow Lite flow exporter configuration mode.

■ ttl



INDEX

C

cache command [15](#)
collect counter command [21](#)
collect flow sampler command [23](#)
collect interface command [25](#)
collect transport tcp flags command [28](#)

D

datalink flow monitor command [30](#)
debug flow exporter command [32](#)
debug flow monitor command [33](#)
description command [35](#)
destination command [36](#)
dscp command [38](#)

E

export-protocol netflow-v9 command [39](#)

I

ip flow monitor command [44](#)
ipv6 flow monitor command [46](#)

M

match datalink ethertype command [48](#)
match datalink mac command [50](#)
match ipv4 command [52](#)
match ipv4 destination address command [54](#)
match ipv4 source address command [55](#)
match ipv6 command [56](#)
match ipv6 destination address command [57](#)
match ipv6 source command [58](#)
match transport command [59](#)

O

option command [62](#)

S

show flow exporter command [67](#)
show flow record command [77](#)
show sampler command [78](#)
statistics packet protocol command [82](#)

T

template data timeout command [83](#)
transport command [84](#)
ttl command [85](#)

