



Numerics

802.1X

- and switchport modes [2-443](#)
- See also port-based authentication
- violation error recovery [2-78](#)

A

- aaa authentication dot1x command [2-1](#)
- AAA methods [2-1](#)
- abort command [2-490](#)
- access control entries
 - See ACEs
- access control lists
 - See ACLs
- access groups
 - IP [2-89](#)
 - MAC, displaying [2-288](#)
- access lists
 - IP [2-89](#)
 - on Layer 2 interfaces [2-89](#)
- access map configuration mode [2-134](#)
- access mode [2-442](#)
- access ports [2-442](#)
- ACEs [2-59, 2-190](#)
- ACLs
 - deny [2-57](#)
 - displaying [2-221](#)
 - for non-IP protocols [2-121](#)
 - matching [2-134](#)
 - permit [2-188](#)
- action command [2-3](#)

- address aliasing [2-179](#)
- aggregate-port learner [2-184](#)
- allowed VLANs [2-456](#)
- apply command [2-490](#)
- archive download-sw command [2-5](#)
- archive tar command [2-7](#)
- archive upload-sw command [2-10](#)
- audience [xv](#)
- authorization state of controlled port [2-66](#)
- autonegotiation of duplex mode [2-75](#)
- auto qos voip command [2-12](#)

B

- BackboneFast, for STP [2-383](#)
- boot (boot loader) command [A-2](#)
- boot bootlpr command [2-16](#)
- boot config-file command [2-17](#)
- boot enable-break command [2-18](#)
- boot helper command [2-19](#)
- boot helper-config file command [2-20](#)
- booting
 - Cisco IOS image [2-23](#)
 - displaying environment variables [2-227](#)
 - interrupting [2-18](#)
 - manually [2-21](#)
- boot loader
 - accessing [A-1](#)
 - booting
 - Cisco IOS image [A-2](#)
 - helper image [2-19](#)

directories

- creating [A-16](#)
- displaying a list of [A-7](#)
- removing [A-20](#)

displaying

- available commands [A-12](#)
- memory heap utilization [A-14](#)
- version [A-27](#)

environment variables

- described [A-21](#)
- displaying settings [A-21](#)
- location of [A-23](#)
- setting [A-21](#)
- unsetting [A-25](#)

files

- copying [A-5](#)
- deleting [A-6](#)
- displaying a list of [A-7](#)
- displaying the contents of [A-4, A-17, A-24](#)
- renaming [A-18](#)

file system

- formatting [A-10](#)
- initializing Flash [A-9](#)
- running a consistency check [A-11](#)

loading helper images [A-13](#)

prompt [A-1](#)

resetting the system [A-19](#)

boot manual command [2-21](#)

boot private-config-file command [2-22](#)

boot system command [2-23](#)

BPDU filtering, for spanning tree [2-384, 2-417](#)

BPDU guard, for spanning tree [2-386, 2-417](#)

broadcast storm control [2-434](#)

broadcast traffic counters [2-272](#)

C

candidate switches

- See clusters

cat (boot loader) command [A-4](#)

caution, description [xvi](#)

channel-group command [2-24](#)

channel-protocol command [2-27](#)

class command [2-28](#)

class-map command [2-30](#)

class maps

- creating [2-30](#)
- defining the match criteria [2-136](#)
- displaying [2-231](#)

class of service

- See CoS

clear lacp command [2-32](#)

clear mac address-table command [2-33](#)

clear pagp command [2-35](#)

clear setup express command [2-36](#)

clear spanning-tree counters command [2-37](#)

clear spanning-tree detected-protocols command [2-38](#)

clear vmps statistics command [2-39](#)

clear vtp counters command [2-40](#)

cluster commander-address command [2-41](#)

cluster discovery hop-count command [2-43](#)

cluster enable command [2-44](#)

cluster holdtime command [2-46](#)

cluster member command [2-47](#)

cluster outside-interface command [2-49](#)

cluster requirements

- See release notes [xvii](#)

cluster run command [2-50](#)

clusters

- adding candidates [2-47](#)
- binding to HSRP group [2-51](#)
- building manually [2-47](#)

- communicating with
 - devices outside the cluster [2-49](#)
 - members by using Telnet [2-203](#)
- debug messages, display [B-4](#)
- displaying
 - candidate switches [2-234](#)
 - debug messages [B-4](#)
 - member switches [2-236](#)
 - status [2-232](#)
- hop-count limit for extended discovery [2-43](#)
- HSRP standby groups [2-51](#)
- redundancy [2-51](#)
- SNMP trap [2-374](#)
- cluster standby-group command [2-51](#)
- cluster timer command [2-53](#)
- CMS requirements
 - See switch software configuration guide [xvii](#)
- command modes defined [1-1](#)
- command switch
 - See clusters
- configuration, initial
 - See hardware installation guide
- configuration files
 - password recovery disable considerations [A-1](#)
 - specifying the name [2-17, 2-22](#)
- configuring multiple interfaces [2-84](#)
- config-vlan mode
 - commands [2-476](#)
 - description [1-4](#)
 - entering [2-475](#)
 - summary [1-2](#)
- conventions
 - command [xvi](#)
 - for examples [xvi](#)
 - publication [xvi](#)
 - text [xvi](#)
- copy (boot loader) command [A-5](#)

- CoS
 - assigning default value to incoming packets [2-144](#)
 - overriding the incoming value [2-144](#)
- CoS-to-DSCP map [2-148](#)
- CPU ASIC statistics, displaying [2-238](#)

D

- debug autoqos command [B-2](#)
- debug cluster command [B-4](#)
- debug dot1x command [B-6](#)
- debug dtp command [B-7](#)
- debug etherchannel command [B-8](#)
- debug ilpower command [B-9](#)
- debug interface command [B-10](#)
- debug ip igmp filter command [B-11](#)
- debug ip igmp max-groups command [B-12](#)
- debug ip igmp snooping command [B-13](#)
- debug lacp command [B-14](#)
- debug mac-notification command [B-15](#)
- debug matm command [B-16](#)
- debug monitor command [B-17](#)
- debug mvrdbg command [B-18](#)
- debug nvram command [B-19](#)
- debug pagp command [B-20](#)
- debug platform acl command [B-21](#)
- debug platform cpu-queues command [B-22](#)
- debug platform device-manager command [B-24](#)
- debug platform dot1x command [B-25](#)
- debug platform etherchannel command [B-26](#)
- debug platform fallback-bridging command [B-27](#)
- debug platform forw-tcam command [B-28](#)
- debug platform ip dhcp command [B-29](#)
- debug platform ip igmp snooping command [B-30](#)
- debug platform led command [B-32](#)
- debug platform matm command [B-33](#)
- debug platform messaging application command [B-34](#)
- debug platform phy command [B-35](#)
- debug platform pm command [B-37](#)

- debug platform port-asic command [B-39](#)
- debug platform port-security command [B-40](#)
- debug platform qos-acl-tcam command [B-41](#)
- debug platform remote-commands command [B-42](#)
- debug platform resource-manager command [B-43](#)
- debug platform snmp command [B-44](#)
- debug platform span command [B-45](#)
- debug platform supervisor-asic command [B-46](#)
- debug platform sw-bridge command [B-47](#)
- debug platform tcam command [B-48](#)
- debug platform udd command [B-51](#)
- debug platform vlan command [B-52](#)
- debug pm command [B-53](#)
- debug port-security command [B-55](#)
- debug qos-manager command [B-56](#)
- debug spanning-tree backbonefast command [B-59](#)
- debug spanning-tree bpdu command [B-60](#)
- debug spanning-tree bpdu-opt command [B-61](#)
- debug spanning-tree command [B-57](#)
- debug spanning-tree mstp command [B-62](#)
- debug spanning-tree switch command [B-64](#)
- debug spanning-tree uplinkfast command [B-66](#)
- debug sw-vlan command [B-67](#)
- debug sw-vlan ifs command [B-69](#)
- debug sw-vlan notification command [B-70](#)
- debug sw-vlan vtp command [B-72](#)
- debug udd command [B-74](#)
- debug vqpc command [B-76](#)
- define interface-range command [2-54](#)
- delete (boot loader) command [A-6](#)
- delete command [2-56](#)
- deny command [2-57](#)
- detect mechanism, causes [2-76](#)
- DHCP snooping
 - enabling on a VLAN [2-99](#)
 - enabling option 82 [2-95](#)
 - enabling rate limiting on an interface [2-97](#)
 - enabling trust on an interface [2-98](#)
 - error recovery timer [2-78](#)
- dir (boot loader) command [A-7](#)
- directories, deleting [2-56](#)
- documentation
 - related [xvii](#)
- document conventions [xvi](#)
- domain name, VTP [2-499, 2-503](#)
- dot1x default command [2-60](#)
- dot1x guest-vlan command [2-61](#)
- dot1x host-mode command [2-62](#)
- dot1x initialize command [2-63](#)
- dot1x max-req command [2-64](#)
- dot1x multiple-hosts command [2-65](#)
- dot1x port-control command [2-66](#)
- dot1x re-authenticate command [2-68](#)
- dot1x re-authentication command [2-69](#)
- dot1x reauthentication command [2-70](#)
- dot1x system-auth-control command [2-71](#)
- dot1x timeout command [2-72](#)
- dropping packets, with ACL matches [2-3](#)
- DSCP-to-CoS map [2-148](#)
- DSCP-to-DSCP-mutation map [2-148](#)
- DTP [2-443](#)
- DTP flap
 - error detection for [2-76](#)
 - error recovery timer [2-78](#)
- duplex command [2-74](#)
- dynamic-access ports
 - configuring [2-438](#)
 - restrictions [2-439](#)
- dynamic auto VLAN membership mode [2-442](#)
- dynamic desirable VLAN membership mode [2-442](#)
- Dynamic Host Configuration Protocol (DHCP)
 - See DHCP snooping
- Dynamic Trunking Protocol
 - See DTP

E

EAP-request/identity frame

- maximum number to send [2-64](#)
- response time before retransmitting [2-72](#)

encapsulation methods [2-456](#)

environment variables, displaying [2-227](#)

errdisable detect cause command [2-76](#)

errdisable recovery command [2-78](#)

error conditions, displaying [2-259](#)

error disable detection [2-76](#)

error-disabled interfaces, displaying [2-266](#)

EtherChannel

- assigning Ethernet interface to channel group [2-24](#)
- creating port-channel logical interface [2-82](#)
- debug EtherChannel/PAgP, display [B-8](#)
- debug platform-specific events, display [B-26](#)
- displaying [2-263](#)
- interface information, displaying [2-266](#)

LACP

- clearing channel-group information [2-32](#)
- debug messages, display [B-14](#)
- displaying [2-284](#)
- modes [2-24](#)
- port priority for hot-standby ports [2-112](#)
- restricting a protocol [2-27](#)
- system priority [2-114](#)

load-distribution methods [2-197](#)

PAgP

- aggregate-port learner [2-184](#)
- clearing channel-group information [2-35](#)
- debug messages, display [B-20](#)
- displaying [2-330](#)
- error detection for [2-76](#)
- error recovery timer [2-78](#)
- learn method [2-184](#)
- modes [2-24](#)
- physical-port learner [2-184](#)
- priority of interface for transmitted traffic [2-186](#)

Ethernet controller, internal register display [2-240](#)

Ethernet statistics, collecting [2-207](#)

examples, conventions for [xvi](#)

exit command [2-490](#)

extended discovery of candidate switches [2-43](#)

extended-range VLANs

- and allowed VLAN list [2-456](#)
- and pruning-eligible list [2-456](#)
- configuring [2-475](#)

extended system ID for STP [2-390](#)

F

fan information, displaying [2-256](#)

file name, VTP [2-499](#)

files, deleting [2-56](#)

flash_init (boot loader) command [A-9](#)

flowcontrol command [2-80](#)

format (boot loader) command [A-10](#)

forwarding packets, with ACL matches [2-3](#)

forwarding results, display [C-5](#)

frame forwarding information, displaying [C-5](#)

fsck (boot loader) command [A-11](#)

G

global configuration mode [1-2, 1-3](#)

H

hardware ACL statistics [2-221](#)

help (boot loader) command [A-12](#)

hop-count limit for clusters [2-43](#)

host connection, port configuration [2-441](#)

HSRP

- binding HSRP group to cluster [2-51](#)
- standby group [2-51](#)

I

IGMP filters

- applying [2-100](#)
- debug messages, display [B-11](#)

IGMP groups, setting maximum [2-101](#)IGMP maximum groups, debugging [B-12](#)

IGMP profiles

- creating [2-103](#)
- displaying [2-277](#)

IGMP snooping

- displaying [2-278, 2-281](#)
- enabling [2-105](#)
- multicast table [2-282](#)
- report suppression [2-108](#)

images

- See software images

Immediate-Leave feature, MVR [2-181](#)Immediate-Leave processing [2-105](#)

initial configuration

- See hardware installation guide

inline power, configuring [2-199](#)interface command [2-87](#)interface configuration mode [1-2, 1-4](#)interface port-channel command [2-82](#)interface range command [2-84](#)interface-range macros [2-54](#)

interfaces

- assigning Ethernet interface to channel group [2-24](#)
- configuring [2-74](#)
- configuring multiple [2-84](#)
- creating port-channel logical [2-82](#)
- debug messages, display [B-10](#)
- disabling [2-372](#)
- displaying the MAC address table [2-299](#)
- restarting [2-372](#)
- interface speed, configuring [2-426](#)
- internal registers, displaying [2-240, 2-249](#)

invalid GBIC

- error detection for [2-76](#)
- error recovery timer [2-78](#)

ip address command [2-92](#)IP addresses, setting [2-92](#)IP address matching [2-134](#)

IP DHCP Snooping

- See DHCP snooping

ip dhcp snooping command [2-94](#)ip dhcp snooping information option command [2-95](#)ip dhcp snooping limit rate command [2-97](#)ip dhcp snooping trust command [2-98](#)ip dhcp snooping vlan command [2-99](#)ip igmp filter command [2-100](#)ip igmp max-groups command [2-101](#)ip igmp profile command [2-103](#)ip igmp snooping command [2-105](#)ip igmp snooping report-suppression command [2-108](#)IP multicast addresses [2-178](#)

IP phones

- auto-QoS configuration [2-12](#)
- trusting packets sent from [2-171](#)

IP-precedence-to-DSCP map [2-148](#)ip ssh command [2-110](#)

J

jumbo frames. See MTU

L

LACP

- See EtherChannel

lacp port-priority command [2-112](#)lacp system-priority command [2-114](#)Layer 2 mode, enabling [2-436](#)

- Layer 2 traceroute
 - IP addresses [2-466](#)
 - MAC addresses [2-463](#)
 - Layer 3 mode, enabling [2-436](#)
 - line configuration mode [1-2, 1-5](#)
 - Link Aggregation Control Protocol
 - See EtherChannel
 - link flap
 - error detection for [2-76](#)
 - error recovery timer [2-78](#)
 - load_helper (boot loader) command [A-13](#)
 - load-distribution methods for EtherChannel [2-197](#)
 - logging event command [2-116](#)
 - logging file command [2-117](#)
 - logical interface [2-82](#)
 - loopback error
 - detection for [2-76](#)
 - recovery timer [2-78](#)
 - loop guard, for spanning tree [2-392, 2-396](#)
-
- ## M
- mac access-group command [2-119](#)
 - MAC access-groups, displaying [2-288](#)
 - MAC access list configuration mode [2-121](#)
 - mac access-list extended command [2-121](#)
 - MAC access lists [2-57](#)
 - MAC addresses
 - displaying
 - aging time [2-293](#)
 - all [2-291](#)
 - dynamic [2-297](#)
 - Layer 2 multicast entries [2-301](#)
 - notification settings [2-303](#)
 - number of addresses in a VLAN [2-295](#)
 - per interface [2-299](#)
 - per VLAN [2-307](#)
 - static [2-305](#)
 - static and dynamic entries [2-289](#)
 - dynamic
 - aging time [2-123](#)
 - deleting [2-33](#)
 - displaying [2-297](#)
 - enabling MAC address notification [2-124](#)
 - matching [2-134](#)
 - static
 - adding and removing [2-126](#)
 - displaying [2-305](#)
 - dropping on an interface [2-127](#)
 - tables [2-291](#)
 - MAC address notification, debugging [B-15](#)
 - mac address-table aging-time [2-119, 2-134](#)
 - mac address-table aging-time command [2-123](#)
 - mac address-table notification command [2-124](#)
 - mac address-table static command [2-126](#)
 - mac address-table static drop command [2-127](#)
 - macro apply command [2-129](#)
 - macro description command [2-131](#)
 - macro name command [2-132](#)
 - macros
 - adding a description [2-131](#)
 - applying [2-129](#)
 - creating [2-132](#)
 - displaying [2-332](#)
 - tracing [2-129](#)
 - macros, interface range [2-54, 2-84](#)
 - manual
 - audience [xv](#)
 - purpose of [xv](#)
 - maps
 - QoS
 - defining [2-148](#)
 - displaying [2-316](#)
 - VLAN
 - creating [2-487](#)
 - defining [2-134](#)
 - displaying [2-363](#)
 - match (access-map configuration) command [2-134](#)

- match (class-map configuration) command [2-136](#)
- maximum transmission unit
 - See MTU
- mdix auto command [2-138](#)
- member switches
 - See clusters
- memory (boot loader) command [A-14](#)
- mkdir (boot loader) command [A-16](#)
- mls qos aggregate-policer command [2-142](#)
- mls qos command [2-140](#)
- mls qos cos command [2-144](#)
- mls qos dscp-mutation command [2-146](#)
- mls qos map command [2-148](#)
- mls qos queue-set output buffers command [2-151](#)
- mls qos queue-set output threshold command [2-153](#)
- mls qos srr-queue input bandwidth command [2-155](#)
- mls qos srr-queue input buffers command [2-157](#)
- mls qos-srr-queue input cos-map command [2-159](#)
- mls qos srr-queue input dscp-map command [2-161](#)
- mls qos srr-queue input priority-queue command [2-163](#)
- mls qos srr-queue input threshold command [2-165](#)
- mls qos-srr-queue output cos-map command [2-167](#)
- mls qos srr-queue output dscp-map command [2-169](#)
- mls qos trust command [2-171](#)
- mode, MVR [2-178](#)
- Mode button, and password recovery [2-210](#)
- modes, commands [1-1](#)
- monitor session command [2-173](#)
- more (boot loader) command [A-17](#)
- MSTP
 - displaying [2-346](#)
 - interoperability [2-38](#)
 - link type [2-394](#)
 - MST region
 - aborting changes [2-400](#)
 - applying changes [2-400](#)
 - configuration name [2-400](#)
 - configuration revision number [2-400](#)
 - current or pending display [2-400](#)
 - displaying [2-346](#)
 - MST configuration mode [2-400](#)
 - VLANs-to-instance mapping [2-400](#)
 - path cost [2-402](#)
 - protocol mode [2-398](#)
 - restart protocol migration process [2-38](#)
 - root port
 - loop guard [2-392](#)
 - preventing from becoming designated [2-392](#)
 - restricting which can be root [2-392](#)
 - root guard [2-392](#)
 - root switch
 - affects of extended system ID [2-390](#)
 - hello-time [2-405, 2-413](#)
 - interval between BPDU messages [2-406](#)
 - interval between hello BPDU messages [2-405, 2-413](#)
 - max-age [2-406](#)
 - maximum hop count before discarding BPDU [2-408](#)
 - port priority for selection of [2-410](#)
 - primary or secondary [2-413](#)
 - switch priority [2-412](#)
 - state changes
 - blocking to forwarding state [2-419](#)
 - enabling BPDU filtering [2-384, 2-417](#)
 - enabling BPDU guard [2-386, 2-417](#)
 - enabling Port Fast [2-417, 2-419](#)
 - forward-delay time [2-404](#)
 - length of listening and learning states [2-404](#)
 - rapid transition to forwarding [2-394](#)
 - shutting down Port Fast-enabled ports [2-417](#)
 - state information display [2-345](#)
- MTU
 - configuring size [2-461](#)
 - displaying global setting [2-353](#)
- multicast group address, MVR [2-181](#)
- multicast groups, MVR [2-179](#)
- multicast router learning method [2-105](#)
- multicast router ports, configuring [2-105](#)
- multicast storm control [2-434](#)

multicast traffic counters [2-272](#)
 multicast VLAN, MVR [2-178](#)
 multicast VLAN registration
 See MVR
 multiple hosts on authorized port [2-62](#)
 Multiple Spanning Tree Protocol
 See MSTP
 MVR
 and address aliasing [2-179](#)
 configuring [2-178](#)
 configuring interfaces [2-181](#)
 debug messages, display [B-18](#)
 displaying [2-324](#)
 displaying interface information [2-326](#)
 members, displaying [2-328](#)
 mvr (global configuration) command [2-178](#)
 mvr (interface configuration) command [2-181](#)
 mvr vlan group command [2-182](#)

N

native VLANs [2-456](#)
 nonegotiate
 DTP messaging [2-444](#)
 speed [2-426](#)
 non-IP protocols
 denying [2-57](#)
 forwarding [2-188](#)
 non-IP traffic access lists [2-121](#)
 non-IP traffic forwarding
 denying [2-57](#)
 permitting [2-188](#)
 normal-range VLANs [2-475, 2-481](#)
 note, description [xvi](#)
 no vlan command [2-475, 2-485](#)

P

PAgP
 See EtherChannel
 pagp learn-method command [2-184](#)
 pagp port-priority command [2-186](#)
 password, VTP [2-499, 2-503](#)
 password-recovery mechanism, enabling and disabling [2-210](#)
 permit command [2-188](#)
 per-VLAN spanning-tree plus
 See STP
 physical-port learner [2-184](#)
 PIM-DVMRP, as multicast router learning method [2-105](#)
 PoE
 logging of status [2-116](#)
 police aggregate command [2-193](#)
 police command [2-191](#)
 policed-DSCP map [2-148](#)
 policy-map command [2-195](#)
 policy maps
 applying to an interface [2-212, 2-216](#)
 creating [2-195](#)
 displaying [2-334](#)
 policers
 displaying [2-310](#)
 for a single class [2-191](#)
 for multiple classes [2-142, 2-193](#)
 policed-DSCP map [2-148](#)
 traffic classification
 defining the class [2-28](#)
 defining trust states [2-468](#)
 setting DSCP or IP precedence values [2-214](#)
 Port Aggregation Protocol
 See EtherChannel

port-based authentication

- AAA method list [2-1](#)
- debug messages, display [B-6](#)
- enabling 802.1X
 - globally [2-71](#)
 - per interface [2-66](#)
- guest VLAN [2-61](#)
- host modes [2-62](#)
- initialize an interface [2-63](#)
- manual control of authorization state [2-66](#)
- multiple hosts on authorized port [2-62](#)
- periodic re-authentication
 - enabling [2-70](#)
 - time between attempts [2-72](#)
- quiet period between failed authentication exchanges [2-72](#)
- re-authenticating 802.1X-enabled ports [2-68](#)
- resetting configurable 802.1X parameters [2-60](#)
- switch-to-authentication server retransmission time [2-72](#)
- switch-to-client frame-retransmission number [2-64](#)
- switch-to-client retransmission time [2-72](#)

port-channel load-balance command [2-197](#)

Port Fast, for spanning tree [2-419](#)

port ranges, defining [2-54](#)

ports, debugging [B-53](#)

ports, protected [2-454](#)

port security

- aging [2-450](#)
- debug messages, display [B-55](#)
- enabling [2-446](#)
- violation error recovery [2-78](#)

port trust states for QoS [2-171](#)

port types, MVR [2-181](#)

power information, displaying [2-256](#)

power inline command [2-199](#)

Power over Ethernet (PoE) controller, displaying [2-247](#)

priority-queue command [2-200](#)

privileged EXEC mode [1-2, 1-3](#)

protected ports, displaying [2-271](#)

pruning

- VLANs [2-456](#)
- VTP
 - displaying interface information [2-266](#)
 - enabling [2-499, 2-503](#)

pruning-eligible VLAN list [2-458](#)

PVST+

- See STP

Q

QoS

auto-QoS

- configuring [2-12](#)
- debug messages, display [B-2](#)
- displaying [2-224](#)

class maps

- creating [2-30](#)
- defining the match criteria [2-136](#)
- displaying [2-231](#)

defining the CoS value for an incoming packet [2-144](#)

displaying configuration information [2-224, 2-309](#)

DSCP trusted ports

- applying DSCP-to-DSCP-mutation map to [2-146](#)
- defining DSCP-to-DSCP-mutation map [2-148](#)

egress queues

- allocating buffers [2-151](#)
- defining the CoS output queue threshold map [2-167](#)
- defining the DSCP output queue threshold map [2-169](#)
- displaying buffer allocations [2-313](#)
- displaying CoS output queue threshold map [2-316](#)
- displaying DSCP output queue threshold map [2-316](#)
- displaying queueing strategy [2-313](#)
- displaying queue-set settings [2-319](#)
- enabling bandwidth shaping and scheduling [2-430](#)
- enabling bandwidth sharing and scheduling [2-432](#)
- limiting the maximum output on a port [2-428](#)
- mapping a port to a queue-set [2-202](#)

- mapping CoS values to a queue and threshold [2-167](#)
- mapping DSCP values to a queue and threshold [2-169](#)
- setting maximum and reserved memory allocations [2-153](#)
- setting WTD thresholds [2-153](#)
- enabling [2-140](#)
- ingress queues
 - allocating buffers [2-157](#)
 - assigning SRR scheduling weights [2-155](#)
 - defining the CoS input queue threshold map [2-159](#)
 - defining the DSCP input queue threshold map [2-161](#)
 - displaying buffer allocations [2-313](#)
 - displaying CoS input queue threshold map [2-316](#)
 - displaying DSCP input queue threshold map [2-316](#)
 - displaying queueing strategy [2-313](#)
 - displaying settings for [2-311](#)
 - enabling the priority queue [2-163](#)
 - mapping CoS values to a queue and threshold [2-159](#)
 - mapping DSCP values to a queue and threshold [2-161](#)
 - setting WTD thresholds [2-165](#)
- maps
 - defining [2-148, 2-159, 2-161, 2-167, 2-169](#)
 - displaying [2-316](#)
- policy maps
 - applying an aggregate policer [2-193](#)
 - applying to an interface [2-212, 2-216](#)
 - creating [2-195](#)
 - defining policers [2-142, 2-191](#)
 - displaying policers [2-310](#)
 - displaying policy maps [2-334](#)
 - policed-DSCP map [2-148](#)
 - setting DSCP or IP precedence values [2-214](#)
 - traffic classifications [2-28](#)
 - trust states [2-468](#)
- port trust states [2-171](#)
- queues
 - enabling the expedite [2-200](#)

- statistics
 - in-profile and out-of-profile packets [2-313](#)
 - packets enqueued or dropped [2-313](#)
 - sent and received CoS values [2-313](#)
 - sent and received DSCP values [2-313](#)
 - trusted boundary for IP phones [2-171](#)
- quality of service
 - See QoS
- querytime, MVR [2-178](#)
- queue-set command [2-202](#)

R

- rapid per-VLAN spanning-tree plus
 - See STP
- rapid PVST+
 - See STP
- rcommand command [2-203](#)
- re-authenticating 802.1X-enabled ports [2-68](#)
- re-authentication
 - periodic [2-70](#)
 - time between attempts [2-72](#)
- receiver ports, MVR [2-181](#)
- receiving flow-control packets [2-80](#)
- recovery mechanism
 - causes [2-78](#)
 - display [2-229, 2-257, 2-261](#)
 - timer interval [2-78](#)
- redundancy for cluster switches [2-51](#)
- remote-span command [2-205](#)
- Remote Switched Port Analyzer
 - See RSPAN
- rename (boot loader) command [A-18](#)
- requirements
 - cluster
 - See release notes [xvii](#)
 - CMS
 - See switch software configuration guide [xvii](#)
- reset (boot loader) command [A-19](#)

- reset command [2-490](#)
 - resource templates, displaying [2-341](#)
 - rmdir (boot loader) command [A-20](#)
 - rmon collection stats command [2-207](#)
 - root guard, for spanning tree [2-392](#)
 - routed ports
 - IP addresses on [2-93](#)
 - number supported [2-93](#)
 - RSPAN
 - configuring [2-173](#)
 - displaying [2-321](#)
 - filter RSPAN traffic [2-173](#)
 - remote-span command [2-205](#)
 - sessions
 - add interfaces to [2-173](#)
 - displaying [2-321](#)
 - start new [2-173](#)
-
- S**
- sdm prefer command [2-208](#)
 - secure ports, limitations [2-447](#)
 - sending flow-control packets [2-80](#)
 - service password-recovery command [2-210](#)
 - service-policy command [2-212](#)
 - set (boot loader) command [A-21](#)
 - set command [2-214](#)
 - setup command [2-216](#)
 - setup express command [2-219](#)
 - show access-lists command [2-221](#)
 - show auto qos command [2-224](#)
 - show boot command [2-227](#)
 - show changes command [2-490](#)
 - show class-map command [2-231](#)
 - show cluster candidates command [2-234](#)
 - show cluster command [2-232](#)
 - show cluster members command [2-236](#)
 - show controllers cpu-interface command [2-238](#)
 - show controllers ethernet-controller command [2-240](#)
 - show controllers power inline command [2-247](#)
 - show controllers tcam command [2-249](#)
 - show current command [2-490](#)
 - show dot1x command [2-251](#)
 - show dtp [2-254](#)
 - show env command [2-256](#)
 - show errdisable detect command [2-257](#)
 - show errdisable flap-values command [2-259](#)
 - show errdisable recovery command [2-261](#)
 - show etherchannel command [2-263](#)
 - show interfaces command [2-266](#)
 - show interfaces counters command [2-272](#)
 - show ip dhcp snooping binding command [2-275](#)
 - show ip dhcp snooping command [2-274](#)
 - show ip igmp profile command [2-277](#)
 - show ip igmp snooping command [2-278](#)
 - show ip igmp snooping mrouter command [2-281](#)
 - show ip igmp snooping multicast command [2-282](#)
 - show lacp command [2-284](#)
 - show mac access-group command [2-288](#)
 - show mac address-table address command [2-291](#)
 - show mac address-table aging time command [2-293](#)
 - show mac address-table command [2-289](#)
 - show mac address-table count command [2-295](#)
 - show mac address-table dynamic command [2-297](#)
 - show mac address-table interface command [2-299](#)
 - show mac address-table multicast command [2-301](#)
 - show mac address-table notification command [2-303](#)
 - show mac address-table static command [2-305](#)
 - show mac address-table vlan command [2-307](#)
 - show mls qos aggregate-policer command [2-310](#)
 - show mls qos command [2-309](#)
 - show mls qos input-queue command [2-311](#)
 - show mls qos interface command [2-313](#)
 - show mls qos maps command [2-316](#)
 - show mls qos queue-set command [2-319](#)
 - show monitor command [2-321](#)
 - show mvr command [2-324](#)
 - show mvr interface command [2-326](#)

- show mvr members command [2-328](#)
- show pagp command [2-330](#)
- show parser macro command [2-332](#)
- show platform acl command [C-2](#)
- show platform configuration command [C-3](#)
- show platform etherchannel command [C-4](#)
- show platform forward command [C-5](#)
- show platform igmp snooping command [C-7](#)
- show platform ip multicast command [C-9](#)
- show platform ip unicast command [C-10](#)
- show platform layer4op command [C-12](#)
- show platform mac-address-table command [C-13](#)
- show platform messaging command [C-14](#)
- show platform monitor command [C-15](#)
- show platform mvr table command [C-16](#)
- show platform pm command [C-17](#)
- show platform port-asic command [C-18](#)
- show platform port-security command [C-22](#)
- show platform qos command [C-23](#)
- show platform resource-manager command [C-24](#)
- show platform snmp counters command [C-26](#)
- show platform spanning-tree command [C-27](#)
- show platform stp-instance command [C-28](#)
- show platform team command [C-29](#)
- show platform vlan command [C-32](#)
- show policy-map command [2-334](#)
- show port security command [2-336](#)
- show proposed command [2-490](#)
- show sdm prefer command [2-341](#)
- show setup express command [2-339, 2-344](#)
- show spanning-tree command [2-345](#)
- show storm-control command [2-351](#)
- show system mtu command [2-353](#)
- show trust command [2-468](#)
- show udd command [2-354](#)
- show version command [2-357](#)
- show vlan access-map command [2-363](#)
- show vlan command [2-359](#)
- show vlan command, fields [2-360](#)
- show vlan filter command [2-364](#)
- show vmps command [2-365](#)
- show vtp command [2-368](#)
- shutdown command [2-372](#)
- shutdown vlan command [2-373](#)
- SNMP host, specifying [2-377](#)
- SNMP informs, enabling the sending of [2-374](#)
- snmp-server enable traps command [2-374](#)
- snmp-server host command [2-377](#)
- snmp trap mac-notification command [2-381](#)
- SNMP traps
 - enabling MAC address notification trap [2-381](#)
 - enabling the MAC address notification feature [2-124](#)
 - enabling the sending of [2-374](#)
- software images
 - deleting [2-56](#)
 - downloading [2-5](#)
 - upgrading [2-5](#)
 - uploading [2-10](#)
- software version, displaying [2-357](#)
- source ports, MVR [2-181](#)
- SPAN
 - configuring [2-173](#)
 - debug messages, display [B-17](#)
 - displaying [2-321](#)
 - filter SPAN traffic [2-173](#)
 - sessions
 - add interfaces to [2-173](#)
 - displaying [2-321](#)
 - start new [2-173](#)
- spanning-tree backbonefast command [2-383](#)
- spanning-tree bpdudfilter command [2-384](#)
- spanning-tree bpduguard command [2-386](#)
- spanning-tree cost command [2-388](#)
- spanning-tree extend system-id command [2-390](#)
- spanning-tree guard command [2-392](#)
- spanning-tree link-type command [2-394](#)
- spanning-tree loopguard default command [2-396](#)
- spanning-tree mode command [2-398](#)

- spanning-tree mst configuration command [2-400](#)
- spanning-tree mst cost command [2-402](#)
- spanning-tree mst forward-time command [2-404](#)
- spanning-tree mst hello-time command [2-405](#)
- spanning-tree mst max-age command [2-406](#)
- spanning-tree mst max-hops command [2-408](#)
- spanning-tree mst port-priority command [2-410](#)
- spanning-tree mst priority command [2-412](#)
- spanning-tree mst root command [2-413](#)
- spanning-tree portfast (global configuration) command [2-417](#)
- spanning-tree portfast (interface configuration) command [2-419](#)
- spanning-tree port-priority command [2-415](#)
- Spanning Tree Protocol
 - See STP
- spanning-tree uplinkfast command [2-421](#)
- spanning-tree vlan command [2-423](#)
- speed command [2-426](#)
- srr-queue bandwidth limit command [2-428](#)
- srr-queue bandwidth shape command [2-430](#)
- srr-queue bandwidth share command [2-432](#)
- SSH, configuring version [2-110](#)
- static-access ports, configuring [2-438](#)
- statistics, Ethernet group [2-207](#)
- sticky learning, enabling [2-446](#)
- storm-control command [2-434](#)
- STP
 - BackboneFast [2-383](#)
 - counters, clearing [2-37](#)
 - debug messages, display
 - BackboneFast events [B-59](#)
 - MSTP [B-62](#)
 - optimized BPDUs handling [B-61](#)
 - spanning-tree activity [B-57](#)
 - switch shim [B-64](#)
 - transmitted and received BPDUs [B-60](#)
 - UplinkFast [B-66](#)
 - detection of indirect link failures [2-383](#)
 - extended system ID [2-390](#)
 - path cost [2-388](#)
 - protocol modes [2-398](#)
 - root port
 - accelerating choice of new [2-421](#)
 - loop guard [2-392](#)
 - preventing from becoming designated [2-392](#)
 - restricting which can be root [2-392](#)
 - root guard [2-392](#)
 - UplinkFast [2-421](#)
 - root switch
 - affects of extended system ID [2-390, 2-424](#)
 - hello-time [2-423](#)
 - interval between BPDU messages [2-423](#)
 - interval between hello BPDU messages [2-423](#)
 - max-age [2-423](#)
 - port priority for selection of [2-415](#)
 - primary or secondary [2-423](#)
 - switch priority [2-423](#)
 - state changes
 - blocking to forwarding state [2-419](#)
 - enabling BPDU filtering [2-384, 2-417](#)
 - enabling BPDU guard [2-386, 2-417](#)
 - enabling Port Fast [2-417, 2-419](#)
 - enabling timer to recover from error state [2-78](#)
 - forward-delay time [2-423](#)
 - length of listening and learning states [2-423](#)
 - shutting down Port Fast-enabled ports [2-417](#)
 - state information display [2-345](#)
 - VLAN options [2-412, 2-423](#)
- SVIs
 - creating [2-87](#)
- Switched Port Analyzer
 - See SPAN
- switching characteristics
 - modifying [2-436, 2-444](#)
 - returning to interfaces [2-436, 2-444](#)
- switchport access command [2-438](#)
- switchport block command [2-440](#)

switchport command [2-436](#)
 switchport host command [2-441](#)
 switchport mode command [2-442](#)
 switchport nonegotiate command [2-444](#)
 switchport port-security aging command [2-450](#)
 switchport port-security command [2-446](#)
 switchport priority extend command [2-452](#)
 switchport protected command [2-454](#)
 switchports, displaying [2-266](#)
 switchport trunk command [2-456](#)
 switchport voice vlan command [2-459](#)
 system message logging [2-116](#)
 system message logging, save message to Flash [2-117](#)
 system mtu command [2-461](#)
 system resource templates [2-208](#)

T

tar files, creating, listing, and extracting [2-7](#)
 Telnet, using to communicate to cluster switches [2-203](#)
 temperature information, displaying [2-256](#)
 templates, system resources [2-208](#)
 traceroute mac command [2-463](#)
 traceroute mac ip command [2-466](#)
 trunking, VLAN mode [2-442](#)
 trunk mode [2-442](#)
 trunk ports [2-442](#)
 trunks, to non-DTP device [2-443](#)
 trusted boundary for QoS [2-171](#)
 trusted port states for QoS [2-171](#)
 type (boot loader) command [A-24](#)

U

UDLD

aggressive mode [2-470, 2-472](#)
 debug messages, display [B-74](#)
 enable globally [2-470](#)

enable per interface [2-472](#)
 error recovery timer [2-78](#)
 message timer [2-470](#)
 normal mode [2-470, 2-472](#)
 reset a shutdown interface [2-474](#)
 status [2-354](#)
 uddl command [2-470](#)
 uddl port command [2-472](#)
 uddl reset command [2-474](#)
 unicast storm control [2-434](#)
 unicast traffic counters [2-272](#)
 UniDirectional Link Detection
 See UDLD
 unknown multicast traffic, preventing [2-440](#)
 unknown unicast traffic, preventing [2-440](#)
 unset (boot loader) command [A-25](#)
 upgrading, software images [2-5](#)
 upgrading information
 See release notes [xvii](#)
 UplinkFast, for STP [2-421](#)
 user EXEC mode [1-2](#)

V

version (boot loader) command [A-27](#)
 vlan (global configuration) command [2-475](#)
 vlan (VLAN configuration) command [2-481](#)
 vlan access-map command [2-487](#)
 VLAN access map configuration mode [2-487](#)
 VLAN access maps
 actions [2-3](#)
 displaying [2-363](#)
 VLAN configuration
 rules [2-479, 2-483](#)
 saving [2-475, 2-485](#)
 VLAN configuration mode
 commands
 VLAN [2-481](#)
 VTP [2-503](#)

- description [1-4](#)
- entering [2-489](#)
- summary [1-2](#)
- vlan database command [2-489](#)
- vlan filter command [2-492](#)
- VLAN filters, displaying [2-364](#)
- VLAN ID range [2-475, 2-481](#)
- VLAN maps
 - applying [2-492](#)
 - creating [2-487](#)
 - defining [2-134](#)
 - displaying [2-363](#)
- VLAN Query Protocol
 - See VQP
- VLANs
 - adding [2-475](#)
 - configuring [2-475, 2-481](#)
 - debug messages, display
 - ISL [B-70](#)
 - VLAN IOS file system error tests [B-69](#)
 - VLAN manager activity [B-67](#)
 - VTP [B-72](#)
 - displaying configurations [2-359](#)
 - extended-range [2-475](#)
 - MAC addresses
 - displaying [2-307](#)
 - number of [2-295](#)
 - media types [2-478, 2-483](#)
 - normal-range [2-475, 2-481](#)
 - restarting [2-373](#)
 - saving the configuration [2-475](#)
 - shutting down [2-373](#)
 - SNMP traps for VTP [2-375, 2-378](#)
 - suspending [2-373](#)
 - variables [2-481](#)
- VLAN Trunking Protocol
 - See VTP
- VMPS
 - configuring servers [2-497](#)
 - displaying [2-365](#)
 - error recovery timer [2-78](#)
 - reconfirming dynamic VLAN assignments [2-494](#)
 - vmmps reconfirm (global configuration) command [2-495](#)
 - vmmps reconfirm (privileged EXEC) command [2-494](#)
 - vmmps retry command [2-496](#)
 - vmmps server command [2-497](#)
 - voice VLAN
 - configuring [2-459](#)
 - setting port priority [2-452](#)
- VQP
 - and dynamic-access ports [2-439](#)
 - clearing client statistics [2-39](#)
 - displaying information [2-365](#)
 - per-server retry count [2-496](#)
 - reconfirmation interval [2-495](#)
 - reconfirming dynamic VLAN assignments [2-494](#)
- VTP
 - changing characteristics [2-499](#)
 - clearing pruning counters [2-40](#)
 - configuring
 - domain name [2-499, 2-503](#)
 - file name [2-499](#)
 - mode [2-499, 2-503](#)
 - password [2-499, 2-503](#)
 - counters display fields [2-369](#)
 - displaying information [2-368](#)
 - enabling
 - pruning [2-499, 2-503](#)
 - version 2 [2-499, 2-503](#)
 - mode [2-499, 2-503](#)
 - pruning [2-499, 2-503](#)
 - saving the configuration [2-475, 2-485](#)
 - statistics [2-368](#)
 - status [2-368](#)
 - status display fields [2-370](#)
 - vtp (global configuration) command [2-499](#)
 - vtp (VLAN configuration) command [2-503](#)