



---

## Numerics

802.1x

and switchport modes [2-509](#)

violation error recovery [2-90](#)

See also port-based authentication

---

## A

aaa accounting dot1x command [2-1](#)

aaa authentication dot1x command [2-3](#)

AAA methods [2-3](#)

abort command [2-560](#)

access control entries

See ACEs

access control lists

See ACLs

access groups

IP [2-100](#)

MAC, displaying [2-354](#)

access map configuration mode [2-171](#)

access mode [2-508](#)

access ports [2-508](#)

ACEs [2-69](#), [2-229](#)

ACLs

deny [2-67](#)

displaying [2-267](#)

for non-IP protocols [2-153](#)

IP [2-100](#)

matching [2-171](#)

on Layer 2 interfaces [2-100](#)

permit [2-227](#)

action command [2-5](#)

address aliasing [2-216](#)

aggregate-port learner [2-221](#)

allowed VLANs [2-526](#)

apply command [2-560](#)

archive download-sw command [2-7](#)

archive tar command [2-9](#)

archive upload-sw command [2-12](#)

arp access-list command [2-14](#)

audience [xvii](#)

authorization state of controlled port [2-78](#)

autonegotiation of duplex mode [2-87](#)

auto qos voip command [2-16](#)

---

## B

BackboneFast, for STP [2-448](#)

backup interfaces

configuring [2-504](#)

displaying [2-316](#)

boot (boot loader) command [A-2](#)

boot bootlpr command [2-21](#)

boot config-file command [2-22](#)

boot enable-break command [2-23](#)

boot helper command [2-24](#)

boot helper-config file command [2-25](#)

booting

Cisco IOS image [2-28](#)

displaying environment variables [2-276](#)

interrupting [2-23](#)

manually [2-26](#)

## boot loader

- accessing [A-1](#)

## booting

- Cisco IOS image [A-2](#)

- helper image [2-24](#)

## directories

- creating [A-15](#)

- displaying a list of [A-7](#)

- removing [A-19](#)

## displaying

- available commands [A-12](#)

- memory heap utilization [A-14](#)

- version [A-26](#)

## environment variables

- described [A-20](#)

- displaying settings [A-20](#)

- location of [A-22](#)

- setting [A-20](#)

- unsetting [A-24](#)

## files

- copying [A-5](#)

- deleting [A-6](#)

- displaying a list of [A-7](#)

- displaying the contents of [A-4, A-16, A-23](#)

- renaming [A-17](#)

## file system

- formatting [A-10](#)

- initializing flash [A-9](#)

- running a consistency check [A-11](#)

loading helper images [A-13](#)prompt [A-1](#)resetting the system [A-18](#)boot manual command [2-26](#)boot private-config-file command [2-27](#)boot system command [2-28](#)BPDU filtering, for spanning tree [2-449, 2-481](#)BPDU guard, for spanning tree [2-451, 2-481](#)broadcast storm control [2-498](#)broadcast traffic counters [2-326](#)**C**

## candidate switches

- See clusters

cat (boot loader) command [A-4](#)caution, description [xviii](#)channel-group command [2-29](#)channel-protocol command [2-32](#)

## Cisco SoftPhone

- auto-QoS configuration [2-16](#)

- trusting packets sent from [2-208](#)

class command [2-33](#)class-map command [2-35](#)

## class maps

- creating [2-35](#)

- defining the match criteria [2-173](#)

- displaying [2-278](#)

## class of service

- See CoS

clear ip arp inspection log command [2-37](#)clear ip arp inspection statistics command [2-38](#)clear ipc command [2-40](#)clear ip dhcp snooping database command [2-39](#)clear lacp command [2-41](#)clear mac address-table command [2-42](#)clear pagp command [2-43](#)clear setup express command [2-44](#)clear spanning-tree counters command [2-45](#)clear spanning-tree detected-protocols command [2-46](#)clear vmps statistics command [2-47](#)clear vtp counters command [2-48](#)cluster commander-address command [2-49](#)cluster discovery hop-count command [2-51](#)cluster enable command [2-52](#)cluster holdtime command [2-54](#)cluster member command [2-55](#)cluster outside-interface command [2-57](#)

## cluster requirements

- See release notes

- cluster run command [2-58](#)
  - clusters
    - adding candidates [2-55](#)
    - binding to HSRP group [2-59](#)
    - building manually [2-55](#)
    - communicating with
      - devices outside the cluster [2-57](#)
      - members by using Telnet [2-247](#)
    - debug messages, display [B-4](#)
    - displaying
      - candidate switches [2-281](#)
      - debug messages [B-4](#)
      - member switches [2-283](#)
      - status [2-279](#)
    - hop-count limit for extended discovery [2-51](#)
    - HSRP standby groups [2-59](#)
    - redundancy [2-59](#)
    - SNMP trap [2-439](#)
  - cluster standby-group command [2-59](#)
  - cluster timer command [2-61](#)
  - CMS requirements
    - See switch software configuration guide
  - command modes defined [1-1](#)
  - commands changed in Cisco IOS Release 12.2(20)SE [1-5](#)
  - command switch
    - See clusters
  - configuration, initial
    - See hardware installation guide
  - configuration files
    - password recovery disable considerations [A-1](#)
    - specifying the name [2-22, 2-27](#)
  - configuring multiple interfaces [2-96](#)
  - config-vlan mode
    - commands [2-546](#)
    - description [1-4](#)
    - entering [2-545](#)
    - summary [1-2](#)
  - conventions
    - command [xviii](#)
    - for examples [xviii](#)
    - publication [xviii](#)
    - text [xviii](#)
  - copy (boot loader) command [A-5](#)
  - CoS
    - assigning default value to incoming packets [2-181](#)
    - overriding the incoming value [2-181](#)
  - CoS-to-DSCP map [2-185](#)
  - CPU ASIC statistics, displaying [2-286](#)
- 
- ## D
- debug auto qos command [B-2](#)
  - debug cluster command [B-4](#)
  - debug dot1x command [B-6](#)
  - debug dtp command [B-7](#)
  - debug etherchannel command [B-8](#)
  - debug ilpower command [B-9](#)
  - debug interface command [B-12](#)
  - debug ip dhcp snooping command [B-10](#)
  - debug ip igmp filter command [B-13](#)
  - debug ip igmp max-groups command [B-14](#)
  - debug ip igmp snooping command [B-15](#)
  - debug ip verify source packet command [B-11](#)
  - debug lacp command [B-16](#)
  - debug mac-notification command [B-17](#)
  - debug matm command [B-18](#)
  - debug monitor command [B-19](#)
  - debug mvrdbg command [B-20](#)
  - debug nvram command [B-21](#)
  - debug pagp command [B-22](#)
  - debug platform acl command [B-23](#)
  - debug platform cpu-queues command [B-24](#)
  - debug platform device-manager command [B-26](#)
  - debug platform dot1x command [B-27](#)

- debug platform etherchannel command [B-28](#)
- debug platform fallback-bridging command [B-29](#)
- debug platform forw-tcam command [B-30](#)
- debug platform ip arp inspection command [B-31](#)
- debug platform ip dhcp command [B-32](#)
- debug platform ip igmp snooping command [B-33](#)
- debug platform led command [B-35](#)
- debug platform matm command [B-36](#)
- debug platform messaging application command [B-37](#)
- debug platform phy command [B-38](#)
- debug platform pm command [B-39](#)
- debug platform port-asic command [B-41](#)
- debug platform port-security command [B-42](#)
- debug platform qos-acl-tcam command [B-43](#)
- debug platform remote-commands command [B-44](#)
- debug platform resource-manager command [B-45](#)
- debug platform snmp command [B-46](#)
- debug platform span command [B-47](#)
- debug platform supervisor-asic command [B-48](#)
- debug platform sw-bridge command [B-49](#)
- debug platform team command [B-50](#)
- debug platform uddl command [B-53](#)
- debug platform vlan command [B-54](#)
- debug pm command [B-55](#)
- debug port-security command [B-57](#)
- debug qos-manager command [B-58](#)
- debug spanning-tree backbonefast command [B-61](#)
- debug spanning-tree bpdu command [B-62](#)
- debug spanning-tree bpdu-opt command [B-63](#)
- debug spanning-tree command [B-59](#)
- debug spanning-tree mstp command [B-64](#)
- debug spanning-tree switch command [B-66](#)
- debug spanning-tree uplinkfast command [B-68](#)
- debug sw-vlan command [B-69](#)
- debug sw-vlan ifs command [B-71](#)
- debug sw-vlan notification command [B-72](#)
- debug sw-vlan vtp command [B-74](#)
- debug uddl command [B-76](#)
- debug vqpc command [B-78](#)
- define interface-range command [2-62](#)
- delete (boot loader) command [A-6](#)
- delete command [2-64](#)
- deny (ARP access-list configuration) command [2-65](#)
- deny command [2-67](#)
- detect mechanism, causes [2-88](#)
- DHCP snooping
  - enabling
    - on a VLAN [2-128](#)
    - option 82 [2-123](#)
    - trust on an interface [2-126](#)
  - error recovery timer [2-90](#)
  - rate limiting [2-125](#)
- DHCP snooping binding database
  - binding file, configuring [2-121](#)
  - bindings
    - adding [2-119](#)
    - deleting [2-119](#)
  - clearing database agent statistics [2-39](#)
  - database agent, configuring [2-121](#)
  - displaying
    - binding entries [2-332](#)
    - database agent status [2-334](#)
  - renewing [2-251](#)
- dir (boot loader) command [A-7](#)
- directories, deleting [2-64](#)
- documentation, related [xix](#)
- document conventions [xviii](#)
- domain name, VTP [2-569, 2-573](#)
- dot1x default command [2-70](#)
- dot1x guest-vlan command [2-71](#)
- dot1x host-mode command [2-73](#)
- dot1x initialize command [2-74](#)
- dot1x max-req command [2-75, 2-76](#)
- dot1x multiple-hosts command [2-77](#)
- dot1x port-control command [2-78](#)
- dot1x re-authenticate command [2-80](#)
- dot1x re-authentication command [2-81](#)
- dot1x reauthentication command [2-82](#)

- dot1x system-auth-control command [2-83](#)
- dot1x timeout command [2-84](#)
- dropping packets, with ACL matches [2-5](#)
- DSCP-to-CoS map [2-185](#)
- DSCP-to-DSCP-mutation map [2-185](#)
- DTP [2-509](#)
- DTP flap
  - error detection for [2-88](#)
  - error recovery timer [2-90](#)
- DTP negotiation [2-512](#)
- duplex command [2-86](#)
- dynamic-access ports
  - configuring [2-502](#)
  - restrictions [2-503](#)
- dynamic ARP inspection
  - ARP ACLs
    - apply to a VLAN [2-105](#)
    - define [2-14](#)
    - deny packets [2-65](#)
    - display [2-271](#)
    - permit packets [2-225](#)
  - clear
    - log buffer [2-37](#)
    - statistics [2-38](#)
  - display
    - ARP ACLs [2-271](#)
    - configuration and operating state [2-328](#)
    - log buffer [2-328](#)
    - statistics [2-328](#)
    - trust state and rate limit [2-328](#)
  - enable per VLAN [2-115](#)
  - error detection for [2-88](#)
  - error recovery timer [2-90](#)
  - log buffer
    - clear [2-37](#)
    - configure [2-109](#)
    - display [2-328](#)
  - rate-limit incoming ARP packets [2-107](#)

- dynamic ARP inspection (continued)
  - statistics
    - clear [2-38](#)
    - display [2-328](#)
  - trusted interface state [2-111](#)
  - type of packet logged [2-116](#)
  - validation checks [2-113](#)
- dynamic auto VLAN membership mode [2-508](#)
- dynamic desirable VLAN membership mode [2-508](#)
- Dynamic Host Configuration Protocol (DHCP)
  - See DHCP snooping
- Dynamic Trunking Protocol
  - See DTP

---

## E

- EAP-request/identity frame
  - maximum number to send [2-76](#)
  - response time before retransmitting [2-84](#)
- encapsulation methods [2-526](#)
- environment variables, displaying [2-276](#)
- errdisable detect cause command [2-88](#)
- errdisable recovery command [2-90](#)
- error conditions, displaying [2-307](#)
- error disable detection [2-88](#)
- error-disabled interfaces, displaying [2-316](#)
- EtherChannel
  - assigning Ethernet interface to channel group [2-29](#)
  - creating port-channel logical interface [2-94](#)
  - debug EtherChannel/PAGP, display [B-8](#)
  - debug platform-specific events, display [B-28](#)
  - displaying [2-311](#)
  - interface information, displaying [2-316](#)
- LACP
  - clearing channel-group information [2-41](#)
  - debug messages, display [B-16](#)
  - displaying [2-350](#)
  - modes [2-29](#)

## EtherChannel (continued)

## LACP (continued)

- port priority for hot-standby ports [2-144](#)
- restricting a protocol [2-32](#)
- system priority [2-146](#)

load-distribution methods [2-236](#)

## PAGP

- aggregate-port learner [2-221](#)
- clearing channel-group information [2-43](#)
- debug messages, display [B-22](#)
- displaying [2-394](#)
- error detection for [2-88](#)
- error recovery timer [2-90](#)
- learn method [2-221](#)
- modes [2-29](#)
- physical-port learner [2-221](#)
- priority of interface for transmitted traffic [2-223](#)

Ethernet controller, internal register display [2-288](#)Ethernet statistics, collecting [2-253](#)examples, conventions for [xviii](#)exit command [2-560](#)extended discovery of candidate switches [2-51](#)

## extended-range VLANs

- and allowed VLAN list [2-526](#)
- and pruning-eligible list [2-526](#)
- configuring [2-545](#)

extended system ID for STP [2-457](#)**F**fan information, displaying [2-304](#)file name, VTP [2-569](#)files, deleting [2-64](#)flash\_init (boot loader) command [A-9](#)

## Flex Links

- configuring [2-504](#)
- displaying [2-316](#)

flowcontrol command [2-92](#)format (boot loader) command [A-10](#)forwarding packets, with ACL matches [2-5](#)forwarding results, display [C-5](#)frame forwarding information, displaying [C-5](#)fsck (boot loader) command [A-11](#)**G**global configuration mode [1-2, 1-3](#)**H**hardware ACL statistics [2-267](#)help (boot loader) command [A-12](#)hop-count limit for clusters [2-51](#)host connection, port configuration [2-507](#)host ports, private VLANs [2-510](#)

## Hot Standby Router Protocol

See HSRP

## HSRP

- binding HSRP group to cluster [2-59](#)
- standby group [2-59](#)

**I**

## IGMP filters

- applying [2-129](#)
- debug messages, display [B-13](#)

IGMP groups, setting maximum [2-130](#)IGMP maximum groups, debugging [B-14](#)

## IGMP profiles

- creating [2-132](#)
- displaying [2-336](#)

## IGMP snooping

- displaying [2-337, 2-340](#)
- enabling [2-134](#)
- multicast table [1-5, 2-341](#)
- report suppression [2-137](#)

- images
    - See software images
  - Immediate-Leave feature, MVR [2-218](#)
  - Immediate-Leave processing [2-134](#)
  - initial configuration
    - See hardware installation guide
  - inline power, configuring [2-238](#)
  - interface command [2-98](#)
  - interface configuration mode [1-2, 1-4](#)
  - interface port-channel command [2-94](#)
  - interface range command [2-96](#)
  - interface-range macros [2-62](#)
  - interfaces
    - assigning Ethernet interface to channel group [2-29](#)
    - configuring [2-86](#)
    - configuring multiple [2-96](#)
    - creating port-channel logical [2-94](#)
    - debug messages, display [B-12](#)
    - disabling [2-437](#)
    - displaying the MAC address table [2-365](#)
    - restarting [2-437](#)
  - interface speed, configuring [2-490](#)
  - internal registers, displaying [2-288, 2-297](#)
  - Internet Group Management Protocol
    - See IGMP
  - invalid GBIC
    - error detection for [2-88](#)
    - error recovery timer [2-90](#)
  - ip address command [2-103](#)
  - IP addresses, setting [2-103](#)
  - IP address matching [2-171](#)
  - ip arp inspection filter vlan command [2-105](#)
  - ip arp inspection limit command [2-107](#)
  - ip arp inspection log-buffer command [2-109](#)
  - ip arp inspection trust command [2-111](#)
  - ip arp inspection validate command [2-113](#)
  - ip arp inspection vlan command [2-115](#)
  - ip arp inspection vlan logging command [2-116](#)
  - IP DHCP snooping
    - See DHCP snooping
  - ip dhcp snooping binding command [2-119](#)
  - ip dhcp snooping command [2-118](#)
  - ip dhcp snooping database command [2-121](#)
  - ip dhcp snooping information option command [2-123](#)
  - ip dhcp snooping limit rate command [2-125](#)
  - ip dhcp snooping trust command [2-126](#)
  - ip dhcp snooping verify command [2-127](#)
  - ip dhcp snooping vlan command [2-128](#)
  - ip igmp filter command [2-129](#)
  - ip igmp max-groups command [2-130](#)
  - ip igmp profile command [2-132](#)
  - ip igmp snooping command [2-134](#)
  - ip igmp snooping report-suppression command [2-137](#)
  - IP multicast addresses [2-215](#)
  - IP phones
    - auto-QoS configuration [2-16](#)
    - trusting packets sent from [2-208](#)
  - IP-precedence-to-DSCP map [2-185](#)
  - ip source binding command [2-139](#)
  - IP source guard
    - disabling [2-143](#)
    - displaying
      - binding entries [2-343](#)
      - configuration [2-344](#)
      - dynamic binding entries only [2-332](#)
    - enabling [2-143](#)
    - static IP source bindings [2-139](#)
  - ip ssh command [2-141](#)
  - ip verify source command [2-143](#)
- 
- J**
- jumbo frames
    - See MTU

**L**

## LACP

See EtherChannel

lacp port-priority command [2-144](#)

lacp system-priority command [2-146](#)

Layer 2 mode, enabling [2-500](#)

Layer 2 traceroute

IP addresses [2-536](#)

MAC addresses [2-533](#)

Layer 3 mode, enabling [2-500](#)

line configuration mode [1-2, 1-5](#)

Link Aggregation Control Protocol

See EtherChannel

link flap

error detection for [2-88](#)

error recovery timer [2-90](#)

load\_helper (boot loader) command [A-13](#)

load-distribution methods for EtherChannel [2-236](#)

logging event command [2-148](#)

logging file command [2-149](#)

logical interface [2-94](#)

loopback error

detection for [2-88](#)

recovery timer [2-90](#)

loop guard, for spanning tree [2-458, 2-462](#)

**M**

mac access-group command [2-151](#)

MAC access-groups, displaying [2-354](#)

MAC access list configuration mode [2-153](#)

mac access-list extended command [2-153](#)

MAC access lists [2-67](#)

MAC addresses

displaying

aging time [2-359](#)

all [2-357](#)

dynamic [2-363](#)

MAC addresses (continued)

displaying (continued)

notification settings [2-367](#)

number of addresses in a VLAN [2-361](#)

per interface [2-365](#)

per VLAN [2-371](#)

static [2-369](#)

static and dynamic entries [2-355](#)

dynamic

aging time [2-155](#)

deleting [2-42](#)

displaying [2-363](#)

enabling MAC address notification [2-156](#)

matching [2-171](#)

static

adding and removing [2-158](#)

displaying [2-369](#)

dropping on an interface [2-159](#)

tables [2-357](#)

MAC address notification, debugging [B-17](#)

mac address-table aging-time [2-151, 2-171](#)

mac address-table aging-time command [2-155](#)

mac address-table notification command [2-156](#)

mac address-table static command [2-158](#)

mac address-table static drop command [2-159](#)

macro description command [2-164](#)

macro global command [2-165](#)

macro global description command [2-168](#)

macro name command [2-169](#)

macros

adding a description [2-164](#)

adding a global description [2-168](#)

applying [2-165](#)

creating [2-169](#)

displaying [2-396](#)

interface range [2-62, 2-96](#)

specifying parameter values [2-165](#)

tracing [2-165](#)



- manual
  - audience [xvii](#)
  - purpose of [xvii](#)
- maps
  - QoS
    - defining [2-185](#)
    - displaying [2-380](#)
  - VLAN
    - creating [2-557](#)
    - defining [2-171](#)
    - displaying [2-428](#)
- match (access-map configuration) command [2-171](#)
- match (class-map configuration) command [2-173](#)
- maximum transmission unit
  - See MTU
- mdix auto command [2-175](#)
- member switches
  - See clusters
- memory (boot loader) command [A-14](#)
- mkdir (boot loader) command [A-15](#)
- mls qos aggregate-policer command [2-179](#)
- mls qos command [2-177](#)
- mls qos cos command [2-181](#)
- mls qos dscp-mutation command [2-183](#)
- mls qos map command [2-185](#)
- mls qos queue-set output buffers command [2-188](#)
- mls qos queue-set output threshold command [2-190](#)
- mls qos srr-queue input bandwidth command [2-192](#)
- mls qos srr-queue input buffers command [2-194](#)
- mls qos-srr-queue input cos-map command [2-196](#)
- mls qos srr-queue input dscp-map command [2-198](#)
- mls qos srr-queue input priority-queue command [2-200](#)
- mls qos srr-queue input threshold command [2-202](#)
- mls qos-srr-queue output cos-map command [2-204](#)
- mls qos srr-queue output dscp-map command [2-206](#)
- mls qos trust command [2-208](#)
- mode, MVR [2-215](#)
- Mode button, and password recovery [2-256](#)
- modes, commands [1-1](#)
- monitor session command [2-210](#)
- more (boot loader) command [A-16](#)
- MSTP
  - displaying [2-411](#)
  - interoperability [2-46](#)
  - link type [2-460](#)
- MST region
  - aborting changes [2-466](#)
  - applying changes [2-466](#)
  - configuration name [2-466](#)
  - configuration revision number [2-466](#)
  - current or pending display [2-466](#)
  - displaying [2-411](#)
  - MST configuration mode [2-466](#)
  - VLANs-to-instance mapping [2-466](#)
- path cost [2-468](#)
- protocol mode [2-464](#)
- restart protocol migration process [2-46](#)
- root port
  - loop guard [2-458](#)
  - preventing from becoming designated [2-458](#)
  - restricting which can be root [2-458](#)
  - root guard [2-458](#)
- root switch
  - affects of extended system ID [2-457](#)
  - hello-time [2-471, 2-477](#)
  - interval between BPDU messages [2-472](#)
  - interval between hello BPDU messages [2-471, 2-477](#)
  - max-age [2-472](#)
  - maximum hop count before discarding BPDU [2-473](#)
  - port priority for selection of [2-474](#)
  - primary or secondary [2-477](#)
  - switch priority [2-476](#)
- state changes
  - blocking to forwarding state [2-483](#)
  - enabling BPDU filtering [2-449, 2-481](#)
  - enabling BPDU guard [2-451, 2-481](#)
  - enabling Port Fast [2-481, 2-483](#)
  - forward-delay time [2-470](#)

## MSTP (continued)

## state changes (continued)

length of listening and learning states [2-470](#)rapid transition to forwarding [2-460](#)shutting down Port Fast-enabled ports [2-481](#)state information display [2-410](#)

## MTU

configuring size [2-531](#)displaying global setting [2-418](#)multicast group address, MVR [2-218](#)multicast groups, MVR [2-216](#)multicast router learning method [2-134](#)multicast router ports, configuring [2-134](#)multicast storm control [2-498](#)multicast traffic counters [2-326](#)multicast VLAN, MVR [2-215](#)

multicast VLAN registration

See MVR

multiple hosts on authorized port [2-73](#)

## Multiple Spanning Tree Protocol

See MSTP

## MVR

and address aliasing [2-216](#)configuring [2-215](#)configuring interfaces [2-218](#)debug messages, display [B-20](#)displaying [2-388](#)displaying interface information [2-390](#)members, displaying [2-392](#)mvr (global configuration) command [2-215](#)mvr (interface configuration) command [2-218](#)mvr vlan group command [2-219](#)**N**native VLANs [2-526](#)

## nonegotiate

DTP messaging [2-512](#)speed [2-490](#)

## non-IP protocols

denying [2-67](#)forwarding [2-227](#)non-IP traffic access lists [2-153](#)

## non-IP traffic forwarding

denying [2-67](#)permitting [2-227](#)normal-range VLANs [2-545, 2-551](#)note, description [xviii](#)no vlan command [2-545, 2-555](#)**P**

## PAgP

See EtherChannel

pagp learn-method command [2-221](#)pagp port-priority command [2-223](#)password, VTP [2-569, 2-573](#)password-recovery mechanism, enabling and  
disabling [2-256](#)permit (ARP access-list configuration) command [2-225](#)permit command [2-227](#)

per-VLAN spanning-tree plus

See STP

physical-port learner [2-221](#)PIM-DVMRP, as multicast router learning method [2-134](#)PoE, logging of status [2-148](#)police aggregate command [2-232](#)police command [2-230](#)policed-DSCP map [2-185](#)policy-map command [2-234](#)

## policy maps

applying to an interface [2-258, 2-262](#)creating [2-234](#)displaying [2-399](#)

## policers

displaying [2-374](#)for a single class [2-230](#)

- policy maps (continued)
  - policers (continued)
    - for multiple classes [2-179, 2-232](#)
    - policed-DSCP map [2-185](#)
  - traffic classification
    - defining the class [2-33](#)
    - defining trust states [2-538](#)
    - setting DSCP or IP precedence values [2-260](#)
- Port Aggregation Protocol
  - See EtherChannel
- port-based authentication
  - 802.1x AAA accounting methods [2-1](#)
  - AAA method list [2-3](#)
  - debug messages, display [B-6](#)
  - enabling 802.1x
    - globally [2-83](#)
    - per interface [2-78](#)
  - guest VLAN [2-71](#)
  - host modes [2-73](#)
  - initialize an interface [2-74](#)
  - manual control of authorization state [2-78](#)
  - multiple hosts on authorized port [2-73](#)
  - periodic re-authentication
    - enabling [2-82](#)
    - time between attempts [2-84](#)
  - quiet period between failed authentication exchanges [2-84](#)
  - re-authenticating 802.1x-enabled ports [2-80](#)
  - resetting configurable 802.1x parameters [2-70](#)
  - switch-to-authentication server retransmission time [2-84](#)
  - switch-to-client frame-retransmission number [2-75 to 2-76](#)
  - switch-to-client retransmission time [2-84](#)
- port-channel load-balance command [2-236](#)
- Port Fast, for spanning tree [2-483](#)
- port ranges, defining [2-62](#)
- ports, debugging [B-55](#)
- ports, protected [2-525](#)
- port security
  - aging [2-519](#)
  - debug messages, display [B-57](#)
  - enabling [2-514](#)
  - violation error recovery [2-90](#)
- port trust states for QoS [2-208](#)
- port types, MVR [2-218](#)
- power information, displaying [2-304](#)
- power inline command [2-238](#)
- Power over Ethernet (PoE) controller, displaying [2-295](#)
- priority-queue command [2-239](#)
- private-vlan command [2-241](#)
- private-vlan mapping command [2-244](#)
- private VLANs
  - association [2-523](#)
  - configuring [2-241](#)
  - configuring ports [2-510](#)
  - displaying [2-424](#)
  - host ports [2-510](#)
  - mapping
    - configuring [2-523](#)
    - displaying [2-316](#)
  - promiscuous ports [2-510](#)
- privileged EXEC mode [1-2, 1-3](#)
- promiscuous ports, private VLANs [2-510](#)
- protected ports, displaying [2-322](#)
- pruning
  - VLANs [2-526](#)
  - VTP
    - displaying interface information [2-316](#)
    - enabling [2-569, 2-573](#)
- pruning-eligible VLAN list [2-528](#)
- PVST+
  - See STP

## Q

- QoS
  - auto-QoS
    - configuring [2-16](#)
    - debug messages, display [1-5, B-2](#)
    - displaying [2-272](#)
  - class maps
    - creating [2-35](#)
    - defining the match criteria [2-173](#)
    - displaying [2-278](#)
  - defining the CoS value for an incoming packet [2-181](#)
  - displaying configuration information [2-272, 2-373](#)
  - DSCP trusted ports
    - applying DSCP-to-DSCP-mutation map to [2-183](#)
    - defining DSCP-to-DSCP-mutation map [2-185](#)
  - egress queues
    - allocating buffers [2-188](#)
    - defining the CoS output queue threshold map [2-204](#)
    - defining the DSCP output queue threshold map [2-206](#)
    - displaying buffer allocations [2-377](#)
    - displaying CoS output queue threshold map [2-380](#)
    - displaying DSCP output queue threshold map [2-380](#)
    - displaying queueing strategy [2-377](#)
    - displaying queue-set settings [2-383](#)
    - enabling bandwidth shaping and scheduling [2-494](#)
    - enabling bandwidth sharing and scheduling [2-496](#)
    - limiting the maximum output on a port [2-492](#)
    - mapping a port to a queue-set [2-246](#)
    - mapping CoS values to a queue and threshold [2-204](#)
    - mapping DSCP values to a queue and threshold [2-206](#)
    - setting maximum and reserved memory allocations [2-190](#)
    - setting WTD thresholds [2-190](#)
  - enabling [2-177](#)
  - ingress queues
    - allocating buffers [2-194](#)
    - assigning SRR scheduling weights [2-192](#)
    - defining the CoS input queue threshold map [2-196](#)
- QoS (continued)
  - ingress queues (continued)
    - defining the DSCP input queue threshold map [2-198](#)
    - displaying buffer allocations [2-377](#)
    - displaying CoS input queue threshold map [2-380](#)
    - displaying DSCP input queue threshold map [2-380](#)
    - displaying queueing strategy [2-377](#)
    - displaying settings for [2-375](#)
    - enabling the priority queue [2-200](#)
    - mapping CoS values to a queue and threshold [2-196](#)
    - mapping DSCP values to a queue and threshold [2-198](#)
    - setting WTD thresholds [2-202](#)
  - maps
    - defining [2-185, 2-196, 2-198, 2-204, 2-206](#)
    - displaying [2-380](#)
  - policy maps
    - applying an aggregate policer [2-232](#)
    - applying to an interface [2-258, 2-262](#)
    - creating [2-234](#)
    - defining policers [2-179, 2-230](#)
    - displaying policers [2-374](#)
    - displaying policy maps [2-399](#)
    - policed-DSCP map [2-185](#)
    - setting DSCP or IP precedence values [2-260](#)
    - traffic classifications [2-33](#)
    - trust states [2-538](#)
  - port trust states [2-208](#)
  - queues, enabling the expedite [2-239](#)
  - statistics
    - in-profile and out-of-profile packets [2-377](#)
    - packets enqueued or dropped [2-377](#)
    - sent and received CoS values [2-377](#)
    - sent and received DSCP values [2-377](#)
  - trusted boundary for IP phones [2-208](#)
- quality of service
  - See QoS
- querytime, MVR [2-215](#)
- queue-set command [2-246](#)

**R**

rapid per-VLAN spanning-tree plus  
     See STP

rapid PVST+  
     See STP

rcommand command [2-247](#)

re-authenticating 802.1x-enabled ports [2-80](#)

re-authentication  
     periodic [2-82](#)  
     time between attempts [2-84](#)

receiver ports, MVR [2-218](#)

receiving flow-control packets [2-92](#)

recovery mechanism  
     causes [2-90](#)  
     display [2-305, 2-309](#)  
     timer interval [2-90](#)

redundancy for cluster switches [2-59](#)

remote-span command [2-249](#)

Remote Switched Port Analyzer  
     See RSPAN

rename (boot loader) command [A-17](#)

renew ip dhcp snooping database command [2-251](#)

requirements  
     cluster  
         See release notes

CMS  
     See switch software configuration guide

reset (boot loader) command [A-18](#)

reset command [2-560](#)

resource templates, displaying [2-407](#)

rmdir (boot loader) command [A-19](#)

rmon collection stats command [2-253](#)

root guard, for spanning tree [2-458](#)

routed ports  
     IP addresses on [2-104](#)  
     number supported [2-104](#)

**RSPAN**

configuring [2-210](#)

displaying [2-385](#)

filter RSPAN traffic [2-210](#)

remote-span command [2-249](#)

sessions  
     add interfaces to [2-210](#)  
     displaying [2-385](#)  
     start new [2-210](#)

**S**

sdm prefer command [2-254](#)

secure ports, limitations [2-515](#)

sending flow-control packets [2-92](#)

service password-recovery command [2-256](#)

service-policy command [2-258](#)

set (boot loader) command [A-20](#)

set command [2-260](#)

setup command [2-262](#)

setup express command [2-265](#)

show access-lists command [2-267](#)

show archive status command [2-270](#)

show arp access-list command [2-271](#)

show auto qos command [2-272](#)

show boot command [2-276](#)

show changes command [2-560](#)

show class-map command [2-278](#)

show cluster candidates command [2-281](#)

show cluster command [2-279](#)

show cluster members command [2-283](#)

show controllers cpu-interface command [2-286](#)

show controllers ethernet-controller command [2-288](#)

show controllers power inline command [2-295](#)

show controllers team command [2-297](#)

show current command [2-560](#)

show dot1x command [2-299](#)

- show dtp [2-302](#)
- show env command [2-304](#)
- show errdisable detect command [2-305](#)
- show errdisable flap-values command [2-307](#)
- show errdisable recovery command [2-309](#)
- show etherchannel command [2-311](#)
- show flowcontrol command [2-314](#)
- show interfaces command [2-316](#)
- show interfaces counters command [2-326](#)
- show ip arp inspection command [2-328](#)
- show ipc command [2-346](#)
- show ip dhcp snooping binding command [2-332](#)
- show ip dhcp snooping command [2-331](#)
- show ip dhcp snooping database command [2-334](#)
- show ip igmp profile command [2-336](#)
- show ip igmp snooping command [2-337](#)
- show ip igmp snooping groups command [2-341](#)
- show ip igmp snooping mrouter command [2-340](#)
- show ip source binding command [2-343](#)
- show ip verify source command [2-344](#)
- show lacp command [2-350](#)
- show mac access-group command [2-354](#)
- show mac address-table address command [2-357](#)
- show mac address-table aging time command [2-359](#)
- show mac address-table command [2-355](#)
- show mac address-table count command [2-361](#)
- show mac address-table dynamic command [2-363](#)
- show mac address-table interface command [2-365](#)
- show mac address-table notification command [2-367](#)
- show mac address-table static command [2-369](#)
- show mac address-table vlan command [2-371](#)
- show mls qos aggregate-policer command [2-374](#)
- show mls qos command [2-373](#)
- show mls qos input-queue command [2-375](#)
- show mls qos interface command [2-377](#)
- show mls qos maps command [2-380](#)
- show mls qos queue-set command [2-383](#)
- show monitor command [2-385](#)
- show mvr command [2-388](#)
- show mvr interface command [2-390](#)
- show mvr members command [2-392](#)
- show pagp command [2-394](#)
- show parser macro command [2-396](#)
- show platform acl command [C-2](#)
- show platform configuration command [C-3](#)
- show platform etherchannel command [C-4](#)
- show platform forward command [C-5](#)
- show platform igmp snooping command [C-7](#)
- show platform ip multicast command [C-9](#)
- show platform ip unicast command [C-10](#)
- show platform layer4op command [C-12](#)
- show platform mac-address-table command [C-13](#)
- show platform messaging command [C-14](#)
- show platform monitor command [C-15](#)
- show platform mvr table command [C-16](#)
- show platform pm command [C-17](#)
- show platform port-asic command [C-18](#)
- show platform port-security command [C-22](#)
- show platform qos command [C-23](#)
- show platform resource-manager command [C-24](#)
- show platform snmp counters command [C-26](#)
- show platform spanning-tree command [C-27](#)
- show platform stp-instance command [C-28](#)
- show platform tcam command [C-29](#)
- show platform vlan command [C-32](#)
- show policy-map command [2-399](#)
- show port security command [2-401](#)
- show proposed command [2-560](#)
- show sdm prefer command [2-407](#)
- show setup express command [2-404, 2-409](#)
- show spanning-tree command [2-410](#)
- show storm-control command [2-416](#)
- show system mtu command [2-418](#)
- show trust command [2-538](#)
- show udd command [2-419](#)
- show version command [2-422](#)
- show vlan access-map command [2-428](#)
- show vlan command [2-424](#)

- show vlan command, fields [2-426](#)
- show vlan filter command [2-429](#)
- show vmps command [2-430](#)
- show vtp command [2-433](#)
- shutdown command [2-437](#)
- shutdown vlan command [2-438](#)
- Smartports macros
  - See macros
- SNMP host, specifying [2-442](#)
- SNMP informs, enabling the sending of [2-439](#)
- snmp-server enable traps command [2-439](#)
- snmp-server host command [2-442](#)
- snmp trap mac-notification command [2-446](#)
- SNMP traps
  - enabling MAC address notification trap [2-446](#)
  - enabling the MAC address notification feature [2-156](#)
  - enabling the sending of [2-439](#)
- SoftPhone
  - See Cisco SoftPhone
- software images
  - deleting [2-64](#)
  - downloading [2-7](#)
  - upgrading [2-7](#)
  - uploading [2-12](#)
- software version, displaying [2-422](#)
- source ports, MVR [2-218](#)
- SPAN
  - configuring [2-210](#)
  - debug messages, display [B-19](#)
  - displaying [2-385](#)
  - filter SPAN traffic [2-210](#)
  - sessions
    - add interfaces to [2-210](#)
    - displaying [2-385](#)
    - start new [2-210](#)
- spanning-tree backbonefast command [2-448](#)
- spanning-tree bpdudfilter command [2-449](#)
- spanning-tree bpduguard command [2-451](#)
- spanning-tree cost command [2-453](#)
- spanning-tree etherchannel command [2-455](#)
- spanning-tree extend system-id command [2-457](#)
- spanning-tree guard command [2-458](#)
- spanning-tree link-type command [2-460](#)
- spanning-tree loopguard default command [2-462](#)
- spanning-tree mode command [2-464](#)
- spanning-tree mst configuration command [2-466](#)
- spanning-tree mst cost command [2-468](#)
- spanning-tree mst forward-time command [2-470](#)
- spanning-tree mst hello-time command [2-471](#)
- spanning-tree mst max-age command [2-472](#)
- spanning-tree mst max-hops command [2-473](#)
- spanning-tree mst port-priority command [2-474](#)
- spanning-tree mst priority command [2-476](#)
- spanning-tree mst root command [2-477](#)
- spanning-tree portfast (global configuration) command [2-481](#)
- spanning-tree portfast (interface configuration) command [2-483](#)
- spanning-tree port-priority command [2-479](#)
- Spanning Tree Protocol
  - See STP
- spanning-tree uplinkfast command [2-485](#)
- spanning-tree vlan command [2-487](#)
- speed command [2-490](#)
- srr-queue bandwidth limit command [2-492](#)
- srr-queue bandwidth shape command [2-494](#)
- srr-queue bandwidth share command [2-496](#)
- SSH, configuring version [2-141](#)
- static-access ports, configuring [2-502](#)
- statistics, Ethernet group [2-253](#)
- sticky learning, enabling [2-514](#)
- storm-control command [2-498](#)
- STP
  - BackboneFast [2-448](#)
  - counters, clearing [2-45](#)
  - debug messages, display
    - BackboneFast events [B-61](#)
    - MSTP [B-64](#)

## STP (continued)

## debug messages, display (continued)

- optimized BPDU handling [B-63](#)

- spanning-tree activity [B-59](#)

- switch shim [B-66](#)

- transmitted and received BPDUs [B-62](#)

- UplinkFast [B-68](#)

- detection of indirect link failures [2-448](#)

- EtherChannel misconfiguration [2-455](#)

- extended system ID [2-457](#)

- path cost [2-453](#)

- protocol modes [2-464](#)

## root port

- accelerating choice of new [2-485](#)

- loop guard [2-458](#)

- preventing from becoming designated [2-458](#)

- restricting which can be root [2-458](#)

- root guard [2-458](#)

- UplinkFast [2-485](#)

## root switch

- affects of extended system ID [2-457, 2-488](#)

- hello-time [2-487](#)

- interval between BDPUs messages [2-487](#)

- interval between hello BDPUs messages [2-487](#)

- max-age [2-487](#)

- port priority for selection of [2-479](#)

- primary or secondary [2-487](#)

- switch priority [2-487](#)

## state changes

- blocking to forwarding state [2-483](#)

- enabling BDPUs filtering [2-449, 2-481](#)

- enabling BDPUs guard [2-451, 2-481](#)

- enabling Port Fast [2-481, 2-483](#)

- enabling timer to recover from error state [2-90](#)

- forward-delay time [2-487](#)

- length of listening and learning states [2-487](#)

- shutting down Port Fast-enabled ports [2-481](#)

- state information display [2-410](#)

- VLAN options [2-476, 2-487](#)

- SVIs, creating [2-98](#)

## Switched Port Analyzer

- See SPAN

## switching characteristics

- modifying [2-500](#)

- returning to interfaces [2-500](#)

- switchport access command [2-502](#)

- switchport backup interface command [2-504](#)

- switchport block command [2-506](#)

- switchport command [2-500](#)

- switchport host command [2-507](#)

- switchport mode command [2-508](#)

- switchport mode private-vlan command [2-510](#)

- switchport nonegotiate command [2-512](#)

- switchport port-security aging command [2-519](#)

- switchport port-security command [2-514](#)

- switchport priority extend command [2-521](#)

- switchport private-vlan command [2-523](#)

- switchport protected command [2-525](#)

- switchports, displaying [2-316](#)

- switchport trunk command [2-526](#)

- switchport voice vlan command [2-529](#)

- system message logging [2-148](#)

- system message logging, save message to flash [2-149](#)

- system mtu command [2-531](#)

- system resource templates [2-254](#)

---

**T**

- tar files, creating, listing, and extracting [2-9](#)

- Telnet, using to communicate to cluster switches [2-247](#)

- temperature information, displaying [2-304](#)

- templates, system resources [2-254](#)

- traceroute mac command [2-533](#)

- traceroute mac ip command [2-536](#)

- trunking, VLAN mode [2-508](#)

- trunk mode [2-508](#)

- trunk ports [2-508](#)

- trunks, to non-DTP device [2-509](#)



trusted boundary for QoS [2-208](#)  
 trusted port states for QoS [2-208](#)  
 type (boot loader) command [A-23](#)

## U

### UDLD

aggressive mode [2-540, 2-542](#)  
 debug messages, display [B-76](#)  
 enable globally [2-540](#)  
 enable per interface [2-542](#)  
 error recovery timer [2-90](#)  
 message timer [2-540](#)  
 normal mode [2-540, 2-542](#)  
 reset a shutdown interface [2-544](#)  
 status [2-419](#)

udld command [2-540](#)

udld port command [2-542](#)

udld reset command [2-544](#)

unicast storm control [2-498](#)

unicast traffic counters [2-326](#)

UniDirectional Link Detection

See UDLD

unknown multicast traffic, preventing [2-506](#)

unknown unicast traffic, preventing [2-506](#)

unset (boot loader) command [A-24](#)

upgrading

software images [2-7](#)

monitoring status of [2-270](#)

upgrading information

See release notes

UplinkFast, for STP [2-485](#)

user EXEC mode [1-2](#)

vlan (VLAN configuration) command [2-551](#)

vlan access-map command [2-557](#)

VLAN access map configuration mode [2-557](#)

VLAN access maps

actions [2-5](#)

displaying [2-428](#)

VLAN configuration

rules [2-549, 2-553](#)

saving [2-545, 2-555](#)

VLAN configuration mode

commands

VLAN [2-551](#)

VTP [2-573](#)

description [1-4](#)

entering [2-559](#)

summary [1-2](#)

vlan database command [2-559](#)

vlan filter command [2-562](#)

VLAN filters, displaying [2-429](#)

VLAN ID range [2-545, 2-551](#)

VLAN maps

applying [2-562](#)

creating [2-557](#)

defining [2-171](#)

displaying [2-428](#)

VLAN Query Protocol

See VQP

VLANs

adding [2-545](#)

configuring [2-545, 2-551](#)

debug messages, display

ISL [B-72](#)

VLAN IOS file system error tests [B-71](#)

VLAN manager activity [B-69](#)

VTP [B-74](#)

displaying configurations [2-424](#)

extended-range [2-545](#)

## V

version (boot loader) command [A-26](#)

vlan (global configuration) command [2-545](#)

## VLANs (continued)

## MAC addresses

displaying [2-371](#)number of [2-361](#)media types [2-548, 2-553](#)normal-range [2-545, 2-551](#)private [2-510](#)configuring [2-241](#)displaying [2-424](#)

See also private VLANs

restarting [2-438](#)saving the configuration [2-545](#)shutting down [2-438](#)SNMP traps for VTP [2-440, 2-443](#)suspending [2-438](#)variables [2-551](#)

## VLAN Trunking Protocol

See VTP

## VMPS

configuring servers [2-567](#)displaying [2-430](#)error recovery timer [2-90](#)reconfirming dynamic VLAN assignments [2-564](#)vmmps reconfirm (global configuration) command [2-565](#)vmmps reconfirm (privileged EXEC) command [2-564](#)vmmps retry command [2-566](#)vmmps server command [2-567](#)

## voice VLAN

configuring [2-529](#)setting port priority [2-521](#)

## VQP

and dynamic-access ports [2-503](#)clearing client statistics [2-47](#)displaying information [2-430](#)per-server retry count [2-566](#)reconfirmation interval [2-565](#)reconfirming dynamic VLAN assignments [2-564](#)

## VTP

changing characteristics [2-569](#)clearing pruning counters [2-48](#)

## configuring

domain name [2-569, 2-573](#)file name [2-569](#)mode [2-569, 2-573](#)password [2-569, 2-573](#)counters display fields [2-434](#)displaying information [2-433](#)

## enabling

pruning [2-569, 2-573](#)Version 2 [2-569, 2-573](#)mode [2-569, 2-573](#)pruning [2-569, 2-573](#)saving the configuration [2-545, 2-555](#)statistics [2-433](#)status [2-433](#)status display fields [2-435](#)vtp (global configuration) command [2-569](#)vtp (VLAN configuration) command [2-573](#)