



Numerics

802.1Q trunk ports and native VLANs [2-616](#)

802.1Q tunnel ports

 configuring [2-558](#)

 displaying [2-331](#)

 limitations [2-559](#)

802.1x

 and switchport modes [2-559](#)

 violation error recovery [2-96](#)

 See also port-based authentication

A

aaa accounting dot1x command [2-1](#)

aaa authentication dot1x command [2-3](#)

AAA methods [2-3](#)

abort command [2-614](#)

access control entries

 See ACEs

access control lists

 See ACLs

access groups

 IP [2-108](#)

 MAC, displaying [2-396](#)

access map configuration mode [2-190](#)

access mode [2-558](#)

access ports [2-558](#)

ACEs [2-72, 2-252](#)

ACLs

 deny [2-70](#)

 displaying [2-294](#)

 for non-IP protocols [2-171](#)

ACLs (continued)

 IP [2-108](#)

 matching [2-190](#)

 on Layer 2 interfaces [2-108](#)

 permit [2-250](#)

action command [2-5](#)

address aliasing [2-239](#)

aggregate-port learner [2-244](#)

allowed VLANs [2-577](#)

apply command [2-614](#)

archive download-sw command [2-7](#)

archive tar command [2-9](#)

archive upload-sw command [2-12](#)

arp access-list command [2-14](#)

audience [xvii](#)

authorization state of controlled port [2-84](#)

autonegotiation of duplex mode [2-93](#)

auto qos voip command [2-16](#)

B

BackboneFast, for STP [2-495](#)

backup interfaces

 configuring [2-553](#)

 displaying [2-350](#)

boot (boot loader) command [A-2](#)

boot bootlpr command [2-21](#)

boot config-file command [2-22](#)

boot enable-break command [2-23](#)

boot helper command [2-24](#)

boot helper-config file command [2-25](#)

booting

- Cisco IOS image [2-28](#)
- displaying environment variables [2-303](#)
- interrupting [2-23](#)
- manually [2-26](#)

boot loader

- accessing [A-1](#)
- booting
 - Cisco IOS image [A-2](#)
 - helper image [2-24](#)
- directories
 - creating [A-15](#)
 - displaying a list of [A-7](#)
 - removing [A-19](#)
- displaying
 - available commands [A-12](#)
 - memory heap utilization [A-14](#)
 - version [A-26](#)
- environment variables
 - described [A-20](#)
 - displaying settings [A-20](#)
 - location of [A-21](#)
 - setting [A-20](#)
 - unsetting [A-24](#)
- files
 - copying [A-5](#)
 - deleting [A-6](#)
 - displaying a list of [A-7](#)
 - displaying the contents of [A-4, A-16, A-23](#)
 - renaming [A-17](#)
- file system
 - formatting [A-10](#)
 - initializing flash [A-9](#)
 - running a consistency check [A-11](#)
- loading helper images [A-13](#)
- prompt [A-1](#)
- resetting the system [A-18](#)

boot manual command [2-26](#)

boot private-config-file command [2-27](#)

boot system command [2-28](#)

BPDU filtering, for spanning tree [2-496, 2-529](#)

BPDU guard, for spanning tree [2-498, 2-529](#)

broadcast storm control [2-546](#)

C

candidate switches

- See clusters

cat (boot loader) command [A-4](#)

caution, description [xviii](#)

CDP, enabling protocol tunneling for [2-158](#)

channel-group command [2-29](#)

channel-protocol command [2-32](#)

Cisco Network Assistant

- See Network Assistant [xviii](#)

Cisco SoftPhone

- auto-QoS configuration [2-16](#)
- trusting packets sent from [2-230](#)

class command [2-33](#)

class-map command [2-35](#)

class maps

- creating [2-35](#)
- defining the match criteria [2-192](#)
- displaying [2-308](#)

class of service

- See CoS

clear ip arp inspection log command [2-37](#)

clear ip arp inspection statistics command [2-38](#)

clear ipc command [2-40](#)

clear ip dhcp snooping database command [2-39](#)

clear l2protocol-tunnel counters command [2-41](#)

clear lacp command [2-42](#)

clear mac address-table command [2-43](#)

clear pagp command [2-45](#)

clear port-security command [2-46](#)

clear spanning-tree counters command [2-48](#)

clear spanning-tree detected-protocols command [2-49](#)

clear vmps statistics command [2-50](#)

- clear vtp counters command [2-51](#)
- cluster commander-address command [2-52](#)
- cluster discovery hop-count command [2-54](#)
- cluster enable command [2-55](#)
- cluster holdtime command [2-57](#)
- cluster member command [2-58](#)
- cluster outside-interface command [2-60](#)
- cluster requirements [xix](#)
- cluster run command [2-61](#)
- clusters
 - adding candidates [2-58](#)
 - binding to HSRP group [2-62](#)
 - building manually [2-58](#)
 - communicating with
 - devices outside the cluster [2-60](#)
 - members by using Telnet [2-273](#)
 - debug messages, display [B-4](#)
 - displaying
 - candidate switches [2-311](#)
 - debug messages [B-4](#)
 - member switches [2-313](#)
 - status [2-309](#)
 - hop-count limit for extended discovery [2-54](#)
 - HSRP standby groups [2-62](#)
 - redundancy [2-62](#)
 - SNMP trap [2-485](#)
- cluster standby-group command [2-62](#)
- cluster timer command [2-64](#)
- command modes defined [1-1](#)
- commands changed in Cisco IOS Release 12.2(20)SE [1-5](#)
- command switch
 - See clusters
- configuration, initial
 - See getting started guide and hardware installation guide
- configuration files
 - password recovery disable considerations [A-1](#)
 - specifying the name [2-22, 2-27](#)
- configuring multiple interfaces [2-103](#)

- config-vlan mode
 - commands [2-600](#)
 - description [1-4](#)
 - entering [2-599](#)
 - summary [1-2](#)
- conventions
 - command [xviii](#)
 - for examples [xviii](#)
 - publication [xviii](#)
 - text [xviii](#)
- copy (boot loader) command [A-5](#)
- CoS
 - assigning default value to incoming packets [2-200](#)
 - assigning to Layer 2 protocol packets [2-161](#)
 - overriding the incoming value [2-200](#)
- CoS-to-DSCP map [2-204](#)
- CPU ASIC statistics, displaying [2-316](#)

D

- debug auto qos command [B-2](#)
- debug cluster command [B-4](#)
- debug dot1x command [B-6](#)
- debug dtp command [B-7](#)
- debug etherchannel command [B-8](#)
- debug ilpower command [B-10](#)
- debug interface command [B-13](#)
- debug ip dhcp snooping command [B-11](#)
- debug ip igmp filter command [B-15](#)
- debug ip igmp max-groups command [B-16](#)
- debug ip igmp snooping command [B-17](#)
- debug ip verify source packet command [B-12](#)
- debug lacp command [B-18](#)
- debug mac-notification command [B-19](#)
- debug matm command [B-20](#)
- debug monitor command [B-21](#)
- debug mvrdbg command [B-23](#)
- debug nvram command [B-24](#)
- debug pagp command [B-25](#)

- debug platform acl command [B-26](#)
- debug platform configuration command [B-34](#)
- debug platform cpu-queues command [B-27](#)
- debug platform device-manager command [B-29](#)
- debug platform dot1x command [B-30](#)
- debug platform etherchannel command [B-31](#)
- debug platform fallback-bridging command [B-32](#)
- debug platform forw-tcam command [B-33](#)
- debug platform ip arp inspection command [B-36](#)
- debug platform ip dhcp command [B-37](#)
- debug platform ip igmp snooping command [B-38](#)
- debug platform led command [B-40](#)
- debug platform matm command [B-41](#)
- debug platform messaging application command [B-43](#)
- debug platform phy command [B-44](#)
- debug platform pm command [B-46](#)
- debug platform port-asic command [B-48](#)
- debug platform port-security command [B-49](#)
- debug platform qos-acl-tcam command [B-50](#)
- debug platform remote-commands command [B-51](#)
- debug platform resource-manager command [B-52](#)
- debug platform snmp command [B-53](#)
- debug platform span command [B-54](#)
- debug platform supervisor-asic command [B-55](#)
- debug platform sw-bridge command [B-56](#)
- debug platform tcam command [B-57](#)
- debug platform uddl command [B-60](#)
- debug platform vlan command [B-61](#)
- debug pm command [B-62](#)
- debug port-security command [B-64](#)
- debug qos-manager command [B-65](#)
- debug spanning-tree backbonefast command [B-68](#)
- debug spanning-tree bpdu command [B-69](#)
- debug spanning-tree bpdu-opt command [B-70](#)
- debug spanning-tree command [B-66](#)
- debug spanning-tree mstp command [B-71](#)
- debug spanning-tree switch command [B-73](#)
- debug spanning-tree uplinkfast command [B-75](#)
- debug sw-vlan command [B-76](#)
- debug sw-vlan ifs command [B-78](#)
- debug sw-vlan notification command [B-80](#)
- debug sw-vlan vtp command [B-82](#)
- debug uddl command [B-84](#)
- debug vqpc command [B-86](#)
- define interface-range command [2-65](#)
- delete (boot loader) command [A-6](#)
- delete command [2-67](#)
- deny (ARP access-list configuration) command [2-68](#)
- deny command [2-70](#)
- detect mechanism, causes [2-94](#)
- device manager requirements [xviii](#)
- DHCP snooping
 - accepting untrusted packets from edge switch [2-134](#)
 - enabling
 - on a VLAN [2-139](#)
 - option 82 [2-132, 2-134](#)
 - trust on an interface [2-137](#)
 - error recovery timer [2-96](#)
 - rate limiting [2-136](#)
- DHCP snooping binding database
 - binding file, configuring [2-130](#)
 - bindings
 - adding [2-128](#)
 - deleting [2-128](#)
 - clearing database agent statistics [2-39](#)
 - database agent, configuring [2-130](#)
 - displaying
 - binding entries [2-365](#)
 - database agent status [2-368](#)
 - renewing [2-277](#)
- dir (boot loader) command [A-7](#)
- directories, deleting [2-67](#)
- documentation, related [xviii](#)
- document conventions [xviii](#)
- domain name, VTP [2-625, 2-629](#)
- dot1x command [2-73](#)
- dot1x default command [2-75](#)
- dot1x guest-vlan command [2-76](#)

- dot1x host-mode command [2-78](#)
- dot1x initialize command [2-80](#)
- dot1x max-req command [2-81, 2-82](#)
- dot1x multiple-hosts command [2-83](#)
- dot1x port-control command [2-84](#)
- dot1x re-authenticate command [2-86](#)
- dot1x re-authentication command [2-87](#)
- dot1x reauthentication command [2-88](#)
- dot1x timeout command [2-90](#)
- dropping packets, with ACL matches [2-5](#)
- drop threshold, Layer 2 protocol tunneling [2-158](#)
- DSCP-to-CoS map [2-204](#)
- DSCP-to-DSCP-mutation map [2-204](#)
- DTP [2-559](#)
- DTP flap
 - error detection for [2-94](#)
 - error recovery timer [2-96](#)
- DTP negotiation [2-563](#)
- duplex command [2-92](#)
- dynamic-access ports
 - configuring [2-551](#)
 - restrictions [2-552](#)
- dynamic ARP inspection
 - ARP ACLs
 - apply to a VLAN [2-113](#)
 - define [2-14](#)
 - deny packets [2-68](#)
 - display [2-298](#)
 - permit packets [2-248](#)
 - clear
 - log buffer [2-37](#)
 - statistics [2-38](#)
 - display
 - ARP ACLs [2-298](#)
 - configuration and operating state [2-361](#)
 - log buffer [2-361](#)
 - statistics [2-361](#)
 - trust state and rate limit [2-361](#)

- dynamic ARP inspection (continued)
 - enable per VLAN [2-123](#)
 - error detection for [2-94](#)
 - error recovery timer [2-96](#)
 - log buffer
 - clear [2-37](#)
 - configure [2-117](#)
 - display [2-361](#)
 - rate-limit incoming ARP packets [2-115](#)
 - statistics
 - clear [2-38](#)
 - display [2-361](#)
 - trusted interface state [2-119](#)
 - type of packet logged [2-125](#)
 - validation checks [2-121](#)
- dynamic auto VLAN membership mode [2-558](#)
- dynamic desirable VLAN membership mode [2-558](#)
- Dynamic Host Configuration Protocol (DHCP)
 - See DHCP snooping
- Dynamic Trunking Protocol
 - See DTP

E

- EAP-request/identity frame
 - maximum number to send [2-82](#)
 - response time before retransmitting [2-90](#)
- encapsulation methods [2-577](#)
- environment variables, displaying [2-303](#)
- errdisable detect cause command [2-94](#)
- errdisable recovery command [2-96](#)
- error conditions, displaying [2-341](#)
- error disable detection [2-94](#)
- error-disabled interfaces, displaying [2-350](#)
- EtherChannel
 - assigning Ethernet interface to channel group [2-29](#)
 - creating port-channel logical interface [2-101](#)
 - debug EtherChannel/PAGP, display [B-8](#)
 - debug platform-specific events, display [B-31](#)

EtherChannel (continued)

- displaying [2-345](#)
- enabling Layer 2 protocol tunneling for
 - LACP [2-159](#)
 - PAgP [2-159](#)
 - UDLD [2-159](#)
- interface information, displaying [2-350](#)
- LACP
 - clearing channel-group information [2-42](#)
 - debug messages, display [B-18](#)
 - displaying [2-392](#)
 - modes [2-29](#)
 - port priority for hot-standby ports [2-162](#)
 - restricting a protocol [2-32](#)
 - system priority [2-164](#)
- load-distribution methods [2-260](#)
- PAgP
 - aggregate-port learner [2-244](#)
 - clearing channel-group information [2-45](#)
 - debug messages, display [B-25](#)
 - displaying [2-439](#)
 - error detection for [2-94](#)
 - error recovery timer [2-96](#)
 - learn method [2-244](#)
 - modes [2-29](#)
 - physical-port learner [2-244](#)
 - priority of interface for transmitted traffic [2-246](#)
- Ethernet controller, internal register display [2-318](#)
- Ethernet statistics, collecting [2-279](#)
- examples, conventions for [xviii](#)
- exit command [2-614](#)
- extended discovery of candidate switches [2-54](#)
- extended-range VLANs
 - and allowed VLAN list [2-577](#)
 - and pruning-eligible list [2-577](#)
 - configuring [2-599](#)
- extended system ID for STP [2-504](#)

F

- fan information, displaying [2-337](#)
- file name, VTP [2-625](#)
- files, deleting [2-67](#)
- flash_init (boot loader) command [A-9](#)
- Flex Links
 - configuring [2-553](#)
 - displaying [2-350](#)
- flowcontrol command [2-99](#)
- format (boot loader) command [A-10](#)
- forwarding packets, with ACL matches [2-5](#)
- forwarding results, display [C-5](#)
- frame forwarding information, displaying [C-5](#)
- front-end controller
 - counter and status information [C-7](#)
- fsck (boot loader) command [A-11](#)

G

- global configuration mode [1-2, 1-3](#)

H

- hardware ACL statistics [2-294](#)
- help (boot loader) command [A-12](#)
- hierarchical policy maps [2-258](#)
- hop-count limit for clusters [2-54](#)
- host connection, port configuration [2-557](#)
- host ports, private VLANs [2-561](#)
- Hot Standby Router Protocol
 - See HSRP
- HSRP
 - binding HSRP group to cluster [2-62](#)
 - standby group [2-62](#)

- IGMP filters
 - applying [2-140](#)
 - debug messages, display [B-15](#)
- IGMP groups, setting maximum [2-141](#)
- IGMP maximum groups, debugging [B-16](#)
- IGMP profiles
 - creating [2-143](#)
 - displaying [2-370](#)
- IGMP snooping
 - displaying [2-372](#), [2-375](#), [2-379](#), [2-380](#)
 - enabling [2-145](#)
 - multicast table [1-5](#), [2-377](#)
 - querier [2-148](#)
 - report suppression [2-150](#)
- images
 - See software images
- Immediate-Leave feature, MVR [2-241](#)
- Immediate-Leave processing [2-145](#)
- initial configuration
 - See getting started guide and hardware installation guide
- interface command [2-106](#)
- interface configuration mode [1-2](#), [1-4](#)
- interface port-channel command [2-101](#)
- interface range command [2-103](#)
- interface-range macros [2-65](#)
- interfaces
 - assigning Ethernet interface to channel group [2-29](#)
 - configuring [2-92](#)
 - configuring multiple [2-103](#)
 - creating port-channel logical [2-101](#)
 - debug messages, display [B-13](#)
 - disabling [2-483](#)
 - displaying the MAC address table [2-408](#)
 - restarting [2-483](#)
- interface speed, configuring [2-538](#)
- internal registers, displaying [2-318](#), [2-327](#)
- Internet Group Management Protocol
 - See IGMP
- invalid GBIC
 - error detection for [2-94](#)
 - error recovery timer [2-96](#)
- ip address command [2-111](#)
- IP addresses, setting [2-111](#)
- IP address matching [2-190](#)
- ip arp inspection filter vlan command [2-113](#)
- ip arp inspection limit command [2-115](#)
- ip arp inspection log-buffer command [2-117](#)
- ip arp inspection trust command [2-119](#)
- ip arp inspection validate command [2-121](#)
- ip arp inspection vlan command [2-123](#)
- ip arp inspection vlan logging command [2-125](#)
- IP DHCP snooping
 - See DHCP snooping
- ip dhcp snooping binding command [2-128](#)
- ip dhcp snooping command [2-127](#)
- ip dhcp snooping database command [2-130](#)
- ip dhcp snooping information option allow-untrusted command [2-134](#)
- ip dhcp snooping information option command [2-132](#)
- ip dhcp snooping limit rate command [2-136](#)
- ip dhcp snooping trust command [2-137](#)
- ip dhcp snooping verify command [2-138](#)
- ip dhcp snooping vlan command [2-139](#)
- ip igmp filter command [2-140](#)
- ip igmp max-groups command [2-141](#)
- ip igmp profile command [2-143](#)
- ip igmp snooping command [2-145](#)
- ip igmp snooping querier command [2-148](#)
- ip igmp snooping report-suppression command [2-150](#)
- IP multicast addresses [2-238](#)
- IP phones
 - auto-QoS configuration [2-16](#)
 - trusting packets sent from [2-230](#)
- IP-precedence-to-DSCP map [2-204](#)
- ip source binding command [2-152](#)

IP source guard

- disabling [2-156](#)

displaying

- binding entries [2-382](#)

- configuration [2-383](#)

- dynamic binding entries only [2-365](#)

- enabling [2-156](#)

- static IP source bindings [2-152](#)

ip ssh command [2-154](#)

IPv6 SDM template [2-280](#)

ip verify source command [2-156](#)

J

jumbo frames

- See MTU

L

l2protocol-tunnel command [2-158](#)

l2protocol-tunnel cos command [2-161](#)

LACP

- See EtherChannel

lacp port-priority command [2-162](#)

lacp system-priority command [2-164](#)

Layer 2 mode, enabling [2-549](#)

Layer 2 protocol ports, displaying [2-389](#)

Layer 2 protocol-tunnel

- error detection for [2-94](#)

- error recovery timer [2-96](#)

Layer 2 protocol tunnel counters [2-41](#)

Layer 2 protocol tunneling error recovery [2-159](#)

Layer 2 traceroute

- IP addresses [2-590](#)

- MAC addresses [2-587](#)

Layer 3 mode, enabling [2-549](#)

line configuration mode [1-2, 1-5](#)

Link Aggregation Control Protocol

- See EtherChannel

link flap

- error detection for [2-94](#)

- error recovery timer [2-96](#)

load_helper (boot loader) command [A-13](#)

load-distribution methods for EtherChannel [2-260](#)

logging event power-inline-status command [2-166](#)

logging file command [2-167](#)

logical interface [2-101](#)

loopback error

- detection for [2-94](#)

- recovery timer [2-96](#)

loop guard, for spanning tree [2-506, 2-510](#)

M

mac access-group command [2-169](#)

MAC access-groups, displaying [2-396](#)

MAC access list configuration mode [2-171](#)

mac access-list extended command [2-171](#)

MAC access lists [2-70](#)

MAC addresses

displaying

- aging time [2-402](#)

- all [2-400](#)

- dynamic [2-406](#)

- notification settings [2-410](#)

- number of addresses in a VLAN [2-404](#)

- per interface [2-408](#)

- per VLAN [2-414](#)

- static [2-412](#)

- static and dynamic entries [2-398](#)

dynamic

- aging time [2-173](#)

- deleting [2-43](#)

- displaying [2-406](#)

enabling MAC address notification [2-175](#)

matching [2-190](#)

- MAC addresses (addresses)
 - static
 - adding and removing [2-177](#)
 - displaying [2-412](#)
 - dropping on an interface [2-178](#)
 - tables [2-400](#)
- MAC address notification, debugging [B-19](#)
- mac address-table aging-time [2-169, 2-190](#)
- mac address-table aging-time command [2-173](#)
- mac address-table notification command [2-175](#)
- mac address-table static command [2-177](#)
- mac address-table static drop command [2-178](#)
- macro description command [2-183](#)
- macro global command [2-184](#)
- macro global description command [2-187](#)
- macro name command [2-188](#)
- macros
 - adding a description [2-183](#)
 - adding a global description [2-187](#)
 - applying [2-184](#)
 - creating [2-188](#)
 - displaying [2-441](#)
 - interface range [2-65, 2-103](#)
 - specifying parameter values [2-184](#)
 - tracing [2-184](#)
- manual
 - audience [xvii](#)
 - purpose of [xvii](#)
- maps
 - QoS
 - defining [2-204](#)
 - displaying [2-424](#)
 - VLAN
 - creating [2-611](#)
 - defining [2-190](#)
 - displaying [2-474](#)
- match (access-map configuration) command [2-190](#)
- match (class-map configuration) command [2-192](#)
- maximum transmission unit
 - See [MTU](#)
- mdix auto command [2-194](#)
- member switches
 - See [clusters](#)
- memory (boot loader) command [A-14](#)
- mkdir (boot loader) command [A-15](#)
- mls qos aggregate-policer command [2-198](#)
- mls qos command [2-196](#)
- mls qos cos command [2-200](#)
- mls qos dscp-mutation command [2-202](#)
- mls qos map command [2-204](#)
- mls qos queue-set output buffers command [2-208](#)
- mls qos queue-set output threshold command [2-210](#)
- mls qos srr-queue input bandwidth command [2-214](#)
- mls qos srr-queue input buffers command [2-216](#)
- mls qos-srr-queue input cos-map command [2-218](#)
- mls qos srr-queue input dscp-map command [2-220](#)
- mls qos srr-queue input priority-queue command [2-222](#)
- mls qos srr-queue input threshold command [2-224](#)
- mls qos-srr-queue output cos-map command [2-226](#)
- mls qos srr-queue output dscp-map command [2-228](#)
- mls qos trust command [2-230](#)
- mls qos vlan-based command [2-232](#)
- mode, MVR [2-238](#)
- Mode button, and password recovery [2-283](#)
- modes, commands [1-1](#)
- monitor session command [2-233](#)
- more (boot loader) command [A-16](#)
- MSTP
 - displaying [2-456](#)
 - interoperability [2-49](#)
 - link type [2-508](#)
 - MST region
 - aborting changes [2-514](#)
 - applying changes [2-514](#)
 - configuration name [2-514](#)
 - configuration revision number [2-514](#)

MSTP (continued)

MST region

- current or pending display [2-514](#)

- displaying [2-456](#)

- MST configuration mode [2-514](#)

- VLANs-to-instance mapping [2-514](#)

- path cost [2-516](#)

- protocol mode [2-512](#)

- restart protocol migration process [2-49](#)

root port

- loop guard [2-506](#)

- preventing from becoming designated [2-506](#)

- restricting which can be root [2-506](#)

- root guard [2-506](#)

root switch

- affects of extended system ID [2-504](#)

- hello-time [2-519, 2-525](#)

- interval between BPDU messages [2-520](#)

- interval between hello BPDU messages [2-519, 2-525](#)

- max-age [2-520](#)

- maximum hop count before discarding BPDU [2-521](#)

- port priority for selection of [2-522](#)

- primary or secondary [2-525](#)

- switch priority [2-524](#)

state changes

- blocking to forwarding state [2-531](#)

- enabling BPDU filtering [2-496, 2-529](#)

- enabling BPDU guard [2-498, 2-529](#)

- enabling Port Fast [2-529, 2-531](#)

- forward-delay time [2-518](#)

- length of listening and learning states [2-518](#)

- rapid transition to forwarding [2-508](#)

- shutting down Port Fast-enabled ports [2-529](#)

- state information display [2-455](#)

MTU

- configuring size [2-584](#)

- displaying global setting [2-463](#)

- multicast group address, MVR [2-241](#)

- multicast groups, MVR [2-239](#)

- multicast router learning method [2-145](#)

- multicast router ports, configuring [2-145](#)

- multicast storm control [2-546](#)

- multicast VLAN, MVR [2-238](#)

- multicast VLAN registration

- See MVR

- multiple hosts on authorized port [2-78](#)

- Multiple Spanning Tree Protocol

- See MSTP

MVR

- and address aliasing [2-239](#)

- configuring [2-238](#)

- configuring interfaces [2-241](#)

- debug messages, display [B-23](#)

- displaying [2-433](#)

- displaying interface information [2-435](#)

- members, displaying [2-437](#)

- mvr (global configuration) command [2-238](#)

- mvr (interface configuration) command [2-241](#)

- mvr vlan group command [2-242](#)

N

- native VLANs [2-577](#)

- native VLAN tagging [2-616](#)

- Network Assistant requirements [xviii](#)

- nonegotiate

- DTP messaging [2-563](#)

- speed [2-538, 2-539](#)

- non-IP protocols

- denying [2-70](#)

- forwarding [2-250](#)

- non-IP traffic access lists [2-171](#)

- non-IP traffic forwarding

- denying [2-70](#)

- permitting [2-250](#)

- normal-range VLANs [2-599, 2-605](#)

- note, description [xviii](#)

- no vlan command [2-599, 2-609](#)

P

PAgP

See EtherChannel

pagp learn-method command [2-244](#)

pagp port-priority command [2-246](#)

password, VTP [2-625, 2-629](#)

password-recovery mechanism, enabling and disabling [2-283](#)

permit (ARP access-list configuration) command [2-248](#)

permit command [2-250](#)

per-VLAN spanning-tree plus

See STP

physical-port learner [2-244](#)

PIM-DVMRP, as multicast router learning method [2-145](#)

PoE

configuring the power management mode [2-262](#)

displaying controller register values [2-325](#)

displaying power management information [2-449](#)

logging of status [2-166](#)

police aggregate command [2-255](#)

police command [2-253](#)

policed-DSCP map [2-204](#)

policy-map command [2-257](#)

policy maps

applying to an interface [2-285, 2-289](#)

creating [2-257](#)

displaying [2-444](#)

hierarchical [2-258](#)

policers

displaying [2-417](#)

for a single class [2-253](#)

for multiple classes [2-198, 2-255](#)

policed-DSCP map [2-204](#)

traffic classification

defining the class [2-33](#)

defining trust states [2-592](#)

setting DSCP or IP precedence values [2-287](#)

Port Aggregation Protocol

See EtherChannel

port-based authentication

802.1x AAA accounting methods [2-1](#)

AAA method list [2-3](#)

debug messages, display [B-6](#)

enabling 802.1x

globally [2-73](#)

per interface [2-84](#)

guest VLAN [2-76](#)

host modes [2-78](#)

initialize an interface [2-80](#)

manual control of authorization state [2-84](#)

multiple hosts on authorized port [2-78](#)

periodic re-authentication

enabling [2-88](#)

time between attempts [2-90](#)

quiet period between failed authentication exchanges [2-90](#)

re-authenticating 802.1x-enabled ports [2-86](#)

resetting configurable 802.1x parameters [2-75](#)

switch-to-authentication server retransmission time [2-90](#)

switch-to-client frame-retransmission number [2-81 to 2-82](#)

switch-to-client retransmission time [2-90](#)

port-channel load-balance command [2-260](#)

Port Fast, for spanning tree [2-531](#)

port ranges, defining [2-65](#)

ports, debugging [B-62](#)

ports, protected [2-575](#)

port security

aging [2-569](#)

debug messages, display [B-64](#)

enabling [2-565](#)

violation error recovery [2-96](#)

port trust states for QoS [2-230](#)

port types, MVR [2-241](#)

power information, displaying [2-337](#)

power inline command [2-262](#)

Power over Ethernet

See PoE

priority-queue command [2-265](#)

private-vlan command [2-267](#)

private-vlan mapping command [2-270](#)

private VLANs

association [2-573](#)

configuring [2-267](#)

configuring ports [2-561](#)

displaying [2-469](#)

host ports [2-561](#)

mapping

configuring [2-573](#)

displaying [2-350](#)

promiscuous ports [2-561](#)

privileged EXEC mode [1-2, 1-3](#)

promiscuous ports, private VLANs [2-561](#)

protected ports, displaying [2-355](#)

pruning

VLANs [2-577](#)

VTP

displaying interface information [2-350](#)

enabling [2-625, 2-629](#)

pruning-eligible VLAN list [2-579](#)

PVST+

See STP

Q

QoS

auto-QoS

configuring [2-16](#)

debug messages, display [1-5, B-2](#)

displaying [2-299](#)

class maps

creating [2-35](#)

defining the match criteria [2-192](#)

displaying [2-308](#)

defining the CoS value for an incoming packet [2-200](#)

QoS (continued)

displaying configuration information [2-299, 2-416](#)

DSCP trusted ports

applying DSCP-to-DSCP-mutation map to [2-202](#)

defining DSCP-to-DSCP-mutation map [2-204](#)

egress queues

allocating buffers [2-208](#)

defining the CoS output queue threshold map [2-226](#)

defining the DSCP output queue threshold map [2-228](#)

displaying buffer allocations [2-420](#)

displaying CoS output queue threshold map [2-424](#)

displaying DSCP output queue threshold map [2-424](#)

displaying queueing strategy [2-420](#)

displaying queue-set settings [2-427, 2-429](#)

enabling bandwidth shaping and scheduling [2-542](#)

enabling bandwidth sharing and scheduling [2-544](#)

limiting the maximum output on a port [2-540](#)

mapping a port to a queue-set [2-272](#)

mapping CoS values to a queue and threshold [2-226](#)

mapping DSCP values to a queue and threshold [2-228](#)

setting maximum and reserved memory
allocations [2-210](#)

setting WTD thresholds [2-210](#)

enabling [2-196](#)

ingress queues

allocating buffers [2-216](#)

assigning SRR scheduling weights [2-214](#)

defining the CoS input queue threshold map [2-218](#)

defining the DSCP input queue threshold map [2-220](#)

displaying buffer allocations [2-420](#)

displaying CoS input queue threshold map [2-424](#)

displaying DSCP input queue threshold map [2-424](#)

displaying queueing strategy [2-420](#)

displaying settings for [2-418](#)

enabling the priority queue [2-222](#)

mapping CoS values to a queue and threshold [2-218](#)

mapping DSCP values to a queue and threshold [2-220](#)

setting WTD thresholds [2-224](#)

QoS (continued)

- maps
 - defining [2-204, 2-218, 2-220, 2-226, 2-228](#)
 - displaying [2-424](#)
- policy maps
 - applying an aggregate policer [2-255](#)
 - applying to an interface [2-285, 2-289](#)
 - creating [2-257](#)
 - defining policers [2-198, 2-253](#)
 - displaying policers [2-417](#)
 - displaying policy maps [2-444](#)
 - hierarchical [2-258](#)
 - policed-DSCP map [2-204](#)
 - setting DSCP or IP precedence values [2-287](#)
 - traffic classifications [2-33](#)
 - trust states [2-592](#)
- port trust states [2-230](#)
- queues, enabling the expedite [2-265](#)
- statistics
 - in-profile and out-of-profile packets [2-420](#)
 - packets enqueued or dropped [2-420](#)
 - sent and received CoS values [2-420](#)
 - sent and received DSCP values [2-420](#)
- trusted boundary for IP phones [2-230](#)
- VLAN-based [2-232](#)
- quality of service
 - See QoS
- querytime, MVR [2-238](#)
- queue-set command [2-272](#)

R

- rapid per-VLAN spanning-tree plus
 - See STP
- rapid PVST+
 - See STP
- rcommand command [2-273](#)
- re-authenticating 802.1x-enabled ports [2-86](#)

- re-authentication
 - periodic [2-88](#)
 - time between attempts [2-90](#)
- receiver ports, MVR [2-241](#)
- receiving flow-control packets [2-99](#)
- recovery mechanism
 - causes [2-96](#)
 - display [2-305, 2-339, 2-343](#)
 - timer interval [2-97](#)
- redundancy for cluster switches [2-62](#)
- remote-span command [2-275](#)
- Remote Switched Port Analyzer
 - See RSPAN
- rename (boot loader) command [A-17](#)
- renew ip dhcp snooping database command [2-277](#)
- requirements
 - cluster [xix](#)
 - device manager [xviii](#)
 - Network Assistant [xviii](#)
- reset (boot loader) command [A-18](#)
- reset command [2-614](#)
- resource templates, displaying [2-451](#)
- rmdir (boot loader) command [A-19](#)
- rmon collection stats command [2-279](#)
- root guard, for spanning tree [2-506](#)
- routed ports
 - IP addresses on [2-112](#)
 - number supported [2-112](#)
- RSPAN
 - configuring [2-233](#)
 - displaying [2-430](#)
 - filter RSPAN traffic [2-233](#)
 - remote-span command [2-275](#)
 - sessions
 - add interfaces to [2-233](#)
 - displaying [2-430](#)
 - start new [2-233](#)

S

- sdm prefer command [2-280](#)
- SDM templates
 - allowed resources [2-281](#)
 - displaying [2-451](#)
 - dual IPv4 and IPv6 [2-280](#)
- secure ports, limitations [2-566](#)
- sending flow-control packets [2-99](#)
- service password-recovery command [2-283](#)
- service-policy command [2-285](#)
- set (boot loader) command [A-20](#)
- set command [2-287](#)
- setup command [2-289](#)
- setup express command [2-292](#)
- show access-lists command [2-294](#)
- show archive status command [2-297](#)
- show arp access-list command [2-298](#)
- show auto qos command [2-299](#)
- show boot command [2-303](#)
- show changes command [2-614](#)
- show class-map command [2-308](#)
- show cluster candidates command [2-311](#)
- show cluster command [2-309](#)
- show cluster members command [2-313](#)
- show controllers cpu-interface command [2-316](#)
- show controllers ethernet-controller command [2-318](#)
- show controllers power inline command [2-325](#)
- show controllers team command [2-327](#)
- show controllers utilization command [2-329](#)
- show controller utilization command [2-329](#)
- show current command [2-614](#)
- show dot1q-tunnel command [2-331](#)
- show dot1x command [2-332](#)
- show dtp [2-335](#)
- show env command [2-337](#)
- show errdisable detect command [2-339](#)
- show errdisable flap-values command [2-341](#)
- show errdisable recovery command [2-343](#)
- show etherchannel command [2-345](#)
- show flowcontrol command [2-348](#)
- show interfaces command [2-350](#)
- show interfaces counters command [2-359](#)
- show ip arp inspection command [2-361](#)
- show ipc command [2-385](#)
- show ip dhcp snooping binding command [2-365](#)
- show ip dhcp snooping command [2-364](#)
- show ip dhcp snooping database command [2-368](#)
- show ip igmp profile command [2-370](#)
- show ip igmp snooping command [2-372](#)
- show ip igmp snooping command querier detail [2-375, 2-380](#)
- show ip igmp snooping groups command [2-377](#)
- show ip igmp snooping mrouter command [2-379](#)
- show ip igmp snooping querier detail command [2-375, 2-380](#)
- show ip source binding command [2-382](#)
- show ip verify source command [2-383](#)
- show l2protocol-tunnel command [2-389](#)
- show lacp command [2-392](#)
- show mac access-group command [2-396](#)
- show mac address-table address command [2-400](#)
- show mac address-table aging time command [2-402](#)
- show mac address-table command [2-398](#)
- show mac address-table count command [2-404](#)
- show mac address-table dynamic command [2-406](#)
- show mac address-table interface command [2-408](#)
- show mac address-table notification command [2-410](#)
- show mac address-table static command [2-412](#)
- show mac address-table vlan command [2-414](#)
- show mls qos aggregate-policer command [2-417](#)
- show mls qos command [2-416](#)
- show mls qos input-queue command [2-418](#)
- show mls qos interface command [2-420](#)
- show mls qos maps command [2-424](#)
- show mls qos queue-set command [2-427](#)
- show mls qos vlan command [2-429](#)
- show monitor command [2-430](#)

- show mvr command [2-433](#)
- show mvr interface command [2-435](#)
- show mvr members command [2-437](#)
- show pagp command [2-439](#)
- show parser macro command [2-441](#)
- show platform acl command [C-2](#)
- show platform configuration command [C-3](#)
- show platform etherchannel command [C-4](#)
- show platform forward command [C-5](#)
- show platform frontend-controller command [C-7](#)
- show platform igmp snooping command [C-8](#)
- show platform ip multicast command [C-10](#)
- show platform ip unicast command [C-11](#)
- show platform ipv6 unicast command [C-13](#)
- show platform layer4op command [C-15](#)
- show platform mac-address-table command [C-16](#)
- show platform messaging command [C-17](#)
- show platform monitor command [C-18](#)
- show platform mvr table command [C-19](#)
- show platform pm command [C-20](#)
- show platform port-asic command [C-21](#)
- show platform port-security command [C-25](#)
- show platform qos command [C-26](#)
- show platform resource-manager command [C-27](#)
- show platform snmp counters command [C-29](#)
- show platform spanning-tree command [C-30](#)
- show platform stp-instance command [C-31](#)
- show platform team command [C-32](#)
- show platform vlan command [C-35](#)
- show policy-map command [2-444](#)
- show port security command [2-446](#)
- show power inline command [2-449](#)
- show proposed command [2-614](#)
- show sdm prefer command [2-451](#)
- show setup express command [2-454](#)
- show spanning-tree command [2-455](#)
- show storm-control command [2-461](#)
- show system mtu command [2-463](#)
- show trust command [2-592](#)
- show uddl command [2-464](#)
- show version command [2-467](#)
- show vlan access-map command [2-474](#)
- show vlan command [2-469](#)
- show vlan command, fields [2-471](#)
- show vlan filter command [2-475](#)
- show vmps command [2-476](#)
- show vtp command [2-479](#)
- shutdown command [2-483](#)
- shutdown threshold, Layer 2 protocol tunneling [2-158](#)
- shutdown vlan command [2-484](#)
- Smartports macros
 - See macros
- SNMP host, specifying [2-489](#)
- SNMP informs, enabling the sending of [2-485](#)
- snmp-server enable traps command [2-485](#)
- snmp-server host command [2-489](#)
- snmp trap mac-notification command [2-493](#)
- SNMP traps
 - enabling MAC address notification trap [2-493](#)
 - enabling the MAC address notification feature [2-175](#)
 - enabling the sending of [2-485](#)
- SoftPhone
 - See Cisco SoftPhone
- software images
 - deleting [2-67](#)
 - downloading [2-7](#)
 - upgrading [2-7](#)
 - uploading [2-12](#)
- software version, displaying [2-467](#)
- source ports, MVR [2-241](#)
- SPAN
 - configuring [2-233](#)
 - debug messages, display [B-21](#)
 - displaying [2-430](#)
 - filter SPAN traffic [2-233](#)

SPAN (continued)

sessions

- add interfaces to [2-233](#)

- displaying [2-430](#)

- start new [2-233](#)

- spanning-tree backbonefast command [2-495](#)

- spanning-tree bpdufilter command [2-496](#)

- spanning-tree bpduguard command [2-498](#)

- spanning-tree cost command [2-500](#)

- spanning-tree etherchannel command [2-502](#)

- spanning-tree extend system-id command [2-504](#)

- spanning-tree guard command [2-506](#)

- spanning-tree link-type command [2-508](#)

- spanning-tree loopguard default command [2-510](#)

- spanning-tree mode command [2-512](#)

- spanning-tree mst configuration command [2-514](#)

- spanning-tree mst cost command [2-516](#)

- spanning-tree mst forward-time command [2-518](#)

- spanning-tree mst hello-time command [2-519](#)

- spanning-tree mst max-age command [2-520](#)

- spanning-tree mst max-hops command [2-521](#)

- spanning-tree mst port-priority command [2-522](#)

- spanning-tree mst priority command [2-524](#)

- spanning-tree mst root command [2-525](#)

- spanning-tree portfast (global configuration) command [2-529](#)

- spanning-tree portfast (interface configuration) command [2-531](#)

- spanning-tree port-priority command [2-527](#)

Spanning Tree Protocol

- See STP

- spanning-tree uplinkfast command [2-533](#)

- spanning-tree vlan command [2-535](#)

- speed command [2-538](#)

- srr-queue bandwidth limit command [2-540](#)

- srr-queue bandwidth shape command [2-542](#)

- srr-queue bandwidth share command [2-544](#)

- SSH, configuring version [2-154](#)

- static-access ports, configuring [2-551](#)

- statistics, Ethernet group [2-279](#)

- sticky learning, enabling [2-565](#)

- storm-control command [2-546](#)

STP

- BackboneFast [2-495](#)

- counters, clearing [2-48](#)

- debug messages, display

- BackboneFast events [B-68](#)

- MSTP [B-71](#)

- optimized BPDUs handling [B-70](#)

- spanning-tree activity [B-66](#)

- switch shim [B-73](#)

- transmitted and received BPDUs [B-69](#)

- UplinkFast [B-75](#)

- detection of indirect link failures [2-495](#)

- enabling protocol tunneling for [2-158](#)

- EtherChannel misconfiguration [2-502](#)

- extended system ID [2-504](#)

- path cost [2-500](#)

- protocol modes [2-512](#)

- root port

- accelerating choice of new [2-533](#)

- loop guard [2-506](#)

- preventing from becoming designated [2-506](#)

- restricting which can be root [2-506](#)

- root guard [2-506](#)

- UplinkFast [2-533](#)

- root switch

- affects of extended system ID [2-504, 2-536](#)

- hello-time [2-535](#)

- interval between BPDU messages [2-535](#)

- interval between hello BPDU messages [2-535](#)

- max-age [2-535](#)

- port priority for selection of [2-527](#)

- primary or secondary [2-535](#)

- switch priority [2-535](#)

- state changes

- blocking to forwarding state [2-531](#)

- enabling BPDU filtering [2-496, 2-529](#)

STP (continued)

- state changes
 - enabling BPDU guard [2-498, 2-529](#)
 - enabling Port Fast [2-529, 2-531](#)
 - enabling timer to recover from error state [2-96](#)
 - forward-delay time [2-535](#)
 - length of listening and learning states [2-535](#)
 - shutting down Port Fast-enabled ports [2-529](#)
 - state information display [2-455](#)
 - VLAN options [2-524, 2-535](#)
- SVIs, creating [2-106](#)
- Switched Port Analyzer
- See SPAN
- switching characteristics
- modifying [2-549](#)
 - returning to interfaces [2-549](#)
- switchport access command [2-551](#)
- switchport backup interface command [2-553](#)
- switchport block command [2-555](#)
- switchport command [2-549](#)
- switchport host command [2-557](#)
- switchport mode command [2-558](#)
- switchport mode private-vlan command [2-561](#)
- switchport nonegotiate command [2-563](#)
- switchport port-security aging command [2-569](#)
- switchport port-security command [2-565](#)
- switchport priority extend command [2-571](#)
- switchport private-vlan command [2-573](#)
- switchport protected command [2-575](#)
- switchports, displaying [2-350](#)
- switchport trunk command [2-577](#)
- switchport voice vlan command [2-580](#)
- system env temperature threshold yellow command [2-582](#)
- system message logging [2-166](#)
- system message logging, save message to flash [2-167](#)
- system mtu command [2-584](#)
- system resource templates [2-280](#)

T

- tar files, creating, listing, and extracting [2-9](#)
- TDR, running [2-586](#)
- Telnet, using to communicate to cluster switches [2-273](#)
- temperature information, displaying [2-337](#)
- templates, system resources [2-280](#)
- test cable-diagnostics tdr command [2-586](#)
- traceroute mac command [2-587](#)
- traceroute mac ip command [2-590](#)
- trunking, VLAN mode [2-558](#)
- trunk mode [2-558](#)
- trunk ports [2-558](#)
- trunks, to non-DTP device [2-559](#)
- trusted boundary for QoS [2-230](#)
- trusted port states for QoS [2-230](#)
- tunnel ports, Layer 2 protocol, displaying [2-389](#)
- type (boot loader) command [A-23](#)

U

UDLD

- aggressive mode [2-594, 2-596](#)
 - debug messages, display [B-84](#)
 - enable globally [2-594](#)
 - enable per interface [2-596](#)
 - error recovery timer [2-96](#)
 - message timer [2-594](#)
 - normal mode [2-594, 2-596](#)
 - reset a shutdown interface [2-598](#)
 - status [2-464](#)
- udld command [2-594](#)
- udld port command [2-596](#)
- udld reset command [2-598](#)
- unicast storm control [2-546](#)
- UniDirectional Link Detection
- See UDLD
- unknown multicast traffic, preventing [2-555](#)
- unknown unicast traffic, preventing [2-555](#)

unset (boot loader) command [A-24](#)

upgrading

software images [2-7](#)

monitoring status of [2-297](#)

upgrading information

See release notes

UplinkFast, for STP [2-533](#)

user EXEC mode [1-2](#)

V

version (boot loader) command [A-26](#)

vlan (global configuration) command [2-599](#)

vlan (VLAN configuration) command [2-605](#)

vlan access-map command [2-611](#)

VLAN access map configuration mode [2-611](#)

VLAN access maps

actions [2-5](#)

displaying [2-474](#)

VLAN-based QoS [2-232](#)

VLAN configuration

rules [2-602, 2-607](#)

saving [2-599, 2-609](#)

VLAN configuration mode

commands

VLAN [2-605](#)

VTP [2-629](#)

description [1-4](#)

entering [2-613](#)

summary [1-2](#)

vlan database command [2-613](#)

vlan dot1q tag native command [2-616](#)

vlan filter command [2-618](#)

VLAN filters, displaying [2-475](#)

VLAN ID range [2-599, 2-605](#)

VLAN maps

applying [2-618](#)

creating [2-611](#)

VLAN maps (continued)

defining [2-190](#)

displaying [2-474](#)

VLAN Query Protocol

See VQP

VLANs

adding [2-599](#)

configuring [2-599, 2-605](#)

debug messages, display

ISL [B-80](#)

VLAN IOS file system error tests [B-78](#)

VLAN manager activity [B-76](#)

VTP [B-82](#)

displaying configurations [2-469](#)

extended-range [2-599](#)

MAC addresses

displaying [2-414](#)

number of [2-404](#)

media types [2-602, 2-607](#)

normal-range [2-599, 2-605](#)

private [2-561](#)

configuring [2-267](#)

displaying [2-469](#)

See also private VLANs

restarting [2-484](#)

saving the configuration [2-599](#)

shutting down [2-484](#)

SNMP traps for VTP [2-486, 2-490](#)

suspending [2-484](#)

variables [2-605](#)

VLAN Trunking Protocol

See VTP

VMPS

configuring servers [2-623](#)

displaying [2-476](#)

error recovery timer [2-97](#)

reconfirming dynamic VLAN assignments [2-620](#)

vmps reconfirm (global configuration) command [2-621](#)

vmps reconfirm (privileged EXEC) command [2-620](#)

- vmmps retry command [2-622](#)
- vmmps server command [2-623](#)
- voice VLAN
 - configuring [2-580](#)
 - setting port priority [2-571](#)
- VQP
 - and dynamic-access ports [2-552](#)
 - clearing client statistics [2-50](#)
 - displaying information [2-476](#)
 - per-server retry count [2-622](#)
 - reconfirmation interval [2-621](#)
 - reconfirming dynamic VLAN assignments [2-620](#)
- VTP
 - changing characteristics [2-625](#)
 - clearing pruning counters [2-51](#)
 - configuring
 - domain name [2-625, 2-629](#)
 - file name [2-625](#)
 - mode [2-625, 2-629](#)
 - password [2-625, 2-629](#)
 - counters display fields [2-480](#)
 - displaying information [2-479](#)
 - enabling
 - pruning [2-625, 2-629](#)
 - tunneling for [2-158](#)
 - Version 2 [2-625, 2-629](#)
 - mode [2-625, 2-629](#)
 - pruning [2-625, 2-629](#)
 - saving the configuration [2-599, 2-609](#)
 - statistics [2-479](#)
 - status [2-479](#)
 - status display fields [2-481](#)
- vtp (global configuration) command [2-625](#)
- vtp (VLAN configuration) command [2-629](#)

