



## INDEX

### A

aaa accounting dot1x command **2-1**  
aaa authentication dot1x command **2-3**  
AAA methods **2-3**  
abort command **2-626**  
access control entries  
    See ACES  
access control lists  
    See ACLs  
access groups  
    IP **2-112**  
        MAC, displaying **2-404**  
    access map configuration mode **2-196**  
    access mode **2-569**  
    access ports **2-569**  
    ACES **2-73, 2-258**  
    ACLs  
        deny **2-71**  
        displaying **2-300**  
        for non-IP protocols **2-178**  
        IP **2-112**  
        matching **2-196**  
        on Layer 2 interfaces **2-112**  
        permit **2-256**  
    action command **2-5**  
    address aliasing **2-245**  
    aggregate-port learner **2-250**  
    allowed VLANs **2-589**  
    apply command **2-626**  
    archive download-sw command **2-7**  
    archive tar command **2-9**  
    archive upload-sw command **2-12**

arp access-list command **2-14**  
audience **xvii**  
authorization state of controlled port **2-87**  
autonegotiation of duplex mode **2-96**  
auto qos voip command **2-16**

### B

BackboneFast, for STP **2-504**  
backup interfaces  
    configuring **2-565**  
    displaying **2-356**  
boot (boot loader) command **A-2**  
boot boothlpr command **2-21**  
boot config-file command **2-22**  
boot enable-break command **2-23**  
boot helper command **2-24**  
boot helper-config file command **2-25**  
booting  
    Cisco IOS image **2-28**  
    displaying environment variables **2-309**  
    interrupting **2-23**  
    manually **2-26**  
boot loader  
    accessing **A-1**  
booting  
    Cisco IOS image **A-2**  
    helper image **2-24**  
directories  
    creating **A-15**  
    displaying a list of **A-7**  
    removing **A-19**

boot loader (continued)

  displaying

    available commands **A-12**

    memory heap utilization **A-14**

    version **A-26**

environment variables

  described **A-20**

  displaying settings **A-20**

  location of **A-21**

  setting **A-20**

  unsetting **A-24**

files

  copying **A-5**

  deleting **A-6**

  displaying a list of **A-7**

  displaying the contents of **A-4, A-16, A-23**

  renaming **A-17**

file system

  formatting **A-10**

  initializing flash **A-9**

  running a consistency check **A-11**

loading helper images **A-13**

prompt **A-1**

resetting the system **A-18**

boot manual command **2-26**

boot private-config-file command **2-27**

boot system command **2-28**

BPDUs filtering, for spanning tree **2-505, 2-540**

BPDUs guard, for spanning tree **2-507, 2-540**

broadcast storm control **2-558**

## C

candidate switches

  See clusters

cat (boot loader) command **A-4**

caution, description **xviii**

CDP, enabling protocol tunneling for **2-165**

channel-group command **2-29**

channel-protocol command **2-32**

Cisco Network Assistant

  See Network Assistant **xviii**

Cisco SoftPhone

  auto-QoS configuration **2-16**

  trusting packets sent from **2-236**

class command **2-33**

class-map command **2-35**

class maps

  creating **2-35**

  defining the match criteria **2-198**

  displaying **2-314**

class of service

  See CoS

clear ip arp inspection log command **2-37**

clear ip arp inspection statistics command **2-38**

clear ipc command **2-40**

clear ip dhcp snooping database command **2-39**

clear l2protocol-tunnel counters command **2-41**

clear lacp command **2-42**

clear mac address-table command **2-43**

clear pagp command **2-45**

clear port-security command **2-46**

clear spanning-tree counters command **2-48**

clear spanning-tree detected-protocols command **2-49**

clear vmps statistics command **2-50**

clear vtp counters command **2-51**

cluster commander-address command **2-52**

cluster discovery hop-count command **2-54**

cluster enable command **2-55**

cluster holdtime command **2-57**

cluster member command **2-58**

cluster outside-interface command **2-60**

cluster requirements **xviii**

cluster run command **2-61**

- clusters
- adding candidates [2-58](#)
  - binding to HSRP group [2-62](#)
  - building manually [2-58](#)
  - communicating with
    - devices outside the cluster [2-60](#)
    - members by using Telnet [2-279](#)
  - debug messages, display [B-4](#)
  - displaying
    - candidate switches [2-317](#)
    - debug messages [B-4](#)
    - member switches [2-319](#)
    - status [2-315](#)
  - hop-count limit for extended discovery [2-54](#)
  - HSRP standby groups [2-62](#)
  - redundancy [2-62](#)
  - SNMP trap [2-495](#)
  - cluster standby-group command [2-62](#)
  - cluster timer command [2-64](#)
  - command modes defined [1-1](#)
  - commands changed in Cisco IOS Release 12.2(20)SE [1-5](#)
  - command switch
    - See clusters
  - configuration, initial
    - See getting started guide and hardware installation guide
  - configuration files
    - password recovery disable considerations [A-1](#)
    - specifying the name [2-22, 2-27](#)
  - configuring multiple interfaces [2-107](#)
  - config-vlan mode
    - commands [2-612](#)
    - description [1-4](#)
    - entering [2-611](#)
    - summary [1-2](#)
  - conventions
    - command [xviii](#)
    - for examples [xviii](#)
    - publication [xviii](#)
    - text [xviii](#)
- copy (boot loader) command [A-5](#)
- CoS
- assigning default value to incoming packets [2-206](#)
  - assigning to Layer 2 protocol packets [2-168](#)
  - overriding the incoming value [2-206](#)
- CoS-to-DSCP map [2-210](#)
- CPU ASIC statistics, displaying [2-322](#)
- 
- D**
- debug auto qos command [B-2](#)
- debug cluster command [B-4](#)
- debug dot1x command [B-6](#)
- debug dtp command [B-7](#)
- debug etherchannel command [B-8](#)
- debug ilpower command [B-9](#)
- debug interface command [B-12](#)
- debug ip dhcp snooping command [B-10](#)
- debug ip igmp filter command [B-13](#)
- debug ip igmp max-groups command [B-14](#)
- debug ip igmp snooping command [B-15](#)
- debug ip verify source packet command [B-11](#)
- debug lacp command [B-16](#)
- debug mac-notification command [B-17](#)
- debug matm command [B-18](#)
- debug monitor command [B-19](#)
- debug mvrdbg command [B-20](#)
- debug nvram command [B-21](#)
- debug pagp command [B-22](#)
- debug platform acl command [B-23](#)
- debug platform configuration command [B-31](#)
- debug platform cpu-queues command [B-24](#)
- debug platform device-manager command [B-26](#)
- debug platform dot1x command [B-27](#)
- debug platform etherchannel command [B-28](#)
- debug platform fallback-bridging command [B-29](#)
- debug platform forw-tcam command [B-30](#)
- debug platform ip arp inspection command [B-32](#)
- debug platform ip dhcp command [B-33](#)

debug platform ip igmp snooping command **B-34**  
 debug platform ip multicast command **B-36**  
 debug platform ip unicast command **B-38**  
 debug platform led command **B-40**  
 debug platform matm command **B-41**  
 debug platform messaging application command **B-42**  
 debug platform phy command **B-43**  
 debug platform pm command **B-45**  
 debug platform port-asic command **B-47**  
 debug platform port-security command **B-48**  
 debug platform qos-acl-tcam command **B-49**  
 debug platform remote-commands command **B-50**  
 debug platform resource-manager command **B-51**  
 debug platform snmp command **B-52**  
 debug platform span command **B-53**  
 debug platform supervisor-asic command **B-54**  
 debug platform sw-bridge command **B-55**  
 debug platform tcam command **B-56**  
 debug platform udld command **B-59**  
 debug platform vlan command **B-60**  
 debug pm command **B-61**  
 debug port-security command **B-63**  
 debug qos-manager command **B-64**  
 debug spanning-tree backbonefast command **B-67**  
 debug spanning-tree bpdu command **B-68**  
 debug spanning-tree bpdu-opt command **B-69**  
 debug spanning-tree command **B-65**  
 debug spanning-tree mstp command **B-70**  
 debug spanning-tree switch command **B-72**  
 debug spanning-tree uplinkfast command **B-74**  
 debug sw-vlan command **B-75**  
 debug sw-vlan ifs command **B-77**  
 debug sw-vlan notification command **B-78**  
 debug sw-vlan vtp command **B-80**  
 debug udld command **B-82**  
 debug vqpc command **B-84**  
 define interface-range command **2-65**  
 delete (boot loader) command **A-6**  
 delete command **2-67**

deny (ARP access-list configuration) command **2-69**  
 deny command **2-71**  
 detect mechanism, causes **2-97**  
 device manager requirements **xviii**  
 DHCP snooping  
     accepting untrusted packets from edge switch **2-138**  
 enabling  
     on a VLAN **2-143**  
     option 82 **2-136, 2-138**  
     trust on an interface **2-141**  
     error recovery timer **2-99**  
     rate limiting **2-140**  
 DHCP snooping binding database  
     binding file, configuring **2-134**  
 bindings  
     adding **2-132**  
     deleting **2-132**  
     displaying **2-374**  
     clearing database agent statistics **2-39**  
     database agent, configuring **2-134**  
     displaying  
         binding entries **2-374**  
         database agent status **2-377**  
         renewing **2-283**  
 dir (boot loader) command **A-7**  
 directories, deleting **2-67**  
 documentation, related **xviii**  
 document conventions **xviii**  
 domain name, VTP **2-637, 2-641**  
 dot1x command **2-74**  
 dot1x control-direction command **2-76**  
 dot1x default command **2-78**  
 dot1x guest-vlan command **2-79**  
 dot1x host-mode command **2-81**  
 dot1x initialize command **2-83**  
 dot1x max-req command **2-84, 2-85**  
 dot1x multiple-hosts command **2-86**  
 dot1x port-control command **2-87**  
 dot1x re-authenticate command **2-89**

- dot1x re-authentication command **2-90**  
 dot1x reauthentication command **2-91**  
 dot1x timeout command **2-93**  
 dropping packets, with ACL matches **2-5**  
 drop threshold, Layer 2 protocol tunneling **2-165**  
 DSCP-to-CoS map **2-210**  
 DSCP-to-DSCP-mutation map **2-210**  
 DTP **2-570**  
 DTP flap  
   error detection for **2-97**  
   error recovery timer **2-99**  
 DTP negotiation **2-574**  
 duplex command **2-95**  
 dynamic-access ports  
   configuring **2-563**  
   restrictions **2-564**  
 dynamic ARP inspection  
   ARP ACLs  
     apply to a VLAN **2-117**  
     define **2-14**  
     deny packets **2-69**  
     display **2-304**  
     permit packets **2-254**  
   clear  
     log buffer **2-37**  
     statistics **2-38**  
   display  
     ARP ACLs **2-304**  
     configuration and operating state **2-369**  
     log buffer **2-369**  
     statistics **2-369**  
     trust state and rate limit **2-369**  
   enable per VLAN **2-127**  
   error detection for **2-97**  
   error recovery timer **2-99**  
   log buffer  
     clear **2-37**  
     configure **2-121**  
     display **2-369**  
   dynamic ARP inspection (continued)  
     rate-limit incoming ARP packets **2-119**  
     statistics  
       clear **2-38**  
       display **2-369**  
     trusted interface state **2-123**  
     type of packet logged **2-129**  
     validation checks **2-125**  
   dynamic auto VLAN membership mode **2-569**  
   dynamic desirable VLAN membership mode **2-569**  
   Dynamic Host Configuration Protocol (DHCP)  
     See DHCP snooping  
   Dynamic Trunking Protocol  
     See DTP
- 
- E**
- EAP-request/identity frame  
 maximum number to send **2-85**  
 response time before retransmitting **2-93**  
 encapsulation methods **2-589**  
 environment variables, displaying **2-309**  
 errdisable detect cause command **2-97**  
 errdisable recovery command **2-99**  
 error conditions, displaying **2-347**  
 error disable detection **2-97**  
 error-disabled interfaces, displaying **2-356**  
 EtherChannel  
   assigning Ethernet interface to channel group **2-29**  
   creating port-channel logical interface **2-105**  
   debug EtherChannel/PAgP, display **B-8**  
   debug platform-specific events, display **B-28**  
   displaying **2-351**  
   enabling Layer 2 protocol tunneling for  
     LACP **2-166**  
     PAgP **2-166**  
     UDLD **2-166**  
   interface information, displaying **2-356**

- EtherChannel (continued)
- LACP
    - clearing channel-group information **2-42**
    - debug messages, display **B-16**
    - displaying **2-400**
    - modes **2-29**
    - port priority for hot-standby ports **2-169**
    - restricting a protocol **2-32**
    - system priority **2-171**
  - load-distribution methods **2-266**
- PAgP
- aggregate-port learner **2-250**
  - clearing channel-group information **2-45**
  - debug messages, display **B-22**
  - displaying **2-447**
  - error detection for **2-97**
  - error recovery timer **2-99**
  - learn method **2-250**
  - modes **2-29**
  - physical-port learner **2-250**
  - priority of interface for transmitted traffic **2-252**
- Ethernet controller, internal register display **2-324**
- Ethernet statistics, collecting **2-285**
- examples, conventions for **xviii**
- exit command **2-626**
- extended discovery of candidate switches **2-54**
- extended-range VLANs
- and allowed VLAN list **2-589**
  - and pruning-eligible list **2-589**
  - configuring **2-611**
- extended system ID for STP **2-513**
- 
- F**
- fan information, displaying **2-343**
- file name, VTP **2-637**
- files, deleting **2-67**
- flash\_init (boot loader) command **A-9**
- G**
- global configuration mode **1-2, 1-3**
- 
- H**
- hardware ACL statistics **2-300**
- help (boot loader) command **A-12**
- hierarchical policy maps **2-264**
- hop-count limit for clusters **2-54**
- host connection, port configuration **2-568**
- host ports, private VLANs **2-572**
- Hot Standby Router Protocol
- See HSRP
- HSRP
- binding HSRP group to cluster **2-62**
  - standby group **2-62**
- 
- I**
- IEEE 802.1Q trunk ports and native VLANs **2-628**
- IEEE 802.1Q tunnel ports
- configuring **2-569**
  - displaying **2-337**
  - limitations **2-570**

- IEEE 802.1x  
 and switchport modes **2-570**  
 violation error recovery **2-99**  
 See also port-based authentication
- IGMP filters  
 applying **2-144**  
 debug messages, display **B-13**
- IGMP groups, setting maximum **2-145**
- IGMP maximum groups, debugging **B-14**
- IGMP profiles  
 creating **2-147**  
 displaying **2-379**
- IGMP snooping  
 displaying **2-380, 2-383, 2-387**  
 enabling **2-149**  
 enabling the configurable-leave timer **2-152**  
 multicast table **1-5, 2-385**  
 querier **2-154**  
 report suppression **2-156**
- images  
 See software images
- Immediate-Leave feature, MVR **2-247**
- Immediate-Leave processing **2-149**
- initial configuration  
 See getting started guide and hardware installation guide
- interface configuration mode **1-2, 1-4**
- interface port-channel command **2-105**
- interface range command **2-107**
- interface-range macros **2-65**
- interfaces  
 assigning Ethernet interface to channel group **2-29**  
 configuring **2-95**  
 configuring multiple **2-107**  
 creating port-channel logical **2-105**  
 debug messages, display **B-12**  
 disabling **2-493**  
 displaying the MAC address table **2-416**  
 restarting **2-493**
- interface speed, configuring **2-550**
- interface vlan command **2-110**  
 internal registers, displaying **2-324, 2-333**  
 Internet Group Management Protocol  
 See IGMP
- invalid GBIC  
 error detection for **2-97**  
 error recovery timer **2-99**
- ip access-group command **2-112**
- ip address command **2-115**
- IP addresses, setting **2-115**
- IP address matching **2-196**
- ip arp inspection filter vlan command **2-117**
- ip arp inspection limit command **2-119**
- ip arp inspection log-buffer command **2-121**
- ip arp inspection trust command **2-123**
- ip arp inspection validate command **2-125**
- ip arp inspection vlan command **2-127**
- ip arp inspection vlan logging command **2-129**
- IP DHCP snooping  
 See DHCP snooping
- ip dhcp snooping binding command **2-132**
- ip dhcp snooping command **2-131**
- ip dhcp snooping database command **2-134**
- ip dhcp snooping information option allow-untrusted command **2-138**
- ip dhcp snooping information option command **2-136**
- ip dhcp snooping limit rate command **2-140**
- ip dhcp snooping trust command **2-141**
- ip dhcp snooping verify command **2-142**
- ip dhcp snooping vlan command **2-143**
- ip igmp filter command **2-144**
- ip igmp max-groups command **2-145**
- ip igmp profile command **2-147**
- ip igmp snooping command **2-149**
- ip igmp snooping querier command **2-154**
- ip igmp snooping report-suppression command **2-156**
- ip igmp snooping vlan last-member-query-interval command **2-152**
- IP multicast addresses **2-244**

- IP phones
- auto-QoS configuration **2-16**
  - trusting packets sent from **2-236**
- IP-precedence-to-DSCP map **2-210**
- ip snap forwarding command **2-158**
- ip source binding command **2-159**
- IP source guard
- disabling **2-163**
  - displaying
    - binding entries **2-389**
    - configuration **2-391**
    - dynamic binding entries only **2-374**
  - enabling **2-163**
  - static IP source bindings **2-159**
- ip ssh command **2-161**
- IPv6 SDM template **2-286**
- ip verify source command **2-163**
- Layer 2 traceroute
- IP addresses **2-602**
  - MAC addresses **2-599**
- Layer 3 mode, enabling **2-561**
- line configuration mode **1-2, 1-5**
- Link Aggregation Control Protocol
- See EtherChannel
- link flap
- error detection for **2-97**
  - error recovery timer **2-99**
- load\_helper (boot loader) command **A-13**
- load-distribution methods for EtherChannel **2-266**
- logging event power-inline-status command **2-173**
- logging file command **2-174**
- logical interface **2-105**
- loopback error
- detection for **2-97**
  - recovery timer **2-99**
- loop guard, for spanning tree **2-515, 2-519**

**J**

- jumbo frames
- See MTU

**L**

- l2protocol-tunnel command **2-165**
- l2protocol-tunnel cos command **2-168**
- LACP
- See EtherChannel
- lacp port-priority command **2-169**
- lacp system-priority command **2-171**
- Layer 2 mode, enabling **2-561**
- Layer 2 protocol ports, displaying **2-397**
- Layer 2 protocol-tunnel
- error detection for **2-97**
  - error recovery timer **2-99**
- Layer 2 protocol tunnel counters **2-41**
- Layer 2 protocol tunneling error recovery **2-166**

**M**

- mac access-group command **2-176**
- MAC access-groups, displaying **2-404**
- MAC access list configuration mode **2-178**
- mac access-list extended command **2-178**
- MAC access lists **2-71**
- MAC addresses
- displaying
    - aging time **2-410**
    - all **2-408**
    - dynamic **2-414**
    - notification settings **2-418**
    - number of addresses in a VLAN **2-412**
    - per interface **2-416**
    - per VLAN **2-422**
    - static **2-420**
    - static and dynamic entries **2-406**

- MAC addresses (continued)
- dynamic
    - aging time **2-180**
    - deleting **2-43**
    - displaying **2-414**
  - enabling MAC address notification **2-181**
  - matching **2-196**
  - static
    - adding and removing **2-183**
    - displaying **2-420**
    - dropping on an interface **2-184**
  - tables **2-408**
- MAC address notification, debugging **B-17**
- mac address-table aging-time **2-176, 2-196**
- mac address-table aging-time command **2-180**
- mac address-table notification command **2-181**
- mac address-table static command **2-183**
- mac address-table static drop command **2-184**
- macro apply command **2-186**
- macro description command **2-189**
- macro global command **2-190**
- macro global description command **2-193**
- macro name command **2-194**
- macros
- adding a description **2-189**
  - adding a global description **2-193**
  - applying **2-190**
  - creating **2-194**
  - displaying **2-449**
  - interface range **2-65, 2-107**
  - specifying parameter values **2-190**
  - tracing **2-190**
- manual
- audience **xvii**
  - purpose of **xvii**
- maps
- QoS
    - defining **2-210**
    - displaying **2-432**
  - maps (continued)
    - VLAN
      - creating **2-623**
      - defining **2-196**
      - displaying **2-483**
    - match (access-map configuration) command **2-196**
    - match (class-map configuration) command **2-198**
    - maximum transmission unit
      - See MTU
    - mdix auto command **2-200**
    - member switches
      - See clusters
    - memory (boot loader) command **A-14**
    - mkdir (boot loader) command **A-15**
    - mls qos aggregate-policer command **2-204**
    - mls qos command **2-202**
    - mls qos cos command **2-206**
    - mls qos dscp-mutation command **2-208**
    - mls qos map command **2-210**
    - mls qos queue-set output buffers command **2-214**
    - mls qos queue-set output threshold command **2-216**
    - mls qos rewrite ip dscp command **2-218**
    - mls qos srr-queue input bandwidth command **2-220**
    - mls qos srr-queue input buffers command **2-222**
    - mls qos-srr-queue input cos-map command **2-224**
    - mls qos srr-queue input dscp-map command **2-226**
    - mls qos srr-queue input priority-queue command **2-228**
    - mls qos srr-queue input threshold command **2-230**
    - mls qos-srr-queue output cos-map command **2-232**
    - mls qos srr-queue output dscp-map command **2-234**
    - mls qos trust command **2-236**
    - mls qos vlan-based command **2-238**
    - mode, MVR **2-244**
    - Mode button, and password recovery **2-289**
    - modes, commands **1-1**
    - monitor session command **2-239**
    - more (boot loader) command **A-16**

- MSTP
- displaying [2-464](#)
  - interoperability [2-49](#)
  - link type [2-517](#)
  - MST region
    - aborting changes [2-523](#)
    - applying changes [2-523](#)
    - configuration name [2-523](#)
    - configuration revision number [2-523](#)
    - current or pending display [2-523](#)
    - displaying [2-464](#)
    - MST configuration mode [2-523](#)
    - VLANs-to-instance mapping [2-523](#)
    - path cost [2-525](#)
    - protocol mode [2-521](#)
    - restart protocol migration process [2-49](#)
    - root port
      - loop guard [2-515](#)
      - preventing from becoming designated [2-515](#)
      - restricting which can be root [2-515](#)
      - root guard [2-515](#)
    - root switch
      - affects of extended system ID [2-513](#)
      - hello-time [2-528, 2-536](#)
      - interval between BPDU messages [2-529](#)
      - interval between hello BPDU messages [2-528, 2-536](#)
      - max-age [2-529](#)
      - maximum hop count before discarding BPDU [2-530](#)
      - port priority for selection of [2-532](#)
      - primary or secondary [2-536](#)
      - switch priority [2-535](#)
  - MSTP (continued)
    - state changes
      - blocking to forwarding state [2-542](#)
      - enabling BPDU filtering [2-505, 2-540](#)
      - enabling BPDU guard [2-507, 2-540](#)
      - enabling Port Fast [2-540, 2-542](#)
      - forward-delay time [2-527](#)
      - length of listening and learning states [2-527](#)
      - rapid transition to forwarding [2-517](#)
      - shutting down Port Fast-enabled ports [2-540](#)
      - state information display [2-463](#)
    - MTU
      - configuring size [2-596](#)
      - displaying global setting [2-472](#)
    - multicast group address, MVR [2-247](#)
    - multicast groups, MVR [2-245](#)
    - multicast router learning method [2-149](#)
    - multicast router ports, configuring [2-149](#)
    - multicast storm control [2-558](#)
    - multicast VLAN, MVR [2-244](#)
    - multicast VLAN registration
      - See MVR
    - multiple hosts on authorized port [2-81](#)
    - Multiple Spanning Tree Protocol
      - See MSTP
    - MVR
      - and address aliasing [2-245](#)
      - configuring [2-244](#)
      - configuring interfaces [2-247](#)
      - debug messages, display [B-20](#)
      - displaying [2-441](#)
      - displaying interface information [2-443](#)
      - members, displaying [2-445](#)
      - mvr (global configuration) command [2-244](#)
      - mvr (interface configuration) command [2-247](#)
      - mvr vlan group command [2-248](#)

**N**

native VLANs **2-589**  
 native VLAN tagging **2-628**  
 Network Assistant requirements **xviii**  
 nonegotiate  
   DTP messaging **2-574**  
   speed **2-550**  
 nonegotiate, speed **2-550**  
 non-IP protocols  
   denying **2-71**  
   forwarding **2-256**  
 non-IP traffic access lists **2-178**  
 non-IP traffic forwarding  
   denying **2-71**  
   permitting **2-256**  
 normal-range VLANs **2-611, 2-617**  
 note, description **xviii**  
 no vlan command **2-611, 2-621**

**P**

PAgP  
   See EtherChannel  
 pagp learn-method command **2-250**  
 pagp port-priority command **2-252**  
 password, VTP **2-637, 2-641**  
 password-recovery mechanism, enabling and  
   disabling **2-289**  
 permit (ARP access-list configuration) command **2-254**  
 permit (MAC access-list configuration) command **2-256**  
 per-VLAN spanning-tree plus  
   See STP  
 physical-port learner **2-250**  
 PID, displaying **2-368**  
 PIM-DVMRP, as multicast router learning method **2-149**

## PoE

configuring the power management mode **2-268**  
 displaying controller register values **2-331**  
 displaying power management information **2-457**  
 logging of status **2-173**  
 police aggregate command **2-261**  
 police command **2-259**  
 policed-DSCP map **2-210**  
 policy-map command **2-263**  
 policy maps  
   applying to an interface **2-291, 2-295**  
   creating **2-263**  
   displaying **2-452**  
   hierarchical **2-264**  
   policers  
     displaying **2-425**  
     for a single class **2-259**  
     for multiple classes **2-204, 2-261**  
     policed-DSCP map **2-210**  
   traffic classification  
     defining the class **2-33**  
     defining trust states **2-604**  
     setting DSCP or IP precedence values **2-293**  
 Port Aggregation Protocol  
   See EtherChannel  
 port-based authentication  
   AAA method list **2-3**  
   debug messages, display **B-6**  
   enabling IEEE 802.1x  
     globally **2-74**  
     per interface **2-87**  
   guest VLAN **2-79**  
   host modes **2-81**  
   IEEE 802.1x AAA accounting methods **2-1**  
   initialize an interface **2-83**  
   manual control of authorization state **2-87**  
   multiple hosts on authorized port **2-81**

port-based authentication (continued)  
 periodic re-authentication  
   enabling **2-91**  
   time between attempts **2-93**  
 quiet period between failed authentication exchanges **2-93**  
 re-authenticating IEEE 802.1x-enabled ports **2-89**  
 resetting configurable IEEE 802.1x parameters **2-78**  
 switch-to-authentication server retransmission time **2-93**  
 switch-to-client frame-retransmission number **2-84 to 2-85**  
 switch-to-client retransmission time **2-93**  
 port-channel load-balance command **2-266**  
 Port Fast, for spanning tree **2-542**  
 port ranges, defining **2-65**  
 ports, debugging **B-61**  
 ports, protected **2-587**  
 port security  
   aging **2-581**  
   debug messages, display **B-63**  
   enabling **2-576**  
   violation error recovery **2-99**  
 port trust states for QoS **2-236**  
 port types, MVR **2-247**  
 power information, displaying **2-343**  
 power inline command **2-268**  
 Power over Ethernet  
   See PoE  
 priority-queue command **2-271**  
 private-vlan command **2-273**  
 private-vlan mapping command **2-276**  
 private VLANs  
   association **2-585**  
   configuring **2-273**  
   configuring ports **2-572**  
   displaying **2-478**  
   host ports **2-572**

private VLANs (continued)  
 mapping  
   configuring **2-585**  
   displaying **2-356**  
   promiscuous ports **2-572**  
 privileged EXEC mode **1-2, 1-3**  
 product identification information, displaying **2-368**  
 promiscuous ports, private VLANs **2-572**  
 protected ports, displaying **2-362**  
 pruning  
   VLANs **2-589**  
 VTP  
   displaying interface information **2-356**  
   enabling **2-637, 2-641**  
 pruning-eligible VLAN list **2-591**  
 PVST+  
   See STP

**Q**

QoS  
 auto-QoS  
   configuring **2-16**  
   debug messages, display **1-5, B-2**  
   displaying **2-305**  
 class maps  
   creating **2-35**  
   defining the match criteria **2-198**  
   displaying **2-314**  
   defining the CoS value for an incoming packet **2-206**  
   displaying configuration information **2-305, 2-424**  
   DSCP transparency **2-218**  
   DSCP trusted ports  
    applying DSCP-to-DSCP-mutation map to **2-208**  
    defining DSCP-to-DSCP-mutation map **2-210**

QoS (continued)

- egress queues
  - allocating buffers **2-214**
  - defining the CoS output queue threshold map **2-232**
  - defining the DSCP output queue threshold map **2-234**
  - displaying buffer allocations **2-428**
  - displaying CoS output queue threshold map **2-432**
  - displaying DSCP output queue threshold map **2-432**
  - displaying queueing strategy **2-428**
  - displaying queue-set settings **2-435**
  - enabling bandwidth shaping and scheduling **2-554**
  - enabling bandwidth sharing and scheduling **2-556**
  - limiting the maximum output on a port **2-552**
  - mapping a port to a queue-set **2-278**
  - mapping CoS values to a queue and threshold **2-232**
  - mapping DSCP values to a queue and threshold **2-234**
  - setting maximum and reserved memory allocations **2-216**
  - setting WTD thresholds **2-216**
- enabling **2-202**
- ingress queues
  - allocating buffers **2-222**
  - assigning SRR scheduling weights **2-220**
  - defining the CoS input queue threshold map **2-224**
  - defining the DSCP input queue threshold map **2-226**
  - displaying buffer allocations **2-428**
  - displaying CoS input queue threshold map **2-432**
  - displaying DSCP input queue threshold map **2-432**
  - displaying queueing strategy **2-428**
  - displaying settings for **2-426**
  - enabling the priority queue **2-228**
  - mapping CoS values to a queue and threshold **2-224**
  - mapping DSCP values to a queue and threshold **2-226**
  - setting WTD thresholds **2-230**
- maps
  - defining **2-210, 2-224, 2-226, 2-232, 2-234**
  - displaying **2-432**

QoS (continued)

- policy maps
  - applying an aggregate policer **2-261**
  - applying to an interface **2-291, 2-295**
  - creating **2-263**
  - defining policers **2-204, 2-259**
  - displaying policers **2-425**
  - displaying policy maps **2-452**
  - hierarchical **2-264**
  - policed-DSCP map **2-210**
  - setting DSCP or IP precedence values **2-293**
  - traffic classifications **2-33**
  - trust states **2-604**
  - port trust states **2-236**
  - queues, enabling the expedite **2-271**
  - statistics
    - in-profile and out-of-profile packets **2-428**
    - packets enqueued or dropped **2-428**
    - sent and received CoS values **2-428**
    - sent and received DSCP values **2-428**
  - trusted boundary for IP phones **2-236**
  - VLAN-based **2-238**
- quality of service
  - See QoS
- querytime, MVR **2-244**
- queue-set command **2-278**

---

## R

- rapid per-VLAN spanning-tree plus
  - See STP
- rapid PVST+
  - See STP
- rcommand command **2-279**
- re-authenticating IEEE 802.1x-enabled ports **2-89**
- re-authentication
  - periodic **2-91**
  - time between attempts **2-93**
- receiver ports, MVR **2-247**

receiving flow-control packets **2-102**

recovery mechanism

  causes **2-99**

  display **2-311, 2-345, 2-349**

  timer interval **2-100**

redundancy for cluster switches **2-62**

remote-span command **2-281**

Remote Switched Port Analyzer

  See RSPAN

rename (boot loader) command **A-17**

renew ip dhcp snooping database command **2-283**

requirements

  cluster **xviii**

  device manager **xviii**

  Network Assistant **xviii**

reset (boot loader) command **A-18**

reset command **2-626**

resource templates, displaying **2-459**

rmdir (boot loader) command **A-19**

rmon collection stats command **2-285**

root guard, for spanning tree **2-515**

routed ports

  IP addresses on **2-116**

  number supported **2-116**

RSPAN

  configuring **2-239**

  displaying **2-438**

  filter RSPAN traffic **2-239**

  remote-span command **2-281**

  sessions

    add interfaces to **2-239**

    displaying **2-438**

    start new **2-239**

RSPAN (continued)

  displaying **2-459**

  dual IPv4 and IPv6 **2-286**

  secure ports, limitations **2-578**

  sending flow-control packets **2-102**

  service password-recovery command **2-289**

  service-policy command **2-291**

  set (boot loader) command **A-20**

  set command **2-293**

  setup command **2-295**

  setup express command **2-298**

  show access-lists command **2-300**

  show archive status command **2-303**

  show arp access-list command **2-304**

  show auto qos command **2-305**

  show boot command **2-309**

  show cable-diagnostics tdr command **2-311**

  show changes command **2-626**

  show class-map command **2-314**

  show cluster candidates command **2-317**

  show cluster command **2-315**

  show cluster members command **2-319**

  show controllers cpu-interface command **2-322**

  show controllers ethernet-controller command **2-324**

  show controllers power inline command **2-331**

  show controllers tcam command **2-333**

  show controller utilization command **2-335**

  show current command **2-626**

  show dot1q-tunnel command **2-337**

  show dot1x command **2-338**

  show dtp **2-341**

  show env command **2-343**

  show errdisable detect command **2-345**

  show errdisable flap-values command **2-347**

  show errdisable recovery command **2-349**

  show etherchannel command **2-351**

  show flowcontrol command **2-354**

  show interfaces command **2-356**

  show interfaces counters command **2-365**

## S

sdm prefer command **2-286**

SDM templates

  allowed resources **2-287**

- show inventory command **2-368**  
 show ip arp inspection command **2-369**  
 show ipc command **2-393**  
 show ip dhcp snooping binding command **2-374**  
 show ip dhcp snooping command **2-373**  
 show ip dhcp snooping database command **2-377**  
 show ip igmp profile command **2-379**  
 show ip igmp snooping command **2-380**  
 show ip igmp snooping groups command **2-385**  
 show ip igmp snooping mrouter command **2-387**  
 show ip igmp snooping querier detail command **2-383**  
 show ip source binding command **2-389**  
 show ip verify source command **2-391**  
 show l2protocol-tunnel command **2-397**  
 show lacp command **2-400**  
 show mac access-group command **2-404**  
 show mac address-table address command **2-408**  
 show mac address-table aging time command **2-410**  
 show mac address-table command **2-406**  
 show mac address-table count command **2-412**  
 show mac address-table dynamic command **2-414**  
 show mac address-table interface command **2-416**  
 show mac address-table notification command **2-418**  
 show mac address-table static command **2-420**  
 show mac address-table vlan command **2-422**  
 show mls qos aggregate-policer command **2-425**  
 show mls qos command **2-424**  
 show mls qos input-queue command **2-426**  
 show mls qos interface command **2-428**  
 show mls qos maps command **2-432**  
 show mls qos queue-set command **2-435**  
 show mls qos vlan command **2-437**  
 show monitor command **2-438**  
 show mvr command **2-441**  
 show mvr interface command **2-443**  
 show mvr members command **2-445**  
 show pagp command **2-447**  
 show parser macro command **2-449**  
 show platform acl command **C-2**  
 show platform backup interface command **C-3**  
 show platform configuration command **C-4**  
 show platform etherchannel command **C-5**  
 show platform forward command **C-6**  
 show platform frontend-controller command **C-8**  
 show platform igmp snooping command **C-9**  
 show platform ip multicast command **C-11**  
 show platform ip unicast command **C-12**  
 show platform ipv6 unicast command **C-16**  
 show platform layer4op command **C-18**  
 show platform mac-address-table command **C-19**  
 show platform messaging command **C-20**  
 show platform monitor command **C-21**  
 show platform mvr table command **C-22**  
 show platform pm command **C-23**  
 show platform port-asic command **C-24**  
 show platform port-security command **C-28**  
 show platform qos command **C-29**  
 show platform resource-manager command **C-30**  
 show platform snmp counters command **C-32**  
 show platform spanning-tree command **C-33**  
 show platform stp-instance command **C-34**  
 show platform tcam command **C-35**  
 show platform vlan command **C-38**  
 show policy-map command **2-452**  
 show port security command **2-454**  
 show power inline command **2-457**  
 show proposed command **2-626**  
 show sdm prefer command **2-459**  
 show setup express command **2-462**  
 show spanning-tree command **2-463**  
 show storm-control command **2-470**  
 show system mtu command **2-472**  
 show trust command **2-604**  
 show udld command **2-473**  
 show version command **2-476**  
 show vlan access-map command **2-483**  
 show vlan command **2-478**  
 show vlan command, fields **2-480**

- show vlan filter command **2-484**  
 show vmps command **2-485**  
 show vtp command **2-488**  
 shutdown command **2-493**  
 shutdown threshold, Layer 2 protocol tunneling **2-165**  
 shutdown vlan command **2-494**  
 Smartports macros  
   See macros  
 SNMP host, specifying **2-498**  
 SNMP informs, enabling the sending of **2-495**  
 snmp-server enable traps command **2-495**  
 snmp-server host command **2-498**  
 snmp trap mac-notification command **2-502**  
 SNMP traps  
   enabling MAC address notification trap **2-502**  
   enabling the MAC address notification feature **2-181**  
   enabling the sending of **2-495**  
 SoftPhone  
   See Cisco SoftPhone  
 software images  
   deleting **2-67**  
   downloading **2-7**  
   upgrading **2-7**  
   uploading **2-12**  
 software version, displaying **2-476**  
 source ports, MVR **2-247**  
 SPAN  
   configuring **2-239**  
   debug messages, display **B-19**  
   displaying **2-438**  
   filter SPAN traffic **2-239**  
   sessions  
    add interfaces to **2-239**  
    displaying **2-438**  
    start new **2-239**  
 spanning **2-544**  
 spanning-tree backbonefast command **2-504**  
 spanning-tree bpdufilter command **2-505**  
 spanning-tree bpduguard command **2-507**  
   spanning-tree cost command **2-509**  
   spanning-tree etherchannel command **2-511**  
   spanning-tree extend system-id command **2-513**  
   spanning-tree guard command **2-515**  
   spanning-tree link-type command **2-517**  
   spanning-tree loopguard default command **2-519**  
   spanning-tree mode command **2-521**  
   spanning-tree mst configuration command **2-523**  
   spanning-tree mst cost command **2-525**  
   spanning-tree mst forward-time command **2-527**  
   spanning-tree mst hello-time command **2-528**  
   spanning-tree mst max-age command **2-529**  
   spanning-tree mst max-hops command **2-530**  
   spanning-tree mst port-priority command **2-532**  
   spanning-tree mst pre-standard command **2-534**  
   spanning-tree mst priority command **2-535**  
   spanning-tree mst root command **2-536**  
   spanning-tree portfast (global configuration) command **2-540**  
   spanning-tree portfast (interface configuration) command **2-542**  
   spanning-tree port-priority command **2-538**  
 Spanning Tree Protocol  
   See STP  
 spanning-tree transmit hold-count command **2-544**  
 spanning-tree uplinkfast command **2-545**  
 spanning-tree vlan command **2-547**  
 speed command **2-550**  
 srr-queue bandwidth limit command **2-552**  
 srr-queue bandwidth shape command **2-554**  
 srr-queue bandwidth share command **2-556**  
 SSH, configuring version **2-161**  
 static-access ports, configuring **2-563**  
 statistics, Ethernet group **2-285**  
 sticky learning, enabling **2-576**  
 storm-control command **2-558**

- STP
- BackboneFast **2-504**
  - counters, clearing **2-48**
  - debug messages, display
    - BackboneFast events **B-67**
    - MSTP **B-70**
    - optimized BPDUs handling **B-69**
    - spanning-tree activity **B-65**
    - switch shim **B-72**
    - transmitted and received BPDUs **B-68**
    - UplinkFast **B-74**
  - detection of indirect link failures **2-504**
  - enabling protocol tunneling for **2-165**
  - EtherChannel misconfiguration **2-511**
  - extended system ID **2-513**
  - path cost **2-509**
  - protocol modes **2-521**
  - root port
    - accelerating choice of new **2-545**
    - loop guard **2-515**
    - preventing from becoming designated **2-515**
    - restricting which can be root **2-515**
    - root guard **2-515**
    - UplinkFast **2-545**
  - root switch
    - affects of extended system ID **2-513, 2-548**
    - hello-time **2-547**
    - interval between BDPU messages **2-547**
    - interval between hello BPDU messages **2-547**
    - max-age **2-547**
    - port priority for selection of **2-538**
    - primary or secondary **2-547**
    - switch priority **2-547**
  - STP (continued)
  - state changes
    - blocking to forwarding state **2-542**
    - enabling BPDU filtering **2-505, 2-540**
    - enabling BPDU guard **2-507, 2-540**
    - enabling Port Fast **2-540, 2-542**
  - enabling timer to recover from error state **2-99**
  - forward-delay time **2-547**
  - length of listening and learning states **2-547**
  - shutting down Port Fast-enabled ports **2-540**
  - state information display **2-463**
  - VLAN options **2-535, 2-547**
  - SVIs, creating **2-110**
  - Switched Port Analyzer
    - See SPAN
  - switching characteristics
    - modifying **2-561**
    - returning to interfaces **2-561**
  - switchport access command **2-563**
  - switchport backup interface command **2-565**
  - switchport block command **2-567**
  - switchport command **2-561**
  - switchport host command **2-568**
  - switchport mode command **2-569**
  - switchport mode private-vlan command **2-572**
  - switchport nonegotiate command **2-574**
  - switchport port-security aging command **2-581**
  - switchport port-security command **2-576**
  - switchport priority extend command **2-583**
  - switchport private-vlan command **2-585**
  - switchport protected command **2-587**
  - switchports, displaying **2-356**
  - switchport trunk command **2-589**
  - switchport voice vlan command **2-592**
  - system env temperature threshold yellow command **2-594**
  - system message logging **2-173**
  - system message logging, save message to flash **2-174**
  - system mtu command **2-596**
  - system resource templates **2-286**

## T

tar files, creating, listing, and extracting **2-9**  
TDR, running **2-598**  
Telnet, using to communicate to cluster switches **2-279**  
temperature information, displaying **2-343**  
templates, system resources **2-286**  
test cable-diagnostics tdr command **2-598**  
traceroute mac command **2-599**  
traceroute mac ip command **2-602**  
trunking, VLAN mode **2-569**  
trunk mode **2-569**  
trunk ports **2-569**  
trunks, to non-DTP device **2-570**  
trusted boundary for QoS **2-236**  
trusted port states for QoS **2-236**  
tunnel ports, Layer 2 protocol, displaying **2-397**  
type (boot loader) command **A-23**

## U

UDLD  
  aggressive mode **2-606, 2-608**  
  debug messages, display **B-82**  
  enable globally **2-606**  
  enable per interface **2-608**  
  error recovery timer **2-99**  
  message timer **2-606**  
  normal mode **2-606, 2-608**  
  reset a shutdown interface **2-610**  
  status **2-473**  
udld command **2-606**  
udld port command **2-608**  
udld reset command **2-610**  
unicast storm control **2-558**  
UniDirectional Link Detection  
  See UDLD  
unknown multicast traffic, preventing **2-567**  
unknown unicast traffic, preventing **2-567**

unset (boot loader) command **A-24**  
upgrading  
  software images **2-7**  
  monitoring status of **2-303**  
upgrading information  
  See release notes  
UplinkFast, for STP **2-545**  
user EXEC mode **1-2**

## V

version (boot loader) command **A-26**  
vlan (global configuration) command **2-611**  
vlan (VLAN configuration) command **2-617**  
vlan access-map command **2-623**  
VLAN access map configuration mode **2-623**  
VLAN access maps  
  actions **2-5**  
  displaying **2-483**  
VLAN-based QoS **2-238**  
VLAN configuration  
  rules **2-614, 2-619**  
  saving **2-611, 2-621**  
VLAN configuration mode  
  commands  
    VLAN **2-617**  
    VTP **2-641**  
    description **1-4**  
    entering **2-625**  
    summary **1-2**  
  vlan database command **2-625**  
  vlan dot1q tag native command **2-628**  
  vlan filter command **2-630**  
  VLAN filters, displaying **2-484**  
  VLAN ID range **2-611, 2-617**

VLAN maps  
 applying **2-630**  
 creating **2-623**  
 defining **2-196**  
 displaying **2-483**

VLAN Query Protocol  
 See VQP

VLANs  
 adding **2-611**  
 configuring **2-611, 2-617**  
 debug messages, display  
   ISL **B-78**  
   VLAN IOS file system error tests **B-77**  
   VLAN manager activity **B-75**  
   VTP **B-80**  
 displaying configurations **2-478**  
 extended-range **2-611**

MAC addresses  
 displaying **2-422**  
 number of **2-412**

media types **2-614, 2-619**

normal-range **2-611, 2-617**

private **2-572**  
 configuring **2-273**  
 displaying **2-478**  
 See also private VLANs

restarting **2-494**  
 saving the configuration **2-611**  
 shutting down **2-494**

SNMP traps for VTP **2-496, 2-499**

suspending **2-494**

variables **2-617**

VLAN Trunking Protocol  
 See VTP

VMPS  
 configuring servers **2-635**  
 displaying **2-485**  
 error recovery timer **2-100**  
 reconfirming dynamic VLAN assignments **2-632**

vmps reconfirm (global configuration) command **2-633**  
 vmps reconfirm (privileged EXEC) command **2-632**  
 vmps retry command **2-634**  
 vmps server command **2-635**  
 voice VLAN  
   configuring **2-592**  
   setting port priority **2-583**

VQP  
 and dynamic-access ports **2-564**  
 clearing client statistics **2-50**  
 displaying information **2-485**  
 per-server retry count **2-634**  
 reconfirmation interval **2-633**  
 reconfirming dynamic VLAN assignments **2-632**

VTP  
 changing characteristics **2-637**  
 clearing pruning counters **2-51**  
 configuring  
   domain name **2-637, 2-641**  
   file name **2-637**  
   mode **2-637, 2-641**  
   password **2-637, 2-641**  
   counters display fields **2-489**  
   displaying information **2-488**  
   enabling  
     pruning **2-637, 2-641**  
     tunneling for **2-165**  
     Version 2 **2-637, 2-641**  
   mode **2-637, 2-641**  
   pruning **2-637, 2-641**  
   saving the configuration **2-611, 2-621**  
   statistics **2-488**  
   status **2-488**  
   status display fields **2-490**

vtp (global configuration) command **2-637**  
 vtp (VLAN configuration) command **2-641**

