



## Preface ix

Document Conventions	ix
Related Documentation	x
Obtaining Documentation and Submitting a Service Request	x

## CHAPTER 1

## Product Overview 1-1

### Switch Models 1-1

### Front Panel 1-10

10/100/1000 Ethernet Ports	1-15
100M/1G/2.5G/5G/10G Ethernet Ports	1-16
PoE+ and Cisco UPOE Ports	1-16
Management Ports	1-16
USB Mini-Type B Port	1-17
USB Type A Port	1-17
Uplink Ports	1-18
SFP, SFP+, and QSFP+ Modules	1-18

### LEDs 1-18

SYST LED	1-20
Port LEDs and Modes	1-21
USB Console LED	1-23
ACTV LED	1-23
STACK LED	1-24
RPS LED	1-24
PoE LED	1-25
Uplink port LEDs	1-25

### UID/Beacon LED 1-28

### Rear Panel 1-28

RJ-45 Console Port LED	1-31
StackWise Ports	1-31
Power Supply Modules	1-32
Power Supply for Catalyst 3650-24TS/PS/TD/PD and Catalyst 3650-48TS/PS/FS/TD/PD/FD/FQ/PQ/TQ Switches	1-32
Power Supply Module for Catalyst 3650-24PDM and Catalyst 3650-48FQM Switches	1-33
Power Supply for Catalyst 3650-8X24UQ/PD and Catalyst 3650-12X48FD/UQ/UR/UZ Switches	1-34

- Power Supply Module LEDs 1-35
- RPS Connector 1-35
  - Cisco RPS 2300 1-36
- Fan Modules 1-36
- Fan Airflow for Catalyst 3650-24PDM and Catalyst 3650-48FQM Switches 1-37
- Management Ports 1-37
  - Ethernet Management Port 1-37
  - RJ-45 Console Port 1-38
- Management Options 1-38
  - Network Configurations 1-39

**CHAPTER 2**

**Switch Installation 2-1**

- Preparing for Installation 2-1
  - Safety Warnings 2-1
  - Installation Guidelines 2-3
  - Tools and Equipment 2-4
  - Verifying Switch Operation 2-4
    - Powering Off the Switch 2-5
- Planning a Switch Data Stack 2-5
  - Switch Stacking Guidelines 2-5
  - Data Stack Cabling Configurations 2-6
  - Data Stack Bandwidth and Partitioning Examples 2-6
  - Power-On Sequence for Switch Data Stacks 2-8
  - Changes to Switch Stack Membership 2-8
- Installing the Switch 2-9
  - Rack-Mounting a Switch 2-9
    - Attaching the Rack-Mount Brackets 2-11
    - Mounting the Switch in a Rack 2-14
  - Table-Mounting or Shelf-Mounting 2-15
  - After Installing the Switch 2-15
- Installing the StackWise Ports 2-16
- Installing and Removing an SFP and SFP+ Module 2-18
  - Installing an SFP and SFP+ Module 2-18
  - Removing an SFP or SFP+ Module 2-20
- Connecting a Device to an Ethernet Port 2-20
  - 10/100/1000 Ethernet Port Connections 2-20
  - 100M/1G/2.5G/5G/10G Ethernet Port Connections 2-21
  - PoE+ Port and Cisco UPOE Connections 2-21
- Where To Go Next 2-22

**CHAPTER 3****Installing the Fan 3-1**

- Overview of the Fan Modules 3-1
- Fan Module Installation 3-2
  - Installation Guidelines 3-2
  - Installing a Fan Module 3-3
- Finding the Fan Module Serial Number 3-4

**CHAPTER 4****Power Supply Installation 4-1**

- Power Supply Module Overview 4-1
- Installation Guidelines 4-6
- Installing or Replacing an AC Power Supply 4-7
- Installing a DC Power Supply 4-8
  - Equipment That You Need 4-9
  - Grounding the Switch 4-10
  - Installing the DC Power Supply in the Switch 4-12
  - Wiring the DC Input Power Source 4-12
- Finding the Power Supply Module Serial Number 4-13

**CHAPTER 5****Troubleshooting 5-1**

- Diagnosing Problems 5-1
  - Switch POST Results 5-1
  - Switch LEDs 5-2
  - Switch Connections 5-2
    - Bad or Damaged Cable 5-2
    - Ethernet and Fiber Cables 5-2
    - Link Status 5-2
    - 10/100/1000 Port Connections 5-3
    - PoE and PoE+ Port Connections 5-3
    - SFP Modules 5-3
    - Interface Settings 5-4
    - Ping End Device 5-4
    - Spanning Tree Protocol Loops 5-4
  - Switch Performance 5-5
    - Speed, Duplex, and Autonegotiation 5-5
    - Autonegotiation and Network Interface Cards 5-5
    - Cabling Distance 5-5
- Resetting the Switch 5-5
- Finding the Switch's Serial Number 5-6

Replacing a Failed Data Stack Member 5-6

**APPENDIX 1**

**Technical Specifications 1-1**

Switch Specifications 1-1  
 Power Supply Module Specifications 1-4  
 Fan Module Specifications 1-6

**APPENDIX 2**

**Connector and Cable Specifications 2-1**

Connector Specifications 2-1  
     10/100/1000 Ports 2-1  
     100M/1G/2.5G/5G/10G Ports 2-2  
     10-Gigabit Ethernet CX1 (SFP+ Copper) Connectors 2-2  
     SFP and SFP+ Modules 2-3  
     10/100/1000 Ethernet Management Port 2-4  
     Console Port 2-4  
 Cable and Adapter Specifications 2-5  
     StackWise Cables 2-5  
         StackWise Cables Minimum Bend Radius and Coiled Diameter 2-6  
     StackWise Adapters 2-6  
         Locating the StackWise Adapter Serial Number 2-7  
     StackWise Adapter Blanks 2-7  
     SFP and SFP+ Module Cable Specifications 2-8  
     Four Twisted-Pair Cable Pinouts 2-8  
     Two Twisted-Pair Cable Pinouts 2-9  
     Identifying a Crossover Cable 2-9  
     Console Port Adapter Pinouts 2-9

**APPENDIX 3**

**Configuring the Switch with the CLI-Based Setup Program 3-1**

Accessing the CLI 3-1  
     Accessing the CLI Through Express Setup 3-1  
     Accessing the CLI Through a Console Port 3-3  
         RJ-45 Console Port 3-3  
         USB Console Port 3-3  
     Installing the Cisco Microsoft Windows USB Device Driver 3-4  
     Uninstalling the Cisco USB Driver for Microsoft Windows 3-5  
         Uninstalling the Cisco USB Driver for Microsoft Windows Using the Add or Remove Programs Utility 3-5  
         Uninstalling the Cisco USB Driver for Microsoft Windows Using the Setup.exe Program 3-6  
 Entering the Initial Configuration Information 3-6

IP Settings 3-6  
Configuring the Setup Program 3-6

