



## Interface and Hardware Commands

---

- [debug ilpower](#), on page 3
- [debug interface](#), on page 4
- [debug lldp packets](#), on page 5
- [debug platform poe](#), on page 6
- [duplex](#), on page 7
- [errdisable detect cause](#), on page 9
- [errdisable recovery cause](#), on page 11
- [errdisable recovery interval](#), on page 13
- [interface](#), on page 14
- [interface range](#), on page 16
- [ip mtu](#), on page 18
- [ipv6 mtu](#), on page 19
- [lldp \(interface configuration\)](#), on page 20
- [logging event power-inline-status](#), on page 22
- [mdix auto](#), on page 23
- [mode \(power-stack configuration\)](#), on page 24
- [network-policy](#), on page 26
- [network-policy profile \(global configuration\)](#), on page 27
- [power efficient-ethernet auto](#), on page 28
- [power-priority](#) , on page 29
- [power inline](#), on page 31
- [power inline police](#), on page 34
- [power supply](#), on page 36
- [show eee](#), on page 38
- [show env](#), on page 41
- [show errdisable detect](#), on page 44
- [show errdisable recovery](#), on page 45
- [show interfaces](#), on page 46
- [show interfaces counters](#), on page 50
- [show interfaces switchport](#), on page 52
- [show interfaces transceiver](#), on page 54
- [show memory platform](#), on page 57
- [show module](#), on page 60

- [show mgmt-infra trace messages ilpower](#), on page 61
- [show mgmt-infra trace messages ilpower-ha](#), on page 63
- [show mgmt-infra trace messages platform-mgr-poe](#), on page 64
- [show network-policy profile](#), on page 65
- [show platform hardware fed switch forward](#), on page 66
- [show platform resources](#), on page 69
- [show platform software ilpower](#), on page 70
- [show platform software process list](#), on page 72
- [show platform software process slot switch](#), on page 74
- [show platform software status control-processor](#), on page 76
- [show processes cpu platform monitor](#), on page 79
- [show processes memory platform](#), on page 81
- [show power inline](#), on page 84
- [show stack-power](#) , on page 90
- [show system mtu](#), on page 92
- [show tech-support](#) , on page 93
- [speed](#), on page 95
- [stack-power](#) , on page 97
- [switchport block](#), on page 99
- [system mtu](#), on page 100
- [test mcu read-register](#), on page 101
- [voice-signaling vlan \(network-policy configuration\)](#), on page 103
- [voice vlan \(network-policy configuration\)](#), on page 105

## debug ilpower

To enable debugging of the power controller and Power over Ethernet (PoE) system, use the **debug ilpower** command in privileged EXEC mode. To disable debugging, use the **no** form of this command.

**debug ilpower** {**cdp** | **event** | **ha** | **ipc** | **police** | **port** | **powerman** | **registries** | **scp** | **sense** | **upoe**}  
**no debug ilpower** {**cdp** | **event** | **ha** | **ipc** | **police** | **port** | **powerman** | **registries** | **scp** | **sense** | **upoe**}

### Syntax Description

<b>cdp</b>	Displays PoE Cisco Discovery Protocol (CDP) debug messages.
<b>event</b>	Displays PoE event debug messages.
<b>ha</b>	Displays PoE high-availability messages.
<b>ipc</b>	Displays PoE Inter-Process Communication (IPC) debug messages.
<b>police</b>	Displays PoE police debug messages.
<b>port</b>	Displays PoE port manager debug messages.
<b>powerman</b>	Displays PoE power management debug messages.
<b>registries</b>	Displays PoE registries debug messages.
<b>scp</b>	Displays PoE SCP debug messages.
<b>sense</b>	Displays PoE sense debug messages.
<b>upoe</b>	Displays Cisco UPOE debug messages.

### Command Default

Debugging is disabled.

### Command Modes

Privileged EXEC

### Command History

Release	Modification
Cisco IOS XE 3.3SE	This command was introduced.

### Usage Guidelines

This command is supported only on PoE-capable switches.

When you enable debugging on a switch stack, it is enabled only on the active switch. To enable debugging on a stack member, you can start a session from the active switch by using the **session switch-number** EXEC command. Then enter the **debug** command at the command-line prompt of the stack member.

# debug interface

To enable debugging of interface-related activities, use the **debug interface** command in privileged EXEC mode. To disable debugging, use the **no** form of this command.

**debug interface** {*interface-id* | **counters** {**exceptions** | **protocol memory**} | **states**}

**no debug interface** {*interface-id* | **counters** {**exceptions** | **protocol memory**} | **states**}

## Syntax Description

<i>interface-id</i>	ID of the physical interface. Displays debug messages for the specified physical port, identified by type switch number/module number/port, for example, gigabitethernet 1/0/2.
<b>counters</b>	Displays counters debugging information.
<b>exceptions</b>	Displays debug messages when a recoverable exceptional condition occurs during the computation of the interface packet and data rate statistics.
<b>protocol memory</b>	Displays debug messages for memory operations of protocol counters.
<b>states</b>	Displays intermediary debug messages when an interface's state transitions.

## Command Default

Debugging is disabled.

## Command Modes

Privileged EXEC

## Command History

Release	Modification
Cisco IOS XE 3.3SE	This command was introduced.

## Usage Guidelines

If you do not specify a keyword, all debug messages appear.

The **undebug interface** command is the same as the **no debug interface** command.

When you enable debugging on a switch stack, it is enabled only on the active switch. To enable debugging on a stack member, you can start a session from the active switch by using the **session** *switch-number* EXEC command. Then enter the **debug** command at the command-line prompt of the stack member.

# debug lldp packets

To enable debugging of Link Layer Discovery Protocol (LLDP) packets, use the **debug lldp packets** command in privileged EXEC mode. To disable debugging, use the **no** form of this command.

**debug lldp packets**  
**no debug lldp packets**

---

**Syntax Description** This command has no arguments or keywords.

---

**Command Default** Debugging is disabled.

---

**Command Modes** Privileged EXEC

---

<b>Command History</b>	<b>Release</b>	<b>Modification</b>
	Cisco IOS XE 3.3SE	This command was introduced.

---

---

**Usage Guidelines** The **undebg lldp packets** command is the same as the **no debug lldp packets** command.

When you enable debugging on a switch stack, it is enabled only on the active switch. To enable debugging on a stack member, you can start a session from the active switch by using the **session *switch-number*** EXEC command.

## debug platform poe

To enable debugging of a Power over Ethernet (PoE) port, use the **debug platform poe** command in privileged EXEC mode. To disable debugging, use the **no** form of this command.

```
debug platform poe [{error | info}] [switch switch-number]  
no debug platform poe [{error | info}] [switch switch-number]
```

<b>Syntax Description</b>	<b>error</b>	(Optional) Displays PoE-related error debug messages.
	<b>info</b>	(Optional) Displays PoE-related information debug messages.
	<b>switch</b> <i>switch-number</i>	(Optional) Specifies the stack member. This keyword is supported only on stacking-capable switches.
<b>Command Default</b>	Debugging is disabled.	
<b>Command Modes</b>	Privileged EXEC	
<b>Command History</b>	<b>Release</b>	<b>Modification</b>
	Cisco IOS XE 3.3SE	This command was introduced.
<b>Usage Guidelines</b>	The <b>undebg platform poe</b> command is the same as the <b>no debug platform poe</b> command.	

# duplex

To specify the duplex mode of operation for a port, use the **duplex** command in interface configuration mode. To return to the default value, use the **no** form of this command.

**duplex** {**auto** | **full** | **half**}  
**no duplex** {**auto** | **full** | **half**}

## Syntax Description

**auto** Enables automatic duplex configuration. The port automatically detects whether it should run in full- or half-duplex mode, depending on the attached device mode.

**full** Enables full-duplex mode.

**half** Enables half-duplex mode (only for interfaces operating at 10 or 100 Mbps). You cannot configure half-duplex mode for interfaces operating at 1000 or 10,000 Mbps.

## Command Default

For Gigabit Ethernet ports, the default is **auto**.

For 100BASE-*x* (where *x* is -BX, -FX, -FX-FE, or -LX) SFP modules, the default is **half**.

## Command Modes

Interface configuration (config-if)

## Command History

Release	Modification
Cisco IOS XE 3.3SE	This command was introduced.

## Usage Guidelines

For Gigabit Ethernet ports, setting the port to **auto** has the same effect as specifying **full** if the attached device does not autonegotiate the duplex parameter.

You cannot configure the duplex mode on 10-Gigabit Ethernet ports; it is always **full**.

Duplex options are not supported on the 1000BASE-*x* or 10GBASE-*x* (where *x* is -BX, -CWDM, -LX, -SX, or -ZX) small form-factor pluggable (SFP) modules.



**Note** Half-duplex mode is supported on Gigabit Ethernet interfaces if the duplex mode is **auto** and the connected device is operating at half duplex. However, you cannot configure these interfaces to operate in half-duplex mode.

Certain ports can be configured to be either full duplex or half duplex. How this command is applied depends on the device to which the switch is attached.

If both ends of the line support autonegotiation, we highly recommend using the default autonegotiation settings. If one interface supports autonegotiation and the other end does not, configure duplex and speed on both interfaces, and use the **auto** setting on the supported side.

If the speed is set to **auto**, the switch negotiates with the device at the other end of the link for the speed setting and then forces the speed setting to the negotiated value. The duplex setting remains as configured on each end of the link, which could result in a duplex setting mismatch.

You can configure the duplex setting when the speed is set to **auto**.

**Caution**

Changing the interface speed and duplex mode configuration might shut down and reenables the interface during the reconfiguration.

You can verify your setting by entering the **show interfaces** privileged EXEC command.

**Examples**

This example shows how to configure an interface for full-duplex operation:

```
Device> enable
Device# configure terminal
Device(config)# interface gigabitethernet 1/0/1
Device(config-if)# duplex full
```

## errdisable detect cause

To enable error-disable detection for a specific cause or for all causes, use the **errdisable detect cause** command in global configuration mode. To disable the error-disable detection feature, use the **no** form of this command.

```
errdisable detect cause {all | arp-inspection | bpduguard shutdown vlan | dhcp-rate-limit | dtp-flap |
gbic-invalid | inline-power | l2ptguard | link-flap | loopback | pagp-flap | pppoe-ia-rate-limit |
security-violation shutdown vlan | sfp-config-mismatch}
no errdisable detect cause {all | arp-inspection | bpduguard shutdown vlan | dhcp-rate-limit | dtp-flap |
gbic-invalid | inline-power | l2ptguard | link-flap | loopback | pagp-flap | pppoe-ia-rate-limit |
security-violation shutdown vlan | sfp-config-mismatch}
```

Syntax	Description
<b>all</b>	Enables error detection for all error-disabled causes.
<b>arp-inspection</b>	Enables error detection for dynamic Address Resolution Protocol (ARP) inspection.
<b>bpduguard shutdown vlan</b>	Enables per-VLAN error-disable for BPDU guard.
<b>dhcp-rate-limit</b>	Enables error detection for DHCP snooping.
<b>dtp-flap</b>	Enables error detection for the Dynamic Trunking Protocol (DTP) flapping.
<b>gbic-invalid</b>	Enables error detection for an invalid Gigabit Interface Converter (GBIC) module.  <b>Note</b> This error refers to an invalid small form-factor pluggable (SFP) module.
<b>inline-power</b>	Enables error detection for the Power over Ethernet (PoE) error-disabled cause.  <b>Note</b> This keyword is supported only on switches with PoE ports.
<b>l2ptguard</b>	Enables error detection for a Layer 2 protocol-tunnel error-disabled cause.
<b>link-flap</b>	Enables error detection for link-state flapping.
<b>loopback</b>	Enables error detection for detected loopbacks.
<b>pagp-flap</b>	Enables error detection for the Port Aggregation Protocol (PAgP) flap error-disabled cause.
<b>pppoe-ia-rate-limit</b>	Enables error detection for the PPPoE Intermediate Agent rate-limit error-disabled cause.
<b>security-violation shutdown vlan</b>	Enables voice aware 802.1x security.
<b>sfp-config-mismatch</b>	Enables error detection on an SFP configuration mismatch.

**Command Default** Detection is enabled for all causes. All causes, except per-VLAN error disabling, are configured to shut down the entire port.

**Command Modes** Global configuration

<b>Command History</b>	<b>Release</b>	<b>Modification</b>
	Cisco IOS XE 3.3SE	This command was introduced.

**Usage Guidelines** A cause (such as a link-flap or dhcp-rate-limit) is the reason for the error-disabled state. When a cause is detected on an interface, the interface is placed in an error-disabled state, an operational state that is similar to a link-down state.

When a port is error-disabled, it is effectively shut down, and no traffic is sent or received on the port. For the bridge protocol data unit (BPDU) guard, voice-aware 802.1x security, and port-security features, you can configure the switch to shut down only the offending VLAN on the port when a violation occurs, instead of shutting down the entire port.

If you set a recovery mechanism for the cause by entering the **errdisable recovery** global configuration command, the interface is brought out of the error-disabled state and allowed to retry the operation when all causes have timed out. If you do not set a recovery mechanism, you must enter the **shutdown** and then the **no shutdown** commands to manually recover an interface from the error-disabled state.

To verify your settings, enter the **show errdisable detect** privileged EXEC command.

This example shows how to enable error-disabled detection for the link-flap error-disabled cause:

```
Device(config)# errdisable detect cause link-flap
```

This command shows how to globally configure BPDU guard for a per-VLAN error-disabled state:

```
Device(config)# errdisable detect cause bpduguard shutdown vlan
```

This command shows how to globally configure voice-aware 802.1x security for a per-VLAN error-disabled state:

```
Device(config)# errdisable detect cause security-violation shutdown vlan
```

You can verify your setting by entering the **show errdisable detect** privileged EXEC command.

## errdisable recovery cause

To enable the error-disabled mechanism to recover from a specific cause, use the **errdisable recovery cause** command in global configuration mode. To return to the default setting, use the **no** form of this command.

```
errdisable recovery cause {all | arp-inspection | bpduguard | channel-misconfig | dhcp-rate-limit |
dtp-flap | gbic-invalid | inline-power | l2ptguard | link-flap | loopback | mac-limit | pagp-flap |
port-mode-failure | pppoe-ia-rate-limit | psecure-violation | security-violation | sfp-config-mismatch |
storm-control | udld}
```

```
no errdisable recovery cause {all | arp-inspection | bpduguard | channel-misconfig | dhcp-rate-limit |
dtp-flap | gbic-invalid | inline-power | l2ptguard | link-flap | loopback | mac-limit | pagp-flap |
port-mode-failure | pppoe-ia-rate-limit | psecure-violation | security-violation | sfp-config-mismatch |
storm-control | udld}
```

### Syntax Description

<b>all</b>	Enables the timer to recover from all error-disabled causes.
<b>arp-inspection</b>	Enables the timer to recover from the Address Resolution Protocol (ARP) inspection error-disabled state.
<b>bpduguard</b>	Enables the timer to recover from the bridge protocol data unit (BPDU) guard error-disabled state.
<b>channel-misconfig</b>	Enables the timer to recover from the EtherChannel misconfiguration error-disabled state.
<b>dhcp-rate-limit</b>	Enables the timer to recover from the DHCP snooping error-disabled state.
<b>dtp-flap</b>	Enables the timer to recover from the Dynamic Trunking Protocol (DTP) flap error-disabled state.
<b>gbic-invalid</b>	Enables the timer to recover from an invalid Gigabit Interface Converter (GBIC) module error-disabled state.  <b>Note</b> This error refers to an invalid small form-factor pluggable (SFP) error-disabled state.
<b>inline-power</b>	Enables the timer to recover from the Power over Ethernet (PoE) error-disabled state.  This keyword is supported only on switches with PoE ports.
<b>l2ptguard</b>	Enables the timer to recover from a Layer 2 protocol tunnel error-disabled state.
<b>link-flap</b>	Enables the timer to recover from the link-flap error-disabled state.
<b>loopback</b>	Enables the timer to recover from a loopback error-disabled state.
<b>mac-limit</b>	Enables the timer to recover from the mac limit error-disabled state.

<b>pagp-flap</b>	Enables the timer to recover from the Port Aggregation Protocol (PAgP)-flap error-disabled state.
<b>port-mode-failure</b>	Enables the timer to recover from the port mode change failure error-disabled state.
<b>pppoe-ia-rate-limit</b>	Enables the timer to recover from the PPPoE IA rate limit error-disabled state.
<b>psecure-violation</b>	Enables the timer to recover from a port security violation disable state.
<b>security-violation</b>	Enables the timer to recover from an IEEE 802.1x-violation disabled state.
<b>sfp-config-mismatch</b>	Enables error detection on an SFP configuration mismatch.
<b>storm-control</b>	Enables the timer to recover from a storm control error.
<b>udld</b>	Enables the timer to recover from the UniDirectional Link Detection (UDLD) error-disabled state.

**Command Default** Recovery is disabled for all causes.

**Command Modes** Global configuration

**Command History**

Release	Modification
Cisco IOS XE 3.3SE	This command was introduced.

**Usage Guidelines**

A cause (such as all or BPDU guard) is defined as the reason that the error-disabled state occurred. When a cause is detected on an interface, the interface is placed in the error-disabled state, an operational state similar to link-down state.

When a port is error-disabled, it is effectively shut down, and no traffic is sent or received on the port. For the BPDU guard and port-security features, you can configure the switch to shut down only the offending VLAN on the port when a violation occurs, instead of shutting down the entire port.

If you do not enable the recovery for the cause, the interface stays in the error-disabled state until you enter the **shutdown** and the **no shutdown** interface configuration commands. If you enable the recovery for a cause, the interface is brought out of the error-disabled state and allowed to retry the operation again when all the causes have timed out.

Otherwise, you must enter the **shutdown** and then the **no shutdown** commands to manually recover an interface from the error-disabled state.

You can verify your settings by entering the **show errdisable recovery** privileged EXEC command.

**Examples**

This example shows how to enable the recovery timer for the BPDU guard error-disabled cause:

```
Device(config)# errdisable recovery cause bpduguard
```

## errdisable recovery interval

To specify the time to recover from an error-disabled state, use the **errdisable recovery interval** command in global configuration mode. To return to the default setting, use the **no** form of this command.

**errdisable recovery interval** *timer-interval*  
**no errdisable recovery interval** *timer-interval*

### Syntax Description

*timer-interval* Time to recover from the error-disabled state. The range is 30 to 86400 seconds. The same interval is applied to all causes. The default interval is 300 seconds.

### Command Default

The default recovery interval is 300 seconds.

### Command Modes

Global configuration

### Command History

Release	Modification
Cisco IOS XE 3.3SE	This command was introduced.

### Usage Guidelines

The error-disabled recovery timer is initialized at a random differential from the configured interval value. The difference between the actual timeout value and the configured value can be up to 15 percent of the configured interval.

You can verify your settings by entering the **show errdisable recovery** privileged EXEC command.

### Examples

This example shows how to set the timer to 500 seconds:

```
Device(config)# errdisable recovery interval 500
```

# interface

To configure an interface, use the **interface** command.

```
interface {Auto-Template Auto-Template interface-number | GigabitEthernet Gigabit Ethernet interface number | Group VI Group VI interface number Internal Interface Internal Interface number Loopback Loopback interface number Null Null interface number Port-channel interface number Port-channel interface number TenGigabitEthernet interface number Tunnel interface number Vlan interface number }
```

Syntax Description		
<b>Auto-Template</b> <i>Auto-template interface-number</i>		Enables you to configure a auto-template interface. The range is 1 to 999.
<b>GigabitEthernet</b> <i>Gigabit Ethernet interface number</i>		Enables you to configure a Gigabit Ethernet IEEE 802.3z interface. The range is from 0 to 9.
<b>Group VI</b> <i>Group VI interface number</i>		Enables you to configure a Group VI interface. The range is from 0 to 9.
<b>Internal Interface</b> <i>Internal Interface</i>		Enables you to configure an internal interface.
<b>Loopback</b> <i>Loopback Interface number</i>		Enables you to configure a loopback interface. The range is from 0 to 2147483647.
<b>Null</b> <i>Null interface number</i>		Enables you to configure a null interface. The default value is 0.
<b>Port-channel</b> <i>interface number</i>		Enables you to configure a port-channel interface. The range is from 1 to 128.
<b>TenGigabitEthernet</b> <i>interface number</i>		Enables you to configure a 10-Gigabit Ethernet interface. The range is from 0 to 9.
<b>Tunnel</b> <i>interface number</i>		Enables you to configure a tunnel interface. The range is from 0 to 2147483647.
<b>Vlan</b> <i>interface number</i>		Enables you to configure a switch VLAN. The range is from 0 to 4098.

**Command Default** None

**Command Modes** Global configuration

Command History	Release	Modification
	Cisco IOS XE 3.3SE	This command was introduced.

**Usage Guidelines** You can not use the "no" form of this command.

The following example shows how to configure a tunnel interface:

```
Device# interface Tunnel 15
```

# interface range

To configure an interface range, use the **interface range** command.

**interface range** {**Auto-Template** *interface-number* | **GigabitEthernet** *switch-number/slot-number/port-number* | **Loopback** *interface-number* | **Null** *interface-number* | **Port-channel** *interface-number* | **TenGigabitEthernet** *switch-number/slot-number/port-number* | **Tunnel** *interface-number* | **Vlan** *interface-number* }

<b>Auto-Template</b> <i>interface-number</i>	Enables you to configure an auto-template interface. The range is from 1 to 999.
<b>GigabitEthernet</b> <i>switch-number/slot-number/port-number</i>	Enables you to configure a Gigabit Ethernet IEEE 802.3z interface. <ul style="list-style-type: none"> <li>• <i>switch-number</i>— Switch ID. The range is from 1 to 8.</li> <li>• <i>slot-number</i> — Slot number. The range is from 0 to 1.</li> <li>• <i>port-number</i> — Port number. The range is from 1 to 48.</li> </ul>
<b>Loopback</b> <i>interface-number</i>	Enables you to configure a loopback interface. The range is from 0 to 2147483647.
<b>Null</b> <i>interface-number</i>	Enables you to configure a null interface. The default value is 0.
<b>Port-channel</b> <i>interface-number</i>	Enables you to configure a port-channel interface. The range is from 1 to 128.
<b>TenGigabitEthernet</b> <i>switch-number/slot-number/port-number</i>	Enables you to configure a 10-Gigabit Ethernet interface. <ul style="list-style-type: none"> <li>• <i>switch-number</i>— Switch ID. The range is from 1 to 8.</li> <li>• <i>slot-number</i> — Slot number. The range is from 0 to 1.</li> <li>• <i>port-number</i> — Port number. The range is from 1 to 24 and 37 to 48.</li> </ul>
<b>Tunnel</b> <i>interface-number</i>	Enables you to configure a tunnel interface. The range is from 0 to 2147483647.
<b>Vlan</b> <i>interface-number</i>	Enables you to configure a switch VLAN. The range is from 1 to 4094.

---

**Command Default** None

---

**Command Modes** Global configuration

---

<b>Command History</b>	<b>Release</b>	<b>Modification</b>
	Cisco IOS XE 3.3SE	This command was introduced.

---

This example shows how you can configure interface range:

```
Device(config)# interface range vlan 1-100
```

## ip mtu

To set the IP maximum transmission unit (MTU) size of routed packets on all routed ports of the switch or switch stack, use the **ip mtu** command in interface configuration mode. To restore the default IP MTU size, use the **no** form of this command.

```
ip mtu bytes
no ip mtu bytes
```

<b>Syntax Description</b>	<i>bytes</i> MTU size, in bytes. The range is from 68 up to the system MTU value (in bytes).	
<b>Command Default</b>	The default IP MTU size for frames received and sent on all switch interfaces is 1500 bytes.	
<b>Command Modes</b>	Interface configuration	
<b>Command History</b>	<b>Release</b>	<b>Modification</b>
	Cisco IOS XE 3.3SE	This command was introduced.

**Usage Guidelines** The upper limit of the IP value is based on the switch or switch stack configuration and refers to the currently applied system MTU value. For more information about setting the MTU sizes, see the **system mtu** global configuration command.

To return to the default IP MTU setting, you can apply the **default ip mtu** command or the **no ip mtu** command on the interface.

You can verify your setting by entering the **show ip interface** *interface-id* or **show interfaces** *interface-id* privileged EXEC command.

The following example sets the maximum IP packet size for VLAN 200 to 1000 bytes:

```
Device(config)# interface vlan 200
Device(config-if)# ip mtu 1000
```

The following example sets the maximum IP packet size for VLAN 200 to the default setting of 1500 bytes:

```
Device(config)# interface vlan 200
Device(config-if)# default ip mtu
```

This is an example of partial output from the **show ip interface** *interface-id* command. It displays the current IP MTU setting for the interface.

```
Device# show ip interface gigabitethernet4/0/1
GigabitEthernet4/0/1 is up, line protocol is up
  Internet address is 18.0.0.1/24
  Broadcast address is 255.255.255.255
  Address determined by setup command
  MTU is 1500 bytes
  Helper address is not set
```

<output truncated>

# ipv6 mtu

To set the IPv6 maximum transmission unit (MTU) size of routed packets on all routed ports of the switch or switch stack, use the **ipv6 mtu** command in interface configuration mode. To restore the default IPv6 MTU size, use the **no** form of this command.

```
ipv6 mtu bytes
no ipv6 mtu bytes
```

<b>Syntax Description</b>	<i>bytes</i> MTU size, in bytes. The range is from 1280 up to the system MTU value (in bytes).	
<b>Command Default</b>	The default IPv6 MTU size for frames received and sent on all switch interfaces is 1500 bytes.	
<b>Command Modes</b>	Interface configuration	
<b>Command History</b>	<b>Release</b>	<b>Modification</b>
	Cisco IOS XE 3.3SE	This command was introduced.

**Usage Guidelines** The upper limit of the IPv6 MTU value is based on the switch or switch stack configuration and refers to the currently applied system MTU value. For more information about setting the MTU sizes, see the **system mtu** global configuration command.

To return to the default IPv6 MTU setting, you can apply the **default ipv6 mtu** command or the **no ipv6 mtu** command on the interface.

You can verify your setting by entering the **show ipv6 interface** *interface-id* or **show interface** *interface-id* privileged EXEC command.

The following example sets the maximum IPv6 packet size for an interface to 2000 bytes:

```
Device(config)# interface gigabitethernet4/0/1
Device(config-if)# ipv6 mtu 2000
```

The following example sets the maximum IPv6 packet size for an interface to the default setting of 1500 bytes:

```
Device(config)# interface gigabitethernet4/0/1
Device(config-if)# default ipv6 mtu
```

This is an example of partial output from the **show ipv6 interface** *interface-id* command. It displays the current IPv6 MTU setting for the interface.

```
Device# show ipv6 interface gigabitethernet4/0/1
GigabitEthernet4/0/1 is up, line protocol is up
  Internet address is 18.0.0.1/24
  Broadcast address is 255.255.255.255
  Address determined by setup command
  MTU is 1500 bytes
  Helper address is not set
```

<output truncated>

## lldp (interface configuration)

To enable Link Layer Discovery Protocol (LLDP) on an interface, use the **lldp** command in interface configuration mode. To disable LLDP on an interface, use the **no** form of this command.

```
lldp {med-tlv-select tlv | receive | tlv-select power-management | transmit}
no lldp {med-tlv-select tlv | receive | tlv-select power-management | transmit}
```

Syntax Description		
<b>med-tlv-select</b>		Selects an LLDP Media Endpoint Discovery (MED) time-length-value (TLV) element to send.
<i>tlv</i>		String that identifies the TLV element. Valid values are the following: <ul style="list-style-type: none"> <li>• <b>inventory-management</b>— LLDP MED Inventory Management TLV.</li> <li>• <b>location</b>— LLDP MED Location TLV.</li> <li>• <b>network-policy</b>— LLDP MED Network Policy TLV.</li> <li>• <b>power-management</b>— LLDP MED Power Management TLV.</li> </ul>
<b>receive</b>		Enables the interface to receive LLDP transmissions.
<b>tlv-select</b>		Selects the LLDP TLVs to send.
<b>power-management</b>		Sends the LLDP Power Management TLV.
<b>transmit</b>		Enables LLDP transmission on the interface.

**Command Default** LLDP is disabled.

**Command Modes** Interface configuration

Command History	Release	Modification
	Cisco IOS XE 3.3SE	This command was introduced.

**Usage Guidelines** This command is supported on 802.1 media types.  
 If the interface is configured as a tunnel port, LLDP is automatically disabled.  
 The following example shows how to disable LLDP transmission on an interface:

```
Device(config)# interface gigabitethernet1/0/1
Device(config-if)# no lldp transmit
```

The following example shows how to enable LLDP transmission on an interface:

```
Device(config)# interface gigabitethernet1/0/1
```

```
Device(config-if)# lldp transmit
```

## logging event power-inline-status

To enable the logging of Power over Ethernet (PoE) events, use the **logging event power-inline-status** command in interface configuration mode. To disable the logging of PoE status events, use the **no** form of this command.

**logging event power-inline-status**  
**no logging event power-inline-status**

---

**Syntax Description** This command has no arguments or keywords.

---

**Command Default** Logging of PoE events is enabled.

---

**Command Modes** Interface configuration

---

Command History	Release	Modification
	Cisco IOS XE 3.3SE	This command was introduced.

---



---

**Usage Guidelines** The **no** form of this command does not disable PoE error events.

---

**Examples** This example shows how to enable logging of PoE events on a port:

```
Device(config-if)# interface gigabitethernet1/0/1
Device(config-if)# logging event power-inline-status
Device(config-if)#
```

# mdix auto

To enable the automatic medium-dependent interface crossover (auto-MDIX) feature on the interface, use the **mdix auto** command in interface configuration mode. To disable auto-MDIX, use the **no** form of this command.

**mdix auto**  
**no mdix auto**

**Syntax Description** This command has no arguments or keywords.

**Command Default** Auto-MDIX is enabled.

**Command Modes** Interface configuration

Command History	Release	Modification
	Cisco IOS XE 3.3SE	This command was introduced.

**Usage Guidelines** When auto-MDIX is enabled, the interface automatically detects the required cable connection type (straight-through or crossover) and configures the connection appropriately.

When you enable auto-MDIX on an interface, you must also set the interface speed and duplex to **auto** so that the feature operates correctly.

When auto-MDIX (and autonegotiation of speed and duplex) is enabled on one or both of the connected interfaces, link up occurs, even if the cable type (straight-through or crossover) is incorrect.

This example shows how to enable auto-MDIX on a port:

```
Device# configure terminal
Device(config)# interface gigabitethernet1/0/1
Device(config-if)# speed auto
Device(config-if)# duplex auto
Device(config-if)# mdix auto
Device(config-if)# end
```

# mode (power-stack configuration)

To configure power stack mode for the power stack, use the **mode** command in power-stack configuration mode. To return to the default settings, use the **no** form of the command.

**mode** {**power-shared** | **redundant**} [**strict**]  
**no mode**

Syntax Description		
<b>power-shared</b>		Sets the power stack to operate in power-shared mode. This is the default.
<b>redundant</b>		Sets the power stack to operate in redundant mode. The largest power supply is removed from the power pool to be used as backup power in case one of the other power supplies fails.
<b>strict</b>		(Optional) Configures the power stack mode to run a strict power budget. The stack power needs cannot exceed the available power.

**Command Default** The default modes are **power-shared** and nonstrict.

**Command Modes** Power-stack configuration

Command History	Release	Modification
	Cisco IOS XE 3.3SE	This command was introduced.

**Usage Guidelines** This command is available only on switch stacks running the IP Base or IP Services feature set. To access power-stack configuration mode, enter the **stack-power stack** *power stack name* global configuration command.

Entering the **no mode** command sets the switch to the defaults of **power-shared** and non-strict mode.



**Note** For stack power, available power is the total power available for PoE from all power supplies in the power stack, available power is the power allocated to all powered devices connected to PoE ports in the stack, and consumed power is the actual power consumed by the powered devices.

In **power-shared** mode, all of the input power can be used for loads, and the total available power appears as one large power supply. The power budget includes all power from all supplies. No power is set aside for power supply failures. If a power supply fails, load shedding (shutting down of powered devices or switches) might occur.

In **redundant** mode, the largest power supply is removed from the power pool to use as backup power in case one of the other power supplies fails. The available power budget is the total power minus the largest power supply. This reduces the available power in the pool for switches and powered devices, but in case of a failure or an extreme power load, there is less chance of having to shut down switches or powered devices.

In **strict** mode, when a power supply fails and the available power drops below the budgeted power, the system balances the budget through load shedding of powered devices, even if the actual power is less than the available power. In nonstrict mode, the power stack can run in an over-allocated state and is stable as long as

the actual power does not exceed the available power. In this mode, a powered device drawing more than normal power could cause the power stack to start shedding loads. This is normally not a problem because most devices do not run at full power. The chances of multiple powered devices in the stack requiring maximum power at the same time is small.

In both strict and nonstrict modes, power is denied when there is no power available in the power budget.

This is an example of setting the power stack mode for the stack named power1 to power-shared with strict power budgeting. All power in the stack is shared, but when the total available power is allotted, no more devices are allowed power.

```
Device(config)# stack-power stack power1  
Device(config-stackpower)# mode power-shared strict  
Device(config-stackpower)# exit
```

This is an example of setting the power stack mode for the stack named power2 to redundant. The largest power supply in the stack is removed from the power pool to provide redundancy in case one of the other supplies fails.

```
Device(config)# stack-power stack power2  
Device(config-stackpower)# mode redundant  
Device(config-stackpower)# exit
```

# network-policy

To apply a network-policy profile to an interface, use the **network-policy** command in interface configuration mode. To remove the policy, use the **no** form of this command.

**network-policy** *profile-number*  
**no network-policy**

## Syntax Description

*profile-number* The network-policy profile number to apply to the interface.

## Command Default

No network-policy profiles are applied.

## Command Modes

Interface configuration

## Command History

Release	Modification
Cisco IOS XE 3.3SE	This command was introduced.

## Usage Guidelines

Use the **network-policy** *profile number* interface configuration command to apply a profile to an interface.

You cannot apply the **switchport voice vlan** command on an interface if you first configure a network-policy profile on it. However, if **switchport voice vlan** *vlan-id* is already configured on the interface, you can apply a network-policy profile on the interface. The interface then has the voice or voice-signaling VLAN network-policy profile applied.

This example shows how to apply network-policy profile 60 to an interface:

```
Device(config)# interface gigabitethernet1/0/1
Device(config-if)# network-policy 60
```

## network-policy profile (global configuration)

To create a network-policy profile and to enter network-policy configuration mode, use the **network-policy profile** command in global configuration mode. To delete the policy and to return to global configuration mode, use the **no** form of this command.

**network-policy profile** *profile-number*  
**no network-policy profile** *profile-number*

<b>Syntax Description</b>	<i>profile-number</i> Network-policy profile number. The range is 1 to 4294967295.	
<b>Command Default</b>	No network-policy profiles are defined.	
<b>Command Modes</b>	Global configuration	
<b>Command History</b>	<b>Release</b>	<b>Modification</b>
	Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.
<b>Usage Guidelines</b>	<p>Use the <b>network-policy profile</b> global configuration command to create a profile and to enter network-policy profile configuration mode.</p> <p>To return to privileged EXEC mode from the network-policy profile configuration mode, enter the <b>exit</b> command.</p> <p>When you are in network-policy profile configuration mode, you can create the profile for voice and voice signaling by specifying the values for VLAN, class of service (CoS), differentiated services code point (DSCP), and tagging mode.</p> <p>These profile attributes are contained in the Link Layer Discovery Protocol for Media Endpoint Devices (LLDP-MED) network-policy time-length-value (TLV).</p> <p>This example shows how to create network-policy profile 60:</p> <pre>Device(config)# <b>network-policy profile 60</b> Device(config-network-policy)#</pre>	

## power efficient-ethernet auto

To enable Energy Efficient Ethernet (EEE) for an interface, use the **power efficient-ethernet auto** command in interface configuration mode. To disable EEE on an interface, use the **no** form of this command.

**power efficient-ethernet auto**  
**no power efficient-ethernet auto**

---

**Syntax Description** This command has no arguments or keywords.

---

**Command Default** EEE is disabled.

---

**Command Modes** Interface configuration

---

Command History	Release	Modification
	Cisco IOS XE 3.3SE	This command was introduced.

---



---

**Usage Guidelines** You can enable EEE on devices that support low power idle (LPI) mode. Such devices can save power by entering LPI mode during periods of low utilization. In LPI mode, systems on both ends of the link can save power by shutting down certain services. EEE provides the protocol needed to transition into and out of LPI mode in a way that is transparent to upper layer protocols and applications.

The **power efficient-ethernet auto** command is available only if the interface is EEE capable. To check if an interface is EEE capable, use the **show eee capabilities EXEC** command.

When EEE is enabled, the device advertises and autonegotiates EEE to its link partner. To view the current EEE status for an interface, use the **show eee status EXEC** command.

This command does not require a license.

This example shows how to enable EEE for an interface:

```
Device(config-if)# power efficient-ethernet auto
Device(config-if)#
```

This example shows how to disable EEE for an interface:

```
Device(config-if)# no power efficient-ethernet auto
Device(config-if)#
```

# power-priority

To configure Cisco StackPower power-priority values for a switch in a power stack and for its high-priority and low-priority PoE ports, use the **power-priority** command in switch stack-power configuration mode. To return to the default setting, use the **no** form of the command.

```
power-priority {high value | low value | switch value}
no power-priority {high | low | switch}
```

## Syntax Description

<b>high</b> <i>value</i>	Sets the power priority for the ports configured as high-priority ports. The range is 1 to 27, with 1 as the highest priority. The <b>high</b> value must be lower than the value set for the low-priority ports and higher than the value set for the switch.
<b>low</b> <i>value</i>	Sets the power priority for the ports configured as low-priority ports. The range is 1 to 27. The <b>low</b> value must be higher than the value set for the high-priority ports and the value set for the switch.
<b>switch</b> <i>value</i>	Sets the power priority for the switch. The range is 1 to 27. The <b>switch</b> value must be lower than the values set for the low and high-priority ports.

## Command Default

If no values are configured, the power stack randomly determines a default priority.

The default ranges are 1 to 9 for switches, 10 to 18 for high-priority ports, 19 to 27 for low-priority ports.

On non-PoE switches, the high and low values (for port priority) have no effect.

## Command Modes

Switch stack-power configuration

## Command History

Release	Modification
Cisco IOS XE 3.3SE Cisco IOS XE 3.3SE	This command was introduced.

## Usage Guidelines

To access switch stack-power configuration mode, enter the **stack-power switch** *switch-number* global configuration command.

Cisco StackPower power-priority values determine the order for shutting down switches and ports when power is lost and load shedding must occur. Priority values are from 1 to 27; the highest numbers are shut down first.

We recommend that you configure different priority values for each switch and for its high priority ports and low priority ports to limit the number of devices shut down at one time during a loss of power. If you try to configure the same priority value on different switches in a power stack, the configuration is allowed, but you receive a warning message.



### Note

This command is available only on switch stacks running the IP Base or IP Services feature set.

## Examples

This is an example of setting the power priority for switch 1 in power stack a to 7, for the high-priority ports to 11, and for the low-priority ports to 20.

```
Device(config)# stack-power switch 1  
Device(config-switch-stackpower)# stack-id power_stack_a  
Device(config-switch-stackpower)# power-priority high 11  
Device(config-switch-stackpower)# power-priority low 20  
Device(config-switch-stackpower)# power-priority switch 7  
Device(config-switch-stackpower)# exit
```

# power inline

To configure the power management mode on Power over Ethernet (PoE) ports, use the **power inline** command in interface configuration mode. To return to the default settings, use the **no** form of this command.

```
power inline {auto [max max-wattage] | four-pair forced | never | port priority {high | low} | static [max max-wattage]}
no power inline {auto | four-pair forced | never | port priority {high | low} | static [max max-wattage]}
```

Syntax Description		
<b>auto</b>		Enables powered-device detection. If enough power is available, automatically allocates power to the PoE port after device detection. Allocation is first-come, first-serve.
<b>max</b> <i>max-wattage</i>		(Optional) Limits the power allowed on the port. The range is 4000 to 30000 mW. If no value is specified, the maximum is allowed.
<b>four-pair forced</b>		(Optional) Enable Four-pair PoE without L2 negotiation (Cisco UPOE switches only).
<b>never</b>		Disables device detection, and disables power to the port.
<b>port</b>		Configures the power priority of the port. The default priority is low.
<b>priority</b> { <b>high</b>   <b>low</b> }		Sets the power priority of the port. In case of a power supply failure, ports configured as low priority are turned off first and ports configured as high priority are turned off last. The default priority is low.
<b>static</b>		Enables powered-device detection. Pre-allocates (reserves) power for a port before the switch discovers the powered device. This action guarantees that the device connected to the interface receives enough power.

**Command Default**

- The default is **auto** (enabled).
- The maximum wattage is 30,000 mW.
- The default port priority is low.

---

**Command Default** Interface configuration

Command History	Release	Modification
	Cisco IOS XE 3.3SE	This command was introduced.

---

**Usage Guidelines** This command is supported only on PoE-capable ports. If you enter this command on a port that does not support PoE, this error message appears:

```
Device(config)# interface gigabitethernet1/0/1
Device(config-if)# power inline auto
                        ^
% Invalid input detected at '^' marker.
```

In a switch stack, this command is supported on all ports in the stack that support PoE.

Cisco Universal Power Over Ethernet (Cisco UPOE) is a Cisco proprietary technology that extends the IEEE 802.3at PoE standard to provide the capability to source up to 60 W of power over standard Ethernet cabling infrastructure (Class D or better) by using the spare pair of an RJ-45 cable (wires 4,5,7,8) with the signal pair (wires 1,2,3,6). Power on the spare pair is enabled when the switch port and end device mutually identify themselves as Cisco UPOE-capable using CDP or LLDP and the end device requests for power to be enabled on the spare pair. When the spare pair is powered, the end device can negotiate up to 60 W of power from the switch using CDP or LLDP. Use the **power inline four-pair forced** command when the end device is PoE-capable on both signal and spare pairs, but does not support the CDP or LLDP extensions required for Cisco UPOE.

Use the **max max-wattage** option to disallow higher-power powered devices. With this configuration, when the powered device sends Cisco Discovery Protocol (CDP) messages requesting more power than the maximum wattage, the switch removes power from the port. If the powered-device IEEE class maximum is greater than the maximum wattage, the switch does not power the device. The power is reclaimed into the global power budget.




---

**Note** The switch never powers any class 0 or class 3 device if the **power inline max max-wattage** command is configured for less than 30 W.

---

If the switch denies power to a powered device (the powered device requests more power through CDP messages or if the IEEE class maximum is greater than the maximum wattage), the PoE port is in a power-deny state. The switch generates a system message, and the Oper column in the **show power inline** privileged EXEC command output shows *power-deny*.

Use the **power inline static max max-wattage** command to give a port high priority. The switch allocates PoE to a port configured in static mode before allocating power to a port configured in auto mode. The switch reserves power for the static port when it is configured rather than upon device discovery. The switch reserves the power on a static port even when there is no connected device and whether or not the port is in a shutdown or in a no shutdown state. The switch allocates the configured maximum wattage to the port, and the amount is never adjusted through the IEEE class or by CDP messages from the powered device. Because power is pre-allocated, any powered device that uses less than or equal to the maximum wattage is guaranteed power when it is connected to a static port. However, if the powered device IEEE class is greater than the maximum wattage, the switch does not supply power to it. If the switch learns through CDP messages that the powered device needs more than the maximum wattage, the powered device is shut down.

If the switch cannot pre-allocate power when a port is in static mode (for example, because the entire power budget is already allocated to other auto or static ports), this message appears: Command rejected: power inline static: pwr not available. The port configuration remains unchanged.

When you configure a port by using the **power inline auto** or the **power inline static** interface configuration command, the port autonegotiates by using the configured speed and duplex settings. This is necessary to determine the power requirements of the connected device (whether or not it is a powered device). After the power requirements have been determined, the switch hardcodes the interface by using the configured speed and duplex settings without resetting the interface.

When you configure a port by using the **power inline never** command, the port reverts to the configured speed and duplex settings.

If a port has a Cisco powered device connected to it, you should not use the **power inline never** command to configure the port. A false link-up can occur, placing the port in an error-disabled state.

Use the **power inline port priority {high | low}** command to configure the power priority of a PoE port. Powered devices connected to ports with low port priority are shut down first in case of a power shortage.

You can verify your settings by entering the **show power inline EXEC** command.

## Examples

This example shows how to enable detection of a powered device and to automatically power a PoE port on a switch:

```
Device(config)# interface gigabitethernet1/0/2
Device(config-if)# power inline auto
```

This example shows how to automatically enable power on both signal and spare pairs from switch port Gigabit Ethernet 1/0/1:

```
Device(config)# interface gigabitethernet1/0/1
Device(config-if)# power inline four-pair forced
```

This example shows how to configure a PoE port on a switch to allow a class 1 or a class 2 powered device:

```
Device(config)# interface gigabitethernet1/0/2
Device(config-if)# power inline auto max 7000
```

This example shows how to disable powered-device detection and to not power a PoE port on a switch:

```
Device(config)# interface gigabitethernet1/0/2
Device(config-if)# power inline never
```

This example shows how to set the priority of a port to high, so that it would be one of the last ports to be shut down in case of power supply failure:

```
Device(config)# interface gigabitethernet1/0/2
Device(config-if)# power inline port priority high
```

## power inline police

To enable policing of real-time power consumption on a powered device, use the **power inline police** command in interface configuration mode. To disable this feature, use the **no** form of this command

```
power inline police [action {errdisable | log}]
no power inline police
```

### Syntax Description

<b>action errdisable</b>	(Optional) Configures the device to turn off power to the port if the real-time power consumption exceeds the maximum power allocation on the port. This is the default action.
<b>action log</b>	(Optional) Configures the device to generate a syslog message while still providing power to a connected device if the real-time power consumption exceeds the maximum power allocation on the port.

### Command Default

Policing of the real-time power consumption of the powered device is disabled.

### Command Modes

Interface configuration

### Command History

Release	Modification
Cisco IOS XE 3.3SE	This command was introduced.

### Usage Guidelines

This command is supported only on the LAN Base image.

This command is supported only on Power over Ethernet (PoE)-capable ports. If you enter this command on a device or port that does not support PoE, an error message appears.

In a switch stack, this command is supported on all switches or ports in the stack that support PoE and real-time power-consumption monitoring.

When policing of the real-time power consumption is enabled, the device takes action when a powered device consumes more power than the allocated maximum amount.

When PoE is enabled, the device senses the real-time power consumption of the powered device. This feature is called *power monitoring* or *power sensing*. The device also polices the power usage with the *power policing* feature.

When power policing is enabled, the device uses one of the these values as the cutoff power on the PoE port in this order:

1. The user-defined power level that limits the power allowed on the port when you enter the **power inline auto max** *max-wattage* or the **power inline static max** *max-wattage* interface configuration command
2. The device automatically sets the power usage of the device by using CDP power negotiation or by the IEEE classification and LLDP power negotiation.

If you do not manually configure the cutoff-power value, the device automatically determines it by using CDP power negotiation or the device IEEE classification and LLDP power negotiation. If CDP or LLDP are not enabled, the default value of 30 W is applied. However without CDP or LLDP, the device does not allow devices to consume more than 15.4 W of power because values from 15400 to 30000 mW are only allocated based on CDP or LLDP requests. If a powered device consumes more than 15.4 W without CDP or LLDP

negotiation, the device might be in violation of the maximum current  $I_{max}$  limitation and might experience an  $I_{cut}$  fault for drawing more current than the maximum. The port remains in the fault state for a time before attempting to power on again. If the port continuously draws more than 15.4 W, the cycle repeats.

When a powered device connected to a PoE+ port restarts and sends a CDP or LLDP packet with a power TLV, the device locks to the power-negotiation protocol of that first packet and does not respond to power requests from the other protocol. For example, if the device is locked to CDP, it does not provide power to devices that send LLDP requests. If CDP is disabled after the device has locked on it, the device does not respond to LLDP power requests and can no longer power on any accessories. In this case, you should restart the powered device.

If power policing is enabled, the device polices power usage by comparing the real-time power consumption to the maximum power allocated on the PoE port. If the device uses more than the maximum power allocation (or *cutoff power*) on the port, the device either turns power off to the port, or the device generates a syslog message and updates the LEDs (the port LEDs are blinking amber) while still providing power to the device.

- To configure the device to turn off power to the port and put the port in the error-disabled state, use the **power inline police** interface configuration command.
- To configure the device to generate a syslog message while still providing power to the device, use the **power inline police action log** command.

If you do not enter the **action log** keywords, the default action is to shut down the port, turn off power to it, and put the port in the PoE error-disabled state. To configure the PoE port to automatically recover from the error-disabled state, use the **errdisable detect cause inline-power** global configuration command to enable error-disabled detection for the PoE cause and the **errdisable recovery cause inline-power interval interval** global configuration command to enable the recovery timer for the PoE error-disabled cause.



---

**Caution**

If policing is disabled, no action occurs when the powered device consumes more than the maximum power allocation on the port, which could adversely affect the device.

---

You can verify your settings by entering the **show power inline police** privileged EXEC command.

---

**Examples**

This example shows how to enable policing of the power consumption and configuring the device to generate a syslog message on the PoE port on a device:

```
Device(config)# interface gigabitethernet1/0/2
Device(config-if)# power inline police action log
```

# power supply

To configure and manage the internal power supplies on a switch, use the **power supply** command in privileged EXEC mode.

**power supply** *stack-member-number* **slot** {**A** | **B**} {**off** | **on**}

Syntax Description		
<i>stack-member-number</i>		Stack member number for which to configure the internal power supplies. The range is 1 to 9, depending on the number of switches in the stack.  This parameter is available only on stacking-capable switches.
<b>slot</b>		Selects the switch power supply to set.
<b>A</b>		Selects the power supply in slot A.
<b>B</b>		Selects the power supply in slot B.  <b>Note</b> Power supply slot B is the closest slot to the outer edge of the switch.
<b>off</b>		Sets the switch power supply to off.
<b>on</b>		Sets the switch power supply to on.

**Command Default** The switch power supply is on.

**Command Modes** Privileged EXEC

Command History	Release	Modification
	Cisco IOS XE 3.3SE	This command was introduced.

**Usage Guidelines** The **power supply** command applies to a switch or to a switch stack where all switches are the same platform.

In a switch stack with the same platform switches, you must specify the stack member before entering the **slot** {**A** | **B**} **off** or **on** keywords.

To return to the default setting, use the **power supply** *stack-member-number* **on** command.

You can verify your settings by entering the **show env power** privileged EXEC command.

## Examples

This example shows how to set the power supply in slot A to off:

```
Device> power supply 2 slot A off
Disabling Power supply A may result in a power loss to PoE devices and/or switches ...
Continue? (yes/[no]): yes
Device
Jun 10 04:52:54.389: %PLATFORM_ENV-6-FRU_PS_OIR: FRU Power Supply 1 powered off
Jun 10 04:52:56.717: %PLATFORM_ENV-1-FAN_NOT_PRESENT: Fan is not present
```

This example shows how to set the power supply in slot A to on:

```
Device> power supply 1 slot B on
Jun 10 04:54:39.600: %PLATFORM_ENV-6-FRU_PS_OIR: FRU Power Supply 1 powered on
```

This example shows the output of the show env power command:

```
Device> show env power
SW  PID                Serial#      Status      Sys Pwr  PoE Pwr  Watts
--  -----
1A  PWR-1RUC2-640WAC    DCB1705B05B OK          Good     Good    250/390
1B  Not Present
```

# show eee

To display Energy Efficient Ethernet (EEE) information for an interface, use the **show eee** command in EXEC mode.

**show eee**{capabilities| status} interface *interface-id*

Syntax Description		
	<b>capabilities</b>	Displays EEE capabilities for the specified interface.
	<b>status</b>	Displays EEE status information for the specified interface.
	<b>interface</b> <i>interface-id</i>	Specifies the interface for which to display EEE capabilities or status information.

**Command Default** None

**Command Modes** User EXEC  
Privileged EXEC

Command History	Release	Modification
	Cisco IOS XE 3.3SE	This command was introduced.

**Usage Guidelines**

You can enable EEE on devices that support low power idle (LPI) mode. Such devices can save power by entering LPI mode during periods of low power utilization. In LPI mode, systems on both ends of the link can save power by shutting down certain services. EEE provides the protocol needed to transition into and out of LPI mode in a way that is transparent to upper layer protocols and applications.

To check if an interface is EEE capable, use the **show eee capabilities** command. You can enable EEE on an interface that is EEE capable by using the **power efficient-ethernet auto** interface configuration command.

To view the EEE status, LPI status, and wake error count information for an interface, use the **show eee status** command.

This is an example of output from the **show eee capabilities** command on an interface where EEE is enabled:

```
Device# show eee capabilities interface gigabitethernet1/0/1
Gi1/0/1
    EEE(efficient-ethernet):  yes (100-Tx and 1000T auto)
    Link Partner              :  yes (100-Tx and 1000T auto)
```

This is an example of output from the **show eee capabilities** command on an interface where EEE is not enabled:

```
Device# show eee capabilities interface gigabitethernet2/0/1
Gi2/0/1
    EEE(efficient-ethernet):  not enabled
```

```
Link Partner           : not enabled
```

This is an example of output from the **show eee status** command on an interface where EEE is enabled and operational. The table that follows describes the fields in the display.

```
Device# show eee status interface gigabitethernet1/0/4
Gi1/0/4 is up
  EEE(efficient-ethernet): Operational
  Rx LPI Status           : Received
  Tx LPI Status           : Received
```

This is an example of output from the **show eee status** command on an interface where EEE is operational and the ports are in low power save mode:

```
Device# show eee status interface gigabitethernet1/0/3
Gi1/0/3 is up
  EEE(efficient-ethernet): Operational
  Rx LPI Status           : Low Power
  Tx LPI Status           : Low Power
  Wake Error Count        : 0
```

This is an example of output from the **show eee status** command on an interface where EEE is not enabled because a remote link partner is incompatible with EEE:

```
Device# show eee status interface gigabitethernet1/0/3
Gi1/0/3 is down
  EEE(efficient-ethernet): Disagreed
  Rx LPI Status           : None
  Tx LPI Status           : None
  Wake Error Count        : 0
```

**Table 1: show eee status Field Descriptions**

Field	Description
EEE (efficient-ethernet)	<p>The EEE status for the interface. This field can have any of the following values:</p> <ul style="list-style-type: none"> <li>• N/A—The port is not capable of EEE.</li> <li>• Disabled—The port EEE is disabled.</li> <li>• Disagreed—The port EEE is not set because a remote link partner might be incompatible with EEE; either it is not EEE capable, or its EEE setting is incompatible.</li> <li>• Operational—The port EEE is enabled and operating.</li> </ul> <p>If the interface speed is configured as 10 Mbps, EEE is disabled internally. When the interface speed moves back to auto, 100 Mbps or 1000 Mbps, EEE becomes active again.</p>

Field	Description
Rx/Tx LPI Status	<p>The Low Power Idle (LPI) status for the link partner. These fields can have any of the following values:</p> <ul style="list-style-type: none"> <li>• N/A—The port is not capable of EEE.</li> <li>• Interrupted—The link partner is in the process of moving to low power mode.</li> <li>• Low Power—The link partner is in low power mode.</li> <li>• None— EEE is disabled or not capable at the link partner side.</li> <li>• Received—The link partner is in low power mode and there is traffic activity.</li> </ul> <p>If an interface is configured as half-duplex, the LPI status is None, which means the interface cannot be in low power mode until it is configured as full-duplex.</p>
Wake Error Count	<p>The number of PHY wake-up faults that have occurred. A wake-up fault can occur when EEE is enabled and the connection to the link partner is broken.</p> <p>This information is useful for PHY debugging.</p>

# show env

To display fan, temperature, and power information, use the **show env** command in EXEC mode.

```
show env {all | fan | power [{all | switch [stack-member-number]] | stack [stack-member-number] |
temperature [status]}
```

Syntax Description	
<b>all</b>	Displays the fan and temperature environmental status and the status of the internal power supplies.
<b>fan</b>	Displays the switch fan status.
<b>power</b>	Displays the internal power status of the active switch.
<b>all</b>	(Optional) Displays the status of all the internal power supplies in a standalone switch when the command is entered on the switch, or in all the stack members when the command is entered on the active switch.
<b>switch</b>	(Optional) Displays the status of the internal power supplies for each switch in the stack or for the specified switch.  This keyword is available only on stacking-capable switches.
<i>stack-member-number</i>	(Optional) Number of the stack member for which to display the status of the internal power supplies or the environmental status.  The range is 1 to 9.
<b>stack</b>	Displays all environmental status for each switch in the stack or for the specified switch.  This keyword is available only on stacking-capable switches.
<b>temperature</b>	Displays the switch temperature status.
<b>status</b>	(Optional) Displays the switch internal temperature (not the external temperature) and the threshold values.

**Command Default** None

**Command Modes** User EXEC  
Privileged EXEC

Command History	Release	Modification
	Cisco IOS XE 3.3SE	This command was introduced.

**Usage Guidelines** Use the **show env** EXEC command to display the information for the switch being accessed—a standalone switch or the active switch. Use this command with the **stack** and **switch** keywords to display all information for the stack or for the specified stack member.

If you enter the **show env temperature status** command, the command output shows the switch temperature state and the threshold level.

You can also use the **show env temperature** command to display the switch temperature status. The command output shows the green and yellow states as *OK* and the red state as *FAULTY*. If you enter the **show env all** command, the command output is the same as the **show env temperature status** command output.

## Examples

This is an example of output from the **show env all** command:

```
Device>show env all
Switch 1 FAN 1 is OK
Switch 1 FAN 2 is OK
Switch 1 FAN 3 is OK
FAN PS-1 is NOT PRESENT
FAN PS-2 is OK
Switch 1: SYSTEM TEMPERATURE is OK
SW  PID                      Serial#      Status          Sys Pwr  PoE Pwr  Watts
--  -
1A  Not Present
1B  PWR-C1-715WAC              LIT150119Z1 OK           Good      Good     715
```

```
Device>show env all
Switch 1 FAN 1 is OK
Switch 1 FAN 2 is OK
Switch 1 FAN 3 is OK
FAN PS-1 is OK
FAN PS-2 is NOT PRESENT
Switch 1: SYSTEM TEMPERATURE is OK
SW  PID                      Serial#      Status          Sys Pwr  PoE Pwr  Watts
--  -
1A  PWR-C2-250WAC              LIT16372A1M OK           Good      Good     250
1B  Not Present
```

This is an example of output from the **show env fan** command:

```
Device>show env fan
Switch 1 FAN 1 is OK
Switch 1 FAN 2 is OK
Switch 1 FAN 3 is OK
FAN PS-1 is NOT PRESENT
FAN PS-2 is OK
```

This is an example of output from the **show env power** command:

```
Device>show env power
SW  PID                      Serial#      Status          Sys Pwr  PoE Pwr  Watts
--  -
1A  Not Present
1B  PWR-C1-715WAC              LIT150119Z1 OK           Good      Good     715
```

This is an example of output from the **show env power all** command on the active switch:

```
Device# show env power all
SW  PID                      Serial#      Status          Sys Pwr  PoE Pwr  Watts
--  -
1A  Not Present
```

```
1B PWR-C1-715WAC          LIT150119Z1 OK          Good    Good    715
```

```
Device# show env power all
```

```
SW  PID                Serial#      Status          Sys Pwr  PoE Pwr  Watts
--  -
1A  PWR-C2-250WAC        LIT16372A1M OK           Good      Good    250
1B  Not Present
```

This is an example of output from the **show env stack** command on the active switch:

```
Device> show env stack
SWITCH: 1
Switch 1 FAN 1 is OK
Switch 1 FAN 2 is OK
Switch 1 FAN 3 is OK
FAN PS-1 is NOT PRESENT
FAN PS-2 is OK
Switch 1: SYSTEM TEMPERATURE is OK
Temperature Value: 28 Degree Celsius
Temperature State: GREEN
Yellow Threshold : 41 Degree Celsius
Red Threshold    : 56 Degree Celsius
```

This example shows how to display the temperature value, state, and the threshold values on a standalone switch. The table describes the temperature states in the command output.

```
Device> show env temperature status
Temperature Value: 33 Degree Celsius
Temperature State: GREEN
Yellow Threshold : 65 Degree Celsius
Red Threshold    : 75 Degree Celsius
```

**Table 2: States in the show env temperature status Command Output**

State	Description
Green	The switch temperature is in the <i>normal</i> operating range.
Yellow	The temperature is in the <i>warning</i> range. You should check the external temperature around the switch.
Red	The temperature is in the <i>critical</i> range. The switch might not run properly if the temperature is in this range.

# show errdisable detect

To display error-disabled detection status, use the **show errdisable detect** command in EXEC mode.

## show errdisable detect

**Syntax Description** This command has no arguments or keywords.

**Command Default** None

**Command Modes** User EXEC  
Privileged EXEC

Command History	Release	Modification
	Cisco IOS XE 3.3SE	This command was introduced.

**Usage Guidelines** A gbic-invalid error reason refers to an invalid small form-factor pluggable (SFP) module. The error-disable reasons in the command output are listed in alphabetical order. The mode column shows how error-disable is configured for each feature.

You can configure error-disabled detection in these modes:

- port mode—The entire physical port is error-disabled if a violation occurs.
- vlan mode—The VLAN is error-disabled if a violation occurs.
- port/vlan mode—The entire physical port is error-disabled on some ports and is per-VLAN error-disabled on other ports.

```
Device> show errdisable detect
ErrDisable Reason    Detection    Mode
-----
arp-inspection       Enabled     port
bpduguard            Enabled     vlan
channel-misconfig    Enabled     port
community-limit      Enabled     port
dhcp-rate-limit      Enabled     port
dtp-flap              Enabled     port
gbic-invalid          Enabled     port
inline-power          Enabled     port
invalid-policy        Enabled     port
l2ptguard             Enabled     port
link-flap             Enabled     port
loopback              Enabled     port
lsgroup               Enabled     port
pagp-flap            Enabled     port
psecure-violation    Enabled     port/vlan
security-violatio     Enabled     port
sfp-config-mismat    Enabled     port
storm-control         Enabled     port
udld                  Enabled     port
```

# show errdisable recovery

To display the error-disabled recovery timer information, use the **show errdisable recovery** command in EXEC mode.

## show errdisable recovery

**Syntax Description** This command has no arguments or keywords.

**Command Default** None

**Command Modes** User EXEC  
Privileged EXEC

Command History	Release	Modification
	Cisco IOS XE 3.3SE	This command was introduced.

**Usage Guidelines** A gbic-invalid error-disable reason refers to an invalid small form-factor pluggable (SFP) module interface.



**Note** Though visible in the output, the unicast-flood field is not valid.

This is an example of output from the **show errdisable recovery** command:

```
Device> show errdisable recovery
ErrDisable Reason      Timer Status
-----
udld                   Disabled
bpduguard              Disabled
security-violatio     Disabled
channel-misconfig     Disabled
pagg-flap              Disabled
dtp-flap               Disabled
link-flap              Enabled
l2ptguard              Disabled
psecure-violation     Disabled
gbic-invalid           Disabled
dhcp-rate-limit       Disabled
unicast-flood         Disabled
storm-control         Disabled
arp-inspection        Disabled
loopback               Disabled
Timer interval:300 seconds
Interfaces that will be enabled at the next timeout:
Interface      Errdisable reason      Time left(sec)
-----
Gi1/0/2        link-flap                279
```

## show interfaces

To display the administrative and operational status of all interfaces or for a specified interface, use the **show interfaces** command in privileged EXEC mode.

```
show interfaces [{interface-id|vlan vlan-id}] [{accounting|capabilities [module number]|debounce
|description|etherchannel|flowcontrol|private-vlan mapping|pruning|stats|status [{err-disabled}]
|trunk}]
```

Syntax Description	
<i>interface-id</i>	(Optional) ID of the interface. Valid interfaces include physical ports (including type, stack member for stacking-capable switches, module, and port number) and port channels. The port channel range is 1 to 48.
<b>vlan</b> <i>vlan-id</i>	(Optional) VLAN identification. The range is 1 to 4094.
<b>accounting</b>	(Optional) Displays accounting information on the interface, including active protocols and input and output packets and octets.  <b>Note</b> The display shows only packets processed in software; hardware-switched packets do not appear.
<b>capabilities</b>	(Optional) Displays the capabilities of all interfaces or the specified interface, including the features and options that you can configure on the interface. Though visible in the command line help, this option is not available for VLAN IDs.
<b>module</b> <i>number</i>	(Optional) Displays capabilities of all interfaces on the switch or specified stack member.  This option is not available if you entered a specific interface ID.
<b>description</b>	(Optional) Displays the administrative status and description set for an interface.
<b>etherchannel</b>	(Optional) Displays interface EtherChannel information.
<b>flowcontrol</b>	(Optional) Displays interface flow control information.
<b>private-vlan mapping</b>	(Optional) Displays private-VLAN mapping information for the VLAN switch virtual interfaces (SVIs). This keyword is not available if the switch is running the LAN base feature set.
<b>pruning</b>	(Optional) Displays trunk VTP pruning information for the interface.
<b>stats</b>	(Optional) Displays the input and output packets by switching the path for the interface.
<b>status</b>	(Optional) Displays the status of the interface. A status of unsupported in the Type field means that a non-Cisco small form-factor pluggable (SFP) module is inserted in the module slot.

<b>err-disabled</b>	(Optional) Displays interfaces in an error-disabled state.
<b>trunk</b>	(Optional) Displays interface trunk information. If you do not specify an interface, only information for active trunking ports appears.



**Note** Though visible in the command-line help strings, the **crb**, **fair-queue**, **irb**, **mac-accounting**, **precedence**, **random-detect**, **rate-limit**, and **shape** keywords are not supported.

#### Command Default

None

#### Command Modes

Privileged EXEC

#### Command History

Release	Modification
Cisco IOS XE 3.3SE	This command was introduced.

#### Usage Guidelines

The **show interfaces capabilities** command with different keywords has these results:

- Use the **show interface capabilities module** *number* command to display the capabilities of all interfaces on that switch in the stack. If there is no switch with that module number in the stack, there is no output.
- Use the **show interfaces** *interface-id* **capabilities** to display the capabilities of the specified interface.
- Use the **show interfaces capabilities** (with no module number or interface ID) to display the capabilities of all interfaces in the stack.

This is an example of output from the **show interfaces** command for an interface on stack member 3:

```
Device# show interfaces gigabitethernet3/0/2
GigabitEthernet3/0/2 is down, line protocol is down (notconnect)
  Hardware is Gigabit Ethernet, address is 2037.064d.4381 (bia 2037.064d.4381)
  MTU 1500 bytes, BW 1000000 Kbit/sec, DLY 10 usec,
    reliability 255/255, txload 1/255, rxload 1/255
  Encapsulation ARPA, loopback not set
  Keepalive set (10 sec)
  Auto-duplex, Auto-speed, media type is 10/100/1000BaseTX
  input flow-control is off, output flow-control is unsupported
  ARP type: ARPA, ARP Timeout 04:00:00
  Last input never, output never, output hang never
  Last clearing of "show interface" counters never
  Input queue: 0/2000/0/0 (size/max/drops/flushes); Total output drops: 0
  Queueing strategy: fifo
  Output queue: 0/40 (size/max)
  5 minute input rate 0 bits/sec, 0 packets/sec
  5 minute output rate 0 bits/sec, 0 packets/sec
    0 packets input, 0 bytes, 0 no buffer
  Received 0 broadcasts (0 multicasts)
    0 runs, 0 giants, 0 throttles
    0 input errors, 0 CRC, 0 frame, 0 overrun, 0 ignored
    0 watchdog, 0 multicast, 0 pause input
    0 input packets with dribble condition detected
    0 packets output, 0 bytes, 0 underruns
```

```

0 output errors, 0 collisions, 1 interface resets
0 unknown protocol drops
0 babbles, 0 late collision, 0 deferred
0 lost carrier, 0 no carrier, 0 pause output
0 output buffer failures, 0 output buffers swapped out

```

This is an example of output from the **show interfaces interface description** command when the interface has been described as *Connects to Marketing* by using the **description** interface configuration command:

```

Device# show interfaces gigabitethernet1/0/2 description
Interface          Status      Protocol Description
Gi1/0/2            up          down      Connects to Marketing

```

This is an example of output from the **show interfaces interface-id pruning** command when pruning is enabled in the VTP domain:

```

Device# show interfaces gigabitethernet1/0/2 pruning
Port      Vlans pruned for lack of request by neighbor
Gi1/0/2   3,4

Port      Vlans traffic requested of neighbor
Gi1/0/2   1-3

```

This is an example of output from the **show interfaces stats** command for a specified VLAN interface:

```

Device# show interfaces vlan 1 stats
Switching path  Pkts In   Chars In   Pkts Out   Chars Out
Processor       1165354   136205310  570800     91731594
Route cache     0         0          0          0
Total           1165354   136205310  570800     91731594

```

These are examples of output from the **show interfaces status** command for a specific interface when private VLANs are configured. Port 22 is configured as a private-VLAN host port. It is associated with primary VLAN 20 and secondary VLAN 25:

```

Device# show interfaces gigabitethernet1/0/22 status
Port      Name      Status      Vlan      Duplex      Speed      Type
Gi1/0/22          connected  20,25     a-full    a-100      10/100BaseTX

```

In this example, port 20 is configured as a private-VLAN promiscuous port. The display shows only the primary VLAN 20:

```

Device# show interfaces gigabitethernet1/0/20 status
Port      Name      Status      Vlan      Duplex      Speed      Type
Gi1/0/20          connected  20        a-full    a-100      10/100BaseTX

```

This is an example of output from the **show interfaces status err-disabled** command. It displays the status of interfaces in the error-disabled state:

```

Device# show interfaces status err-disabled
Port      Name      Status      Reason
Gi1/0/2          err-disabled  gbic-invalid
Gi2/0/3          err-disabled  dtp-flap

```

This is an example of output from the **show interfaces interface-id pruning** command:

```
Device# show interfaces gigabitethernet1/0/2 pruning
Port Vlans pruned for lack of request by neighbor
```

```
Device# show interfaces gigabitethernet1/0/1 trunk
Port      Mode      Encapsulation  Status      Native vlan
Gil/0/1   on        802.1q         other       10

Port      Vlans allowed on trunk
Gil/0/1   none

Port      Vlans allowed and active in management domain
Gil/0/1   none

Port      Vlans in spanning tree forwarding state and not pruned
Gil/0/1   none
```

# show interfaces counters

To display various counters for the switch or for a specific interface, use the **show interfaces counters** command in privileged EXEC mode.

**show interfaces** [*interface-id*] **counters** [{**errors** | **etherchannel** | **module** *stack-member-number* | **protocol status** | **trunk**}]

## Syntax Description

<i>interface-id</i>	(Optional) ID of the physical interface, including type, stack member (stacking-capable switches only) module, and port number.
<b>errors</b>	(Optional) Displays error counters.
<b>etherchannel</b>	(Optional) Displays EtherChannel counters, including octets, broadcast packets, multicast packets, and unicast packets received and sent.
<b>module</b> <i>stack-member-number</i>	(Optional) Displays counters for the specified stack member. <b>Note</b> In this command, the <b>module</b> keyword refers to the stack member number. The module number that is part of the interface ID is always zero.
<b>protocol status</b>	(Optional) Displays the status of protocols enabled on interfaces.
<b>trunk</b>	(Optional) Displays trunk counters.



**Note** Though visible in the command-line help string, the **vlan** *vlan-id* keyword is not supported.

## Command Default

None

## Command Modes

Privileged EXEC

## Command History

Release	Modification
Cisco IOS XE 3.3SE	This command was introduced.

## Usage Guidelines

If you do not enter any keywords, all counters for all interfaces are included.

This is an example of partial output from the **show interfaces counters** command. It displays all counters for the switch.

```
Device# show interfaces counters
Port          InOctets    InUcastPkts  InMcastPkts  InBcastPkts
Gi1/0/1      0           0            0            0
Gi1/0/2      0           0            0            0
Gi1/0/3     95285341    43115        1178430      1950
Gi1/0/4      0           0            0            0
```

<output truncated>

This is an example of partial output from the **show interfaces counters module** command for stack member 2. It displays all counters for the specified switch in the stack.

```
Device# show interfaces counters module 2
Port          InOctets    InUcastPkts  InMcastPkts  InBcastPkts
Gi1/0/1       520         2            0            0
Gi1/0/2       520         2            0            0
Gi1/0/3       520         2            0            0
Gi1/0/4       520         2            0            0
```

<output truncated>

This is an example of partial output from the **show interfaces counters protocol status** command for all interfaces:

```
Device# show interfaces counters protocol status
Protocols allocated:
Vlan1: Other, IP
Vlan20: Other, IP, ARP
Vlan30: Other, IP, ARP
Vlan40: Other, IP, ARP
Vlan50: Other, IP, ARP
Vlan60: Other, IP, ARP
Vlan70: Other, IP, ARP
Vlan80: Other, IP, ARP
Vlan90: Other, IP, ARP
Vlan900: Other, IP, ARP
Vlan3000: Other, IP
Vlan3500: Other, IP
GigabitEthernet1/0/1: Other, IP, ARP, CDP
GigabitEthernet1/0/2: Other, IP
GigabitEthernet1/0/3: Other, IP
GigabitEthernet1/0/4: Other, IP
GigabitEthernet1/0/5: Other, IP
GigabitEthernet1/0/6: Other, IP
GigabitEthernet1/0/7: Other, IP
GigabitEthernet1/0/8: Other, IP
GigabitEthernet1/0/9: Other, IP
GigabitEthernet1/0/10: Other, IP, CDP
```

<output truncated>

This is an example of output from the **show interfaces counters trunk** command. It displays trunk counters for all interfaces.

```
Device# show interfaces counters trunk
Port          TrunkFramesTx  TrunkFramesRx  WrongEncap
Gi1/0/1       0              0              0
Gi1/0/2       0              0              0
Gi1/0/3       80678         0              0
Gi1/0/4       82320         0              0
Gi1/0/5       0              0              0
```

<output truncated>

# show interfaces switchport

To display the administrative and operational status of a switching (nonrouting) port, including port blocking and port protection settings, use the **show interfaces switchport** command in privileged EXEC mode.

**show interfaces** [*interface-id*] **switchport** [{**module number**}]

<b>Syntax Description</b>	<p><i>interface-id</i> (Optional) ID of the interface. Valid interfaces include physical ports (including type, stack member for stacking-capable switches, module, and port number) and port channels. The port channel range is 1 to 48.</p> <p><b>module number</b> (Optional) Displays switchport configuration of all interfaces on the switch or specified stack member.</p> <p>This option is not available if you entered a specific interface ID.</p>				
<b>Command Default</b>	None				
<b>Command Modes</b>	Privileged EXEC				
<b>Command History</b>	<table border="1"> <thead> <tr> <th>Release</th> <th>Modification</th> </tr> </thead> <tbody> <tr> <td>Cisco IOS XE 3.3SE</td> <td>This command was introduced.</td> </tr> </tbody> </table>	Release	Modification	Cisco IOS XE 3.3SE	This command was introduced.
Release	Modification				
Cisco IOS XE 3.3SE	This command was introduced.				

**Usage Guidelines** Use the **show interface switchport module number** command to display the switch port characteristics of all interfaces on that switch in the stack. If there is no switch with that module number in the stack, there is no output.

This is an example of output from the **show interfaces switchport** command for a port. The table that follows describes the fields in the display.



**Note** Private VLANs are not supported in this release, so those fields are not applicable.

```
Device# show interfaces gigabitethernet1/0/1 switchport
Name: Gi1/0/1
Switchport: Enabled
Administrative Mode: trunk
Operational Mode: down
Administrative Trunking Encapsulation: dot1q
Negotiation of Trunking: On
Access Mode VLAN: 1 (default)
Trunking Native Mode VLAN: 10 (VLAN0010)
Administrative Native VLAN tagging: enabled
Voice VLAN: none
Administrative private-vlan host-association: none
Administrative private-vlan mapping: none
Administrative private-vlan trunk native VLAN: none
Administrative private-vlan trunk Native VLAN tagging: enabled
Administrative private-vlan trunk encapsulation: dot1q
Administrative private-vlan trunk normal VLANs: none
Administrative private-vlan trunk associations: none
```

```

Administrative private-vlan trunk mappings: none
Operational private-vlan: none
Trunking VLANs Enabled: 11-20
Pruning VLANs Enabled: 2-1001
Capture Mode Disabled
Capture VLANs Allowed: ALL

```

```

Protected: false
Unknown unicast blocked: disabled
Unknown multicast blocked: disabled
Appliance trust: none

```

Field	Description
Name	Displays the port name.
Switchport	Displays the administrative and operational status of the port. In this display, the port is in switchport mode.
Administrative Mode Operational Mode	Displays the administrative and operational modes.
Administrative Trunking Encapsulation Operational Trunking Encapsulation Negotiation of Trunking	Displays the administrative and operational encapsulation method and whether trunking negotiation is enabled.
Access Mode VLAN	Displays the VLAN ID to which the port is configured.
Trunking Native Mode VLAN Trunking VLANs Enabled Trunking VLANs Active	Lists the VLAN ID of the trunk that is in native mode. Lists the allowed VLANs on the trunk. Lists the active VLANs on the trunk.
Pruning VLANs Enabled	Lists the VLANs that are pruning-eligible.
Protected	Displays whether or not protected port is enabled (True) or disabled (False) on the interface.
Unknown unicast blocked Unknown multicast blocked	Displays whether or not unknown multicast and unknown unicast traffic is blocked on the interface.
Voice VLAN	Displays the VLAN ID on which voice VLAN is enabled.
Appliance trust	Displays the class of service (CoS) setting of the data packets of the IP phone.

## show interfaces transceiver

To display the physical properties of a small form-factor pluggable (SFP) module interface, use the **show interfaces transceiver** command in EXEC mode.

**show interfaces** [*interface-id*] **transceiver** [{**detail** | **module number** | **properties** | **supported-list** | **threshold-table**}]

Syntax Description	
<i>interface-id</i>	(Optional) ID of the physical interface, including type, stack member (stacking-capable switches only) module, and port number.
<b>detail</b>	(Optional) Displays calibration properties, including high and low numbers and any alarm information for any Digital Optical Monitoring (DoM)-capable transceiver if one is installed in the switch.
<b>module number</b>	(Optional) Limits display to interfaces on module on the switch. The range is 1 to 9. This option is not available if you entered a specific interface ID.
<b>properties</b>	(Optional) Displays speed, duplex, and inline power settings on an interface.
<b>supported-list</b>	(Optional) Lists all supported transceivers.
<b>threshold-table</b>	(Optional) Displays alarm and warning threshold table.

Command Modes	
	User EXEC
	Privileged EXEC

Command History	Release	Modification
	Cisco IOS XE 3.3SE	This command was introduced.

### Examples

This is an example of output from the **show interfaces *interface-id* transceiver properties** command:

```
Device# show interfaces gigabitethernet1/1/1 transceiver properties
Name : Gi1/1/1
Administrative Speed: auto
Operational Speed: auto
Administrative Duplex: auto
Administrative Power Inline: enable
Operational Duplex: auto
Administrative Auto-MDIX: off
Operational Auto-MDIX: off
```

This is an example of output from the **show interfaces *interface-id* transceiver detail** command:

```
Device# show interfaces gigabitethernet1/1/1 transceiver detail
ITU Channel not available (Wavelength not available),
```

Transceiver is internally calibrated.  
 mA:milliamperes, dBm:decibels (milliwatts), N/A:not applicable.  
 ++:high alarm, +:high warning, -:low warning, -- :low alarm.  
 A2D readouts (if they differ), are reported in parentheses.  
 The threshold values are uncalibrated.

Port	Temperature (Celsius)	High Alarm Threshold (Celsius)	High Warn Threshold (Celsius)	Low Warn Threshold (Celsius)	Low Alarm Threshold (Celsius)
Gi1/1/1	29.9	74.0	70.0	0.0	-4.0
Port	Voltage (Volts)	High Alarm Threshold (Volts)	High Warn Threshold (Volts)	Low Warn Threshold (Volts)	Low Alarm Threshold (Volts)
Gi1/1/1	3.28	3.60	3.50	3.10	3.00
Port	Optical Transmit Power (dBm)	High Alarm Threshold (dBm)	High Warn Threshold (dBm)	Low Warn Threshold (dBm)	Low Alarm Threshold (dBm)
Gi1/1/1	1.8	7.9	3.9	0.0	-4.0
Port	Optical Receive Power (dBm)	High Alarm Threshold (dBm)	High Warn Threshold (dBm)	Low Warn Threshold (dBm)	Low Alarm Threshold (dBm)
Gi1/1/1	-23.5	-5.0	-9.0	-28.2	-32.2

This is an example of output from the **show interfaces transceiver threshold-table** command:

```
Device# show interfaces transceiver threshold-table
```

	Optical Tx	Optical Rx	Temp	Laser Bias current	Voltage
DWDM GBIC					
Min1	-4.00	-32.00	-4	N/A	4.65
Min2	0.00	-28.00	0	N/A	4.75
Max2	4.00	-9.00	70	N/A	5.25
Max1	7.00	-5.00	74	N/A	5.40
DWDM SFP					
Min1	-4.00	-32.00	-4	N/A	3.00
Min2	0.00	-28.00	0	N/A	3.10
Max2	4.00	-9.00	70	N/A	3.50
Max1	8.00	-5.00	74	N/A	3.60
RX only WDM GBIC					
Min1	N/A	-32.00	-4	N/A	4.65
Min2	N/A	-28.30	0	N/A	4.75
Max2	N/A	-9.00	70	N/A	5.25
Max1	N/A	-5.00	74	N/A	5.40
DWDM XENPAK					
Min1	-5.00	-28.00	-4	N/A	N/A
Min2	-1.00	-24.00	0	N/A	N/A
Max2	3.00	-7.00	70	N/A	N/A
Max1	7.00	-3.00	74	N/A	N/A
DWDM X2					
Min1	-5.00	-28.00	-4	N/A	N/A
Min2	-1.00	-24.00	0	N/A	N/A
Max2	3.00	-7.00	70	N/A	N/A
Max1	7.00	-3.00	74	N/A	N/A
DWDM XFP					
Min1	-5.00	-28.00	-4	N/A	N/A

## show interfaces transceiver

Min2	-1.00	-24.00	0	N/A	N/A
Max2	3.00	-7.00	70	N/A	N/A
Max1	7.00	-3.00	74	N/A	N/A
CWDm X2					
Min1	N/A	N/A	0	N/A	N/A
Min2	N/A	N/A	0	N/A	N/A
Max2	N/A	N/A	0	N/A	N/A
Max1	N/A	N/A	0	N/A	N/A

<output truncated>

# show memory platform

To display memory statistics of a platform, use the **show memory platform** command in privileged EXEC mode.

**show memory platform** [{**compressed-swap** | **information** | **page-merging**}]

Syntax Description	
<b>compressed-swap</b>	(Optional) Displays platform memory compressed-swap information.
<b>information</b>	(Optional) Displays general information about the platform.
<b>page-merging</b>	(Optional) Displays platform memory page-merging information.

**Command Modes** Privileged EXEC (#)

Command History	Release	Modification
	Cisco IOS XE Denali 16.1.1	This command was introduced.

**Usage Guidelines** Prior to Cisco IOS XE Denali 16.3.1, the Free Memory displayed in the command output was obtained from the underlying Linux kernel. This value was not accurate because some memory chunks that was available for use was not considered as free memory.

In Cisco IOS XE Denali 16.3.1, the free memory is accurately computed and displayed in the Free Memory field of the command output.

## Examples

The following is sample output from the **show memory platform** command:

```
Switch# show memory platform

Virtual memory : 12874653696
Pages resident : 627041
Major page faults: 2220
Minor page faults: 2348631

Architecture : mips64
Memory (kB)
  Physical : 3976852
  Total : 3976852
  Used : 2761276
  Free : 1215576
  Active : 2128196
  Inactive : 1581856
  Inact-dirty : 0
  Inact-clean : 0
  Dirty : 0
  AnonPages : 1294984
  Bounce : 0
  Cached : 1978168
  Commit Limit : 1988424
  Committed As : 3343324
  High Total : 0
  High Free : 0
```

## show memory platform

```

Low Total      : 3976852
Low Free       : 1215576
Mapped         : 516316
NFS Unstable   : 0
Page Tables    : 17124
Slab           : 0
Vmmalloc Chunk : 1069542588
Vmmalloc Total : 1069547512
Vmmalloc Used  : 2588
Writeback      : 0
HugePages Total: 0
HugePages Free : 0
HugePages Rsvd : 0
HugePage Size  : 2048

Swap (kB)
Total          : 0
Used           : 0
Free           : 0
Cached         : 0

Buffers (kB)   : 437136

Load Average
1-Min          : 1.04
5-Min          : 1.16
15-Min         : 0.94

```

The following is sample output from the **show memory platform information** command:

```
Device# show memory platform information
```

```

Virtual memory : 12870438912
Pages resident : 626833
Major page faults: 2222
Minor page faults: 2362455

Architecture   : mips64
Memory (kB)
Physical       : 3976852
Total          : 3976852
Used           : 2761224
Free           : 1215628
Active         : 2128060
Inactive       : 1584444
Inact-dirty    : 0
Inact-clean    : 0
Dirty          : 284
AnonPages      : 1294656
Bounce         : 0
Cached         : 1979644
Commit Limit   : 1988424
Committed As   : 3342184
High Total     : 0
High Free      : 0
Low Total      : 3976852
Low Free       : 1215628
Mapped         : 516212
NFS Unstable   : 0
Page Tables    : 17096
Slab           : 0
Vmmalloc Chunk : 1069542588
Vmmalloc Total : 1069547512

```

```
VMmalloc Used : 2588
Writeback      : 0
HugePages Total: 0
HugePages Free : 0
HugePages Rsvd : 0
HugePage Size  : 2048

Swap (kB)
Total          : 0
Used           : 0
Free           : 0
Cached         : 0

Buffers (kB)   : 438228

Load Average
1-Min          : 1.54
5-Min          : 1.27
15-Min         : 0.99
```

# show module

To display module information such as switch number, model number, serial number, hardware revision number, software version, MAC address and so on, use this command in user EXEC or privileged EXEC mode.

```
show module [{switch-num}]
```

<b>Syntax Description</b>	<i>switch-num</i>	(Optional) Number of the switch.
<b>Command Default</b>	None	
<b>Command Modes</b>	User EXEC (>) Privileged EXEC (#)	
<b>Command History</b>	<b>Release</b>	<b>Modification</b>
	Cisco IOS XE Denali 16.1.1	This command was introduced.
<b>Usage Guidelines</b>	Entering the <b>show module</b> command without the <i>switch-num</i> argument is the same as entering the show module all command.	
<b>Examples</b>	This example shows how to display information for all the modules on a Cisco Catalyst 3850 Series switch:	

## show mgmt-infra trace messages ilpower

To display inline power messages within a trace buffer, use the **show mgmt-infra trace messages ilpower** command in privileged EXEC mode.

**show mgmt-infra trace messages ilpower** [**switch** *stack-member-number*]

<b>Syntax Description</b>	<b>switch</b> <i>stack-member-number</i> (Optional) Specifies the stack member number for which to display inline power messages within a trace buffer.				
<b>Command Default</b>	None				
<b>Command Modes</b>	Privileged EXEC				
<b>Command History</b>	<table border="1"> <thead> <tr> <th>Release</th> <th>Modification</th> </tr> </thead> <tbody> <tr> <td>Cisco IOS XE 3.3SE</td> <td>This command was introduced.</td> </tr> </tbody> </table>	Release	Modification	Cisco IOS XE 3.3SE	This command was introduced.
Release	Modification				
Cisco IOS XE 3.3SE	This command was introduced.				

This is an output example from the **show mgmt-infra trace messages ilpower** command:

```
Device# show mgmt-infra trace messages ilpower
[10/23/12 14:05:10.984 UTC 1 3] Initialized inline power system configuration fo
r slot 1.
[10/23/12 14:05:10.984 UTC 2 3] Initialized inline power system configuration fo
r slot 2.
[10/23/12 14:05:10.984 UTC 3 3] Initialized inline power system configuration fo
r slot 3.
[10/23/12 14:05:10.984 UTC 4 3] Initialized inline power system configuration fo
r slot 4.
[10/23/12 14:05:10.984 UTC 5 3] Initialized inline power system configuration fo
r slot 5.
[10/23/12 14:05:10.984 UTC 6 3] Initialized inline power system configuration fo
r slot 6.
[10/23/12 14:05:10.984 UTC 7 3] Initialized inline power system configuration fo
r slot 7.
[10/23/12 14:05:10.984 UTC 8 3] Initialized inline power system configuration fo
r slot 8.
[10/23/12 14:05:10.984 UTC 9 3] Initialized inline power system configuration fo
r slot 9.
[10/23/12 14:05:10.984 UTC a 3] Inline power subsystem initialized.
[10/23/12 14:05:18.908 UTC b 264] Create new power pool for slot 1
[10/23/12 14:05:18.909 UTC c 264] Set total inline power to 450 for slot 1
[10/23/12 14:05:20.273 UTC d 3] PoE is not supported on .
[10/23/12 14:05:20.288 UTC e 3] PoE is not supported on .
[10/23/12 14:05:20.299 UTC f 3] PoE is not supported on .
[10/23/12 14:05:20.311 UTC 10 3] PoE is not supported on .
[10/23/12 14:05:20.373 UTC 11 98] Inline power process post for switch 1
[10/23/12 14:05:20.373 UTC 12 98] PoE post passed on switch 1
[10/23/12 14:05:20.379 UTC 13 3] Slot #1: PoE initialization for board id 16387
[10/23/12 14:05:20.379 UTC 14 3] Set total inline power to 450 for slot 1
[10/23/12 14:05:20.379 UTC 15 3] Gi1/0/1 port config Initialized
[10/23/12 14:05:20.379 UTC 16 3] Interface Gi1/0/1 initialization done.
[10/23/12 14:05:20.380 UTC 17 3] Gi1/0/24 port config Initialized
[10/23/12 14:05:20.380 UTC 18 3] Interface Gi1/0/24 initialization done.
[10/23/12 14:05:20.380 UTC 19 3] Slot #1: initialization done.
```

```
show mgmt-infra trace messages ilpower
```

```
[10/23/12 14:05:50.440 UTC 1a 3] Slot #1: PoE initialization for board id 16387  
[10/23/12 14:05:50.440 UTC 1b 3] Duplicate init event
```

## show mgmt-infra trace messages ilpower-ha

To display inline power high availability messages within a trace buffer, use the **show mgmt-infra trace messages ilpower-ha** command in privileged EXEC mode.

```
show mgmt-infra trace messages ilpower-ha [switch stack-member-number]
```

<b>Syntax Description</b>	<b>switch</b> <i>stack-member-number</i> (Optional) Specifies the stack member number for which to display inline power messages within a trace buffer.				
<b>Command Default</b>	None				
<b>Command Modes</b>	Privileged EXEC				
<b>Command History</b>	<table border="1"> <thead> <tr> <th>Release</th> <th>Modification</th> </tr> </thead> <tbody> <tr> <td>Cisco IOS XE 3.3SE</td> <td>This command was introduced.</td> </tr> </tbody> </table>	Release	Modification	Cisco IOS XE 3.3SE	This command was introduced.
Release	Modification				
Cisco IOS XE 3.3SE	This command was introduced.				

This is an output example from the **show mgmt-infra trace messages ilpower-ha** command:

```
Device# show mgmt-infra trace messages ilpower-ha
[10/23/12 14:04:48.087 UTC 1 3] NG3K_ILPOWER_HA: Created NGWC ILP CF client successfully.
```

## show mgmt-infra trace messages platform-mgr-poe

To display platform manager Power over Ethernet (PoE) messages within a trace buffer, use the **show mgmt-infra trace messages platform-mgr-poe** privileged EXEC command.

**show mgmt-infra trace messages platform-mgr-poe** [**switch** *stack-member-number*]

<b>Syntax Description</b>	<b>switch</b> <i>stack-member-number</i> (Optional) Specifies the stack member number for which to display messages within a trace buffer.				
<b>Command Default</b>	None				
<b>Command Modes</b>	Privileged EXEC				
<b>Command History</b>	<table border="1"> <thead> <tr> <th>Release</th> <th>Modification</th> </tr> </thead> <tbody> <tr> <td>Cisco IOS XE 3.3SE</td> <td>This command was introduced.</td> </tr> </tbody> </table>	Release	Modification	Cisco IOS XE 3.3SE	This command was introduced.
Release	Modification				
Cisco IOS XE 3.3SE	This command was introduced.				

This is an example of partial output from the **show mgmt-infra trace messages platform-mgr-poe** command:

```
Device# show mgmt-infra trace messages platform-mgr-poe
[10/23/12 14:04:06.431 UTC 1 5495] PoE Info: get power controller param sent:
[10/23/12 14:04:06.431 UTC 2 5495] PoE Info: POE_SHUT sent for port 1 (0:0)
[10/23/12 14:04:06.431 UTC 3 5495] PoE Info: POE_SHUT sent for port 2 (0:1)
[10/23/12 14:04:06.431 UTC 4 5495] PoE Info: POE_SHUT sent for port 3 (0:2)
[10/23/12 14:04:06.431 UTC 5 5495] PoE Info: POE_SHUT sent for port 4 (0:3)
[10/23/12 14:04:06.431 UTC 6 5495] PoE Info: POE_SHUT sent for port 5 (0:4)
[10/23/12 14:04:06.431 UTC 7 5495] PoE Info: POE_SHUT sent for port 6 (0:5)
[10/23/12 14:04:06.431 UTC 8 5495] PoE Info: POE_SHUT sent for port 7 (0:6)
[10/23/12 14:04:06.431 UTC 9 5495] PoE Info: POE_SHUT sent for port 8 (0:7)
[10/23/12 14:04:06.431 UTC a 5495] PoE Info: POE_SHUT sent for port 9 (0:8)
[10/23/12 14:04:06.431 UTC b 5495] PoE Info: POE_SHUT sent for port 10 (0:9)
[10/23/12 14:04:06.431 UTC c 5495] PoE Info: POE_SHUT sent for port 11 (0:10)
[10/23/12 14:04:06.431 UTC d 5495] PoE Info: POE_SHUT sent for port 12 (0:11)
[10/23/12 14:04:06.431 UTC e 5495] PoE Info: POE_SHUT sent for port 13 (e:0)
[10/23/12 14:04:06.431 UTC f 5495] PoE Info: POE_SHUT sent for port 14 (e:1)
[10/23/12 14:04:06.431 UTC 10 5495] PoE Info: POE_SHUT sent for port 15 (e:2)
[10/23/12 14:04:06.431 UTC 11 5495] PoE Info: POE_SHUT sent for port 16 (e:3)
[10/23/12 14:04:06.431 UTC 12 5495] PoE Info: POE_SHUT sent for port 17 (e:4)
[10/23/12 14:04:06.431 UTC 13 5495] PoE Info: POE_SHUT sent for port 18 (e:5)
[10/23/12 14:04:06.431 UTC 14 5495] PoE Info: POE_SHUT sent for port 19 (e:6)
[10/23/12 14:04:06.431 UTC 15 5495] PoE Info: POE_SHUT sent for port 20 (e:7)
[10/23/12 14:04:06.431 UTC 16 5495] PoE Info: POE_SHUT sent for port 21 (e:8)
[10/23/12 14:04:06.431 UTC 17 5495] PoE Info: POE_SHUT sent for port 22 (e:9)
[10/23/12 14:04:06.431 UTC 18 5495] PoE Info: POE_SHUT sent for port 23 (e:10)
```

# show network-policy profile

To display the network-policy profiles, use the **show network policy profile** command in privileged EXEC mode.

**show network-policy profile** [*profile-number*] [**detail**]

<b>Syntax Description</b>	<i>profile-number</i> (Optional) Displays the network-policy profile number. If no profile is entered, all network-policy profiles appear.	
	<b>detail</b> (Optional) Displays detailed status and statistics information.	
<b>Command Default</b>	None	
<b>Command Modes</b>	Privileged EXEC	
<b>Command History</b>	<b>Release</b>	<b>Modification</b>
	Cisco IOS XE 3.3SE	This command was introduced.

This is an example of output from the **show network-policy profile** command:

```
Device# show network-policy profile
Network Policy Profile 10
  voice vlan 17 cos 4
  Interface:
  none
Network Policy Profile 30
  voice vlan 30 cos 5
  Interface:
  none
Network Policy Profile 36
  voice vlan 4 cos 3
  Interface:
  Interface_id
```

# show platform hardware fed switch forward

To display device-specific hardware information, use the **show platform hardware fed switch** *switch\_number* command.

This topic elaborates only the forwarding-specific options, that is, the options available with the **show platform hardware fed switch** {*switch\_num* | **active** | **standby**} **forward summary** command.

The output of the **show platform hardware fed switch** *switch\_number* **forward summary** displays all the details about the forwarding decision taken for the packet.

**show platform hardware fed switch** {*switch\_num* | **active** | **standby**} **forward summary**

## Syntax Description

**switch** {*switch\_num* | **active** | **standby** } The switch for which you want to display information. You have the following options :

- *switch\_num*—ID of the switch.
- **active**—Displays information relating to the active switch.
- **standby**—Displays information relating to the standby switch, if available.

**forward summary** Displays packet forwarding information.

**Note** The keyword **summary** was added in the Cisco IOS XE Denali 16.3.1 release.  
Support for the keyword **summary** has been discontinued in the Cisco IOS XE Everest 16.6.1 release and later releases.

## Command Modes

Privileged EXEC

## Command History

Release	Modification
Cisco IOS XE 3.3SE	This command was introduced.
Cisco IOS XE Denali 16.3.1	Support for the keyword <b>summary</b> was added.
Cisco IOS XE Everest 16.6.1 and later releases	Support for the keyword <b>summary</b> was discontinued.

## Usage Guidelines

Do not use this command unless a technical support representative asks you to. Use this command only when you are working directly with a technical support representative while troubleshooting a problem.

Fields displayed in the command output are explained below.

- Station Index : The Station Index is the result of the layer 2 lookup and points to a station descriptor which provides the following:
  - Destination Index : Determines the egress port(s) to which the packets should be sent to. Global Port Number(GPN) can be used as the destination index. A destination index with 15 down to 12

bits set indicates the GPN to be used. For example, destination index - 0xF04E corresponds to GPN - 78 (0x4e).

- Rewrite Index : Determines what needs to be done with the packets. For layer 2 switching, this is typically a bridging action
- Flexible Lookup Pipeline Stages(FPS) : Indicates the forwarding decision that was taken for the packet - routing or bridging
- Replication Bit Map : Determines if the packets should be sent to CPU or stack
  - Local Data Copy = 1
  - Remote Data copy = 0
  - Local CPU Copy = 0
  - Remote CPU Copy = 0

### Example

This is an example of output from the **show platform hardware fed switch** {*switch\_num* | **active** | **standby** } **forward summary** command.

```
Device#show platform hardware fed switch 1 forward summary
Time: Fri Sep 16 08:25:00 PDT 2016
```

Incomming Packet Details:

```
###[ Ethernet ]###
  dst      = 00:51:0f:f2:0e:11
  src      = 00:1d:01:85:ba:22
  type     = ARP
###[ ARP ]###
  hwtype   = 0x1
  ptype    = IPv4
  hwlen    = 6
  plen     = 4
  op       = is-at
  hwsrc    = 00:1d:01:85:ba:22
  psrc     = 10.10.1.33
  hwdst    = 00:51:0f:f2:0e:11
  pdst     = 10.10.1.1

Ingress:
Switch           : 1
Port             : GigabitEthernet1/0/1
Global Port Number : 1
Local Port Number  : 1
Asic Port Number  : 21
ASIC Number      : 0
STP state        :
                  blkLrn31to0: 0xffdffffd
                  blkFwd31to0: 0xffdffffd
Vlan             : 1
Station Descriptor : 170
DestIndex        : 0xF009
DestModIndex     : 2
RewriteIndex     : 2
Forwarding Decision: FPS 2A L2 Destination
```

**show platform hardware fed switch forward**

```
Replication Bitmap:
Local CPU copy      : 0
Local Data copy     : 1
Remote CPU copy     : 0
Remote Data copy    : 0

Egress:
Switch              : 1
Outgoing Port       : GigabitEthernet1/0/9
Global Port Number  : 9
ASIC Number         : 0
Vlan                 : 1
```

# show platform resources

To display platform resource information, use the **show platform resources** command in privileged EXEC mode.

## show platform resources

This command has no arguments or keywords.

---

**Command Modes** Privileged EXEC (#)

---

<b>Command History</b>	<b>Release</b>	<b>Modification</b>
	Cisco IOS XE Denali 16.1.1	This command was introduced.

---



---

**Usage Guidelines** The output of this command displays the used memory, which is total memory minus the accurate free memory.

## Example

The following is sample output from the **show platform resources** command:

```
Switch# show platform resources
```

```
**State Acronym: H - Healthy, W - Warning, C - Critical
```

Resource State	Usage	Max	Warning	Critical
Control Processor H	7.20%	100%	90%	95%
DRAM H	2701MB (69%)	3883MB	90%	95%

# show platform software ilpower

To display the inline power details of all the PoE ports on the device, use the **show platform software ilpower** command in privileged EXEC mode.

**show platform software ilpower** { **details** | **port** { *GigabitEthernet interface-number* } | **system slot-number** }

Syntax Description		
<b>details</b>		Displays inline power details for all the interfaces.
<b>port</b>		Displays inline power port configuration.
<b>GigabitEthernet interface-number</b>		The GigabitEthernet interface number. Values range from 0 to 9.
<b>system slot-number</b>		Displays inline power system configuration.

**Command Modes** Privileged EXEC (#)

Command History	Release	Modification
	Cisco IOS XE Denali 16.3.2	This command was modified. The keyword <b>details</b> argument was added.
	Cisco IOS XE Denali 16.1.1	The command was introduced.

## Examples

The following is sample output from the **show platform software ilpower details** command:

```
Device# show platform software ilpower details
ILP Port Configuration for interface Gi1/0/1
  Initialization Done:   Yes
  ILP Supported:        Yes
  ILP Enabled:          Yes
  POST:                 Yes
  Detect On:            No
  Powered Device Detected:      No
  Powered Device Class Done:    No
  Cisco Powered Device:        No
  Power is On:                No
  Power Denied:               No
  Powered Device Type:         Null
  Powerd Device Class:        Null
  Power State:                 NULL
  Current State:               NGWC_ILP_DETECTING_S
  Previous State:              NGWC_ILP_SHUT_OFF_S
  Requested Power in milli watts: 0
  Short Circuit Detected:      0
  Short Circuit Count:         0
  Cisco Powerd Device Detect Count: 0
  Spare Pair mode:            0
  IEEE Detect:                 Stopped
  IEEE Short:                  Stopped
  Link Down:                   Stopped
  Voltage sense:               Stopped
  Spare Pair Architecture:     1
```

```
Signal Pair Power allocation in milli watts: 0
Spare Pair Power On: 0
Powered Device power state: 0
Timer:
  Power Good: Stopped
  Power Denied: Stopped
  Cisco Powered Device Detect: Stopped
```

# show platform software process list

To display the list of running processes on a platform, use the **show platform software process list** command in privileged EXEC mode.

**show platform software process list switch** {*switch-number* | **active** | **standby**} {**0** | **F0** | **R0**} [**{name** *process-name* | **process-id** *process-ID* | **sort** **memory** | **summary**}]

## Syntax Description

<b>switch</b> <i>switch-number</i>	Displays information about the switch. Valid values for <i>switch-number</i> argument are from 0 to 9.
<b>active</b>	Displays information about the active instance of the switch.
<b>standby</b>	Displays information about the standby instance of the switch.
<b>0</b>	Displays information about the shared port adapters (SPA) Interface Processor slot 0.
<b>F0</b>	Displays information about the Embedded Service Processor (ESP) slot 0.
<b>R0</b>	Displays information about the Route Processor (RP) slot 0.
<b>name</b> <i>process-name</i>	(Optional) Displays information about the specified process.
<b>process-id</b> <i>process-ID</i>	(Optional) Displays information about the specified process ID.
<b>sort</b>	(Optional) Displays information sorted according to processes.
<b>memory</b>	(Optional) Displays information sorted according to memory.
<b>summary</b>	(Optional) Displays a summary of the process memory of the host device.

## Command Modes

Privileged EXEC (#)

## Command History

Release	Modification
Cisco IOS XE Denali 16.1.1	The command was introduced.

## Usage Guidelines

Prior to Cisco IOS XE Denali 16.3.1, the Free Memory displayed in the command output was obtained from the underlying Linux kernel. This value was not accurate because some memory chunks that was available for use was not considered as free memory.

In Cisco IOS XE Denali 16.3.1, the free memory is accurately computed and displayed in the Free Memory field of the command output.

## Examples

The following is sample output from the **show platform software process list switch active R0** command:

```
Switch# show platform software process list switch active R0 summary

Total number of processes: 278
  Running                   : 2
```

```
Sleeping      : 276
Disk sleeping : 0
Zombies       : 0
Stopped       : 0
Paging        : 0

Up time       : 8318
Idle time     : 0
User time     : 216809
Kernel time   : 78931

Virtual memory : 12933324800
Pages resident : 634061
Major page faults: 2228
Minor page faults: 3491744

Architecture  : mips64
Memory (kB)
  Physical    : 3976852
  Total       : 3976852
  Used        : 2766952
  Free        : 1209900
  Active      : 2141344
  Inactive    : 1589672
  Inact-dirty : 0
  Inact-clean : 0
  Dirty       : 4
  AnonPages   : 1306800
  Bounce      : 0
  Cached      : 1984688
  Commit Limit : 1988424
  Committed As : 3358528
  High Total   : 0
  High Free    : 0
  Low Total    : 3976852
  Low Free     : 1209900
  Mapped       : 520528
  NFS Unstable : 0
  Page Tables  : 17328
  Slab         : 0
  VMmalloc Chunk : 1069542588
  VMmalloc Total : 1069547512
  VMmalloc Used : 2588
  Writeback    : 0
  HugePages Total: 0
  HugePages Free : 0
  HugePages Rsvd : 0
  HugePage Size : 2048

Swap (kB)
  Total       : 0
  Used        : 0
  Free        : 0
  Cached      : 0

Buffers (kB) : 439528

Load Average
  1-Min       : 1.13
  5-Min       : 1.18
  15-Min      : 0.92
```

# show platform software process slot switch

To display platform software process switch information, use the **show platform software process slot switch** command in privileged EXEC mode.

```
show platform software process slot switch {switch-number | active | standby} {0 | F0 | R0}
monitor [{cycles no-of-times [{interval delay [{lines number}]}}]
```

## Syntax Description

<i>switch-number</i>	Switch number.
<b>active</b>	Specifies the active instance.
<b>standby</b>	Specifies the standby instance.
<b>0</b>	Specifies the shared port adapter (SPA) interface processor slot 0.
<b>F0</b>	Specifies the Embedded Service Processor (ESP) slot 0.
<b>R0</b>	Specifies the Route Processor (RP) slot 0.
<b>monitor</b>	Monitors the running processes.
<i>cycles no-of-times</i>	(Optional) Sets the number of times to run monitor command. Valid values are from 1 to 4294967295. The default is 5.
<i>interval delay</i>	(Optional) Sets a delay after each . Valid values are from 0 to 300. The default is 3.
<i>lines number</i>	(Optional) Sets the number of lines of output displayed. Valid values are from 0 to 512. The default is 0.

## Command Modes

Privileged EXEC (#)

## Command History

Release	Modification
Cisco IOS XE Denali 16.1.1	This command was introduced.

## Usage Guidelines

The output of the **show platform software process slot switch** and **show processes cpu platform monitor location** commands display the output of the Linux **top** command. The output of these commands display Free memory and Used memory as displayed by the Linux **top** command. The values displayed for the Free memory and Used memory by these commands do not match the values displayed by the output of other platform-memory related CLIs.

## Examples

The following is sample output from the **show platform software process slot switch active R0 monitor** command:

```
Switch# show platform software process slot switch active R0 monitor
```

```
top - 00:01:52 up 1 day, 11:20, 0 users, load average: 0.50, 0.68, 0.83
Tasks: 311 total, 2 running, 309 sleeping, 0 stopped, 0 zombie
Cpu(s): 7.4%us, 3.3%sy, 0.0%ni, 89.2%id, 0.0%wa, 0.0%hi, 0.1%si, 0.0%st
Mem: 3976844k total, 3955036k used, 21808k free, 419312k buffers
Swap: 0k total, 0k used, 0k free, 1946764k cached
```

```

PID USER      PR  NI  VIRT  RES  SHR  S  %CPU  %MEM    TIME+  COMMAND
 5693 root      20   0  3448 1368  912  R   7   0.0   0:00.07 top
17546 root      20   0 2044m 244m  79m  S   7   6.3 186:49.08 fed main event
18662 root      20   0 1806m 678m 263m  S   5  17.5 215:32.38 linux_iods-imag
30276 root      20   0  171m  42m  33m  S   5   1.1 125:06.77 repm
17835 root      20   0  935m  74m  63m  S   4   1.9  82:28.31 sif_mgr
18534 root      20   0  182m 150m  10m  S   2   3.9   8:12.08 smand
   1 root      20   0  8440 4740 2184  S   0   0.1   0:09.52 systemd
   2 root      20   0    0    0    0  S   0   0.0   0:00.00 kthreadd
   3 root      20   0    0    0    0  S   0   0.0   0:02.86 ksoftirqd/0
   5 root       0 -20    0    0    0  S   0   0.0   0:00.00 kworker/0:0H
   7 root      RT   0    0    0    0  S   0   0.0   0:01.44 migration/0
   8 root      20   0    0    0    0  S   0   0.0   0:00.00 rcu_bh
   9 root      20   0    0    0    0  S   0   0.0   0:23.08 rcu_sched
  10 root      20   0    0    0    0  S   0   0.0   0:58.04 rcuc/0
  11 root      20   0    0    0    0  S   0   0.0 21:35.60 rcuc/1
  12 root      RT   0    0    0    0  S   0   0.0   0:01.33 migration/1

```

#### Related Commands

Command	Description
<b>show processes cpu platform monitor location</b>	Displays information about the CPU utilization of the IOS-XE processes.

# show platform software status control-processor

To display platform software control-processor status, use the **show platform software status control-processor** command in privileged EXEC mode.

**show platform software status control-processor** [{brief}]

<b>Syntax Description</b>	<b>brief</b> (Optional) Displays a summary of the platform control-processor status.
---------------------------	--

<b>Command Modes</b>	Privileged EXEC (#)
----------------------	---------------------

<b>Command History</b>	<b>Release</b>	<b>Modification</b>
	Cisco IOS XE Denali 16.1.1	This command was introduced.

<b>Usage Guidelines</b>	Prior to Cisco IOS XE Denali 16.3.1, the Free Memory displayed in the command output was obtained from the underlying Linux kernel. This value was not accurate because some memory chunks that was available for use was not considered as free memory.
-------------------------	--

In Cisco IOS XE Denali 16.3.1, the free memory is accurately computed and displayed in the Free Memory field of the command output.

## Examples

The following is sample output from the **show platform memory software status control-processor** command:

```
Switch# show platform software status control-processor

2-RP0: online, statistics updated 7 seconds ago
Load Average: healthy
  1-Min: 1.00, status: healthy, under 5.00
  5-Min: 1.21, status: healthy, under 5.00
 15-Min: 0.90, status: healthy, under 5.00
Memory (kb): healthy
  Total: 3976852
  Used: 2766284 (70%), status: healthy
  Free: 1210568 (30%)
  Committed: 3358008 (84%), under 95%
Per-core Statistics
CPU0: CPU Utilization (percentage of time spent)
  User: 4.40, System: 1.70, Nice: 0.00, Idle: 93.80
  IRQ: 0.00, SIRQ: 0.10, IOWait: 0.00
CPU1: CPU Utilization (percentage of time spent)
  User: 3.80, System: 1.20, Nice: 0.00, Idle: 94.90
  IRQ: 0.00, SIRQ: 0.10, IOWait: 0.00
CPU2: CPU Utilization (percentage of time spent)
  User: 7.00, System: 1.10, Nice: 0.00, Idle: 91.89
  IRQ: 0.00, SIRQ: 0.00, IOWait: 0.00
CPU3: CPU Utilization (percentage of time spent)
  User: 4.49, System: 0.69, Nice: 0.00, Idle: 94.80
  IRQ: 0.00, SIRQ: 0.00, IOWait: 0.00

3-RP0: unknown, statistics updated 2 seconds ago
Load Average: healthy
  1-Min: 0.24, status: healthy, under 5.00
  5-Min: 0.27, status: healthy, under 5.00
```

```
15-Min: 0.32, status: healthy, under 5.00
Memory (kb): healthy
  Total: 3976852
  Used: 2706768 (68%), status: healthy
  Free: 1270084 (32%)
  Committed: 3299332 (83%), under 95%
Per-core Statistics
CPU0: CPU Utilization (percentage of time spent)
  User: 4.50, System: 1.20, Nice: 0.00, Idle: 94.20
  IRQ: 0.00, SIRQ: 0.10, IOWait: 0.00
CPU1: CPU Utilization (percentage of time spent)
  User: 5.20, System: 0.50, Nice: 0.00, Idle: 94.29
  IRQ: 0.00, SIRQ: 0.00, IOWait: 0.00
CPU2: CPU Utilization (percentage of time spent)
  User: 3.60, System: 0.70, Nice: 0.00, Idle: 95.69
  IRQ: 0.00, SIRQ: 0.00, IOWait: 0.00
CPU3: CPU Utilization (percentage of time spent)
  User: 3.00, System: 0.60, Nice: 0.00, Idle: 96.39
  IRQ: 0.00, SIRQ: 0.00, IOWait: 0.00

4-RP0: unknown, statistics updated 2 seconds ago
Load Average: healthy
  1-Min: 0.21, status: healthy, under 5.00
  5-Min: 0.24, status: healthy, under 5.00
  15-Min: 0.24, status: healthy, under 5.00
Memory (kb): healthy
  Total: 3976852
  Used: 1452404 (37%), status: healthy
  Free: 2524448 (63%)
  Committed: 1675120 (42%), under 95%
Per-core Statistics
CPU0: CPU Utilization (percentage of time spent)
  User: 2.30, System: 0.40, Nice: 0.00, Idle: 97.30
  IRQ: 0.00, SIRQ: 0.00, IOWait: 0.00
CPU1: CPU Utilization (percentage of time spent)
  User: 4.19, System: 0.69, Nice: 0.00, Idle: 95.10
  IRQ: 0.00, SIRQ: 0.00, IOWait: 0.00
CPU2: CPU Utilization (percentage of time spent)
  User: 4.79, System: 0.79, Nice: 0.00, Idle: 94.40
  IRQ: 0.00, SIRQ: 0.00, IOWait: 0.00
CPU3: CPU Utilization (percentage of time spent)
  User: 2.10, System: 0.40, Nice: 0.00, Idle: 97.50
  IRQ: 0.00, SIRQ: 0.00, IOWait: 0.00

9-RP0: unknown, statistics updated 4 seconds ago
Load Average: healthy
  1-Min: 0.20, status: healthy, under 5.00
  5-Min: 0.35, status: healthy, under 5.00
  15-Min: 0.35, status: healthy, under 5.00
Memory (kb): healthy
  Total: 3976852
  Used: 1451328 (36%), status: healthy
  Free: 2525524 (64%)
  Committed: 1675932 (42%), under 95%
Per-core Statistics
CPU0: CPU Utilization (percentage of time spent)
  User: 1.90, System: 0.50, Nice: 0.00, Idle: 97.60
  IRQ: 0.00, SIRQ: 0.00, IOWait: 0.00
CPU1: CPU Utilization (percentage of time spent)
  User: 4.39, System: 0.19, Nice: 0.00, Idle: 95.40
  IRQ: 0.00, SIRQ: 0.00, IOWait: 0.00
CPU2: CPU Utilization (percentage of time spent)
  User: 5.70, System: 1.00, Nice: 0.00, Idle: 93.30
  IRQ: 0.00, SIRQ: 0.00, IOWait: 0.00
```

**show platform software status control-processor**

```

CPU3: CPU Utilization (percentage of time spent)
  User:  1.30, System:  0.60, Nice:  0.00, Idle: 98.00
  IRQ:  0.00, SIRQ:  0.10, IOWait:  0.00

```

The following is sample output from the **show platform memory software status control-processor brief** command:

```
Switch# show platform software status control-processor brief
```

## Load Average

Slot	Status	1-Min	5-Min	15-Min
2-RP0	Healthy	1.10	1.21	0.91
3-RP0	Healthy	0.23	0.27	0.31
4-RP0	Healthy	0.11	0.21	0.22
9-RP0	Healthy	0.10	0.30	0.34

## Memory (kB)

Slot	Status	Total	Used (Pct)	Free (Pct)	Committed (Pct)
2-RP0	Healthy	3976852	2766956 (70%)	1209896 (30%)	3358352 (84%)
3-RP0	Healthy	3976852	2706824 (68%)	1270028 (32%)	3299276 (83%)
4-RP0	Healthy	3976852	1451888 (37%)	2524964 (63%)	1675076 (42%)
9-RP0	Healthy	3976852	1451580 (37%)	2525272 (63%)	1675952 (42%)

## CPU Utilization

Slot	CPU	User	System	Nice	Idle	IRQ	SIRQ	IOWait
2-RP0	0	4.10	2.00	0.00	93.80	0.00	0.10	0.00
	1	4.60	1.00	0.00	94.30	0.00	0.10	0.00
	2	6.50	1.10	0.00	92.40	0.00	0.00	0.00
	3	5.59	1.19	0.00	93.20	0.00	0.00	0.00
3-RP0	0	2.80	1.20	0.00	95.90	0.00	0.10	0.00
	1	4.49	1.29	0.00	94.20	0.00	0.00	0.00
	2	5.30	1.60	0.00	93.10	0.00	0.00	0.00
4-RP0	3	5.80	1.20	0.00	93.00	0.00	0.00	0.00
	0	1.30	0.80	0.00	97.89	0.00	0.00	0.00
	1	1.30	0.20	0.00	98.50	0.00	0.00	0.00
9-RP0	2	5.60	0.80	0.00	93.59	0.00	0.00	0.00
	3	5.09	0.19	0.00	94.70	0.00	0.00	0.00
	0	3.99	0.69	0.00	95.30	0.00	0.00	0.00
	1	2.60	0.70	0.00	96.70	0.00	0.00	0.00
9-RP0	2	4.49	0.89	0.00	94.60	0.00	0.00	0.00
	3	2.60	0.20	0.00	97.20	0.00	0.00	0.00

# show processes cpu platform monitor

To displays information about the CPU utilization of the IOS-XE processes, use the **show processes cpu platform monitor** command in privileged EXEC mode.

**show processes cpu platform monitor location switch** {*switch-number* | **active** | **standby**} {**0** | **F0** | **R0**}

Syntax Description	location	Displays information about the Field Replaceable Unit (FRU) location.
	switch	Specifies the switch.
	<i>switch-number</i>	Switch number.
	active	Specifies the active instance.
	standby	Specifies the standby instance.
	0	Specifies the shared port adapter (SPA) interface processor slot 0.
	F0	Specifies the Embedded Service Processor (ESP) slot 0.
	R0	Specifies the Route Processor (RP) slot 0.

**Command Modes** Privileged EXEC (#)

Command History	Release	Modification
	Cisco IOS XE Denali 16.1.1	This command was introduced.

**Usage Guidelines** The output of the **show platform software process slot switch** and **show processes cpu platform monitor location** commands display the output of the Linux **top** command. The output of these commands display Free memory and Used memory as displayed by the Linux **top** command. The values displayed for the Free memory and Used memory by these commands do not match the values displayed by the output of other platform-memory related CLIs.

## Examples

The following is sample output from the **show processes cpu monitor location switch active R0** command:

```
Switch# show processes cpu platform monitor location switch active R0

top - 00:04:21 up 1 day, 11:22, 0 users, load average: 0.42, 0.60, 0.78
Tasks: 312 total, 4 running, 308 sleeping, 0 stopped, 0 zombie
Cpu(s): 7.4%us, 3.3%sy, 0.0%ni, 89.2%id, 0.0%wa, 0.0%hi, 0.1%si, 0.0%st
Mem: 3976844k total, 3956928k used, 19916k free, 419312k buffers
Swap: 0k total, 0k used, 0k free, 1947036k cached

  PID USER      PR  NI  VIRT  RES  SHR  S  %CPU  %MEM    TIME+  COMMAND
  6294 root        20   0  3448  1368  912  R   9.0   0.0   0:00.07 top
 17546 root        20   0 2044m 244m  79m  S   6.3 187:02.07 fed main event
 30276 root        20   0  171m  42m  33m  S   7.1  1.1 125:15.54 repm
    16 root        20   0     0     0     0  S   5.0   0.0  22:07.92 rcuc/2
    21 root        20   0     0     0     0  R   5.0   0.0  22:13.24 rcuc/3
```

## show processes cpu platform monitor

```

18662 root      20    0 1806m 678m 263m R    5 17.5 215:47.59 linux_iosd-imag
   11 root      20    0     0    0    0 S    4  0.0 21:37.41 rcuc/1
10333 root      20    0 6420 3916 1492 S    4  0.1  4:47.03 btrace_rotate.s
   10 root      20    0     0    0    0 S    2  0.0  0:58.13 rcuc/0
 6304 root      20    0   776   12    0 R    2  0.0  0:00.01 ls
17835 root      20    0 935m  74m  63m S    2  1.9 82:34.07 sif_mgr
   1 root      20    0 8440 4740 2184 S    0  0.1  0:09.52 systemd
   2 root      20    0     0    0    0 S    0  0.0  0:00.00 kthreadd
   3 root      20    0     0    0    0 S    0  0.0  0:02.86 ksoftirqd/0
   5 root        0 -20     0    0    0 S    0  0.0  0:00.00 kworker/0:0H
   7 root      RT    0     0    0    0 S    0  0.0  0:01.44 migration/0

```

## Related Commands

Command	Description
<b>show platform software process slot switch</b>	Displays platform software process switch information.

# show processes memory platform

To display memory usage per Cisco IOS XE process, use the **show processes memory platform** command in privileged EXEC mode.

```
show processes memory platform [{detailed {name process-name | process-id process-ID} [{location | maps [{location}] | smaps [{location}]}] | location | sorted [{location}]}] switch {switch-number | active | standby} {0 | F0 | R0}
```

Syntax Description		
<b>detailed</b> <i>process-name</i>		(Optional) Displays detailed memory information for a specified Cisco IOS XE process.
<b>name</b> <i>process-name</i>		(Optional) Matches the Cisco IOS XE process name.
<b>process-id</b> <i>process-ID</i>		(Optional) Matches the Cisco IOS XE process ID.
<b>location</b>		(Optional) Displays information about the FRU location.
<b>maps</b>		(Optional) Displays memory maps of a process.
<b>smaps</b>		(Optional) Displays smaps of a process.
<b>sorted</b>		(Optional) Displays the sorted output based on the total memory used by Cisco IOS XE processes.
<b>switch</b> <i>switch-number</i>		Displays information about the device.
<b>active</b>		Displays information about the active instance of the switch.
<b>standby</b>		Displays information about the standby instance of the switch.
<b>0</b>		Displays information about the SPA-Inter-Processor slot 0.
<b>F0</b>		Displays information about the Embedded Service Processor (ESP) slot 0.
<b>R0</b>		Displays information about the Route Processor (RP) slot 0.

**Command Modes** Privileged EXEC (#)

Command History	Release	Modification
	Cisco IOS XE Denali 16.1.1	The command was introduced.

## show processes memory platform

## Usage Guidelines

Prior to Cisco IOS XE Denali 16.3.1, the Free Memory displayed in the command output was obtained from the underlying Linux kernel. This value was not accurate because some memory chunks that was available for use was not considered as free memory.

In Cisco IOS XE Denali 16.3.1, the free memory is accurately computed and displayed in the Free Memory field of the command output.

## Examples

The following is sample output from the **show processes memory platform** command:

```
Switch# show processes memory platform

System memory: 3976852K total, 2761580K used, 1215272K free,
Lowest: 1215272K
  Pid  Text      Data  Stack  Dynamic  RSS    Total  Name
-----
    1  1246     4400   132    1308    4400   8328   systemd
   96   233     2796   132     132    2796  12436  systemd-journal
  105   284     1796   132     176    1796   5208   systemd-udev
  707    52     2660   132     172    2660  11688  in.telnetd
  744   968     3264   132    1700    3264   5800   brelay.sh
  835    52     2660   132     172    2660  11688  in.telnetd
  863   968     3264   132    1700    3264   5800   brelay.sh
  928   968     3996   132    2312    3996   6412   reflector.sh
  933   968     3976   132    2312    3976   6412   droputil.sh
  934   968     2140   132     528    2140   4628   oom.sh
  936   173     936    132     132     936    3068   xinetd
  945   968     1472   132     132    1472   4168   libvirtd.sh
  947   592    43164   132   3096    43164  154716  repm
  954    45      932    132     132     932    3132   rpcbind
  986   482     3476   132     132    3476  169288  libvirtd
  988    66      940    132     132     940    2724   rpc.statd
  993   968     928    132     132     928    4232   boothelper_evt.
 1017   21      640    132     132     640    2500   inotifywait
 1089   102    1200    132     132    1200   3328   rpc.mountd
 1328    9     2940   132     148    2940  13844   rotee
 1353   39     532    132     132     532    2336   sleep

!
!
!
```

The following is sample output from the **show processes memory platform information** command:

```
Switch# show processes memory platform location switch active R0

System memory: 3976852K total, 2762844K used, 1214008K free,
Lowest: 1214008K
  Pid  Text      Data  Stack  Dynamic  RSS    Total  Name
-----
    1  1246     4400   132    1308    4400   8328   systemd
   96   233     2796   132     132    2796  12436  systemd-journal
  105   284     1796   132     176    1796   5208   systemd-udev
  707    52     2660   132     172    2660  11688  in.telnetd
  744   968     3264   132    1700    3264   5800   brelay.sh
  835    52     2660   132     172    2660  11688  in.telnetd
  863   968     3264   132    1700    3264   5800   brelay.sh
  928   968     3996   132    2312    3996   6412   reflector.sh
  933   968     3976   132    2312    3976   6412   droputil.sh

!
!
!
```

The following is sample output from the **show processes memory platform sorted** command:

```
Switch# show processes memory platform sorted

System memory: 3976852K total, 2762884K used, 1213968K free,
Lowest: 1213968K
  Pid  Text      Data  Stack  Dynamic  RSS    Total      Name
-----
  9655  3787     264964  136    18004   264964  2675968   wcm
 17261  324     248588  132    103908  248588  2093076   fed main event
  7885 149848   684864  136     80     684864  1853548   linux_iosd-imag
 17891  398     75772  136    1888   75772   958240    sif_mgr
 17067 1087    77912  136    1796   77912   702184    platform_mgr
  4268  391    102084  136    5596  102084  482656    cli_agent
  4856  357    93388  132    3680   93388   340052    dbm
 29842 8722    64428  132    8056   64428   297068    fman_fp_image
  5960 9509    76088  136    3200   76088   287156    fman_rp
!
!
!
```

The following is sample output from the **show processes memory platform sorted location switch active R0** command:

```
Switch# show processes memory platform sorted location switch active R0

System memory: 3976852K total, 2763584K used, 1213268K free,
Lowest: 1213268K
  Pid  Text      Data  Stack  Dynamic  RSS    Total      Name
-----
  9655  3787     264968  136    18004   264968  2675968   wcm
 17261  324     249020  132    103908  249020  2093076   fed main event
  7885 149848   684912  136     80     684912  1853548   linux_iosd-imag
 17891  398     75884  136    1888   75884   958240    sif_mgr
 17067 1087    77820  136    1796   77820   702184    platform_mgr
  4268  391    102084  136    5596  102084  482656    cli_agent
  4856  357    93388  132    3680   93388   340052    dbm
 29842 8722    64428  132    8056   64428   297068    fman_fp_image
  5960 9509    76088  136    3200   76088   287156    fman_rp
!
!
!
```

# show power inline

To display the Power over Ethernet (PoE) status for the specified PoE port, the specified stack member, or for all PoE ports in the switch stack, use the **show power inline** command in EXEC mode.

**show power inline** [{**police** | **priority**}] [{*interface-id* | **module** *stack-member-number*}] [**detail**]

Syntax Description		
<b>police</b>	(Optional) Displays the power policing information about real-time power consumption.	
<b>priority</b>	(Optional) Displays the power inline port priority for each port.	
<i>interface-id</i>	(Optional) ID of the physical interface.	
<b>module</b> <i>stack-member-number</i>	(Optional) Limits the display to ports on the specified stack member.  This keyword is supported only on stacking-capable switches.	
<b>detail</b>	(Optional) Displays detailed output of the interface or module.	

Command Modes	
	User EXEC
	Privileged EXEC

Command History	Release	Modification
	Cisco IOS XE 3.3SE	This command was introduced.

## Examples

This is an example of output from the **show power inline** command. The table that follows describes the output fields.

```
Device> show power inline
Module   Available      Used      Remaining
         (Watts)        (Watts)   (Watts)
-----
1         n/a            n/a       n/a
2         n/a            n/a       n/a
3         1440.0         15.4      1424.6
4         720.0          6.3       713.7
Interface Admin Oper      Power Device      Class Max
         (Watts)
-----
Gi3/0/1  auto  off      0.0   n/a         n/a  30.0
Gi3/0/2  auto  off      0.0   n/a         n/a  30.0
Gi3/0/3  auto  off      0.0   n/a         n/a  30.0
Gi3/0/4  auto  off      0.0   n/a         n/a  30.0
Gi3/0/5  auto  off      0.0   n/a         n/a  30.0
Gi3/0/6  auto  off      0.0   n/a         n/a  30.0
Gi3/0/7  auto  off      0.0   n/a         n/a  30.0
Gi3/0/8  auto  off      0.0   n/a         n/a  30.0
Gi3/0/9  auto  off      0.0   n/a         n/a  30.0
Gi3/0/10 auto  off      0.0   n/a         n/a  30.0
```

```

Gi3/0/11 auto off 0.0 n/a n/a 30.0
Gi3/0/12 auto off 0.0 n/a n/a 30.0
<output truncated>

```

This is an example of output from the **show power inline interface-id** command on a switch port:

```

Device> show power inline gigabitethernet1/0/1
Interface Admin Oper Power Device Class Max
              (Watts)
-----
Gi1/0/1 auto off 0.0 n/a n/a 30.0

```

This is an example of output from the **show power inline module switch-number** command on stack member 3. The table that follows describes the output fields.

```

Device> show power inline module 3
Module Available Used Remaining
         (Watts) (Watts) (Watts)
-----
3      865.0 864.0 1.0
Interface Admin Oper Power Device Class Max
              (Watts)
-----
Gi3/0/1 auto power-deny 4.0 n/a n/a 15.4
Gi3/0/2 auto off 0.0 n/a n/a 15.4
Gi3/0/3 auto off 0.0 n/a n/a 15.4
Gi3/0/4 auto off 0.0 n/a n/a 15.4
Gi3/0/5 auto off 0.0 n/a n/a 15.4
Gi3/0/6 auto off 0.0 n/a n/a 15.4
Gi3/0/7 auto off 0.0 n/a n/a 15.4
Gi3/0/8 auto off 0.0 n/a n/a 15.4
Gi3/0/9 auto off 0.0 n/a n/a 15.4
Gi3/0/10 auto off 0.0 n/a n/a 15.4
<output truncated>

```

**Table 3: show power inline Field Descriptions**

Field	Description
Available	The total amount of configured power <sup>1</sup> on the PoE switch in watts (W).
Used	The amount of configured power that is allocated to PoE ports in watts.
Remaining	The amount of configured power in watts that is not allocated to ports in the system. (Available – Used = Remaining)
Admin	Administration mode: auto, off, static.
Oper	Operating mode: <ul style="list-style-type: none"> <li>• on—The powered device is detected, and power is applied.</li> <li>• off—No PoE is applied.</li> <li>• faulty—Device detection or a powered device is in a faulty state.</li> <li>• power-deny—A powered device is detected, but no PoE is available, or the maximum wattage exceeds the detected powered-device maximum.</li> </ul>

Field	Description
Power	The maximum amount of power that is allocated to the powered device in watts. This value is the same as the value in the <i>CutoffPower</i> field in the <b>show power inline police</b> command output.
Device	The device type detected: n/a, unknown, Cisco powered-device, IEEE powered-device, or the name from CDP.
Class	The IEEE classification: n/a or a value from 0 to 4.
Max	The maximum amount of power allocated to the powered device in watts.
AdminPowerMax	The maximum amount power allocated to the powered device in watts when the switch polices the real-time power consumption. This value is the same as the <i>Max</i> field value.
AdminConsumption	The power consumption of the powered device in watts when the switch polices the real-time power consumption. If policing is disabled, this value is the same as the <i>AdminPowerMax</i> field value.

<sup>1</sup> The configured power is the power that you manually specify or that the switch specifies by using CDP power negotiation or the IEEE classification, which is different than the real-time power that is monitored with the power sensing feature.

This is an example of output from the **show power inline police** command on a stacking-capable switch:

```
Device> show power inline police
Module   Available   Used       Remaining
         (Watts)    (Watts)    (Watts)
-----
1         370.0      0.0        370.0
3         865.0      864.0      1.0
         Admin Oper   Admin   Oper   Cutoff Oper
Interface State State   Police  Police Power  Power
-----
Gi1/0/1  auto  off    none    n/a    n/a    0.0
Gi1/0/2  auto  off    log     n/a    5.4    0.0
Gi1/0/3  auto  off    errdisable n/a    5.4    0.0
Gi1/0/4  off   off    none    n/a    n/a    0.0
Gi1/0/5  off   off    log     n/a    5.4    0.0
Gi1/0/6  off   off    errdisable n/a    5.4    0.0
Gi1/0/7  auto  off    none    n/a    n/a    0.0
Gi1/0/8  auto  off    log     n/a    5.4    0.0
Gi1/0/9  auto  on     none    n/a    n/a    5.1
Gi1/0/10 auto  on     log     ok     5.4    4.2
Gi1/0/11 auto  on     log     log    5.4    5.9
Gi1/0/12 auto  on     errdisable ok     5.4    4.2
Gi1/0/13 auto  errdisable errdisable n/a    5.4    0.0
<output truncated>
```

In the previous example:

- The Gi1/0/1 port is shut down, and policing is not configured.
- The Gi1/0/2 port is shut down, but policing is enabled with a policing action to generate a syslog message.

- The Gi1/0/3 port is shut down, but policing is enabled with a policing action is to shut down the port.
- Device detection is disabled on the Gi1/0/4 port, power is not applied to the port, and policing is disabled.
- Device detection is disabled on the Gi1/0/5 port, and power is not applied to the port, but policing is enabled with a policing action to generate a syslog message.
- Device detection is disabled on the Gi1/0/6 port, and power is not applied to the port, but policing is enabled with a policing action to shut down the port.
- The Gi1/0/7 port is up, and policing is disabled, but the switch does not apply power to the connected device.
- The Gi1/0/8 port is up, and policing is enabled with a policing action to generate a syslog message, but the switch does not apply power to the powered device.
- The Gi1/0/9 port is up and connected to a powered device, and policing is disabled.
- The Gi1/0/10 port is up and connected to a powered device, and policing is enabled with a policing action to generate a syslog message. The policing action does not take effect because the real-time power consumption is less than the cutoff value.
- The Gi1/0/11 port is up and connected to a powered device, and policing is enabled with a policing action to generate a syslog message.
- The Gi1/0/12 port is up and connected to a powered device, and policing is enabled with a policing action to shut down the port. The policing action does not take effect because the real-time power consumption is less than the cutoff value.
- The Gi1/0/13 port is up and connected to a powered device, and policing is enabled with a policing action to shut down the port.

This is an example of output from the **show power inline police interface-id** command on a standalone switch. The table that follows describes the output fields.

```
Device> show power inline police gigabitethernet1/0/1
Interface Admin Oper      Admin      Oper      Cutoff Oper
           State State      Police     Police     Power  Power
-----
Gi1/0/1   auto   off       none       n/a       n/a    0.0
```

**Table 4: show power inline police Field Descriptions**

Field	Description
Available	The total amount of configured power <sup>2</sup> on the switch in watts (W).
Used	The amount of configured power allocated to PoE ports in watts.
Remaining	The amount of configured power in watts that is not allocated to ports in the system. (Available – Used = Remaining)
Admin State	Administration mode: auto, off, static.

Field	Description
Oper State	<p>Operating mode:</p> <ul style="list-style-type: none"> <li>errdisable—Policing is enabled.</li> <li>faulty—Device detection on a powered device is in a faulty state.</li> <li>off—No PoE is applied.</li> <li>on—The powered device is detected, and power is applied.</li> <li>power-deny—A powered device is detected, but no PoE is available, or the real-time power consumption exceeds the maximum power allocation.</li> </ul> <p><b>Note</b> The operating mode is the current PoE state for the specified PoE port, the specified stack member, or for all PoE ports on the switch.</p>
Admin Police	<p>Status of the real-time power-consumption policing feature:</p> <ul style="list-style-type: none"> <li>errdisable—Policing is enabled, and the switch shuts down the port when the real-time power consumption exceeds the maximum power allocation.</li> <li>log—Policing is enabled, and the switch generates a syslog message when the real-time power consumption exceeds the maximum power allocation.</li> <li>none—Policing is disabled.</li> </ul>
Oper Police	<p>Policing status:</p> <ul style="list-style-type: none"> <li>errdisable—The real-time power consumption exceeds the maximum power allocation, and the switch shuts down the PoE port.</li> <li>log—The real-time power consumption exceeds the maximum power allocation, and the switch generates a syslog message.</li> <li>n/a—Device detection is disabled, power is not applied to the PoE port, or no policing action is configured.</li> <li>ok—Real-time power consumption is less than the maximum power allocation.</li> </ul>
Cutoff Power	The maximum power allocated on the port. When the real-time power consumption is greater than this value, the switch takes the configured policing action.
Oper Power	The real-time power consumption of the powered device.

<sup>2</sup> The configured power is the power that you manually specify or that the switch specifies by using CDP power negotiation or the IEEE classification, which is different than the real-time power that is monitored with the power sensing feature.

This is an example of output from the **show power inline priority** command on a standalone switch.

```
Device> show power inline priority
Interface  Admin  Oper   Priority
           State  State
-----
Gi1/0/1   auto   off    low
Gi1/0/2   auto   off    low
Gi1/0/3   auto   off    low
Gi1/0/4   auto   off    low
Gi1/0/5   auto   off    low
Gi1/0/6   auto   off    low
Gi1/0/7   auto   off    low
```

```
Gi1/0/8    auto    off     low
Gi1/0/9    auto    off     low
```

# show stack-power

To display information about StackPower stacks or switches in a power stack, use the **show stack-power** command in EXEC mode.

```
{show stack-power [{budgeting | detail | load-shedding | neighbors}] [order power-stack-name] |
[stack-name [stack-id] | switch [switch-id]]}
```

## Syntax Description

<b>budgeting</b>	(Optional) Displays the stack power budget table.
<b>detail</b>	(Optional) Displays the stack power stack details.
<b>load-shedding</b>	(Optional) Displays the stack power load shedding table.
<b>neighbors</b>	(Optional) Displays the stack power neighbor table.
<b>order</b> <i>power-stack-name</i>	(Optional) Displays the load shedding priority for a power stack. <b>Note</b> This keyword is available only after the <b>load-shedding</b> keyword.
<b>stack-name</b>	(Optional) Displays budget table, details, or neighbors for all power stacks or the specified power stack. <b>Note</b> This keyword is not available after the <b>load-shedding</b> keyword.
<i>stack-id</i>	(Optional) Power stack ID for the power stack. The stack ID must be 31 characters or less.
<b>switch</b>	(Optional) Displays budget table, details, load-shedding, or neighbors for all switches or the specified switch.
<i>switch-id</i>	(Optional) Switch ID for the switch. The switch number is from 1 to 9.

## Command Modes

Privileged EXEC

## Command History

Release	Modification
Cisco IOS XE Denali 16.3.2	Support for all the options was enabled for this command.
Cisco IOS XE Denali 16.1.1	This command was reintroduced.

## Usage Guidelines

This command is available only on switch stacks running the IP Base or IP Services image.

If a switch is shut down because of load shedding, the output of the **show stack-power** command still includes the MAC address of the shutdown neighbor switch. The command output shows the stack power topology even if there is not enough power to power a switch.

## Examples

This is an example of output from the **show stack-power** command:

```

Device# show stack-power
Power Stack      Stack      Stack      Total      Rsvd      Alloc      Unused      Num      Num
Name             Mode       Topolgy    Pwr (W)    Pwr (W)   Pwr (W)    Pwr (W)    SW      PS
-----
Powerstack-1     SP-PS     Stndaln    350        150       200        0         1      1

```

This is an example of output from the **show stack-power budgeting** command:

```

Device# show stack-power budgeting
Power Stack      Stack      Stack      Total      Rsvd      Alloc      Unused      Num      Num
Name             Mode       Topolgy    Pwr (W)    Pwr (W)   Pwr (W)    Pwr (W)    SW      PS
-----
Powerstack-1     SP-PS     Stndaln    350        150       200        0         1      1

      Power Stack      PS-A      PS-B      Power      Alloc      Avail      Consumd Pwr
SW   Name             (W)       (W)       Budgt (W)  Power (W)  Pwr (W)    Sys/PoE (W)
--   -----
1   Powerstack-1     350       0         200        200        0         60 /0
-----
Totals:                200       0         200        200        0         60 /0

```

# show system mtu

To display the global maximum transmission unit (MTU) or maximum packet size set for the switch, use the **show system mtu** command in privileged EXEC mode.

**show system mtu**

**Syntax Description** This command has no arguments or keywords.

**Command Default** None

**Command Modes** Privileged EXEC

Command History	Release	Modification
	Cisco IOS XE 3.3SE	This command was introduced.

**Usage Guidelines** For information about the MTU values and the stack configurations that affect the MTU values, see the **system mtu** command.

**Examples** This is an example of output from the **show system mtu** command:

```
Device# show system mtu
Global Ethernet MTU is 1500 bytes.
```

# show tech-support

To automatically run **show** commands that display system information, use the **show tech-support** command in the privilege EXEC mode.

**show tech-support** [{**cef** | **cft** | **eigrp** | **evc** | **fnf** | **ipc** | **ipmulticast** | **ipsec** | **mfib** | **nat** | **nbar** | **onep** | **ospf** | **page** | **password** | **poe** | **rsvp** | **subscriber** | **vrrp** | **wccp**}]

Syntax Description	
<b>cef</b>	(Optional) Displays CEF related information.
<b>cft</b>	(Optional) Displays CFT related information.
<b>eigrp</b>	(Optional) Displays EIGRP related information.
<b>evc</b>	(Optional) Displays EVC related information.
<b>fnf</b>	(Optional) Displays flexible netflow related information.
<b>ipc</b>	(Optional) Displays IPC related information.
<b>ipmulticast</b>	(Optional) Displays IP multicast related information.
<b>ipsec</b>	(Optional) Displays IPSEC related information.
<b>mfib</b>	(Optional) Displays MFIB related information.
<b>nat</b>	(Optional) Displays NAT related information.
<b>nbar</b>	(Optional) Displays NBAR related information.
<b>onep</b>	(Optional) Displays ONEP related information.
<b>ospf</b>	(Optional) Displays OSPF related information.
<b>page</b>	(Optional) Displays the command output on a single page at a time. Use the Return key to display the next line of output or use the space bar to display the next page of information. If not used, the output scrolls (that is, it does not stop for page breaks).  Press the <b>Ctrl-C</b> keys to stop the command output.
<b>password</b>	(Optional) Leaves passwords and other security information in the output. If not used, passwords and other security-sensitive information in the output are replaced with the label "<removed>".
<b>poe</b>	(Optional) Displays PoE related information.
<b>rsvp</b>	(Optional) Displays IP RSVP related information.
<b>subscriber</b>	(Optional) Displays subscriber related information.
<b>vrrp</b>	(Optional) Displays VRRP related information.
<b>wccp</b>	(Optional) Displays WCCP related information.

---

**Command Modes** Privileged EXEC (#)

---

Command History	Release	Modification
	Cisco IOS XE Denali 16.3.2	This command was enhanced to display of the outputs of the following commands in the output modifier : <ul style="list-style-type: none"> <li>• <b>show power inline</b></li> <li>• <b>show platform software ilpower details</b></li> <li>• <b>show power inline police</b></li> <li>• <b>show stack-power budgeting</b></li> </ul>
	Cisco IOS XE Denali 16.1.1	This command was reintroduced.

---

**Usage Guidelines** The output from the **show tech-support** command is very long. To better manage this output, you can redirect the output to a file (for example, **show tech-support > filename** ) in the local writable storage file system or the remote file system. Redirecting the output to a file also makes sending the output to your Cisco Technical Assistance Center (TAC) representative easier.

You can use one of the following redirection methods:

- **> filename** - Redirects the output to a file.
- **>> filename** - Redirects the output to a file in append mode.

# speed

To specify the speed of a 10/100/1000/2500/5000 Mbps port, use the **speed** command in interface configuration mode. To return to the default value, use the **no** form of this command.

```
speed {10 | 100 | 1000 | 2500 | 5000 | auto [{10 | 100 | 1000 | 2500 | 5000}] | nonegotiate}
no speed
```

Syntax Description	
<b>10</b>	Specifies that the port runs at 10 Mbps.
<b>100</b>	Specifies that the port runs at 100 Mbps.
<b>1000</b>	Specifies that the port runs at 1000 Mbps. This option is valid and visible only on 10/100/1000 Mb/s ports.
<b>2500</b>	Specifies that the port runs at 2500 Mbps. This option is valid and visible only on multi-Gigabit-supported Ethernet ports.
<b>5000</b>	Specifies that the port runs at 5000 Mbps. This option is valid and visible only on multi-Gigabit-supported Ethernet ports.
<b>auto</b>	Detects the speed at which the port should run, automatically, based on the port at the other end of the link. If you use the <b>10</b> , <b>100</b> , <b>1000</b> , <b>1000</b> , <b>2500</b> , or <b>5000</b> keyword with the <b>auto</b> keyword, the port autonegotiates only at the specified speeds.
<b>nonegotiate</b>	Disables autonegotiation, and the port runs at 1000 Mbps.

**Command Default** The default is **auto**.

**Command Modes** Interface configuration

Command History	Release	Modification
	Cisco IOS XE 3.3SE	This command was introduced.
	Cisco IOS XE Denali 16.3.1	This command was modified. The following keywords were added: <b>2500</b> and <b>5000</b> . These keywords are visible only on multi-Gigabit Ethernet port supporting devices.

**Usage Guidelines** You cannot configure speed on 10-Gigabit Ethernet ports.

Except for the 1000BASE-T small form-factor pluggable (SFP) modules, you can configure the speed to not negotiate (**nonegotiate**) when an SFP module port is connected to a device that does not support autonegotiation.

The new keywords, **2500** and **5000** are visible only on multi-Gigabit (m-Gig) Ethernet supporting devices.

If the speed is set to **auto**, the switch negotiates with the device at the other end of the link for the speed setting, and then forces the speed setting to the negotiated value. The duplex setting remains configured on each end of the link, which might result in a duplex setting mismatch.

If both ends of the line support autonegotiation, we highly recommend the default autonegotiation settings. If one interface supports autonegotiation and the other end does not, use the auto setting on the supported side, but set the duplex and speed on the other side.

**Caution**

Changing the interface speed and duplex mode configuration might shut down and re-enable the interface during the reconfiguration.

For guidelines on setting the switch speed and duplex parameters, see the “Configuring Interface Characteristics” chapter in the software configuration guide for this release.

Verify your settings using the **show interfaces** privileged EXEC command.

**Examples**

The following example shows how to set speed on a port to 100 Mbps:

```
Device(config)# interface gigabitethernet1/0/1
Device(config-if)# speed 100
```

The following example shows how to set a port to autonegotiate at only 10 Mbps:

```
Device(config)# interface gigabitethernet1/0/1
Device(config-if)# speed auto 10
```

The following example shows how to set a port to autonegotiate at only 10 or 100 Mbps:

```
Device(config)# interface gigabitethernet1/0/1
Device(config-if)# speed auto 10 100
```

# stack-power

To configure StackPower parameters for the power stack or for a switch in the power stack, use the **stack power** command in global configuration mode. To return to the default setting, use the **no** form of the command,

```
stack-power {stack power-stack-name | switch stack-member-number}
no stack-power {stack power-stack-name | switch stack-member-number}
```

<b>Syntax Description</b>	<b>stack</b> <i>power-stack-name</i>	Specifies the name of the power stack. The name can be up to 31 characters. Entering these keywords followed by a carriage return enters power stack configuration mode.
	<b>switch</b> <i>stack-member-number</i>	Specifies the switch number in the stack (1 to 4) to enter switch stack-power configuration mode for the switch.
<b>Command Default</b>	There is no default.	
<b>Command Modes</b>	Global configuration	
<b>Command History</b>	<b>Release</b>	<b>Modification</b>
	Cisco IOS XE 3.3SE	This command was introduced.

**Usage Guidelines** When you enter the **stack-power stack** *power stack name* command, you enter power stack configuration mode, and these commands are available:

- **default**—Returns a command to its default setting.
- **exit**—Exits ARP access-list configuration mode.
- **mode**—Sets the power mode for the power stack. See the **mode** command.
- **no**—Negates a command or returns to default settings.

If you enter the **stack-power switch** *switch-number* command with a switch number that is not participating in StackPower, you receive an error message.

When you enter the **stack-power switch** *switch-number* command with the number of a switch participating in StackPower, you enter switch stack power configuration mode, and these commands are available:

- **default**—Returns a command to its default setting.
- **exit**—Exits switch stack power configuration mode.
- **no**—Negates a command or returns to default settings.
- **power-priority**—Sets the power priority for the switch and the switch ports. See the **power-priority** command.
- **stack-id** *name*—Enters the name of the power stack to which the switch belongs. If you do not enter the power stack-ID, the switch does not inherit the stack parameters. The name can be up to 31 characters.
- **standalone**—Forces the switch to operate in standalone power mode. This mode shuts down both stack power ports.

## Examples

This example removes switch 2, which is connected to the power stack, from the power pool and shutting down both power ports:

```
Device(config)# stack-power switch 2  
Device(config-switch-stackpower)# standalone  
Device(config-switch-stackpower)# exit
```

# switchport block

To prevent unknown multicast or unicast packets from being forwarded, use the **switchport block** command in interface configuration mode. To allow forwarding unknown multicast or unicast packets, use the **no** form of this command.

```
switchport block {multicast | unicast}
no switchport block {multicast | unicast}
```

<b>Syntax Description</b>	<p><b>multicast</b> Specifies that unknown multicast traffic should be blocked.</p> <p><b>Note</b> Only pure Layer 2 multicast traffic is blocked. Multicast packets that contain IPv4 or IPv6 information in the header are not blocked.</p> <p><b>unicast</b> Specifies that unknown unicast traffic should be blocked.</p>				
<b>Command Default</b>	Unknown multicast and unicast traffic is not blocked.				
<b>Command Modes</b>	Interface configuration				
<b>Command History</b>	<table border="1"> <thead> <tr> <th>Release</th> <th>Modification</th> </tr> </thead> <tbody> <tr> <td>Cisco IOS XE 3.3SE</td> <td>This command was introduced.</td> </tr> </tbody> </table>	Release	Modification	Cisco IOS XE 3.3SE	This command was introduced.
Release	Modification				
Cisco IOS XE 3.3SE	This command was introduced.				
<b>Usage Guidelines</b>	<p>By default, all traffic with unknown MAC addresses is sent to all ports. You can block unknown multicast or unicast traffic on protected or nonprotected ports. If unknown multicast or unicast traffic is not blocked on a protected port, there could be security issues.</p> <p>With multicast traffic, the port blocking feature blocks only pure Layer 2 packets. Multicast packets that contain IPv4 or IPv6 information in the header are not blocked.</p> <p>Blocking unknown multicast or unicast traffic is not automatically enabled on protected ports; you must explicitly configure it.</p> <p>For more information about blocking packets, see the software configuration guide for this release.</p> <p>This example shows how to block unknown unicast traffic on an interface:</p> <pre>Device(config-if)# switchport block unicast</pre> <p>You can verify your setting by entering the <b>show interfaces <i>interface-id</i> switchport</b> privileged EXEC command.</p>				

## system mtu

To set the global maximum packet size or MTU size for switched packets on Gigabit Ethernet and 10-Gigabit Ethernet ports, use the **system mtu** command in global configuration mode. To restore the global MTU value to its default value use the **no** form of this command.

```
system mtu bytes
no system mtu
```

<b>Syntax Description</b>	<i>bytes</i> The global MTU size in bytes. The range is 1500 to 9198 bytes; the default is 1500 bytes.
---------------------------	--

<b>Command Default</b>	The default MTU size for all ports is 1500 bytes.
------------------------	---

<b>Command Modes</b>	Global configuration
----------------------	----------------------

<b>Command History</b>	<b>Release</b>	<b>Modification</b>
	Cisco IOS XE 3.3SE	

<b>Usage Guidelines</b>	<p>You can verify your setting by entering the <b>show system mtu</b> privileged EXEC command.</p> <p>The switch does not support the MTU on a per-interface basis.</p> <p>If you enter a value that is outside the allowed range for the specific type of interface, the value is not accepted.</p>
-------------------------	--

<b>Examples</b>	<p>This example shows how to set the global system MTU size to 6000 bytes:</p>
-----------------	--

```
Device(config)# system mtu 6000
Global Ethernet MTU is set to 6000 bytes.
Note: this is the Ethernet payload size, not the total
Ethernet frame size, which includes the Ethernet
header/trailer and possibly other tags, such as ISL or
802.1q tags.
```

## test mcu read-register

To enable debugging of the Power over Ethernet (PoE) controller, use the **test mcu read-register** command in privileged EXEC mode.

**test mcu read-register** {**det-cls-offset** | **manufacture-id** | **port-mode**}

Syntax Description	Parameter	Description
	<b>det-cls-offset</b>	Displays the read detection classification register summary.
	<b>manufacture-id</b>	Displays the PoE controller manufacture ID.
	<b>port-mode</b>	Displays the port mode details.

**Command Modes** Privileged EXEC

Command History	Release	Modification
	Cisco IOS XE 3.3SE	This command was introduced.

### Examples

The following is sample output from the **test mcu read-register det-cls-offset** command:

```
Device# test mcu read-register det-cls-offset 1
DETECTION ENABLE BIT SUMMARY
```

Controller	port1	port2	port3	port4	register (hexadecimal)
1	1	0	1	0	5
2	1	0	1	0	5
3	1	0	1	0	5
4	1	0	1	0	5
5	1	0	1	0	5
6	1	0	1	0	5
7	1	0	1	0	5
8	1	0	1	0	5
9	1	0	1	0	5
10	1	0	1	0	5
11	0	0	1	0	4
12	1	0	0	0	1

```
CLASSIFICATION ENABLE BIT SUMMARY
```

Controller	port1	port2	port3	port4	register (hexadecimal)
1	1	0	1	0	5
2	1	0	1	0	5
3	1	0	1	0	5
4	1	0	1	0	5
5	1	0	1	0	5
6	1	0	1	0	5
7	1	0	1	0	5
8	1	0	1	0	5
9	1	0	1	0	5
10	1	0	1	0	5
11	0	0	1	0	4
12	1	0	0	0	1

## test mcu read-register

1	1	0	1	0	5
2	1	0	1	0	5
3	1	0	1	0	5
4	1	0	1	0	5
5	1	0	1	0	5
6	1	0	1	0	5
7	1	0	1	0	5
8	1	0	1	0	5
9	1	0	1	0	5
10	1	0	1	0	5
11	0	0	1	0	4
12	1	0	0	0	1

The following is sample output from the **test mcu read-register manufacture-id** command:

```
MANUFACTURE ID : DEVICE_BCM_PALPATINE reg_val = 0x1B
```

The following is sample output from the **test mcu read-register port-mode** command:

```
PORT MODE SUMMERY
```

Controller	port1	port2	port3	port4	register (hexadecimal)
1	01	00	01	00	22
2	01	00	01	00	22
3	01	00	01	00	22
4	01	00	01	00	22
5	01	00	01	00	22
6	01	00	01	00	22
7	01	00	01	00	22
8	01	00	01	00	22
9	01	00	01	00	22
10	01	00	01	00	22
11	00	00	01	00	20
12	01	00	00	00	2

## voice-signaling vlan (network-policy configuration)

To create a network-policy profile for the voice-signaling application type, use the **voice-signaling vlan** command in network-policy configuration mode. To delete the policy, use the **no** form of this command.

```
voice-signaling vlan {vlan-id [{cos cos-value | dscp dscp-value}] | dot1p [{cos l2-priority | dscp dscp}] | none | untagged}
```

Syntax Description	
<b>vlan-id</b>	(Optional) The VLAN for voice traffic. The range is 1 to 4094.
<b>cos</b> <i>cos-value</i>	(Optional) Specifies the Layer 2 priority class of service (CoS) for the configured VLAN. The range is 0 to 7; the default is 5.
<b>dscp</b> <i>dscp-value</i>	(Optional) Specifies the differentiated services code point (DSCP) value for the configured VLAN. The range is 0 to 63; the default is 46.
<b>dot1p</b>	(Optional) Configures the phone to use IEEE 802.1p priority tagging and to use VLAN 0 (the native VLAN).
<b>none</b>	(Optional) Does not instruct the Cisco IP phone about the voice VLAN. The phone uses the configuration from the phone key pad.
<b>untagged</b>	(Optional) Configures the phone to send untagged voice traffic. This is the default for the phone.

**Command Default** No network-policy profiles for the voice-signaling application type are defined.  
 The default CoS value is 5.  
 The default DSCP value is 46.  
 The default tagging mode is untagged.

**Command Modes** Network-policy profile configuration

Command History	Release	Modification
	Cisco IOS XE 3.3SE	This command was introduced.

**Usage Guidelines** Use the **network-policy profile** global configuration command to create a profile and to enter network-policy profile configuration mode.

The voice-signaling application type is for network topologies that require a different policy for voice signaling than for voice media. This application type should not be advertised if all of the same network policies apply as those advertised in the voice policy TLV.

When you are in network-policy profile configuration mode, you can create the profile for voice-signaling by specifying the values for VLAN, class of service (CoS), differentiated services code point (DSCP), and tagging mode.

These profile attributes are contained in the Link Layer Discovery Protocol for Media Endpoint Devices (LLDP-MED) network-policy time-length-value (TLV).

To return to privileged EXEC mode from the network-policy profile configuration mode, enter the **exit** command.

This example shows how to configure voice-signaling for VLAN 200 with a priority 2 CoS:

```
Device(config)# network-policy profile 1  
Device(config-network-policy)# voice-signaling vlan 200 cos 2
```

This example shows how to configure voice-signaling for VLAN 400 with a DSCP value of 45:

```
Device(config)# network-policy profile 1  
Device(config-network-policy)# voice-signaling vlan 400 dscp 45
```

This example shows how to configure voice-signaling for the native VLAN with priority tagging:

```
Device(config-network-policy)# voice-signaling vlan dot1p cos 4
```

## voice vlan (network-policy configuration)

To create a network-policy profile for the voice application type, use the **voice vlan** command in network-policy configuration mode. To delete the policy, use the **no** form of this command.

```
voice vlan {vlan-id [{cos cos-value | dscp dscp-value}] | dot1p [{cos l2-priority | dscp dscp}] | none | untagged}
```

Syntax Description	
<b>vlan-id</b>	(Optional) The VLAN for voice traffic. The range is 1 to 4094.
<b>cos</b> <i>cos-value</i>	(Optional) Specifies the Layer 2 priority class of service (CoS) for the configured VLAN. The range is 0 to 7; the default is 5.
<b>dscp</b> <i>dscp-value</i>	(Optional) Specifies the differentiated services code point (DSCP) value for the configured VLAN. The range is 0 to 63; the default is 46.
<b>dot1p</b>	(Optional) Configures the phone to use IEEE 802.1p priority tagging and to use VLAN 0 (the native VLAN).
<b>none</b>	(Optional) Does not instruct the Cisco IP phone about the voice VLAN. The phone uses the configuration from the phone key pad.
<b>untagged</b>	(Optional) Configures the phone to send untagged voice traffic. This is the default for the phone.

**Command Default**

No network-policy profiles for the voice application type are defined.

The default CoS value is 5.

The default DSCP value is 46.

The default tagging mode is untagged.

**Command Modes** Network-policy profile configuration

Command History	Release	Modification
	Cisco IOS XE 3.3SE	This command was introduced.

**Usage Guidelines**

Use the **network-policy profile** global configuration command to create a profile and to enter network-policy profile configuration mode.

The voice application type is for dedicated IP telephones and similar devices that support interactive voice services. These devices are typically deployed on a separate VLAN for ease of deployment and enhanced security through isolation from data applications.

When you are in network-policy profile configuration mode, you can create the profile for voice by specifying the values for VLAN, class of service (CoS), differentiated services code point (DSCP), and tagging mode.

These profile attributes are contained in the Link Layer Discovery Protocol for Media Endpoint Devices (LLDP-MED) network-policy time-length-value (TLV).

To return to privileged EXEC mode from the network-policy profile configuration mode, enter the **exit** command.

This example shows how to configure the voice application type for VLAN 100 with a priority 4 CoS:

```
Device(config)# network-policy profile 1  
Device(config-network-policy)# voice vlan 100 cos 4
```

This example shows how to configure the voice application type for VLAN 100 with a DSCP value of 34:

```
Device(config)# network-policy profile 1  
Device(config-network-policy)# voice vlan 100 dscp 34
```

This example shows how to configure the voice application type for the native VLAN with priority tagging:

```
Device(config-network-policy)# voice vlan dot1p cos 4
```