



---

## Numerics

### 802.1x

- and switchport modes [2-481](#)
- violation error recovery [2-89](#)
- See also port-based authentication

---

## A

- aaa authentication dot1x command [2-1](#)
- AAA methods [2-1](#)
- abort command [2-530](#)
- access control entries
  - See ACEs
- access control lists
  - See ACLs
- access groups
  - IP [2-100](#)
  - MAC, displaying [2-316](#)
- access lists
  - IP [2-100](#)
  - on Layer 2 interfaces [2-100](#)
- access map configuration mode [2-149](#)
- access mode [2-480](#)
- access ports [2-480](#)
- ACEs [2-67, 2-205](#)
- ACLs
  - deny [2-65](#)
  - displaying [2-241](#)
  - for non-IP protocols [2-133](#)
  - matching [2-149](#)
  - permit [2-203](#)
- action command [2-3](#)

- address aliasing [2-194](#)
- aggregate-port learner [2-199](#)
- allowed VLANs [2-495](#)
- apply command [2-530](#)
- archive copy-sw command [2-5](#)
- archive download-sw command [2-8](#)
- archive tar command [2-11](#)
- archive upload-sw command [2-14](#)
- audience [xv](#)
- authorization state of controlled port [2-77](#)
- autonegotiation of duplex mode [2-86](#)
- auto qos voip command [2-16](#)

---

## B

- BackboneFast, for STP [2-416](#)
- boot (boot loader) command [A-2](#)
- boot auto-copy-sw command [2-20](#)
- boot boothlpr command [2-21](#)
- boot config-file command [2-22](#)
- boot enable-break command [2-23](#)
- boot helper command [2-24](#)
- boot helper-config file command [2-25](#)
- booting
  - Cisco IOS image [2-28](#)
  - displaying environment variables [2-247](#)
  - interrupting [2-23](#)
  - manually [2-26](#)
- boot loader
  - accessing [A-1](#)
  - booting
    - Cisco IOS image [A-2](#)
    - helper image [2-24](#)

## bootloader (continued)

## directories

- creating [A-16](#)
- displaying a list of [A-7](#)
- removing [A-20](#)

## displaying

- available commands [A-12](#)
- memory heap utilization [A-14](#)
- version [A-27](#)

## environment variables

- described [A-21](#)
- displaying settings [A-21](#)
- location of [A-23](#)
- setting [A-21](#)
- unsetting [A-25](#)

## files

- copying [A-5](#)
- deleting [A-6](#)
- displaying a list of [A-7](#)
- displaying the contents of [A-4, A-17, A-24](#)
- renaming [A-18](#)

## file system

- formatting [A-10](#)
- initializing flash [A-9](#)
- running a consistency check [A-11](#)

loading helper images [A-13](#)prompt [A-1](#)resetting the system [A-19](#)boot manual command [2-26](#)boot private-config-file command [2-27](#)boot system command [2-28](#)BPDU filtering, for spanning tree [2-417, 2-452](#)BPDU guard, for spanning tree [2-419, 2-452](#)broadcast storm control [2-469](#)broadcast traffic counters [2-295](#)

## C

## candidate switches

See clusters

cat (boot loader) command [A-4](#)caution, description [xvi](#)channel-group command [2-29](#)channel-protocol command [2-33](#)class command [2-34](#)class-map command [2-36](#)

## class maps

- creating [2-36](#)
- defining the match criteria [2-151](#)
- displaying [2-251](#)

## class of service

See CoS

clear ipc command [2-38](#)clear lacp command [2-39](#)clear mac address-table command [2-40](#)clear pagp command [2-42](#)clear setup express command [2-43](#)clear spanning-tree counters command [2-44](#)clear spanning-tree detected-protocols command [2-45](#)clear vmps statistics command [2-46](#)clear vtp counters command [2-47](#)cluster commander-address command [2-48](#)cluster discovery hop-count command [2-50](#)cluster enable command [2-51](#)cluster holdtime command [2-53](#)cluster member command [2-54](#)cluster outside-interface command [2-56](#)

## cluster requirements

See release notes

cluster run command [2-57](#)

## clusters

- adding candidates [2-54](#)
- binding to HSRP group [2-58](#)
- building manually [2-54](#)
- communicating with
  - devices outside the cluster [2-56](#)
  - members by using Telnet [2-219](#)
- debug messages, display [B-4](#)
- displaying
  - candidate switches [2-254](#)
  - debug messages [B-4](#)
  - member switches [2-256](#)
  - status [2-252](#)
- hop-count limit for extended discovery [2-50](#)
- HSRP standby groups [2-58](#)
- redundancy [2-58](#)
- SNMP trap [2-407](#)
- cluster standby-group command [2-58](#)
- cluster timer command [2-60](#)
- CMS requirements
  - See switch software configuration guide
- command modes defined [1-2](#)
- command switch
  - See clusters
- configuration, initial
  - See hardware installation guide
- configuration files
  - password recovery disable considerations [A-1](#)
  - specifying the name [2-22, 2-27](#)
- configuring multiple interfaces [2-95](#)
- config-vlan mode
  - commands [2-516](#)
  - description [1-4](#)
  - entering [2-515](#)
  - summary [1-2](#)

## conventions

- command [xvi](#)
- for examples [xvi](#)
- publication [xvi](#)
- text [xvi](#)

copy (boot loader) command [A-5](#)

## CoS

- assigning default value to incoming packets [2-159](#)
- overriding the incoming value [2-159](#)

CoS-to-DSCP map [2-163](#)

CPU ASIC statistics, displaying [2-258](#)

## D

- debug auto qos command [B-2](#)
- debug cluster command [B-4](#)
- debug dot1x command [B-6](#)
- debug dtp command [B-7](#)
- debug etherchannel command [B-8](#)
- debug ilpower command [B-10](#)
- debug interface command [B-11](#)
- debug ip igmp filter command [B-12](#)
- debug ip igmp max-groups command [B-13](#)
- debug ip igmp snooping command [B-14](#)
- debug lacp command [B-15](#)
- debug mac-notification command [B-16](#)
- debug matm command [B-17](#)
- debug monitor command [B-18](#)
- debug mvrdbg command [B-19](#)
- debug nvram command [B-20](#)
- debug pagp command [B-21](#)
- debug platform acl command [B-22](#)
- debug platform cli-redirect main command [B-23](#)
- debug platform configuration command [B-24](#)
- debug platform cpu-queues command [B-25](#)
- debug platform device-manager command [B-27](#)

- debug platform dot1x command [B-28](#)
- debug platform etherchannel command [B-29](#)
- debug platform fallback-bridging command [B-30](#)
- debug platform forw-tcam command [B-31](#)
- debug platform ipc command [B-39](#)
- debug platform ip dhcp command [B-32](#)
- debug platform ip igmp snooping command [B-33](#)
- debug platform ip multicast command [B-35](#)
- debug platform ip unicast command [B-37](#)
- debug platform led command [B-40](#)
- debug platform matm command [B-41](#)
- debug platform messaging application command [B-42](#)
- debug platform phy command [B-43](#)
- debug platform pm command [B-45](#)
- debug platform port-asic command [B-47](#)
- debug platform port-security command [B-48](#)
- debug platform qos-acl-tcam command [B-49](#)
- debug platform remote-commands command [B-50](#)
- debug platform resource-manager command [B-51](#)
- debug platform snmp command [B-52](#)
- debug platform span command [B-53](#)
- debug platform stack-manager command [B-54](#)
- debug platform supervisor-asic command [B-55](#)
- debug platform sw-bridge command [B-56](#)
- debug platform tcam command [B-57](#)
- debug platform udd command [B-60](#)
- debug platform vlan command [B-61](#)
- debug pm command [B-62](#)
- debug port-security command [B-64](#)
- debug qos-manager command [B-65](#)
- debug spanning-tree backbonefast command [B-68](#)
- debug spanning-tree bpdu command [B-69](#)
- debug spanning-tree bpdu-opt command [B-70](#)
- debug spanning-tree command [B-66](#)
- debug spanning-tree mstp command [B-71](#)
- debug spanning-tree switch command [B-73](#)
- debug spanning-tree uplinkfast command [B-75](#)
- debug sw-vlan command [B-76](#)
- debug sw-vlan ifs command [B-78](#)
- debug sw-vlan notification command [B-80](#)
- debug sw-vlan vtp command [B-82](#)
- debug udd command [B-84](#)
- debug vqpc command [B-86](#)
- define interface-range command [2-61](#)
- delete (boot loader) command [A-6](#)
- delete command [2-63](#)
- deny command [2-65](#)
- detect mechanism, causes [2-87](#)
- DHCP snooping
  - enabling on a VLAN [2-111](#)
  - enabling option 82 [2-106](#)
  - enabling rate limiting on an interface [2-108](#)
  - enabling trust on an interface [2-109](#)
  - error recovery timer [2-89](#)
- dir (boot loader) command [A-7](#)
- directories, deleting [2-63](#)
- documentation, related [xvii](#)
- document conventions [xvi](#)
- domain name, VTP [2-539](#), [2-543](#)
- dot1x default command [2-68](#)
- dot1x guest-vlan command [2-69](#)
- dot1x host-mode command [2-71](#)
- dot1x initialize command [2-73](#)
- dot1x max-req command [2-74](#), [2-75](#)
- dot1x multiple-hosts command [2-76](#)
- dot1x port-control command [2-77](#)
- dot1x re-authenticate command [2-79](#)
- dot1x re-authentication command [2-80](#)
- dot1x reauthentication command [2-81](#)
- dot1x system-auth-control command [2-82](#)
- dot1x timeout command [2-83](#)
- dropping packets, with ACL matches [2-3](#)
- DSCP-to-CoS map [2-163](#)
- DSCP-to-DSCP-mutation map [2-163](#)
- DTP [2-481](#)
- DTP flap
  - error detection for [2-87](#)
  - error recovery timer [2-89](#)

duplex command [2-85](#)  
dynamic-access ports  
  configuring [2-476](#)  
  restrictions [2-477](#)  
dynamic auto VLAN membership mode [2-480](#)  
dynamic desirable VLAN membership mode [2-480](#)  
Dynamic Host Configuration Protocol (DHCP)  
  See DHCP snooping  
Dynamic Trunking Protocol  
  See DTP

---

## E

EAP-request/identity frame  
  maximum number to send [2-75](#)  
  response time before retransmitting [2-83](#)  
encapsulation methods [2-495](#)  
environment variables, displaying [2-247](#)  
errdisable detect cause command [2-87](#)  
errdisable recovery command [2-89](#)  
error conditions, displaying [2-280](#)  
error disable detection [2-87](#)  
error-disabled interfaces, displaying [2-289](#)  
EtherChannel  
  assigning Ethernet interface to channel group [2-29](#)  
  creating port-channel logical interface [2-93](#)  
  debug EtherChannel/PAgP, display [B-8](#)  
  debug platform-specific events, display [B-29](#)  
  displaying [2-284](#)  
  interface information, displaying [2-289](#)  
LACP  
  clearing channel-group information [2-39](#)  
  debug messages, display [B-15](#)  
  displaying [2-312](#)  
  modes [2-29](#)  
  port priority for hot-standby ports [2-124](#)  
  restricting a protocol [2-33](#)  
  system priority [2-126](#)

EtherChannel (continued)  
  load-distribution methods [2-212](#)  
PAgP  
  aggregate-port learner [2-199](#)  
  clearing channel-group information [2-42](#)  
  debug messages, display [B-21](#)  
  displaying [2-359](#)  
  error detection for [2-87](#)  
  error recovery timer [2-89](#)  
  learn method [2-199](#)  
  modes [2-29](#)  
  physical-port learner [2-199](#)  
  priority of interface for transmitted traffic [2-201](#)  
Ethernet controller, internal register display [2-260](#)  
Ethernet statistics, collecting [2-225](#)  
examples, conventions for [xvi](#)  
exit command [2-530](#)  
extended discovery of candidate switches [2-50](#)  
extended-range VLANs  
  and allowed VLAN list [2-495](#)  
  and pruning-eligible list [2-495](#)  
  configuring [2-515](#)  
extended system ID for STP [2-425](#)

---

## F

fan information, displaying [2-276](#)  
file name, VTP [2-539](#)  
files, deleting [2-63](#)  
flash\_init (boot loader) command [A-9](#)  
flowcontrol command [2-91](#)  
format (boot loader) command [A-10](#)  
forwarding packets, with ACL matches [2-3](#)  
forwarding results, display [C-5](#)  
frame forwarding information, displaying [C-5](#)  
fsck (boot loader) command [A-11](#)

## G

global configuration mode [1-2, 1-4](#)

## H

hardware ACL statistics [2-241](#)

help (boot loader) command [A-12](#)

hop-count limit for clusters [2-50](#)

host connection, port configuration [2-479](#)

Hot Standby Router Protocol

See HSRP

HSRP

binding HSRP group to cluster [2-58](#)

standby group [2-58](#)

IGMP filters

applying [2-112](#)

debug messages, display [B-12](#)

IGMP groups, setting maximum [2-113](#)

IGMP maximum groups, debugging [B-13](#)

IGMP profiles

creating [2-115](#)

displaying [2-301](#)

IGMP snooping

displaying [2-302, 2-305](#)

enabling [2-117](#)

multicast table [1-6, 2-306](#)

report suppression [2-120](#)

images

See software images

Immediate-Leave feature, MVR [2-196](#)

Immediate-Leave processing [2-117](#)

initial configuration

See hardware installation guide

inline power, configuring [2-214](#)

interface command [2-98](#)

interface configuration mode [1-2, 1-4](#)

interface port-channel command [2-93](#)

interface range command [2-95](#)

interface-range macros [2-61](#)

interfaces

assigning Ethernet interface to channel group [2-29](#)

configuring [2-85](#)

configuring multiple [2-95](#)

creating port-channel logical [2-93](#)

debug messages, display [B-11](#)

disabling [2-405](#)

displaying the MAC address table [2-328](#)

restarting [2-405](#)

interface speed, configuring [2-461](#)

internal registers, displaying [2-260, 2-269](#)

Internet Group Management Protocol

See IGMP

invalid GBIC

error detection for [2-87](#)

error recovery timer [2-89](#)

ip address command [2-103](#)

IP addresses, setting [2-103](#)

IP address matching [2-149](#)

IP DHCP Snooping

See DHCP snooping

ip dhcp snooping command [2-105](#)

ip dhcp snooping information option command [2-106](#)

ip dhcp snooping limit rate command [2-108](#)

ip dhcp snooping trust command [2-109](#)

ip dhcp snooping verify command [2-110](#)

ip dhcp snooping vlan command [2-111](#)

ip igmp filter command [2-112](#)

ip igmp max-groups command [2-113](#)

ip igmp profile command [2-115](#)

ip igmp snooping command [2-117](#)

ip igmp snooping report-suppression command [2-120](#)

IP multicast addresses [2-193](#)

## IP phones

- auto-QoS configuration [2-16](#)
- trusting packets sent from [2-186](#)

IP-precedence-to-DSCP map [2-163](#)ip ssh command [2-122](#)


---

**J**

## jumbo frames

- See MTU

---

**L**

## LACP

- See EtherChannel

lacp port-priority command [2-124](#)lacp system-priority command [2-126](#)Layer 2 mode, enabling [2-474](#)

## Layer 2 traceroute

- IP addresses [2-506](#)
- MAC addresses [2-503](#)

Layer 3 mode, enabling [2-474](#)line configuration mode [1-3, 1-5](#)

## Link Aggregation Control Protocol

- See EtherChannel

## link flap

- error detection for [2-87](#)
- error recovery timer [2-89](#)

load\_helper (boot loader) command [A-13](#)load-distribution methods for EtherChannel [2-212](#)logging event command [2-128](#)logging file command [2-129](#)logical interface [2-93](#)

## loopback error

- detection for [2-87](#)
- recovery timer [2-89](#)

loop guard, for spanning tree [2-427, 2-431](#)


---

**M**
mac access-group command [2-131](#)MAC access-groups, displaying [2-316](#)MAC access list configuration mode [2-133](#)mac access-list extended command [2-133](#)MAC access lists [2-65](#)

## MAC addresses

## displaying

- aging time [2-322](#)
- all [2-320](#)
- dynamic [2-326](#)
- Layer 2 multicast entries [2-330](#)
- notification settings [2-332](#)
- number of addresses in a VLAN [2-324](#)
- per interface [2-328](#)
- per VLAN [2-336](#)
- static [2-334](#)
- static and dynamic entries [2-318](#)

## dynamic

- aging time [2-135](#)
- deleting [2-40](#)
- displaying [2-326](#)
- enabling MAC address notification [2-137](#)
- matching [2-149](#)
- static
  - adding and removing [2-139](#)
  - displaying [2-334](#)
  - dropping on an interface [2-141](#)
- tables [2-320](#)

MAC address notification, debugging [B-16](#)mac address-table aging-time [2-131, 2-149](#)mac address-table aging-time command [2-135](#)mac address-table notification command [2-137](#)mac address-table static command [2-139](#)mac address-table static drop command [2-141](#)macro apply command [2-143](#)

- macro description command [2-146](#)
- macro name command [2-147](#)
- macros
  - adding a description [2-146](#)
  - applying [2-143](#)
  - creating [2-147](#)
  - displaying [2-361](#)
  - specifying parameter values [2-143](#)
  - tracing [2-143](#)
- macros, interface range [2-61, 2-95](#)
- manual
  - audience [xv](#)
  - purpose of [xv](#)
- maps
  - QoS
    - defining [2-163](#)
    - displaying [2-345](#)
  - VLAN
    - creating [2-527](#)
    - defining [2-149](#)
    - displaying [2-396](#)
- match (access-map configuration) command [2-149](#)
- match (class-map configuration) command [2-151](#)
- maximum transmission unit
  - See [MTU](#)
- mdix auto command [2-153](#)
- member switches
  - See [clusters](#)
- memory (boot loader) command [A-14](#)
- mkdir (boot loader) command [A-16](#)
- mls qos aggregate-policer command [2-157](#)
- mls qos command [2-155](#)
- mls qos cos command [2-159](#)
- mls qos dscp-mutation command [2-161](#)
- mls qos map command [2-163](#)
- mls qos queue-set output buffers command [2-166](#)
- mls qos queue-set output threshold command [2-168](#)
- mls qos srr-queue input bandwidth command [2-170](#)
- mls qos srr-queue input buffers command [2-172](#)
- mls qos srr-queue input cos-map command [2-174](#)
- mls qos srr-queue input dscp-map command [2-176](#)
- mls qos srr-queue input priority-queue command [2-178](#)
- mls qos srr-queue input threshold command [2-180](#)
- mls qos srr-queue output cos-map command [2-182](#)
- mls qos srr-queue output dscp-map command [2-184](#)
- mls qos trust command [2-186](#)
- mode, MVR [2-193](#)
- Mode button, and password recovery [2-229](#)
- modes, commands [1-2](#)
- monitor session command [2-188](#)
- more (boot loader) command [A-17](#)
- MSTP
  - displaying [2-376](#)
  - interoperability [2-45](#)
  - link type [2-429](#)
  - MST region
    - aborting changes [2-435](#)
    - applying changes [2-435](#)
    - configuration name [2-435](#)
    - configuration revision number [2-435](#)
    - current or pending display [2-435](#)
    - displaying [2-376](#)
    - MST configuration mode [2-435](#)
    - VLANs-to-instance mapping [2-435](#)
  - path cost [2-437](#)
  - protocol mode [2-433](#)
  - restart protocol migration process [2-45](#)
- root port
  - loop guard [2-427](#)
  - preventing from becoming designated [2-427](#)
  - restricting which can be root [2-427](#)
  - root guard [2-427](#)



## MSTP (continued)

## root switch

- affects of extended system ID [2-425](#)
- hello-time [2-440, 2-448](#)
- interval between BPDU messages [2-441](#)
- interval between hello BPDU messages [2-440, 2-448](#)
- max-age [2-441](#)
- maximum hop count before discarding BPDU [2-443](#)
- port priority for selection of [2-445](#)
- primary or secondary [2-448](#)
- switch priority [2-447](#)

## state changes

- blocking to forwarding state [2-454](#)
- enabling BPDU filtering [2-417, 2-452](#)
- enabling BPDU guard [2-419, 2-452](#)
- enabling Port Fast [2-452, 2-454](#)
- forward-delay time [2-439](#)
- length of listening and learning states [2-439](#)
- rapid transition to forwarding [2-429](#)
- shutting down Port Fast-enabled ports [2-452](#)

state information display [2-375](#)

## MTU

- configuring size [2-500](#)
- displaying global setting [2-386](#)

multicast group address, MVR [2-196](#)multicast groups, MVR [2-194](#)multicast router learning method [2-117](#)multicast router ports, configuring [2-117](#)multicast storm control [2-469](#)multicast traffic counters [2-295](#)multicast VLAN, MVR [2-193](#)

## multicast VLAN registration

See MVR

multiple hosts on authorized port [2-71](#)

## Multiple Spanning Tree Protocol

See MSTP

## MVR

- and address aliasing [2-194](#)
- configuring [2-193](#)
- configuring interfaces [2-196](#)
- debug messages, display [B-19](#)
- displaying [2-353](#)
- displaying interface information [2-355](#)
- members, displaying [2-357](#)
- mvr (global configuration) command [2-193](#)
- mvr (interface configuration) command [2-196](#)
- mvr vlan group command [2-197](#)

## N

native VLANs [2-495](#)

## nonegotiate

- DTP messaging [2-482](#)
- speed [2-461](#)

## non-IP protocols

- denying [2-65](#)
- forwarding [2-203](#)

non-IP traffic access lists [2-133](#)

## non-IP traffic forwarding

- denying [2-65](#)
- permitting [2-203](#)

normal-range VLANs [2-515, 2-521](#)note, description [xvi](#)no vlan command [2-515, 2-525](#)

## P

## PAGP

See EtherChannel

pagp learn-method command [2-199](#)pagp port-priority command [2-201](#)password, VTP [2-539, 2-543](#)password-recovery mechanism, enabling and disabling [2-229](#)

- permit command [2-203](#)
- per-VLAN spanning-tree plus
  - See STP
- physical-port learner [2-199](#)
- PIM-DVMRP, as multicast router learning method [2-117](#)
- PoE, logging of status [2-128](#)
- police aggregate command [2-208](#)
- police command [2-206](#)
- policed-DSCP map [2-163](#)
- policy-map command [2-210](#)
- policy maps
  - applying to an interface [2-231, 2-236](#)
  - creating [2-210](#)
  - displaying [2-363](#)
  - policers
    - displaying [2-339](#)
    - for a single class [2-206](#)
    - for multiple classes [2-157, 2-208](#)
    - policed-DSCP map [2-163](#)
  - traffic classification
    - defining the class [2-34](#)
    - defining trust states [2-508](#)
    - setting DSCP or IP precedence values [2-234](#)
- Port Aggregation Protocol
  - See EtherChannel
- port-based authentication
  - AAA method list [2-1](#)
  - debug messages, display [B-6](#)
  - enabling 802.1x
    - globally [2-82](#)
    - per interface [2-77](#)
  - guest VLAN [2-69](#)
  - host modes [2-71](#)
  - initialize an interface [2-73](#)
  - manual control of authorization state [2-77](#)
  - multiple hosts on authorized port [2-71](#)
  - port-based authentication (continued)
    - periodic re-authentication
      - enabling [2-81](#)
      - time between attempts [2-83](#)
    - quiet period between failed authentication exchanges [2-83](#)
    - re-authenticating 802.1x-enabled ports [2-79](#)
    - resetting configurable 802.1x parameters [2-68](#)
    - switch-to-authentication server retransmission time [2-83](#)
    - switch-to-client frame-retransmission number [2-74 to 2-75](#)
    - switch-to-client retransmission time [2-83](#)
  - port-channel load-balance command [2-212](#)
  - Port Fast, for spanning tree [2-454](#)
  - port ranges, defining [2-61](#)
  - ports, debugging [B-62](#)
  - ports, protected [2-493](#)
  - port security
    - aging [2-489](#)
    - debug messages, display [B-64](#)
    - enabling [2-484](#)
    - violation error recovery [2-89](#)
  - port trust states for QoS [2-186](#)
  - port types, MVR [2-196](#)
  - power information, displaying [2-276](#)
  - power inline command [2-214](#)
  - Power over Ethernet (PoE) controller, displaying [2-267](#)
  - priority-queue command [2-216](#)
  - priority value, stack member [2-383, 2-471](#)
  - privileged EXEC mode [1-2, 1-3](#)
  - protected ports, displaying [2-294](#)
  - pruning
    - VLANs [2-495](#)
  - VTP
    - displaying interface information [2-289](#)
    - enabling [2-539, 2-543](#)

pruning-eligible VLAN list [2-497](#)

PVST+

See STP

## Q

### QoS

auto-QoS

configuring [2-16](#)

debug messages, display [1-6, B-2](#)

displaying [2-244](#)

class maps

creating [2-36](#)

defining the match criteria [2-151](#)

displaying [2-251](#)

defining the CoS value for an incoming packet [2-159](#)

displaying configuration information [2-244, 2-338](#)

DSCP trusted ports

applying DSCP-to-DSCP-mutation map to [2-161](#)

defining DSCP-to-DSCP-mutation map [2-163](#)

egress queues

allocating buffers [2-166](#)

defining the CoS output queue threshold map [2-182](#)

defining the DSCP output queue threshold map [2-184](#)

displaying buffer allocations [2-342](#)

displaying CoS output queue threshold map [2-345](#)

displaying DSCP output queue threshold map [2-345](#)

displaying queueing strategy [2-342](#)

displaying queue-set settings [2-348](#)

enabling bandwidth shaping and scheduling [2-465](#)

enabling bandwidth sharing and scheduling [2-467](#)

limiting the maximum output on a port [2-463](#)

mapping a port to a queue-set [2-218](#)

mapping CoS values to a queue and threshold [2-182](#)

mapping DSCP values to a queue and threshold [2-184](#)

setting maximum and reserved memory

allocations [2-168](#)

setting WTD thresholds [2-168](#)

enabling [2-155](#)

QoS (continued)

ingress queues

allocating buffers [2-172](#)

assigning SRR scheduling weights [2-170](#)

defining the CoS input queue threshold map [2-174](#)

defining the DSCP input queue threshold map [2-176](#)

displaying buffer allocations [2-342](#)

displaying CoS input queue threshold map [2-345](#)

displaying DSCP input queue threshold map [2-345](#)

displaying queueing strategy [2-342](#)

displaying settings for [2-340](#)

enabling the priority queue [2-178](#)

mapping CoS values to a queue and threshold [2-174](#)

mapping DSCP values to a queue and threshold [2-176](#)

setting WTD thresholds [2-180](#)

maps

defining [2-163, 2-174, 2-176, 2-182, 2-184](#)

displaying [2-345](#)

policy maps

applying an aggregate policer [2-208](#)

applying to an interface [2-231, 2-236](#)

creating [2-210](#)

defining policers [2-157, 2-206](#)

displaying policers [2-339](#)

displaying policy maps [2-363](#)

policed-DSCP map [2-163](#)

setting DSCP or IP precedence values [2-234](#)

traffic classifications [2-34](#)

trust states [2-508](#)

port trust states [2-186](#)

queues, enabling the expedite [2-216](#)

statistics

in-profile and out-of-profile packets [2-342](#)

packets enqueued or dropped [2-342](#)

sent and received CoS values [2-342](#)

sent and received DSCP values [2-342](#)

trusted boundary for IP phones [2-186](#)

quality of service

See QoS

querytime, MVR [2-193](#)  
 queue-set command [2-218](#)

---

## R

rapid per-VLAN spanning-tree plus  
   See STP  
 rapid PVST+  
   See STP  
 rcommand command [2-219](#)  
 re-authenticating 802.1x-enabled ports [2-79](#)  
 re-authentication  
   periodic [2-81](#)  
   time between attempts [2-83](#)  
 receiver ports, MVR [2-196](#)  
 receiving flow-control packets [2-91](#)  
 recovery mechanism  
   causes [2-89](#)  
   display [2-249](#), [2-278](#), [2-282](#)  
   timer interval [2-89](#)  
 redundancy for cluster switches [2-58](#)  
 reload command [2-221](#)  
 remote command command [2-222](#)  
 remote-span command [2-223](#)  
 Remote Switched Port Analyzer  
   See RSPAN  
 rename (boot loader) command [A-18](#)  
 requirements  
   cluster  
     See release notes  
   CMS  
     See switch software configuration guide  
 reset (boot loader) command [A-19](#)  
 reset command [2-530](#)  
 resource templates, displaying [2-371](#)  
 rmdir (boot loader) command [A-20](#)  
 rmon collection stats command [2-225](#)  
 root guard, for spanning tree [2-427](#)

routed ports  
   IP addresses on [2-104](#)  
   number supported [2-104](#)  
 RSPAN  
   configuring [2-188](#)  
   displaying [2-350](#)  
   filter RSPAN traffic [2-188](#)  
   remote-span command [2-223](#)  
   sessions  
     add interfaces to [2-188](#)  
     displaying [2-350](#)  
     start new [2-188](#)

---

## S

SDM mismatch mode [2-227](#), [2-384](#)  
 sdm prefer command [2-226](#)  
 secure ports, limitations [2-485](#)  
 sending flow-control packets [2-91](#)  
 service password-recovery command [2-229](#)  
 service-policy command [2-231](#)  
 session command [2-233](#)  
 set (boot loader) command [A-21](#)  
 set command [2-234](#)  
 setup command [2-236](#)  
 setup express command [2-239](#)  
 show access-lists command [2-241](#)  
 show auto qos command [2-244](#)  
 show boot command [2-247](#)  
 show changes command [2-530](#)  
 show class-map command [2-251](#)  
 show cluster candidates command [2-254](#)  
 show cluster command [2-252](#)  
 show cluster members command [2-256](#)  
 show controllers cpu-interface command [2-258](#)  
 show controllers ethernet-controller command [2-260](#)  
 show controllers power inline command [2-267](#)  
 show controllers team command [2-269](#)

- show current command [2-530](#)
- show dot1x command [2-271](#)
- show dtp [2-274](#)
- show env command [2-276](#)
- show errdisable detect command [2-278](#)
- show errdisable flap-values command [2-280](#)
- show errdisable recovery command [2-282](#)
- show etherchannel command [2-284](#)
- show flowcontrol command [2-287](#)
- show interfaces command [2-289](#)
- show interfaces counters command [2-295](#)
- show ipc command [2-308](#)
- show ip dhcp snooping binding command [2-299](#)
- show ip dhcp snooping command [2-298](#)
- show ip igmp profile command [2-301](#)
- show ip igmp snooping command [2-302](#)
- show ip igmp snooping groups command [2-306](#)
- show ip igmp snooping mrouter command [2-305](#)
- show lacp command [2-312](#)
- show mac access-group command [2-316](#)
- show mac address-table address command [2-320](#)
- show mac address-table aging time command [2-322](#)
- show mac address-table command [2-318](#)
- show mac address-table count command [2-324](#)
- show mac address-table dynamic command [2-326](#)
- show mac address-table interface command [2-328](#)
- show mac address-table multicast command [2-330](#)
- show mac address-table notification command [2-332](#)
- show mac address-table static command [2-334](#)
- show mac address-table vlan command [2-336](#)
- show mls qos aggregate-policer command [2-339](#)
- show mls qos command [2-338](#)
- show mls qos input-queue command [2-340](#)
- show mls qos interface command [2-342](#)
- show mls qos maps command [2-345](#)
- show mls qos queue-set command [2-348](#)
- show monitor command [2-350](#)
- show mvr command [2-353](#)
- show mvr interface command [2-355](#)
- show mvr members command [2-357](#)
- show pagp command [2-359](#)
- show parser macro command [2-361](#)
- show platform acl command [C-2](#)
- show platform configuration command [C-3](#)
- show platform etherchannel command [C-4](#)
- show platform forward command [C-5](#)
- show platform igmp snooping command [C-7](#)
- show platform ipc trace command [C-12](#)
- show platform ip multicast command [C-9](#)
- show platform ip unicast command [C-10](#)
- show platform layer4op command [C-13](#)
- show platform mac-address-table command [C-14](#)
- show platform messaging command [C-15](#)
- show platform monitor command [C-16](#)
- show platform mvr table command [C-17](#)
- show platform pm command [C-18](#)
- show platform port-asic command [C-19](#)
- show platform port-security command [C-24](#)
- show platform qos command [C-25](#)
- show platform resource-manager command [C-26](#)
- show platform snmp counters command [C-28](#)
- show platform spanning-tree command [C-29](#)
- show platform stack-manager command [C-31](#)
- show platform stp-instance command [C-30](#)
- show platform tb command [C-33](#)
- show platform tcam command [C-35](#)
- show platform vlan command [C-38](#)
- show policy-map command [2-363](#)
- show port security command [2-365](#)
- show proposed command [2-530](#)
- show sdm prefer command [2-371](#)
- show setup express command [2-368, 2-374](#)
- show spanning-tree command [2-375](#)
- show storm-control command [2-381](#)
- show switch command [2-383](#)
- show system mtu command [2-386](#)
- show trust command [2-508](#)
- show uddl command [2-387](#)

- show version command [2-390](#)
- show vlan access-map command [2-396](#)
- show vlan command [2-392](#)
- show vlan command, fields [2-393](#)
- show vlan filter command [2-397](#)
- show vmps command [2-398](#)
- show vtp command [2-401](#)
- shutdown command [2-405](#)
- shutdown vlan command [2-406](#)
- SNMP host, specifying [2-410](#)
- SNMP informs, enabling the sending of [2-407](#)
- snmp-server enable traps command [2-407](#)
- snmp-server host command [2-410](#)
- snmp trap mac-notification command [2-414](#)
- SNMP traps
  - enabling MAC address notification trap [2-414](#)
  - enabling the MAC address notification feature [2-137](#)
  - enabling the sending of [2-407](#)
- software images
  - copying [2-5](#)
  - deleting [2-63](#)
  - downloading [2-8](#)
  - upgrading [2-5, 2-8](#)
  - uploading [2-14](#)
- software version, displaying [2-390](#)
- source ports, MVR [2-196](#)
- SPAN
  - configuring [2-188](#)
  - debug messages, display [B-18](#)
  - displaying [2-350](#)
  - filter SPAN traffic [2-188](#)
  - sessions
    - add interfaces to [2-188](#)
    - displaying [2-350](#)
    - start new [2-188](#)
- spanning-tree backbonefast command [2-416](#)
- spanning-tree bpduguard command [2-417](#)
- spanning-tree bpduguard command [2-419](#)
- spanning-tree cost command [2-421](#)
- spanning-tree etherchannel command [2-423](#)
- spanning-tree extend system-id command [2-425](#)
- spanning-tree guard command [2-427](#)
- spanning-tree link-type command [2-429](#)
- spanning-tree loopguard default command [2-431](#)
- spanning-tree mode command [2-433](#)
- spanning-tree mst configuration command [2-435](#)
- spanning-tree mst cost command [2-437](#)
- spanning-tree mst forward-time command [2-439](#)
- spanning-tree mst hello-time command [2-440](#)
- spanning-tree mst max-age command [2-441](#)
- spanning-tree mst max-hops command [2-443](#)
- spanning-tree mst port-priority command [2-445](#)
- spanning-tree mst priority command [2-447](#)
- spanning-tree mst root command [2-448](#)
- spanning-tree portfast (global configuration) command [2-452](#)
- spanning-tree portfast (interface configuration) command [2-454](#)
- spanning-tree port-priority command [2-450](#)
- Spanning Tree Protocol
  - See STP
- spanning-tree uplinkfast command [2-456](#)
- spanning-tree vlan command [2-458](#)
- speed command [2-461](#)
- srr-queue bandwidth limit command [2-463](#)
- srr-queue bandwidth shape command [2-465](#)
- srr-queue bandwidth share command [2-467](#)
- SSH, configuring version [2-122](#)
- stack member
  - access [2-233](#)
  - number [2-383, 2-472](#)
  - priority value [2-471](#)
  - reloading [2-221](#)
- stacks, switch
  - reloading [2-221](#)
  - stack member access [2-233](#)
  - stack member number [2-383, 2-472](#)
  - stack member priority value [2-383, 2-471](#)

- static-access ports, configuring [2-476](#)
- statistics, Ethernet group [2-225](#)
- sticky learning, enabling [2-484](#)
- storm-control command [2-469](#)
- STP
  - BackboneFast [2-416](#)
  - counters, clearing [2-44](#)
  - debug messages, display
    - BackboneFast events [B-68](#)
    - MSTP [B-71](#)
    - optimized BPDUs handling [B-70](#)
    - spanning-tree activity [B-66](#)
    - switch shim [B-73](#)
    - transmitted and received BPDUs [B-69](#)
    - UplinkFast [B-75](#)
  - detection of indirect link failures [2-416](#)
  - EtherChannel misconfiguration [2-423](#)
  - extended system ID [2-425](#)
  - path cost [2-421](#)
  - protocol modes [2-433](#)
  - root port
    - accelerating choice of new [2-456](#)
    - loop guard [2-427](#)
    - preventing from becoming designated [2-427](#)
    - restricting which can be root [2-427](#)
    - root guard [2-427](#)
    - UplinkFast [2-456](#)
  - root switch
    - affects of extended system ID [2-425, 2-459](#)
    - hello-time [2-458](#)
    - interval between BPDU messages [2-458](#)
    - interval between hello BPDU messages [2-458](#)
    - max-age [2-458](#)
    - port priority for selection of [2-450](#)
    - primary or secondary [2-458](#)
    - switch priority [2-458](#)
- STP (continued)
  - state changes
    - blocking to forwarding state [2-454](#)
    - enabling BPDU filtering [2-417, 2-452](#)
    - enabling BPDU guard [2-419, 2-452](#)
    - enabling Port Fast [2-452, 2-454](#)
    - enabling timer to recover from error state [2-89](#)
    - forward-delay time [2-458](#)
    - length of listening and learning states [2-458](#)
    - shutting down Port Fast-enabled ports [2-452](#)
  - state information display [2-375](#)
  - VLAN options [2-447, 2-458](#)
- SVIs, creating [2-98](#)
- Switched Port Analyzer
  - See SPAN
- switching characteristics
  - modifying [2-474, 2-482](#)
  - returning to interfaces [2-474, 2-482](#)
- switchport access command [2-476](#)
- switchport block command [2-478](#)
- switchport command [2-474](#)
- switchport host command [2-479](#)
- switchport mode command [2-480](#)
- switchport nonegotiate command [2-482](#)
- switchport port-security aging command [2-489](#)
- switchport port-security command [2-484](#)
- switchport priority extend command [2-491](#)
- switchport protected command [2-493](#)
- switchports, displaying [2-289](#)
- switchport trunk command [2-495](#)
- switchport voice vlan command [2-498](#)
- switch priority command [2-471](#)
- switch renumber command [2-472](#)
- system message logging [2-128](#)
- system message logging, save message to flash [2-129](#)
- system mtu command [2-500](#)
- system resource templates [2-226](#)

## T

tar files, creating, listing, and extracting [2-11](#)

TDR, running [2-502](#)

Telnet, using to communicate to cluster switches [2-219](#)

temperature information, displaying [2-276](#)

templates, system resources [2-226](#)

test cable-diagnostics tdr command [2-502](#)

traceroute mac command [2-503](#)

traceroute mac ip command [2-506](#)

trunking, VLAN mode [2-480](#)

trunk mode [2-480](#)

trunk ports [2-480](#)

trunks, to non-DTP device [2-481](#)

trusted boundary for QoS [2-186](#)

trusted port states for QoS [2-186](#)

type (boot loader) command [A-24](#)

## U

## UDLD

aggressive mode [2-510, 2-512](#)

debug messages, display [B-84](#)

enable globally [2-510](#)

enable per interface [2-512](#)

error recovery timer [2-89](#)

message timer [2-510](#)

normal mode [2-510, 2-512](#)

reset a shutdown interface [2-514](#)

status [2-387](#)

udld command [2-510](#)

udld port command [2-512](#)

udld reset command [2-514](#)

unicast storm control [2-469](#)

unicast traffic counters [2-295](#)

UniDirectional Link Detection

See UDLD

unknown multicast traffic, preventing [2-478](#)

unknown unicast traffic, preventing [2-478](#)

unset (boot loader) command [A-25](#)

upgrading, software images [2-5, 2-8](#)

upgrading information

See release notes

UplinkFast, for STP [2-456](#)

user EXEC mode [1-2, 1-3](#)

## V

version (boot loader) command [A-27](#)

version mismatch mode [2-384](#)

vlan (global configuration) command [2-515](#)

vlan (VLAN configuration) command [2-521](#)

vlan access-map command [2-527](#)

VLAN access map configuration mode [2-527](#)

VLAN access maps

actions [2-3](#)

displaying [2-396](#)

VLAN configuration

rules [2-519, 2-523](#)

saving [2-515, 2-525](#)

VLAN configuration mode

commands

VLAN [2-521](#)

VTP [2-543](#)

description [1-5](#)

entering [2-529](#)

summary [1-3](#)

vlan database command [2-529](#)

vlan filter command [2-532](#)

VLAN filters, displaying [2-397](#)

VLAN ID range [2-515, 2-521](#)

VLAN maps

applying [2-532](#)

creating [2-527](#)

defining [2-149](#)

displaying [2-396](#)

VLAN Query Protocol

See VQP



## VLANs

- adding [2-515](#)
  - configuring [2-515, 2-521](#)
  - debug messages, display
    - ISL [B-80](#)
    - VLAN IOS file system error tests [B-78](#)
    - VLAN manager activity [B-76](#)
    - VTP [B-82](#)
  - displaying configurations [2-392](#)
  - extended-range [2-515](#)
  - MAC addresses
    - displaying [2-336](#)
    - number of [2-324](#)
  - media types [2-518, 2-523](#)
  - normal-range [2-515, 2-521](#)
  - restarting [2-406](#)
  - saving the configuration [2-515](#)
  - shutting down [2-406](#)
  - SNMP traps for VTP [2-408, 2-411](#)
  - suspending [2-406](#)
  - variables [2-521](#)
- VLAN Trunking Protocol
- See VTP
- VM mode [2-384](#)
- VMPS
- configuring servers [2-537](#)
  - displaying [2-398](#)
  - error recovery timer [2-89](#)
  - reconfirming dynamic VLAN assignments [2-534](#)
- vmpls reconfirm (global configuration) command [2-535](#)
- vmpls reconfirm (privileged EXEC) command [2-534](#)
- vmpls retry command [2-536](#)
- vmpls server command [2-537](#)
- voice VLAN
- configuring [2-498](#)
  - setting port priority [2-491](#)

## VQP

- and dynamic-access ports [2-477](#)
- clearing client statistics [2-46](#)
- displaying information [2-398](#)
- per-server retry count [2-536](#)
- reconfirmation interval [2-535](#)
- reconfirming dynamic VLAN assignments [2-534](#)

## VTP

- changing characteristics [2-539](#)
- clearing pruning counters [2-47](#)
- configuring
  - domain name [2-539, 2-543](#)
  - file name [2-539](#)
  - mode [2-539, 2-543](#)
  - password [2-539, 2-543](#)
- counters display fields [2-402](#)
- displaying information [2-401](#)
- enabling
  - pruning [2-539, 2-543](#)
  - Version 2 [2-539, 2-543](#)
- mode [2-539, 2-543](#)
- pruning [2-539, 2-543](#)
- saving the configuration [2-515, 2-525](#)
- statistics [2-401](#)
- status [2-401](#)
- status display fields [2-403](#)
- vtp (global configuration) command [2-539](#)
- vtp (VLAN configuration) command [2-543](#)

