



Numerics

- 802.1Q trunk ports and native VLANs [2-645](#)
 - 802.1Q tunnel ports
 - configuring [2-587](#)
 - displaying [2-346](#)
 - limitations [2-588](#)
 - 802.1x
 - and switchport modes [2-588](#)
 - violation error recovery [2-104](#)
- See also port-based authentication

A

- aaa accounting dot1x command [2-1](#)
- aaa authentication dot1x command [2-3](#)
- AAA methods [2-3](#)
- abort command [2-643](#)
- access control entries
 - See ACEs
- access control lists
 - See ACLs
- access groups
 - IP [2-116](#)
 - MAC, displaying [2-414](#)
- access map configuration mode [2-199](#)
- access mode [2-587](#)
- access ports [2-587](#)
- ACEs [2-80, 2-261](#)

ACLs

- deny [2-78](#)
- displaying [2-308](#)
- for non-IP protocols [2-180](#)
- IP [2-116](#)
- matching [2-199](#)
- on Layer 2 interfaces [2-116](#)
- permit [2-259](#)
- action command [2-5](#)
- address aliasing [2-248](#)
- aggregate-port learner [2-253](#)
- allowed VLANs [2-606](#)
- apply command [2-643](#)
- archive copy-sw command [2-7](#)
- archive download-sw command [2-10](#)
- archive tar command [2-14](#)
- archive upload-sw command [2-17](#)
- arp access-list command [2-19](#)
- audience [xvii](#)
- authorization state of controlled port [2-92](#)
- autonegotiation of duplex mode [2-101](#)
- auto qos voip command [2-21](#)

B

- BackboneFast, for STP [2-517](#)
- backup interfaces
 - configuring [2-582](#)
 - displaying [2-368](#)
- boot (boot loader) command [A-2](#)
- boot auto-copy-sw command [2-26](#)

boot bootlpr command [2-27](#)
 boot config-file command [2-28](#)
 boot enable-break command [2-29](#)
 boot helper command [2-30](#)
 boot helper-config file command [2-31](#)
 booting
 Cisco IOS image [2-34](#)
 displaying environment variables [2-317](#)
 interrupting [2-29](#)
 manually [2-32](#)
 boot loader
 accessing [A-1](#)
 booting
 Cisco IOS image [A-2](#)
 helper image [2-30](#)
 directories
 creating [A-16](#)
 displaying a list of [A-7](#)
 removing [A-20](#)
 displaying
 available commands [A-12](#)
 memory heap utilization [A-14](#)
 version [A-27](#)
 environment variables
 described [A-21](#)
 displaying settings [A-21](#)
 location of [A-22](#)
 setting [A-21](#)
 unsetting [A-25](#)
 files
 copying [A-5](#)
 deleting [A-6](#)
 displaying a list of [A-7](#)
 displaying the contents of [A-4, A-17, A-24](#)
 renaming [A-18](#)

boot loader (continued)
 file system
 formatting [A-10](#)
 initializing flash [A-9](#)
 running a consistency check [A-11](#)
 loading helper images [A-13](#)
 prompt [A-1](#)
 resetting the system [A-19](#)
 boot manual command [2-32](#)
 boot private-config-file command [2-33](#)
 boot system command [2-34](#)
 BPDU filtering, for spanning tree [2-518, 2-551](#)
 BPDU guard, for spanning tree [2-520, 2-551](#)
 broadcast storm control [2-570](#)

C

candidate switches
 See clusters
 cat (boot loader) command [A-4](#)
 caution, description [xviii](#)
 CDP, enabling protocol tunneling for [2-167](#)
 channel-group command [2-36](#)
 channel-protocol command [2-40](#)
 Cisco Network Assistant
 See Network Assistant [xviii](#)
 Cisco SoftPhone
 auto-QoS configuration [2-21](#)
 trusting packets sent from [2-239](#)
 class command [2-41](#)
 class-map command [2-43](#)
 class maps
 creating [2-43](#)
 defining the match criteria [2-201](#)
 displaying [2-322](#)
 class of service
 See CoS

- clear ip arp inspection log command [2-45](#)
 - clear ip arp inspection statistics command [2-46](#)
 - clear ipc command [2-48](#)
 - clear ip dhcp snooping database command [2-47](#)
 - clear l2protocol-tunnel counters command [2-49](#)
 - clear lacp command [2-50](#)
 - clear mac address-table command [2-51](#)
 - clear pagp command [2-53](#)
 - clear port-security command [2-54](#)
 - clear spanning-tree counters command [2-56](#)
 - clear spanning-tree detected-protocols command [2-57](#)
 - clear vmps statistics command [2-58](#)
 - clear vtp counters command [2-59](#)
 - cluster commander-address command [2-60](#)
 - cluster discovery hop-count command [2-62](#)
 - cluster enable command [2-63](#)
 - cluster holdtime command [2-65](#)
 - cluster member command [2-66](#)
 - cluster outside-interface command [2-68](#)
 - cluster requirements [xix](#)
 - cluster run command [2-69](#)
 - clusters
 - adding candidates [2-66](#)
 - binding to HSRP group [2-70](#)
 - building manually [2-66](#)
 - communicating with
 - devices outside the cluster [2-68](#)
 - members by using Telnet [2-282](#)
 - debug messages, display [B-4](#)
 - displaying
 - candidate switches [2-325](#)
 - debug messages [B-4](#)
 - member switches [2-327](#)
 - status [2-323](#)
 - hop-count limit for extended discovery [2-62](#)
 - HSRP standby groups [2-70](#)
 - redundancy [2-70](#)
 - SNMP trap [2-507](#)
 - cluster standby-group command [2-70](#)
 - cluster timer command [2-72](#)
 - command modes defined [1-2](#)
 - commands changed in Cisco IOS Release 12.2(18)SE [1-6](#)
 - command switch
 - See clusters
 - configuration, initial
 - See getting started guide and hardware installation guide
 - configuration files
 - password recovery disable considerations [A-1](#)
 - specifying the name [2-28, 2-33](#)
 - configuring multiple interfaces [2-111](#)
 - config-vlan mode
 - commands [2-629](#)
 - description [1-4](#)
 - entering [2-628](#)
 - summary [1-2](#)
 - conventions
 - command [xviii](#)
 - for examples [xviii](#)
 - publication [xviii](#)
 - text [xviii](#)
 - copy (boot loader) command [A-5](#)
 - CoS
 - assigning default value to incoming packets [2-209](#)
 - assigning to Layer 2 protocol packets [2-170](#)
 - overriding the incoming value [2-209](#)
 - CoS-to-DSCP map [2-213](#)
 - CPU ASIC statistics, displaying [2-330](#)
-
- ## D
- debug auto qos command [B-2](#)
 - debug cluster command [B-4](#)
 - debug dot1x command [B-6](#)
 - debug dtp command [B-8](#)
 - debug etherchannel command [B-9](#)
 - debug ilpower command [B-11](#)
 - debug interface command [B-14](#)
 - debug ip dhcp snooping command [B-12](#)

- debug ip igmp filter command [B-16](#)
- debug ip igmp max-groups command [B-17](#)
- debug ip igmp snooping command [B-18](#)
- debug ip verify source packet command [B-13](#)
- debug lacp command [B-19](#)
- debug mac-notification command [B-20](#)
- debug matm command [B-21](#)
- debug monitor command [B-22](#)
- debug mvrdbg command [B-24](#)
- debug nvram command [B-25](#)
- debug pagp command [B-26](#)
- debug platform acl command [B-27](#)
- debug platform cli-redirect main command [B-28](#)
- debug platform configuration command [B-29](#), [B-37](#)
- debug platform cpu-queues command [B-30](#)
- debug platform device-manager command [B-32](#)
- debug platform dot1x command [B-33](#)
- debug platform etherchannel command [B-34](#)
- debug platform fallback-bridging command [B-35](#)
- debug platform forw-tcam command [B-36](#)
- debug platform ip arp inspection command [B-39](#)
- debug platform ipc command [B-47](#)
- debug platform ip dhcp command [B-40](#)
- debug platform ip igmp snooping command [B-41](#)
- debug platform ip multicast command [B-43](#)
- debug platform ip unicast command [B-45](#)
- debug platform led command [B-48](#)
- debug platform matm command [B-49](#)
- debug platform messaging application command [B-51](#)
- debug platform phy command [B-53](#)
- debug platform pm command [B-55](#)
- debug platform port-asic command [B-57](#)
- debug platform port-security command [B-58](#)
- debug platform qos-acl-tcam command [B-59](#)
- debug platform remote-commands command [B-60](#)
- debug platform resource-manager command [B-61](#)
- debug platform snmp command [B-62](#)
- debug platform span command [B-63](#)
- debug platform stack-manager command [B-64](#)
- debug platform supervisor-asic command [B-65](#)
- debug platform sw-bridge command [B-66](#)
- debug platform tcam command [B-67](#)
- debug platform udd command [B-70](#)
- debug platform vlan command [B-71](#)
- debug pm command [B-72](#)
- debug port-security command [B-74](#)
- debug qos-manager command [B-75](#)
- debug spanning-tree backbonefast command [B-78](#)
- debug spanning-tree bpdu command [B-79](#)
- debug spanning-tree bpdu-opt command [B-80](#)
- debug spanning-tree command [B-76](#)
- debug spanning-tree mstp command [B-81](#)
- debug spanning-tree switch command [B-83](#)
- debug spanning-tree uplinkfast command [B-85](#)
- debug sw-vlan command [B-86](#)
- debug sw-vlan ifs command [B-88](#)
- debug sw-vlan notification command [B-90](#)
- debug sw-vlan vtp command [B-92](#)
- debug udd command [B-94](#)
- debug vqpc command [B-96](#)
- define interface-range command [2-73](#)
- delete (boot loader) command [A-6](#)
- delete command [2-75](#)
- deny (ARP access-list configuration) command [2-76](#)
- deny command [2-78](#)
- detect mechanism, causes [2-102](#)
- device manager requirements [xviii](#)
- DHCP snooping
 - accepting untrusted packets from edge switch [2-143](#)
 - enabling
 - on a VLAN [2-148](#)
 - option 82 [2-141](#), [2-143](#)
 - trust on an interface [2-146](#)
 - error recovery timer [2-104](#)
 - rate limiting [2-145](#)

- DHCP snooping binding database
 - binding file, configuring [2-138](#)
 - bindings
 - adding [2-136](#)
 - deleting [2-136](#)
 - clearing database agent statistics [2-47](#)
 - database agent, configuring [2-138](#)
 - displaying
 - binding entries [2-384](#)
 - database agent status [2-386](#)
 - renewing [2-289](#)
- dir (boot loader) command [A-7](#)
- directories, deleting [2-75](#)
- documentation, related [xviii](#)
- document conventions [xviii](#)
- domain name, VTP [2-654, 2-658](#)
- dot1x command [2-81](#)
- dot1x default command [2-83](#)
- dot1x guest-vlan command [2-84](#)
- dot1x host-mode command [2-86](#)
- dot1x initialize command [2-88](#)
- dot1x max-req command [2-89, 2-90](#)
- dot1x multiple-hosts command [2-91](#)
- dot1x port-control command [2-92](#)
- dot1x re-authenticate command [2-94](#)
- dot1x re-authentication command [2-95](#)
- dot1x reauthentication command [2-96](#)
- dot1x timeout command [2-98](#)
- dropping packets, with ACL matches [2-5](#)
- drop threshold, Layer 2 protocol tunneling [2-167](#)
- DSCP-to-CoS map [2-213](#)
- DSCP-to-DSCP-mutation map [2-213](#)
- DTP [2-588](#)
- DTP flap
 - error detection for [2-102](#)
 - error recovery timer [2-104](#)
- DTP negotiation [2-592](#)
- duplex command [2-100](#)
- dynamic-access ports
 - configuring [2-580](#)
 - restrictions [2-581](#)
- dynamic ARP inspection
 - ARP ACLs
 - apply to a VLAN [2-121](#)
 - define [2-19](#)
 - deny packets [2-76](#)
 - display [2-312](#)
 - permit packets [2-257](#)
 - clear
 - log buffer [2-45](#)
 - statistics [2-46](#)
 - display
 - ARP ACLs [2-312](#)
 - configuration and operating state [2-380](#)
 - log buffer [2-380](#)
 - statistics [2-380](#)
 - trust state and rate limit [2-380](#)
 - enable per VLAN [2-131](#)
 - error detection for [2-102](#)
 - error recovery timer [2-104](#)
 - log buffer
 - clear [2-45](#)
 - configure [2-125](#)
 - display [2-380](#)
 - rate-limit incoming ARP packets [2-123](#)
 - statistics
 - clear [2-46](#)
 - display [2-380](#)
 - trusted interface state [2-127](#)
 - type of packet logged [2-133](#)
 - validation checks [2-129](#)
- dynamic auto VLAN membership mode [2-587](#)
- dynamic desirable VLAN membership mode [2-587](#)
- Dynamic Host Configuration Protocol (DHCP)
 - See DHCP snooping
- Dynamic Trunking Protocol
 - See DTP

E

EAP-request/identity frame

- maximum number to send [2-90](#)
- response time before retransmitting [2-98](#)

encapsulation methods [2-606](#)

environment variables, displaying [2-317](#)

errdisable detect cause command [2-102](#)

errdisable recovery command [2-104](#)

error conditions, displaying [2-357](#)

error disable detection [2-102](#)

error-disabled interfaces, displaying [2-368](#)

EtherChannel

- assigning Ethernet interface to channel group [2-36](#)
- creating port-channel logical interface [2-109](#)
- debug EtherChannel/PAgP, display [B-9](#)
- debug platform-specific events, display [B-34](#)
- displaying [2-361](#)
- enabling Layer 2 protocol tunneling for
 - LACP [2-168](#)
 - PAgP [2-168](#)
 - UDLD [2-168](#)
- interface information, displaying [2-368](#)

LACP

- clearing channel-group information [2-50](#)
- debug messages, display [B-19](#)
- displaying [2-410](#)
- modes [2-36](#)
- port priority for hot-standby ports [2-171](#)
- restricting a protocol [2-40](#)
- system priority [2-173](#)

load-distribution methods [2-269](#)

PAgP

- aggregate-port learner [2-253](#)
- clearing channel-group information [2-53](#)
- debug messages, display [B-26](#)
- displaying [2-457](#)
- error detection for [2-102](#)
- error recovery timer [2-104](#)

EtherChannel (continued)

- PAgP (continued)
 - learn method [2-253](#)
 - modes [2-36](#)
 - physical-port learner [2-253](#)
 - priority of interface for transmitted traffic [2-255](#)

Ethernet controller, internal register display [2-332](#)

Ethernet statistics, collecting [2-291](#)

examples, conventions for [xviii](#)

exit command [2-643](#)

extended discovery of candidate switches [2-62](#)

extended-range VLANs

- and allowed VLAN list [2-606](#)
- and pruning-eligible list [2-606](#)
- configuring [2-628](#)

extended system ID for STP [2-526](#)

F

fan information, displaying [2-352](#)

file name, VTP [2-654](#)

files, deleting [2-75](#)

flash_init (boot loader) command [A-9](#)

Flex Links

- configuring [2-582](#)
- displaying [2-368](#)

flowcontrol command [2-107](#)

format (boot loader) command [A-10](#)

forwarding packets, with ACL matches [2-5](#)

forwarding results, display [C-5](#)

frame forwarding information, displaying [C-5](#)

front-end controller

- counter and status information [C-7](#)

fsck (boot loader) command [A-11](#)

G

global configuration mode [1-2, 1-4](#)

H

hardware ACL statistics [2-308](#)
 help (boot loader) command [A-12](#)
 hierarchical policy maps [2-267](#)
 hop-count limit for clusters [2-62](#)
 host connection, port configuration [2-586](#)
 host ports, private VLANs [2-590](#)
 Hot Standby Router Protocol
 See HSRP
 HSRP
 binding HSRP group to cluster [2-70](#)
 standby group [2-70](#)

I

IGMP filters
 applying [2-149](#)
 debug messages, display [B-16](#)
 IGMP groups, setting maximum [2-150](#)
 IGMP maximum groups, debugging [B-17](#)
 IGMP profiles
 creating [2-152](#)
 displaying [2-388](#)
 IGMP snooping
 displaying [2-390, 2-392, 2-397, 2-398](#)
 enabling [2-154](#)
 multicast table [1-6, 2-395](#)
 querier [2-157](#)
 report suppression [2-159](#)
 images
 See software images
 Immediate-Leave feature, MVR [2-250](#)
 Immediate-Leave processing [2-154](#)
 initial configuration
 See getting started guide and hardware installation guide
 interface command [2-114](#)
 interface configuration mode [1-2, 1-4](#)
 interface port-channel command [2-109](#)
 interface range command [2-111](#)
 interface-range macros [2-73](#)
 interfaces
 assigning Ethernet interface to channel group [2-36](#)
 configuring [2-100](#)
 configuring multiple [2-111](#)
 creating port-channel logical [2-109](#)
 debug messages, display [B-14](#)
 disabling [2-505](#)
 displaying the MAC address table [2-426](#)
 restarting [2-505](#)
 interface speed, configuring [2-560](#)
 internal registers, displaying [2-332, 2-342](#)
 Internet Group Management Protocol
 See IGMP
 invalid GBIC
 error detection for [2-102](#)
 error recovery timer [2-104](#)
 ip address command [2-119](#)
 IP addresses, setting [2-119](#)
 IP address matching [2-199](#)
 ip arp inspection filter vlan command [2-121](#)
 ip arp inspection limit command [2-123](#)
 ip arp inspection log-buffer command [2-125](#)
 ip arp inspection trust command [2-127](#)
 ip arp inspection validate command [2-129](#)
 ip arp inspection vlan command [2-131](#)
 ip arp inspection vlan logging command [2-133](#)
 IP DHCP snooping
 See DHCP snooping
 ip dhcp snooping binding command [2-136](#)
 ip dhcp snooping command [2-135](#)
 ip dhcp snooping database command [2-138](#)
 ip dhcp snooping information option allow-untrusted command [2-143](#)
 ip dhcp snooping information option command [2-141](#)
 ip dhcp snooping limit rate command [2-145](#)
 ip dhcp snooping trust command [2-146](#)
 ip dhcp snooping verify command [2-147](#)

ip dhcp snooping vlan command [2-148](#)
 ip igmp filter command [2-149](#)
 ip igmp max-groups command [2-150](#)
 ip igmp profile command [2-152](#)
 ip igmp snooping command [2-154](#)
 ip igmp snooping querier command [2-157](#)
 ip igmp snooping report-suppression command [2-159](#)
 IP multicast addresses [2-247](#)
 IP phones
 auto-QoS configuration [2-21](#)
 trusting packets sent from [2-239](#)
 IP-precedence-to-DSCP map [2-213](#)
 ip source binding command [2-161](#)
 IP source guard
 disabling [2-165](#)
 displaying
 binding entries [2-400](#)
 configuration [2-401](#)
 dynamic binding entries only [2-384](#)
 enabling [2-165](#)
 static IP source bindings [2-161](#)
 ip ssh command [2-163](#)
 IPv6 SDM template [2-292](#)
 ip verify source command [2-165](#)

J

jumbo frames
 See MTU

L

l2protocol-tunnel command [2-167](#)
 l2protocol-tunnel cos command [2-170](#)
 LACP
 See EtherChannel
 lacp port-priority command [2-171](#)
 lacp system-priority command [2-173](#)

Layer 2 mode, enabling [2-578](#)
 Layer 2 protocol ports, displaying [2-407](#)
 Layer 2 protocol-tunnel
 error detection for [2-102](#)
 error recovery timer [2-104](#)
 Layer 2 protocol tunnel counters [2-49](#)
 Layer 2 protocol tunneling error recovery [2-168](#)
 Layer 2 traceroute
 IP addresses [2-619](#)
 MAC addresses [2-616](#)
 Layer 3 mode, enabling [2-578](#)
 line configuration mode [1-3, 1-5](#)
 Link Aggregation Control Protocol
 See EtherChannel
 link flap
 error detection for [2-102](#)
 error recovery timer [2-104](#)
 load_helper (boot loader) command [A-13](#)
 load-distribution methods for EtherChannel [2-269](#)
 logging event power-inline-status command [2-175](#)
 logging file command [2-176](#)
 logical interface [2-109](#)
 loopback error
 detection for [2-102](#)
 recovery timer [2-104](#)
 loop guard, for spanning tree [2-528, 2-532](#)

M

mac access-group command [2-178](#)
 MAC access-groups, displaying [2-414](#)
 MAC access list configuration mode [2-180](#)
 mac access-list extended command [2-180](#)
 MAC access lists [2-78](#)
 MAC addresses
 displaying
 aging time [2-420](#)
 all [2-418](#)
 dynamic [2-424](#)

- MAC addresses (continued)
 - displaying (continued)
 - notification settings [2-428](#)
 - number of addresses in a VLAN [2-422](#)
 - per interface [2-426](#)
 - per VLAN [2-432](#)
 - static [2-430](#)
 - static and dynamic entries [2-416](#)
 - dynamic
 - aging time [2-182](#)
 - deleting [2-51](#)
 - displaying [2-424](#)
 - enabling MAC address notification [2-184](#)
 - matching [2-199](#)
 - persistent stack [2-568](#)
 - static
 - adding and removing [2-186](#)
 - displaying [2-430](#)
 - dropping on an interface [2-187](#)
 - tables [2-418](#)
- MAC address notification, debugging [B-20](#)
- mac address-table aging-time [2-178](#), [2-199](#)
- mac address-table aging-time command [2-182](#)
- mac address-table notification command [2-184](#)
- mac address-table static command [2-186](#)
- mac address-table static drop command [2-187](#)
- macro description command [2-192](#)
- macro global command [2-193](#)
- macro global description command [2-196](#)
- macro name command [2-197](#)
- macros
 - adding a description [2-192](#)
 - adding a global description [2-196](#)
 - applying [2-193](#)
 - creating [2-197](#)
 - displaying [2-459](#)
 - interface range [2-73](#), [2-111](#)
 - specifying parameter values [2-193](#)
 - tracing [2-193](#)
- manual
 - audience [xvii](#)
 - purpose of [xvii](#)
- maps
 - QoS
 - defining [2-213](#)
 - displaying [2-442](#)
 - VLAN
 - creating [2-640](#)
 - defining [2-199](#)
 - displaying [2-496](#)
- match (access-map configuration) command [2-199](#)
- match (class-map configuration) command [2-201](#)
- maximum transmission unit
 - See MTU
- mdix auto command [2-203](#)
- member switches
 - See clusters
- memory (boot loader) command [A-14](#)
- mkdir (boot loader) command [A-16](#)
- mls qos aggregate-policer command [2-207](#)
- mls qos command [2-205](#)
- mls qos cos command [2-209](#)
- mls qos dscp-mutation command [2-211](#)
- mls qos map command [2-213](#)
- mls qos queue-set output buffers command [2-217](#)
- mls qos queue-set output threshold command [2-219](#)
- mls qos srr-queue input bandwidth command [2-223](#)
- mls qos srr-queue input buffers command [2-225](#)
- mls qos-srr-queue input cos-map command [2-227](#)
- mls qos srr-queue input dscp-map command [2-229](#)
- mls qos srr-queue input priority-queue command [2-231](#)
- mls qos srr-queue input threshold command [2-233](#)
- mls qos-srr-queue output cos-map command [2-235](#)
- mls qos srr-queue output dscp-map command [2-237](#)
- mls qos trust command [2-239](#)
- mls qos vlan-based command [2-241](#)
- mode, MVR [2-247](#)
- Mode button, and password recovery [2-296](#)

- modes, commands [1-2](#)
- monitor session command [2-242](#)
- more (boot loader) command [A-17](#)
- MSTP
 - displaying [2-475](#)
 - interoperability [2-57](#)
 - link type [2-530](#)
 - MST region
 - aborting changes [2-536](#)
 - applying changes [2-536](#)
 - configuration name [2-536](#)
 - configuration revision number [2-536](#)
 - current or pending display [2-536](#)
 - displaying [2-475](#)
 - MST configuration mode [2-536](#)
 - VLANs-to-instance mapping [2-536](#)
 - path cost [2-538](#)
 - protocol mode [2-534](#)
 - restart protocol migration process [2-57](#)
 - root port
 - loop guard [2-528](#)
 - preventing from becoming designated [2-528](#)
 - restricting which can be root [2-528](#)
 - root guard [2-528](#)
 - root switch
 - affects of extended system ID [2-526](#)
 - hello-time [2-541, 2-547](#)
 - interval between BPDU messages [2-542](#)
 - interval between hello BPDU messages [2-541, 2-547](#)
 - max-age [2-542](#)
 - maximum hop count before discarding BPDU [2-543](#)
 - port priority for selection of [2-544](#)
 - primary or secondary [2-547](#)
 - switch priority [2-546](#)
 - state changes
 - blocking to forwarding state [2-553](#)
 - enabling BPDU filtering [2-518, 2-551](#)
 - enabling BPDU guard [2-520, 2-551](#)
 - enabling Port Fast [2-551, 2-553](#)
- MSTP (continued)
 - state changes (continued)
 - forward-delay time [2-540](#)
 - length of listening and learning states [2-540](#)
 - rapid transition to forwarding [2-530](#)
 - shutting down Port Fast-enabled ports [2-551](#)
 - state information display [2-474](#)
- MTU
 - configuring size [2-613](#)
 - displaying global setting [2-485](#)
- multicast group address, MVR [2-250](#)
- multicast groups, MVR [2-248](#)
- multicast router learning method [2-154](#)
- multicast router ports, configuring [2-154](#)
- multicast storm control [2-570](#)
- multicast VLAN, MVR [2-247](#)
- multicast VLAN registration
 - See MVR
- multiple hosts on authorized port [2-86](#)
- Multiple Spanning Tree Protocol
 - See MSTP
- MVR
 - and address aliasing [2-248](#)
 - configuring [2-247](#)
 - configuring interfaces [2-250](#)
 - debug messages, display [B-24](#)
 - displaying [2-451](#)
 - displaying interface information [2-453](#)
 - members, displaying [2-455](#)
- mvr (global configuration) command [2-247](#)
- mvr (interface configuration) command [2-250](#)
- mvr vlan group command [2-251](#)

N

- native VLANs [2-606](#)
- native VLAN tagging [2-645](#)
- Network Assistant requirements [xviii](#)

- nonegotiate
 - DTP messaging [2-592](#)
 - speed [2-560, 2-561](#)
 - non-IP protocols
 - denying [2-78](#)
 - forwarding [2-259](#)
 - non-IP traffic access lists [2-180](#)
 - non-IP traffic forwarding
 - denying [2-78](#)
 - permitting [2-259](#)
 - normal-range VLANs [2-628, 2-634](#)
 - note, description [xviii](#)
 - no vlan command [2-628, 2-638](#)
-
- P**
- PAgP
 - See EtherChannel
 - pagp learn-method command [2-253](#)
 - pagp port-priority command [2-255](#)
 - password, VTP [2-654, 2-658](#)
 - password-recovery mechanism, enabling and disabling [2-296](#)
 - permit (ARP access-list configuration) command [2-257](#)
 - permit command [2-259](#)
 - per-VLAN spanning-tree plus
 - See STP
 - physical-port learner [2-253](#)
 - PIM-DVMRP, as multicast router learning method [2-154](#)
 - PoE
 - configuring the power management mode [2-271](#)
 - displaying controller register values [2-340](#)
 - displaying power management information [2-467](#)
 - logging of status [2-175](#)
 - police aggregate command [2-264](#)
 - police command [2-262](#)
 - policed-DSCP map [2-213](#)
 - policy-map command [2-266](#)
 - policy maps
 - applying to an interface [2-298, 2-303](#)
 - creating [2-266](#)
 - displaying [2-462](#)
 - hierarchical [2-267](#)
 - policers
 - displaying [2-435](#)
 - for a single class [2-262](#)
 - for multiple classes [2-207, 2-264](#)
 - policed-DSCP map [2-213](#)
 - traffic classification
 - defining the class [2-41](#)
 - defining trust states [2-621](#)
 - setting DSCP or IP precedence values [2-301](#)
 - Port Aggregation Protocol
 - See EtherChannel
 - port-based authentication
 - 802.1x AAA accounting methods [2-1](#)
 - AAA method list [2-3](#)
 - debug messages, display [B-6](#)
 - enabling 802.1x
 - globally [2-81](#)
 - per interface [2-92](#)
 - guest VLAN [2-84](#)
 - host modes [2-86](#)
 - initialize an interface [2-88](#)
 - manual control of authorization state [2-92](#)
 - multiple hosts on authorized port [2-86](#)
 - periodic re-authentication
 - enabling [2-96](#)
 - time between attempts [2-98](#)
 - quiet period between failed authentication exchanges [2-98](#)
 - re-authenticating 802.1x-enabled ports [2-94](#)
 - resetting configurable 802.1x parameters [2-83](#)
 - switch-to-authentication server retransmission time [2-98](#)
 - switch-to-client frame-retransmission number [2-89 to 2-90](#)
 - switch-to-client retransmission time [2-98](#)

port-channel load-balance command [2-269](#)

Port Fast, for spanning tree [2-553](#)

port ranges, defining [2-73](#)

ports, debugging [B-72](#)

ports, protected [2-604](#)

port security

- aging [2-598](#)
- debug messages, display [B-74](#)
- enabling [2-594](#)
- violation error recovery [2-104](#)

port trust states for QoS [2-239](#)

port types, MVR [2-250](#)

power information, displaying [2-352](#)

power inline command [2-271](#)

Power over Ethernet

- See PoE

priority-queue command [2-274](#)

priority value, stack member [2-482, 2-573](#)

private-vlan command [2-276](#)

private-vlan mapping command [2-279](#)

private VLANs

- association [2-602](#)
- configuring [2-276](#)
- configuring ports [2-590](#)
- displaying [2-491](#)
- host ports [2-590](#)
- mapping

 - configuring [2-602](#)
 - displaying [2-368](#)

- promiscuous ports [2-590](#)

privileged EXEC mode [1-2, 1-3](#)

promiscuous ports, private VLANs [2-590](#)

protected ports, displaying [2-373](#)

pruning

- VLANs [2-606](#)
- VTP

 - displaying interface information [2-368](#)
 - enabling [2-654, 2-658](#)

pruning-eligible VLAN list [2-608](#)

PVST+

- See STP

Q

QoS

auto-QoS

- configuring [2-21](#)
- debug messages, display [1-6, B-2](#)
- displaying [2-313](#)

class maps

- creating [2-43](#)
- defining the match criteria [2-201](#)
- displaying [2-322](#)

defining the CoS value for an incoming packet [2-209](#)

displaying configuration information [2-313, 2-434](#)

DSCP trusted ports

- applying DSCP-to-DSCP-mutation map to [2-211](#)
- defining DSCP-to-DSCP-mutation map [2-213](#)

egress queues

- allocating buffers [2-217](#)
- defining the CoS output queue threshold map [2-235](#)
- defining the DSCP output queue threshold map [2-237](#)
- displaying buffer allocations [2-438](#)
- displaying CoS output queue threshold map [2-442](#)
- displaying DSCP output queue threshold map [2-442](#)
- displaying queueing strategy [2-438](#)
- displaying queue-set settings [2-445, 2-447](#)
- enabling bandwidth shaping and scheduling [2-564](#)
- enabling bandwidth sharing and scheduling [2-566](#)
- limiting the maximum output on a port [2-562](#)
- mapping a port to a queue-set [2-281](#)
- mapping CoS values to a queue and threshold [2-235](#)
- mapping DSCP values to a queue and threshold [2-237](#)
- setting maximum and reserved memory allocations [2-219](#)
- setting WTD thresholds [2-219](#)

enabling [2-205](#)

QoS (continued)

ingress queues

- allocating buffers [2-225](#)
- assigning SRR scheduling weights [2-223](#)
- defining the CoS input queue threshold map [2-227](#)
- defining the DSCP input queue threshold map [2-229](#)
- displaying buffer allocations [2-438](#)
- displaying CoS input queue threshold map [2-442](#)
- displaying DSCP input queue threshold map [2-442](#)
- displaying queueing strategy [2-438](#)
- displaying settings for [2-436](#)
- enabling the priority queue [2-231](#)
- mapping CoS values to a queue and threshold [2-227](#)
- mapping DSCP values to a queue and threshold [2-229](#)
- setting WTD thresholds [2-233](#)

maps

- defining [2-213](#), [2-227](#), [2-229](#), [2-235](#), [2-237](#)
- displaying [2-442](#)

policy maps

- applying an aggregate policer [2-264](#)
- applying to an interface [2-298](#), [2-303](#)
- creating [2-266](#)
- defining policers [2-207](#), [2-262](#)
- displaying policers [2-435](#)
- displaying policy maps [2-462](#)
- hierarchical [2-267](#)
- policed-DSCP map [2-213](#)
- setting DSCP or IP precedence values [2-301](#)
- traffic classifications [2-41](#)
- trust states [2-621](#)

port trust states [2-239](#)queues, enabling the expedite [2-274](#)

statistics

- in-profile and out-of-profile packets [2-438](#)
- packets enqueued or dropped [2-438](#)
- sent and received CoS values [2-438](#)
- sent and received DSCP values [2-438](#)

trusted boundary for IP phones [2-239](#)VLAN-based [2-241](#)

quality of service

See QoS

querytime, MVR [2-247](#)queue-set command [2-281](#)

R

rapid per-VLAN spanning-tree plus

See STP

rapid PVST+

See STP

rcommand command [2-282](#)re-authenticating 802.1x-enabled ports [2-94](#)

re-authentication

periodic [2-96](#)time between attempts [2-98](#)receiver ports, MVR [2-250](#)receiving flow-control packets [2-107](#)

recovery mechanism

causes [2-104](#)display [2-319](#), [2-355](#), [2-359](#)timer interval [2-105](#)redundancy for cluster switches [2-70](#)reload command [2-284](#)remote command [2-286](#)remote-span command [2-287](#)

Remote Switched Port Analyzer

See RSPAN

rename (boot loader) command [A-18](#)renew ip dhcp snooping database command [2-289](#)

requirements

cluster [xix](#)device manager [xviii](#)Network Assistant [xviii](#)reset (boot loader) command [A-19](#)reset command [2-643](#)resource templates, displaying [2-470](#)rmdir (boot loader) command [A-20](#)rmon collection stats command [2-291](#)

root guard, for spanning tree [2-528](#)

routed ports

IP addresses on [2-120](#)

number supported [2-120](#)

RSPAN

configuring [2-242](#)

displaying [2-448](#)

filter RSPAN traffic [2-242](#)

remote-span command [2-287](#)

sessions

add interfaces to [2-242](#)

displaying [2-448](#)

start new [2-242](#)

S

SDM mismatch mode [2-293, 2-483](#)

sdm prefer command [2-292](#)

SDM templates

allowed resources [2-293](#)

and stacking [2-293](#)

displaying [2-470](#)

dual IPv4 and IPv6 [2-292](#)

secure ports, limitations [2-595](#)

sending flow-control packets [2-107](#)

service password-recovery command [2-296](#)

service-policy command [2-298](#)

session command [2-300](#)

set (boot loader) command [A-21](#)

set command [2-301](#)

setup command [2-303](#)

setup express command [2-306](#)

show access-lists command [2-308](#)

show archive status command [2-311](#)

show arp access-list command [2-312](#)

show auto qos command [2-313](#)

show boot command [2-317](#)

show changes command [2-643](#)

show class-map command [2-322](#)

show cluster candidates command [2-325](#)

show cluster command [2-323](#)

show cluster members command [2-327](#)

show controllers cpu-interface command [2-330](#)

show controllers ethernet-controller command [2-332](#)

show controllers power inline command [2-340](#)

show controllers team command [2-342](#)

show controllers utilization command [2-344](#)

show controller utilization command [2-344](#)

show current command [2-643](#)

show dot1q-tunnel command [2-346](#)

show dot1x command [2-347](#)

show dtp [2-350](#)

show env command [2-352](#)

show errdisable detect command [2-355](#)

show errdisable flap-values command [2-357](#)

show errdisable recovery command [2-359](#)

show etherchannel command [2-361](#)

show flowcontrol command [2-364](#)

show idprom command [2-366](#)

show interfaces command [2-368](#)

show interfaces counters command [2-377](#)

show ip arp inspection command [2-380](#)

show ipc command [2-403](#)

show ip dhcp snooping binding command [2-384](#)

show ip dhcp snooping command [2-383](#)

show ip dhcp snooping database command [2-386](#)

show ip igmp profile command [2-388](#)

show ip igmp snooping command [2-390](#)

show ip igmp snooping command querier detail [2-392, 2-398](#)

show ip igmp snooping groups command [2-395](#)

show ip igmp snooping mrouter command [2-397](#)

show ip igmp snooping querier detail command [2-392, 2-398](#)

show ip source binding command [2-400](#)

show ip verify source command [2-401](#)

show l2protocol-tunnel command [2-407](#)

show lacp command [2-410](#)

- show mac access-group command [2-414](#)
- show mac address-table address command [2-418](#)
- show mac address-table aging time command [2-420](#)
- show mac address-table command [2-416](#)
- show mac address-table count command [2-422](#)
- show mac address-table dynamic command [2-424](#)
- show mac address-table interface command [2-426](#)
- show mac address-table notification command [2-428](#)
- show mac address-table static command [2-430](#)
- show mac address-table vlan command [2-432](#)
- show mls qos aggregate-policer command [2-435](#)
- show mls qos command [2-434](#)
- show mls qos input-queue command [2-436](#)
- show mls qos interface command [2-438](#)
- show mls qos maps command [2-442](#)
- show mls qos queue-set command [2-445](#)
- show mls qos vlan command [2-447](#)
- show monitor command [2-448](#)
- show mvr command [2-451](#)
- show mvr interface command [2-453](#)
- show mvr members command [2-455](#)
- show pagp command [2-457](#)
- show parser macro command [2-459](#)
- show platform acl command [C-2](#)
- show platform configuration command [C-3](#)
- show platform etherchannel command [C-4](#)
- show platform forward command [C-5](#)
- show platform frontend-controller command [C-7](#)
- show platform igmp snooping command [C-8](#)
- show platform ipc trace command [C-13](#)
- show platform ip multicast command [C-10](#)
- show platform ip unicast command [C-11](#)
- show platform ipv6 unicast command [C-14](#)
- show platform layer4op command [C-16](#)
- show platform mac-address-table command [C-17](#)
- show platform messaging command [C-18](#)
- show platform monitor command [C-19](#)
- show platform mvr table command [C-20](#)
- show platform pm command [C-21](#)
- show platform port-asic command [C-22](#)
- show platform port-security command [C-27](#)
- show platform qos command [C-28](#)
- show platform resource-manager command [C-29](#)
- show platform snmp counters command [C-31](#)
- show platform spanning-tree command [C-32](#)
- show platform stack-manager command [C-34](#)
- show platform stp-instance command [C-33](#)
- show platform tb command [C-36](#)
- show platform team command [C-38](#)
- show platform vlan command [C-41](#)
- show policy-map command [2-462](#)
- show port security command [2-464](#)
- show power inline command [2-467](#)
- show proposed command [2-643](#)
- show sdm prefer command [2-470](#)
- show setup express command [2-473](#)
- show spanning-tree command [2-474](#)
- show storm-control command [2-480](#)
- show switch command [2-482](#)
- show system mtu command [2-485](#)
- show trust command [2-621](#)
- show udd command [2-486](#)
- show version command [2-489](#)
- show vlan access-map command [2-496](#)
- show vlan command [2-491](#)
- show vlan command, fields [2-493](#)
- show vlan filter command [2-497](#)
- show vmps command [2-498](#)
- show vtp command [2-501](#)
- shutdown command [2-505](#)
- shutdown threshold, Layer 2 protocol tunneling [2-167](#)
- shutdown vlan command [2-506](#)
- Smartports macros
 - See macros
- SNMP host, specifying [2-511](#)
- SNMP informs, enabling the sending of [2-507](#)
- snmp-server enable traps command [2-507](#)
- snmp-server host command [2-511](#)

- snmp trap mac-notification command [2-515](#)
- SNMP traps
 - enabling MAC address notification trap [2-515](#)
 - enabling the MAC address notification feature [2-184](#)
 - enabling the sending of [2-507](#)
- SoftPhone
 - See Cisco SoftPhone
- software images
 - copying [2-7](#)
 - deleting [2-75](#)
 - downloading [2-10](#)
 - upgrading [2-7, 2-10](#)
 - uploading [2-17](#)
- software version, displaying [2-489](#)
- source ports, MVR [2-250](#)
- SPAN
 - configuring [2-242](#)
 - debug messages, display [B-22](#)
 - displaying [2-448](#)
 - filter SPAN traffic [2-242](#)
 - sessions
 - add interfaces to [2-242](#)
 - displaying [2-448](#)
 - start new [2-242](#)
- spanning-tree backbonefast command [2-517](#)
- spanning-tree bpdudfilter command [2-518](#)
- spanning-tree bpduguard command [2-520](#)
- spanning-tree cost command [2-522](#)
- spanning-tree etherchannel command [2-524](#)
- spanning-tree extend system-id command [2-526](#)
- spanning-tree guard command [2-528](#)
- spanning-tree link-type command [2-530](#)
- spanning-tree loopguard default command [2-532](#)
- spanning-tree mode command [2-534](#)
- spanning-tree mst configuration command [2-536](#)
- spanning-tree mst cost command [2-538](#)
- spanning-tree mst forward-time command [2-540](#)
- spanning-tree mst hello-time command [2-541](#)
- spanning-tree mst max-age command [2-542](#)
- spanning-tree mst max-hops command [2-543](#)
- spanning-tree mst port-priority command [2-544](#)
- spanning-tree mst priority command [2-546](#)
- spanning-tree mst root command [2-547](#)
- spanning-tree portfast (global configuration) command [2-551](#)
- spanning-tree portfast (interface configuration) command [2-553](#)
- spanning-tree port-priority command [2-549](#)
- Spanning Tree Protocol
 - See STP
- spanning-tree uplinkfast command [2-555](#)
- spanning-tree vlan command [2-557](#)
- speed command [2-560](#)
- srr-queue bandwidth limit command [2-562](#)
- srr-queue bandwidth shape command [2-564](#)
- srr-queue bandwidth share command [2-566](#)
- SSH, configuring version [2-163](#)
- stack-mac persistent timer command [2-568](#)
- stack member
 - access [2-300](#)
 - number [2-482, 2-576](#)
 - priority value [2-573](#)
 - provisioning [2-574](#)
 - reloading [2-284](#)
- stacks, switch
 - MAC address [2-568](#)
 - provisioning a new member [2-574](#)
 - reloading [2-284](#)
 - stack member access [2-300](#)
 - stack member number [2-482, 2-576](#)
 - stack member priority value [2-482, 2-573](#)
- static-access ports, configuring [2-580](#)
- statistics, Ethernet group [2-291](#)
- sticky learning, enabling [2-594](#)
- storm-control command [2-570](#)

STP

- BackboneFast [2-517](#)
- counters, clearing [2-56](#)
- debug messages, display
 - BackboneFast events [B-78](#)
 - MSTP [B-81](#)
 - optimized BPDUs handling [B-80](#)
 - spanning-tree activity [B-76](#)
 - switch shim [B-83](#)
 - transmitted and received BPDUs [B-79](#)
 - UplinkFast [B-85](#)
- detection of indirect link failures [2-517](#)
- enabling protocol tunneling for [2-167](#)
- EtherChannel misconfiguration [2-524](#)
- extended system ID [2-526](#)
- path cost [2-522](#)
- protocol modes [2-534](#)
- root port
 - accelerating choice of new [2-555](#)
 - loop guard [2-528](#)
 - preventing from becoming designated [2-528](#)
 - restricting which can be root [2-528](#)
 - root guard [2-528](#)
 - UplinkFast [2-555](#)
- root switch
 - affects of extended system ID [2-526, 2-558](#)
 - hello-time [2-557](#)
 - interval between BPDU messages [2-557](#)
 - interval between hello BPDU messages [2-557](#)
 - max-age [2-557](#)
 - port priority for selection of [2-549](#)
 - primary or secondary [2-557](#)
 - switch priority [2-557](#)
- state changes
 - blocking to forwarding state [2-553](#)
 - enabling BPDU filtering [2-518, 2-551](#)
 - enabling BPDU guard [2-520, 2-551](#)
 - enabling Port Fast [2-551, 2-553](#)
 - enabling timer to recover from error state [2-104](#)

STP (continued)

- state changes (continued)
 - forward-delay time [2-557](#)
 - length of listening and learning states [2-557](#)
 - shutting down Port Fast-enabled ports [2-551](#)
- state information display [2-474](#)
- VLAN options [2-546, 2-557](#)
- SVIs, creating [2-114](#)
- Switched Port Analyzer
 - See SPAN
- switching characteristics
 - modifying [2-578](#)
 - returning to interfaces [2-578](#)
- switchport access command [2-580](#)
- switchport backup interface command [2-582](#)
- switchport block command [2-584](#)
- switchport command [2-578](#)
- switchport host command [2-586](#)
- switchport mode command [2-587](#)
- switchport mode private-vlan command [2-590](#)
- switchport nonegotiate command [2-592](#)
- switchport port-security aging command [2-598](#)
- switchport port-security command [2-594](#)
- switchport priority extend command [2-600](#)
- switchport private-vlan command [2-602](#)
- switchport protected command [2-604](#)
- switchports, displaying [2-368](#)
- switchport trunk command [2-606](#)
- switchport voice vlan command [2-609](#)
- switch priority command [2-573](#)
- switch provision command [2-574](#)
- switch renumber command [2-576](#)
- system env temperature threshold yellow command [2-611](#)
- system message logging [2-175](#)
- system message logging, save message to flash [2-176](#)
- system mtu command [2-613](#)
- system resource templates [2-292](#)

T

tar files, creating, listing, and extracting [2-14](#)

TDR, running [2-615](#)

Telnet, using to communicate to cluster switches [2-282](#)

temperature information, displaying [2-352](#)

templates, system resources [2-292](#)

test cable-diagnostics tdr command [2-615](#)

traceroute mac command [2-616](#)

traceroute mac ip command [2-619](#)

trunking, VLAN mode [2-587](#)

trunk mode [2-587](#)

trunk ports [2-587](#)

trunks, to non-DTP device [2-588](#)

trusted boundary for QoS [2-239](#)

trusted port states for QoS [2-239](#)

tunnel ports, Layer 2 protocol, displaying [2-407](#)

type (boot loader) command [A-24](#)

U

UDLD

aggressive mode [2-623, 2-625](#)

debug messages, display [B-94](#)

enable globally [2-623](#)

enable per interface [2-625](#)

error recovery timer [2-104](#)

message timer [2-623](#)

normal mode [2-623, 2-625](#)

reset a shutdown interface [2-627](#)

status [2-486](#)

udld command [2-623](#)

udld port command [2-625](#)

udld reset command [2-627](#)

unicast storm control [2-570](#)

UniDirectional Link Detection

See UDLD

unknown multicast traffic, preventing [2-584](#)

unknown unicast traffic, preventing [2-584](#)

unset (boot loader) command [A-25](#)

upgrading

- software images [2-7, 2-10](#)
- monitoring status of [2-311](#)

upgrading information

- See release notes

UplinkFast, for STP [2-555](#)

user EXEC mode [1-2, 1-3](#)

V

version (boot loader) command [A-27](#)

version mismatch mode [2-483](#)

vlan (global configuration) command [2-628](#)

vlan (VLAN configuration) command [2-634](#)

vlan access-map command [2-640](#)

VLAN access map configuration mode [2-640](#)

VLAN access maps

- actions [2-5](#)
- displaying [2-496](#)

VLAN-based QoS [2-241](#)

VLAN configuration

- rules [2-631, 2-636](#)
- saving [2-628, 2-638](#)

VLAN configuration mode

- commands
 - VLAN [2-634](#)
 - VTP [2-658](#)
- description [1-5](#)
- entering [2-642](#)
- summary [1-3](#)

vlan database command [2-642](#)

vlan dot1q tag native command [2-645](#)

vlan filter command [2-647](#)

VLAN filters, displaying [2-497](#)

VLAN ID range [2-628, 2-634](#)

- VLAN maps
 - applying [2-647](#)
 - creating [2-640](#)
 - defining [2-199](#)
 - displaying [2-496](#)
- VLAN Query Protocol
 - See VQP
- VLANs
 - adding [2-628](#)
 - configuring [2-628, 2-634](#)
 - debug messages, display
 - ISL [B-90](#)
 - VLAN IOS file system error tests [B-88](#)
 - VLAN manager activity [B-86](#)
 - VTP [B-92](#)
 - displaying configurations [2-491](#)
 - extended-range [2-628](#)
 - MAC addresses
 - displaying [2-432](#)
 - number of [2-422](#)
 - media types [2-631, 2-636](#)
 - normal-range [2-628, 2-634](#)
 - private [2-590](#)
 - configuring [2-276](#)
 - displaying [2-491](#)
 - See also private VLANs
 - restarting [2-506](#)
 - saving the configuration [2-628](#)
 - shutting down [2-506](#)
 - SNMP traps for VTP [2-509, 2-512](#)
 - suspending [2-506](#)
 - variables [2-634](#)
- VLAN Trunking Protocol
 - See VTP
- VM mode [2-483](#)
- VMPS
 - configuring servers [2-652](#)
 - displaying [2-498](#)
 - error recovery timer [2-105](#)
 - reconfirming dynamic VLAN assignments [2-649](#)
 - vmmps reconfirm (global configuration) command [2-650](#)
 - vmmps reconfirm (privileged EXEC) command [2-649](#)
 - vmmps retry command [2-651](#)
 - vmmps server command [2-652](#)
 - voice VLAN
 - configuring [2-609](#)
 - setting port priority [2-600](#)
- VQP
 - and dynamic-access ports [2-581](#)
 - clearing client statistics [2-58](#)
 - displaying information [2-498](#)
 - per-server retry count [2-651](#)
 - reconfirmation interval [2-650](#)
 - reconfirming dynamic VLAN assignments [2-649](#)
- VTP
 - changing characteristics [2-654](#)
 - clearing pruning counters [2-59](#)
 - configuring
 - domain name [2-654, 2-658](#)
 - file name [2-654](#)
 - mode [2-654, 2-658](#)
 - password [2-654, 2-658](#)
 - counters display fields [2-502](#)
 - displaying information [2-501](#)
 - enabling
 - pruning [2-654, 2-658](#)
 - tunneling for [2-167](#)
 - Version 2 [2-654, 2-658](#)
 - mode [2-654, 2-658](#)
 - pruning [2-654, 2-658](#)

VTP (continued)

- saving the configuration [2-628, 2-638](#)
- statistics [2-501](#)
- status [2-501](#)
- status display fields [2-503](#)
- vtp (global configuration) command [2-654](#)
- vtp (VLAN configuration) command [2-658](#)

X

- XENPAK module serial EEPROM information [2-336, 2-366](#)