



## INDEX

---

### A

aaa accounting dot1x command [2-1](#)  
aaa authentication dot1x command [2-3](#)  
aaa authorization network command [2-5](#)  
AAA methods [2-3](#)  
abort command [2-791](#)  
access control entries  
    See ACEs  
access control lists  
    See ACLs  
access groups  
    IP [2-154](#)  
    MAC, displaying [2-556](#)  
access list, IPv6 [2-219](#)  
access map configuration mode [2-277](#)  
access mode [2-733](#)  
access ports [2-733](#)  
ACEs [2-95, 2-349](#)  
ACLs  
    deny [2-93](#)  
    displaying [2-407](#)  
    for non-IP protocols [2-257](#)  
    IP [2-154](#)  
    matching [2-277](#)  
    on Layer 2 interfaces [2-154](#)  
    permit [2-347](#)  
action command [2-7](#)  
address aliasing [2-328](#)  
aggregate-port learner [2-335](#)  
allowed VLANs [2-753](#)  
apply command [2-791](#)  
archive copy-sw command [2-9](#)

archive download-sw command [2-12](#)  
archive tar command [2-16](#)  
archive upload-sw command [2-19](#)  
arp access-list command [2-21](#)  
audience [xix](#)  
authentication failed VLAN  
    See dot1x auth-fail vlan  
auth-fail max-attempts  
    See dot1x auth-fail max-attempts  
auth-fail vlan  
    See dot1x auth-fail vlan  
authorization state of controlled port [2-126](#)  
autonegotiation of duplex mode [2-134](#)  
auto qos voip command [2-23](#)

---

### B

BackboneFast, for STP [2-659](#)  
backup interfaces  
    configuring [2-728](#)  
    displaying [2-482](#)  
boot (boot loader) command [A-2](#)  
boot auto-copy-sw command [2-28](#)  
boot auto-download-sw command [2-29](#)  
boot boothlpr command [2-31](#)  
boot config-file command [2-32](#)  
boot enable-break command [2-33](#)  
boot helper command [2-34](#)  
boot helper-config file command [2-35](#)

## booting

- Cisco IOS image [2-38](#)
- displaying environment variables [2-417](#)
- interrupting [2-33](#)
- manually [2-36](#)

## boot loader

- accessing [A-1](#)
- booting
  - Cisco IOS image [A-2](#)
  - helper image [2-34](#)

## directories

- creating [A-15](#)
- displaying a list of [A-7](#)
- removing [A-19](#)

## displaying

- available commands [A-12](#)
- memory heap utilization [A-13](#)
- version [A-26](#)

## environment variables

- described [A-20](#)
- displaying settings [A-20](#)
- location of [A-21](#)
- setting [A-20](#)
- unsetting [A-24](#)

## files

- copying [A-5](#)
- deleting [A-6](#)
- displaying a list of [A-7](#)
- displaying the contents of [A-4, A-16, A-23](#)
- renaming [A-17](#)

## file system

- formatting [A-10](#)
- initializing flash [A-9](#)
- running a consistency check [A-11](#)

prompt [A-1](#)

- resetting the system [A-18](#)

boot manual command [2-36](#)boot private-config-file command [2-37](#)boot system command [2-38](#)BPDU filtering, for spanning tree [2-660, 2-695](#)BPDU guard, for spanning tree [2-662, 2-695](#)broadcast storm control [2-716](#)**C**

## candidate switches

See clusters

cat (boot loader) command [A-4](#)caution, description **xx**CDP, enabling protocol tunneling for [2-237](#)channel-group command [2-40](#)channel-protocol command [2-44](#)

## Cisco Network Assistant

See Network Assistant

## Cisco SoftPhone

- auto-QoS configuration [2-23](#)
- trusting packets sent from [2-318](#)

class command [2-45](#)class-map command [2-47](#)

## class maps

- creating [2-47](#)
- defining the match criteria [2-279](#)
- displaying [2-422](#)

## class of service

See CoS

clear dot1x command [2-49](#)clear eap command [2-50](#)clear errdisable interface [2-51](#)clear ip arp inspection log command [2-52](#)clear ip arp inspection statistics command [2-53](#)clear ipc command [2-56](#)clear ip dhcp snooping database command [2-54](#)clear l2protocol-tunnel counters command [2-57](#)clear lacp command [2-58](#)clear logging command [2-59](#)clear mac address-table command [2-60, 2-61](#)clear pagp command [2-62](#)clear port-security command [2-63](#)

- clear spanning-tree counters command [2-65](#)
  - clear spanning-tree detected-protocols command [2-66](#)
  - clear vmps statistics command [2-67](#)
  - clear vtp counters command [2-68](#)
  - cluster commander-address command [2-69](#)
  - cluster discovery hop-count command [2-71](#)
  - cluster enable command [2-72](#)
  - cluster holdtime command [2-74](#)
  - cluster member command [2-75](#)
  - cluster outside-interface command [2-77](#)
  - cluster requirements [xx](#)
  - cluster run command [2-78](#)
  - clusters
    - adding candidates [2-75](#)
    - binding to HSRP group [2-79](#)
    - building manually [2-75](#)
    - communicating with
      - devices outside the cluster [2-77](#)
      - members by using Telnet [2-383](#)
    - debug messages, display [B-5](#)
    - displaying
      - candidate switches [2-425](#)
      - debug messages [B-5](#)
      - member switches [2-427](#)
      - status [2-423](#)
    - hop-count limit for extended discovery [2-71](#)
    - HSRP standby groups [2-79](#)
    - redundancy [2-79](#)
    - SNMP trap [2-649](#)
  - cluster standby-group command [2-79](#)
  - cluster timer command [2-81](#)
  - command modes defined [1-2](#)
  - command switch
    - See clusters
  - configuration, initial
    - See getting started guide and hardware installation guide
  - configuration files
    - password recovery disable considerations [A-1](#)
    - specifying the name [2-32, 2-37](#)
  - configuring multiple interfaces [2-149](#)
  - config-vlan mode
    - commands [2-778](#)
    - description [1-4](#)
    - entering [2-777](#)
    - summary [1-3](#)
  - conventions
    - command [xix](#)
    - for examples [xx](#)
    - publication [xix](#)
    - text [xix](#)
  - copy (boot loader) command [A-5](#)
  - CoS
    - assigning default value to incoming packets [2-288](#)
    - assigning to Layer 2 protocol packets [2-240](#)
    - overriding the incoming value [2-288](#)
  - CoS-to-DSCP map [2-292](#)
  - CPU ASIC statistics, displaying [2-429](#)
  - crashinfo files [2-140](#)
- 
- ## D
- debug auto qos command [B-2](#)
  - debug backup command [B-4](#)
  - debug cluster command [B-5](#)
  - debug dot1x command [B-7](#)
  - debug dtp command [B-8](#)
  - debug eap command [B-9](#)
  - debug etherchannel command [B-10](#)
  - debug fastethernet command [B-11](#)
  - debug ilpower command [B-12](#)
  - debug interface command [B-15](#)
  - debug ip dhcp snooping command [B-13](#)
  - debug ip igmp filter command [B-16](#)
  - debug ip igmp max-groups command [B-17](#)
  - debug ip igmp snooping command [B-18](#)

- debug ip verify source packet command [B-14](#)
- debug lacp command [B-19](#)
- debug mac-notification command [B-20](#)
- debug matm command [B-21](#)
- debug matm move update command [B-22](#)
- debug monitor command [B-23](#)
- debug mvrdbg command [B-24](#)
- debug nvram command [B-25](#)
- debug pagp command [B-26](#)
- debug platform acl command [B-27](#)
- debug platform backup interface command [B-29](#)
- debug platform cli-redirect main command [B-30](#)
- debug platform configuration command [B-31](#), [B-39](#)
- debug platform cpu-queues command [B-32](#)
- debug platform device-manager command [B-34](#)
- debug platform dot1x command [B-35](#)
- debug platform etherchannel command [B-36](#)
- debug platform fallback-bridging command [B-37](#)
- debug platform forw-tcam command [B-38](#)
- debug platform ip arp inspection command [B-40](#)
- debug platform ipc command [B-49](#)
- debug platform ip dhcp command [B-41](#)
- debug platform ip igmp snooping command [B-42](#)
- debug platform ip multicast command [B-44](#)
- debug platform ip unicast command [B-46](#)
- debug platform ip wccp command [B-48](#)
- debug platform led command [B-50](#)
- debug platform matm command [B-51](#)
- debug platform messaging application command [B-52](#)
- debug platform phy command [B-53](#)
- debug platform pm command [B-55](#)
- debug platform port-asic command [B-57](#)
- debug platform port-security command [B-58](#)
- debug platform qos-acl-tcam command [B-59](#)
- debug platform remote-commands command [B-60](#)
- debug platform resource-manager command [B-61](#)
- debug platform snmp command [B-62](#)
- debug platform span command [B-63](#)
- debug platform stack-manager command [B-64](#)
- debug platform supervisor-asic command [B-65](#)
- debug platform sw-bridge command [B-66](#)
- debug platform team command [B-67](#)
- debug platform udd command [B-70](#)
- debug platform vlan command [B-71](#)
- debug pm command [B-72](#)
- debug port-security command [B-74](#)
- debug qos-manager command [B-75](#)
- debug spanning-tree backbonefast command [B-78](#)
- debug spanning-tree bpdu command [B-79](#)
- debug spanning-tree bpdu-opt command [B-80](#)
- debug spanning-tree command [B-76](#)
- debug spanning-tree mstp command [B-81](#)
- debug spanning-tree switch command [B-83](#)
- debug spanning-tree uplinkfast command [B-85](#)
- debug sw-vlan command [B-86](#)
- debug sw-vlan ifs command [B-88](#)
- debug sw-vlan notification command [B-89](#)
- debug sw-vlan vtp command [B-91](#)
- debug udd command [B-93](#)
- debug vqpc command [B-95](#)
- define interface-range command [2-82](#)
- delete (boot loader) command [A-6](#)
- delete command [2-84](#)
- deny (ARP access-list configuration) command [2-85](#)
- deny (IPv6) command [2-87](#)
- deny command [2-93](#)
- detect mechanism, causes [2-135](#)
- device manager requirements [xx](#)
- DHCP snooping
  - accepting untrusted packets from edge switch [2-182](#)
  - enabling
    - on a VLAN [2-188](#)
    - option 82 [2-180](#), [2-182](#)
    - trust on an interface [2-186](#)
  - error recovery timer [2-137](#)
  - rate limiting [2-185](#)

- DHCP snooping binding database
  - binding file, configuring [2-178](#)
  - bindings
    - adding [2-176](#)
    - deleting [2-176](#)
    - displaying [2-501](#)
  - clearing database agent statistics [2-54](#)
  - database agent, configuring [2-178](#)
  - displaying
    - binding entries [2-501](#)
    - database agent status [2-503, 2-505](#)
  - renewing [2-391](#)
- dir (boot loader) command [A-7](#)
- directories, deleting [2-84](#)
- documentation, related [xx](#)
- document conventions [xix](#)
- domain name, VTP [2-802, 2-806](#)
- dot1x auth-fail max-attempts [2-105](#)
- dot1x auth-fail vlan [2-107](#)
- dot1x command [2-103](#)
- dot1x control-direction command [2-109](#)
- dot1x critical global configuration command [2-111](#)
- dot1x critical interface configuration command [2-113](#)
- dot1x default command [2-115](#)
- dot1x fallback command [2-116](#)
- dot1x guest-vlan command [2-117](#)
- dot1x host-mode command [2-119](#)
- dot1x initialize command [2-120](#)
- dot1x mac-auth-bypass command [2-121](#)
- dot1x max-reauth-req command [2-123](#)
- dot1x max-req command [2-124](#)
- dot1x pae command [2-125](#)
- dot1x port-control command [2-126](#)
- dot1x re-authenticate command [2-128](#)
- dot1x reauthentication command [2-129](#)
- dot1x timeout command [2-130](#)
- dropping packets, with ACL matches [2-7](#)
- drop threshold, Layer 2 protocol tunneling [2-237](#)
- DSCP-to-CoS map [2-292](#)
- DSCP-to-DSCP-mutation map [2-292](#)
- DTP [2-734](#)
- DTP flap
  - error detection for [2-135](#)
  - error recovery timer [2-137](#)
- DTP negotiation [2-738](#)
- dual IPv4 and IPv6 templates [2-341](#)
- duplex command [2-133](#)
- dynamic-access ports
  - configuring [2-726](#)
  - restrictions [2-727](#)
- dynamic ARP inspection
  - ARP ACLs
    - apply to a VLAN [2-162](#)
    - define [2-21](#)
    - deny packets [2-85](#)
    - display [2-412](#)
    - permit packets [2-339](#)
  - clear
    - log buffer [2-52](#)
    - statistics [2-53](#)
  - display
    - ARP ACLs [2-412](#)
    - configuration and operating state [2-496](#)
    - log buffer [2-496](#)
    - statistics [2-496](#)
    - trust state and rate limit [2-496](#)
  - enable per VLAN [2-172](#)
  - error detection for [2-135](#)
  - error recovery timer [2-137](#)
  - log buffer
    - clear [2-52](#)
    - configure [2-166](#)
    - display [2-496](#)
  - rate-limit incoming ARP packets [2-164](#)
  - statistics
    - clear [2-53](#)
    - display [2-496](#)
  - trusted interface state [2-168](#)

**dynamic ARP inspection (continued)**

type of packet logged [2-173](#)

validation checks [2-170](#)

dynamic auto VLAN membership mode [2-733](#)

dynamic desirable VLAN membership mode [2-733](#)

Dynamic Host Configuration Protocol (DHCP)

See DHCP snooping

Dynamic Trunking Protocol

See DTP

**E**

EAP-request/identity frame

maximum number to send [2-124](#)

response time before retransmitting [2-130](#)

encapsulation methods [2-753](#)

environment variables, displaying [2-417](#)

errdisable detect cause command [2-135](#)

errdisable recovery command [2-137](#)

error conditions, displaying [2-469](#)

error disable detection [2-135](#)

error-disabled interfaces, displaying [2-482](#)

EtherChannel

assigning Ethernet interface to channel group [2-40](#)

creating port-channel logical interface [2-147](#)

debug EtherChannel/PAGP, display [B-10](#)

debug platform-specific events, display [B-36](#)

displaying [2-473](#)

enabling Layer 2 protocol tunneling for

LACP [2-238](#)

PAGP [2-238](#)

UDLD [2-238](#)

interface information, displaying [2-482](#)

**EtherChannel (continued)**

LACP

clearing channel-group information [2-58, 2-59](#)

debug messages, display [B-19](#)

displaying [2-541](#)

modes [2-40](#)

port priority for hot-standby ports [2-241](#)

restricting a protocol [2-44](#)

system priority [2-243](#)

load-distribution methods [2-357](#)

PAGP

aggregate-port learner [2-335](#)

clearing channel-group information [2-62](#)

debug messages, display [B-26](#)

displaying [2-600](#)

error detection for [2-135](#)

error recovery timer [2-137](#)

learn method [2-335](#)

modes [2-40](#)

physical-port learner [2-335](#)

priority of interface for transmitted traffic [2-337](#)

Ethernet controller, internal register display [2-431, 2-438](#)

Ethernet Management port, debugging [B-11](#)

Ethernet statistics, collecting [2-389](#)

examples, conventions for [xx](#)

exception crashinfo command [2-140, 2-145](#)

exit command [2-791](#)

extended discovery of candidate switches [2-71](#)

extended-range VLANs

and allowed VLAN list [2-753](#)

and pruning-eligible list [2-753](#)

configuring [2-777](#)

extended system ID for STP [2-668](#)

**F**

- fallback profile command [2-141](#)
- fallback profiles, displaying [2-476](#)
- fan information, displaying [2-462](#)
- file name, VTP [2-802](#)
- files, deleting [2-84](#)
- flash\_init (boot loader) command [A-9](#)
- Flex Links
  - configuring [2-728](#)
  - displaying [2-482](#)
- flowcontrol command [2-143](#)
- format (boot loader) command [A-10](#)
- forwarding packets, with ACL matches [2-7](#)
- forwarding results, display [C-7](#)
- frame forwarding information, displaying [C-7](#)
- front-end controller counter and status information [C-9](#)
- fsck (boot loader) command [A-11](#)

**G**

- global configuration mode [1-2, 1-4](#)

**H**

- hardware ACL statistics [2-407](#)
- health monitoring diagnostic tests [2-96](#)
- help (boot loader) command [A-12](#)
- hierarchical policy maps [2-355](#)
- hop-count limit for clusters [2-71](#)
- host connection, port configuration [2-732](#)
- host ports, private VLANs [2-736](#)
- Hot Standby Router Protocol
  - See HSRP
- HSRP
  - binding HSRP group to cluster [2-79](#)
  - standby group [2-79](#)

**I**

- IEEE 802.1Q trunk ports and native VLANs [2-793](#)
- IEEE 802.1Q tunnel ports
  - configuring [2-733](#)
  - displaying [2-452](#)
  - limitations [2-734](#)
- IEEE 802.1x
  - and switchport modes [2-734](#)
  - violation error recovery [2-137](#)
  - See also port-based authentication
- IEEE 802.1X Port Based Authentication
  - enabling guest VLAN supplicant [2-142](#)
- IGMP filters
  - applying [2-191](#)
  - debug messages, display [B-16](#)
- IGMP groups, setting maximum [2-193](#)
- IGMP maximum groups, debugging [B-17](#)
- IGMP profiles
  - creating [2-195](#)
  - displaying [2-508](#)
- IGMP snooping
  - adding ports as a static member of a group [2-211](#)
  - displaying [2-509, 2-514, 2-516](#)
  - enabling [2-197](#)
  - enabling the configurable-leave timer [2-199](#)
  - enabling the Immediate-Leave feature [2-208](#)
  - flooding query count [2-205](#)
  - interface topology change notification behavior [2-207](#)
  - multicast table [2-512](#)
  - querier [2-201](#)
  - query solicitation [2-205](#)
  - report suppression [2-203](#)
  - switch topology change notification behavior [2-205](#)
- images
  - See software images

- Immediate-Leave processing
  - IGMP [2-208](#)
  - IPv6 [2-233](#)
  - MVR [2-330](#)
- initial configuration
  - See getting started guide and hardware installation guide
- interface configuration mode [1-2, 1-4](#)
- interface port-channel command [2-147](#)
- interface range command [2-149](#)
- interface-range macros [2-82](#)
- interfaces
  - assigning Ethernet interface to channel group [2-40](#)
  - configuring [2-133](#)
  - configuring multiple [2-149](#)
  - creating port-channel logical [2-147](#)
  - debug messages, display [B-15](#)
  - disabling [2-647](#)
  - displaying the MAC address table [2-568](#)
  - restarting [2-647](#)
- interface speed, configuring [2-706](#)
- interface vlan command [2-152](#)
- internal power supplies
  - See power supplies
- internal registers, displaying [2-431, 2-438, 2-443](#)
- Internet Group Management Protocol
  - See IGMP
- invalid GBIC
  - error detection for [2-135](#)
  - error recovery timer [2-137](#)
- ip access-group command [2-154](#)
- ip address command [2-157](#)
- IP addresses, setting [2-157](#)
- IP address matching [2-277](#)
- ip admission command [2-159](#)
- ip admission name proxy http command [2-160](#)
- ip arp inspection filter vlan command [2-162](#)
- ip arp inspection limit command [2-164](#)
- ip arp inspection log-buffer command [2-166](#)
- ip arp inspection trust command [2-168](#)
- ip arp inspection validate command [2-170](#)
- ip arp inspection vlan command [2-172](#)
- ip arp inspection vlan logging command [2-173](#)
- IP DHCP snooping
  - See DHCP snooping
- ip dhcp snooping binding command [2-176](#)
- ip dhcp snooping command [2-175](#)
- ip dhcp snooping database command [2-178](#)
- ip dhcp snooping information option allow-untrusted command [2-182](#)
- ip dhcp snooping information option command [2-180](#)
- ip dhcp snooping information option format remote-id command [2-184](#)
- ip dhcp snooping limit rate command [2-185](#)
- ip dhcp snooping trust command [2-186](#)
- ip dhcp snooping verify command [2-187](#)
- ip dhcp snooping vlan command [2-188](#)
- ip dhcp snooping vlan information option format-type circuit-id string command [2-189](#)
- ip igmp filter command [2-191](#)
- ip igmp max-groups command [2-193](#)
- ip igmp profile command [2-195](#)
- ip igmp snooping command [2-197](#)
- ip igmp snooping last-member-query-interval command [2-199](#)
- ip igmp snooping querier command [2-201](#)
- ip igmp snooping report-suppression command [2-203](#)
- ip igmp snooping tcn command [2-205](#)
- ip igmp snooping tcn flood command [2-207](#)
- ip igmp snooping vlan immediate-leave command [2-208](#)
- ip igmp snooping vlan mrouter command [2-209](#)
- ip igmp snooping vlan static command [2-211](#)
- IP multicast addresses [2-327](#)
- IP phones
  - auto-QoS configuration [2-23](#)
  - trusting packets sent from [2-318](#)
- IP-precedence-to-DSCP map [2-292](#)
- ip snap forwarding command [2-213](#)
- ip source binding command [2-214](#)



- IP source guard
    - disabling [2-218](#)
    - displaying
      - binding entries [2-518](#)
      - configuration [2-520](#)
      - dynamic binding entries only [2-501](#)
    - enabling [2-218](#)
    - static IP source bindings [2-214](#)
  - ip ssh command [2-216](#)
  - IPv6 access list, deny conditions [2-87](#)
  - ipv6 access-list command [2-219](#)
  - ipv6 mld snooping command [2-221](#)
  - ipv6 mld snooping last-listener-query count command [2-223](#)
  - ipv6 mld snooping last-listener-query-interval command [2-225](#)
  - ipv6 mld snooping listener-message-suppression command [2-227](#)
  - ipv6 mld snooping robustness-variable command [2-229](#)
  - ipv6 mld snooping tcn command [2-231](#)
  - ipv6 mld snooping vlan command [2-233](#)
  - IPv6 SDM template [2-390](#)
  - ipv6 traffic-filter command [2-235](#)
  - ip verify source command [2-218](#)
- 
- J**
- jumbo frames
    - See MTU
- 
- L**
- l2protocol-tunnel command [2-237](#)
  - l2protocol-tunnel cos command [2-240](#)
  - LACP
    - See EtherChannel
  - lacp port-priority command [2-241](#)
  - lacp system-priority command [2-243](#)
  - Layer 2 mode, enabling [2-724](#)
  - Layer 2 protocol ports, displaying [2-538](#)
  - Layer 2 protocol-tunnel
    - error detection for [2-135](#)
    - error recovery timer [2-137](#)
  - Layer 2 protocol tunnel counters [2-57](#)
  - Layer 2 protocol tunneling error recovery [2-238](#)
  - Layer 2 traceroute
    - IP addresses [2-768](#)
    - MAC addresses [2-765](#)
  - Layer 3 mode, enabling [2-724](#)
  - line configuration mode [1-3, 1-5](#)
  - Link Aggregation Control Protocol
    - See EtherChannel
  - link flap
    - error detection for [2-135](#)
    - error recovery timer [2-137](#)
  - link state group command [2-245](#)
  - link state track command [2-247](#)
  - load-distribution methods for EtherChannel [2-357](#)
  - location (global configuration) command [2-248](#)
  - location (interface configuration) command [2-250](#)
  - logging event power-inline-status command [2-252](#)
  - logging file command [2-253](#)
  - logical interface [2-147](#)
  - loopback error
    - detection for [2-135](#)
    - recovery timer [2-137](#)
  - loop guard, for spanning tree [2-670, 2-674](#)
- 
- M**
- mac access-group command [2-255](#)
  - MAC access-groups, displaying [2-556](#)
  - MAC access list configuration mode [2-257](#)
  - mac access-list extended command [2-257](#)
  - MAC access lists [2-93](#)

## MAC addresses

## displaying

aging time [2-562](#)all [2-560](#)dynamic [2-566](#)MAC address-table move updates [2-570](#)notification settings [2-572](#)number of addresses in a VLAN [2-564](#)per interface [2-568](#)per VLAN [2-576](#)static [2-574](#)static and dynamic entries [2-558](#)

## dynamic

aging time [2-259](#)deleting [2-60](#)displaying [2-566](#)enabling MAC address notification [2-262](#)enabling MAC address-table move update [2-260](#)matching [2-277](#)persistent stack [2-714](#)

## static

adding and removing [2-264](#)displaying [2-574](#)dropping on an interface [2-265](#)tables [2-560](#)MAC address notification, debugging [B-20](#)mac address-table aging-time [2-255, 2-277](#)mac address-table aging-time command [2-259](#)mac address-table move update command [2-260](#)mac address-table notification command [2-262](#)mac address-table static command [2-264](#)mac address-table static drop command [2-265](#)

## MAC frames

See MTU

macro apply command [2-267](#)macro description command [2-270](#)macro global command [2-271](#)macro global description command [2-274](#)macro name command [2-275](#)

## macros

adding a description [2-270](#)adding a global description [2-274](#)applying [2-271](#)creating [2-275](#)displaying [2-602](#)interface range [2-82, 2-149](#)specifying parameter values [2-271](#)tracing [2-271](#)

## manual

audience [xix](#)purpose of [xix](#)

## maps

## QoS

defining [2-292](#)displaying [2-586](#)

## VLAN

creating [2-788](#)defining [2-277](#)displaying [2-642](#)match (access-map configuration) command [2-277](#)match (class-map configuration) command [2-279](#)

maximum transmission unit

See MTU

mdix auto command [2-282](#)

member switches

See clusters

memory (boot loader) command [A-13](#)mkdir (boot loader) command [A-15](#)

## MLD snooping

configuring [2-227, 2-229](#)configuring queries [2-223, 2-225](#)configuring topology change notification [2-231](#)displaying [2-528, 2-530, 2-532, 2-534](#)enabling [2-221](#)enabling on a VLAN [2-233](#)mls qos aggregate-policer command [2-286](#)mls qos command [2-284](#)mls qos cos command [2-288](#)

- mls qos dscp-mutation command [2-290](#)
- mls qos map command [2-292](#)
- mls qos queue-set output buffers command [2-296](#)
- mls qos queue-set output threshold command [2-298](#)
- mls qos rewrite ip dscp command [2-300](#)
- mls qos srr-queue input bandwidth command [2-302](#)
- mls qos srr-queue input buffers command [2-304](#)
- mls qos-srr-queue input cos-map command [2-306](#)
- mls qos srr-queue input dscp-map command [2-308](#)
- mls qos srr-queue input priority-queue command [2-310](#)
- mls qos srr-queue input threshold command [2-312](#)
- mls qos-srr-queue output cos-map command [2-314](#)
- mls qos srr-queue output dscp-map command [2-316](#)
- mls qos trust command [2-318](#)
- mls qos vlan-based command [2-320](#)
- mode, MVR [2-327](#)
- Mode button, and password recovery [2-394](#)
- modes, commands [1-2](#)
- monitor session command [2-322](#)
- more (boot loader) command [A-16](#)
- MSTP
  - displaying [2-620, 2-621](#)
  - interoperability [2-66](#)
  - link type [2-672](#)
  - MST region
    - aborting changes [2-678](#)
    - applying changes [2-678](#)
    - configuration name [2-678](#)
    - configuration revision number [2-678](#)
    - current or pending display [2-678](#)
    - displaying [2-620, 2-621](#)
    - MST configuration mode [2-678](#)
    - VLANs-to-instance mapping [2-678](#)
  - path cost [2-680](#)
  - protocol mode [2-676](#)
  - restart protocol migration process [2-66](#)

## MSTP (continued)

- root port
  - loop guard [2-670](#)
  - preventing from becoming designated [2-670](#)
  - restricting which can be root [2-670](#)
  - root guard [2-670](#)
- root switch
  - affects of extended system ID [2-668](#)
  - hello-time [2-683, 2-691](#)
  - interval between BPDU messages [2-684](#)
  - interval between hello BPDU messages [2-683, 2-691](#)
  - max-age [2-684](#)
  - maximum hop count before discarding BPDU [2-685](#)
  - port priority for selection of [2-687](#)
  - primary or secondary [2-691](#)
  - switch priority [2-690](#)
- state changes
  - blocking to forwarding state [2-698](#)
  - enabling BPDU filtering [2-660, 2-695](#)
  - enabling BPDU guard [2-662, 2-695](#)
  - enabling Port Fast [2-695, 2-698](#)
  - forward-delay time [2-682](#)
  - length of listening and learning states [2-682](#)
  - rapid transition to forwarding [2-672](#)
  - shutting down Port Fast-enabled ports [2-695](#)
- state information display [2-619](#)
- MTU
  - configuring size [2-761](#)
  - displaying global setting [2-631](#)
- MAC [2-762](#)
- system jumbo [2-762](#)
- system routing [2-762](#)
- Multicast Listener Discovery
  - See MLD
- multicast group address, MVR [2-330](#)
- multicast groups, MVR [2-328](#)

## Multicast Listener Discovery

See MLD

multicast router learning method [2-209](#)multicast router ports, configuring [2-209](#)multicast router ports, IPv6 [2-233](#)multicast storm control [2-716](#)multicast VLAN, MVR [2-327](#)

multicast VLAN registration

See MVR

multiple hosts on authorized port [2-119](#)

## Multiple Spanning Tree Protocol

See MSTP

## MVR

and address aliasing [2-328](#)configuring [2-327](#)configuring interfaces [2-330](#)debug messages, display [B-24](#)displaying [2-594](#)displaying interface information [2-596](#)members, displaying [2-598](#)mvr (global configuration) command [2-327](#)mvr (interface configuration) command [2-330](#)mvr vlan group command [2-331](#)**N**native VLANs [2-753](#)native VLAN tagging [2-793](#)Network Assistant requirements [xx](#)

nonegotiate

DTP messaging [2-738](#)speed [2-706](#)

non-IP protocols

denying [2-93](#)forwarding [2-347](#)non-IP traffic access lists [2-257](#)

non-IP traffic forwarding

denying [2-93](#)permitting [2-347](#)non-stop forwarding [2-333](#)normal-range VLANs [2-777, 2-782](#)note, description [xx](#)no vlan command [2-777, 2-786](#)nsf command [2-333](#)**O**

online diagnostics

configuring health monitoring diagnostic tests [2-96](#)

displaying

configured boot-up coverage level [2-447](#)current scheduled tasks [2-447](#)event logs [2-447](#)supported test suites [2-447](#)test ID [2-447](#)test results [2-447](#)test statistics [2-447](#)

enabling

scheduling [2-98](#)syslog messages [2-96](#)

global configuration mode

clearing health monitoring diagnostic test schedule [2-96](#)clearing test-based testing schedule [2-98](#)setting health monitoring diagnostic testing [2-96](#)setting test-based testing [2-98](#)setting up health monitoring diagnostic test schedule [2-96](#)setting up test-based testing [2-98](#)removing scheduling [2-98](#)

scheduled switchover

disabling [2-98](#)enabling [2-98](#)setting test interval [2-98](#)specifying health monitoring diagnostic tests [2-96](#)starting testing [2-100](#)

**P**

## PAgP

See EtherChannel

pagp learn-method command [2-335](#)

pagp port-priority command [2-337](#)

password, VTP [2-802, 2-806](#)

password-recovery mechanism, enabling and disabling [2-394](#)

permit (ARP access-list configuration) command [2-339](#)

permit (IPv6) command [2-341](#)

permit (MAC access-list configuration) command [2-347](#)

per-VLAN spanning-tree plus

See STP

physical-port learner [2-335](#)

PID, displaying [2-495](#)

PIM-DVMRP, as multicast router learning method [2-209](#)

## PoE

configuring the power budget [2-362](#)

configuring the power management mode [2-359](#)

displaying controller register values [2-441](#)

displaying power management information [2-610](#)

error detection for [2-135](#)

error recovery timer [2-137](#)

logging of status [2-252](#)

monitoring power [2-364](#)

policing power consumption [2-364](#)

police aggregate command [2-352](#)

police command [2-350](#)

policed-DSCP map [2-292](#)

policy-map command [2-354](#)

## policy maps

applying to an interface [2-396, 2-402](#)

creating [2-354](#)

displaying [2-605](#)

hierarchical [2-355](#)

**policy maps (continued)**

## policers

displaying [2-579](#)

for a single class [2-350](#)

for multiple classes [2-286, 2-352](#)

policed-DSCP map [2-292](#)

## traffic classification

defining the class [2-45](#)

defining trust states [2-770](#)

setting DSCP or IP precedence values [2-400](#)

## Port Aggregation Protocol

See EtherChannel

## port-based authentication

AAA method list [2-3](#)

debug messages, display [B-7](#)

enabling guest VLAN supplicant [2-106, 2-116](#)

enabling IEEE 802.1x

globally [2-103](#)

per interface [2-126](#)

guest VLAN [2-117](#)

host modes [2-119](#)

IEEE 802.1x AAA accounting methods [2-1](#)

initialize an interface [2-120](#)

MAC authentication bypass [2-121](#)

manual control of authorization state [2-126](#)

multiple hosts on authorized port [2-119](#)

PAE as authenticator [2-125](#)

## periodic re-authentication

enabling [2-129](#)

time between attempts [2-130](#)

quiet period between failed authentication exchanges [2-130](#)

re-authenticating IEEE 802.1x-enabled ports [2-128](#)

resetting configurable IEEE 802.1x parameters [2-115](#)

switch-to-authentication server retransmission time [2-130](#)

switch-to-client frame-retransmission number [2-123 to 2-124](#)

switch-to-client retransmission time [2-130](#)

port-channel load-balance command [2-357](#)

Port Fast, for spanning tree [2-698](#)

port ranges, defining [2-82](#)

ports, debugging [B-72](#)

ports, protected [2-751](#)

port security

- aging [2-745](#)
- debug messages, display [B-74](#)
- enabling [2-740](#)
- violation error recovery [2-137](#)

port trust states for QoS [2-318](#)

port types, MVR [2-330](#)

power information, displaying [2-462](#)

power inline command [2-359](#)

power inline consumption command [2-362](#)

power inline police command [2-364](#)

Power over Ethernet

- See PoE

power rps command (user EXEC) [2-367](#)

power supply

- configuring [2-370](#)
- managing [2-370](#)

power supply command [2-370](#)

priority-queue command [2-371](#)

priority value, stack member [2-628, 2-719](#)

private-vlan command [2-373](#)

private-vlan mapping command [2-376](#)

private VLANs

- association [2-749](#)
- configuring [2-373](#)
- configuring ports [2-736](#)
- displaying [2-637](#)
- host ports [2-736](#)
- mapping

  - configuring [2-749](#)
  - displaying [2-482](#)

- promiscuous ports [2-736](#)

privileged EXEC mode [1-2, 1-3](#)

product identification information, displaying [2-495](#)

promiscuous ports, private VLANs [2-736](#)

protected ports, displaying [2-488](#)

pruning

- VLANs [2-753](#)
- VTP

  - displaying interface information [2-482](#)
  - enabling [2-802, 2-806](#)

pruning-eligible VLAN list [2-755](#)

PVST+

- See STP

---

## Q

### QoS

auto-QoS

- configuring [2-23](#)
- debug messages, display [B-2](#)
- displaying [2-413](#)

class maps

- creating [2-47](#)
- defining the match criteria [2-279](#)
- displaying [2-422](#)

defining the CoS value for an incoming packet [2-288](#)

displaying configuration information [2-413, 2-578](#)

DSCP transparency [2-300](#)

DSCP trusted ports

- applying DSCP-to-DSCP-mutation map to [2-290](#)
- defining DSCP-to-DSCP-mutation map [2-292](#)

egress queues

- allocating buffers [2-296](#)
- defining the CoS output queue threshold map [2-314](#)
- defining the DSCP output queue threshold map [2-316](#)
- displaying buffer allocations [2-582](#)
- displaying CoS output queue threshold map [2-586](#)
- displaying DSCP output queue threshold map [2-586](#)
- displaying queueing strategy [2-582](#)

**QoS (continued)**

- egress queues
  - displaying queue-set settings [2-589](#)
  - enabling bandwidth shaping and scheduling [2-710](#)
  - enabling bandwidth sharing and scheduling [2-712](#)
  - limiting the maximum output on a port [2-708](#)
  - mapping a port to a queue-set [2-378](#)
  - mapping CoS values to a queue and threshold [2-314](#)
  - mapping DSCP values to a queue and threshold [2-316](#)
  - setting maximum and reserved memory allocations [2-298](#)
  - setting WTD thresholds [2-298](#)
- enabling [2-284](#)
- ingress queues
  - allocating buffers [2-304](#)
  - assigning SRR scheduling weights [2-302](#)
  - defining the CoS input queue threshold map [2-306](#)
  - defining the DSCP input queue threshold map [2-308](#)
  - displaying buffer allocations [2-582](#)
  - displaying CoS input queue threshold map [2-586](#)
  - displaying DSCP input queue threshold map [2-586](#)
  - displaying queueing strategy [2-582](#)
  - displaying settings for [2-580](#)
  - enabling the priority queue [2-310](#)
  - mapping CoS values to a queue and threshold [2-306](#)
  - mapping DSCP values to a queue and threshold [2-308](#)
  - setting WTD thresholds [2-312](#)
- maps
  - defining [2-292](#), [2-306](#), [2-308](#), [2-314](#), [2-316](#)
  - displaying [2-586](#)

**QoS (continued)**

- policy maps
  - applying an aggregate policer [2-352](#)
  - applying to an interface [2-396](#), [2-402](#)
  - creating [2-354](#)
  - defining policers [2-286](#), [2-350](#)
  - displaying policers [2-579](#)
  - displaying policy maps [2-605](#)
  - hierarchical [2-355](#)
  - policed-DSCP map [2-292](#)
  - setting DSCP or IP precedence values [2-400](#)
  - traffic classifications [2-45](#)
  - trust states [2-770](#)
- port trust states [2-318](#)
- queues, enabling the expedite [2-371](#)
- statistics
  - in-profile and out-of-profile packets [2-582](#)
  - packets enqueued or dropped [2-582](#)
  - sent and received CoS values [2-582](#)
  - sent and received DSCP values [2-582](#)
- trusted boundary for IP phones [2-318](#)
- VLAN-based [2-320](#)
- quality of service
  - See QoS
- querytime, MVR [2-327](#)
- queue-set command [2-378](#)

**R**

- radius-server dead-criteria command [2-379](#)
- radius-server host command [2-381](#)
- rapid per-VLAN spanning-tree plus
  - See STP
- rapid PVST+
  - See STP
- rcommand command [2-383](#)
- re-authenticating IEEE 802.1x-enabled ports [2-128](#)

re-authentication

- periodic [2-129](#)
- time between attempts [2-130](#)

receiver ports, MVR [2-330](#)

receiving flow-control packets [2-143](#)

recovery mechanism

- causes [2-137](#)
- display [2-51, 2-420, 2-467, 2-471](#)
- timer interval [2-138](#)

redundancy for cluster switches [2-79](#)

redundant power supply

- See RPS

reload command [2-385](#)

remote command [2-387](#)

remote-span command [2-389](#)

Remote Switched Port Analyzer

- See RSPAN

rename (boot loader) command [A-17](#)

renew ip dhcp snooping database command [2-391](#)

requirements

- cluster **xx**
- device manager **xx**
- Network Assistant **xx**

reset (boot loader) command [A-18](#)

reset command [2-791](#)

resource templates, displaying [2-615](#)

restricted VLAN

- See dot1x auth-fail vlan

rmdir (boot loader) command [A-19](#)

rmon collection stats command [2-389](#)

root guard, for spanning tree [2-670](#)

routed ports

- IP addresses on [2-158](#)
- number supported [2-158](#)

routing frames

- See MTU

RPS 2300

- configuring [2-367](#)
- managing [2-367](#)

RSPAN

- configuring [2-322](#)
- displaying [2-592](#)
- filter RSPAN traffic [2-322](#)
- remote-span command [2-389](#)
- sessions
  - add interfaces to [2-322](#)
  - displaying [2-592](#)
  - start new [2-322](#)

---

## S

scheduled switchover

- disabling [2-98](#)
- enabling [2-98](#)

SDM mismatch mode [2-391, 2-629](#)

sdm prefer command [2-390](#)

SDM templates

- allowed resources [2-391](#)
- and stacking [2-391](#)
- displaying [2-615](#)
- dual IPv4 and IPv6 [2-390](#)

secure ports, limitations [2-742](#)

sending flow-control packets [2-143](#)

service password-recovery command [2-394](#)

service-policy command [2-396](#)

session command [2-399](#)

set (boot loader) command [A-20](#)

set command [2-400](#)

setup command [2-402](#)

setup express command [2-405](#)

show access-lists command [2-407](#)

show archive status command [2-410](#)

show arp access-list command [2-412](#)

show auto qos command [2-413](#)

show boot command [2-417](#)

show cable-diagnostics tdr command [2-420](#)

show changes command [2-791](#)

show class-map command [2-422](#)



- show cluster candidates command [2-425](#)
- show cluster command [2-423](#)
- show cluster members command [2-427](#)
- show controllers cpu-interface command [2-429](#)
- show controllers ethernet-controller command [2-431](#)
- show controllers ethernet-controller fastethernet command [2-438](#)
- show controllers power inline command [2-441](#)
- show controllers tcam command [2-443](#)
- show controller utilization command [2-445](#)
- show current command [2-791](#)
- show dot1q-tunnel command [2-452](#)
- show dot1x command [2-453](#)
- show dtp [2-457](#)
- show eap command [2-459](#)
- show env command [2-462](#)
- show errdisable detect command [2-467](#)
- show errdisable flap-values command [2-469](#)
- show errdisable recovery command [2-471](#)
- show etherchannel command [2-473](#)
- show fallback profile command [2-476](#)
- show flowcontrol command [2-478](#)
- show idprom command [2-480](#)
- show interfaces command [2-482](#)
- show interfaces counters command [2-492](#)
- show inventory command [2-495](#)
- show ip arp inspection command [2-496](#)
- show ipc command [2-522](#)
- show ip dhcp snooping binding command [2-501](#)
- show ip dhcp snooping command [2-500](#)
- show ip dhcp snooping database command [2-503, 2-505](#)
- show ip igmp profile command [2-508](#)
- show ip igmp snooping address command [2-530](#)
- show ip igmp snooping command [2-509, 2-528](#)
- show ip igmp snooping groups command [2-512](#)
- show ip igmp snooping mrouter command [2-514, 2-532](#)
- show ip igmp snooping querier command [2-516, 2-534](#)
- show ip source binding command [2-518](#)
- show ipv6 access-list command [2-526](#)
- show ipv6 route updated [2-536](#)
- show ip verify source command [2-520](#)
- show l2protocol-tunnel command [2-538](#)
- show lacp command [2-541](#)
- show link state group command [2-545](#)
- show location [2-547](#)
- show location command [2-547](#)
- show logging command [2-550](#)
- show mac access-group command [2-556](#)
- show mac address-table address command [2-560](#)
- show mac address-table aging time command [2-562](#)
- show mac address-table command [2-558](#)
- show mac address-table count command [2-564](#)
- show mac address-table dynamic command [2-566](#)
- show mac address-table interface command [2-568](#)
- show mac address-table move update command [2-570](#)
- show mac address-table notification command [2-61, 2-572, B-22](#)
- show mac address-table static command [2-574](#)
- show mac address-table vlan command [2-576](#)
- show mls qos aggregate-policer command [2-579](#)
- show mls qos command [2-578](#)
- show mls qos input-queue command [2-580](#)
- show mls qos interface command [2-582](#)
- show mls qos maps command [2-586](#)
- show mls qos queue-set command [2-589](#)
- show mls qos vlan command [2-591](#)
- show monitor command [2-592](#)
- show mvr command [2-594](#)
- show mvr interface command [2-596](#)
- show mvr members command [2-598](#)
- show pagp command [2-600](#)
- show parser macro command [2-602](#)
- show platform acl command [C-2](#)
- show platform backup interface command [C-3](#)
- show platform configuration command [C-4](#)
- show platform dl command [C-5](#)
- show platform etherchannel command [C-6](#)
- show platform forward command [C-7](#)

- show platform frontend-controller command [C-9](#)
- show platform igmp snooping command [C-10](#)
- show platform ipc trace command [C-18](#)
- show platform ip multicast command [C-12](#)
- show platform ip unicast command [C-13](#)
- show platform ipv6 unicast command [C-19](#)
- show platform ip wccp command [C-17](#)
- show platform layer4op command [C-21](#)
- show platform mac-address-table command [C-22](#)
- show platform messaging command [C-23](#)
- show platform monitor command [C-24](#)
- show platform mvr table command [C-25](#)
- show platform pm command [C-26](#)
- show platform port-asic command [C-27](#)
- show platform port-security command [C-32](#)
- show platform qos command [C-33](#)
- show platform resource-manager command [C-34](#)
- show platform snmp counters command [C-36](#)
- show platform spanning-tree command [C-37](#)
- show platform stack-manager command [C-39](#)
- show platform stp-instance command [C-38](#)
- show platform tb command [C-41](#)
- show platform team command [C-43](#)
- show platform vlan command [C-46](#)
- show policy-map command [2-605](#)
- show port security command [2-607](#)
- show power inline command [2-610](#)
- show proposed command [2-791](#)
- show sdm prefer command [2-615](#)
- show setup express command [2-618](#)
- show spanning-tree command [2-619](#)
- show storm-control command [2-626](#)
- show switch command [2-628](#)
- show system mtu command [2-631](#)
- show trust command [2-770](#)
- show udd command [2-632](#)
- show version command [2-635](#)
- show vlan access-map command [2-642](#)
- show vlan command [2-637](#)
- show vlan command, fields [2-639](#)
- show vlan filter command [2-643](#)
- show vmps command [2-644](#)
- show vtp command [2-647](#)
- shutdown command [2-647](#)
- shutdown threshold, Layer 2 protocol tunneling [2-237](#)
- shutdown vlan command [2-648](#)
- Smartports macros
  - See macros
- SNMP host, specifying [2-653](#)
- SNMP informs, enabling the sending of [2-649](#)
- snmp-server enable traps command [2-649](#)
- snmp-server host command [2-653](#)
- snmp trap mac-notification command [2-657](#)
- SNMP traps
  - enabling MAC address notification trap [2-657](#)
  - enabling the MAC address notification feature [2-262](#)
  - enabling the sending of [2-649](#)
- SoftPhone
  - See Cisco SoftPhone
- software images
  - copying [2-9](#)
  - deleting [2-84](#)
  - downloading [2-12](#)
  - upgrading [2-9, 2-12](#)
  - uploading [2-19](#)
- software version, displaying [2-635](#)
- source ports, MVR [2-330](#)
- SPAN
  - configuring [2-322](#)
  - debug messages, display [B-23](#)
  - displaying [2-592](#)
  - filter SPAN traffic [2-322](#)
  - sessions
    - add interfaces to [2-322](#)
    - displaying [2-592](#)
    - start new [2-322](#)
- spanning-tree backbonefast command [2-659](#)
- spanning-tree bpdupfilter command [2-660](#)

- spanning-tree bpduguard command [2-662](#)
- spanning-tree cost command [2-664](#)
- spanning-tree etherchannel command [2-666](#)
- spanning-tree extend system-id command [2-668](#)
- spanning-tree guard command [2-670](#)
- spanning-tree link-type command [2-672](#)
- spanning-tree loopguard default command [2-674](#)
- spanning-tree mode command [2-676](#)
- spanning-tree mst configuration command [2-678](#)
- spanning-tree mst cost command [2-680](#)
- spanning-tree mst forward-time command [2-682](#)
- spanning-tree mst hello-time command [2-683](#)
- spanning-tree mst max-age command [2-684](#)
- spanning-tree mst max-hops command [2-685](#)
- spanning-tree mst port-priority command [2-687](#)
- spanning-tree mst pre-standard command [2-689](#)
- spanning-tree mst priority command [2-690](#)
- spanning-tree mst root command [2-691](#)
- spanning-tree portfast (global configuration) command [2-695](#)
- spanning-tree portfast (interface configuration) command [2-698](#)
- spanning-tree port-priority command [2-693](#)
- Spanning Tree Protocol
  - See STP
- spanning-tree transmit hold-count command [2-700](#)
- spanning-tree uplinkfast command [2-701](#)
- spanning-tree vlan command [2-703](#)
- speed command [2-706](#)
- srr-queue bandwidth limit command [2-708](#)
- srr-queue bandwidth shape command [2-710](#)
- srr-queue bandwidth share command [2-712](#)
- SSH, configuring version [2-216](#)
- stack-mac persistent timer command [2-714](#)
- stack member
  - access [2-399](#)
  - number [2-628, 2-722](#)
  - priority value [2-719](#)
  - provisioning [2-720](#)
  - reloading [2-385](#)
- stacks, switch
  - MAC address [2-714](#)
  - provisioning a new member [2-720](#)
  - reloading [2-385](#)
  - stack member access [2-399](#)
  - stack member number [2-628, 2-722](#)
  - stack member priority value [2-628, 2-719](#)
- static-access ports, configuring [2-726](#)
- statistics, Ethernet group [2-389](#)
- sticky learning, enabling [2-740](#)
- storm-control command [2-716](#)
- STP
  - BackboneFast [2-659](#)
  - counters, clearing [2-65](#)
  - debug messages, display
    - BackboneFast events [B-78](#)
    - MSTP [B-81](#)
    - optimized BPDU handling [B-80](#)
    - spanning-tree activity [B-76](#)
    - switch shim [B-83](#)
    - transmitted and received BPDUs [B-79](#)
    - UplinkFast [B-85](#)
  - detection of indirect link failures [2-659](#)
  - enabling protocol tunneling for [2-237](#)
  - EtherChannel misconfiguration [2-666](#)
  - extended system ID [2-668](#)
  - path cost [2-664](#)
  - protocol modes [2-676](#)

**STP (continued)**

- root port
    - accelerating choice of new [2-701](#)
    - loop guard [2-670](#)
    - preventing from becoming designated [2-670](#)
    - restricting which can be root [2-670](#)
    - root guard [2-670](#)
    - UplinkFast [2-701](#)
  - root switch
    - affects of extended system ID [2-668, 2-704](#)
    - hello-time [2-703](#)
    - interval between BPDU messages [2-703](#)
    - interval between hello BPDU messages [2-703](#)
    - max-age [2-703](#)
    - port priority for selection of [2-693](#)
    - primary or secondary [2-703](#)
    - switch priority [2-703](#)
  - state changes
    - blocking to forwarding state [2-698](#)
    - enabling BPDU filtering [2-660, 2-695](#)
    - enabling BPDU guard [2-662, 2-695](#)
    - enabling Port Fast [2-695, 2-698](#)
    - enabling timer to recover from error state [2-137](#)
    - forward-delay time [2-703](#)
    - length of listening and learning states [2-703](#)
    - shutting down Port Fast-enabled ports [2-695](#)
  - state information display [2-619](#)
  - VLAN options [2-690, 2-703](#)
  - SVIs, creating [2-152](#)
  - Switched Port Analyzer
    - See SPAN
  - switching characteristics
    - modifying [2-724](#)
    - returning to interfaces [2-724](#)
  - switchport access command [2-726](#)
  - switchport backup interface command [2-728](#)
  - switchport block command [2-731](#)
  - switchport command [2-724](#)
  - switchport host command [2-732](#)
  - switchport mode command [2-733](#)
  - switchport mode private-vlan command [2-736](#)
  - switchport nonegotiate command [2-738](#)
  - switchport port-security aging command [2-745](#)
  - switchport port-security command [2-740](#)
  - switchport priority extend command [2-747](#)
  - switchport private-vlan command [2-749](#)
  - switchport protected command [2-751](#)
  - switchports, displaying [2-482](#)
  - switchport trunk command [2-753](#)
  - switchport voice detect [2-756](#)
  - switchport voice vlan command [2-757](#)
  - switch priority command [2-719](#)
  - switch provision command [2-720](#)
  - switch renumber command [2-722](#)
  - system env temperature threshold yellow command [2-759](#)
  - system message logging [2-252](#)
  - system message logging, save message to flash [2-253](#)
  - system mtu command [2-761](#)
  - system resource templates [2-390](#)
- 
- T**
- tar files, creating, listing, and extracting [2-16](#)
  - TDR, running [2-764](#)
  - Telnet, using to communicate to cluster switches [2-383](#)
  - temperature information, displaying [2-462](#)
  - templates, system resources [2-390](#)
  - test cable-diagnostics tdr command [2-764](#)
  - traceroute mac command [2-765](#)
  - traceroute mac ip command [2-768](#)
  - trunking, VLAN mode [2-733](#)
  - trunk mode [2-733](#)
  - trunk ports [2-733](#)
  - trunks, to non-DTP device [2-734](#)
  - trusted boundary for QoS [2-318](#)
  - trusted port states for QoS [2-318](#)
  - tunnel ports, Layer 2 protocol, displaying [2-538](#)
  - type (boot loader) command [A-23](#)

---

**U**

## UDLD

- aggressive mode [2-772, 2-774](#)
- debug messages, display [B-93](#)
- enable globally [2-772](#)
- enable per interface [2-774](#)
- error recovery timer [2-137](#)
- message timer [2-772](#)
- normal mode [2-772, 2-774](#)
- reset a shutdown interface [2-776](#)
- status [2-632](#)

udld command [2-772](#)

udld port command [2-774](#)

udld reset command [2-776](#)

unicast storm control [2-716](#)

UniDirectional Link Detection

See UDLD

unknown multicast traffic, preventing [2-731](#)

unknown unicast traffic, preventing [2-731](#)

unset (boot loader) command [A-24](#)

upgrading

- copying software images [2-9](#)
- downloading software images [2-12](#)
- software images
  - monitoring status of [2-410](#)

upgrading information

See release notes

UplinkFast, for STP [2-701](#)

user EXEC mode [1-2, 1-3](#)

---

**V**

version (boot loader) command [A-26](#)

version mismatch mode [2-629](#)

vlan (global configuration) command [2-777](#)

vlan (VLAN configuration) command [2-782](#)

vlan access-map command [2-788](#)

VLAN access map configuration mode [2-788](#)

VLAN access maps

- actions [2-7](#)
- displaying [2-642](#)

VLAN-based QoS [2-320](#)

VLAN configuration

- rules [2-780, 2-784](#)
- saving [2-777, 2-786](#)

VLAN configuration mode

- commands
  - VLAN [2-782](#)
  - VTP [2-806](#)
- description [1-5](#)
- entering [2-790](#)
- summary [1-3](#)

vlan database command [2-790](#)

vlan dot1q tag native command [2-793](#)

vlan filter command [2-795](#)

VLAN filters, displaying [2-643](#)

VLAN ID range [2-777, 2-782](#)

VLAN maps

- applying [2-795](#)
- creating [2-788](#)
- defining [2-277](#)
- displaying [2-642](#)

VLAN Query Protocol

See VQP

VLANs

- adding [2-777](#)
- configuring [2-777, 2-782](#)
- debug messages, display
  - ISL [B-89](#)
  - VLAN IOS file system error tests [B-88](#)
  - VLAN manager activity [B-86](#)
  - VTP [B-91](#)
- displaying configurations [2-637](#)
- enabling guest VLAN supplicant [2-142](#)
- extended-range [2-777](#)

**VLANs (continued)**

- MAC addresses
  - displaying [2-576](#)
  - number of [2-564](#)
- media types [2-780, 2-784](#)
- normal-range [2-777, 2-782](#)
- private [2-736](#)
  - configuring [2-373](#)
  - displaying [2-637](#)
  - See also private VLANs
- restarting [2-648](#)
- saving the configuration [2-777](#)
- shutting down [2-648](#)
- SNMP traps for VTP [2-651, 2-654](#)
- suspending [2-648](#)
- variables [2-782](#)

**VLAN Trunking Protocol**

See VTP

**VM mode [2-629](#)****VMPS**

- configuring servers [2-800](#)
- displaying [2-644](#)
- error recovery timer [2-138](#)
- reconfirming dynamic VLAN assignments [2-797](#)

vmmps reconfirm (global configuration) command [2-798](#)

vmmps reconfirm (privileged EXEC) command [2-797](#)

vmmps retry command [2-799](#)

vmmps server command [2-800](#)

**voice VLAN**

- configuring [2-756, 2-757](#)
- setting port priority [2-747](#)

**VQP**

- and dynamic-access ports [2-727](#)
- clearing client statistics [2-67](#)
- displaying information [2-644](#)
- per-server retry count [2-799](#)
- reconfirmation interval [2-798](#)
- reconfirming dynamic VLAN assignments [2-797](#)

**VTP**

- changing characteristics [2-802](#)
- clearing pruning counters [2-68](#)
- configuring
  - domain name [2-802, 2-806](#)
  - file name [2-802](#)
  - mode [2-802, 2-806](#)
  - password [2-802, 2-806](#)
- counters display fields [2-648](#)
- displaying information [2-647](#)
- enabling
  - pruning [2-802, 2-806](#)
  - tunneling for [2-237](#)
  - Version 2 [2-802, 2-806](#)
- mode [2-802, 2-806](#)
- pruning [2-802, 2-806](#)
- saving the configuration [2-777, 2-786](#)
- statistics [2-647](#)
- status [2-647](#)
- status display fields [2-649](#)
- vtp (global configuration) command [2-802](#)
- vtp (VLAN configuration) command [2-806](#)