

30

PFC QoS Statistics Data Export

- [Prerequisites for PFC QoS Statistics Data Export, page 30-1](#)
- [Restrictions for PFC QoS Statistics Data Export, page 30-1](#)
- [Information About PFC QoS Statistics Data Export, page 30-1](#)
- [Default Settings for PFC QoS Statistics Data Export, page 30-2](#)
- [How to Configure PFC QoS Statistics Data Export, page 30-2](#)

**Note**

- For complete syntax and usage information for the commands used in this chapter, see these publications:
http://www.cisco.com/en/US/products/ps11846/prod_command_reference_list.html
 - Cisco IOS Release 15.4SY supports only Ethernet interfaces. Cisco IOS Release 15.4SY does not support any WAN features or commands.
-

**Tip**

For additional information about Cisco Catalyst 6500 Series Switches (including configuration examples and troubleshooting information), see the documents listed on this page:

http://www.cisco.com/en/US/products/hw/switches/ps708/tsd_products_support_series_home.html

[Participate in the Technical Documentation Ideas forum](#)

Prerequisites for PFC QoS Statistics Data Export

None.

Restrictions for PFC QoS Statistics Data Export

None.

Information About PFC QoS Statistics Data Export

The PFC QoS statistics data export feature generates per-LAN-port and per-aggregate policer utilization information and forwards this information in UDP packets to traffic monitoring, planning, or accounting applications. You can enable PFC QoS statistics data export on a per-LAN-port or on a per-aggregate

policer basis. The statistics data generated per port consists of counts of the input and output packets and bytes. The aggregate policer statistics consist of counts of allowed packets and counts of packets exceeding the policed rate.

The PFC QoS statistics data collection occurs periodically at a fixed interval, but you can configure the interval at which the data is exported. PFC QoS statistics collection is enabled by default, and the data export feature is disabled by default for all ports and all configured aggregate policers.

**Note**

The PFC QoS statistics data export feature is completely separate from NetFlow Data Export and does not interact with it.

Default Settings for PFC QoS Statistics Data Export

| Feature | Default Value |
|---|----------------------|
| Global PFC QoS data export | Disabled |
| Per port PFC QoS data export | Disabled |
| Per named aggregate policer PFC QoS data export | Disabled |
| Per class map policer PFC QoS data export | Disabled |
| PFC QoS data export time interval | 300 seconds |
| Export destination | Not configured |
| PFC QoS data export field delimiter | Pipe character () |

How to Configure PFC QoS Statistics Data Export

- [Enabling PFC QoS Statistics Data Export Globally, page 30-2](#)
- [Enabling PFC QoS Statistics Data Export for a Port, page 30-3](#)
- [Enabling PFC QoS Statistics Data Export for a Named Aggregate Policier, page 30-4](#)
- [Enabling PFC QoS Statistics Data Export for a Class Map, page 30-5](#)
- [Setting the PFC QoS Statistics Data Export Time Interval, page 30-6](#)
- [Configuring PFC QoS Statistics Data Export Destination Host and UDP Port, page 30-7](#)
- [Setting the PFC QoS Statistics Data Export Field Delimiter, page 30-8](#)

Enabling PFC QoS Statistics Data Export Globally

To enable PFC QoS statistics data export globally, perform this task:

| | Command | Purpose |
|---------------|---|--|
| Step 1 | Router(config)# platform qos statistics-export | Enables PFC QoS statistics data export globally. |
| Step 2 | Router(config)# end | Exits configuration mode. |

This example shows how to enable PFC QoS statistics data export globally and verify the configuration:

```
Router# configure terminal
Router(config)# platform qos statistics-export
Router(config)# end
% Warning: Export destination not set.
% Use 'platform qos statistics-export destination' command to configure the export
destination
Router# show platform qos statistics-export info
QoS Statistics Data Export Status and Configuration information
-----
Export Status : enabled
Export Interval : 300 seconds
Export Delimiter : |
Export Destination : Not configured
Router#
```


Note

You must enable PFC QoS statistics data export globally for other PFC QoS statistics data export configuration to take effect.

Enabling PFC QoS Statistics Data Export for a Port

To enable PFC QoS statistics data export for a port, perform this task:

| | Command | Purpose |
|--------|--|--|
| Step 1 | Router(config)# interface <i>type slot/port</i> | Selects the interface to configure. |
| Step 2 | Router(config-if)# platform qos statistics-export | Enables PFC QoS statistics data export for the port. |
| Step 3 | Router(config)# end | Exits configuration mode. |

This example shows how to enable PFC QoS statistics data export on GigabitEthernet port 5/24 and verify the configuration:

```
Router# configure terminal
Router(config)# interface gigabitethernet 5/24
Router(config-if)# platform qos statistics-export
Router(config-if)# end
Router# show platform qos statistics-export info
QoS Statistics Data Export Status and Configuration information
-----
Export Status : enabled
Export Interval : 300 seconds
Export Delimiter : |
Export Destination : Not configured

QoS Statistics Data Export is enabled on following ports:
-----
GigabitEthernet5/24
Router#
```

When enabled on a port, PFC QoS statistics data export contains the following fields, separated by the delimiter character:

- Export type (“1” for a port)
- Slot/port
- Number of ingress packets

- Number of ingress bytes
- Number of egress packets
- Number of egress bytes
- Time stamp

Enabling PFC QoS Statistics Data Export for a Named Aggregate Policier

To enable PFC QoS statistics data export for a named aggregate policier, perform this task:

| | Command | Purpose |
|--------|---|--|
| Step 1 | Router(config)# platform qos statistics-export aggregate-policier <i>aggregate_policier_name</i> | Enables PFC QoS statistics data export for a named aggregate policier. |
| Step 2 | Router(config)# end | Exits configuration mode. |

This example shows how to enable PFC QoS statistics data export for an aggregate policier named `aggr1M` and verify the configuration:

```
Router# configure terminal
Router(config)# platform qos statistics-export aggregate-policier aggr1M
Router(config)# end
Router# show platform qos statistics-export info
QoS Statistics Data Export Status and Configuration information
-----
Export Status : enabled
Export Interval : 300 seconds
Export Delimiter : |
Export Destination : Not configured

QoS Statistics Data Export is enabled on following ports:
-----
GigabitEthernet5/24

QoS Statistics Data export is enabled on following shared aggregate policiers:
-----
aggr1M
Router#
```

When enabled for a named aggregate policier, PFC QoS statistics data export contains the following fields, separated by the delimiter character:

- Export type (“3” for an aggregate policier)
- Aggregate policier name
- Direction (“in”)
- PFC or DFC slot number
- Number of in-profile bytes
- Number of bytes that exceed the CIR
- Number of bytes that exceed the PIR
- Time stamp

Enabling PFC QoS Statistics Data Export for a Class Map

To enable PFC QoS statistics data export for a class map, perform this task:

| | Command | Purpose |
|--------|--|---|
| Step 1 | Router(config)# platform qos statistics-export class-map <i>classmap_name</i> | Enables PFC QoS statistics data export for a class map. |
| Step 2 | Router(config)# end | Exits configuration mode. |

This example shows how to enable PFC QoS statistics data export for a class map named class3 and verify the configuration:

```
Router# configure terminal
Router(config)# platform qos statistics-export class-map class3
Router(config)# end
Router# show platform qos statistics-export info
QoS Statistics Data Export Status and Configuration information
-----
Export Status : enabled
Export Interval : 300 seconds
Export Delimiter : |
Export Destination : Not configured

QoS Statistics Data Export is enabled on following ports:
-----
GigabitEthernet5/24

QoS Statistics Data export is enabled on following shared aggregate policers:
-----
aggr1M

QoS Statistics Data Export is enabled on following class-maps:
-----
class3
Router#
```

When enabled for a class map, PFC QoS statistics data export contains the following fields, separated by the delimiter character:

- For data from a physical port:
 - Export type (“4” for a classmap and port)
 - Class map name
 - Direction (“in”)
 - Slot/port
 - Number of in-profile bytes
 - Number of bytes that exceed the CIR
 - Number of bytes that exceed the PIR
 - Time stamp
- For data from a VLAN interface:
 - Export type (“5” for a class map and VLAN)
 - Classmap name
 - Direction (“in”)

- PFC or DFC slot number
- VLAN ID
- Number of in-profile bytes
- Number of bytes that exceed the CIR
- Number of bytes that exceed the PIR
- Time stamp
- For data from a port channel interface:
 - Export type (“6” for a class map and port channel)
 - Class map name
 - Direction (“in”)
 - PFC or DFC slot number
 - Port channel ID
 - Number of in-profile bytes
 - Number of bytes that exceed the CIR
 - Number of bytes that exceed the PIR
 - Time stamp

Setting the PFC QoS Statistics Data Export Time Interval

To set the time interval for the PFC QoS statistics data export, perform this task:

| | Command | Purpose |
|--------|--|---|
| Step 1 | Router(config)# platform qos statistics-export interval interval_in_seconds | Sets the time interval for the PFC QoS statistics data export. Note The interval needs to be short enough to avoid counter wraparound with the activity in your configuration, but because exporting PFC QoS statistic creates a significant load on the switch, be careful when decreasing the interval. |
| Step 2 | Router(config)# end | Exits configuration mode. |

This example shows how to set the PFC QoS statistics data export interval and verify the configuration:

```
Router# configure terminal
Router(config)# platform qos statistics-export interval 250
Router(config)# end
Router# show platform qos statistics-export info
QoS Statistics Data Export Status and Configuration information
-----
Export Status : enabled
Export Interval : 250 seconds
Export Delimiter : |
Export Destination : Not configured

QoS Statistics Data Export is enabled on following ports:
-----
GigabitEthernet5/24
```

QoS Statistics Data export is enabled on following shared aggregate policers:

aggr1M

QoS Statistics Data Export is enabled on following class-maps:

class3
Router#

Configuring PFC QoS Statistics Data Export Destination Host and UDP Port

To configure the PFC QoS statistics data export destination host and UDP port number, perform this task:

| | Command | Purpose |
|--------|---|---|
| Step 1 | Router(config)# platform qos statistics-export destination {host_name host_ip_address} {port port_number syslog [facility facility_name] [severity severity_value]} | Configures the PFC QoS statistics data export destination host and UDP port number. |
| Step 2 | Router(config)# end | Exits configuration mode. |



Note

When the PFC QoS data export destination is a syslog server, the exported data is prefaced with a syslog header.

Table 30-1 Supported PFC QoS Data Export Facility Parameter Values

| Name | Definition | Name | Definition |
|--------|----------------------------------|--------|------------------------|
| kern | kernel messages | cron | cron/at subsystem |
| user | random user-level messages | local0 | reserved for local use |
| mail | mail system | local1 | reserved for local use |
| daemon | system daemons | local2 | reserved for local use |
| auth | security/authentication messages | local3 | reserved for local use |
| syslog | internal syslogd messages | local4 | reserved for local use |
| lpr | line printer subsystem | local5 | reserved for local use |
| news | netnews subsystem | local6 | reserved for local use |
| uucp | uucp subsystem | local7 | reserved for local use |

Table 30-2 Supported PFC QoS Data Export Severity Parameter Values

| Severity Parameter | | |
|--------------------|--------|----------------------------------|
| Name | Number | Definition |
| emerg | 0 | system is unusable |
| alert | 1 | action must be taken immediately |
| crit | 2 | critical conditions |

Table 30-2 Supported PFC QoS Data Export Severity Parameter Values (continued)

| Severity Parameter | | |
|--------------------|--------|----------------------------------|
| Name | Number | Definition |
| err | 3 | error conditions |
| warning | 4 | warning conditions |
| notice | 5 | normal but significant condition |
| info | 6 | informational |
| debug | 7 | debug-level messages |

This example shows how to configure 172.20.52.3 as the destination host and syslog as the UDP port number and verify the configuration:

```
Router# configure terminal
Router(config)# platform qos statistics-export destination 172.20.52.3 syslog
Router(config)# end
Router# show platform qos statistics-export info
QoS Statistics Data Export Status and Configuration information
-----
Export Status : enabled
Export Interval : 250 seconds
Export Delimiter : |
Export Destination : 172.20.52.3, UDP port 514 Facility local6, Severity debug

QoS Statistics Data Export is enabled on following ports:
-----
GigabitEthernet5/24

QoS Statistics Data export is enabled on following shared aggregate policers:
-----
aggr1M

QoS Statistics Data Export is enabled on following class-maps:
-----
class3
```

Setting the PFC QoS Statistics Data Export Field Delimiter

To set the PFC QoS statistics data export field delimiter, perform this task:

| | Command | Purpose |
|--------|---|--|
| Step 1 | Router(config)# platform qos statistics-export delimiter delimiter_character | Sets the PFC QoS statistics data export field delimiter. |
| Step 2 | Router(config)# end | Exits configuration mode. |

This example shows how to set the PFC QoS statistics data export field delimiter and verify the configuration:

```
Router# configure terminal
Router(config)# platform qos statistics-export delimiter ,
Router(config)# end
Router# show platform qos statistics-export info
QoS Statistics Data Export Status and Configuration information
-----
```



```
Export Status : enabled
Export Interval : 250 seconds
Export Delimiter : ,
Export Destination : 172.20.52.3, UDP port 514 Facility local6, Severity debug
```

QoS Statistics Data Export is enabled on following ports:

GigabitEthernet5/24

QoS Statistics Data export is enabled on following shared aggregate policers:

aggr1M

QoS Statistics Data Export is enabled on following class-maps:

class3

**Tip**

For additional information about Cisco Catalyst 6500 Series Switches (including configuration examples and troubleshooting information), see the documents listed on this page:

http://www.cisco.com/en/US/products/hw/switches/ps708/tsd_products_support_series_home.html

[Participate in the Technical Documentation Ideas forum](#)
