

# Working with the Flash File System

- Finding Feature Information, on page 1
- Information About the Flash File System, on page 1
- Displaying Available File Systems, on page 2
- Setting the Default File System, on page 3
- Displaying Information About Files on a File System, on page 3
- Changing Directories and Displaying the Working Directory, on page 4
- Creating Directories, on page 5
- Copying Files, on page 6
- Creating, Displaying and Extracting Files, on page 9
- Additional References for Flash File System, on page 11
- Feature History for Flash File System, on page 12

### Finding Feature Information

Your software release may not support all the features documented in this module. For the latest caveats and feature information, see Bug Search Tool and the release notes for your platform and software release. To find information about the features documented in this module, and to see a list of the releases in which each feature is supported, see the feature information table at the end of this module.

Use Cisco Feature Navigator to find information about platform support and Cisco software image support. To access Cisco Feature Navigator, go to http://www.cisco.com/go/cfn. An account on Cisco.com is not required.

### Information About the Flash File System

The flash file system is a single flash device on which you can store files. It also provides several commands to help you manage software bundles and configuration files. The default flash file system on the device is named flash:

As viewed from the active device, flash: refers to the local flash device, which is the device attached to the same device on which the file system is being viewed. In a device stack, each of the flash devices from the various stack members can be viewed from the active device. The names of these flash file systems include the corresponding device member numbers. For example, flash-3:, as viewed from the active device, refers to the same file system as does flash: on stack member 3. Use the **show file systems** privileged EXEC command to list all file systems, including the flash file systems in the device stack.

Only one user at a time can manage the software bundles and configuration files for a device stack .

# **Displaying Available File Systems**

To display the available file systems on your device, use the **show file systems** privileged EXEC command as shown in this example for a standalone device:

Field	Value	
Size(b)	Amount of memory in the file system in bytes.	
Free(b)	Amount of free memory in the file system in bytes.	
Туре	Type of file system.	
	<b>disk</b> —The file system is for a flash memory device, USB flash, and crashinfo file.	
	<b>network</b> —The file system for network devices; for example, an FTP server or and HTTP server.	
	<b>nvram</b> —The file system is for a NVRAM device.	
	<b>opaque</b> —The file system is a locally generated pseudo file system (for example, the system) or a download interface, such as brimux.	
	unknown—The file system is an unknown type.	
Flags	Permission for file system.	
	ro—read-only.	
	rw—read/write.	
	wo—write-only.	

Table 1: show file systems Field Descriptions

Field	Value
Prefixes	Alias for file system.
	crashinfo:—Crashinfo file.
	<b>flash:</b> —Flash file system.
	ftp:—FTP server.
	http:—HTTP server.
	https:—Secure HTTP server.
	nvram:—NVRAM.
	<b>null:</b> —Null destination for copies. You can copy a remote file to nu to find its size.
	rcp:—Remote Copy Protocol (RCP) server.
	scp:—Session Control Protocol (SCP) server.
	<b>system:</b> —Contains the system memory, including the running configuration.
	tftp:—TFTP network server.
	usbflash0:—USB flash memory.
	<b>ymodem:</b> —Obtain the file from a network machine by using the Ymodem protocol.

### **Setting the Default File System**

You can specify the file system or directory that the system uses as the default file system by using the **cd** *filesystem:* privileged EXEC command. You can set the default file system to omit the *filesystem:* argument from related commands. For example, for all privileged EXEC commands that have the optional *filesystem:* argument, the system uses the file system specified by the **cd** command.

By default, the default file system is *flash*:.

You can display the current default file system as specified by the **cd** command by using the **pwd** privileged EXEC command.

## **Displaying Information About Files on a File System**

You can view a list of the contents of a file system before manipulating its contents. For example, before copying a new configuration file to flash memory, you might want to verify that the file system does not already contain a configuration file with the same name. Similarly, before copying a flash configuration file to another location, you might want to verify its filename for use in another command. To display information about files on a file system, use one of the privileged EXEC commands listed in the following table.

Command	Description	
dir [/all] [filesystem:filename]	Displays a list of files on a file system.	
show file systems	Displays more information about each of the files on a file system.	
<b>show file information</b> <i>file-url</i>	<b>n</b> Displays information about a specific file.	
show file descriptors	Displays a list of open file descriptors. File descriptors are the internal representations of open files. You can use this command to see if another user has a file open.	

#### Table 2: Commands for Displaying Information About Files

For example, to display a list of all files in a file system, use the **dir** privileged EXEC command:

```
device# dir flash:
DDirectory of bootflash:/
```

616513	drwx	4096	Jul 15 201	5 07:11:35	+00:00	.installer	
608402	-rw-	33818	Sep 25 201	5 11:41:35	+00:00	bootloader evt handle.log	
608403	drwx	4096	Feb 27 201	7 13:56:47	+00:00	.ssh	
608410	-rw-	0	Jun 5 201	5 10:16:17	+00:00	dc stats.txt	
608411	drwx	20480	Sep 23 201	5 11:50:13	+00:00	core	
624625	drwx	4096	Sep 23 201	5 12:29:27	+00:00	.prst_sync	
640849	drwx	4096	Feb 27 201	7 13:57:30	+00:00	.rollback_timer	
608412	drwx	4096	Jun 17 201	5 18:12:47	+00:00	orch_test_logs	
608413	-rw-	33554432	Sep 25 201	5 11:43:15	+00:00	nvram_config	
608417	-rw-	35	Sep 25 201	5 20:17:42	+00:00	pnp-tech-time	
608439	-rw-	214054	Sep 25 201	5 20:17:48	+00:00	pnp-tech-discovery-summary	
608419	drwx	4096	Jul 23 201	5 07:50:25	+00:00	util	
616514	drwx	4096	Mar 18 201	5 11:09:04	+00:00	onep	
608442	-rw-	556	Mar 18 201	5 11:19:34	+00:00	vlan.dat	
608448	-rw-	1131779	Mar 28 201	5 13:13:48	+00:00	log.txt	
616516	drwx	4096	Apr 1 201	5 09:34:56	+00:00	gs_script	
616517	drwx	4096	Apr 6 201	5 09:42:38	+00:00	tools	
608440	-rw-	252	Sep 25 201	5 11:41:52	+00:00	boothelper.log	
624626	drwx	4096	Apr 17 201	5 06:10:55	+00:00	SD_AVC_AUTO_CONFIG	
608488	-rw-	98869	Sep 25 201	5 11:42:15	+00:00	memleak.tcl	
608437	-rwx	17866	Jul 16 201	5 04:01:10	+00:00	ardbeg_x86	
632745	drwx	4096	Aug 20 201	5 11:35:09	+00:00	CRDU	
632746	drwx	4096	Sep 16 201	5 08:57:44	+00:00	ardmore	
608418	-rw-	1595361	Jul 8 201	5 11:18:33	+00:00		
system-	report_R	P_0_20150708-11	1832-UTC.ta	r.gz			
608491	-rw-	67587176	Aug 12 201	5 05:30:35	+00:00	mcln_x86_kernel_20170628.SSA	
608492	-rwx	74880100	Aug 12 201	5 05:30:57	+00:00	stardust.x86.idprom.0718B	
	-	es total (91280	50688 bytes	free)			
device#							

## **Changing Directories and Displaying the Working Directory**

Follow these steps to change directories and to display the working directory:

### **SUMMARY STEPS**

- 1. enable
- **2**. **dir** *filesystem*:
- **3.** cd directory\_name
- 4. pwd
- 5. cd

#### **DETAILED STEPS**

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
	Example:	• Enter your password if prompted.
	Device> <b>enable</b>	
Step 2	dir filesystem:	Displays the directories on the specified file system.
	Example:	For <i>filesystem:</i> , use flash: for the system board flash device.
	Device# dir flash:	
Step 3	cd directory_name	Navigates to the specified directory.
	Example:	The command example shows how to navigate to the directory named <i>new_configs</i> .
	Device# cd new_configs	
Step 4	pwd	Displays the working directory.
	Example:	
	Device# pwd	
Step 5	cd	Navigates to the default directory.
	Example:	
	Device# cd	

# **Creating Directories**

Beginning in privileged EXEC mode, follow these steps to create a directory:

### **SUMMARY STEPS**

- **1.** dir filesystem:
- **2.** mkdir *directory\_name*
- **3.** dir filesystem:

#### **DETAILED STEPS**

	Command or Action	Purpose
Step 1	dir filesystem:	Displays the directories on the specified file system.
	Example:	For <i>filesystem</i> :, use flash: for the system board flash device.
	Device# dir flash:	
Step 2	mkdir directory_name	Creates a new directory. Directory names are case sensitive
	Example:	and are limited to 45 characters between the slashes (/); the name cannot contain control characters, spaces, slashes,
	Device# mkdir new_configs	quotes, semicolons, or colons.
Step 3	dir filesystem:	Verifies your entry.
	Example:	
	Device# dir flash:	

### **Removing Directories**

To remove a directory with all its files and subdirectories, use the **delete** /**force** /**recursive** *filesystem:/file-url* privileged EXEC command.

Use the **/recursive** keyword to delete the named directory and all subdirectories and the files contained in it. Use the **/force** keyword to suppress the prompting that confirms a deletion of each file in the directory. You are prompted only once at the beginning of this deletion process.

For *filesystem*, use **flash:** for the system board flash device. For *file-url*, enter the name of the directory to be deleted. All of the files in the directory and the directory are removed.



Caution

on When directories are deleted, their contents cannot be recovered.

# **Copying Files**

To copy a file from a source to a destination, use the **copy** *source-url destination-url* privileged EXEC command. For the source and destination URLs, you can use **running-config** and **startup-config** keyword shortcuts. For example, the **copy running-config startup-config** command saves the currently running configuration file to the NVRAM section of flash memory to be used as the configuration during system initialization.

You can also copy from special file systems (**xmodem:**, **ymodem:**) as the source for the file from a network machine that uses the Xmodem or Ymodem protocol. SSH File Transfer Protocol (SFTP) is also another option to copy switch configuration or image files. For more information, refer the *Configuring SSH File Transfer Protocol* chapter of the *Security Configuration Guide*.

Network file system URLs include ftp:, rcp:, tftp:, scp:, http:, and https: and have these syntaxes:

• FTP-ftp:[[//username [:password]@location]/directory]/filename

- RCP-rcp:[[//username@location]/directory]/filename
- TFTP-tftp:[[//location]/directory]/filename
- SCP—scp:[[//username [:password]@location]/directory]/filename
- HTTP-http:[[//username [:password]@location]/directory]/filename
- HTTPS—https:[[//username [:password]@location]/directory]/filename



Note

The password must not contain the special character '@'. If the character '@' is used, the copy fails to parse the IP address of the server.

Local writable file systems include flash:.

Some invalid combinations of source and destination exist. Specifically, you cannot copy these combinations:

- From a running configuration to a running configuration
- From a startup configuration to a startup configuration

### Copying Files from One Device in a Stack to Another Device in the Same Stack

To copy a file from one device in a stack to another device in the same stack, use the **flash-X**: notation, where **X** is the device number.

To view all devices in a stack, use the **show switch** command in privileged EXEC mode, as in the following example of a 9-member device stack:

```
Device# show switch
Switch/Stack Mac Address : 0006.f6b9.b580 - Local Mac Address Mac persistency wait time:
Indefinite
                                                           H/W Current
Switch# Role Mac Address Priority Version State
                     _____
*1
          Active 0006.f6b9.b580 15 P3B
                                                                    Readv
 2
          Standby 0006.f6ba.0c80 14 P3B Ready

        Member
        0006.f6ba.3300
        7
        P3B
        Ready

        Member
        0006.f6b9.df80
        6
        P3B
        Ready

        Member
        0006.f6ba.3880
        13
        P1A
        Ready

        Member
        1ce6.c7b6.ef00
        4
        PP
        Ready

 3
 4
 5
 6
                                               ч
З
          Member 2037.06ce.2580
 7
                                                        P2A
                                                                    Readv
         Member 2037.0653.7e00 2
                                                        P5A
 8
                                                                    Readv
          Member 2037.0653.9280 1
                                                        P5B
 9
                                                                    Ready
```

To view all devices in a stack, use the **show switch** command in privileged EXEC mode, as in the following example of a 8-member device stack:

Device# show switch Switch/Stack Mac Address : 046c.9d01.3b80 - Local Mac Address Mac persistency wait time: 4 mins H/W Current Switch# Role Mac Address Priority Version State \*1 Active 046c.9d01.3b80 15 P4B Ready 2 Standby 046c.9d01.0f80 13 P3C Ready

3	Member	046c.9d01.1180	11	P4B	Ready
4	Member	046c.9d01.0e80	9	P3C	Ready
5	Member	046c.9d01.4d00	7	P3C	Ready
6	Member	046c.9d01.2800	5	P3C	Ready
7	Member	046c.9d01.6e80	3	P4B	Ready
8	Member	046c.9d01.8180	1	P4B	Ready

To view all file systems available to copy on a specific device, use the **copy** command as in the following example of a 5-member stack:

```
Device# copy flash:?
flash:.installer
flash:.prst sync
flash:.rollback timer
flash:boothelper.log
flash:bootloader evt handle.log
flash:cat9k-cc srdriver.16.05.01a.SPA.pkg
flash:cat9k-espbase.16.05.01a.SPA.pkg
flash:cat9k-guestshell.16.05.01a.SPA.pkg
flash:cat9k-rpbase.16.05.01a.SPA.pkg
flash:cat9k-rpboot.16.05.01a.SPA.pkg
flash:cat9k-sipbase.16.05.01a.SPA.pkg
flash:cat9k-sipspa.16.05.01a.SPA.pkg
flash:cat9k-srdriver.16.05.01a.SPA.pkg
flash:cat9k-webui.16.05.01a.SPA.pkg
flash:cat9k-wlc.16.05.01a.SPA.pkg
flash:core
flash:dc profile dir
flash:dc_stats.txt
flash:gs script
flash:nvram config
flash:packages.conf
```

This example shows how to copy a config file stored in the flash partition of device 2 to the flash partition of device 4. It assumes that device 2 and device 4 are in the same stack.

Device# copy flash-2:config.txt flash-4:config.txt

### **Deleting Files**

When you no longer need a file on a flash memory device, you can permanently delete it. To delete a file or directory from a specified flash device, use the **delete** [/force] [/recursive] [filesystem:]/file-url privileged EXEC command.

Use the **/recursive** keyword for deleting a directory and all subdirectories and the files contained in it. Use the **/force** keyword to suppress the prompting that confirms a deletion of each file in the directory. You are prompted only once at the beginning of this deletion process. Use the **/force** and **/recursive** keywords for deleting old software images that were installed by using the **archive download-sw** command but are no longer needed.

If you omit the *filesystem:* option, the device uses the default device specified by the **cd** command. For *file-url*, you specify the path (directory) and the name of the file to be deleted.

When you attempt to delete any files, the system prompts you to confirm the deletion.

Caution

n When files are deleted, their contents cannot be recovered.

This example shows how to delete the file myconfig from the default flash memory device:

Device# delete myconfig

## **Creating, Displaying and Extracting Files**

You can create a file and write files into it, list the files in a file, and extract the files from a file as described in the next sections.

Beginning in privileged EXEC mode, follow these steps to create a file, display the contents, and extract it:

#### **SUMMARY STEPS**

- 1. archive tar /create destination-url flash: /file-url
- 2. archive tar /table source-url
- 3. archive tar /xtract source-url flash:/file-url [dir/file...]
- 4. more [/ascii |/binary |/ebcdic] /file-url

#### **DETAILED STEPS**

	Command or Action	Purpose
Step 1	archive tar /create destination-url flash: /file-url	Creates a file and adds files to it.
	<b>Example:</b> device# archive tar /create tftp:172.20.10.30/saved. flash:/new-configs	For destination-url, specify the destination URL alias for the local or network file system and the name of the file to create: • Local flash file system syntax:
		flash: • FTP syntax:
		<pre>ftp:[[//username[:password]@location]/directory]/-filename.</pre> <ul> <li>RCP syntax:</li> </ul>
		<pre>rcp:[[//username@location]/directory]/-filename.</pre> <ul> <li>TFTP syntax:</li> </ul>
		tftp:[[//location]/directory]/-filename.
		For <b>flash:</b> / <i>file-url</i> , specify the location on the local flash file system in which the new file is created. You can also specify an optional list of files or directories within the source directory to add to the new file. If none are specified, all files and directories at this level are written to the newly created file.
Step 2	archive tar /table source-url	Displays the contents of a file.
	<b>Example:</b> device# archive tar /table flash: /new_configs	<ul> <li>For <i>source-url</i>, specify the source URL alias for the local or network file system. The <i>-filename</i>. is the file to display. These options are supported:</li> <li>Local flash file system syntax:</li> </ul>

	Command or Action	Purpose
		flash: • FTP syntax:
		<pre>ftp:[[//username[:password]@location]/directory]/-filename.</pre> <ul> <li>RCP syntax:</li> </ul>
		<pre>rcp:[[//username@location]/directory]/-filename.</pre> • TFTP syntax:
		<b>tftp</b> :[[//location]/directory]/-filename.
		You can also limit the file displays by specifying a list of files or directories after the file. Only those files appear. If none are specified, all files and directories appear.
Step 3	archive tar /xtract source-url flash:/file-url [dir/file]	Extracts a file into a directory on the flash file system.
	<b>Example:</b> device# archive tar /xtract	For <i>source-url</i> , specify the source URL alias for the local file system. The <i>-filename</i> . is the file from which to extract files. These options are supported:
	tftp:/172.20.10.30/saved. flash:/new-configs	• Local flash file system syntax:
		flash: • FTP syntax:
		<pre>ftp:[[//username[:password]@location]/directory]/-filename.</pre> <ul> <li>RCP syntax:</li> </ul>
		<pre>rcp:[[//username@location]/directory]/-filename.</pre> <ul> <li>TFTP syntax:</li> </ul>
		tftp:[[//location]/directory]/-filename.
		For <b>flash:</b> / <i>file-url</i> [ <i>dir/file</i> ], specify the location on the local flash file system from which the file is extracted. Use the <i>dir/file</i> option to specify a list of files or directories within the file to be extracted. If none are specified, all files and directories are extracted.
Step 4	more [ /ascii   /binary   /ebcdic] /file-url Example:	Displays the contents of any readable file, including a file on a remote file system.
	device# more flash:/new-configs	
	1	1

# **Additional References for Flash File System**

### **Related Documents**

Related Topic	Document Title
Commands for managing flash: file systems	Cisco IOS Configuration Fundamentals Command Reference

#### Standards

Standards	Title
No new or modified standards are supported by this feature, and support for existing standards has no been modified by this feature.	

### MIBs

MIBs	MIBs Link
No new or modified MIBs are supported by this feature, and support for existing MIBs has not been modified by this feature.	To locate and download MIBs for selected platforms, Cisco IOS releases, and feature sets, use Cisco MIB Locator found at the following URL: http://www.cisco.com/go/mibs

### RFCs

RFCs	Title
No new or modified RFCs are supported by this feature, and support for existing RFCs has not been modified by this feature.	

### **Technical Assistance**

Description	Link
The Cisco Support website provides extensive online resources, including documentation and tools for troubleshooting and resolving technical issues with Cisco products and technologies.	http://www.cisco.com/cisco/web/support/index.html
To receive security and technical information about your products, you can subscribe to various services, such as the Product Alert Tool (accessed from Field Notices), the Cisco Technical Services Newsletter, and Really Simple Syndication (RSS) Feeds.	
Access to most tools on the Cisco Support website requires a Cisco.com user ID and password.	

# **Feature History for Flash File System**

This table provides release and related information for features explained in this module.

These features are available on all releases subsequent to the one they were introduced in, unless noted otherwise.

Release	Feature	Feature Information
Cisco IOS XE Fuji 16.9.2	Flash File System	The flash file system is a single flash device on which you can store files. It also provides several commands to help you manage software bundles and configuration files.

Use Cisco Feature Navigator to find information about platform and software image support. To access Cisco Feature Navigator, go to http://www.cisco.com/go/cfn.