



Upgrading the Switch Software

- [Finding the Software Version, on page 1](#)
- [Software Images, on page 1](#)
- [Automatic Boot Loader Upgrade, on page 1](#)
- [Software Installation Commands, on page 2](#)
- [Upgrading in Install Mode, on page 2](#)
- [Downgrading in Install Mode, on page 7](#)

Finding the Software Version

The package files for the Cisco IOS XE software are stored on the system board flash device (flash:).

You can use the **show version** privileged EXEC command to see the software version that is running on your switch.



Note Although the **show version** output always shows the software image running on the switch, the model name shown at the end of this display is the factory configuration and does not change if you upgrade the software license.

You can also use the **dir filesystem:** privileged EXEC command to see the directory names of other software images that you might have stored in flash memory.

Software Images

Release	Image Type	File Name
Cisco IOS XE Dublin 17.11.1	CAT9K_LITE_IOSXE	cat9k_lite_iosxe.17.11.01.SPA.bin

Automatic Boot Loader Upgrade

When you upgrade from the existing release on your switch to a later or newer release for the first time, the boot loader may be automatically upgraded, based on the hardware version of the switch. If the boot loader

is automatically upgraded, it will take effect on the next reload. If you go back to the older release after this, the boot loader is not downgraded. The updated boot loader supports all previous releases.



Caution Do not power cycle your switch during the upgrade.

Software Installation Commands

Summary of Software Installation Commands	
To install and activate the specified file, and to commit changes to be persistent across reloads: install add file <i>filename</i> [activate commit]	
To separately install, activate, commit, cancel, or remove the installation file: install ?	
add file tftp: <i>filename</i>	Copies the install file package from a remote location to the device and performs a compatibility check for the platform and image versions.
activate [auto-abort-timer]	Activates the file, and reloads the device. The auto-abort-timer keyword automatically rolls back image activation.
commit	Makes changes persistent over reloads.
rollback to committed	Rolls back the update to the last committed version.
abort	Cancels file activation, and rolls back to the version that was running before the current installation procedure started.
remove	Deletes all unused and inactive software installation files.

Upgrading in Install Mode

Follow these instructions to upgrade from one release to another, in install mode. To perform a software image upgrade, you must be booted into IOS through **boot flash:packages.conf**.

Before you begin

Note that you can use this procedure for the following upgrade scenarios:

When upgrading from ...	To...
Cisco IOS XE Dublin 17.10.x or earlier releases	Cisco IOS XE Dublin 17.11.x

The sample output in this section displays upgrade from Cisco IOS XE Dublin 17.10.1 to Cisco IOS XE Dublin 17.11.1 using **install** commands only.

Procedure

Step 1

Clean-up

install remove inactive

Use this command to clean-up old installation files in case of insufficient space and to ensure that you have at least 1GB of space in flash, to expand a new image.

The following sample output displays the cleaning up of unused files, by using the **install remove inactive** command:

```
Switch# install remove inactive
install_remove: START Mon Mar 27 17:46:18 IST 2023
Cleaning up unnecessary package files
No path specified, will use booted path flash:packages.conf
Cleaning flash:
  Scanning boot directory for packages ... done.
  Preparing packages list to delete ...
    cat9k_lite-rpbase.17.10.01.SPA.pkg
      File is in use, will not delete.
    cat9k_lite-rpboot.17.10.01.SPA.pkg
      File is in use, will not delete.
    cat9k_lite-srdriver.17.10.01.SPA.pkg
      File is in use, will not delete.
    cat9k_lite-webui.17.10.01.SPA.pkg
      File is in use, will not delete.
  packages.conf
      File is in use, will not delete.
done.

The following files will be deleted:
[switch 1]:
/flash/cat9k_lite_iosxe.17.10.01.SPA.bin

Do you want to remove the above files? [y/n]y

[switch 1]:
Deleting file flash:cat9k_lite_iosxe.17.10.01.SPA.bin ... done.
SUCCESS: Files deleted.
--- Starting Post_Remove_Cleanup ---
Performing Post_Remove_Cleanup on all members
  [1] Post_Remove_Cleanup package(s) on switch 1
  [1] Finished Post_Remove_Cleanup on switch 1
Checking status of Post_Remove_Cleanup on [1]
Post_Remove_Cleanup: Passed on [1]
Finished Post_Remove_Cleanup
SUCCESS: install_remove Mon Mar 27 17:47:20 IST 2023
Switch#
```

Step 2

Copy new image to flash

a) **copy tftp:[//location]/directory/filenameflash:**

Use this command to copy the new image from a TFTP server to flash memory. The location is either an IP address or a host name. The filename is specified relative to the directory used for file transfers. Skip this step if you want to use the new image from a TFTP server.

```
Switch# copy tftp://10.8.0.6/image/cat9k_lite_iosxe.17.11.01.SPA.bin flash:

Destination filename [cat9k_lite_iosxe.17.11.01.SPA.bin]?
Accessing tftp://10.8.0.6//cat9k_lite_iosxe.17.11.01.SPA.bin...
```

```

Loading /cat9k_lite_iosxe.17.11.01.SPA.bin from 10.8.0.6 (via GigabitEthernet0/0):
!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!
[OK - 601216545 bytes]

601216545 bytes copied in 50.649 secs (11870255 bytes/sec)

```

b) **dir flash:**

Use this command to confirm that the image has been successfully copied to flash.

```

Switch# dir flash:*.bin
Directory of flash:/*.bin

Directory of flash:/

434184 -rw- 601216545 Mar 27 2023 10:18:11 -07:00 cat9k_lite_iosxe.17.11.01.SPA.bin
11353194496 bytes total (8976625664 bytes free)

```

Step 3 Set boot variable

a) **boot system flash:packages.conf**

Use this command to set the boot variable to **flash:packages.conf**.

```
Switch(config)# boot system flash:packages.conf
```

b) **no boot manual**

Use this command to configure the switch to auto-boot.

```
Switch(config)# no boot manual
Switch(config)# exit
```

c) **write memory**

Use this command to save boot settings.

```
Switch# write memory
```

d) **show boot**

Use this command to verify the boot variable (packages.conf) and manual boot setting (no):

```

Switch# show boot
-----
Switch 3
-----
Current Boot Variables:
BOOT variable = flash:packages.conf;

Boot Variables on next reload:
BOOT variable = flash:packages.conf;
Manual Boot = no
Enable Break = yes
Boot Mode = DEVICE
iPXE Timeout = 0

```

Step 4 Install image to flash

install add file activate commit

Use this command to install the image.

We recommend that you point to the source image on your TFTP server or the flash drive of the switch, if you have copied the image to flash memory.

The following sample output displays installation of the Cisco IOS XE Dublin 17.11.1 software image in the flash memory:

```
Switch# install add file flash:cat9k_lite_iosxe.17.11.01.SPA.bin activate commit
install_add_activate_commit: START Mon Mar 27 12:51:55 IST 2023
Mar 27 12:51:57.795: %INSTALL-5-INSTALL_START_INFO: R0/0: install_engine: Started install
one-shot flash:cat9k_lite_iosxe.17.11.01.SPA.bin
install_add_activate_commit: Adding PACKAGE
install_add_activate_commit: Checking whether new add is allowed ....

--- Starting initial file syncing ---
Info: Finished copying flash:cat9k_lite_iosxe.17.11.01.SPA.bin to the selected switch(es)
Finished initial file syncing

--- Starting Add ---
Performing Add on all members
  [1] Add package(s) on switch 1
  [1] Finished Add on switch 1
Checking status of Add on [1]
Add: Passed on [1]
Finished Add

Image added. Version: 17.11.01.0.276
install_add_activate_commit: Activating PACKAGE

gzip: initramfs.cpio.gz: decompression OK, trailing garbage ignored
Following packages shall be activated:
/flash/cat9k_lite-webui.17.11.01.SPA.pkg
/flash/cat9k_lite-srdriver.17.11.01.SPA.pkg
/flash/cat9k_lite-rpboot.17.11.01.SPA.pkg
/flash/cat9k_lite-rpbase.17.11.01.SPA.pkg

This operation may require a reload of the system. Do you want to proceed? [y/n]y

--- Starting Activate ---
Performing Activate on all members
Mar 27 13:03:24.337: %INSTALL-5-INSTALL_AUTO_ABORT_TIMER_PROGRESS: R0/0: rollback_timer:
Install auto abort timer will expire in 7200 seconds
  [1] Activate package(s) on switch 1
    --- Starting list of software package changes ---
    Old files list:
      Removed cat9k_lite-rpbase.17.10.01.SPA.pkg
      Removed cat9k_lite-rpboot.17.10.01.SPA.pkg
      Removed cat9k_lite-srdriver.17.10.01.SPA.pkg
      Removed cat9k_lite-webui.17.10.01.SPA.pkg
    New files list:
      Added cat9k_lite-rpbase.17.11.01.SPA.pkg
      Added cat9k_lite-rpboot.17.11.01.SPA.pkg
      Added cat9k_lite-srdriver.17.11.01.SPA.pkg
      Added cat9k_lite-webui.17.11.01.SPA.pkg
    Finished list of software package changes
  [1] Finished Activate on switch 1
Checking status of Activate on [1]
Activate: Passed on [1]
Finished Activate

*Mar 27 13:03:24.298 IST: %INSTALL-5-INSTALL_AUTO_ABORT_TIMER_PROGRESS: Switch 1 R0/0:
rollback_timer: Install auto abort timer will expire in 7200 seconds--- Starting Commit ---
Performing Commit on all members
  [1] Commit package(s) on switch 1
  [1] Finished Commit on switch 1
```

```
Checking status of Commit on [1]
Commit: Passed on [1]
Finished Commit
```

```
Install will reload the system now!
SUCCESS: install_add_activate_commit Mon Mar 27 13:04:23 IST 2023
Mar 27 13:04:24.586: %INSTALL-5-INSTALL_COMPLETED_INFO: R0/0: install_engine: Completed
install one-shot PACKAGE flash:cat9k_lite_iosxe.17.11.01.SPA.bin
```

Note The system reloads automatically after executing the **install add file activate commit** command. You do not have to manually reload the system.

Step 5 Verify installation

After the software has been successfully installed, use this command to verify that the flash partition has four new `.pkg` files and two `.conf` files.

a) `dir flash:*.pkg`

The following is sample output of the `dir flash:*.pkg` command:

```
Switch# dir flash:*.pkg

Directory of flash:/*.pkg
Directory of flash:/
48582 -rw- 298787860 Nov 14 2022 05:13:32 +00:00 cat9k_lite-rpbase.17.10.01.SPA.pkg
48585 -rw- 35713901 Nov 14 2022 05:14:12 +00:00 cat9k_lite-rpboot.17.10.01.SPA.pkg
48583 -rw- 4252692 Nov 14 2022 05:13:33 +00:00 cat9k_lite-srdriver.17.10.01.SPA.pkg
48584 -rw- 8119312 Nov 14 2022 05:13:34 +00:00 cat9k_lite-webui.17.10.01.SPA.pkg

16640 -rw- 301188116 Mar 27 2023 05:33:25 +00:00 cat9k_lite-rpbase.17.11.01.SPA.pkg
16647 -rw- 35112025 Mar 27 2023 05:34:06 +00:00 cat9k_lite-rpboot.17.11.01.SPA.pkg
16642 -rw- 4326420 Mar 27 2023 05:33:25 +00:00 cat9k_lite-srdriver.17.11.01.SPA.pkg
16643 -rw- 8328208 Mar 27 2023 05:33:25 +00:00 cat9k_lite-webui.17.11.01.SPA.pkg
```

b) `dir flash:*.conf`

The following is sample output of the `dir flash:*.conf` command. It displays the `.conf` files in the flash partition; note the two `.conf` files:

- `packages.conf`—the file that has been re-written with the newly installed `.pkg` files
- `cat9k_lite_iosxe.17.11.01.SPA.conf`— a backup copy of the newly installed `packages.conf` file

```
Switch# dir flash:*.conf

Directory of flash:/*.conf
Directory of flash:/

16631 -rw- 4882 Mar 27 2023 05:39:42 +00:00 packages.conf
16634 -rw- 4882 Mar 27 2023 05:34:06 +00:00 cat9k_lite_iosxe.17.11.01.SPA.conf
```

Step 6 Reload and verify version

a) `reload`

Use this command to reload the switch. When you boot the new image, the boot loader is automatically updated, but the new bootloader version is not displayed in the output until the next reload.

```
Switch# reload
```

b) `show version`

After the image boots up, use this command to verify the version of the new image.

The following sample output of the **show version** command displays the Cisco IOS XE Dublin 17.11.1 image on the device:

```
Switch# show version

Cisco IOS XE Software, Version 17.11.01
Cisco IOS Software [Dublin], Catalyst L3 Switch Software (CAT9K_LITE_IOSXE), Version
17.11.1, RELEASE SOFTWARE (fcl)
Technical Support: http://www.cisco.com/techsupport
Copyright (c) 1986-2023 by Cisco Systems, Inc.
Compiled Mon 27-Mar-23 19:57 by mcpre
<output truncated>
```

Downgrading in Install Mode

Follow these instructions to downgrade from one release to another, in install mode. To perform a software image downgrade, you must be booted into IOS through **boot flash:packages.conf**.

Before you begin

Note that you can use this procedure for the following downgrade scenarios:

When downgrading from ...	To ...
Cisco IOS XE Dublin 17.11.x	Cisco IOS XE Dublin 17.10.x or earlier releases.



Note New switch models that are introduced in a release cannot be downgraded. The release in which a switch model is introduced is the minimum software version for that model.

The sample output in this section shows downgrade from Cisco IOS XE Dublin 17.11.1 to Cisco IOS XE Dublin 17.10.1, using **install** commands.

Procedure

Step 1

Clean-up

install remove inactive

Use this command to clean-up old installation files in case of insufficient space and to ensure that you have at least 1GB of space in flash, to expand a new image.

The following sample output displays the cleaning up of unused files, by using the **install remove inactive** command:

```
Switch# install remove inactive
install_remove: START Mon Mar 13 17:46:18 IST 2023
Cleaning up unnecessary package files
No path specified, will use booted path flash:packages.conf
Cleaning flash:
```

```

Scanning boot directory for packages ... done.
Preparing packages list to delete ...
  cat9k_lite-rpbase.17.11.01.SPA.pkg
    File is in use, will not delete.
  cat9k_lite-rpboot.17.11.1.SPA.pkg
    File is in use, will not delete.
  cat9k_lite-srdriver.17.11.1.SPA.pkg
    File is in use, will not delete.
  cat9k_lite-webui.17.11.1.SPA.pkg
    File is in use, will not delete.
  packages.conf
    File is in use, will not delete.
done.

The following files will be deleted:
[switch 1]:
/flash/cat9k_lite_iosxe.17.11.1.SPA.bin

Do you want to remove the above files? [y/n]y
[switch 1]:
Deleting file flash:cat9k_lite_iosxe.17.11.1.SPA.bin ... done.
SUCCESS: Files deleted.
--- Starting Post_Remove_Cleanup ---
Performing Post_Remove_Cleanup on all members
  [1] Post_Remove_Cleanup package(s) on switch 1
  [1] Finished Post_Remove_Cleanup on switch 1
Checking status of Post_Remove_Cleanup on [1]
Post_Remove_Cleanup: Passed on [1]
Finished Post_Remove_Cleanup

SUCCESS: install_remove  Mon Mar 13 17:47:20 IST 2023
Switch#

```

Step 2 Copy new image to flash

a) **copy tftp:[[/location]/directory]/filenameflash:**

Use this command to copy the new image from a TFTP server to flash memory. The location is either an IP address or a host name. The filename is specified relative to the directory used for file transfers. Skip this step if you want to use the new image from a TFTP server.

```

Switch# copy tftp://10.8.0.6/image/cat9k_lite_iosxe.17.10.1.SPA.bin flash:

Destination filename [cat9k_lite_iosxe.17.10.1.SPA.bin]?
Accessing tftp://10.8.0.6/cat9k_lite_iosxe.17.10.1.SPA.bin...
Loading /cat9k_lite_iosxe.17.10.1.SPA.bin from 10.8.0.6 (via GigabitEthernet0/0):
!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!
[OK - 508584771 bytes]
508584771 bytes copied in 101.005 secs (5035244 bytes/sec)

```

b) **dir flash:**

Use this command to confirm that the image has been successfully copied to flash.

```

Switch# dir flash:*.bin
Directory of flash:/*.bin

Directory of flash:/

434184 -rw- 508584771 Mon Mar 13 2023 13:35:16 -07:00 cat9k_lite_iosxe.17.10.1.SPA.bin
11353194496 bytes total (9055866880 bytes free)

```


Step 3 Set boot variablea) **boot system flash:packages.conf**

Use this command to set the boot variable to **flash:packages.conf**.

```
Switch(config)# boot system flash:packages.conf
```

b) **no boot manual**

Use this command to configure the switch to auto-boot.

```
Switch(config)# no boot manual
Switch(config)# exit
```

c) **write memory**

Use this command to save boot settings.

```
Switch# write memory
```

d) **show boot**

Use this command to verify the boot variable (packages.conf) and manual boot setting (no):

```
Switch# show boot
-----
Switch 3
-----
Current Boot Variables:
BOOT variable = flash:packages.conf;

Boot Variables on next reload:
BOOT variable = flash:packages.conf;
Manual Boot = no
Enable Break = yes
Boot Mode = DEVICE
iPXE Timeout = 0
```

Step 4 Downgrade software image**install add file activate commit**

Use this command to install the image.

We recommend that you point to the source image on your TFTP server or the flash drive of the switch, if you have copied the image to flash memory.

The following example displays the installation of the Cisco IOS XE Dublin 17.10.1 software image to flash, by using the **install add file activate commit** command.

```
Switch# install add file flash:cat9k_lite_iosxe.17.10.01.SPA.bin activate commit activate
commit

install_add_activate_commit: START Mon Mar 13 13:17:28 IST 2023
install_add_activate_commit: Adding PACKAGE
install_add_activate_commit: Checking whether new add is allowed ....

--- Starting initial file syncing ---
Info: Finished copying flash:cat9k_lite_iosxe.17.10.01.SPA.bin to the selected switch(es)
Finished initial file syncing

--- Starting Add ---
Performing Add on all members
  [1] Add package(s) on switch 1
  [1] Finished Add on switch 1
```

```

Checking status of Add on [1]
Add: Passed on [1]
Finished Add

Image added. Version: 17.10.01.0.203
install_add_activate_commit: Activating PACKAGE

gzip: initramfs.cpio.gz: decompression OK, trailing garbage ignored
Following packages shall be activated:
/flash/cat9k_lite-webui.17.10.01.SPA.pkg
/flash/cat9k_lite-srdriver.17.10.01.SPA.pkg
/flash/cat9k_lite-rpboot.17.10.01.SPA.pkg
/flash/cat9k_lite-rpbase.17.10.01.SPA.pkg

This operation may require a reload of the system. Do you want to proceed? [y/n]
--- Starting Activate ---
Performing Activate on all members
Mar 13 13:29:31.133: %INSTALL-5-INSTALL_AUTO_ABORT_TIMER_PROGRESS: R0/0: rollback_timer:
Install auto abort timer will expire in 7200 seconds

*Mar 13 13:29:31.093 IST: %INSTALL-5-INSTALL_AUTO_ABORT_TIMER_PROGRESS: Switch 1 R0/0:
rollback_timer: Install auto abort timer will expire in 7200 seconds [1] Activate package(s)
on switch 1
--- Starting list of software package changes ---
Old files list:
  Removed cat9k_lite-rpbase.17.11.01.SPA.pkg
  Removed cat9k_lite-rpboot.17.11.01.SPA.pkg
  Removed cat9k_lite-srdriver.17.11.01.SPA.pkg
  Removed cat9k_lite-webui.17.11.01.SPA.pkg
New files list:
  Added cat9k_lite-rpbase.17.10.01.SPA.pkg
  Added cat9k_lite-rpboot.17.10.01.SPA.pkg
  Added cat9k_lite-srdriver.17.10.01.SPA.pkg
  Added cat9k_lite-webui.17.10.01.SPA.pkg
Finished list of software package changes
[1] Finished Activate on switch 1
Checking status of Activate on [1]
Activate: Passed on [1]
Finished Activate

--- Starting Commit ---
Performing Commit on all members
  [1] Commit package(s) on switch 1
  [1] Finished Commit on switch 1
Checking status of Commit on [1]
Commit: Passed on [1]
Finished Commit

Send model notification for install_add_activate_commit before reload
Install will reload the system now!
SUCCESS: install_add_activate_commit Mon Mar 13 13:30:52 IST 2023
Mar 13 13:30:53.573: %INSTALL-5-INSTALL_COMPLETED_INFO: R0/0: install_engine: Completed
install one-shot PACKAGE flash:cat9k_lite_iosxe.17.10.01.SPA.bin
Mar 13 13:30:53.573 %INSTALL-5-INSTALL_COMPLETED_INFO: R0/0: install_engine: Completed
install one-shot PACKAGE flash:cat9k_lite_iosxe.17.10.01.SPA.bin

switch3#
Chassis 1 reloading, reason - Reload command

*Mar 13 13:30:53.529 IST: %INSTALL-5-INSTALL_COMPLETED_INFO: Switch 1 R0/0: install_engine:
Completed install one-shot PACKAGE flash:cat9k_lite_iosxe.17.10.01.SPA.bin
*Mar 13 13:30:54.526 IST: %STACKMGR-1-RELOAD: Switch 1 R0/0: stack_mgr: Reloading due to
reason Reload command Mar 13 13:30:58.121: %PMAN-5-EXITACTION: F0/0: pvp: Process manager
is exiting: reload fp actionrequested

```

```
Mar 13 13:31:01.303: %PMAN-5-EXITACTION: R0/0: pvp: Process manager is exiting: rp processes  
exit with reload switch code
```

Note The system reloads automatically after executing the **install add file activate commit** command. You do not have to manually reload the system.

Step 5 Verify version

show version

After the image boots up, use this command to verify the version of the new image.

Note When you downgrade the software image, the bootloader version does not downgrade. It remains updated.

The following sample output of the **show version** command displays the Cisco IOS XE Dublin 17.10.1 image on the device:

```
Switch# show version  
Cisco IOS XE Software, Version 17.10.01  
Cisco IOS Software [Dublin], Catalyst L3 Switch Software (CAT9K_LITE_IOSXE), Version 17.10.1,  
RELEASE SOFTWARE (fc2)  
Technical Support: http://www.cisco.com/techsupport  
Copyright (c) 1986-2023 by Cisco Systems, Inc.  
<output truncated>
```
