



# Configuring RadSec

---

This chapter describes how to configure RadSec over Transport Layer Security (TLS) and Datagram Transport Layer Security (DTLS) servers.

- [Restrictions for Configuring RadSec, on page 1](#)
- [Information About RadSec, on page 1](#)
- [How to Configure RadSec, on page 2](#)
- [Monitoring RadSec, on page 7](#)
- [Configuration Examples for RadSec, on page 7](#)
- [Feature History for Configuring RadSec, on page 8](#)

## Restrictions for Configuring RadSec

The following restrictions apply to the RadSec feature:

- A RADIUS client uses an ephemeral port as the source port. This source port should not be used for UDP, Datagram Transport Layer Security (DTLS), and Transport Layer Security (TLS) at the same time.
- Although there is no configuration restriction, we recommend that you use the same type, either only TLS or only DTLS, for a server under an AAA server group.
- RadSec is not supported on the DTLS port range 1 to 1024.  
DTLS ports must be configured to work with the Radius server.
- RadSec is not supported with high availability.

## Information About RadSec

RadSec provides encryption services over the RADIUS server, which is transported over a secure tunnel. RadSec over TLS and DTLS is implemented in both client and device servers. While the client side controls RADIUS AAA, the device side controls Change of Authorization (CoA).

You can configure the following parameters:

- Individual client-specific idle timeout, client trustpoint, and server trustpoint.
- Global CoA-specific TLS or DTLS listening port and the corresponding list of source interfaces.



**Note** You can disable TLS or DTLS for a specific server by using the **no tls** or **no dtls** command in radius server configuration mode.

# How to Configure RadSec

The following sections provide information about the various tasks that comprise RadSec configuration:

## Configuring RadSec over TLS

### Procedure

	Command or Action	Purpose
<b>Step 1</b>	<b>enable</b>  <b>Example:</b> Device> enable	Enables privileged EXEC mode.  • Enter your password, if prompted.
<b>Step 2</b>	<b>configure terminal</b>  <b>Example:</b> Device# configure terminal	Enters global configuration mode.
<b>Step 3</b>	<b>radius server radius-server-name</b>  <b>Example:</b> Device(config)# radius server R1	Specifies the name for the RADIUS server configuration for Protected Access Credential (PAC) provisioning, and enters RADIUS server configuration mode.
<b>Step 4</b>	<b>tls [connectiontimeout connection-timeout-value] [idletimeout idle-timeout-value] [[ip   ipv6] {radius source-interface interface-name   vrf forwarding forwarding-table-name} ] [match-server-identity {email-address email-address   hostname host-name   ip-address ip-address}] [port port-number] [retries number-of-connection-retries] [trustpoint {client trustpoint name   server trustpoint name}]</b>  <b>Example:</b> Device(config-radius-server)# tls connectiontimeout 10  Device(config-radius-server)# tls idletimeout 75  Device(config-radius-server)# tls retries 15	Configures the TLS parameters. You can configure the following parameters:  • <b>connectiontimeout</b> : Configures TLS connection timeout value. The default is 5 seconds. • <b>idletimeout</b> : Configures the TLS idle timeout value. The default is 60 seconds. • <b>ip</b> : Configures IP source parameters. • <b>ipv6</b> : Configures IPv6 source parameters. • <b>match-server-identity</b> : Configures RadSec certification validation parameters.  <b>Note</b> This is a mandatory configuration.  • <b>port</b> : Configures the TLS port number. The default is 2083.

	<b>Command or Action</b>	<b>Purpose</b>
	<pre>Device(config-radius-server)# tls ip radius source-interface GigabitEthernet 1/0/1  Device(config-radius-server)# tls ipv6 vrf forwarding table-1  Device(config-radius-server)# tls match-server-identity ip-address 10.1.1.10  Device(config-radius-server)# tls port 10  Device(config-radius-server)# tls trustpoint client TP-self-signed-721943660  Device(config-radius-server)# tls trustpoint server isetp</pre>	<ul style="list-style-type: none"> <li><b>retries:</b> Configures the number of TLS connection retries. The default is 5.</li> <li><b>trustpoint:</b> Configures the TLS trustpoint for a client and a server. If the TLS trustpoint for the client and server are the same, the trustpoint name should also be the same for both.</li> </ul>
<b>Step 5</b>	<b>end</b> <b>Example:</b> <pre>Device(config-radius-server)# end</pre>	Exits RADIUS server configuration mode and returns to privileged EXEC mode.

## Configuring Dynamic Authorization for TLS CoA

### Procedure

	<b>Command or Action</b>	<b>Purpose</b>
<b>Step 1</b>	<b>enable</b> <b>Example:</b> <pre>Device&gt; enable</pre>	Enables privileged EXEC mode. <ul style="list-style-type: none"> <li>Enter your password, if prompted.</li> </ul>
<b>Step 2</b>	<b>configure terminal</b> <b>Example:</b> <pre>Device# configure terminal</pre>	Enters global configuration mode.
<b>Step 3</b>	<b>aaa server radius dynamic-author</b> <b>Example:</b> <pre>Device(config)# aaa server radius dynamic-author</pre>	Enters dynamic authorization local server configuration mode and specifies the RADIUS client from which a device accepts Change of Authorization (CoA) and disconnect requests. Configures the device as an AAA server to facilitate interaction with an external policy server.
<b>Step 4</b>	<b>client {ip-addr   hostname} [tls [client-tp client-tp-name] [ idletimeout idletimeout-interval ] [server-key server-key] [server-tp server-tp-name]]]</b> <b>Example:</b> <pre>Device(config)# aaa server radius dynamic-author</pre>	Configures the IP address or hostname of the AAA server client. You can configure the following optional parameters: <ul style="list-style-type: none"> <li><b>tls:</b> Enables TLS for the client.</li> </ul>

	<b>Command or Action</b>	<b>Purpose</b>
	<pre>Device(config-locsvr-da-radius)# client 10.104.49.14 tls idletimeout 100 client-tp tls_ise server-tp tls_client server-key key1</pre>	<ul style="list-style-type: none"> <li>• <b>client-tp</b>: Configures the client trustpoint.</li> <li>• <b>idletimeout</b>: Configures the TLS idle timeout value.</li> <li>• <b>server-key</b>: Configures a RADIUS client server-key.</li> <li>• <b>server-tp</b>: Configures the server trustpoint.</li> </ul>
<b>Step 5</b>	<b>end</b> <b>Example:</b> <pre>Device(config-locsvr-da-radius)# end</pre>	Exits dynamic authorization local server configuration mode and returns to privileged EXEC mode.

## Configuring RadSec over DTLS

### Procedure

	<b>Command or Action</b>	<b>Purpose</b>
<b>Step 1</b>	<b>enable</b> <b>Example:</b> <pre>Device&gt; enable</pre>	Enables privileged EXEC mode. <ul style="list-style-type: none"> <li>• Enter your password, if prompted.</li> </ul>
<b>Step 2</b>	<b>configure terminal</b> <b>Example:</b> <pre>Device# configure terminal</pre>	Enters global configuration mode.
<b>Step 3</b>	<b>radius server radius-server-name</b> <b>Example:</b> <pre>Device(config)# radius server R1</pre>	Specifies the name for the RADIUS server configuration for Protected Access Credential (PAC) provisioning, and enters RADIUS server configuration mode.
<b>Step 4</b>	<b>dtls [connectiontimeout connection-timeout-value] [idletimeout idle-timeout-value] [[ip   ipv6] {radius source-interface interface-name   vrf forwarding forwarding-table-name} ] [match-server-identity {email-address email-address   hostname host-name   ip-address ip-address}] [port port-number] [retries number-of-connection-retries]</b>	Configures DTLS parameters. You can configure the following parameters: <ul style="list-style-type: none"> <li>• <b>connectiontimeout</b>: Configures the DTLS connection timeout value. The default is 5 seconds.</li> <li>• <b>idletimeout</b>: Configures the DTLS idle timeout value. The default is 60 seconds.</li> </ul>

	Command or Action	Purpose
	<p>[trustpoint {client <i>trustpoint name</i>   server <i>trustpoint name</i>}]</p> <p><b>Example:</b></p> <pre>Device(config-radius-server)# dtls connectiontimeout 10 Device(config-radius-server)# dtls idletimeout 75 Device(config-radius-server)# dtls retries 15 Device(config-radius-server)# dtls ip radius source-interface GigabitEthernet 1/0/1 Device(config-radius-server)# dtls ipv6 vrf forwarding table-1 Device(config-radius-server)# tls match-server-identity ip-address 10.1.1.10 Device(config-radius-server)# dtls port 10 Device(config-radius-server)# dtls trustpoint client TP-self-signed-721943660 Device(config-radius-server)# dtls trustpoint server isetp</pre>	<p><b>Note</b> When the idle timeout expires, and there are no transactions after the last idle timeout, then the DTLS session is closed. When the session is reestablished, restart the idle timer for it to work.</p> <p>If the configured idle timeout is 30 seconds, when the timeout expires, the number of RADIUS DTLS transactions are checked. If the RADIUS DTLS packets are more than 0, the transaction counter is reset and the timer is started again.</p> <ul style="list-style-type: none"> <li>• <b>ip</b>: Configures IP source parameters.</li> <li>• <b>ipv6</b>: Configures IPv6 source parameters.</li> <li>• <b>match-server-identity</b>: Configures RadSec certification validation parameters.</li> </ul> <p><b>Note</b> This is a mandatory configuration.</p> <ul style="list-style-type: none"> <li>• <b>port</b>: Configures the DTLS port number. The default is 2083.</li> <li>• <b>retries</b>: Configures the number of DTLS connection retries. The default is 5.</li> <li>• <b>trustpoint</b>: Configures the DTLS trustpoint for the client and the server. If the DTLS trustpoint for the client and server are the same, the trustpoint name should also be the same for both.</li> </ul>
<b>Step 5</b>	<p><b>end</b></p> <p><b>Example:</b></p> <pre>Device(config-radius-server)# end</pre>	Exits RADIUS server configuration mode and returns to privileged EXEC mode.

# Configuring Dynamic Authorization for DTLS CoA

## Procedure

	Command or Action	Purpose
<b>Step 1</b>	<b>enable</b>  <b>Example:</b> Device> enable	Enables privileged EXEC mode.  • Enter your password, if prompted.
<b>Step 2</b>	<b>configure terminal</b>  <b>Example:</b> Device# configure terminal	Enters global configuration mode.
<b>Step 3</b>	<b>aaa server radius dynamic-author</b>  <b>Example:</b> Device(config)# aaa server radius dynamic-author	Enters dynamic authorization local server configuration mode and specifies a RADIUS client from which a device accepts Change of Authorization (CoA) and disconnect requests. Configures the device as an AAA server to facilitate interaction with an external policy server.
<b>Step 4</b>	<b>client {ip-addr   hostname} [dtls [client-tp client-tp-name] [ idletimeout idletimeout-interval ] [server-key server-key] [server-tp server-tp-name]]]</b>  <b>Example:</b> Device(config-locsvr-da-radius)# client 10.104.49.14 dtls idletimeout 100 client-tp tls_ise server-tp tls_client server-key key1	Configures the IP address or hostname of the AAA server client. You can configure the following optional parameters:  • <b>tls</b> : Enables TLS for the client. • <b>client-tp</b> : Configures the client trustpoint. • <b>idletimeout</b> : Configures the TLS idle timeout value. • <b>server-key</b> : Configures a RADIUS client server-key. • <b>server-tp</b> : Configures the server trustpoint.
<b>Step 5</b>	<b>dtls {{ip   ipv6} radius source-interface interface-name   port radius-dtls-server-port-number}</b>  <b>Example:</b> Device(config-locsvr-da-radius)# dtls ip radius source-interface GigabitEthernet 1/0/24 Device(config-locsvr-da-radius)# dtls port 100	Configures the RADIUS CoA server. You can configure the following parameters:  • <b>{ip   ipv6} radius source-interface interface-name</b> : Specifies the interface for the source address in the RADIUS CoA server.  • <b>port radius-dtls-server-port-number</b> : Specifies the port on which the local DTLS RADIUS server listens.

	<b>Command or Action</b>	<b>Purpose</b>
<b>Step 6</b>	<b>end</b>  <b>Example:</b> Device (config-locsvr-da-radius) # end	Exits dynamic authorization local server configuration mode and returns to privileged EXEC mode.

## Monitoring RadSec

Use the following commands to monitor TLS and DTLS server statistics:

**Table 1: Monitoring TLS and DTLS Server Statistics Commands**

<b>Command</b>	<b>Purpose</b>
<b>show aaa servers</b>	Displays information related to TLS and DTLS servers.
<b>clear aaa counters servers radius {server id   all}</b>	Clears the RADIUS TLS-specific or DTLS-specific statistics.
<b>debug radius radsec</b>	Enables RADIUS RadSec debugs.

## Configuration Examples for RadSec

The following examples help you understand the RadSec configuration better:

### Example: Configuring RadSec over TLS

```
Device> enable
Device# configure terminal
Device(config)# radius server R1
Device(config-radius-server)# tls connectiontimeout 10
Device(config-radius-server)# tls idletimeout 75
Device(config-radius-server)# tls retries 15
Device(config-radius-server)# tls ip radius source-interface GigabitEthernet 1/0/1
Device(config-radius-server)# tls ip vrf forwarding table-1
Device(config-radius-server)# tls port 10
Device(config-radius-server)# tls trustpoint client TP-self-signed-721943660
Device(config-radius-server)# tls trustpoint server isetp
Device(config-radius-server)# end
```

### Example: Configuring Dynamic Authorization for TLS CoA

```
Device> enable
Device# configure terminal
Device(config)# aaa server radius dynamic-author
Device(config-locsvr-da-radius)# client 10.104.49.14 tls idletimeout 100
client-tp tls_ise server-tp tls_client
Device(config-locsvr-da-radius)# dtls port 100
```

**Example: Configuring RadSec over DTLS**

```

Device(config-locsvr-da-radius)# end

```

**Example: Configuring RadSec over DTLS**

```

Device> enable
Device# configure terminal
Device(config)# radius server R1
Device(config-radius-server)# dtls connectiontimeout 10
Device(config-radius-server)# dtls idletimeout 75
Device(config-radius-server)# dtls retries 15
Device(config-radius-server)# dtls ip radius source-interface GigabitEthernet 1/0/1
Device(config-radius-server)# dtls ip vrf forwarding table-1
Device(config-radius-server)# dtls port 10
Device(config-radius-server)# dtls trustpoint client TP-self-signed-721943660
Device(config-radius-server)# dtls trustpoint server isetp
Device(config-radius-server)# end

```

**Example: Configuring Dynamic Authorization for DTLS CoA**

```

Device> enable
Device# configure terminal
Device(config)# aaa server radius dynamic-author
Device(config-locsvr-da-radius)# client 10.104.49.14 dtls idletimeout 100
client-tp dtls_ise server-tp dtls_client
Device(config-locsvr-da-radius)# dtls ip radius source-interface GigabitEthernet 1/0/24
Device(config-locsvr-da-radius)# dtls port 100
Device(config-locsvr-da-radius)# end

```

**Feature History for Configuring RadSec**

This table provides release and related information for the features explained in this module.

These features are available in all the releases subsequent to the one they were introduced in, unless noted otherwise.

Release	Feature	Feature Information
Cisco IOS XE Bengaluru 17.4.1	Configuring RadSec	RadSec provides encryption services over the RADIUS server, which is transported over a secure tunnel.

Use the Cisco Feature Navigator to find information about platform and software image support. To access Cisco Feature Navigator, go to <http://www.cisco.com/go/cfn>.