



Configuring RadSec

This chapter describes how to configure RadSec over Transport Layer Security (TLS) and Datagram Transport Layer Security (DTLS) servers.

- [Restrictions for Configuring RadSec, on page 1](#)
- [Information About RadSec, on page 1](#)
- [How to Configure RadSec, on page 2](#)
- [Monitoring RadSec, on page 6](#)
- [Configuration Examples for RadSec, on page 7](#)
- [Feature History for Configuring RadSec, on page 8](#)

Restrictions for Configuring RadSec

The following restrictions apply to the RadSec feature:

- A RADIUS client uses an ephemeral port as the source port. This source port should not be used for UDP, Datagram Transport Layer Security (DTLS), and Transport Layer Security (TLS) at the same time.
- Although there is no configuration restriction, we recommend that you use the same type, either only TLS or only DTLS, for a server under an AAA server group.
- RadSec is supported only on IPv4 connections.

Information About RadSec

RadSec provides encryption services over the RADIUS server, which is transported over a secure tunnel. RadSec over TLS and DTLS is implemented in both client and device servers. While the client side controls RADIUS AAA, the device side controls Change of Authorization (CoA).

You can configure the following parameters:

- Individual client-specific idle timeout, client trustpoint, and server trustpoint.
- Global CoA-specific TLS or DTLS listening port and the corresponding list of source interfaces.



Note You can disable TLS or DTLS for a specific server by using the **no tls** or **no dtls** command in radius server configuration mode.

How to Configure RadSec

Configuring RadSec over TLS

Procedure

	Command or Action	Purpose
Step 1	enable Example: Device> enable	Enables privileged EXEC mode. <ul style="list-style-type: none"> • Enter your password, if prompted.
Step 2	configure terminal Example: Device# configure terminal	Enters global configuration mode.
Step 3	radius server <i>radius-server-name</i> Example: Device(config)# radius server R1	Specifies the name for the RADIUS server configuration for Protected Access Credential (PAC) provisioning, and enters RADIUS server configuration mode.
Step 4	tls [connectiontimeout <i>connection-timeout-value</i>] [idletimeout <i>idle-timeout-value</i>] [ip { radius source-interface <i>interface-name</i> vrf forwarding <i>forwarding-table-name</i> }] [port <i>port-number</i>] [retries <i>number-of-connection-retries</i>] [trustpoint { client <i>trustpoint name</i> server <i>trustpoint name</i> }] Example: Device(config-radius-server)# tls connectiontimeout 10 Device(config-radius-server)# tls idletimeout 75 Device(config-radius-server)# tls retries 15 Device(config-radius-server)# tls ip radius source-interface GigabitEthernet 1/0/1	Configures the TLS parameters. You can configure the following parameters: <ul style="list-style-type: none"> • connectiontimeout—Configures TLS connection timeout value. The default is 5 seconds. • idletimeout—Configures the TLS idle timeout value. The default is 60 seconds. • ip—Configures IP source parameters. • port—Configures the TLS port number. The default is 2083. • retries—Configures the number of TLS connection retries. The default is 5. • trustpoint—Configures the TLS trustpoint for a client and a server. If the TLS trustpoint for the client and server are the same, the trustpoint name should also be the same for both.

	Command or Action	Purpose
	<pre>Device(config-radius-server)# tls ip vrf forwarding table-1 Device(config-radius-server)# tls port 10 Device(config-radius-server)# tls trustpoint client TP-self-signed-721943660 Device(config-radius-server)# tls trustpoint server isetp</pre>	
Step 5	<p>end</p> <p>Example:</p> <pre>Device(config-radius-server)# end</pre>	Exits RADIUS server configuration mode and returns to privileged EXEC mode.

Configuring Dynamic Authorization for TLS CoA

Procedure

	Command or Action	Purpose
Step 1	<p>enable</p> <p>Example:</p> <pre>Device> enable</pre>	<p>Enables privileged EXEC mode.</p> <ul style="list-style-type: none"> • Enter your password, if prompted.
Step 2	<p>configure terminal</p> <p>Example:</p> <pre>Device# configure terminal</pre>	Enters global configuration mode.
Step 3	<p>aaa server radius dynamic-author</p> <p>Example:</p> <pre>Device(config)# aaa server radius dynamic-author</pre>	Enters dynamic authorization local server configuration mode and specifies the RADIUS client from which a device accepts Change of Authorization (CoA) and disconnect requests. Configures the device as an AAA server to facilitate interaction with an external policy server.
Step 4	<p>client {ip-addr hostname} [tls [client-tp client-tp-name] [idletimeout idletimeout-interval] [server-tp server-tp-name] vrf vrf-id]</p> <p>Example:</p> <pre>Device(config-locsvr-da-radius)# client 10.104.49.14 tls idletimeout 100 client-tp tls_ise server-tp tls_client</pre>	<p>Configures the IP address or hostname of the AAA server client. You can configure the following optional parameters:</p> <ul style="list-style-type: none"> • tls—Enables TLS for the client. • client-tp—Configures the client trustpoint. • idletimeout—Configures the TLS idle timeout value.

	Command or Action	Purpose
		<ul style="list-style-type: none"> • server-tp—Configures the server trustpoint. • vrf—Configures virtual routing and forwarding (VRF) ID of the client.
Step 5	end Example: Device(config-radius-server)# end	Returns from dynamic authorization local server configuration mode to privileged EXEC mode.

Configuring RadSec over DTLS

Procedure

	Command or Action	Purpose
Step 1	enable Example: Device> enable	Enables privileged EXEC mode. <ul style="list-style-type: none"> • Enter your password, if prompted.
Step 2	configure terminal Example: Device# configure terminal	Enters global configuration mode.
Step 3	radius server <i>radius-server-name</i> Example: Device(config)# radius server R1	Specifies the name for the RADIUS server configuration for Protected Access Credential (PAC) provisioning, and enters RADIUS server configuration mode.
Step 4	dtls [connectiontimeout <i>connection-timeout-value</i>] [idletimeout <i>idle-timeout-value</i>] [ip { radius source-interface <i>interface-name</i> vrf forwarding <i>forwarding-table-name</i> }] [port <i>port-number</i>] [retries <i>number-of-connection-retries</i>] [trustpoint { client <i>trustpoint name</i> server <i>trustpoint name</i> }] Example: Device(config-radius-server)# dtls connectiontimeout 10 Device(config-radius-server)# dtls idletimeout 75 Device(config-radius-server)# dtls retries 15	Configures DTLS parameters. You can configure the following parameters: <ul style="list-style-type: none"> • connectiontimeout—Configures the DTLS connection timeout value. The default is 5 seconds. • idletimeout—Configures the DTLS idle timeout value. The default is 60 seconds. • ip—Configures IP source parameters. • port—Configures the DTLS port number. The default is 2083. • retries—Configures the number of DTLS connection retries. The default is 5. • trustpoint—Configures the DTLS trustpoint for the client and the server. If

	Command or Action	Purpose
	<pre>Device(config-radius-server)# dtls ip radius source-interface GigabitEthernet 1/0/1 Device(config-radius-server)# dtls ip vrf forwarding table-1 Device(config-radius-server)# dtls port 10 Device(config-radius-server)# dtls trustpoint client TP-self-signed-721943660 Device(config-radius-server)# dtls trustpoint server isetp</pre>	the DTLS trustpoint for the client and server are the same, the trustpoint name should also be the same for both.
Step 5	<p>end</p> <p>Example:</p> <pre>Device(config-radius-server)# end</pre>	Exits RADIUS server configuration mode and returns to privileged EXEC mode.

Configuring Dynamic Authorization for DTLS CoA

Procedure

	Command or Action	Purpose
Step 1	<p>enable</p> <p>Example:</p> <pre>Device> enable</pre>	<p>Enables privileged EXEC mode.</p> <ul style="list-style-type: none"> • Enter your password, if prompted.
Step 2	<p>configure terminal</p> <p>Example:</p> <pre>Device# configure terminal</pre>	Enters global configuration mode.
Step 3	<p>aaa server radius dynamic-author</p> <p>Example:</p> <pre>Device(config)# aaa server radius dynamic-author</pre>	Enters dynamic authorization local server configuration mode and specifies a RADIUS client from which a device accepts Change of Authorization (CoA) and disconnect requests. Configures the device as an AAA server to facilitate interaction with an external policy server.
Step 4	<p>client {ip-addr hostname} [dtls [client-tp client-tp-name] [idletimeout idletimeout-interval] [server-tp server-tp-name] vrf vrf-id]</p> <p>Example:</p> <pre>Device(config-locsvr-da-radius)# client 10.104.49.14 dtls idletimeout 100 client-tp dtls_ise server-tp dtls_client</pre>	<p>Configures the IP address or hostname of the AAA server client. You can configure the following optional parameters:</p> <ul style="list-style-type: none"> • dtls—Enables DTLS for the client. • client-tp—Configures the client trustpoint.

	Command or Action	Purpose
		<ul style="list-style-type: none"> • idletimeout—Configures the DTLS idle timeout value. • server-tp—Configures the server trustpoint. • vrf—Configures virtual routing and forwarding (VRF) ID of the client.
Step 5	dtls {ip radius source-interface interface-name port radius-dtls-server-port-number} Example: <pre>Device(config-locsvr-da-radius)# dtls ip radius source-interface GigabitEthernet 1/0/24 Device(config-locsvr-da-radius)# dtls port 100</pre>	Configures the RADIUS CoA server. You can configure the following parameters: <ul style="list-style-type: none"> • ip radius source-interface interface-name—Specifies the interface for the source address in the RADIUS CoA server. • port radius-dtls-server-port-number—Specifies the port on which the local DTLS RADIUS server listens.
Step 6	end Example: <pre>Device(config-radius-server)# end</pre>	Returns from dynamic authorization local server configuration mode to privileged EXEC mode.

Monitoring RadSec

Use the following commands to monitor TLS and DTLS server statistics:

Table 1: Monitoring TLS and DTLS Server Statistics Commands

Command	Purpose
show aaa servers	Displays information related to TLS and DTLS servers.
clear aaa counters servers radius {server id all}	Clears the RADIUS TLS-specific or DTLS-specific statistics.
debug radius radsec	Enables RADIUS RadSec debugs.

Configuration Examples for RadSec

Example: Configuring RadSec over TLS

```
Device> enable
Device# configure terminal
Device(config)# radius server R1
Device(config-radius-server)# tls connectiontimeout 10
Device(config-radius-server)# tls idletimeout 75
Device(config-radius-server)# tls retries 15
Device(config-radius-server)# tls ip radius source-interface GigabitEthernet 1/0/1
Device(config-radius-server)# tls ip vrf forwarding table-1
Device(config-radius-server)# tls port 10
Device(config-radius-server)# tls trustpoint client TP-self-signed-721943660
Device(config-radius-server)# tls trustpoint server isetp
Device(config-radius-server)# end
```

Example: Configuring Dynamic Authorization for TLS CoA

```
Device> enable
Device# configure terminal
Device(config)# aaa server radius dynamic-author
Device(config-locsvr-da-radius)# client 10.104.49.14 tls idletimeout 100 client-tp tls_is_
server-tp tls_client
Device(config-locsvr-da-radius)# dtls port 100
Device(config-radius-server)# end
```

Example: Configuring RadSec over DTLS

```
Device> enable
Device# configure terminal
Device(config)# radius server R1
Device(config-radius-server)# dtls connectiontimeout 10
Device(config-radius-server)# dtls idletimeout 75
Device(config-radius-server)# dtls retries 15
Device(config-radius-server)# dtls ip radius source-interface GigabitEthernet 1/0/1
Device(config-radius-server)# dtls ip vrf forwarding table-1
Device(config-radius-server)# dtls port 10
Device(config-radius-server)# dtls trustpoint client TP-self-signed-721943660
Device(config-radius-server)# dtls trustpoint server isetp
Device(config-radius-server)# end
```

Example: Configuring Dynamic Authorization for DTLS CoA

```
Device> enable
Device# configure terminal
Device(config)# aaa server radius dynamic-author
Device(config-locsvr-da-radius)# client 10.104.49.14 dtls idletimeout 100 client-tp dtls_is_
server-tp dtls_client
Device(config-locsvr-da-radius)# dtls ip radius source-interface GigabitEthernet 1/0/24
Device(config-locsvr-da-radius)# dtls port 100
```

```
Device(config-radius-server)# end
```

Feature History for Configuring RadSec

This table provides release and related information for features explained in this module.

These features are available on all releases subsequent to the one they were introduced in, unless noted otherwise.

Release	Feature	Feature Information
Cisco IOS XE Everest 16.6.1	Configuring RadSec over DTLS	RadSec over DTLS provides encryption services over the RADIUS server, which is transported over a secure tunnel.
Cisco IOS XE Fuji 16.9.1	Configuring RadSec over TLS	RadSec over TLS provides encryption services over the RADIUS server, which is transported over a secure tunnel.

Use Cisco Feature Navigator to find information about platform and software image support. To access Cisco Feature Navigator, go to <http://www.cisco.com/go/cfn>.