



## Layer 2/3 Commands

---

- [channel-group](#), on page 3
- [channel-protocol](#), on page 6
- [clear lacp](#), on page 7
- [clear pagp](#), on page 8
- [clear spanning-tree counters](#), on page 9
- [clear spanning-tree detected-protocols](#), on page 10
- [debug etherchannel](#), on page 11
- [debug lacp](#), on page 12
- [debug pagp](#), on page 13
- [debug platform pm](#), on page 14
- [debug platform uddl](#), on page 15
- [debug spanning-tree](#), on page 16
- [interface port-channel](#), on page 18
- [lacp max-bundle](#), on page 20
- [lacp port-priority](#), on page 21
- [lacp rate](#), on page 22
- [lacp system-priority](#), on page 23
- [pagp learn-method](#), on page 24
- [pagp port-priority](#), on page 26
- [port-channel](#), on page 27
- [port-channel auto](#), on page 28
- [port-channel load-balance](#), on page 29
- [port-channel load-balance extended](#), on page 31
- [port-channel min-links](#), on page 32
- [rep admin vlan](#), on page 33
- [rep block port](#), on page 34
- [rep lsl-age-timer](#), on page 36
- [rep lsl-retries](#), on page 37
- [rep preempt delay](#), on page 38
- [rep preempt segment](#), on page 39
- [rep segment](#), on page 40
- [rep stcn](#), on page 42
- [show etherchannel](#), on page 43

- show interfaces rep detail, on page 46
- show lacp, on page 47
- show pagp, on page 51
- show platform etherchannel, on page 53
- show platform pm, on page 54
- show rep topology, on page 55
- show uddl, on page 57
- spanning-tree backbonefast, on page 61
- spanning-tree bpdupfilter, on page 62
- spanning-tree bpduguard, on page 64
- spanning-tree bridge assurance, on page 66
- spanning-tree cost, on page 67
- spanning-tree etherchannel guard misconfig, on page 69
- spanning-tree extend system-id, on page 71
- spanning-tree guard, on page 72
- spanning-tree link-type, on page 73
- spanning-tree loopguard default, on page 75
- spanning-tree mode, on page 76
- spanning-tree mst, on page 77
- spanning-tree mst configuration, on page 78
- spanning-tree mst forward-time, on page 80
- spanning-tree mst hello-time, on page 81
- spanning-tree mst max-age, on page 82
- spanning-tree mst max-hops, on page 83
- spanning-tree mst pre-standard, on page 84
- spanning-tree mst priority, on page 86
- spanning-tree mst root, on page 87
- spanning-tree mst simulate pvst global, on page 88
- spanning-tree pathcost method, on page 89
- spanning-tree port-priority, on page 90
- spanning-tree portfast edge bpdupfilter default, on page 92
- spanning-tree portfast edge bpduguard default, on page 94
- spanning-tree portfast default, on page 95
- spanning-tree transmit hold-count, on page 97
- spanning-tree uplinkfast, on page 98
- spanning-tree vlan, on page 99
- switchport, on page 102
- switchport access vlan, on page 104
- switchport mode, on page 105
- switchport nonegotiate, on page 107
- switchport voice vlan, on page 108
- uddl, on page 111
- uddl fast-hello, on page 113
- uddl port, on page 114
- uddl reset, on page 116

# channel-group

To assign an Ethernet port to an EtherChannel group, or to enable an EtherChannel mode, or both, use the **channel-group** command in interface configuration mode. To remove an Ethernet port from an EtherChannel group, use the **no** form of this command.

**channel-group** | *channel-group-number* **mode** {**active** | **auto** [**non-silent**] | **desirable** [**non-silent**] | **on** | **passive**}

**no channel-group**

## Syntax Description

<i>channel-group-number</i>	
<b>mode</b>	Specifies the EtherChannel mode.
<b>active</b>	Unconditionally enables Link Aggregation Control Protocol (LACP).
<b>auto</b>	Enables the Port Aggregation Protocol (PAgP) only if a PAgP device is detected.
<b>non-silent</b>	(Optional) Configures the interface for nonsilent operation when connected to a partner that is PAgP-capable. Use in PAgP mode with the <b>auto</b> or <b>desirable</b> keyword when traffic is expected from the other device.
<b>desirable</b>	Unconditionally enables PAgP.
<b>on</b>	Enables the on mode.
<b>passive</b>	Enables LACP only if a LACP device is detected.

## Command Default

No channel groups are assigned.  
No mode is configured.

## Command Modes

Interface configuration

## Command History

Release	Modification
Cisco IOS XE Everest 16.5.1a	This command was introduced.

## Usage Guidelines

For Layer 2 EtherChannels, the **channel-group** command automatically creates the port-channel interface when the channel group gets its first physical port. You do not have to use the **interface port-channel** command in global configuration mode to manually create a port-channel interface. If you create the port-channel

interface first, the *channel-group-number* can be the same as the *port-channel-number*, or you can use a new number. If you use a new number, the **channel-group** command dynamically creates a new port channel.

Although it is not necessary to disable the IP address that is assigned to a physical port that is part of a channel group, we strongly recommend that you do so.

You create Layer 3 port channels by using the **interface port-channel** command followed by the **no switchport** interface configuration command. Manually configure the port-channel logical interface before putting the interface into the channel group.

After you configure an EtherChannel, configuration changes that you make on the port-channel interface apply to all the physical ports assigned to the port-channel interface. Configuration changes applied to the physical port affect only the port where you apply the configuration. To change the parameters of all ports in an EtherChannel, apply configuration commands to the port-channel interface, for example, spanning-tree commands or commands to configure a Layer 2 EtherChannel as a trunk.

Active mode places a port into a negotiating state in which the port initiates negotiations with other ports by sending LACP packets. A channel is formed with another port group in either the active or passive mode.

Auto mode places a port into a passive negotiating state in which the port responds to PAgP packets it receives but does not start PAgP packet negotiation. A channel is formed only with another port group in desirable mode. When auto is enabled, silent operation is the default.

Desirable mode places a port into an active negotiating state in which the port starts negotiations with other ports by sending PAgP packets. An EtherChannel is formed with another port group that is in the desirable or auto mode. When desirable is enabled, silent operation is the default.

If you do not specify non-silent with the auto or desirable mode, silent is assumed. The silent mode is used when the device is connected to a device that is not PAgP-capable and rarely, if ever, sends packets. An example of a silent partner is a file server or a packet analyzer that is not generating traffic. In this case, running PAgP on a physical port prevents that port from ever becoming operational. However, it allows PAgP to operate, to attach the port to a channel group, and to use the port for transmission. Both ends of the link cannot be set to silent.

In on mode, a usable EtherChannel exists only when both connected port groups are in the on mode.



---

**Caution** Use care when using the on mode. This is a manual configuration, and ports on both ends of the EtherChannel must have the same configuration. If the group is misconfigured, packet loss or spanning-tree loops can occur.

---

Passive mode places a port into a negotiating state in which the port responds to received LACP packets but does not initiate LACP packet negotiation. A channel is formed only with another port group in active mode.

Do not configure an EtherChannel in both the PAgP and LACP modes. EtherChannel groups running PAgP and LACP can coexist on the same device or on different devices in the stack (but not in a cross-stack configuration). Individual EtherChannel groups can run either PAgP or LACP, but they cannot interoperate.

If you set the protocol by using the **channel-protocol** interface configuration command, the setting is not overridden by the **channel-group** interface configuration command.

Do not configure a port that is an active or a not-yet-active member of an EtherChannel as an IEEE 802.1x port. If you try to enable IEEE 802.1x authentication on an EtherChannel port, an error message appears, and IEEE 802.1x authentication is not enabled.

Do not configure a secure port as part of an EtherChannel or configure an EtherChannel port as a secure port.

For a complete list of configuration guidelines, see the “Configuring EtherChannels” chapter in the software configuration guide for this release.



---

**Caution** Do not enable Layer 3 addresses on the physical EtherChannel ports. Do not assign bridge groups on the physical EtherChannel ports because it creates loops.

---

This example shows how to configure an EtherChannel on a single device in the stack. It assigns two static-access ports in VLAN 10 to channel 5 with the PAgP mode desirable:

```
Device# configure terminal
Device(config)# interface range GigabitEthernet 2/0/1 - 2
Device(config-if-range)# switchport mode access
Device(config-if-range)# switchport access vlan 10
Device(config-if-range)# channel-group 5 mode desirable
Device(config-if-range)# end
```

This example shows how to configure an EtherChannel on a single device in the stack. It assigns two static-access ports in VLAN 10 to channel 5 with the LACP mode active:

```
Device# configure terminal
Device(config)# interface range GigabitEthernet 2/0/1 - 2
Device(config-if-range)# switchport mode access
Device(config-if-range)# switchport access vlan 10
Device(config-if-range)# channel-group 5 mode active
Device(config-if-range)# end
```

This example shows how to configure a cross-stack EtherChannel in a device stack. It uses LACP passive mode and assigns two ports on stack member 2 and one port on stack member 3 as static-access ports in VLAN 10 to channel 5:

```
Device# configure terminal
Device(config)# interface range GigabitEthernet 2/0/4 - 5
Device(config-if-range)# switchport mode access
Device(config-if-range)# switchport access vlan 10
Device(config-if-range)# channel-group 5 mode passive
Device(config-if-range)# exit
Device(config)# interface GigabitEthernet 3/0/3
Device(config-if)# switchport mode access
Device(config-if)# switchport access vlan 10
Device(config-if)# channel-group 5 mode passive
Device(config-if)# exit
```

You can verify your settings by entering the **show running-config** privileged EXEC command.

# channel-protocol

To restrict the protocol used on a port to manage channeling, use the **channel-protocol** command in interface configuration mode. To return to the default setting, use the **no** form of this command.

```
channel-protocol {lacp | pagp}
no channel-protocol
```

## Syntax Description

**lacp** Configures an EtherChannel with the Link Aggregation Control Protocol (LACP).

**pagp** Configures an EtherChannel with the Port Aggregation Protocol (PAgP).

## Command Default

No protocol is assigned to the EtherChannel.

## Command Modes

Interface configuration

## Command History

Release	Modification
Cisco IOS XE Everest 16.5.1a	This command was introduced.

## Usage Guidelines

Use the **channel-protocol** command only to restrict a channel to LACP or PAgP. If you set the protocol by using the **channel-protocol** command, the setting is not overridden by the **channel-group** command in interface configuration mode.

You must use the **channel-group** command in interface configuration mode to configure the EtherChannel parameters. The **channel-group** command also can set the mode for the EtherChannel.

You cannot enable both the PAgP and LACP modes on an EtherChannel group.

PAgP and LACP are not compatible; both ends of a channel must use the same protocol.

You cannot configure PAgP on cross-stack configurations.

This example shows how to specify LACP as the protocol that manages the EtherChannel:

```
Device> enable
Device# configure terminal
Device(config)# interface gigabitethernet2/0/1
Device(config-if)# channel-protocol lacp
```

You can verify your settings by entering the **show etherchannel** [*channel-group-number*] **protocol** command in privileged EXEC mode.

# clear lacp

To clear Link Aggregation Control Protocol (LACP) channel-group counters, use the **clear lacp** command in privileged EXEC mode.

**clear lacp** [*channel-group-number*] **counters**

## Syntax Description

*channel-group-number*

**counters** Clears traffic counters.

## Command Default

None

## Command Modes

Privileged EXEC

## Command History

Release	Modification
Cisco IOS XE Everest 16.5.1a	This command was introduced.

## Usage Guidelines

You can clear all counters by using the **clear lacp counters** command, or you can clear only the counters for the specified channel group by using the **clear lacp *channel-group-number* counters** command.

This example shows how to clear all channel-group information:

```
Device# clear lacp counters
```

This example shows how to clear LACP traffic counters for group 4:

```
Device# clear lacp 4 counters
```

You can verify that the information was deleted by entering the **show lacp counters** or the **show lacp *channel-group-number* counters** privileged EXEC command.

# clear pagp

To clear the Port Aggregation Protocol (PAgP) channel-group information, use the **clear pagp** command in privileged EXEC mode.

**clear pagp** [*channel-group-number*] **counters**

## Syntax Description

*channel-group-number*

**counters** Clears traffic counters.

## Command Default

None

## Command Modes

Privileged EXEC

## Command History

### Release

Cisco IOS XE Everest 16.5.1a

### Modification

This command was introduced.

## Usage Guidelines

You can clear all counters by using the **clear pagp counters** command, or you can clear only the counters for the specified channel group by using the **clear pagp** *channel-group-number* **counters** command.

This example shows how to clear all channel-group information:

```
Device# clear pagp counters
```

This example shows how to clear PAgP traffic counters for group 10:

```
Device# clear pagp 10 counters
```

You can verify that the information was deleted by entering the **show pagp** privileged EXEC command.



# clear spanning-tree counters

To clear the spanning-tree counters, use the **clear spanning-tree counters** command in privileged EXEC mode.

**clear spanning-tree counters** [**interface** *interface-id*]

<b>Syntax Description</b>	<b>interface</b> <i>interface-id</i>	(Optional) Clears all spanning-tree counters on the specified include physical ports, VLANs, and port channels.  The VLAN range is 1 to 4094.  The port-channel range is 1 to 128.
---------------------------	--------------------------------------	--

<b>Command Default</b>	None
------------------------	------

<b>Command Modes</b>	Privileged EXEC
----------------------	-----------------

<b>Command History</b>	<b>Release</b>	<b>Modification</b>
	Cisco IOS XE Everest 16.5.1a	This command was introduced.

<b>Usage Guidelines</b>	If the <i>interface-id</i> value is not specified, spanning-tree counters are cleared for all interfaces.
-------------------------	---

This example shows how to clear spanning-tree counters for all interfaces:

```
Device# clear spanning-tree counters
```

## clear spanning-tree detected-protocols

To restart the protocol migration process and force renegotiation with neighboring devices on the interface, use the **clear spanning-tree detected-protocols** command in privileged EXEC mode.

**clear spanning-tree detected-protocols** [**interface** *interface-id*]

<b>Syntax Description</b>	<b>interface</b> <i>interface-id</i>	(Optional) Restarts the protocol migration process on the specified interface channels. The VLAN range is 1 to 4094.
<b>Command Default</b>	None	
<b>Command Modes</b>	Privileged EXEC	
<b>Command History</b>	<b>Release</b>	<b>Modification</b>
	Cisco IOS XE Everest 16.5.1a	This command was introduced.

### Usage Guidelines

A device running the rapid per-VLAN spanning-tree plus (rapid-PVST+) protocol or the Multiple Spanning Tree Protocol (MSTP) supports a built-in protocol migration method that enables it to interoperate with legacy IEEE 802.1D devices. If a rapid-PVST+ or an MSTP device receives a legacy IEEE 802.1D configuration bridge protocol data unit (BPDU) with the protocol version set to 0, the device sends only IEEE 802.1D BPDUs on that port. A multiple spanning-tree (MST) device can also detect that a port is at the boundary of a region when it receives a legacy BPDU, an MST BPDU (Version 3) associated with a different region, or a rapid spanning-tree (RST) BPDU (Version 2).

The device does not automatically revert to the rapid-PVST+ or the MSTP mode if it no longer receives IEEE 802.1D BPDUs because it cannot learn whether the legacy switch has been removed from the link unless the legacy switch is the designated switch. Use the **clear spanning-tree detected-protocols** command in this situation.

This example shows how to restart the protocol migration process on a port:

```
Device# clear spanning-tree detected-protocols interface gigabitethernet2/0/1
```

# debug etherchannel

To enable debugging of EtherChannels, use the **debug etherchannel** command in privileged EXEC mode. To disable debugging, use the **no** form of the command.

```
debug etherchannel [{all | detail | error | event | idb}]
no debug etherchannel [{all | detail | error | event | idb}]
```

## Syntax Description

<b>all</b>	(Optional) Displays all EtherChannel debug messages.
<b>detail</b>	(Optional) Displays detailed EtherChannel debug messages.
<b>error</b>	(Optional) Displays EtherChannel error debug messages.
<b>event</b>	(Optional) Displays EtherChannel event messages.
<b>idb</b>	(Optional) Displays PAgP interface descriptor block debug messages.

## Command Default

Debugging is disabled.

## Command Modes

Privileged EXEC

## Command History

Release	Modification
Cisco IOS XE Everest 16.5.1a	This command was introduced.

## Usage Guidelines

The **undebug etherchannel** command is the same as the **no debug etherchannel** command.



**Note** Although the **linecard** keyword is displayed in the command-line help, it is not supported.

When you enable debugging on a stack, it is enabled only on the active switch. To enable debugging on the standby switch, start a session from the active switch by using the **session switch-number** command in privileged EXEC mode. Enter the **debug** command at the command-line prompt of the standby switch.

To enable debugging on the standby switch without first starting a session on the active switch, use the **remote command switch-number LINE** command in privileged EXEC mode.

This example shows how to display all EtherChannel debug messages:

```
Device# debug etherchannel all
```

This example shows how to display debug messages related to EtherChannel events:

```
Device# debug etherchannel event
```

# debug lacp

To enable debugging of Link Aggregation Control Protocol (LACP) activity, use the **debug lacp** command in privileged EXEC mode. To disable LACP debugging, use the **no** form of this command.

```
debug lacp [{all | event | fsm | misc | packet}]
no debug lacp [{all | event | fsm | misc | packet}]
```

## Syntax Description

<b>all</b>	(Optional) Displays all LACP debug messages.
<b>event</b>	(Optional) Displays LACP event debug messages.
<b>fsm</b>	(Optional) Displays messages about changes within the LACP finite state machine.
<b>misc</b>	(Optional) Displays miscellaneous LACP debug messages.
<b>packet</b>	(Optional) Displays the receiving and transmitting LACP control packets.

## Command Default

Debugging is disabled.

## Command Modes

Privileged EXEC

## Command History

Release	Modification
Cisco IOS XE Everest 16.5.1a	This command was introduced.

## Usage Guidelines

The **undebug etherchannel** command is the same as the **no debug etherchannel** command.

When you enable debugging on a stack, it is enabled only on the active switch. To enable debugging on the standby switch, start a session from the active switch by using the **session *switch-number*** command in privileged EXEC mode. Enter the **debug** command at the command-line prompt of the standby switch.

To enable debugging on the standby switch without first starting a session on the active switch, use the **remote command *switch-number* *LINE*** command in privileged EXEC mode.

This example shows how to display all LACP debug messages:

```
Device# debug LACP all
```

This example shows how to display debug messages related to LACP events:

```
Device# debug LACP event
```

# debug pagp

To enable debugging of Port Aggregation Protocol (PAgP) activity, use the **debug pagp** command in privileged EXEC mode. To disable PAgP debugging, use the **no** form of this command.

```
debug pagp [{all | dual-active | event | fsm | misc | packet}]
no debug pagp [{all | dual-active | event | fsm | misc | packet}]
```

Syntax Description	
<b>all</b>	(Optional) Displays all PAgP debug messages.
<b>dual-active</b>	(Optional) Displays dual-active detection messages.
<b>event</b>	(Optional) Displays PAgP event debug messages.
<b>fsm</b>	(Optional) Displays messages about changes within the PAgP finite state machine.
<b>misc</b>	(Optional) Displays miscellaneous PAgP debug messages.
<b>packet</b>	(Optional) Displays the receiving and transmitting PAgP control packets.

**Command Default** Debugging is disabled.

**Command Modes** Privileged EXEC

Command History	Release	Modification
	Cisco IOS XE Everest 16.5.1a	This command was introduced.

**Usage Guidelines** The **undebg pagp** command is the same as the **no debug pagp** command.

When you enable debugging on a stack, it is enabled only on the active switch. To enable debugging on the standby switch, start a session from the active switch by using the **session switch-number** command in privileged EXEC mode. Enter the **debug** command at the command-line prompt of the standby switch.

To enable debugging on the standby switch without first starting a session on the active switch, use the **remote command switch-number LINE** command in privileged EXEC mode.

This example shows how to display all PAgP debug messages:

```
Device# debug pagp all
```

This example shows how to display debug messages related to PAgP events:

```
Device# debug pagp event
```

# debug platform pm

To enable debugging of the platform-dependent port manager software module, use the **debug platform pm** command in privileged EXEC mode. To disable debugging, use the **no** form of this command.

Syntax Description		
	<b>all</b>	Displays all port manager debug messages.
	<b>counters</b>	Displays counters for remote procedure call (RPC) debug messages.
	<b>errdisable</b>	Displays error-disabled-related events debug messages.
	<b>if-numbers</b>	Displays interface-number translation event debug messages.
	<b>link-status</b>	Displays interface link-detection event debug messages.
	<b>platform</b>	Displays port manager function event debug messages.
	<b>pm-vectors</b>	Displays port manager vector-related event debug messages.
	<b>detail</b>	(Optional) Displays vector-function details.
	<b>vlan</b>	Displays VLAN creation and deletion event debug messages.

**Command Default** Debugging is disabled.

**Command Modes** Privileged EXEC

Command History	Release	Modification
	Cisco IOS XE Everest 16.5.1a	This command was introduced.

**Usage Guidelines** The **undebug platform pm** command is the same as the **no debug platform pm** command.

When you enable debugging on a stack, it is enabled only on the active switch. To enable debugging on the standby switch, start a session from the active switch by using the **session switch-number** command in privileged EXEC mode. Enter the **debug** command at the command-line prompt of the standby switch.

To enable debugging on the standby switch without first starting a session on the active switch, use the **remote command switch-number LINE** command in privileged EXEC mode.

This example shows how to display debug messages related to the creation and deletion of VLANs:

```
Device# debug platform pm vlans
```

## debug platform udd

To enable debugging of the platform-dependent UniDirectional Link Detection (UDLD) software, use the **debug platform udd** command in privileged EXEC mode. To disable debugging, use the **no** form of this command.

---

### Syntax Description

**error** (Optional) Displays error condition debug messages.

---

### Command Default

Debugging is disabled.

### Command Modes

Privileged EXEC

---

### Command History

Release	Modification
Cisco IOS XE Everest 16.5.1a	This command was introduced.

---

### Usage Guidelines

The **undebg platform udd** command is the same as the **no debug platform udd** command.

## debug spanning-tree

To enable debugging of spanning-tree activities, use the **debug spanning-tree** command in EXEC mode. To disable debugging, use the **no** form of this command.

```
debug spanning-tree {all | backbonefast | bpdu | bpdu-opt | config | etherchannel | events | exceptions
| general | ha | mstp | pvst+ | root | snmp | synchronization | switch | uplinkfast}
no debug spanning-tree {all | backbonefast | bpdu | bpdu-opt | config | etherchannel | events |
exceptions | general | mstp | pvst+ | root | snmp | synchronization | switch | uplinkfast}
```

### Syntax Description

<b>all</b>	Displays all spanning-tree debug messages.
<b>backbonefast</b>	Displays BackboneFast-event debug messages.
<b>bpdu</b>	Displays spanning-tree bridge protocol data unit (BPDU) debug messages.
<b>bpdu-opt</b>	Displays optimized BPDU handling debug messages.
<b>config</b>	Displays spanning-tree configuration change debug messages.
<b>etherchannel</b>	Displays EtherChannel-support debug messages.
<b>events</b>	Displays spanning-tree topology event debug messages.
<b>exceptions</b>	Displays spanning-tree exception debug messages.
<b>general</b>	Displays general spanning-tree activity debug messages.
<b>ha</b>	Displays high-availability spanning-tree debug messages.
<b>mstp</b>	Debugs Multiple Spanning Tree Protocol (MSTP) events.
<b>pvst+</b>	Displays per-VLAN spanning-tree plus (PVST+) event debug messages.
<b>root</b>	Displays spanning-tree root-event debug messages.
<b>snmp</b>	Displays spanning-tree Simple Network Management Protocol (SNMP) handling debug messages.
<b>switch</b>	Displays device shim command debug messages. This shim is the software module that is the interface between the generic Spanning Tree Protocol (STP) code and the platform-specific code of various device platforms.
<b>synchronization</b>	Displays the spanning-tree synchronization event debug messages.
<b>uplinkfast</b>	Displays UplinkFast-event debug messages.



**Command Default** Debugging is disabled.

**Command Modes** Privileged EXEC

Command History	Release	Modification
	Cisco IOS XE Everest 16.5.1a	This command was introduced.

**Usage Guidelines** The **undebg spanning-tree** command is the same as the **no debug spanning-tree** command.

When you enable debugging on a stack, it is enabled only on the active switch. To enable debugging on the standby switch, start a session from the active switch by using the **session** *switch-number* command in privileged EXEC mode. Enter the **debug** command at the command-line prompt of the standby switch.

To enable debugging on the standby switch without first starting a session on the active switch, use the **remote command** *switch-number LINE* command in privileged EXEC mode.

This example shows how to display all spanning-tree debug messages:

```
Device# debug spanning-tree all
```

# interface port-channel

To access or create a port channel, use the **interface port-channel** command in global configuration mode. Use the **no** form of this command to remove the port channel.

```
interface port-channel port-channel-number
no interface port-channel
```

---

## Syntax Description

*port-channel-number*

---

## Command Default

No port channel logical interfaces are defined.

## Command Modes

Global configuration

---

## Command History

### Release

### Modification

Cisco IOS XE Everest 16.5.1a

This command was introduced.

---



---

## Usage Guidelines

For Layer 2 EtherChannels, you do not have to create a port-channel interface before assigning physical ports to a channel group. Instead, you can use the **channel-group** interface configuration command, which automatically creates the port-channel interface when the channel group obtains its first physical port. If you create the port-channel interface first, the *channel-group-number* can be the same as the *port-channel-number*, or you can use a new number. If you use a new number, the **channel-group** command dynamically creates a new port channel.

You create Layer 3 port channels by using the **interface port-channel** command followed by the **no switchport** interface configuration command. You should manually configure the port-channel logical interface before putting the interface into the channel group.

Only one port channel in a channel group is allowed.



### Caution

When using a port-channel interface as a routed port, do not assign Layer 3 addresses on the physical ports that are assigned to the channel group.

---



### Caution

Do not assign bridge groups on the physical ports in a channel group used as a Layer 3 port channel interface because it creates loops. You must also disable spanning tree.

---

Follow these guidelines when you use the **interface port-channel** command:

- If you want to use the Cisco Discovery Protocol (CDP), you must configure it on the physical port and not on the port channel interface.
- Do not configure a port that is an active member of an EtherChannel as an IEEE 802.1x port. If IEEE 802.1x is enabled on a not-yet active port of an EtherChannel, the port does not join the EtherChannel.

For a complete list of configuration guidelines, see the “Configuring EtherChannels” chapter in the software configuration guide for this release.

This example shows how to create a port channel interface with a port channel number of 5:

```
Device(config)# interface port-channel 5
```

You can verify your setting by entering the **show running-config** privileged EXEC or **show etherchannel channel-group-number detail** privileged EXEC command.

# lACP max-bundle

To define the maximum number of active LACP ports allowed in a port channel, use the **lACP max-bundle** command in interface configuration mode. To return to the default setting, use the **no** form of this command.

**lACP max-bundle** *max\_bundle\_number*  
**no lACP max-bundle**

<b>Syntax Description</b>	<i>max_bundle_number</i>	The maximum number of active LACP ports in the port channel. The range is 1 to 8. The default is 8.
<b>Command Default</b>	None	
<b>Command Modes</b>	Interface configuration	
<b>Command History</b>	<b>Release</b>	<b>Modification</b>
		This command was introduced.

**Usage Guidelines**

An LACP channel group can have up to 16 Ethernet ports of the same type. Up to eight ports can be active, and up to eight ports can be in hot-standby mode. When there are more than eight ports in an LACP channel group, the device on the controlling end of the link uses port priorities to determine which ports are bundled into the channel and which ports are put in hot-standby mode. Port priorities on the other device (the noncontrolling end of the link) are ignored.

The **lACP max-bundle** command must specify a number greater than the number specified by the **port-channel min-links** command.

Use the **show etherchannel summary** privileged EXEC command to see which ports are in the hot-standby mode (denoted with an H port-state flag in the output display).

This example shows how to specify a maximum of five active LACP ports in port channel 2:

```
Device(config)# interface port-channel 2
Device(config-if)# lACP max-bundle 5
```

## lacp port-priority

To configure the port priority for the Link Aggregation Control Protocol (LACP), use the **lacp port-priority** command in interface configuration mode. To return to the default setting, use the **no** form of this command.

**lacp port-priority** *priority*  
**no lacp port-priority**

### Syntax Description

*priority* Port priority for LACP. The range is 1 to 65535.

### Command Default

The default is 32768.

### Command Modes

Interface configuration

### Command History

Release	Modification
Cisco IOS XE Everest 16.5.1a	This command was introduced.

### Usage Guidelines

The **lacp port-priority** interface configuration command determines which ports are bundled and which ports are put in hot-standby mode when there are more than eight ports in an LACP channel group.

An LACP channel group can have up to 16 Ethernet ports of the same type. Up to eight ports can be active, and up to eight ports can be in standby mode.

In port-priority comparisons, a numerically lower value has a higher priority: When there are more than eight ports in an LACP channel group, the eight ports with the numerically lowest values (highest priority values) for LACP port priority are bundled into the channel group, and the lower-priority ports are put in hot-standby mode. If two or more ports have the same LACP port priority (for example, they are configured with the default setting of 65535), then an internal value for the port number determines the priority.



**Note** The LACP port priorities are only effective if the ports are on the device that controls the LACP link. See the **lacp system-priority** global configuration command for determining which device controls the link.

Use the **show lacp internal** privileged EXEC command to display LACP port priorities and internal port number values.

For information about configuring LACP on physical ports, see the configuration guide for this release.

This example shows how to configure the LACP port priority on a port:

```
Device# interface gigabitethernet2/0/1
Device(config-if)# lacp port-priority 1000
```

You can verify your settings by entering the **show lacp** [*channel-group-number*] **internal** privileged EXEC command.

# lACP rate

To set the rate at which Link Aggregation Control Protocol (LACP) control packets are ingressed to an LACP-supported interface, use the **lACP rate** command in interface configuration mode. To return to the default settings, use the **no** form of this command

```
lACP rate {normal | fast}
no lACP rate
```

<b>Syntax Description</b>	<b>normal</b> Specifies that LACP control packets are ingressed at the normal rate, every 30 seconds after the link is bundled.				
	<b>fast</b> Specifies that LACP control packets are ingressed at the fast rate, once every 1 second.				
<b>Command Default</b>	The default ingress rate for control packets is 30 seconds after the link is bundled.				
<b>Command Modes</b>	Interface configuration (config-if)				
<b>Command History</b>	<table border="1"> <thead> <tr> <th>Release</th> <th>Modification</th> </tr> </thead> <tbody> <tr> <td></td> <td>This command was introduced.</td> </tr> </tbody> </table>	Release	Modification		This command was introduced.
Release	Modification				
	This command was introduced.				
<b>Usage Guidelines</b>	<p>Use this command to modify the duration of LACP timeout. The LACP timeout value on Cisco switch is three times the LACP rate configured on the interface. Using the <b>lACP rate</b> command, you can select the LACP timeout value for a switch to be either 90 seconds or 3 seconds.</p> <p>This command is supported only on LACP-enabled interfaces.</p> <p>This example shows how to specify the fast (1 second) ingress rate on interface GigabitEthernet 0/0:</p> <pre>Device(config)# <b>interface gigabitEthernet 0/0</b> Device(config-if)# <b>lACP rate fast</b></pre>				

# lACP system-priority

To configure the system priority for the Link Aggregation Control Protocol (LACP), use the **lACP system-priority** command in global configuration mode on the device. To return to the default setting, use the **no** form of this command.

**lACP system-priority** *priority*  
**no lACP system-priority**

## Syntax Description

*priority* System priority for LACP. The range is 1 to 65535.

## Command Default

The default is 32768.

## Command Modes

Global configuration

## Command History

Release	Modification
Cisco IOS XE Everest 16.5.1a	This command was introduced.

## Usage Guidelines

The **lACP system-priority** command determines which device in an LACP link controls port priorities.

An LACP channel group can have up to 16 Ethernet ports of the same type. Up to eight ports can be active, and up to eight ports can be in standby mode. When there are more than eight ports in an LACP channel group, the device on the controlling end of the link uses port priorities to determine which ports are bundled into the channel and which ports are put in hot-standby mode. Port priorities on the other device (the noncontrolling end of the link) are ignored.

In priority comparisons, numerically lower values have a higher priority. Therefore, the system with the numerically lower value (higher priority value) for LACP system priority becomes the controlling system. If both devices have the same LACP system priority (for example, they are both configured with the default setting of 32768), the LACP system ID (the device MAC address) determines which device is in control.

The **lACP system-priority** command applies to all LACP EtherChannels on the device.

Use the **show etherchannel summary** privileged EXEC command to see which ports are in the hot-standby mode (denoted with an H port-state flag in the output display).

This example shows how to set the LACP system priority:

```
Device(config)# lACP system-priority 20000
```

You can verify your settings by entering the **show lACP sys-id** privileged EXEC command.

# pagp learn-method

To learn the source address of incoming packets received from an EtherChannel port, use the **pagp learn-method** command in interface configuration mode. To return to the default setting, use the **no** form of this command.

```
pagp learn-method {aggregation-port | physical-port}
no pagp learn-method
```

<b>Syntax Description</b>	<p><b>aggregation-port</b> Specifies address learning on the logical port channel. The device sends packets to the source using any port in the EtherChannel. This setting is the default. With aggregation-port learning, it is not important on which physical port the packet arrives.</p> <p><b>physical-port</b> Specifies address learning on the physical port within the EtherChannel. The device sends packets to the source using the same port in the EtherChannel from which it learned the source address. The other end of the channel uses the same port in the channel for a particular destination MAC or IP address.</p>	
<b>Command Default</b>	The default is aggregation-port (logical port channel).	
<b>Command Modes</b>	Interface configuration	
<b>Command History</b>	<b>Release</b>	<b>Modification</b>
	Cisco IOS XE Everest 16.5.1a	This command was introduced.

**Usage Guidelines**

The learn method must be configured the same at both ends of the link.

The device supports address learning only on aggregate ports even though the **physical-port** keyword is provided in the command-line interface (CLI). The **pagp learn-method** and the **pagp port-priority** interface configuration commands have no effect on the device hardware, but they are required for PAgP interoperability with devices that only support address learning by physical ports.

When the link partner to the device is a physical learner, we recommend that you configure the device as a physical-port learner by using the **pagp learn-method physical-port** interface configuration command. We also recommend that you set the load-distribution method based on the source MAC address by using the **port-channel load-balance src-mac** global configuration command. Use the **pagp learn-method** interface configuration command only in this situation.

This example shows how to set the learning method to learn the address on the physical port within the EtherChannel:

```
Device(config-if) # pagp learn-method physical-port
```

This example shows how to set the learning method to learn the address on the port channel within the EtherChannel:

```
Device(config-if) # pagp learn-method aggregation-port
```



You can verify your settings by entering the **show running-config** privileged EXEC command or the **show pagp *channel-group-number* internal** privileged EXEC command.

## pagp port-priority

To select a port over which all Port Aggregation Protocol (PAgP) traffic through the EtherChannel is sent, use the **pagp port-priority** command in interface configuration mode. If all unused ports in the EtherChannel are in hot-standby mode, they can be placed into operation if the currently selected port and link fails. To return to the default setting, use the **no** form of this command.

**pagp port-priority** *priority*  
**no pagp port-priority**

<b>Syntax Description</b>	<i>priority</i> Priority number. The range is from 0 to 255.
---------------------------	--

<b>Command Default</b>	The default is 128.
------------------------	---------------------

<b>Command Modes</b>	Interface configuration
----------------------	-------------------------

<b>Command History</b>	<b>Release</b>	<b>Modification</b>
	Cisco IOS XE Everest 16.5.1a	This command was introduced.

<b>Usage Guidelines</b>	The physical port with the highest priority that is operational and has membership in the same EtherChannel is the one selected for PAgP transmission.
-------------------------	--

The device supports address learning only on aggregate ports even though the **physical-port** keyword is provided in the command-line interface (CLI). The **pagp learn-method** and the **pagp port-priority** interface configuration commands have no effect on the device hardware, but they are required for PAgP interoperability with devices that only support address learning by physical ports, such as the Catalyst 1900 switch.

When the link partner to the device is a physical learner, we recommend that you configure the device as a physical-port learner by using the **pagp learn-method physical-port** interface configuration command. We also recommend that you set the load-distribution method based on the source MAC address by using the **port-channel load-balance src-mac** global configuration command. Use the **pagp learn-method** interface configuration command only in this situation.

This example shows how to set the port priority to 200:

```
Device(config-if)# pagp port-priority 200
```

You can verify your setting by entering the **show running-config** privileged EXEC command or the **show pagp channel-group-number internal** privileged EXEC command.

# port-channel

To convert the auto created EtherChannel into a manual channel and adding configuration on the EtherChannel, use the **port-channel** command in privileged EXEC mode.

**port-channel** { *channel-group-number* **persistent** | **persistent** }

<b>Syntax Description</b>	<i>channel-group-number</i>	Channel group number. The range is 1 to 128.
	<b>persistent</b>	Converts the auto created EtherChannel into a manual channel and allows you to add configuration on the EtherChannel.
<b>Command Default</b>	None	
<b>Command Modes</b>	Privileged EXEC	
<b>Command History</b>	<b>Release</b>	<b>Modification</b>
	Cisco IOS XE Everest 16.5.1a	This command was introduced.
<b>Usage Guidelines</b>	You can use the <b>show etherchannel summary</b> privileged EXEC command to display the EtherChannel information.	
<b>Examples</b>	This example shows how to convert the auto created EtherChannel into a manual channel: Device# <b>port-channel 1 persistent</b>	

# port-channel auto

To enable the auto-LAG feature on a switch globally, use the **port-channel auto** command in global configuration mode. To disable the auto-LAG feature on the switch globally, use **no** form of this command.

**port-channel auto**  
**no port-channel auto**

---

**Syntax Description** This command has no arguments or keywords.

---

**Command Default** By default, the auto-LAG feature is disabled globally and is enabled on all port interfaces.

---

**Command Modes** Global configuration

---

<b>Command History</b>	<b>Release</b>	<b>Modification</b>
	Cisco IOS XE 3.7.2E	This command was introduced.

---

---

**Usage Guidelines** You can use the **show etherchannel auto** privileged EXEC command to verify if the EtherChannel was created automatically.

---

**Examples** This example shows how to enable the auto-LAG feature on the switch:

```
Device(config)# port-channel auto
```

## port-channel load-balance

To set the load-distribution method among the ports in the EtherChannel, use the **port-channel load-balance** command in global configuration mode. To reset the load-balancing mechanism to the default setting, use the **no** form of this command.

```
port-channel load-balance {dst-ip | dst-mac | dst-mixed-ip-port | dst-port | extended | src-dst-ip |
src-dst-mac | src-dst-mixed-ip-port | src-dst-port | src-ip | src-mac | src-mixed-ip-port | src-port}
no port-channel load-balance
```

Syntax Description		
<b>dst-ip</b>	Specifies load distribution based on the destination host IP address.	
<b>dst-mac</b>	Specifies load distribution based on the destination host MAC address. Packets to the same destination are sent on the same port, but packets to different destinations are sent on different ports in the channel.	
<b>dst-mixed-ip-port</b>	Specifies load distribution based on the destination IPv4 or IPv6 address and the TCP/UDP (Layer 4) port number.	
<b>dst-port</b>	Specifies load distribution based on the destination TCP/UDP (Layer 4) port number for both IPv4 and IPv6.	
<b>extended</b>	Sets extended load balance methods among the ports in the EtherChannel. See the <b>port-channel load-balance extended</b> command.	
<b>src-dst-ip</b>	Specifies load distribution based on the source and destination host IP address.	
<b>src-dst-mac</b>	Specifies load distribution based on the source and destination host MAC address.	
<b>src-dst-mixed-ip-port</b>	Specifies load distribution based on the source and destination host IP address and TCP/UDP (layer 4) port number.	
<b>src-dst-port</b>	Specifies load distribution based on the source and destination TCP/UDP (Layer 4) port number.	
<b>src-ip</b>	Specifies load distribution based on the source host IP address.	
<b>src-mac</b>	Specifies load distribution based on the source MAC address. Packets from different hosts use different ports in the channel, but packets from the same host use the same port.	
<b>src-mixed-ip-port</b>	Specifies load distribution based on the source host IP address and TCP/UDP (Layer 4) port number.	
<b>src-port</b>	Specifies load distribution based on the TCP/UDP (Layer 4) port number.	

**Command Default** The default is **src-mac**.

**Command Modes** Global configuration

Command History	Release	Modification
	Cisco IOS XE Everest 16.5.1a	This command was introduced.

**Usage Guidelines** You can verify your setting by entering the **show running-config** privileged EXEC command or the **show etherchannel load-balance** privileged EXEC command.

**Examples**

This example shows how to set the load-distribution method to dst-mac:

```
Device(config)# port-channel load-balance dst-mac
```

# port-channel load-balance extended

To set combinations of load-distribution methods among the ports in the EtherChannel, use the **port-channel load-balance extended** command in global configuration mode. To reset the extended load-balancing mechanism to the default setting, use the **no** form of this command.

```
port-channel load-balance extended[{dst-ip | dst-mac | dst-port | ipv6-label | l3-protol | src-ip | src-mac | src-port}]
no port-channel load-balance extended
```

## Syntax Description

<b>dst-ip</b>	(Optional) Specifies load distribution based on the destination host IP address.
<b>dst-mac</b>	(Optional) Specifies load distribution based on the destination host MAC address. Packets to the same destination are sent on the same port, but packets to different destinations are sent on different ports in the channel.
<b>dst-port</b>	(Optional) Specifies load distribution based on the destination TCP/UDP (Layer 4) port number for both IPv4 and IPv6.
<b>ipv6-label</b>	(Optional) Specifies load distribution based on the source MAC address and IPv6 flow label.
<b>l3-protol</b>	(Optional) Specifies load distribution based on the source MAC address and Layer 3 protocols.
<b>src-ip</b>	(Optional) Specifies load distribution based on the source host IP address.
<b>src-mac</b>	(Optional) Specifies load distribution based on the source MAC address. Packets from different hosts use different ports in the channel, but packets from the same host use the same port.
<b>src-port</b>	(Optional) Specifies load distribution based on the TCP/UDP (Layer 4) port number.

## Command Default

The default is **src-mac**.

## Command Modes

Global configuration

## Command History

Release	Modification
Cisco IOS XE Everest 16.5.1a	This command was introduced.

## Usage Guidelines

For information about when to use these forwarding methods, see the [release notes](#) for this release.

You can verify your setting by entering the **show running-config** privileged EXEC command or the **show etherchannel load-balance** privileged EXEC command.

## Examples

This example shows how to set the extended load-distribution method:

```
Device(config)# port-channel load-balance extended dst-ip dst-mac src-ip
```

# port-channel min-links

To define the minimum number of LACP ports that must be bundled in the link-up state and bundled in the EtherChannel in order that a port channel becomes active, use the **port-channel min-links** command in interface configuration mode. To return to the default setting, use the **no** form of this command.

```
port-channel min-links min_links_number
no port-channel min-links
```

<b>Syntax Description</b>	<i>min_links_number</i>	The minimum number of active LACP ports in the port channel. The range is 2 to 8. The default is 1.
<b>Command Default</b>	None	
<b>Command Modes</b>	Interface configuration	
<b>Command History</b>	<b>Release</b>	<b>Modification</b>
		This command was introduced.

**Usage Guidelines**

An LACP channel group can have up to 16 Ethernet ports of the same type. Up to eight ports can be active, and up to eight ports can be in hot-standby mode. When there are more than eight ports in an LACP channel group, the device on the controlling end of the link uses port priorities to determine which ports are bundled into the channel and which ports are put in hot-standby mode. Port priorities on the other device (the noncontrolling end of the link) are ignored.

The **port-channel min-links** command must specify a number a less than the number specified by the **lACP max-bundle** command.

Use the **show etherchannel summary** privileged EXEC command to see which ports are in the hot-standby mode (denoted with an H port-state flag in the output display).

This example shows how to specify a minimum of three active LACP ports before port channel 2 becomes active:

```
Device(config)# interface port-channel 2
Device(config-if)# port-channel min-links 3
```



# rep admin vlan

To configure a Resilient Ethernet Protocol (REP) administrative VLAN for the REP to transmit hardware flood layer (HFL) messages, use the **rep admin vlan** command in global configuration mode. To return to the default configuration with VLAN 1 as the administrative VLAN, use the **no** form of this command.

```
rep admin vlan vlan-id
no rep admin vlan
```

<b>Syntax Description</b>	<i>vlan-id</i> 48-bit static MAC address.				
<b>Command Default</b>	None.				
<b>Command Modes</b>	Global configuration (config)				
<b>Command History</b>	<table border="1"> <thead> <tr> <th>Release</th> <th>Modification</th> </tr> </thead> <tbody> <tr> <td></td> <td>This command was introduced.</td> </tr> </tbody> </table>	Release	Modification		This command was introduced.
Release	Modification				
	This command was introduced.				

**Usage Guidelines**

The range of the REP administrative VLAN is from 1 to 4094.

There can be only one administrative VLAN on a device and on a segment.

Verify your settings by entering the **show interfaces rep detail** command in privileged EXEC mode.

**Examples**

The following example shows how to configure VLAN 100 as the REP administrative VLAN:

```
Device(config)# rep admin vlan 100
```

<b>Related Commands</b>	<b>Command</b>	<b>Description</b>
	<b>show interfaces rep detail</b>	Displays detailed REP configuration and status for all the interfaces or the specified interface, including the administrative VLAN.

## rep block port

To configure Resilient Ethernet Protocol (REP) VLAN load balancing on a REP primary edge port, use the **rep block port** command in interface configuration mode. To return to the default configuration with VLAN 1 as the administrative VLAN, use the **no** form of this command.

```
rep block port {id port-id | neighbor-offset | preferred} vlan {vlan-list | all}
no rep block port {id port-id | neighbor-offset | preferred}
```

Syntax Description		
<b>id</b> <i>port-id</i>	Specifies the VLAN blocking alternate port by entering the unique port ID, which is automatically generated when REP is enabled. The REP port ID is a 16-character hexadecimal value.	
<i>neighbor-offset</i>	VLAN blocking alternate port by entering the offset number of a neighbor. The range is from -256 to +256. A value of 0 is invalid.	
<b>preferred</b>	Selects the regular segment port previously identified as the preferred alternate port for VLAN load balancing.	
<b>vlan</b>	Identifies the VLANs to be blocked.	
<i>vlan-list</i>	VLAN ID or range of VLAN IDs to be displayed. Enter a VLAN ID from 1 to 4094, or a range or sequence of VLANs (such as 1-3, 22, and 41-44) to be blocked.	
<b>all</b>	Blocks all the VLANs.	

**Command Default** The default behavior after you enter the **rep preempt segment** command in privileged EXEC (for manual preemption) is to block all the VLANs at the primary edge port. This behavior remains until you configure the **rep block port** command.

If the primary edge port cannot determine which port is to be the alternate port, the default action is no preemption and no VLAN load balancing.

**Command Modes** Interface configuration (config-if)

Command History	Release	Modification
		This command was introduced.

**Usage Guidelines** When you select an alternate port by entering an offset number, this number identifies the downstream neighbor port of an edge port. The primary edge port has an offset number of 1; positive numbers above 1 identify downstream neighbors of the primary edge port. Negative numbers identify the secondary edge port (offset number -1) and its downstream neighbors.



**Note** Do not enter an offset value of 1 because that is the offset number of the primary edge port itself.

If you have configured a preempt delay time by entering the **rep preempt delay seconds** command in interface configuration mode and a link failure and recovery occurs, VLAN load balancing begins after the configured

preemption time period elapses without another link failure. The alternate port specified in the load-balancing configuration blocks the configured VLANs and unblocks all the other segment ports. If the primary edge port cannot determine the alternate port for VLAN balancing, the default action is no preemption.

Each port in a segment has a unique port ID. To determine the port ID of a port, enter the **show interfaces interface-id rep detail** command in privileged EXEC mode.

### Examples

The following example shows how to configure REP VLAN load balancing:

```
Device(config)# interface TenGigabitEthernet 4/1
Device(config-if)# rep block port id 0009001818D68700 vlan 1-100
```

### Related Commands

Command	Description
<b>show interfaces rep detail</b>	Displays detailed REP configuration and status for all the interfaces or the specified interface, including the administrative VLAN.

## rep lsl-age-timer

To configure the Resilient Ethernet Protocol (REP) link status layer (LSL) age-out timer value, use the **rep lsl-age-timer** command in interface configuration mode. To restore the default age-out timer value, use the **no** form of this command.

```
rep lsl-age-timer milliseconds
no rep lsl-age-timer milliseconds
```

<b>Syntax Description</b>	<i>milliseconds</i> REP LSL age-out timer value, in milliseconds (ms). The range is from 120 to 10000 in multiples of 40.
---------------------------	---

<b>Command Default</b>	The default LSL age-out timer value is 5 ms.
------------------------	--

<b>Command Modes</b>	Interface configuration (config-if)
----------------------	-------------------------------------

<b>Command History</b>	<b>Release</b>	<b>Modification</b>
		This command was introduced.

<b>Usage Guidelines</b>	While configuring REP configurable timers, we recommend that you configure the REP LSL number of retries first and then configure the REP LSL age-out timer value.
-------------------------	--

<b>Examples</b>	The following example shows how to configure a REP LSL age-out timer value:
-----------------	---

```
Device(config)# interface TenGigabitEthernet 4/1
Device(config-if)# rep segment 1 edge primary
Device(config-if)# rep lsl-age-timer 2000
```

<b>Related Commands</b>	<b>Command</b>	<b>Description</b>
	<b>interface interface-type interface-name</b>	Specifies a physical interface or port channel to receive STCNs.
	<b>rep segment</b>	Enables REP on an interface and assigns a segment ID.

## rep lsl-retries

To configure the REP link status layer (LSL) number of retries, use the **rep lsl-retries** command in interface configuration mode. To restore the default number of retries, use the **no** form of this command.

**rep lsl-retries** *number-of-retries*  
**no rep lsl-retries** *number-of-retries*

### Syntax Description

*number-of-retries* Number of LSL retries. The range of retries is from 3 to 10.

### Command Default

The default number of LSL retries is 5.

### Command Modes

Interface configuration (config-if)

### Command History

Release	Modification
	This command was introduced

### Usage Guidelines

The **rep lsl-retries** command is used to configure the number of retries before the REP link is disabled. While configuring REP configurable timers, we recommend that you configure the REP LSL number of retries first and then configure the REP LSL age-out timer value.

The following example shows how to configure REP LSL retries.

```
Device(config)# interface TenGigabitEthernet 4/1
Device(config-if)# rep segment 2 edge primary
```

## rep preempt delay

To configure a waiting period after a segment port failure and recovery before Resilient Ethernet Protocol (REP) VLAN load balancing is triggered, use the **rep preempt delay** command in interface configuration mode. To remove the configured delay, use the **no** form of this command.

**rep preempt delay** *seconds*  
**no rep preempt delay**

<b>Syntax Description</b>	<i>seconds</i> Number of seconds to delay REP preemption. The range is from 15 to 300 seconds. The default is manual preemption without delay.				
<b>Command Default</b>	REP preemption delay is not set. The default is manual preemption without delay.				
<b>Command Modes</b>	Interface configuration (config-if)				
<b>Command History</b>	<table border="1"> <thead> <tr> <th>Release</th> <th>Modification</th> </tr> </thead> <tbody> <tr> <td></td> <td>This command was introduced.</td> </tr> </tbody> </table>	Release	Modification		This command was introduced.
Release	Modification				
	This command was introduced.				

<b>Usage Guidelines</b>	<p>Enter this command on the REP primary edge port.</p> <p>Enter this command and configure a preempt time delay for VLAN load balancing to be automatically triggered after a link failure and recovery.</p> <p>If VLAN load balancing is configured after a segment port failure and recovery, the REP primary edge port starts a delay timer before VLAN load balancing occurs. Note that the timer restarts after each link failure. When the timer expires, the REP primary edge port alerts the alternate port to perform VLAN load balancing (configured by using the <b>rep block port</b> interface configuration command) and prepares the segment for the new topology. The configured VLAN list is blocked at the alternate port, and all other VLANs are blocked at the primary edge port.</p> <p>You can verify your settings by entering the <b>show interfaces rep</b> command.</p>
-------------------------	---

**Examples**

The following example shows how to configure a REP preemption time delay of 100 seconds on the primary edge port:

```
Device(config)# interface TenGigabitEthernet 4/1
Device(config-if)# rep preempt delay 100
```

<b>Related Commands</b>	<table border="1"> <thead> <tr> <th>Command</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td><b>rep block port</b></td> <td>Configures VLAN load balancing.</td> </tr> <tr> <td><b>show interfaces rep detail</b></td> <td>Displays detailed REP configuration and status for all the interfaces or the specified interface, including the administrative VLAN.</td> </tr> </tbody> </table>	Command	Description	<b>rep block port</b>	Configures VLAN load balancing.	<b>show interfaces rep detail</b>	Displays detailed REP configuration and status for all the interfaces or the specified interface, including the administrative VLAN.
Command	Description						
<b>rep block port</b>	Configures VLAN load balancing.						
<b>show interfaces rep detail</b>	Displays detailed REP configuration and status for all the interfaces or the specified interface, including the administrative VLAN.						

# rep preempt segment

To manually start Resilient Ethernet Protocol (REP) VLAN load balancing on a segment, use the **rep preempt segment** command in privileged EXEC mode.

```
rep preempt segment segment-id
```

## Syntax Description

*segment-id* ID of the REP segment. The range is from 1 to 1024.

## Command Default

Manual preemption is the default behavior.

## Command Modes

Privileged EXEC (#)

## Command History

### Release

### Modification

This command was introduced.

## Usage Guidelines

Enter this command on the segment, which has the primary edge port on the device.

Ensure that all the other segment configurations are completed before setting preemption for VLAN load balancing. When you enter the **rep preempt segment** *segment-id* command, a confirmation message appears before the command is executed because preemption for VLAN load balancing can disrupt the network.

If you do not enter the **rep preempt delay** *seconds* command in interface configuration mode on the primary edge port to configure a preemption time delay, the default configuration is to manually trigger VLAN load balancing on the segment.

Enter the **show rep topology** command in privileged EXEC mode to see which port in the segment is the primary edge port.

If you do not configure VLAN load balancing, entering the **rep preempt segment** *segment-id* command results in the default behavior, that is, the primary edge port blocks all the VLANs.

You can configure VLAN load balancing by entering the **rep block port** command in interface configuration mode on the REP primary edge port before you manually start preemption.

## Examples

The following example shows how to manually trigger REP preemption on segment 100:

```
Device# rep preempt segment 100
```

## Related Commands

Command	Description
<b>rep block port</b>	Configures VLAN load balancing.
<b>rep preempt delay</b>	Configures a waiting period after a segment port failure and recovery before REP VLAN load balancing is triggered.
<b>show rep topology</b>	Displays REP topology information for a segment or for all the segments.

## rep segment

To enable Resilient Ethernet Protocol (REP) on an interface and to assign a segment ID to the interface, use the **rep segment** command in interface configuration mode. To disable REP on the interface, use the **no** form of this command.

**rep segment** *segment-id* [**edge** [**no-neighbor**] [**primary**] ] [**preferred**]  
**no rep segment**

Syntax Description	
<i>segment-id</i>	Segment for which REP is enabled. Assign a segment ID to the interface. The range is from 1 to 1024.
<b>edge</b>	(Optional) Configures the port as an edge port. Each segment has only two edge ports.
<b>no-neighbor</b>	(Optional) Specifies the segment edge as one with no external REP neighbor.
<b>primary</b>	(Optional) Specifies that the port is the primary edge port where you can configure VLAN load balancing. A segment has only one primary edge port.
<b>preferred</b>	(Optional) Specifies that the port is the preferred alternate port or the preferred port for VLAN load balancing.
<b>Note</b>	Configuring a port as a preferred port does not guarantee that it becomes the alternate port; it merely gives it a slight edge among equal contenders. The alternate port is usually a previously failed port.

**Command Default** REP is disabled on the interface.

**Command Modes** Interface configuration (config-if)

Command History	Release	Modification
		This command was introduced.

**Usage Guidelines** REP ports must be a Layer 2 IEEE 802.1Q port or a 802.1AD port. You must configure two edge ports on each REP segment, a primary edge port and a secondary edge port.

If REP is enabled on two ports on a device, both the ports must be either regular segment ports or edge ports. REP ports follow these rules:

- If only one port on a device is configured in a segment, that port should be an edge port.
- If two ports on a device belong to the same segment, both the ports must be regular segment ports.
- If two ports on a device belong to the same segment, and one is configured as an edge port and one as a regular segment port (a misconfiguration), the edge port is treated as a regular segment port.



**Caution** REP interfaces come up in a blocked state and remain in a blocked state until notified that it is safe to unblock. Be aware of this to avoid sudden connection losses.



When REP is enabled on an interface, the default is for that port to be a regular segment port.

## Examples

The following example shows how to enable REP on a regular (nonedge) segment port:

```
Device(config)# interface TenGigabitEthernet 4/1
Device(config-if)# rep segment 100
```

The following example shows how to enable REP on a port and identify the port as the REP primary edge port:

```
Device(config)# interface TenGigabitEthernet 4/1
Device(config-if)# rep segment 100 edge primary
```

The following example shows how to enable REP on a port and identify the port as the REP secondary edge port:

```
Device(config)# interface TenGigabitEthernet 4/1
Device(config-if)# rep segment 100 edge
```

The following example shows how to enable REP as an edge no-neighbor port:

```
Device(config)# interface TenGigabitEthernet 4/1
Device(config-if)# rep segment 1 edge no-neighbor primary
```

## rep stcn

To configure a Resilient Ethernet Protocol (REP) edge port to send segment topology change notifications (STCNs) to another interface or to other segments, use the **rep stcn** command in interface configuration mode. To disable the task of sending STCNs to the interface or to the segment, use the **no** form of this command.

```
rep stcn {interface interface-id | segment segment-id-list}
no rep stcn {interface | segment}
```

<b>Syntax Description</b>	<b>interface</b> <i>interface-id</i> Specifies a physical interface or port channel to receive STCNs.				
	<b>segment</b> <i>segment-id-list</i> Specifies one REP segment or a list of REP segments to receive STCNs. The segment range is from 1 to 1024. You can also configure a sequence of segments, for example, 3 to 5, 77, 100.				
<b>Command Default</b>	Transmission of STCNs to other interfaces or segments is disabled.				
<b>Command Modes</b>	Interface configuration (config-if)				
<b>Command History</b>	<table border="1"> <thead> <tr> <th>Release</th> <th>Modification</th> </tr> </thead> <tbody> <tr> <td></td> <td>This command was introduced.</td> </tr> </tbody> </table>	Release	Modification		This command was introduced.
Release	Modification				
	This command was introduced.				
<b>Usage Guidelines</b>	You can verify your settings by entering the <b>show interfaces rep detail</b> command in privileged EXEC mode.				

### Examples

The following example shows how to configure a REP edge port to send STCNs to segments 25 to 50:

```
Device(config)# interface TenGigabitEthernet 4/1
Device(config-if)# rep stcn segment 25-50
```

# show etherchannel

To display EtherChannel information for a channel, use the **show etherchannel** command in user EXEC mode.

```
show etherchannel [{channel-group-number} | {detail | port | port-channel | protocol | summary }]}
| [{detail | load-balance | port | port-channel | protocol | summary}]
```

## Syntax Description

<i>channel-group-number</i>	
<b>detail</b>	(Optional) Displays detailed EtherChannel information.
<b>load-balance</b>	(Optional) Displays the load-balance or frame-distribution scheme among ports in the port channel.
<b>port</b>	(Optional) Displays EtherChannel port information.
<b>port-channel</b>	(Optional) Displays port-channel information.
<b>protocol</b>	(Optional) Displays the protocol that is being used in the channel.
<b>summary</b>	(Optional) Displays a one-line summary per channel group.

## Command Default

None

## Command Modes

User EXEC

## Command History

Release	Modification
Cisco IOS XE Everest 16.5.1a	This command was introduced.

## Usage Guidelines

If you do not specify a channel group number, all channel groups are displayed.

In the output, the passive port list field is displayed only for Layer 3 port channels. This field means that the physical port, which is still not up, is configured to be in the channel group (and indirectly is in the only port channel in the channel group).

This is an example of output from the **show etherchannel channel-group-number detail** command:

```
Device> show etherchannel 1 detail
Group state = L2
Ports: 2   Maxports = 16
Port-channels: 1 Max Port-channels = 16
Protocol:   LACP
           Ports in the group:
           -----
Port: Gi1/0/1
-----
Port state   = Up Mstr In-Bndl
Channel group = 1           Mode = Active           Gcchange = -
Port-channel =              Po1GC = -             Pseudo port-channel = Po1
Port index   =              0Load = 0x00          Protocol = LACP
```

## show etherchannel

Flags: S - Device is sending Slow LACPDU      F - Device is sending fast LACPDU  
 A - Device is in active mode.                P - Device is in passive mode.

Local information:

Port	Flags	State	LACP port Priority	Admin Key	Oper Key	Port Number	Port State
Gil/0/1	SA	bndl	32768	0x1	0x1	0x101	0x3D
Gil/0/2	A	bndl	32768	0x0	0x1	0x0	0x3D

Age of the port in the current state: 01d:20h:06m:04s

Port-channels in the group:

Port-channel: Po1 (Primary Aggregator)

Age of the Port-channel = 01d:20h:20m:26s  
 Logical slot/port = 10/1                      Number of ports = 2  
 HotStandBy port = null  
 Port state = Port-channel Ag-Inuse  
 Protocol = LACP

Ports in the Port-channel:

Index	Load	Port	EC state	No of bits
0	00	Gil/0/1	Active	0
0	00	Gil/0/2	Active	0

Time since last port bundled: 01d:20h:24m:44s Gil/0/2

This is an example of output from the **show etherchannel channel-group-number summary** command:

```
Device> show etherchannel 1 summary
Flags: D - down P - in port-channel
       I - stand-alone s - suspended
       H - Hot-standby (LACP only)
       R - Layer3 S - Layer2
       u - unsuitable for bundling
       U - in use f - failed to allocate aggregator
       d - default port
```

Number of channel-groups in use: 1  
 Number of aggregators: 1

Group	Port-channel	Protocol	Ports
1	Po1(SU)	LACP	Gil/0/1(P) Gil/0/2(P)

This is an example of output from the **show etherchannel channel-group-number port-channel** command:

```
Device> show etherchannel 1 port-channel
Port-channels in the group:
-----
Port-channel: Po1 (Primary Aggregator)
-----
Age of the Port-channel = 01d:20h:24m:50s
Logical slot/port = 10/1 Number of ports = 2
Logical slot/port = 10/1 Number of ports = 2
Port state = Port-channel Ag-Inuse
```

```
Protocol = LACP
```

```
Ports in the Port-channel:
```

Index	Load	Port	EC state	No of bits
0	00	Gi1/0/1	Active	0
0	00	Gi1/0/2	Active	0

```
Time since last port bundled: 01d:20h:24m:44s Gi1/0/2
```

This is an example of output from **show etherchannel protocol** command:

```
Device# show etherchannel protocol
Channel-group listing:
-----
Group: 1
-----
Protocol: LACP
Group: 2
-----
Protocol: PAgP
```

# show interfaces rep detail

To display detailed Resilient Ethernet Protocol (REP) configuration and status for all interfaces or a specified interface, including the administrative VLAN, use the **show interfaces rep detail** command in privileged EXEC mode.

**show interfaces** [*interface-id*] **rep detail**

<b>Syntax Description</b>	<i>interface-id</i> (Optional) Physical interface used to display the port ID.
---------------------------	--

<b>Command Default</b>	None.
------------------------	-------

<b>Command Modes</b>	Privileged EXEC (#)
----------------------	---------------------

<b>Command History</b>	<b>Release</b>	<b>Modification</b>
		This command was introduced.

<b>Usage Guidelines</b>	Enter this command on a segment edge port to send STCNs to one or more segments or to an interface. You can verify your settings by entering the <b>show interfaces rep detail</b> command in privileged EXEC mode.
-------------------------	---

<b>Examples</b>	The following example shows how to display the REP configuration and status for a specified interface;
-----------------	--

```
Device# show interfaces TenGigabitEthernet4/1 rep detail

TenGigabitEthernet4/1 REP enabled
Segment-id: 3 (Primary Edge)
PortID: 03010015FA66FF80
Preferred flag: No
Operational Link Status: TWO_WAY
Current Key: 02040015FA66FF804050
Port Role: Open
Blocked VLAN: <empty>
Admin-vlan: 1
Preempt Delay Timer: disabled
Configured Load-balancing Block Port: none
Configured Load-balancing Block VLAN: none
STCN Propagate to: none
LSL PDU rx: 999, tx: 652
HFL PDU rx: 0, tx: 0
BPA TLV rx: 500, tx: 4
BPA (STCN, LSL) TLV rx: 0, tx: 0
BPA (STCN, HFL) TLV rx: 0, tx: 0
EPA-ELECTION TLV rx: 6, tx: 5
EPA-COMMAND TLV rx: 0, tx: 0
EPA-INFO TLV rx: 135, tx: 136
```

<b>Related Commands</b>	<b>Command</b>	<b>Description</b>
	<b>rep admin vlan</b>	Configures a REP administrative VLAN for the REP to transmit HFL messages.

# show lacp

To display Link Aggregation Control Protocol (LACP) channel-group information, use the **show lacp** command in user EXEC mode.

```
show lacp [channel-group-number] {counters | internal | neighbor | sys-id}
```

## Syntax Description

*channel-group-number*

**counters** Displays traffic information.

**internal** Displays internal information.

**neighbor** Displays neighbor information.

**sys-id** Displays the system identifier that is being used by LACP. The system identifier consists of the LACP system priority and the device MAC address.

## Command Default

None

## Command Modes

User EXEC

## Command History

### Release

Cisco IOS XE Everest 16.5.1a

### Modification

This command was introduced.

## Usage Guidelines

You can enter any **show lacp** command to display the active channel-group information. To display specific channel information, enter the **show lacp** command with a channel-group number.

If you do not specify a channel group, information for all channel groups appears.

You can enter the *channel-group-number* to specify a channel group for all keywords except **sys-id**.

This is an example of output from the **show lacp counters** user EXEC command. The table that follows describes the fields in the display.

```
Device> show lacp counters
          LACPDUs      Marker      Marker Response      LACPDUs
Port      Sent  Recv      Sent  Recv      Sent  Recv      Pkts  Err
-----
Channel group:1
Gi2/0/1      19   10           0    0           0    0           0
Gi2/0/2      14    6           0    0           0    0           0
```

**Table 1: show lacp counters Field Descriptions**

Field	Description
LACPDUs Sent and Recv	The number of LACP packets sent and received by a port.

Field	Description
Marker Sent and Recv	The number of LACP marker packets sent and received by a port.
Marker Response Sent and Recv	The number of LACP marker response packets sent and received by a port.
LACPDUs Pkts and Err	The number of unknown and illegal packets received by LACP for a port.

This is an example of output from the **show lacp internal** command:

```
Device> show lacp 1 internal
Flags: S - Device is requesting Slow LACPDUs
       F - Device is requesting Fast LACPDUs
       A - Device is in Active mode           P - Device is in Passive mode

Channel group 1

Port      Flags  State  LACP port  Admin  Oper  Port  Port
Port      Flags  State  Priority   Key    Key   Number State
Gi2/0/1   SA     bndl   32768     0x3    0x3   0x4   0x3D
Gi2/0/2   SA     bndl   32768     0x3    0x3   0x5   0x3D
```

The following table describes the fields in the display:

**Table 2: show lacp internal Field Descriptions**

Field	Description
State	State of the specific port. These are the allowed values: <ul style="list-style-type: none"> <li>• <b>—</b>—Port is in an unknown state.</li> <li>• <b>bndl</b>—Port is attached to an aggregator and bundled with other ports.</li> <li>• <b>susp</b>—Port is in a suspended state; it is not attached to any aggregator.</li> <li>• <b>hot-sby</b>—Port is in a hot-standby state.</li> <li>• <b>indiv</b>—Port is incapable of bundling with any other port.</li> <li>• <b>indep</b>—Port is in an independent state (not bundled but able to handle data traffic. In this case, LACP is not running on the partner port).</li> <li>• <b>down</b>—Port is down.</li> </ul>
LACP Port Priority	Port priority setting. LACP uses the port priority to put ports in standby mode when there is a hardware limitation that prevents all compatible ports from aggregating.



Field	Description
Admin Key	Administrative key assigned to this port. LACP automatically generates an administrative key value as a hexadecimal number. The administrative key defines the ability of a port to aggregate with other ports. A port's ability to aggregate with other ports is determined by the port physical characteristics (for example, data rate and duplex capability) and configuration restrictions that you establish.
Oper Key	Runtime operational key that is being used by this port. LACP automatically generates this value as a hexadecimal number.
Port Number	Port number.
Port State	<p>State variables for the port, encoded as individual bits within a single octet with these meanings:</p> <ul style="list-style-type: none"> <li>• bit0: LACP_Activity</li> <li>• bit1: LACP_Timeout</li> <li>• bit2: Aggregation</li> <li>• bit3: Synchronization</li> <li>• bit4: Collecting</li> <li>• bit5: Distributing</li> <li>• bit6: Defaulted</li> <li>• bit7: Expired</li> </ul> <p><b>Note</b> In the list above, bit7 is the MSB and bit0 is the LSB.</p>

This is an example of output from the **show lacp neighbor** command:

```

Device> show lacp neighbor
Flags: S - Device is sending Slow LACPDUs   F - Device is sending Fast LACPDUs
       A - Device is in Active mode          P - Device is in Passive mode

Channel group 3 neighbors

Partner's information:

Port          Partner                Partner                Partner
Gi2/0/1      System ID              Port Number            Age                Flags
32768,0007.eb49.5e80  0xC                    19s                 SP

                LACP Partner          Partner                Partner
                Port Priority        Oper Key               Port State
                32768                    0x3                    0x3C

Partner's information:

```

Port	Partner System ID	Partner Port Number	Age	Partner Flags
Gi2/0/2	32768,0007.eb49.5e80	0xD	15s	SP
	LACP Partner Port Priority	Partner Oper Key	Partner Port State	
	32768	0x3	0x3C	

This is an example of output from the **show lacp sys-id** command:

```
Device> show lacp sys-id
32765,0002.4b29.3a00
```

The system identification is made up of the system priority and the system MAC address. The first two bytes are the system priority, and the last six bytes are the globally administered individual MAC address associated to the system.

# show pagp

To display Port Aggregation Protocol (PAgP) channel-group information, use the **show pagp** command in EXEC mode.

```
show pagp [channel-group-number] {counters | dual-active | internal | neighbor}
```

Syntax Description	
	<i>channel-group-number</i>
<b>counters</b>	Displays traffic information.
<b>dual-active</b>	Displays the dual-active status.
<b>internal</b>	Displays internal information.
<b>neighbor</b>	Displays neighbor information.

**Command Default** None

**Command Modes** User EXEC  
Privileged EXEC

Command History	Release	Modification
	Cisco IOS XE Everest 16.5.1a	This command was introduced.

**Usage Guidelines** You can enter any **show pagp** command to display the active channel-group information. To display the nonactive information, enter the **show pagp** command with a channel-group number.

## Examples

This is an example of output from the **show pagp 1 counters** command:

```
Device> show pagp 1 counters
          Information      Flush
Port      Sent   Recv   Sent   Recv
-----
Channel group: 1
  Gi1/0/1   45    42     0     0
  Gi1/0/2   45    41     0     0
```

This is an example of output from the **show pagp dual-active** command:

```
Device> show pagp dual-active
PAgP dual-active detection enabled: Yes
PAgP dual-active version: 1.1

Channel group 1
Port      Dual-Active   Partner      Partner   Partner
          Detect Capable Name          Port      Version
Gi1/0/1   No            Device       Gi3/0/3   N/A
Gi1/0/2   No            Device       Gi3/0/4   N/A
```

<output truncated>

This is an example of output from the **show pagp 1 internal** command:

```
Device> show pagp 1 internal
Flags: S - Device is sending Slow hello. C - Device is in Consistent state.
       A - Device is in Auto mode.
Timers: H - Hello timer is running.      Q - Quit timer is running.
       S - Switching timer is running.    I - Interface timer is running.
```

```
Channel group 1
```

Port	Flags	State	Timers	Hello Interval	Partner Count	PAGP Priority	Learning Method	Group Ifindex
Gi1/0/1	SC	U6/S7	H	30s	1	128	Any	16
Gi1/0/2	SC	U6/S7	H	30s	1	128	Any	16

This is an example of output from the **show pagp 1 neighbor** command:

```
Device> show pagp 1 neighbor

Flags: S - Device is sending Slow hello. C - Device is in Consistent state.
       A - Device is in Auto mode.      P - Device learns on physical port.
```

```
Channel group 1 neighbors
```

Port	Partner Name	Partner Device ID	Partner Port	Age	Partner Flags	Partner Group Cap.
Gi1/0/1	device-p2	0002.4b29.4600	Gi01//1	9s	SC	10001
Gi1/0/2	device-p2	0002.4b29.4600	Gi1/0/2	24s	SC	10001

# show platform etherchannel

To display platform-dependent EtherChannel information, use the **show platform etherchannel** command in privileged EXEC mode.

```
show platform etherchannel channel-group-number {group-mask | load-balance mac src-mac
dst-mac [ip src-ip dst-ip [port src-port dst-port]]} [switch switch-number]
```

Syntax Description	
<i>channel-group-number</i>	Channel group number. The range is 1 to 128.
<b>group-mask</b>	Displays EtherChannel group mask.
<b>load-balance</b>	Tests EtherChannel load-balance hash algorithm.
<b>mac</b> <i>src-mac</i> <i>dst-mac</i>	Specifies the source and destination MAC addresses.
<b>ip</b> <i>src-ip</i> <i>dst-ip</i>	(Optional) Specifies the source and destination IP addresses.
<b>port</b> <i>src-port</i> <i>dst-port</i>	(Optional) Specifies the source and destination layer port numbers.
<b>switch</b> <i>switch-number</i>	(Optional) Specifies the stack member.

**Command Default** None

**Command Modes** Privileged EXEC

Command History	Release	Modification
	Cisco IOS XE Everest 16.5.1a	This command was introduced.

**Usage Guidelines** Use this command only when you are working directly with a technical support representative while troubleshooting a problem.

Do not use this command unless a technical support representative asks you to do so.

# show platform pm

To display platform-dependent port manager information, use the **show platform pm** command in privileged EXEC mode.

---

**Command Default** None

---

**Command Modes** Privileged EXEC

---

Command History	Release	Modification
	Cisco IOS XE Everest 16.5.1a	This command was introduced.

---



---

**Usage Guidelines** Use this command only when you are working directly with your technical support representative while troubleshooting a problem.

Do not use this command unless your technical support representative asks you to do so.

# show rep topology

To display Resilient Ethernet Protocol (REP) topology information for a segment or for all the segments, including the primary and secondary edge ports in the segment, use the **show rep topology** command in privileged EXEC mode.

**show rep topology** [**segment** *segment-id*] [**archive**] [**detail**]

Syntax Description	segment <i>segment-id</i>	(Optional) Specifies the segment for which to display the REP topology information. The <i>segment-id</i> range is from 1 to 1024.
	<b>archive</b>	(Optional) Displays the previous topology of the segment. This keyword is useful for troubleshooting a link failure.
	<b>detail</b>	(Optional) Displays detailed REP topology information.
Command Modes	Privileged EXEC (#)	
Command History	Release	Modification
		This command was introduced.

## Examples

The following is a sample output from the **show rep topology** command:

```
Device# show rep topology

REP Segment 1
BridgeName      PortName      Edge Role
-----
10.64.106.63    Te5/4         Pri  Open
10.64.106.228  Te3/4         Open
10.64.106.228  Te3/3         Open
10.64.106.67   Te4/3         Open
10.64.106.67   Te4/4         Alt
10.64.106.63   Te4/4         Sec  Open

REP Segment 3
BridgeName      PortName      Edge Role
-----
10.64.106.63    Gi50/1        Pri  Open
SVT_3400_2      Gi0/3         Open
SVT_3400_2      Gi0/4         Open
10.64.106.68   Gi40/2        Open
10.64.106.68   Gi40/1        Open
10.64.106.63   Gi50/2        Sec  Alt
```

The following is a sample output from the **show rep topology detail** command:

```
Device# show rep topology detail

REP Segment 1
10.64.106.63, Te5/4 (Primary Edge)
  Open Port, all vlans forwarding
  Bridge MAC: 0005.9b2e.1700
```

```
Port Number: 010
Port Priority: 000
Neighbor Number: 1 / [-6]
10.64.106.228, Te3/4 (Intermediate)
Open Port, all vlans forwarding
Bridge MAC: 0005.9b1b.1f20
Port Number: 010
Port Priority: 000
Neighbor Number: 2 / [-5]
10.64.106.228, Te3/3 (Intermediate)
Open Port, all vlans forwarding
Bridge MAC: 0005.9b1b.1f20
Port Number: 00E
Port Priority: 000
Neighbor Number: 3 / [-4]
10.64.106.67, Te4/3 (Intermediate)
Open Port, all vlans forwarding
Bridge MAC: 0005.9b2e.1800
Port Number: 008
Port Priority: 000
Neighbor Number: 4 / [-3]
10.64.106.67, Te4/4 (Intermediate)
Alternate Port, some vlans blocked
Bridge MAC: 0005.9b2e.1800
Port Number: 00A
Port Priority: 000
Neighbor Number: 5 / [-2]
10.64.106.63, Te4/4 (Secondary Edge)
Open Port, all vlans forwarding
Bridge MAC: 0005.9b2e.1700
Port Number: 00A
Port Priority: 000
Neighbor Number: 6 / [-1]
```



## show udld

To display UniDirectional Link Detection (UDLD) administrative and operational status for all ports or the specified port, use the **show udld** command in user EXEC mode.

```
show udld [ANI | AccessTunnel | Auto-Template | BDI | CEM-PG | GMPLS |
GigabitEthernet | HundredGigE | InternalInterface | LISP | Loopback | Null |
PROTECTION_GROUP | Port-channel | SDH_ACR | SERIAL-ACR | Serial-PG | TLS-VIF
| Tunnel | Tunnel-tp | TwentyFiveGigE | VirtualPortGroup | Vlan | nve] interface_number
show udld neighbors
show udld fast-hello interface_number
```

Syntax Description		
<b>ANI</b>	(Optional)	Displays UDLD operational status of the Autonomic-Networking virtual interface.
<b>AccessTunnel</b>	(Optional)	Displays UDLD operational status of the Access Tunnel Interface.
<b>Auto-Template</b>	(Optional)	Displays UDLD operational status of the auto-template interface. The range is from 1 to 999.
<b>BDI</b>	(Optional)	Displays UDLD operational status of the Bridge-Domain interface.
<b>CEM-PG</b>	(Optional)	Displays UDLD operational status of the Circuit Emulation interface with Protection group.
<b>GMPLS</b>	(Optional)	Displays UDLD operational status of the MPLS interface.
<b>GigabitEthernet</b>	(Optional)	Displays UDLD operational status of the GigabitEthernet interface.
<b>HundredGigE</b>	(Optional)	Displays UDLD operational status of the Hundred Gigabit Ethernet.
<b>InternalInterface</b>	(Optional)	Displays UDLD operational status of the internal interface. The range is from 0 to 9.
<b>LISP</b>	(Optional)	Displays UDLD operational status of the Locator/ID Separation Protocol Virtual Interface.
<b>Loopback</b>	(Optional)	Displays UDLD operational status of the loopback interface. The range is from 0 to 2147483647.
<b>Null</b>	(Optional)	Displays UDLD operational status of the null interface.
<b>PROTECTION_GROUP</b>	(Optional)	Displays UDLD operational status of the Protection-group controller.

<b>Port-channel</b>	(Optional) Displays UDLD operational status of the Ethernet channel interfaces. The range is 1 to 128.
<b>SDH_ACR</b>	(Optional) Displays UDLD operational status of the Virtual SDH-ACR controller.
<b>SERIAL-ACR</b>	(Optional) Displays UDLD operational status of the Serial interface with ACR.
<b>Serial-PG</b>	(Optional) Displays UDLD operational status of the Serial interface with Protection Group.
<b>TLS-VIF</b>	(Optional) Displays UDLD operational status of the TLS Virtual Interface.
<b>Tunnel</b>	(Optional) Displays UDLD operational status of the tunnel interface. The range is from 0 to 2147483647.
<b>Tunnel-tp</b>	(Optional) Displays UDLD operational status of the MPLS Transport Profile interface.
<b>TwentyFiveGigE</b>	(Optional) Displays UDLD operational status of the Twenty Five Gigabit Ethernet.
<b>VirtualPortGroup</b>	(Optional) Displays UDLD operational status of the Virtual Port Group.
<b>Vlan</b>	(Optional) Displays UDLD operational status of the VLAN interface. The range is from 1 to 4095.
<i>interface_number</i>	(Optional) ID of the interface and port number. Valid interfaces include physical ports, VLANs, and port channels.
<b>nve</b>	(Optional) Displays UDLD operational status of Network virtualization endpoint interface
<b>neighbors</b>	(Optional) Displays neighbor information only.
<b>fast-hello</b>	(Optional) Displays ports that have fast-hello configured and their fast-hello operational status.
<b>fast-hello</b> <i>interface_number</i>	(Optional) Displays the fast-hello information of a specific interface.

**Command Modes**

User EXEC

**Command History**

<b>Release</b>	<b>Modification</b>
Cisco IOS XE Everest 16.5.1a	This command was introduced.
Cisco IOS XE Fuji 16.9.1	The fast-hello keyword was added to the command.

**Usage Guidelines**

If you do not enter an interface ID, administrative and operational UDLD status for all interfaces appear.

Examples:

This is an example of output from the **show udld *interface-id*** command. For this display, UDLD is enabled on both ends of the link, and UDLD detects that the link is bidirectional.

```
Device> show udld TwentyFiveGigE1/0/1
Interface TwentyFiveGigE1/0/1
---
Port enable administrative configuration setting: Enabled
Port enable operational state: Enabled
Current bidirectional state: Bidirectional
Current operational state: Advertisement - Single neighbor detected
Message interval: 7000 ms
Time out interval: 5000 ms

Port fast-hello configuration setting: Enabled
Port fast-hello interval: 200 ms
Port fast-hello operational state: Enabled
Neighbor fast-hello configuration setting: Enabled
Neighbor fast-hello interval: 200 ms

Entry 1
---
Expiration time: 1400 ms
Cache Device index: 1
Current neighbor state: Bidirectional
Device ID: 0A74286120
Port ID: Hu1/0/2
Neighbor echo 1 device: 0A74286A80
Neighbor echo 1 port: Hu1/0/10

TLV Message interval: 15
TLV fast-hello interval: 500 ms
TLV Time out interval: 5
TLV CDP Device name: SkyFox-59
```

This is an example of output from the **show udld fast-hello *interface-id*** command. For this display, UDLD is enabled on both ends of the link, and UDLD detects that the link is bidirectional. The fast-hello information of the port is displayed along with the UDLD operational status.

```
Device> show udld fast-hello hundredGigE 1/0/10
Interface hundredGigE 1/0/10
---Port enable administrative configuration setting: Enabled
Port enable operational state: Enabled
Current bidirectional state: Bidirectional
Current operational state: Advertisement - Single neighbor detected
Message interval: 500 ms
Time out interval: 5000 ms

Port fast-hello configuration setting: Enabled
Port fast-hello interval: 500 ms
Port fast-hello operational state: Enabled
Neighbor fast-hello configuration setting: Enabled
Neighbor fast-hello interval: 500 ms

Entry 1
---
Expiration time: 1400 ms
Cache Device index: 1
Current neighbor state: Bidirectional
Device ID: 0A74286120
Port ID: Hu1/0/2
```

```
Neighbor echo 1 device: 0A74286A80
Neighbor echo 1 port: Hu1/0/10
```

```
TLV Message interval: 15
TLV fast-hello interval: 500 ms
TLV Time out interval: 5
TLV CDP Device name: SkyFox-59
```

This is an example of output from the **show udd fast-hello** global command.

```
Device> show udd fast-hello
Total ports on which fast hello can be configured: 32
Total ports with fast hello configured: 3
Total ports with fast hello operational: 3
Total ports with fast hello non-operational: 0
```

Port-ID	Hello	Neighbor-Hello	Neighbor-Device	Neighbor-Port	Status
Hu1/0/10	500	500	0A74286120	Hu1/0/2	Operational
Hu1/0/12	500	500	0A74286120	Hu1/0/18	Operational
Hu1/0/14	500	500	0A74286120	Hu1/0/4	Operational

This is an example of output from the **show udd neighbors** command:

```
Device> enable
Device# show udd neighbors
Port      Device Name      Device ID  Port-ID  OperState
-----
Gi2/0/1   Switch-A         1         Gi2/0/1  Bidirectional
Gi3/0/1   Switch-A         2         Gi3/0/1  Bidirectional
```

# spanning-tree backbonefast

To enable BackboneFast to allow a blocked port on a switch to change immediately to a listening mode, use the **spanning-tree backbonefast** command in global configuration mode. To return to the default setting, use the **no** form of this command.

**spanning-tree backbonefast**  
**no spanning-tree backbonefast**

**Syntax Description** This command has no arguments or keywords.

**Command Default** BackboneFast is disabled.

**Command Modes** Global configuration (config)

Command History	Release	Modification
	Cisco IOS XE Everest 16.5.1a	This command was introduced.

**Usage Guidelines** BackboneFast should be enabled on all of the Cisco devices containing an Ethernet switch network module. BackboneFast provides for fast convergence in the network backbone after a spanning-tree topology change. It enables the switch to detect an indirect link failure and to start the spanning-tree reconfiguration sooner than it would under normal spanning-tree rules.

Use the **show spanning-tree** privileged EXEC command to verify your settings.

## Examples

The following example shows how to enable BackboneFast on the device:

```
Device(config)# spanning-tree backbonefast
```

Related Commands	Command	Description
	<b>show spanning-tree</b>	Displays information about the spanning-tree state.

# spanning-tree bpdudfilter

To enable bridge protocol data unit (BPDU) filtering on the interface, use the **spanning-tree bpdudfilter** command in interface configuration or template configuration mode. To return to the default settings, use the **no** form of this command.

**spanning-tree bpdudfilter** { **enable** | **disable** }  
**no spanning-tree bpdudfilter**

Syntax Description	enable	disable
	Enables BPDU filtering on this interface.	Disables BPDU filtering on this interface.

**Command Default** The setting that is already configured when you enter the **spanning-tree portfast edge bpdudfilter default** command .

**Command Modes** Interface configuration (config-if)  
 Template configuration (config-template)

Command History	Release	Modification
	Cisco IOS XE Everest 16.5.1a	This command was introduced.

## Usage Guidelines



**Caution** Be careful when you enter the **spanning-tree bpdudfilter enable** command. Enabling BPDU filtering on an interface is similar to disabling the spanning tree for this interface. If you do not use this command correctly, you might create bridging loops.

Entering the **spanning-tree bpdudfilter enable** command to enable BPDU filtering overrides the PortFast configuration.

When configuring Layer 2-protocol tunneling on all the service-provider edge switches, you must enable spanning-tree BPDU filtering on the 802.1Q tunnel ports by entering the **spanning-tree bpdudfilter enable** command.

BPDU filtering prevents a port from sending and receiving BPDUs. The configuration is applicable to the whole interface, whether it is trunking or not. This command has three states:

- **spanning-tree bpdudfilter enable**: Unconditionally enables BPDU filtering on the interface.
- **spanning-tree bpdudfilter disable**: Unconditionally disables BPDU filtering on the interface.
- **no spanning-tree bpdudfilter**: Enables BPDU filtering on the interface if the interface is in operational PortFast state and if you configure the **spanning-tree portfast bpdudfilter default** command.

Use the **spanning-tree portfast bpdudfilter default** command to enable BPDU filtering on all ports that are already configured for PortFast.

---

**Examples**

This example shows how to enable BPDU filtering on this interface:

```
Device(config-if) # spanning-tree bpdudfilter enable
Device(config-if) #
```

The following example shows how to enable BPDU filtering on an interface using interface template:

```
Device# configure terminal
Device(config) # template user-templatel
Device(config-template) # spanning-tree bpdudfilter enable
Device(config-template) # end
```

---

**Related Commands**

Command	Description
<b>show spanning-tree</b>	Displays information about the spanning-tree state.
<b>spanning-tree portfast edge bpdudfilter default</b>	Enables BPDU filtering by default on all PortFast ports.

# spanning-tree bpduguard

To enable bridge protocol data unit (BPDU) guard on the interface, use the **spanning-tree bpduguard** command in interface configuration and template configuration mode. To return to the default settings, use the **no** form of this command.

```
spanning-tree bpduguard { enable | disable }
no spanning-tree bpduguard
```

Syntax Description	enable	disable
	Enables BPDU guard on this interface.	Disables BPDU guard on this interface.

Command Modes	Interface configuration (config-if) Template configuration (config-template)
---------------	---

Command History	Release	Modification
	Cisco IOS XE Everest 16.5.1a	This command was introduced.

**Usage Guidelines** BPDU guard prevents a port from receiving BPDUs. Typically, this feature is used in a service-provider environment where the network administrator wants to prevent an access port from participating in the spanning tree. If the port still receives a BPDU, it is put in the error-disabled state as a protective measure. This command has three states:

- **spanning-tree bpduguard enable**: Unconditionally enables BPDU guard on the interface.
- **spanning-tree bpduguard disable**: Unconditionally disables BPDU guard on the interface.
- **no spanning-tree bpduguard**: Enables BPDU guard on the interface if it is in the operational PortFast state and if the **spanning-tree portfast bpduguard default** command is configured.

## Examples

This example shows how to enable BPDU guard on this interface:

```
Device(config-if)# spanning-tree bpduguard enable
Device(config-if)#
```

The following example shows how to enable BPDU guard on an interface using interface template:

```
Device# configure terminal
Device(config)# template user-templatel
Device(config-template)# spanning-tree bpduguard enable
Device(config-template)# end
```

Related Commands	Command	Description
	<b>show spanning-tree</b>	Displays information about the spanning-tree state.



Command	Description
<b>spanning-tree portfast edge bpduguard default</b>	Enables BPDU guard by default on all PortFast ports.

# spanning-tree bridge assurance

To enable bridge assurance on all network ports on the device, use the **spanning-tree bridge assurance** command in global configuration mode. To disable bridge assurance, use the **no** form of this command.

**spanning-tree bridge assurance**  
**no spanning-tree bridge assurance**

**Syntax Description** This command has no arguments or keywords.

**Command Default** Bridge assurance is enabled.

**Command Modes** Global configuration (config)

Command History	Release	Modification
	Cisco IOS XE Everest 16.5.1a	This command was introduced.

**Usage Guidelines** Bridge assurance protects against a unidirectional link failure or other software failure and a device that continues to forward data traffic when it is no longer running the spanning tree algorithm.

Bridge assurance is enabled only on spanning tree network ports that are point-to-point links. Both ends of the link must have bridge assurance enabled. If the device on one side of the link has bridge assurance enabled and the device on the other side either does not support bridge assurance or does not have this feature enabled, the connecting port is blocked.

Disabling bridge assurance causes all configured network ports to behave as normal spanning tree ports.

## Examples

This example shows how to enable bridge assurance on all network ports on the switch:

```
Device(config)#
spanning-tree bridge assurance
Device(config)#
```

This example shows how to disable bridge assurance on all network ports on the switch:

```
Device(config)#
no spanning-tree bridge assurance
Device(config)#
```

## Related Commands

Command	Description
<b>show spanning-tree</b>	Displays information about the spanning-tree state.

# spanning-tree cost

To set the path cost of the interface for Spanning Tree Protocol (STP) calculations, use the **spanning-tree cost** command in interface configuration or template configuration mode. To revert to the default value, use the **no** form of this command.

**spanning-tree cost** *cost*  
**no spanning-tree cost**

## Syntax Description

<i>cost</i>	Path cost. The range is from 1 to 200000000.
-------------	--

## Command Modes

Interface configuration (config-if)  
 Template configuration (config-template)

## Command History

Release	Modification
Cisco IOS XE Everest 16.5.1a	This command was introduced.

## Usage Guidelines

When you specify a value for the cost argument, higher values indicate higher costs. This range applies regardless of the protocol type specified.

If a loop occurs, spanning tree uses the path cost when selecting an interface to place into the forwarding state. A lower path cost represents higher-speed transmission.

## Examples

The following example shows how to access an interface and set a path cost value of 250 for the spanning tree VLAN associated with that interface:

```
Router(config)# interface ethernet 2/0
Router(config-if)# spanning-tree cost 250
```

The following example shows how to set a path cost value of 250 for the spanning tree VLAN associated with an interface using an interface template:

```
Device# configure terminal
Device(config)# template user-templatel
Device(config-template)# spanning-tree cost 250
Device(config-template)# end
```

## Related Commands

Command	Description
<b>show spanning-tree</b>	Displays spanning-tree information for the specified spanning-tree instances.
<b>spanning-tree port-priority</b>	Sets an interface priority when two bridges tie for position as the root bridge.

Command	Description
<b>spanning-tree portfast</b> (global)	Enables PortFast mode, where the interface is immediately put into the forwarding state upon linkup without waiting for the timer to expire.
<b>spanning-tree portfast</b> (interface)	Enables PortFast mode, where the interface is immediately put into the forwarding state upon linkup without waiting for the timer to expire.
<b>spanning-tree uplinkfast</b>	Enables the UplinkFast feature.
<b>spanning-tree vlan</b>	Configures STP on a per-VLAN basis.

## spanning-tree etherchannel guard misconfig

To display an error message when a loop due to a channel misconfiguration is detected, use the **spanning-tree etherchannel guard misconfig** command in global configuration mode. To disable the error message, use the **no** form of this command.

**spanning-tree etherchannel guard misconfig**  
**no spanning-tree etherchannel guard misconfig**

### Syntax Description

This command has no arguments or keywords.

### Command Default

Error messages are displayed.

### Command Modes

Global configuration (config)

### Command History

Release	Modification
Cisco IOS XE Everest 16.5.1a	This command was introduced.

### Usage Guidelines

EtherChannel uses either Port Aggregation Protocol (PAgP) or Link Aggregation Control Protocol (LACP) and does not work if the EtherChannel mode of the interface is enabled using the **channel-group** group-number mode on command.

The **spanning-tree etherchannel guard misconfig** command detects two types of errors: misconfiguration and misconnection errors. A misconfiguration error is an error between the port-channel and an individual port. A misconnection error is an error between a device that is channeling more ports and a device that is not using enough Spanning Tree Protocol (STP) Bridge Protocol Data Units (BPDUs) to detect the error. In this case, the device will only error disable an EtherChannel if the switch is a nonroot device.

When an EtherChannel-guard misconfiguration is detected, this error message displays:

```
msgdef(CHNL_MISCFG, SPANTREE, LOG_CRIT, 0, "Detected loop due to etherchannel misconfiguration of %s %s")
```

To determine which local ports are involved in the misconfiguration, enter the **show interfaces status err-disabled** command. To check the EtherChannel configuration on the remote device, enter the **show etherchannel summary** command on the remote device.

After you correct the configuration, enter the **shutdown** and the **no shutdown** commands on the associated port-channel interface.

### Examples

This example shows how to enable the EtherChannel-guard misconfiguration:

```
Device(config)# spanning-tree etherchannel guard misconfig
Device(config)#
```

### Related Commands

Command	Description
<b>show etherchannel summary</b>	Displays the EtherChannel information for a channel.

Command	Description
<b>show interfaces status err-disabled</b>	Displays the interface status or a list of interfaces in an error-disabled state on LAN ports only.
<b>shutdown</b>	Disables an interface.

# spanning-tree extend system-id

To enable the extended-system ID feature on chassis that support 1024 MAC addresses, use the **spanning-tree extend system-id** command in global configuration mode. To disable the extended system identification, use the **no** form of this command.

**spanning-tree extend system-id**  
**no spanning-tree extend system-id**

## Syntax Description

This command has no arguments or keywords.

## Command Default

Enabled on systems that do not provide 1024 MAC addresses.

## Command Modes

Global configuration (config)

## Command History

Release	Modification
Cisco IOS XE Everest 16.5.1a	This command was introduced.

## Usage Guidelines

Enabling or disabling the extended-system ID updates the bridge IDs of all active Spanning Tree Protocol (STP) instances, which might change the spanning-tree topology.

## Examples

This example shows how to enable the extended-system ID:

```
Device(config)# spanning-tree extend system-id
Device(config)#
```

## Related Commands

Command	Description
<b>show spanning-tree</b>	Displays information about the spanning-tree state.

# spanning-tree guard

To enable or disable the guard mode, use the **spanning-tree guard** command in interface configuration and template configuration mode. To return to the default settings, use the **no** form of this command.

```
spanning-tree guard { loop | root | none }
no spanning-tree guard
```

## Syntax Description

<b>loop</b>	Enables the loop-guard mode on the interface.
<b>root</b>	Enables root-guard mode on the interface.
<b>none</b>	Sets the guard mode to none.

## Command Default

Guard mode is disabled.

## Command Modes

Interface configuration (config-if)  
 Template configuration (config-template)

## Command History

Release	Modification
Cisco IOS XE Everest 16.5.1a	This command was introduced.

## Examples

This example shows how to enable root guard:

```
Device(config-if) # spanning-tree guard root
Device(config-if) #
```

The following example shows how to enable root guard on an interface using an interface template:

```
Device# configure terminal
Device(config) # template user-templatel
Device(config-template) # spanning-tree guard root
Device(config-template) # end
```

## Related Commands

Command	Description
<b>show spanning-tree</b>	Displays information about the spanning-tree state.
<b>spanning-tree loopguard default</b>	Enables loop guard as a default on all ports of a given bridge.



## spanning-tree link-type

To configure a link type for a port, use the **spanning-tree link-type** command in the interface configuration and template configuration mode. To return to the default settings, use the **no** form of this command.

```
spanning-tree link-type { point-to-point | shared }
no spanning-tree link-type
```

### Syntax Description

<b>point-to-point</b>	Specifies that the interface is a point-to-point link.
<b>shared</b>	Specifies that the interface is a shared medium.

### Command Default

Link type is automatically derived from the duplex setting unless you explicitly configure the link type.

### Command Modes

Interface configuration (config-if)  
 Template configuration (config-template)

### Command History

Release	Modification
Cisco IOS XE Everest 16.5.1a	This command was introduced.

### Usage Guidelines

Rapid Spanning Tree Protocol Plus (RSTP+) fast transition works only on point-to-point links between two bridges.

By default, the switch derives the link type of a port from the duplex mode. A full-duplex port is considered as a point-to-point link while a half-duplex configuration is assumed to be on a shared link.

If you designate a port as a shared link, RSTP+ fast transition is forbidden, regardless of the duplex setting.

If you connect a port (local port) to a remote port through a point-to-point link and the local port becomes a designated port, the device negotiates with the remote port and rapidly changes the local port to the forwarding state

### Examples

This example shows how to configure the port as a shared link:

```
Device(config-if)# spanning-tree link-type shared
Device(config-if)#
```

The following example shows how to configure the port as a shared link using an interface template:

```
Device# configure terminal
Device(config)# template user-templatel
Device(config-template)# spanning-tree link-type shared
Device(config-template)# end
```

---

**Related Commands**

Command	Description
show spanning-tree interface	Displays information about the spanning-tree state.

## spanning-tree loopguard default

To enable loop guard as a default on all ports of a given bridge, use the **spanning-tree loopguard default** command in global configuration mode. To disable loop guard, use the **no** form of this command.

**spanning-tree loopguard default**  
**no spanning-tree loopguard default**

**Syntax Description** This command has no arguments or keywords.

**Command Default** Loop guard is disabled.

**Command Modes** Global configuration (config)

Command History	Release	Modification
	Cisco IOS XE Everest 16.5.1a	This command was introduced.

**Usage Guidelines** Loop guard provides additional security in the bridge network. Loop guard prevents alternate or root ports from becoming the designated port due to a failure that could lead to a unidirectional link.

Loop guard operates only on ports that are considered point to point by the spanning tree.

The individual loop-guard port configuration overrides this command.

### Examples

This example shows how to enable loop guard:

```
Device(config)# spanning-tree loopguard default
Device(config)#
```

Related Commands	Command	Description
	<b>show spanning-tree</b>	Displays information about the spanning-tree state.
	<b>spanning-tree guard</b>	Enables or disables the guard mode.

## spanning-tree mode

To switch between Per-VLAN Spanning Tree+ (PVST+), Rapid-PVST+, and Multiple Spanning Tree (MST) modes, use the **spanning-tree mode** command in global configuration mode. To return to the default settings, use the **no** form of this command.

**spanning-tree mode** [{ **pvst** | **mst** | **rapid-pvst** }]  
**no spanning-tree mode**

<b>Syntax Description</b>	<b>pvst</b>	(Optional) PVST+ mode.
	<b>mst</b>	(Optional) MST mode.
	<b>rapid-pvst</b>	(Optional) Rapid-PVST+ mode.
<b>Command Default</b>	<b>pvst</b>	
<b>Command Modes</b>	Global configuration (config)	
<b>Command History</b>	<b>Release</b>	<b>Modification</b>
	Cisco IOS XE Everest 16.5.1a	This command was introduced.

### Usage Guidelines



**Note** Be careful when using the **spanning-tree mode** command to switch between PVST+, Rapid-PVST+, and MST modes. When you enter the command, all spanning-tree instances are stopped for the previous mode and are restarted in the new mode. Using this command may cause disruption of user traffic.

### Examples

This example shows how to switch to MST mode:

```
Device(config)# spanning-tree mode mst
Device(config)#
```

This example shows how to return to the default mode (PVST+):

```
Device(config)# no spanning-tree mode
Device(config)#
```

### Related Commands

Command	Description
<b>show spanning-tree mst</b>	Displays the information about the MST protocol.

## spanning-tree mst

To set the priority parameters or configure the device as a root for any Multiple Spanning Tree (MST) instance, use the **spanning-tree mst** command in interface configuration mode. To return to the default settings, use the **no** form of this command.

```
spanning-tree mst instance-id { priority priority | root { primary | secondary } }
no spanning-tree mst instance-id { { priority priority | root { primary | secondary } } }
```

### Syntax Description

<b>priority</b> <i>priority</i>	Port priority for an instance. The range is from 0 to 61440 in increments of 4096.
<b>root</b>	Configures the device as a root.

### Command Modes

Interface configuration (config-if)

### Command History

Release	Modification
Cisco IOS XE Everest 16.5.1a	This command was introduced.

### Examples

This example shows how to set the priority:

```
Device(config-if)#
spanning-tree mst 0 priority 1
Device(config-if)#
```

This example shows how to set the device as a primary root:

```
Device(config-if)#
spanning-tree mst 0 root primary
Device(config-if)#
```

### Related Commands

Command	Description
<b>show spanning-tree mst</b>	Displays the information about the MST protocol.

# spanning-tree mst configuration

To enter MST-configuration submode, use the **spanning-tree mst configuration** command in global configuration mode. To return to the default settings, use the **no** form of this command.

**spanning-tree mst configuration**  
**no spanning-tree mst configuration**

## Syntax Description

This command has no arguments or keywords.

## Command Default

The default value for the Multiple Spanning Tree (MST) configuration is the default value for all its parameters:

- No VLANs are mapped to any MST instance (all VLANs are mapped to the Common and Internal Spanning Tree [CIST] instance).
- The region name is an empty string.
- The revision number is 0.

## Command Modes

Global configuration (config)

## Command History

Release	Modification
Cisco IOS XE Everest 16.5.1a	This command was introduced.

## Usage Guidelines

The MST configuration consists of three main parameters:

- Instance VLAN mapping: See the **instance** command.
- Region name: See the **name** command (MST configuration submode).
- Configuration revision number: See the **revision** command.

The **abort** and **exit** commands allow you to exit MST configuration submode. The difference between the two commands depends on whether you want to save your changes or not.

The **exit** command commits all the changes before leaving MST configuration submode. If you do not map secondary VLANs to the same instance as the associated primary VLAN, when you exit MST-configuration submode, a warning message displays and lists the secondary VLANs that are not mapped to the same instance as the associated primary VLAN. The warning message is as follows:

```
These secondary vlans are not mapped to the same instance as their primary:
-> 3
```

The **abort** command leaves MST-configuration submode without committing any changes.

Changing an MST-configuration submode parameter can cause connectivity loss. To reduce service disruptions, when you enter MST-configuration submode, make changes to a copy of the current MST configuration.

When you are done editing the configuration, you can apply all the changes at once by using the exit keyword, or you can exit the submode without committing any change to the configuration by using the abort keyword.

In the unlikely event that two users commit a new configuration at exactly at the same time, this warning message displays:

```
% MST CFG:Configuration change lost because of concurrent access
```

## Examples

This example shows how to enter MST-configuration submode:

```
Device(config)# spanning-tree mst configuration  
Device(config-mst)#
```

This example shows how to reset the MST configuration to the default settings:

```
Device(config)# no spanning-tree mst configuration  
Device(config)#
```

## Related Commands

Command	Description
<b>instance</b>	Maps a VLAN or a set of VLANs to an MST instance.
<b>name (MST)</b>	Sets the name of an MST region.
<b>revision</b>	Sets the revision number for the MST configuration.
<b>show spanning-tree mst</b>	Displays the information about the MST protocol.

## spanning-tree mst forward-time

To set the forward-delay timer for all the instances on the device, use the **spanning-tree mst forward-time** command in global configuration mode. To return to the default settings, use the **no** form of this command.

**spanning-tree mst forward-time** *seconds*  
**no spanning-tree mst forward-time**

<b>Syntax Description</b>	<i>seconds</i>	Number of seconds to set the forward-delay timer for all the instances on the device. The range is from 4 to 30 seconds.
<b>Command Default</b>	15 seconds.	
<b>Command Modes</b>	Global configuration (config)	
<b>Command History</b>	<b>Release</b>	<b>Modification</b>
	Cisco IOS XE Everest 16.5.1a	This command was introduced.

### Examples

This example shows how to set the forward-delay timer:

```
Device(config)# spanning-tree mst forward-time 20
Device(config)#
```

<b>Related Commands</b>	<b>Command</b>	<b>Description</b>
	<b>show spanning-tree mst</b>	Displays the information about the MST protocol.



# spanning-tree mst hello-time

To set the hello-time delay timer for all the instances on the device, use the **spanning-tree mst hello-time** command in global configuration mode. To return to the default settings, use the **no** form of this command.

**spanning-tree mst hello-time** *seconds*  
**no spanning-tree mst hello-time**

<b>Syntax Description</b>	<i>seconds</i>	Number of seconds to set the hello-time delay timer for all the instances on the device. The range is from 1 to 10 in seconds.
---------------------------	----------------	--

**Command Default** 2 seconds

**Command Modes** Global configuration (config)

<b>Command History</b>	<b>Release</b>	<b>Modification</b>
	Cisco IOS XE Everest 16.5.1a	This command was introduced.

**Usage Guidelines** If you do not specify the *hello-time* value, the value is calculated from the network diameter.

**Examples** This example shows how to set the hello-time delay timer:

```
Device(config)# spanning-tree mst hello-time 3
Device(config)#
```

<b>Related Commands</b>	<b>Command</b>	<b>Description</b>
	<b>show spanning-tree mst</b>	Displays the information about the MST protocol.

## spanning-tree mst max-age

To set the max-age timer for all the instances on the device, use the **spanning-tree mst max-age** command in global configuration mode. To return to the default settings, use the **no** form of this command.

**spanning-tree mst max-age** *seconds*

**no spanning-tree mst max-age**

### Syntax Description

<i>seconds</i>	Number of seconds to set the max-age timer for all the instances on the device. The range is from 6 to 40 in seconds.
----------------	---

### Command Default

20 seconds

### Command Modes

Global configuration (config)

### Command History

Release	Modification
Cisco IOS XE Everest 16.5.1a	This command was introduced.

### Examples

This example shows how to set the max-age timer:

```
Device(config)# spanning-tree mst max-age 40
Device(config)#
```

### Related Commands

Command	Description
<b>show spanning-tree mst</b>	Displays the information about the MST protocol.

## spanning-tree mst max-hops

To specify the number of possible hops in the region before a bridge protocol data unit (BPDU) is discarded, use the **spanning-tree mst max-hops** command in global configuration mode. To return to the default settings, use the **no** form of this command.

**spanning-tree mst max-hops** *hopnumber*  
**no spanning-tree mst max-hops**

<b>Syntax Description</b>	<i>hopnumber</i>	Number of possible hops in the region before a BPDU is discarded. The range is from 1 to 255 hops.
<b>Command Default</b>	20 hops	
<b>Command Modes</b>	Global configuration (config)	
<b>Command History</b>	<b>Release</b>	<b>Modification</b>
	Cisco IOS XE Everest 16.5.1a	This command was introduced.

### Examples

This example shows how to set the number of possible hops:

```
Device(config)# spanning-tree mst max-hops 25
Device(config)#
```

<b>Related Commands</b>	<b>Command</b>	<b>Description</b>
	<b>show spanning-tree mst</b>	Displays the information about the MST protocol.

## spanning-tree mst pre-standard

To configure a port to transmit only prestandard bridge protocol data units (BPDUs), use the **spanning-tree mst pre-standard** command in interface configuration mode. To return to the default settings, use the **no** form of this command.

**spanning-tree mst pre-standard**  
**no spanning-tree mst pre-standard**

### Syntax Description

This command has no arguments or keywords.

### Command Default

The default is to automatically detect prestandard neighbors.

### Command Modes

Interface configuration (config-if)

### Command History

Release	Modification
Cisco IOS XE Everest 16.5.1a	This command was introduced.

### Usage Guidelines

Even with the default configuration, the port can receive both prestandard and standard BPDUs.

Prestandard BPDUs are based on the Cisco IOS Multiple Spanning Tree (MST) implementation that was created before the IEEE standard was finalized. Standard BPDUs are based on the finalized IEEE standard.

If you configure a port to transmit prestandard BPDUs only, the prestandard flag displays in the **show spanning-tree** commands. The variations of the prestandard flag are as follows:

- Pre-STD (or pre-standard in long format): This flag displays if the port is configured to transmit prestandard BPDUs and if a prestandard neighbor bridge has been detected on this interface.
- Pre-STD-Cf (or pre-standard (config) in long format): This flag displays if the port is configured to transmit prestandard BPDUs but a prestandard BPDU has not been received on the port, the autodetection mechanism has failed, or a misconfiguration, if there is no prestandard neighbor, has occurred.
- Pre-STD-Rx (or pre-standard (revd) in long format): This flag displays when a prestandard BPDU has been received on the port but it has not been configured to send prestandard BPDUs. The port will send prestandard BPDUs, but we recommend that you change the port configuration so that the interaction with the prestandard neighbor does not rely only on the autodetection mechanism.

If the MST configuration is not compatible with the prestandard (if it includes an instance ID greater than 15), only standard MST BPDUs are transmitted, regardless of the STP configuration on the port.

### Examples

This example shows how to configure a port to transmit only prestandard BPDUs:

```
Router(config-if)# spanning-tree mst pre-standard
Router(config-if)#
```

**Related Commands**

Command	Description
show spanning-tree mst	Displays the information about the MST protocol.

## spanning-tree mst priority

To set the bridge priority for an instance, use the **spanning-tree mst priority** command in global configuration mode. To return to the default setting, use the **no** form of this command.

**spanning-tree mst** *instance* **priority** *priority*  
**no spanning-tree mst priority**

Syntax Description		
	<i>instance</i>	Instance identification number; valid values are from 0 to 4094.
	<b>priority</b> <i>priority</i>	Specifies the bridge priority; see the “Usage Guidelines” section for valid values and additional information.

**Command Default** *priority* is **32768**

**Command Modes** Global configuration (config)

Command History	Release	Modification
	Cisco IOS XE Everest 16.5.1a	This command was introduced.

**Usage Guidelines** You can set the bridge priority in increments of 4096 only. When you set the priority, valid values are **0, 4096, 8192, 12288, 16384, 20480, 24576, 28672, 32768, 36864, 40960, 45056, 49152, 53248, 57344, and 61440.**

You can set the *priority* to **0** to make the switch root.

You can enter *instance* as a single instance or a range of instances, for example, 0-3,5,7-9.

### Examples

This example shows how to set the bridge priority:

```
Device(config)# spanning-tree mst 0 priority 4096
Device(config)#
```

Related Commands	Command	Description
	<b>show spanning-tree mst</b>	Displays the information about the MST protocol.

## spanning-tree mst root

To designate the primary and secondary root switch and set the timer value for an instance, use the **spanning-tree mst root** command in global configuration mode. To return to the default settings, use the **no** form of this command.

```
spanning-tree mst instance root { primary | secondary } [ diameter diameter [ hello-time seconds ] ]
no spanning-tree mst instance root
```

Syntax Description		
<i>instance</i>		Instance identification number. The range is from 0 to 4094.
<b>primary</b>		Specifies the high enough priority (low value) to make the root of the spanning-tree instance.
<b>secondary</b>		Specifies the switch as a secondary root, should the primary root fail.
<b>diameter</b> <i>diameter</i>		(Optional) Specifies the timer values for the root switch that are based on the network diameter. The range is from 1 to 7.
<b>hello-time</b> <i>seconds</i>		(Optional) Specifies the duration between the generation of configuration messages by the root switch.

**Command Default** The **spanning-tree mst root** command has no default settings.

**Command Modes** Global configuration (config)

Command History	Release	Modification
	Cisco IOS XE Everest 16.5.1a	This command was introduced.

**Usage Guidelines** You can enter *instance* as a single instance or a range of instances, for example, 0-3,5,7-9. The **spanning-tree mst root secondary** value is 16384. The **diameter** *diameter* and **hello-time** *seconds* keywords and arguments are available for instance 0 only. If you do not specify the *seconds* argument, the value for it is calculated from the network diameter.

**Examples** This example shows how to designate the primary root switch and timer values for an instance:

```
Router(config)# spanning-tree mst 0 root primary diameter 7 hello-time 2
Router(config)# spanning-tree mst 5 root primary
Router(config)#
```

Related Commands	Command	Description
	<b>show spanning-tree mst</b>	Displays the information about the MST protocol.

## spanning-tree mst simulate pvst global

To enable Per-VLAN Spanning Tree (PVST) simulation globally, enter the **spanning-tree mst simulate pvst global** command in global configuration mode. To disable PVST simulation globally, enter the **no** form of this command.

**spanning-tree mst simulate pvst global**  
**no spanning-tree mst simulate pvst global**

**Syntax Description** This command has no arguments or keywords.

**Command Default** PVST simulation is enabled.

**Command Modes** Global configuration (config)

Command History	Release	Modification
	Cisco IOS XE Everest 16.5.1a	Support for this command was introduced.

**Usage Guidelines** PVST simulation is enabled by default so that all interfaces on the device interoperate between Multiple Spanning Tree (MST) and Rapid Per-VLAN Spanning Tree Plus (PVST+). To prevent an accidental connection to a device that does not run MST as the default Spanning Tree Protocol (STP) mode, you can disable PVST simulation. If you disable PVST simulation, the MST-enabled port moves to the blocking state once it detects it is connected to a Rapid PVST+-enabled port. This port remains in the inconsistent state until the port stops receiving Bridge Protocol Data Units (BPDUs), and then the port resumes the normal STP transition process.

To override the global PVST simulation setting for a port, enter the **spanning-tree mst simulate pvst** interface command in the interface command mode.

### Examples

This example shows how to prevent the switch from automatically interoperating with a connecting device that is running Rapid PVST+:

```
Device(config)#
no spanning-tree mst simulate pvst global
Device(config)#
```

### Related Commands

Command	Description
<b>show spanning-tree mst</b>	Displays the information about the MST protocol.



# spanning-tree pathcost method

To set the default path-cost calculation method, use the **spanning-tree pathcost method** command in global configuration mode. To return to the default settings, use the **no** form of this command.

**spanning-tree pathcost method { long | short }**  
**no spanning-tree pathcost method**

Syntax Description	long	short
	Specifies the 32-bit based values for default port-path costs.	Specifies the 16-bit based values for default port-path costs.

**Command Default** short

**Command Modes** Global configuration (config)

Command History	Release	Modification
	Cisco IOS XE Everest 16.5.1a	This command was introduced.

**Usage Guidelines** The **long** path-cost calculation method utilizes all 32 bits for path-cost calculation and yields values in the range of 1 through 200,000,000.

The **short** path-cost calculation method (16 bits) yields values in the range of 1 through 65535.

## Examples

This example shows how to set the default path-cost calculation method to long:

```
Device(config)
#) spanning-tree pathcost method long
Device(config)
#)
```

This example shows how to set the default path-cost calculation method to short:

```
Device(config)
#) spanning-tree pathcost method short
Device(config)
#)
```

Related Commands	Command	Description
	<b>show spanning-tree</b>	Displays information about the spanning-tree state.

## spanning-tree port-priority

To set an interface priority when two bridges tie for position as the root bridge, use the **spanning-tree port-priority** command in interface configuration and template configuration mode. To revert to the default value, use the **no** form of this command.

**spanning-tree port-priority** *port-priority*  
**no spanning-tree port-priority**

<b>Syntax Description</b>	<i>port-priority</i> Port priority. The range is from 0 to 240 in increments of 16 . The default is 128.
---------------------------	--

**Command Default** The default port priority is 128.

**Command Modes** Interface configuration (config-if)  
 Template configuration (config-if)

<b>Command History</b>	<b>Release</b>	<b>Modification</b>
	Cisco IOS XE Everest 16.5.1a	This command was introduced.

**Usage Guidelines** The priority you set breaks the tie between two bridges to be designated as a root bridge.

### Examples

The following example shows how to increase the likelihood that spanning-tree instance 20 is chosen as the root-bridge on interface Ethernet 2/0:

```
Device(config)# interface ethernet 2/0
Device(config-if)# spanning-tree port-priority 20
Device(config-if)#
```

The following example shows how increase the likelihood that spanning-tree instance 20 is chosen as the root-bridge on an interface using an interface template:

```
Device# configure terminal
Device(config)# template user-templatel
Device(config-template)# spanning-tree port-priority 20
Device(config-template)# end
```

<b>Related Commands</b>	<b>Command</b>	<b>Description</b>
	<b>show spanning-tree</b>	Displays spanning-tree information for the specified spanning-tree instances.
	<b>spanning-tree cost</b>	Sets the path cost of the interface for STP calculations.
	<b>spanning-tree portfast</b> (global)	Enables PortFast mode, where the interface is immediately put into the forwarding state upon linkup without waiting for the timer to expire.

Command	Description
<b>spanning-tree uplinkfast</b>	Enables the UplinkFast feature.
<b>spanning-tree vlan</b>	Configures STP on a per-VLAN basis.

# spanning-tree portfast edge bpdudfilter default

To enable bridge protocol data unit (BPDU) filtering by default on all PortFast ports, use the **spanning-tree portfast edge bpdudfilter default** command in global configuration mode. To return to the default settings, use the **no** form of this command.

**spanning-tree portfast edge bpdudfilter default**  
**no spanning-tree portfast edge bpdudfilter default**

**Syntax Description** This command has no arguments or keywords.

**Command Default** Disabled

**Command Modes** Global configuration (config)

Command History	Release	Modification
	Cisco IOS XE Everest 16.5.1a	This command was introduced.

**Usage Guidelines** The **spanning-tree portfast edge bpdudfilter** command enables BPDU filtering globally on PortFast ports. BPDU filtering prevents a port from sending or receiving any BPDUs.

You can override the effects of the **portfast edge bpdudfilter default** command by configuring BPDU filtering at the interface level.



**Note** Be careful when enabling BPDU filtering. The feature's functionality is different when you enable it on a per-port basis or globally. When enabled globally, BPDU filtering is applied only on ports that are in an operational PortFast state. Ports send a few BPDUs at linkup before they effectively filter outbound BPDUs. If a BPDU is received on an edge port, it immediately loses its operational PortFast status and BPDU filtering is disabled. When enabled locally on a port, BPDU filtering prevents the device from receiving or sending BPDUs on this port.



**Caution** Be careful when using this command. Using this command incorrectly can cause bridging loops.

## Examples

This example shows how to enable BPDU filtering by default:

```
Device(config)#
spanning-tree portfast edge bpdudfilter default
Device(config)#
```

## Related Commands

Command	Description
<b>show spanning-tree mst</b>	Displays the information about the MST protocol.

Command	Description
spanning-tree bpdudfilter	Enables BPDU filtering on the interface.

# spanning-tree portfast edge bpduguard default

To enable bridge protocol data unit (BPDU) guard by default on all PortFast ports, use the **spanning-tree portfast edge bpduguard default** command in global configuration mode. To return to the default settings, use the **no** form of this command.

**spanning-tree portfast edge bpduguard default**  
**no spanning-tree portfast edge bpduguard default**

**Syntax Description** This command has no arguments or keywords.

**Command Default** Disabled

**Command Modes** Global configuration (config)

Command History	Release	Modification
	Cisco IOS XE Everest 16.5.1a	This command was introduced.

## Usage Guidelines



**Caution** Be careful when using this command. You should use this command only with interfaces that connect to end stations; otherwise, an accidental topology loop could cause a data-packet loop and disrupt the device and network operation.

BPDU guard disables a port if it receives a BPDU. BPDU guard is applied only on ports that are PortFast enabled and are in an operational PortFast state.

## Examples

This example shows how to enable BPDU guard by default:

```
Device(config)#
spanning-tree portfast edge bpduguard default
Device(config)#
```

## Related Commands

Command	Description
<b>show spanning-tree mst</b>	Displays the information about the MST protocol.
<b>spanning-tree bpdupfilter</b>	Enables BPDU filtering on the interface.

## spanning-tree portfast default

To enable PortFast by default on all access ports, use the **spanning-tree portfast** {**edge** | **network** | **normal**} **default** command in global configuration mode. To disable PortFast by default on all access ports, use the **no** form of this command.

```
spanning-tree portfast { edge [{ bpdupfilter | bpduguard }] | network | normal } default
no spanning-tree portfast { edge [{ bpdupfilter | bpduguard }] | network | normal } default
```

### Syntax Description

<b>bpdupfilter</b>	Enables PortFast edge BPDU filter by default on all PortFast edge ports.
<b>bpduguard</b>	Enables PortFast edge BPDU guard by default on all PortFast edge ports.
<b>edge</b>	Enables PortFast edge mode by default on all switch access ports.
<b>network</b>	Enables PortFast network mode by default on all switch access ports.
<b>normal</b>	Enables PortFast normal mode by default on all switch access ports.

### Command Default

PortFast is disabled by default on all access ports.

### Command Modes

Global configuration (config)

Release	Modification
Cisco IOS XE Everest 16.5.1a	This command was introduced.

### Usage Guidelines



**Note** Be careful when using this command. You should use this command only with interfaces that connect to end stations; otherwise, an accidental topology loop could cause a data-packet loop and disrupt the operation of the router or switch and the network.

An interface with PortFast mode enabled is moved directly to the spanning-tree forwarding state when linkup occurs without waiting for the standard forward-time delay.

You can enable PortFast mode on individual interfaces using the **spanning-tree portfast** (interface) command.

### Examples

This example shows how to enable PortFast edge mode with BPDU Guard by default on all access ports:

```
Device(config)#
spanning-tree portfast edge bpduguard default
Device(config)#
```

**Related Commands**

<b>Command</b>	<b>Description</b>
<b>show spanning-tree</b>	Displays information about the spanning-tree state.
<b>spanning-tree portfast (interface)</b>	Enables PortFast on a specific interface.



# spanning-tree transmit hold-count

To specify the transmit hold count, use the **spanning-tree transmit hold-count** command in global configuration mode. To return to the default settings, use the **no** form of this command.

**spanning-tree transmit hold-count** *value*  
**no spanning-tree transmit hold-count**

<b>Syntax Description</b>	<i>value</i>	Number of bridge protocol data units (BPDUs) that can be sent before pausing for 1 second. The range is from 1 to 20.
---------------------------	--------------	---

**Command Default** *value* is **6**

**Command Modes** Global configuration (config)

<b>Command History</b>	<b>Release</b>	<b>Modification</b>
	Cisco IOS XE Everest 16.5.1a	This command was introduced.

**Usage Guidelines** This command is supported on all spanning-tree modes.  
 The transmit hold count determines the number of BPDUs that can be sent before pausing for 1 second.



**Note** Changing this parameter to a higher value may have a significant impact on CPU utilization, especially in rapid-Per-VLAN Spanning Tree (PVST) mode. Lowering this parameter could slow convergence in some scenarios. We recommend that you do not change the value from the default setting.

If you change the *value* setting, enter the **show running-config** command to verify the change.

If you delete the command, use the **show spanning-tree mst** command to verify the deletion.

## Examples

This example shows how to specify the transmit hold count:

```
Device(config)# spanning-tree transmit hold-count 8
Device(config)#
```

<b>Related Commands</b>	<b>Command</b>	<b>Description</b>
	<b>show running-config</b>	Displays the status and configuration of the module or Layer 2 VLAN.
	<b>show spanning-tree mst</b>	Display the information about the MST protocol.

# spanning-tree uplinkfast

To enable UplinkFast, use the **spanning-tree uplinkfast** command in global configuration mode. To disable UplinkFast, use the **no** form of this command.

**spanning-tree uplinkfast** [ **max-update-rate** *packets-per-second* ]  
**no spanning-tree uplinkfast** [ **max-update-rate** ]

## Syntax Description

<b>max-update-rate</b> <i>packets-per-second</i>	(Optional) Specifies the maximum rate (in packets per second) at which update packets are sent. The range is from 0 to 32000.
--	---

## Command Default

The defaults are as follows:

- UplinkFast is disabled.
- *packets-per-second* is 150 packets per second.

## Command Modes

Global configuration (config)

## Command History

Release	Modification
Cisco IOS XE Everest 16.5.1a	This command was introduced.

## Usage Guidelines

Use the **spanning-tree uplinkfast max-update-rate** command to enable UplinkFast (if it is not already enabled) and change the rate at which update packets are sent. Use the **no** form of this command to return to the default rate.

## Examples

This example shows how to enable UplinkFast and set the maximum rate to 200 packets per second:

```
Device(config)#
 spanning-tree uplinkfast max-update-rate 200
Device(config)#
```

## Related Commands

Command	Description
<b>show spanning-tree</b>	Displays information about the spanning-tree state.

## spanning-tree vlan

To configure Spanning Tree Protocol (STP) on a per-virtual LAN (VLAN) basis, use the **spanning-tree vlan** command in global configuration mode. To return to the default settings, use the **no** form of this command.

**spanning-tree vlan** *vlan-id* [{ **forward-time** *seconds* | **hello-time** *seconds* | **max-age** *seconds* | **priority** *priority* | **root** [{ **primary** | **secondary** }]]  
**no spanning-tree vlan** *vlan-id* [{ **forward-time** | **hello-time** | **max-age** | **priority** | **root** }]

### Syntax Description

<i>vlan id</i>	VLAN identification number. The range is from 1 to 4094.
<b>forward-time</b> <i>seconds</i>	(Optional) Sets the STP forward delay time. The range is from 4 to 30 seconds.
<b>hello-time</b> <i>seconds</i>	(Optional) Specifies the duration, in seconds, between the generation of configuration messages by the root switch. The range is from 1 to 10 seconds.
<b>max-age</b> <i>seconds</i>	(Optional) Sets the maximum number of seconds the information in a bridge packet data unit (BPDU) is valid. the range is from 6 to 40 seconds.
<b>priority</b> <i>priority</i>	(Optional) Sets the STP bridge priority. the range is from 0 to 65535.
<b>root primary</b>	(Optional) Forces this switch to be the root bridge.
<b>root secondary</b>	(Optional) Specifies this switch to act as the root switch should the primary root fail.

### Command Default

The defaults are:

- **forward-time**: 15 seconds
- **hello-time**: 2 seconds
- **max-age**: 20 seconds
- **priority**: The default with IEEE STP enabled is 32768; the default with STP enabled is 128.
- **root** : No STP root

When you issue the **no spanning-tree vlan** *vlan\_id* command, the following parameters are reset to their defaults:

- **priority**: The default with IEEE STP enabled is 32768; the default with STP enabled is 128.
- **hello-time**: 2 seconds
- **forward-time**: 15 seconds
- **max-age**: 20 seconds

### Command Modes

Global configuration (config)

Release	Modification
Cisco IOS XE Everest 16.5.1a	This command was introduced.

## Usage Guidelines



### Caution

- When disabling spanning tree on a VLAN using the **no spanning-tree vlan** *vlan-id* command, ensure that all switches and bridges in the VLAN have spanning tree disabled. You cannot disable spanning tree on some switches and bridges in a VLAN and leave it enabled on other switches and bridges in the same VLAN because switches and bridges with spanning tree enabled have incomplete information about the physical topology of the network.
- We do not recommend disabling spanning tree, even in a topology that is free of physical loops. Spanning tree is a safeguard against misconfigurations and cabling errors. Do not disable spanning tree in a VLAN without ensuring that there are no physical loops present in the VLAN.

When you set the **max-age** *seconds* parameter, if a bridge does not hear bridge protocol data units (BPDUs) from the root bridge within the specified interval, it assumes that the network has changed and recomputes the spanning-tree topology.

The **spanning-tree root primary** command alters this switch's bridge priority to 8192. If you enter the **spanning-tree root primary** command and the switch does not become the root switch, then the bridge priority is changed to 100 less than the bridge priority of the current bridge. If the switch still does not become the root, an error results.

The **spanning-tree root secondary** command alters this switch's bridge priority to 16384. If the root switch should fail, this switch becomes the next root switch.

Use the **spanning-tree root** commands on backbone switches only.

The **spanning-tree etherchannel guard misconfig** command detects two types of errors: misconfiguration and misconnection errors. A misconfiguration error is an error between the port-channel and an individual port. A misconnection error is an error between a switch that is channeling more ports and a switch that is not using enough Spanning Tree Protocol (STP) Bridge Protocol Data Units (BPDUs) to detect the error. In this case, the switch will only error disable an EtherChannel if the switch is a nonroot switch.

## Examples

The following example shows how to enable spanning tree on VLAN 200:

```
Device(config)# spanning-tree vlan 200
```

The following example shows how to configure the switch as the root switch for VLAN 10 with a network diameter of 4:

```
Device(config)# spanning-tree vlan 10 root primary diameter 4
```

The following example shows how to configure the switch as the secondary root switch for VLAN 10 with a network diameter of 4:

```
Device(config)# spanning-tree vlan 10 root secondary diameter 4
```

**Related Commands**

<b>Command</b>	<b>Description</b>
<b>spanning-tree cost</b>	Sets the path cost of the interface for STP calculations.
<b>spanning-tree etherchannel guard misconfig</b>	Displays an error message when a loop due to a channel misconfiguration is detected
<b>spanning-tree port-priority</b>	Sets an interface priority when two bridges tie for position as the root bridge.
<b>spanning-tree uplinkfast</b>	Enables the UplinkFast feature.
<b>show spanning-tree</b>	Displays spanning-tree information for the specified spanning-tree instances.

# switchport

To put an interface that is in Layer 3 mode into Layer 2 mode for Layer 2 configuration, use the **switchport** command in interface configuration mode. To put an interface in Layer 3 mode, use the **no** form of this command.

**switchport**  
**no switchport**

**Syntax Description** This command has no arguments or keywords.

**Command Default** By default, all interfaces are in Layer 2 mode.

**Command Modes** Interface configuration

Command History	Release	Modification
	Cisco IOS XE Everest 16.5.1a	This command was introduced.

**Usage Guidelines** Use the **no switchport** command (without parameters) to set the interface to the routed-interface status and to erase all Layer 2 configurations. You must use this command before assigning an IP address to a routed port.



**Note** This command is not supported on devices running the LAN Base feature set.

Entering the **no switchport** command shuts the port down and then reenables it, which might generate messages on the device to which the port is connected.

When you put an interface that is in Layer 2 mode into Layer 3 mode (or the reverse), the previous configuration information related to the affected interface might be lost, and the interface is returned to its default configuration.



**Note** If an interface is configured as a Layer 3 interface, you must first enter the **switchport** command to configure the interface as a Layer 2 port. Then you can enter the **switchport access vlan** and **switchport mode** commands.

The **switchport** command is not used on platforms that do not support Cisco-routed ports. All physical ports on such platforms are assumed to be Layer 2-switched interfaces.

You can verify the port status of an interface by entering the **show running-config** privileged EXEC command.

## Examples

This example shows how to cause an interface to cease operating as a Layer 2 port and become a Cisco-routed port:

```
Device(config-if)# no switchport
```

This example shows how to cause the port interface to cease operating as a Cisco-routed port and convert to a Layer 2 switched interface:

```
Device(config-if)# switchport
```

## switchport access vlan

To configure a port as a static-access port, use the **switchport access vlan** command in interface configuration mode. To reset the access mode to the default VLAN mode for the device, use the **no** form of this command.

**switchport access vlan** {*vlan-id* }  
**no switchport access vlan**

### Syntax Description

*vlan-id* VLAN ID of the access mode VLAN; the range is 1 to 4094.

### Command Default

The default access VLAN and trunk interface native VLAN is a default VLAN corresponding to the platform or interface hardware.

### Command Modes

Interface configuration

### Command History

Release	Modification
Cisco IOS XE Everest 16.5.1a	This command was introduced.

### Usage Guidelines

The port must be in access mode before the **switchport access vlan** command can take effect.

If the switchport mode is set to **access vlan** *vlan-id*, the port operates as a member of the specified VLAN. An access port can be assigned to only one VLAN.

The **no switchport access** command resets the access mode VLAN to the appropriate default VLAN for the device.

### Examples

This example shows how to change a switched port interface that is operating in access mode to operate in VLAN 2 instead of the default VLAN:

```
Device(config-if)# switchport access vlan 2
```



# switchport mode

To configure the VLAN membership mode of a port, use the **switchport mode** command in interface configuration mode. To reset the mode to the appropriate default for the device, use the **no** form of this command.

```
switchport mode {access | dynamic | {auto | desirable} | trunk}
noswitchport mode {access | dynamic | {auto | desirable} | trunk}
```

Syntax Description		
<b>access</b>		Sets the port to access mode (either static-access or dynamic-access depending on the setting of the <b>switchport access vlan</b> interface configuration command). The port is set to access unconditionally and operates as a nontrunking, single VLAN interface that sends and receives nonencapsulated (non-tagged) frames. An access port can be assigned to only one VLAN.
<b>dynamic auto</b>		Sets the port trunking mode dynamic parameter to auto to specify that the interface convert the link to a trunk link. This is the default switchport mode.
<b>dynamic desirable</b>		Sets the port trunking mode dynamic parameter to desirable to specify that the interface actively attempt to convert the link to a trunk link.
<b>trunk</b>		Sets the port to trunk unconditionally. The port is a trunking VLAN Layer 2 interface. The port sends and receives encapsulated (tagged) frames that identify the VLAN of origination. A trunk is a point-to-point link between two devices or between a device and a router.

Command Default	
	The default mode is <b>dynamic auto</b> for C9500-12Q-E, C9500-12Q-A, C9500-24Q-E, C9500-24Q-A, C9500-40X-E, and C9500-40X-A models of the Cisco Catalyst 9500 Series Switches.
	The default mode is <b>dynamic desirable</b> for C9500-32C, C9500-32QC, C9500-48Y4C, and C9500-24Y4C models of the Cisco Catalyst 9500 Series Switches

Command Modes	
	Interface configuration

Command History	Release	Modification
	Cisco IOS XE Everest 16.5.1a	This command was introduced.

**Usage Guidelines** A configuration that uses the **access**, or **trunk** keywords takes effect only when you configure the port in the appropriate mode by using the **switchport mode** command. The static-access and trunk configuration are saved, but only one configuration is active at a time.

When you enter **access** mode, the interface changes to permanent nontrunking mode and negotiates to convert the link into a nontrunk link even if the neighboring interface does not agree to the change.

When you enter **trunk** mode, the interface changes to permanent trunking mode and negotiates to convert the link into a trunk link even if the interface connecting to it does not agree to the change.

When you enter **dynamic auto** mode, the interface converts the link to a trunk link if the neighboring interface is set to **trunk** or **desirable** mode.

When you enter **dynamic desirable** mode, the interface becomes a trunk interface if the neighboring interface is set to **trunk**, **desirable**, or **auto** mode.

To autonegotiate trunking, the interfaces must be in the same VLAN Trunking Protocol (VTP) domain. Trunk negotiation is managed by the Dynamic Trunking Protocol (DTP), which is a point-to-point protocol. However, some internetworking devices might forward DTP frames improperly, which could cause misconfigurations. To avoid this problem, configure interfaces connected to devices that do not support DTP to not forward DTP frames, which turns off DTP.

- If you do not intend to trunk across those links, use the **switchport mode access** interface configuration command to disable trunking.
- To enable trunking to a device that does not support DTP, use the **switchport mode trunk** and **switchport nonegotiate** interface configuration commands to cause the interface to become a trunk but to not generate DTP frames.

Access ports and trunk ports are mutually exclusive.

The IEEE 802.1x feature interacts with switchport modes in these ways:

- If you try to enable IEEE 802.1x on a trunk port, an error message appears, and IEEE 802.1x is not enabled. If you try to change the mode of an IEEE 802.1x-enabled port to trunk, the port mode is not changed.
- If you try to enable IEEE 802.1x on a port set to **dynamic auto** or **dynamic desirable**, an error message appears, and IEEE 802.1x is not enabled. If you try to change the mode of an IEEE 802.1x-enabled port to **dynamic auto** or **dynamic desirable**, the port mode is not changed.
- If you try to enable IEEE 802.1x on a dynamic-access (VLAN Query Protocol [VQP]) port, an error message appears, and IEEE 802.1x is not enabled. If you try to change an IEEE 802.1x-enabled port to dynamic VLAN assignment, an error message appears, and the VLAN configuration is not changed.

You can verify your settings by entering the **show interfaces interface-id switchport** privileged EXEC command and examining information in the *Administrative Mode* and *Operational Mode* rows.

## Examples

This example shows how to configure a port for access mode:

```
Device(config)# interface gigabitethernet2/0/1
Device(config-if)# switchport mode access
```

This example shows how set the port to dynamic desirable mode:

```
Device(config)# interface gigabitethernet2/0/1
Device(config-if)# switchport mode dynamic desirable
```

This example shows how to configure a port for trunk mode:

```
Device(config)# interface gigabitethernet2/0/1
Device(config-if)# switchport mode trunk
```

# switchport nonegotiate

To specify that Dynamic Trunking Protocol (DTP) negotiation packets are not sent on the Layer 2 interface, use the **switchport nonegotiate** command in interface configuration mode. Use the **no** form of this command to return to the default setting.

**switchport nonegotiate**  
**no switchport nonegotiate**

<b>Syntax Description</b>	This command has no arguments or keywords.
<b>Command Default</b>	The default is to use DTP negotiation to learn the trunking status.
<b>Command Modes</b>	Interface configuration

<b>Command History</b>	<b>Release</b>	<b>Modification</b>
	Cisco IOS XE Everest 16.5.1a	This command was introduced.

<b>Usage Guidelines</b>	<p>The <b>no switchport nonegotiate</b> command removes nonegotiate status.</p> <p>This command is valid only when the interface switchport mode is access or trunk (configured by using the <b>switchport mode access</b> or the <b>switchport mode trunk</b> interface configuration command). This command returns an error if you attempt to execute it in dynamic (auto or desirable) mode.</p> <p>Internetworking devices that do not support DTP might forward DTP frames improperly and cause misconfigurations. To avoid this problem, turn off DTP by using the <b>switchport nonegotiate</b> command to configure the interfaces connected to devices that do not support DTP to not forward DTP frames.</p> <p>When you enter the <b>switchport nonegotiate</b> command, DTP negotiation packets are not sent on the interface. The device does or does not trunk according to the <b>mode</b> parameter: <b>access</b> or <b>trunk</b>.</p> <ul style="list-style-type: none"> <li>• If you do not intend to trunk across those links, use the <b>switchport mode access</b> interface configuration command to disable trunking.</li> <li>• To enable trunking on a device that does not support DTP, use the <b>switchport mode trunk</b> and <b>switchport nonegotiate</b> interface configuration commands to cause the interface to become a trunk but to not generate DTP frames.</li> </ul>
-------------------------	---

This example shows how to cause a port to refrain from negotiating trunking mode and to act as a trunk or access port (depending on the mode set):

```
Device(config)# interface gigabitethernet2/0/1
Device(config-if)# switchport nonegotiate
```

You can verify your setting by entering the **show interfaces interface-id switchport** privileged EXEC command.

## switchport voice vlan

To configure voice VLAN on the port, use the **switchport voice vlan** command in interface configuration mode. To return to the default setting, use the **no** form of this command.

**switchport voice vlan** {*vlan-id* | **dot1p** | **none** | **untagged** | **name** *vlan\_name* }  
**no switchport voice vlan**

### Syntax Description

<i>vlan-id</i>	The VLAN to be used for voice traffic. The range is 1 to 4094. By default, the IP phone forwards the voice traffic with an IEEE 802.1Q priority of 5.
<b>dot1p</b>	Configures the telephone to use IEEE 802.1p priority tagging and uses VLAN 0 (the native VLAN). By default, the Cisco IP phone forwards the voice traffic with an IEEE 802.1p priority of 5.
<b>none</b>	Does not instruct the IP telephone about the voice VLAN. The telephone uses the configuration from the telephone key pad.
<b>untagged</b>	Configures the telephone to send untagged voice traffic. This is the default for the telephone.
<b>name</b> <i>vlan_name</i>	(Optional) Specifies the VLAN name to be used for voice traffic. You can enter up to 128 characters.

### Command Default

The default is not to automatically configure the telephone (**none**).  
 The telephone default is not to tag frames.

### Command Modes

Interface configuration

### Command History

Release	Modification
Cisco IOS XE Everest 16.5.1a	This command was introduced.
	Option to specify a VLAN name for voice VLAN. The ' <b>name</b> ' keyword was added.

### Usage Guidelines

You should configure voice VLAN on Layer 2 access ports.

You must enable Cisco Discovery Protocol (CDP) on the switch port connected to the Cisco IP phone for the device to send configuration information to the phone. CDP is enabled by default globally and on the interface.

When you enter a VLAN ID, the IP phone forwards voice traffic in IEEE 802.1Q frames, tagged with the specified VLAN ID. The device puts IEEE 802.1Q voice traffic in the voice VLAN.

When you select **dot1p**, **none**, or **untagged**, the device puts the indicated voice traffic in the access VLAN.

In all configurations, the voice traffic carries a Layer 2 IP precedence value. The default is 5 for voice traffic.

When you enable port security on an interface that is also configured with a voice VLAN, set the maximum allowed secure addresses on the port to 2. When the port is connected to a Cisco IP phone, the IP phone requires one MAC address. The Cisco IP phone address is learned on the voice VLAN, but not on the access

VLAN. If you connect a single PC to the Cisco IP phone, no additional MAC addresses are required. If you connect more than one PC to the Cisco IP phone, you must configure enough secure addresses to allow one for each PC and one for the Cisco IP phone.

If any type of port security is enabled on the access VLAN, dynamic port security is automatically enabled on the voice VLAN.

You cannot configure static secure MAC addresses in the voice VLAN.

The Port Fast feature is automatically enabled when voice VLAN is configured. When you disable voice VLAN, the Port Fast feature is not automatically disabled.

This example show how to first populate the VLAN database by associating a VLAN ID with a VLAN name, and then configure the VLAN (using the name) on an interface, in the access mode: You can also verify your configuration by entering the **show interfaces interface-id switchport** in privileged EXEC command and examining information in the Voice VLAN: row.

Part 1 - Making the entry in the VLAN database:

```
Device# configure terminal
Device(config)# vlan 55
Device(config-vlan)# name test
Device(config-vlan)# end
Device#
```

Part 2 - Checking the VLAN database:

```
Device# show vlan id 55
VLAN Name Status Ports
-----
55 test active
VLAN Type SAID MTU Parent RingNo BridgeNo Stp BrdgMode Trans1 Trans2
-----
55 enet 100055 1500 - - - - - 0 0
Remote SPAN VLAN
-----
Disabled
Primary Secondary Type Ports
-----
```

Part 3- Assigning VLAN to the interface by using the name of the VLAN:

```
Device# configure terminal
Device(config)# interface gigabitethernet3/1/1
Device(config-if)# switchport mode access
Device(config-if)# switchport voice vlan name test
Device(config-if)# end
Device#
```

Part 4 - Verifying configuration:

```
Device# show running-config
interface gigabitethernet3/1/1
Building configuration...
Current configuration : 113 bytes
!
interface GigabitEthernet3/1/1
switchport voice vlan 55
switchport mode access
Switch#
```

Part 5 - Also can be verified in interface switchport:

```
Device# show interface GigabitEthernet3/1/1 switchport
Name: Gi3/1/1
Switchport: Enabled
Administrative Mode: static access
Operational Mode: static access
Administrative Trunking Encapsulation: dot1q
Operational Trunking Encapsulation: native
Negotiation of Trunking: Off
Access Mode VLAN: 1 (default)
Trunking Native Mode VLAN: 1 (default)
Administrative Native VLAN tagging: enabled
Voice VLAN: 55 (test)
Administrative private-vlan host-association: none
Administrative private-vlan mapping: none
Administrative private-vlan trunk native VLAN: none
Administrative private-vlan trunk Native VLAN tagging: enabled
Administrative private-vlan trunk encapsulation: dot1q
Administrative private-vlan trunk normal VLANs: none
Administrative private-vlan trunk associations: none
Administrative private-vlan trunk mappings: none
Operational private-vlan: none
Trunking VLANs Enabled: ALL
Pruning VLANs Enabled: 2-1001
Capture Mode Disabled
Capture VLANs Allowed: ALL
Unknown unicast blocked: disabled
Unknown multicast blocked: disabled
Appliance trust: none
Device#
```

# udld

To enable aggressive or normal mode in the UniDirectional Link Detection (UDLD) and to set the configurable message timer time, use the **udld** command in global configuration mode. To disable aggressive or normal mode UDLD on all fiber-optic ports, use the **no** form of the command.

```
udld {aggressive | enable | fast-hello error-reporting | message time message-timer-interval
| recovery interval recovery-timer-interval}
no udld {aggressive | enable | message}
```

## Syntax Description

<b>aggressive</b>	Enables UDLD in aggressive mode on all fiber-optic interfaces.
<b>enable</b>	Enables UDLD in normal mode on all fiber-optic interfaces.
<b>fast-hello error-reporting</b>	Reports link failure on the console instead of err-disabling the affected Fast UDLD port.
<b>message time</b> <i>message-timer-interval</i>	Configures the period of time between UDLD probe messages on ports that are in the advertisement phase and are determined to be bidirectional. The range is 1 to 90 seconds. The default is 15 seconds.
<b>recovery interval</b> <i>recovery-timer-interval</i>	Configures the error disable recovery timer value.

## Command Default

UDLD is disabled on all interfaces.  
The message timer is set at 15 seconds.

## Command Modes

Global configuration

## Command History

Release	Modification
Cisco IOS XE Everest 16.5.1a	This command was introduced.
Cisco IOS XE Fuji 16.9.1	The <b>fast-hello error-reporting</b> keyword was added to the command.  The <b>recovery interval</b> <i>recovery-timer-interval</i> keyword was introduced.

## Usage Guidelines

UDLD supports two modes of operation: normal (the default) and aggressive. In normal mode, UDLD detects unidirectional links due to misconnected interfaces on fiber-optic connections. In aggressive mode, UDLD also detects unidirectional links due to one-way traffic on fiber-optic and twisted-pair links and due to misconnected interfaces on fiber-optic links. For information about normal and aggressive modes, see the *Software Configuration Guide (Catalyst 9500 Switches)*.

If you change the message time between probe packets, you are making a compromise between the detection speed and the CPU load. By decreasing the time, you can make the detection-response faster but increase the load on the CPU.

This command affects fiber-optic interfaces only. Use the **udld** interface configuration command to enable UDLD on other interface types.

You can use these commands to reset an interface shut down by UDLD:

- The **udld reset** privileged EXEC command to reset all interfaces shut down by UDLD.
- The **shutdown** and **no shutdown** interface configuration commands.
- The **no udld enable** global configuration command followed by the **udld {aggressive | enable}** global configuration command to reenables UDLD globally.
- The **no udld port** interface configuration command followed by the **udld port** or **udld port aggressive** interface configuration command to reenables UDLD on the specified interface.
- The **errdisable recovery cause udld** and **errdisable recovery interval *interval*** global configuration commands to automatically recover from the UDLD error-disabled state.

This example shows how to enable UDLD on all fiber-optic interfaces:

```
Device> enable
Device# configure terminal
Device(config)# udld enable
```

You can verify your setting by entering the **show udld** command in privileged EXEC mode.



## udld fast-hello

To enable Fast UniDirectional Link Detection (UDLD) on an individual interface which has UDLD configured on it, use the **udld fast-hello** command in interface configuration mode.

**udld fast-hello** *message-timer-interval*

### Syntax Description

*message-timer-interval* Configures time in milliseconds between sending of messages in steady state. The range is from 200 to 1000 milliseconds.

### Command Default

Fast UDLD is disabled by default.

### Command Modes

Interface configuration

### Command History

Release	Modification
Cisco IOS XE Fuji 16.9.1	This command was introduced.

### Usage Guidelines

A UDLD-capable port cannot detect a unidirectional link if it is connected to a UDLD-incapable port of another device.

UDLD supports two modes of operation: normal (the default) and aggressive. In normal mode, UDLD detects unidirectional links due to misconnected interfaces on fiber-optic connections. In aggressive mode, UDLD also detects unidirectional links due to one-way traffic on fiber-optic and twisted-pair links and due to misconnected interfaces on fiber-optic links.

Fast UDLD enables detection of unidirectional links within the span of a few hundred milliseconds to a second. Fast UDLD runs on top of the UDLD process without interrupting it. To configure a port in Fast UDLD mode, it must first be configured in UDLD mode.

To enable Fast UDLD mode on a port, use the **udld fast-hello***message-timer-interval* interface configuration command.

### Examples

This example shows how to enable Fast UDLD on an port:

```
Device> enable
Device# configure terminal
Device(config)# interface gigabitethernet6/0/1
Device(config-if)# udld fast-hello 200
```

You can verify your settings by entering either the **show running-config** or the **show udld fast-hello interface** command in privileged EXEC mode.

# udld port

To enable UniDirectional Link Detection (UDLD) on an individual interface or to prevent a fiber-optic interface from being enabled by the **udld** command in global configuration mode, use the **udld port** command in interface configuration mode.

**udld port** [**aggressive** | **disable**]  
**no udld port** [**aggressive**]

<b>Syntax Description</b>	<b>aggressive</b> (Optional) Enables UDLD in aggressive mode on the specified interface.	
	<b>disable</b> (Optional) Disables UDLD on the specified interface despite the global UDLD configuration.	
<b>Command Default</b>	On fiber-optic interfaces, UDLD is disabled and fiber-optic interfaces enable UDLD according to the state of the <b>udld enable</b> or <b>udld aggressive</b> command in global configuration mode. On nonfiber-optic interfaces, UDLD is disabled.	
<b>Command Modes</b>	Interface configuration	
<b>Command History</b>	<b>Release</b>	<b>Modification</b>
	Cisco IOS XE Everest 16.5.1a	This command was introduced.
	Cisco IOS XE Fuji 16.9.1	The <b>disable</b> keyword was introduced.

**Usage Guidelines**

A UDLD-capable port cannot detect a unidirectional link if it is connected to a UDLD-incapable port of another device.

UDLD supports two modes of operation: normal (the default) and aggressive. In normal mode, UDLD detects unidirectional links due to misconnected interfaces on fiber-optic connections. In aggressive mode, UDLD also detects unidirectional links due to one-way traffic on fiber-optic and twisted-pair links and due to misconnected interfaces on fiber-optic links.

To enable UDLD in normal mode, use the **udld port** command in interface configuration mode. To enable UDLD in aggressive mode, use the **udld port aggressive** command in interface configuration mode.

Use the **udld port disable** command on fiber-optic ports to return control of UDLD to the **udld enable** command in global configuration mode or to disable UDLD on nonfiber-optic ports.

Use the **udld port aggressive** command on fiber-optic ports to override the setting of the **udld enable** or **udld aggressive** command in global configuration mode. Use the **udld port disable** command on fiber-optic ports to remove this setting and to return control of UDLD enabling to the **udld** command in global configuration mode or to disable UDLD on nonfiber-optic ports.

You can use these commands to reset an interface shut down by UDLD:

- The **udld reset** command in privileged EXEC mode resets all interfaces shut down by UDLD.
- The **shutdown** and **no shutdown** command in interface configuration mode

- The **no udld enable** command in global configuration mode, followed by the **udld {aggressive | enable}** command in global configuration mode reenables UDLD globally.
- The **udld port disable** command in interface configuration mode, followed by the **udld port** or **udld port aggressive** command in interface configuration mode reenables UDLD on the specified interface.
- The **errdisable recovery cause udld** and **errdisable recovery interval *interval*** command in global configuration mode automatically recover from the UDLD error-disabled state.

This example shows how to enable UDLD on an port:

```
Device> enable
Device# configure terminal
Device(config)# interface gigabitethernet6/0/1
Device(config-if)# udld port
```

This example shows how to disable UDLD on a fiber-optic interface despite the setting of the **udld** global configuration command:

```
Device> enable
Device# configure terminal
Device(config)# interface gigabitethernet6/0/1
Device(config-if)# udld port disable
```

You can verify your settings by entering the **show running-config** or the **show udld *interface*** command in privileged EXEC mode.

# udld reset

To reset all interfaces disabled by UniDirectional Link Detection (UDLD) and permit traffic to begin passing through them again (though other features, such as spanning tree, Port Aggregation Protocol (PAgP), and Dynamic Trunking Protocol (DTP) still have their normal effects, if enabled), use the **udld reset** command in privileged EXEC mode.

## udld reset

**Syntax Description** This command has no arguments or keywords.

**Command Default** None

**Command Modes** Privileged EXEC

Command History	Release	Modification
	Cisco IOS XE Everest 16.5.1a	This command was introduced.

**Usage Guidelines** If the interface configuration is still enabled for UDLD, these ports begin to run UDLD again and are disabled for the same reason if the problem has not been corrected.

This example shows how to reset all interfaces disabled by UDLD:

```
Device# udld reset
1 ports shutdown by UDLD were reset.
```