



INDEX

A

aaa accounting dot1x command [2-1](#)
aaa authentication dot1x command [2-3](#)
aaa authorization network command [2-5](#)
AAA methods [2-3](#)
abort command [2-612](#)
access control entries
 See ACEs
access control lists
 See ACLs
access groups
 IP [2-127](#)
 MAC, displaying [2-407](#)
access mode [2-565](#)
access ports [2-565](#)
ACEs [2-75](#), [2-266](#)
ACLs
 deny [2-73](#)
 displaying [2-303](#)
 for non-IP protocols [2-187](#)
 IP [2-127](#)
 on Layer 2 interfaces [2-127](#)
 permit [2-264](#)
address aliasing [2-255](#)
aggregate-port learner [2-260](#)
alarm command [2-10](#)
alarm facility fcs-hysteresis command [2-6](#)
alarm facility power-supply command [2-7](#)
alarm facility temperature command [2-8](#)
alarm IDs [2-10](#), [2-306](#)

alarm profile
 attaching to a port [2-12](#)
 creating [2-10](#)
 displaying [2-307](#)
alarm profile (global configuration) command [2-10](#)
alarm profile (interface configuration) command [2-12](#)
alarm profile configuration mode [2-10](#)
allowed VLANs [2-579](#)
apply command [2-612](#)
archive download-sw command [2-14](#)
archive tar command [2-17](#)
archive upload-sw command [2-20](#)
authentication failed VLAN
 See dot1x auth-fail vlan
auth-fail max-attempts
 See dot1x auth-fail max-attempts
auth-fail vlan
 See dot1x auth-fail vlan
authorization state of controlled port [2-99](#)
autonegotiation of duplex mode [2-108](#)
auto qos voip command [2-22](#)

B

BackboneFast, for STP [2-502](#)
backup interfaces
 configuring [2-559](#)
 displaying [2-368](#)
boot (boot loader) command [A-2](#)
boot config-file command [2-26](#)
boot enable-break command [2-27](#)
boot helper command [2-28](#)
boot helper-config file command [2-29](#)

booting

- Cisco IOS image [2-32](#)
- displaying environment variables [2-316](#)
- interrupting [2-27](#)
- manually [2-30](#)

boot loader

- accessing [A-1](#)
- booting
 - Cisco IOS image [A-2](#)
 - helper image [2-28](#)
- directories
 - creating [A-14](#)
 - displaying a list of [A-7](#)
 - removing [A-18](#)
- displaying
 - available commands [A-12](#)
 - memory heap utilization [A-13](#)
 - version [A-25](#)
- environment variables
 - described [A-19](#)
 - displaying settings [A-19](#)
 - location of [A-20](#)
 - setting [A-19](#)
 - unsetting [A-23](#)
- files
 - copying [A-5](#)
 - deleting [A-6](#)
 - displaying a list of [A-7](#)
 - displaying the contents of [A-4, A-15, A-22](#)
 - renaming [A-16](#)
- file system
 - formatting [A-10](#)
 - initializing flash [A-9](#)
 - running a consistency check [A-11](#)
- resetting the system [A-17](#)

boot manual command [2-30](#)

boot private-config-file command [2-31](#)

boot system command [2-32](#)

BPDU filtering, for spanning tree [2-503, 2-536](#)

BPDU guard, for spanning tree [2-505, 2-536](#)

broadcast storm control [2-554](#)

C

candidate switches

- See clusters

cat (boot loader) command [A-4](#)

channel-group command [2-33](#)

channel-protocol command [2-36](#)

Cisco SoftPhone

- auto-QoS configuration [2-22](#)
- trusting packets sent from [2-247](#)

class command [2-38](#)

class-map command [2-40](#)

class maps

- creating [2-40](#)
- defining the match criteria [2-207](#)
- displaying [2-321](#)

class of service

- See CoS

clear dot1x command [2-42](#)

clear eap sessions command [2-43](#)

clear errdisable interface [2-44](#)

clear ip dhcp snooping database command [2-45](#)

clear lacp command [2-47](#)

clear mac address-table command [2-48, 2-49](#)

clear pagp command [2-50](#)

clear port-security command [2-51](#)

clear spanning-tree counters command [2-53](#)

clear spanning-tree detected-protocols command [2-54](#)

clear vmps statistics command [2-55](#)

clear vtp counters command [2-56](#)

cluster commander-address command [2-57](#)

cluster discovery hop-count command [2-59](#)

cluster enable command [2-60](#)

cluster holdtime command [2-62](#)

cluster member command [2-63](#)

cluster outside-interface command [2-65](#)

cluster run command [2-66](#)

clusters

- adding candidates [2-63](#)
- binding to HSRP group [2-67](#)
- building manually [2-63](#)
- communicating with
 - devices outside the cluster [2-65](#)
 - members by using Telnet [2-283](#)
- debug messages, display [B-6](#)
- displaying
 - candidate switches [2-324](#)
 - debug messages [B-6](#)
 - member switches [2-326](#)
 - status [2-322](#)
- hop-count limit for extended discovery [2-59](#)
- HSRP standby groups [2-67](#)
- redundancy [2-67](#)
- SNMP trap [2-493](#)

cluster standby-group command [2-67](#)

cluster timer command [2-69](#)

command modes defined [1-1](#)

command switch

- See clusters

configuration files

- password recovery disable considerations [A-1](#)
- specifying the name [2-26, 2-31](#)

configuring multiple interfaces [2-124](#)

config-vlan mode

- commands [2-601](#)
- description [1-4](#)
- entering [2-600](#)
- summary [1-2](#)

copy (boot loader) command [A-5](#)

CoS

- assigning default value to incoming packets [2-217](#)
- overriding the incoming value [2-217](#)

CoS-to-DSCP map [2-221](#)

CPU ASIC statistics, displaying [2-328](#)

crashinfo files [2-116](#)

D

debug auto qos command [B-2](#)

debug backup command [B-4, B-5](#)

debug cip [B-5](#)

debug cluster command [B-6](#)

debug dot1x command [B-8](#)

debug dtp command [B-9](#)

debug eap command [B-10](#)

debug etherchannel command [B-11](#)

debug interface command [B-12](#)

debug ip dhcp snooping command [B-13](#)

debug ip igmp filter command [B-14](#)

debug ip igmp max-groups command [B-15](#)

debug ip igmp snooping command [B-16](#)

debug lacp command [B-17](#)

debug mac-notification command [B-18](#)

debug matm command [B-19](#)

debug matm move update command [B-20](#)

debug monitor command [B-21](#)

debug mvrdbg command [B-22](#)

debug nvram command [B-23](#)

debug pagp command [B-24](#)

debug platform acl command [B-25](#)

debug platform backup interface command [B-26](#)

debug platform cpu-queues command [B-27](#)

debug platform dot1x command [B-29](#)

debug platform etherchannel command [B-30](#)

debug platform forw-tcam command [B-31](#)

debug platform ip dhcp command [B-32](#)

debug platform ip igmp snooping command [B-33](#)

debug platform led command [B-35](#)

debug platform matm command [B-36](#)

debug platform messaging application command [B-37](#)

debug platform phy command [B-38](#)

debug platform pm command [B-40](#)

debug platform port-asic command [B-42](#)

debug platform port-security command [B-43](#)

debug platform qos-acl-tcam command [B-44](#)

- debug platform resource-manager command [B-45](#)
- debug platform snmp command [B-46](#)
- debug platform span command [B-47](#)
- debug platform supervisor-asic command [B-48](#)
- debug platform sw-bridge command [B-49](#)
- debug platform tcam command [B-50](#)
- debug platform udd command [B-52](#)
- debug platform vlan command [B-53](#)
- debug pm command [B-54](#)
- debug port-security command [B-56](#)
- debug qos-manager command [B-57](#)
- debug spanning-tree backbonefast command [B-60](#)
- debug spanning-tree bpdu command [B-61](#)
- debug spanning-tree bpdu-opt command [B-62](#)
- debug spanning-tree command [B-58](#)
- debug spanning-tree mstp command [B-63](#)
- debug spanning-tree switch command [B-65](#)
- debug spanning-tree uplinkfast command [B-67](#)
- debug sw-vlan command [B-68](#)
- debug sw-vlan ifs command [B-70](#)
- debug sw-vlan notification command [B-71](#)
- debug sw-vlan vtp command [B-72](#)
- debug udd command [B-74](#)
- debug vqpc command [B-76](#)
- defaultPort profile [2-10, 2-12](#)
- define interface-range command [2-70](#)
- delete (boot loader) command [A-6](#)
- delete command [2-72](#)
- deny command [2-73](#)
- detect mechanism, causes [2-109](#)
- DHCP snooping
 - accepting untrusted packets from edge switch [2-141](#)
 - enabling
 - on a VLAN [2-146](#)
 - option 82 [2-139, 2-141](#)
 - trust on an interface [2-144](#)
 - error recovery timer [2-114](#)
 - rate limiting [2-143](#)
- DHCP snooping binding database
 - binding file, configuring [2-137](#)
 - bindings
 - adding [2-135](#)
 - deleting [2-135](#)
 - displaying [2-381](#)
 - clearing database agent statistics [2-45](#)
 - database agent, configuring [2-137](#)
 - displaying
 - binding entries [2-381](#)
 - database agent status [2-383, 2-385](#)
 - renewing [2-287](#)
- dir (boot loader) command [A-7](#)
- directories, deleting [2-72](#)
- domain name, VTP [2-619, 2-623](#)
- dot1x auth-fail max-attempts [2-78](#)
- dot1x auth-fail vlan [2-80](#)
- dot1x command [2-76](#)
- dot1x control-direction command [2-82](#)
- dot1x critical global configuration command [2-84](#)
- dot1x critical interface configuration command [2-86](#)
- dot1x default command [2-88](#)
- dot1x fallback command [2-89](#)
- dot1x guest-vlan command [2-90](#)
- dot1x host-mode command [2-92](#)
- dot1x initialize command [2-93](#)
- dot1x mac-auth-bypass command [2-94](#)
- dot1x max-reauth-req command [2-96](#)
- dot1x max-req command [2-97](#)
- dot1x pae command [2-98](#)
- dot1x port-control command [2-99](#)
- dot1x re-authenticate command [2-101](#)
- dot1x reauthentication command [2-102](#)
- dot1x test eapol-capable command [2-103](#)
- dot1x test timeout command [2-104](#)
- dot1x timeout command [2-105](#)
- DSCP-to-CoS map [2-221](#)
- DSCP-to-DSCP-mutation map [2-221](#)
- DTP [2-566](#)

DTP flap

- error detection for [2-109](#)
- error recovery timer [2-114](#)

DTP negotiation [2-567](#)

dual-purpose uplink ports

- displaying the active media [2-375](#)
- selecting the type [2-211](#)

duplex command [2-107](#)

dynamic-access ports

- configuring [2-557](#)
- restrictions [2-558](#)

dynamic auto VLAN membership mode [2-565](#)

dynamic desirable VLAN membership mode [2-565](#)

Dynamic Host Configuration Protocol (DHCP)

- See DHCP snooping

Dynamic Trunking Protocol

- See DTP

E

EAP-request/identity frame

- maximum number to send [2-97](#)
- response time before retransmitting [2-105](#)

environmental alarms, displaying [2-309](#)

environment variables, displaying [2-316](#)

errdisable detect cause command [2-109](#)

errdisable detect cause small-frame comand [2-111](#)

errdisable recovery cause small-frame [2-113](#)

errdisable recovery command [2-114](#)

error conditions, displaying [2-353](#)

error disable detection [2-109](#)

error-disabled interfaces, displaying [2-368](#)

EtherChannel

- assigning Ethernet interface to channel group [2-33](#)
- creating port-channel logical interface [2-122](#)
- debug EtherChannel/PAGP, display [B-11](#)
- debug platform-specific events, display [B-30](#)
- displaying [2-357](#)
- interface information, displaying [2-368](#)

EtherChannel (continued)

LACP

- clearing channel-group information [2-47](#)
- debug messages, display [B-17](#)
- displaying [2-398](#)
- modes [2-33](#)
- port priority for hot-standby ports [2-171](#)
- restricting a protocol [2-36](#)
- system priority [2-173](#)

load-distribution methods [2-273](#)

PAGP

- aggregate-port learner [2-260](#)
- clearing channel-group information [2-50](#)
- debug messages, display [B-24](#)
- displaying [2-451](#)
- error detection for [2-109](#)
- error recovery timer [2-114](#)
- learn method [2-260](#)
- modes [2-33](#)
- physical-port learner [2-260](#)
- priority of interface for transmitted traffic [2-262](#)

Ethernet controller, internal register display [2-330](#)

Ethernet statistics, collecting [2-289](#)

exception crashinfo command [2-116](#)

exit command [2-612](#)

extended discovery of candidate switches [2-59](#)

extended-range VLANs

- and allowed VLAN list [2-579](#)
- and pruning-eligible list [2-579](#)
- configuring [2-600](#)

extended system ID for STP [2-511](#)

F

facility alarm relays, displaying [2-360](#)

facility alarm status, displaying [2-361](#)

fallback profile command [2-117](#)

fallback profiles, displaying [2-362](#)

FCS bit error rate

- displaying [2-364](#)
- fluctuation threshold [2-6](#)
- setting [2-119](#)

FCS hysteresis threshold [2-6](#)fcs-threshold command [2-119](#)file name, VTP [2-619](#)files, deleting [2-72](#)flash_init (boot loader) command [A-9](#)

Flex Links

- configuring [2-559](#)
- configuring preferred VLAN [2-561](#)
- displaying [2-368](#)

flowcontrol command [2-120](#)format (boot loader) command [A-10](#)forwarding results, display [C-5](#)

frame check sequence

See FCS

frame forwarding information, displaying [C-5](#)fsck (boot loader) command [A-11](#)**G**global configuration mode [1-2, 1-3](#)**H**hardware ACL statistics [2-303](#)help (boot loader) command [A-12](#)hierarchical policy maps [2-271](#)hop-count limit for clusters [2-59](#)host connection, port configuration [2-564](#)

Hot Standby Router Protocol

See HSRP

HSRP

- binding HSRP group to cluster [2-67](#)
- standby group [2-67](#)

IEEE 802.1x

- and switchport modes [2-566](#)
- violation error recovery [2-114](#)

See also port-based authentication

IEEE 802.1X Port Based Authentication, enabling guest VLAN supplicant [2-78, 2-89, 2-118](#)

IGMP filters

- applying [2-147](#)
- debug messages, display [B-14](#)

IGMP groups, setting maximum [2-149](#)IGMP maximum groups, debugging [B-15](#)

IGMP profiles

- creating [2-151](#)
- displaying [2-388](#)

IGMP snooping

- adding ports as a static member of a group [2-167](#)
- displaying [2-389, 2-394, 2-396](#)
- enabling [2-153](#)
- enabling the configurable-leave timer [2-155](#)
- enabling the Immediate-Leave feature [2-164](#)
- flooding query count [2-161](#)
- interface topology change notification behavior [2-163](#)
- multicast table [2-392](#)
- querier [2-157](#)
- query solicitation [2-161](#)
- report suppression [2-159](#)
- switch topology change notification behavior [2-161](#)

images

See software images

Immediate-Leave feature, MVR [2-257](#)immediate-leave processing [2-164](#)interface configuration mode [1-2, 1-4](#)interface port-channel command [2-122](#)interface range command [2-124](#)interface-range macros [2-70](#)

- interfaces
 - assigning Ethernet interface to channel group [2-33](#)
 - configuring [2-107](#)
 - configuring multiple [2-124](#)
 - creating port-channel logical [2-122](#)
 - debug messages, display [B-12](#)
 - disabling [2-489](#)
 - displaying the MAC address table [2-419](#)
 - restarting [2-489](#)
 - interface speed, configuring [2-546](#)
 - interface vlan command [2-126](#)
 - internal registers, displaying [2-330, 2-337](#)
 - Internet Group Management Protocol
 - See IGMP
 - invalid GBIC
 - error detection for [2-109](#)
 - error recovery timer [2-114](#)
 - ip access-group command [2-127](#)
 - ip address command [2-129](#)
 - IP addresses, setting [2-129](#)
 - ip admission command [2-131](#)
 - ip admission name proxy http command [2-132](#)
 - IP DHCP snooping
 - See DHCP snooping
 - ip dhcp snooping binding command [2-135](#)
 - ip dhcp snooping command [2-134](#)
 - ip dhcp snooping database command [2-137](#)
 - ip dhcp snooping information option allow-untrusted command [2-141](#)
 - ip dhcp snooping information option command [2-139](#)
 - ip dhcp snooping limit rate command [2-143](#)
 - ip dhcp snooping trust command [2-144](#)
 - ip dhcp snooping verify command [2-145](#)
 - ip dhcp snooping vlan command [2-146](#)
 - ip igmp filter command [2-147](#)
 - ip igmp max-groups command [2-149](#)
 - ip igmp profile command [2-151](#)
 - ip igmp snooping command [2-153](#)
 - ip igmp snooping last-member-query-interval command [2-155](#)
 - ip igmp snooping querier command [2-157](#)
 - ip igmp snooping report-suppression command [2-159](#)
 - ip igmp snooping tcn command [2-161](#)
 - ip igmp snooping tcn flood command [2-163](#)
 - ip igmp snooping vlan immediate-leave command [2-164](#)
 - ip igmp snooping vlan mrouter command [2-165](#)
 - ip igmp snooping vlan static command [2-167](#)
 - IP multicast addresses [2-254](#)
 - IP phones
 - auto-QoS configuration [2-22](#)
 - trusting packets sent from [2-247](#)
 - IP-precedence-to-DSCP map [2-221](#)
 - IP source guard
 - displaying
 - dynamic binding entries only [2-381](#)
 - ip ssh command [2-169](#)
-
- ## J
- jumbo frames
 - See MTU
-
- ## L
- LACP
 - See EtherChannel
 - lacp port-priority command [2-171](#)
 - lacp system-priority command [2-173](#)
 - Layer 2 traceroute
 - IP addresses [2-591](#)
 - MAC addresses [2-588](#)
 - line configuration mode [1-2, 1-5](#)
 - Link Aggregation Control Protocol
 - See EtherChannel
 - link flap
 - error detection for [2-109](#)
 - error recovery timer [2-114](#)

link state group command [2-179](#)
 link state track command [2-181](#)
 load-distribution methods for EtherChannel [2-273](#)
 location (global configuration) command [2-175](#)
 location (interface configuration) command [2-177](#)
 logging event command [2-182](#)
 logging file command [2-183](#)
 logical interface [2-122](#)
 loopback error
 detection for [2-109](#)
 recovery timer [2-114](#)
 loop guard, for spanning tree [2-512, 2-516](#)

M

mac access-group command [2-185](#)
 MAC access-groups, displaying [2-407](#)
 MAC access list configuration mode [2-187](#)
 mac access-list extended command [2-187](#)
 MAC access lists [2-73](#)
 MAC addresses
 displaying
 aging time [2-413](#)
 all [2-411](#)
 dynamic [2-417](#)
 MAC address-table move updates [2-421](#)
 notification settings [2-423](#)
 number of addresses in a VLAN [2-415](#)
 per interface [2-419](#)
 per VLAN [2-427](#)
 static [2-425](#)
 static and dynamic entries [2-409](#)
 dynamic
 aging time [2-189](#)
 deleting [2-48](#)
 displaying [2-417](#)
 enabling MAC address notification [2-192](#)
 enabling MAC address-table move update [2-190](#)

MAC addresses (continued)

 static
 adding and removing [2-194](#)
 displaying [2-425](#)
 dropping on an interface [2-195](#)
 tables [2-411](#)
 MAC address notification, debugging [B-18](#)
 mac address-table aging-time [2-185](#)
 mac address-table aging-time command [2-189](#)
 mac address-table move update command [2-190](#)
 mac address-table notification command [2-192](#)
 mac address-table static command [2-194](#)
 mac address-table static drop command [2-195](#)
 macro apply command [2-197](#)
 macro description command [2-200](#)
 macro global command [2-201](#)
 macro global description command [2-204](#)
 macro name command [2-205](#)
 macros
 adding a description [2-200](#)
 adding a global description [2-204](#)
 applying [2-201](#)
 creating [2-205](#)
 displaying [2-453](#)
 interface range [2-70, 2-124](#)
 specifying parameter values [2-201](#)
 tracing [2-201](#)
 maps, QoS
 defining [2-221](#)
 displaying [2-437](#)
 match (class-map configuration) command [2-207](#)
 maximum transmission unit
 See MTU
 mdix auto command [2-209](#)
 media-type command [2-211](#)
 member switches
 See clusters
 memory (boot loader) command [A-13](#)
 mkdir (boot loader) command [A-14](#)

- mls qos aggregate-policer command [2-215](#)
- mls qos command [2-213](#)
- mls qos cos command [2-217](#)
- mls qos dscp-mutation command [2-219](#)
- mls qos map command [2-221](#)
- mls qos queue-set output buffers command [2-225](#)
- mls qos queue-set output threshold command [2-227](#)
- mls qos rewrite ip dscp command [2-229](#)
- mls qos srr-queue input bandwidth command [2-231](#)
- mls qos srr-queue input buffers command [2-233](#)
- mls qos-srr-queue input cos-map command [2-235](#)
- mls qos srr-queue input dscp-map command [2-237](#)
- mls qos srr-queue input priority-queue command [2-239](#)
- mls qos srr-queue input threshold command [2-241](#)
- mls qos-srr-queue output cos-map command [2-243](#)
- mls qos srr-queue output dscp-map command [2-245](#)
- mls qos trust command [2-247](#)
- mode, MVR [2-254](#)
- modes, commands [1-1](#)
- monitor session command [2-249](#)
- more (boot loader) command [A-15](#)
- MSTP
 - displaying [2-465](#)
 - interoperability [2-54](#)
 - link type [2-514](#)
 - MST region
 - aborting changes [2-520](#)
 - applying changes [2-520](#)
 - configuration name [2-520](#)
 - configuration revision number [2-520](#)
 - current or pending display [2-520](#)
 - displaying [2-465](#)
 - MST configuration mode [2-520](#)
 - VLANs-to-instance mapping [2-520](#)
 - path cost [2-522](#)
 - protocol mode [2-518](#)
 - restart protocol migration process [2-54](#)

MSTP (continued)

- root port
 - loop guard [2-512](#)
 - preventing from becoming designated [2-512](#)
 - restricting which can be root [2-512](#)
 - root guard [2-512](#)
- root switch
 - affects of extended system ID [2-511](#)
 - hello-time [2-525, 2-532](#)
 - interval between BPDU messages [2-526](#)
 - interval between hello BPDU messages [2-525, 2-532](#)
 - max-age [2-526](#)
 - maximum hop count before discarding BPDU [2-527](#)
 - port priority for selection of [2-528](#)
 - primary or secondary [2-532](#)
 - switch priority [2-531](#)
- state changes
 - blocking to forwarding state [2-538](#)
 - enabling BPDU filtering [2-503, 2-536](#)
 - enabling BPDU guard [2-505, 2-536](#)
 - enabling Port Fast [2-536, 2-538](#)
 - forward-delay time [2-524](#)
 - length of listening and learning states [2-524](#)
 - rapid transition to forwarding [2-514](#)
 - shutting down Port Fast-enabled ports [2-536](#)
- state information display [2-464](#)
- MTU
 - configuring size [2-584](#)
 - displaying global setting [2-472](#)
- multicast group address, MVR [2-257](#)
- multicast groups, MVR [2-255](#)
- multicast router learning method [2-165](#)
- multicast router ports, configuring [2-165](#)
- multicast storm control [2-554](#)
- multicast VLAN, MVR [2-254](#)
- multicast VLAN registration
 - See MVR

Multiple Spanning Tree Protocol

See MSTP

MVR

and address aliasing [2-255](#)configuring [2-254](#)configuring interfaces [2-257](#)debug messages, display [B-22](#)displaying [2-445](#)displaying interface information [2-447](#)members, displaying [2-449](#)mvr (global configuration) command [2-254](#)mvr (interface configuration) command [2-257](#)mvr vlan group command [2-258](#)**N**native VLANs [2-579](#)Network Admission Control Software Configuration Guide [2-131, 2-133](#)negotiate, speed [2-546](#)negotiating DTP messaging [2-567](#)

non-IP protocols

denying [2-73](#)forwarding [2-264](#)non-IP traffic access lists [2-187](#)

non-IP traffic forwarding

denying [2-73](#)permitting [2-264](#)normal-range VLANs [2-600, 2-605](#)notifies command [2-10](#)no vlan command [2-600, 2-609](#)**P**

PAgP

See EtherChannel

pagp learn-method command [2-260](#)pagp port-priority command [2-262](#)password, VTP [2-619, 2-623](#)password-recovery mechanism, enabling and disabling [2-292](#)permit (MAC access-list configuration) command [2-264](#)

per-VLAN spanning-tree plus

See STP

physical-port learner [2-260](#)PID, displaying [2-379](#)PIM-DVMRP, as multicast router learning method [2-165](#)police aggregate command [2-269](#)police command [2-267](#)policed-DSCP map [2-221](#)policy-map command [2-271](#)

policy maps

applying to an interface [2-294, 2-298](#)creating [2-271](#)displaying [2-456](#)hierarchical [2-271](#)

policers

displaying [2-430](#)for a single class [2-267](#)for multiple classes [2-215, 2-269](#)policed-DSCP map [2-221](#)

traffic classification

defining the class [2-38](#)defining trust states [2-593](#)setting DSCP or IP precedence values [2-296](#)

Port Aggregation Protocol

See EtherChannel

port-based authentication

AAA method list [2-3](#)debug messages, display [B-8](#)

enabling IEEE 802.1x

globally [2-76](#)per interface [2-99](#)guest VLAN [2-90](#)host modes [2-92](#)IEEE 802.1x AAA accounting methods [2-1](#)initialize an interface [2-93, 2-104](#)MAC authentication bypass [2-94](#)

port-based authentication (continued)

- manual control of authorization state [2-99](#)
- PAE as authenticator [2-98](#)
- periodic re-authentication
 - enabling [2-102](#)
 - time between attempts [2-105](#)
- quiet period between failed authentication exchanges [2-105](#)
- re-authenticating IEEE 802.1x-enabled ports [2-101](#)
- resetting configurable IEEE 802.1x parameters [2-88](#)
- switch-to-authentication server retransmission time [2-105](#)
- switch-to-client frame-retransmission number [2-96 to 2-97](#)
- switch-to-client retransmission time [2-105](#)
- test for IEEE 802.1x readiness [2-103](#)
- port-channel load-balance command [2-273](#)
- Port Fast, for spanning tree [2-538](#)
- port ranges, defining [2-70](#)
- ports, debugging [B-54](#)
- ports, protected [2-578](#)
- port security
 - aging [2-574](#)
 - debug messages, display [B-56](#)
 - enabling [2-569](#)
 - violation error recovery [2-114](#)
- port trust states for QoS [2-247](#)
- port types, MVR [2-257](#)
- power supply alarms, setting [2-7](#)
- power-supply dual command [2-275](#)
- power-supply mode [2-275](#)
- primary temperature alarm [2-8](#)
- priority-queue command [2-276](#)
- privileged EXEC mode [1-2, 1-3](#)
- product identification information, displaying [2-379](#)
- protected ports, displaying [2-373](#)

- pruning
 - VLANs [2-579](#)
- VTP
 - displaying interface information [2-368](#)
 - enabling [2-619, 2-623](#)
- pruning-eligible VLAN list [2-580](#)
- PVST+
 - See STP

Q**QoS**

- auto-QoS
 - configuring [2-22](#)
 - debug messages, display [B-2](#)
 - displaying [2-312](#)
- class maps
 - creating [2-40](#)
 - defining the match criteria [2-207](#)
 - displaying [2-321](#)
- defining the CoS value for an incoming packet [2-217](#)
- displaying configuration information [2-312, 2-429](#)
- DSCP transparency [2-229](#)
- DSCP trusted ports
 - applying DSCP-to-DSCP-mutation map to [2-219](#)
 - defining DSCP-to-DSCP-mutation map [2-221](#)
- egress queues
 - allocating buffers [2-225](#)
 - defining the CoS output queue threshold map [2-243](#)
 - defining the DSCP output queue threshold map [2-245](#)
 - displaying buffer allocations [2-433](#)
 - displaying CoS output queue threshold map [2-437](#)
 - displaying DSCP output queue threshold map [2-437](#)
 - displaying queueing strategy [2-433](#)
 - displaying queue-set settings [2-440](#)

QoS (continued)

- egress queues (continued)
 - enabling bandwidth shaping and scheduling [2-550](#)
 - enabling bandwidth sharing and scheduling [2-552](#)
 - limiting the maximum output on a port [2-548](#)
 - mapping a port to a queue-set [2-278](#)
 - mapping CoS values to a queue and threshold [2-243](#)
 - mapping DSCP values to a queue and threshold [2-245](#)
 - setting maximum and reserved memory allocations [2-227](#)
 - setting WTD thresholds [2-227](#)
- enabling [2-213](#)
- ingress queues
 - allocating buffers [2-233](#)
 - assigning SRR scheduling weights [2-231](#)
 - defining the CoS input queue threshold map [2-235](#)
 - defining the DSCP input queue threshold map [2-237](#)
 - displaying buffer allocations [2-433](#)
 - displaying CoS input queue threshold map [2-437](#)
 - displaying DSCP input queue threshold map [2-437](#)
 - displaying queueing strategy [2-433](#)
 - displaying settings for [2-431](#)
 - enabling the priority queue [2-239](#)
 - mapping CoS values to a queue and threshold [2-235](#)
 - mapping DSCP values to a queue and threshold [2-237](#)
 - setting WTD thresholds [2-241](#)
- maps
 - defining [2-221, 2-235, 2-237, 2-243, 2-245](#)
 - displaying [2-437](#)
- policy maps
 - applying an aggregate policer [2-269](#)
 - applying to an interface [2-294, 2-298](#)
 - creating [2-271](#)

QoS (continued)

- policy-maps (continued)
 - defining policers [2-215, 2-267](#)
 - displaying policers [2-430](#)
 - displaying policy maps [2-456](#)
 - hierarchical [2-271](#)
 - policed-DSCP map [2-221](#)
 - setting DSCP or IP precedence values [2-296](#)
 - traffic classifications [2-38](#)
 - trust states [2-593](#)
- port trust states [2-247](#)
- queues, enabling the expedite [2-276](#)
- statistics
 - in-profile and out-of-profile packets [2-433](#)
 - packets enqueued or dropped [2-433](#)
 - sent and received CoS values [2-433](#)
 - sent and received DSCP values [2-433](#)
 - trusted boundary for IP phones [2-247](#)
- quality of service
 - See QoS
- querytime, MVR [2-254](#)
- queue-set command [2-278](#)

R

- radius-server dead-criteria command [2-279](#)
- radius-server host command [2-281](#)
- rapid per-VLAN spanning-tree plus
 - See STP
- rapid PVST+
 - See STP
- rcommand command [2-283](#)
- re-authenticating IEEE 802.1x-enabled ports [2-101](#)
- re-authentication
 - periodic [2-102](#)
 - time between attempts [2-105](#)
- receiver ports, MVR [2-257](#)
- receiving flow-control packets [2-120](#)

- recovery mechanism
 - causes [2-114](#)
 - display [2-44, 2-318, 2-351, 2-355](#)
 - timer interval [2-114](#)
 - redundancy for cluster switches [2-67](#)
 - relay-major command [2-10](#)
 - relay-minor command [2-10](#)
 - remote-span command [2-285](#)
 - Remote Switched Port Analyzer
 - See RSPAN
 - rename (boot loader) command [A-16](#)
 - renew ip dhcp snooping database command [2-287](#)
 - reset (boot loader) command [A-17](#)
 - reset command [2-612](#)
 - resource templates, displaying [2-461](#)
 - restricted VLAN
 - See dot1x auth-fail vlan
 - rmdir (boot loader) command [A-18](#)
 - rmon collection stats command [2-289](#)
 - root guard, for spanning tree [2-512](#)
 - RSPAN
 - configuring [2-249](#)
 - displaying [2-443](#)
 - filter RSPAN traffic [2-249](#)
 - remote-span command [2-285](#)
 - sessions
 - displaying [2-443](#)
-
- S**
- sdm prefer command [2-290](#)
 - SDM templates
 - displaying [2-461](#)
 - secondary temperature alarm [2-8](#)
 - secure ports, limitations [2-571](#)
 - sending flow-control packets [2-120](#)
 - service password-recovery command [2-292](#)
 - service-policy command [2-294](#)
 - set (boot loader) command [A-19](#)
 - set command [2-296](#)
 - setup command [2-298](#)
 - setup express command [2-301](#)
 - show access-lists command [2-303](#)
 - show alarm description port [2-306](#)
 - show alarm description port command [2-306](#)
 - show alarm profile command [2-307](#)
 - show alarm settings command [2-309](#)
 - show archive status command [2-311](#)
 - show auto qos command [2-312](#)
 - show boot command [2-316](#)
 - show cable-diagnostics tdr command [2-318](#)
 - show changes command [2-612](#)
 - show cip [2-320](#)
 - show class-map command [2-321](#)
 - show cluster candidates command [2-324](#)
 - show cluster command [2-322](#)
 - show cluster members command [2-326](#)
 - show controllers cpu-interface command [2-328](#)
 - show controllers ethernet-controller command [2-330](#)
 - show controllers tcam command [2-337](#)
 - show controller utilization command [2-339](#)
 - show current command [2-612](#)
 - show dot1x command [2-341](#)
 - show dtp [2-345](#)
 - show eap command [2-347](#)
 - show env command [2-350](#)
 - show errdisable detect command [2-351](#)
 - show errdisable flap-values command [2-353](#)
 - show errdisable recovery command [2-355](#)
 - show etherchannel command [2-357](#)
 - show facility-alarm relay command [2-360](#)
 - show facility-alarm status [2-360](#)
 - show facility-alarm status command [2-361](#)
 - show fallback profile command [2-362](#)
 - show fcs threshold command [2-364](#)
 - show flowcontrol command [2-366](#)
 - show interfaces command [2-368](#)
 - show interfaces counters command [2-377](#)

- show inventory command [2-379](#)
- show ip dhcp snooping binding command [2-381](#)
- show ip dhcp snooping command [2-380](#)
- show ip dhcp snooping database command [2-383, 2-385](#)
- show ip igmp profile command [2-388](#)
- show ip igmp snooping command [2-389](#)
- show ip igmp snooping groups command [2-392](#)
- show ip igmp snooping mrouter command [2-394](#)
- show ip igmp snooping querier command [2-396](#)
- show ipv6 route updated [2-398](#)
- show lacp command [2-398](#)
- show link state group command [2-405](#)
- show location [2-402](#)
- show mac access-group command [2-407](#)
- show mac address-table address command [2-411](#)
- show mac address-table aging time command [2-413](#)
- show mac address-table command [2-409](#)
- show mac address-table count command [2-415](#)
- show mac address-table dynamic command [2-417](#)
- show mac address-table interface command [2-419](#)
- show mac address-table move update command [2-421](#)
- show mac address-table notification command [2-49, 2-423, B-20](#)
- show mac address-table static command [2-425](#)
- show mac address-table vlan command [2-427](#)
- show mls qos aggregate-policer command [2-430](#)
- show mls qos command [2-429](#)
- show mls qos input-queue command [2-431](#)
- show mls qos interface command [2-433](#)
- show mls qos maps command [2-437](#)
- show mls qos queue-set command [2-440](#)
- show mls qos vlan command [2-442](#)
- show monitor command [2-443](#)
- show mvr command [2-445](#)
- show mvr interface command [2-447](#)
- show mvr members command [2-449](#)
- show pagp command [2-451](#)
- show parser macro command [2-453](#)
- show platform acl command [C-2](#)
- show platform backup interface command [C-3](#)
- show platform etherchannel command [C-4](#)
- show platform forward command [C-5](#)
- show platform igmp snooping command [C-7](#)
- show platform layer4op command [C-9](#)
- show platform mac-address-table command [C-10](#)
- show platform messaging command [C-11](#)
- show platform monitor command [C-12](#)
- show platform mvr table command [C-13](#)
- show platform pm command [C-14](#)
- show platform port-asic command [C-15](#)
- show platform port-security command [C-20](#)
- show platform qos command [C-21](#)
- show platform resource-manager command [C-22](#)
- show platform snmp counters command [C-24](#)
- show platform spanning-tree command [C-25](#)
- show platform stp-instance command [C-26](#)
- show platform team command [C-27](#)
- show platform vlan command [C-29](#)
- show policy-map command [2-456](#)
- show port security command [2-458](#)
- show proposed command [2-612](#)
- show sdm prefer command [2-461](#)
- show setup express command [2-463](#)
- show spanning-tree command [2-464](#)
- show storm-control command [2-470](#)
- show system mtu command [2-472](#)
- show trust command [2-593](#)
- show udd command [2-473](#)
- show version command [2-476](#)
- show vlan command [2-478](#)
- show vlan command, fields [2-480](#)
- show vmps command [2-482](#)
- show vtp command [2-484](#)
- shutdown command [2-489](#)
- shutdown vlan command [2-490](#)
- small violation-rate command [2-491](#)
- Smartports macros
 - See macros

- SNMP host, specifying [2-496](#)
- SNMP informs, enabling the sending of [2-493](#)
- snmp-server enable traps command [2-493](#)
- snmp-server host command [2-496](#)
- snmp trap mac-notification command [2-500](#)
- SNMP traps
 - enabling MAC address notification trap [2-500](#)
 - enabling the MAC address notification feature [2-192](#)
 - enabling the sending of [2-493](#)
- SoftPhone
 - See Cisco SoftPhone
- software images
 - deleting [2-72](#)
 - downloading [2-14](#)
 - upgrading [2-14](#)
 - uploading [2-20](#)
- software version, displaying [2-476](#)
- source ports, MVR [2-257](#)
- SPAN
 - configuring [2-249](#)
 - debug messages, display [B-21](#)
 - displaying [2-443](#)
 - filter SPAN traffic [2-249](#)
 - sessions
 - add interfaces to [2-249](#)
 - displaying [2-443](#)
 - start new [2-249](#)
- spanning-tree backbonefast command [2-502](#)
- spanning-tree bpdufilter command [2-503](#)
- spanning-tree bpduguard command [2-505](#)
- spanning-tree cost command [2-507](#)
- spanning-tree etherchannel command [2-509](#)
- spanning-tree extend system-id command [2-511](#)
- spanning-tree guard command [2-512](#)
- spanning-tree link-type command [2-514](#)
- spanning-tree loopguard default command [2-516](#)
- spanning-tree mode command [2-518](#)
- spanning-tree mst configuration command [2-520](#)
- spanning-tree mst cost command [2-522](#)
- spanning-tree mst forward-time command [2-524](#)
- spanning-tree mst hello-time command [2-525](#)
- spanning-tree mst max-age command [2-526](#)
- spanning-tree mst max-hops command [2-527](#)
- spanning-tree mst port-priority command [2-528](#)
- spanning-tree mst pre-standard command [2-530](#)
- spanning-tree mst priority command [2-531](#)
- spanning-tree mst root command [2-532](#)
- spanning-tree portfast (global configuration) command [2-536](#)
- spanning-tree portfast (interface configuration) command [2-538](#)
- spanning-tree port-priority command [2-534](#)
- Spanning Tree Protocol
 - See STP
- spanning-tree transmit hold-count command [2-540](#)
- spanning-tree uplinkfast command [2-541](#)
- spanning-tree vlan command [2-543](#)
- speed command [2-546](#)
- srr-queue bandwidth limit command [2-548](#)
- srr-queue bandwidth share command [2-552](#)
- SSH, configuring version [2-169](#)
- static-access ports, configuring [2-557](#)
- statistics, Ethernet group [2-289](#)
- sticky learning, enabling [2-569](#)
- storm-control command [2-554](#)
- STP
 - BackboneFast [2-502](#)
 - counters, clearing [2-53](#)
 - debug messages, display
 - BackboneFast events [B-60](#)
 - MSTP [B-63](#)
 - optimized BPDUs handling [B-62](#)
 - spanning-tree activity [B-58](#)
 - switch shim [B-65](#)
 - transmitted and received BPDUs [B-61](#)
 - UplinkFast [B-67](#)
 - detection of indirect link failures [2-502](#)
 - EtherChannel misconfiguration [2-509](#)

STP (continued)

extended system ID [2-511](#)

path cost [2-507](#)

protocol modes [2-518](#)

root port

accelerating choice of new [2-541](#)

loop guard [2-512](#)

preventing from becoming designated [2-512](#)

restricting which can be root [2-512](#)

root guard [2-512](#)

UplinkFast [2-541](#)

root switch

affects of extended system ID [2-511, 2-544](#)

hello-time [2-543](#)

interval between BDPUs messages [2-543](#)

interval between hello BPDU messages [2-543](#)

max-age [2-543](#)

port priority for selection of [2-534](#)

primary or secondary [2-543](#)

switch priority [2-543](#)

state changes

blocking to forwarding state [2-538](#)

enabling BPDU filtering [2-503, 2-536](#)

enabling BPDU guard [2-505, 2-536](#)

enabling Port Fast [2-536, 2-538](#)

enabling timer to recover from error state [2-114](#)

forward-delay time [2-543](#)

length of listening and learning states [2-543](#)

shutting down Port Fast-enabled ports [2-536](#)

state information display [2-464](#)

VLAN options [2-531, 2-543](#)

Switched Port Analyzer

See SPAN

switchport access command [2-557](#)

switchport backup interface command [2-559](#)

switchport block command [2-563](#)

switchport host command [2-564](#)

switchport mode command [2-565](#)

switchport nonegotiate command [2-567](#)

switchport port-security aging command [2-574](#)

switchport port-security command [2-569](#)

switchport priority extend command [2-576](#)

switchport protected command [2-578](#)

switchports, displaying [2-368](#)

switchport trunk command [2-579](#)

switchport voice vlan command [2-582](#)

syslog command [2-10](#)

system message logging, save message to flash [2-183](#)

system mtu command [2-584](#)

system resource templates [2-290](#)

T

tar files, creating, listing, and extracting [2-17](#)

TDR, running [2-586](#)

Telnet, using to communicate to cluster switches [2-283](#)

temperature alarms, setting [2-8](#)

templates, SDM [2-290](#)

templates, system resources [2-290](#)

test cable-diagnostics tdr command [2-586](#)

test relay [2-587](#)

test relay command [2-587](#)

traceroute mac command [2-588](#)

traceroute mac ip command [2-591](#)

trunking, VLAN mode [2-565](#)

trunk mode [2-565](#)

trunk ports [2-565](#)

trunks, to non-DTP device [2-566](#)

trusted boundary for QoS [2-247](#)

trusted port states for QoS [2-247](#)

type (boot loader) command [A-22](#)

U

UDLD

- aggressive mode [2-595, 2-597](#)
- debug messages, display [B-74](#)
- enable globally [2-595](#)
- enable per interface [2-597](#)
- error recovery timer [2-114](#)
- message timer [2-595](#)
- normal mode [2-595, 2-597](#)
- reset a shutdown interface [2-599](#)
- status [2-473](#)

udld command [2-595](#)

udld port command [2-597](#)

udld reset command [2-599](#)

unicast storm control [2-554](#)

UniDirectional Link Detection

See UDLD

unknown multicast traffic, preventing [2-563](#)

unknown unicast traffic, preventing [2-563](#)

unset (boot loader) command [A-23](#)

upgrading

- software images
 - downloading [2-14](#)
 - monitoring status of [2-311](#)

UplinkFast, for STP [2-541](#)

user EXEC mode [1-2, 1-3](#)

V

version (boot loader) command [A-25](#)

vlan (global configuration) command [2-600](#)

vlan (VLAN configuration) command [2-605](#)

VLAN configuration

- rules [2-603, 2-607](#)
- saving [2-600, 2-609](#)

VLAN configuration mode

commands

VLAN [2-605](#)

VTP [2-623](#)

description [1-5](#)

entering [2-611](#)

summary [1-2](#)

vlan database command [2-611](#)

VLAN ID range [2-600, 2-605](#)

VLAN Query Protocol

See VQP

VLANs

adding [2-600](#)

configuring [2-600, 2-605](#)

debug messages, display

ISL [B-71](#)

VLAN IOS file system error tests [B-70](#)

VLAN manager activity [B-68](#)

VTP [B-72](#)

displaying configurations [2-478](#)

enabling guest VLAN supplicant [2-78, 2-89, 2-118](#)

extended-range [2-600](#)

MAC addresses

displaying [2-427](#)

number of [2-415](#)

media types [2-602, 2-607](#)

normal-range [2-600, 2-605](#)

restarting [2-490](#)

saving the configuration [2-600](#)

shutting down [2-490](#)

SNMP traps for VTP [2-495, 2-497](#)

suspending [2-490](#)

variables [2-605](#)

VLAN Trunking Protocol

See VTP

VMPS

- configuring servers [2-617](#)
- displaying [2-482](#)
- error recovery timer [2-114](#)
- reconfirming dynamic VLAN assignments [2-614](#)
- vmmps reconfirm (global configuration) command [2-615](#)
- vmmps reconfirm (privileged EXEC) command [2-614](#)
- vmmps retry command [2-616](#)
- vmmps server command [2-617](#)

voice VLAN

- configuring [2-582](#)
- setting port priority [2-576](#)

VQP

- and dynamic-access ports [2-558](#)
- clearing client statistics [2-55](#)
- displaying information [2-482](#)
- per-server retry count [2-616](#)
- reconfirmation interval [2-615](#)
- reconfirming dynamic VLAN assignments [2-614](#)

VTP

- changing characteristics [2-619](#)
- clearing pruning counters [2-56](#)
- configuring
 - domain name [2-619, 2-623](#)
 - file name [2-619](#)
 - mode [2-619, 2-623](#)
 - password [2-619, 2-623](#)
- counters display fields [2-485](#)
- displaying information [2-484](#)
- enabling
 - pruning [2-619, 2-623](#)
 - Version 2 [2-619, 2-623](#)
- mode [2-619, 2-623](#)
- pruning [2-619, 2-623](#)
- saving the configuration [2-600, 2-609](#)
- statistics [2-484](#)
- status [2-484](#)
- status display fields [2-486](#)

- vtp (global configuration) command [2-619](#)
- vtp (VLAN configuration) command [2-623](#)