



INDEX

A

aaa accounting dot1x command [2-1](#)
aaa authentication dot1x command [2-3](#)
aaa authorization network command [2-5](#)
AAA methods [2-3](#)
abort command [2-635](#)
access control entries
 See ACEs
access control lists
 See ACLs
access groups
 IP [2-130](#)
 MAC, displaying [2-416](#)
access mode [2-587](#)
access ports [2-587](#)
ACEs [2-74](#), [2-271](#)
ACLs
 deny [2-72](#)
 displaying [2-311](#)
 for non-IP protocols [2-190](#)
 IP [2-130](#)
 on Layer 2 interfaces [2-130](#)
 permit [2-269](#)
address aliasing [2-260](#)
aggregate-port learner [2-265](#)
alarm command [2-10](#)
alarm facility fcs-hysteresis command [2-6](#)
alarm facility power-supply command [2-7](#)
alarm facility temperature command [2-8](#)
alarm IDs [2-11](#), [2-314](#)

alarm profile
 attaching to a port [2-12](#)
 creating [2-10](#)
 displaying [2-315](#)
alarm profile (global configuration) command [2-10](#)
alarm profile (interface configuration) command [2-12](#)
alarm profile configuration mode [2-10](#)
allowed VLANs [2-602](#)
apply command [2-635](#)
archive download-sw command [2-14](#)
archive tar command [2-17](#)
archive upload-sw command [2-20](#)
authentication failed VLAN
 See dot1x auth-fail vlan
auth-fail max-attempts
 See dot1x auth-fail max-attempts
auth-fail vlan
 See dot1x auth-fail vlan
authorization state of controlled port [2-99](#)
autonegotiation of duplex mode [2-110](#)
auto qos voip command [2-22](#)

B

BackboneFast, for STP [2-523](#)
backup interfaces
 configuring [2-581](#)
 displaying [2-376](#)
boot (boot loader) command [A-2](#)
boot config-file command [2-26](#)
boot enable-break command [2-27](#)
boot helper command [2-28](#)
boot helper-config file command [2-29](#)

booting

- Cisco IOS image [2-32](#)
- displaying environment variables [2-324](#)
- interrupting [2-27](#)
- manually [2-30](#)

boot loader

- accessing [A-1](#)
- booting
 - Cisco IOS image [A-2](#)
 - helper image [2-28](#)
- directories
 - creating [A-14](#)
 - displaying a list of [A-7](#)
 - removing [A-18](#)
- displaying
 - available commands [A-12](#)
 - memory heap utilization [A-13](#)
 - version [A-25](#)

environment variables

- described [A-19](#)
- displaying settings [A-19](#)
- location of [A-20](#)
- setting [A-19](#)
- unsetting [A-23](#)

files

- copying [A-5](#)
- deleting [A-6](#)
- displaying a list of [A-7](#)
- displaying the contents of [A-4, A-15, A-22](#)
- renaming [A-16](#)

file system

- formatting [A-10](#)
- initializing flash [A-9](#)
- running a consistency check [A-11](#)

resetting the system [A-17](#)boot manual command [2-30](#)boot private-config-file command [2-31](#)boot system command [2-32](#)boundary clock mode [2-283](#)BPDU filtering, for spanning tree [2-524, 2-558](#)BPDU guard, for spanning tree [2-526, 2-558](#)broadcast storm control [2-576](#)**C**

candidate switches

See clusters

cat (boot loader) command [A-4](#)channel-group command [2-33](#)channel-protocol command [2-36](#)

Cisco SoftPhone

auto-QoS configuration [2-22](#)trusting packets sent from [2-252](#)class command [2-38](#)class-map command [2-40](#)

class maps

creating [2-40](#)defining the match criteria [2-212](#)displaying [2-329](#)

class of service

See CoS

clear dot1x command [2-42](#)clear eap sessions command [2-43](#)clear errdisable interface [2-44](#)clear ip dhcp snooping database command [2-45](#)clear lacp command [2-47](#)clear mac address-table command [2-48, 2-49](#)clear pagp command [2-50](#)clear port-security command [2-51](#)clear spanning-tree counters command [2-53](#)clear spanning-tree detected-protocols command [2-54](#)clear vmps statistics command [2-55](#)clear vtp counters command [2-56](#)cluster commander-address command [2-57](#)cluster discovery hop-count command [2-59](#)cluster enable command [2-60](#)cluster holdtime command [2-61](#)cluster member command [2-62](#)

- cluster outside-interface command [2-64](#)
- cluster run command [2-65](#)
- clusters
 - adding candidates [2-62](#)
 - binding to HSRP group [2-66](#)
 - building manually [2-62](#)
 - communicating with
 - devices outside the cluster [2-64](#)
 - members by using Telnet [2-291](#)
 - debug messages, display [B-6](#)
 - displaying
 - candidate switches [2-332](#)
 - debug messages [B-6](#)
 - member switches [2-334](#)
 - status [2-330](#)
 - hop-count limit for extended discovery [2-59](#)
 - HSRP standby groups [2-66](#)
 - redundancy [2-66](#)
 - SNMP trap [2-513](#)
- cluster standby-group command [2-66](#)
- cluster timer command [2-68](#)
- command modes defined [1-1](#)
- command switch
 - See clusters
- configuration files
 - password recovery disable considerations [A-1](#)
 - specifying the name [2-26, 2-31](#)
- configuring multiple interfaces [2-126](#)
- config-vlan mode
 - commands [2-624](#)
 - description [1-4](#)
 - entering [2-623](#)
 - summary [1-2](#)
- copy (boot loader) command [A-5](#)
- CoS
 - assigning default value to incoming packets [2-222](#)
 - overriding the incoming value [2-222](#)
- CoS-to-DSCP map [2-226](#)
- CPU ASIC statistics, displaying [2-336](#)

- crashinfo files [2-118](#)

D

- debug auto qos command [B-2](#)
- debug backup command [B-4, B-5](#)
- debug cip [B-5](#)
- debug cluster command [B-6](#)
- debug dot1x command [B-8](#)
- debug dtp command [B-9](#)
- debug eap command [B-10, B-57](#)
- debug etherchannel command [B-11](#)
- debug interface command [B-12](#)
- debug ip dhcp snooping command [B-13](#)
- debug ip igmp filter command [B-14](#)
- debug ip igmp max-groups command [B-15](#)
- debug ip igmp snooping command [B-16](#)
- debug lacp command [B-17](#)
- debug mac-notification command [B-18](#)
- debug matm command [B-19](#)
- debug matm move update command [B-20](#)
- debug monitor command [B-21](#)
- debug mvrdbg command [B-22](#)
- debug nvram command [B-23](#)
- debug pagp command [B-24](#)
- debug platform acl command [B-25](#)
- debug platform backup interface command [B-26](#)
- debug platform cpu-queues command [B-27](#)
- debug platform dot1x command [B-29](#)
- debug platform etherchannel command [B-30](#)
- debug platform forw-tcam command [B-31](#)
- debug platform ip dhcp command [B-32](#)
- debug platform ip igmp snooping command [B-33](#)
- debug platform led command [B-35](#)
- debug platform matm command [B-36](#)
- debug platform messaging application command [B-37](#)
- debug platform phy command [B-38](#)
- debug platform pm command [B-40](#)
- debug platform port-asic command [B-42](#)

- debug platform port-security command [B-43](#)
- debug platform qos-acl-tcam command [B-44](#)
- debug platform resource-manager command [B-45](#)
- debug platform snmp command [B-46](#)
- debug platform span command [B-47](#)
- debug platform supervisor-asic command [B-48](#)
- debug platform sw-bridge command [B-49](#)
- debug platform tcam command [B-50](#)
- debug platform udd command [B-52](#)
- debug platform vlan command [B-53](#)
- debug pm command [B-54](#)
- debug port-security command [B-56](#)
- debug qos-manager command [B-58](#)
- debug spanning-tree backbonefast command [B-61](#)
- debug spanning-tree bpdu command [B-62](#)
- debug spanning-tree bpdu-opt command [B-63](#)
- debug spanning-tree command [B-59](#)
- debug spanning-tree mstp command [B-64](#)
- debug spanning-tree switch command [B-66](#)
- debug spanning-tree uplinkfast command [B-68](#)
- debug sw-vlan command [B-69](#)
- debug sw-vlan ifs command [B-71](#)
- debug sw-vlan notification command [B-72](#)
- debug sw-vlan vtp command [B-73](#)
- debug udd command [B-75](#)
- debug vqpc command [B-77](#)
- defaultPort profile [2-11, 2-12](#)
- define interface-range command [2-69](#)
- delete (boot loader) command [A-6](#)
- delete command [2-71](#)
- deny command [2-72](#)
- detect mechanism, causes [2-111](#)
- DHCP snooping
 - accepting untrusted packets from edge switch [2-144](#)
 - enabling
 - on a VLAN [2-149](#)
 - option 82 [2-142, 2-144](#)
 - trust on an interface [2-147](#)
 - error recovery timer [2-116](#)
 - rate limiting [2-146](#)
- DHCP snooping binding database
 - binding file, configuring [2-140](#)
 - bindings
 - adding [2-138](#)
 - deleting [2-138](#)
 - displaying [2-388](#)
 - clearing database agent statistics [2-45](#)
 - database agent, configuring [2-140](#)
 - displaying
 - binding entries [2-388](#)
 - database agent status [2-390, 2-392](#)
 - renewing [2-295](#)
- dir (boot loader) command [A-7](#)
- directories, deleting [2-71](#)
- domain name, VTP [2-642, 2-646](#)
- dot1x auth-fail max-attempts [2-77](#)
- dot1x auth-fail vlan [2-79](#)
- dot1x command [2-75](#)
- dot1x control-direction command [2-81](#)
- dot1x critical global configuration command [2-83](#)
- dot1x critical interface configuration command [2-85](#)
- dot1x default command [2-87](#)
- dot1x fallback command [2-88](#)
- dot1x guest-vlan command [2-89](#)
- dot1x host-mode command [2-91](#)
- dot1x initialize command [2-93](#)
- dot1x mac-auth-bypass command [2-94](#)
- dot1x max-reauth-req command [2-96](#)
- dot1x max-req command [2-97](#)
- dot1x pae command [2-98](#)
- dot1x port-control command [2-99](#)

dot1x re-authenticate command [2-101](#)
 dot1x reauthentication command [2-102](#)
 dot1x test eapol-capable command [2-103](#)
 dot1x test timeout command [2-104](#)
 dot1x timeout command [2-105](#)
 dot1x violation-mode command [2-108](#)
 DSCP-to-CoS map [2-226](#)
 DSCP-to-DSCP-mutation map [2-226](#)
 DTP [2-588](#)
 DTP flap

- error detection for [2-111](#)
- error recovery timer [2-116](#)

 DTP negotiation [2-589](#)
 dual-purpose uplink ports

- displaying the active media [2-382](#)
- selecting the type [2-216](#)

 duplex command [2-109](#)
 dynamic-access ports

- configuring [2-579](#)
- restrictions [2-580](#)

 dynamic auto VLAN membership mode [2-587](#)
 dynamic desirable VLAN membership mode [2-587](#)
 Dynamic Host Configuration Protocol (DHCP)

- See DHCP snooping

 Dynamic Trunking Protocol

- See DTP

E

EAP-request/identity frame

- maximum number to send [2-97](#)
- response time before retransmitting [2-105](#)

 environmental alarms, displaying [2-317](#)
 environment variables, displaying [2-324](#)
 errdisable detect cause command [2-111](#)
 errdisable detect cause small-frame comand [2-113](#)
 errdisable recovery cause small-frame [2-115](#)
 errdisable recovery command [2-116](#)
 error conditions, displaying [2-361](#)
 error disable detection [2-111](#)
 error-disabled interfaces, displaying [2-376](#)
 EtherChannel

- assigning Ethernet interface to channel group [2-33](#)
- creating port-channel logical interface [2-124](#)
- debug EtherChannel/PAgP, display [B-11](#)
- debug platform-specific events, display [B-30](#)
- displaying [2-365](#)
- interface information, displaying [2-376](#)

 LACP

- clearing channel-group information [2-47](#)
- debug messages, display [B-17](#)
- displaying [2-407](#)
- modes [2-33](#)
- port priority for hot-standby ports [2-174](#)
- restricting a protocol [2-36](#)
- system priority [2-176](#)

 load-distribution methods [2-278](#)
 PAgP

- aggregate-port learner [2-265](#)
- clearing channel-group information [2-50](#)
- debug messages, display [B-24](#)
- displaying [2-461](#)
- error detection for [2-111](#)
- error recovery timer [2-116](#)
- learn method [2-265](#)
- modes [2-33](#)
- physical-port learner [2-265](#)
- priority of interface for transmitted traffic [2-267](#)

 Ethernet controller, internal register display [2-338](#)
 Ethernet statistics, collecting [2-297](#)
 exception crashinfo command [2-118](#)
 exit command [2-635](#)
 Express Setup button, and password recovery [2-300](#)
 extended discovery of candidate switches [2-59](#)

extended-range VLANs
 and allowed VLAN list [2-602](#)
 and pruning-eligible list [2-602](#)
 configuring [2-623](#)
 extended system ID for STP [2-532](#)

F

facility alarm relays, displaying [2-368](#)
 facility alarm status, displaying [2-369](#)
 fallback profile command [2-119](#)
 fallback profiles, displaying [2-370](#)
 FCS bit error rate
 displaying [2-372](#)
 fluctuation threshold [2-6](#)
 setting [2-121](#)
 FCS hysteresis threshold [2-6](#)
 fcs-threshold command [2-121](#)
 file name, VTP [2-642](#)
 files, deleting [2-71](#)
 flash_init (boot loader) command [A-9](#)
 Flex Links
 configuring [2-581](#)
 configuring preferred VLAN [2-583](#)
 displaying [2-376](#)
 flowcontrol command [2-122](#)
 format (boot loader) command [A-10](#)
 forwarding results, display [C-5](#)
 frame check sequence
 See FCS
 frame forwarding information, displaying [C-5](#)
 fsck (boot loader) command [A-11](#)

G

global configuration mode [1-2, 1-3](#)

H

hardware ACL statistics [2-311](#)
 help (boot loader) command [A-12](#)
 hierarchical policy maps [2-276](#)
 hop-count limit for clusters [2-59](#)
 host connection, port configuration [2-586](#)
 Hot Standby Router Protocol
 See HSRP
 HSRP
 binding HSRP group to cluster [2-66](#)
 standby group [2-66](#)

I

IEEE 802.1x
 and switchport modes [2-588](#)
 violation error recovery [2-116](#)
 See also port-based authentication
 IEEE 802.1X Port Based Authentication
 enabling guest VLAN supplicant [2-78, 2-88, 2-120](#)
 IGMP filters
 applying [2-150](#)
 debug messages, display [B-14](#)
 IGMP groups, setting maximum [2-152](#)
 IGMP maximum groups, debugging [B-15](#)
 IGMP profiles
 creating [2-154](#)
 displaying [2-395](#)
 IGMP snooping
 adding ports as a static member of a group [2-170](#)
 displaying [2-396, 2-401, 2-403](#)
 enabling [2-156](#)
 enabling the configurable-leave timer [2-158](#)
 enabling the Immediate-Leave feature [2-167](#)
 flooding query count [2-164](#)
 interface topology change notification behavior [2-166](#)
 multicast table [2-399](#)
 querier [2-160](#)

IGMP snooping (continued)

- query solicitation [2-164](#)
- report suppression [2-162](#)
- switch topology change notification behavior [2-164](#)
- images
 - See software images
- Immediate-Leave feature, MVR [2-262](#)
- immediate-leave processing [2-167](#)
- interface configuration mode [1-2, 1-4](#)
- interface port-channel command [2-124](#)
- interface range command [2-126](#)
- interface-range macros [2-69](#)
- interfaces
 - assigning Ethernet interface to channel group [2-33](#)
 - configuring [2-109](#)
 - configuring multiple [2-126](#)
 - creating port-channel logical [2-124](#)
 - debug messages, display [B-12](#)
 - disabling [2-509](#)
 - displaying the MAC address table [2-428](#)
 - restarting [2-509](#)
- interface speed, configuring [2-568](#)
- interface vlan command [2-129](#)
- internal registers, displaying [2-338, 2-345](#)
- Internet Group Management Protocol
 - See IGMP
- invalid GBIC
 - error detection for [2-111](#)
 - error recovery timer [2-116](#)
- ip access-group command [2-130](#)
- ip address command [2-132](#)
- IP addresses, setting [2-132](#)
- ip admission command [2-134](#)
- ip admission name proxy http command [2-135](#)
- IP DHCP snooping
 - See DHCP snooping
- ip dhcp snooping binding command [2-138](#)
- ip dhcp snooping command [2-137](#)
- ip dhcp snooping database command [2-140](#)
- ip dhcp snooping information option allow-untrusted command [2-144](#)
- ip dhcp snooping information option command [2-142](#)
- ip dhcp snooping limit rate command [2-146](#)
- ip dhcp snooping trust command [2-147](#)
- ip dhcp snooping verify command [2-148](#)
- ip dhcp snooping vlan command [2-149](#)
- ip igmp filter command [2-150](#)
- ip igmp max-groups command [2-152](#)
- ip igmp profile command [2-154](#)
- ip igmp snooping command [2-156](#)
- ip igmp snooping last-member-query-interval command [2-158](#)
- ip igmp snooping querier command [2-160](#)
- ip igmp snooping report-suppression command [2-162](#)
- ip igmp snooping ten command [2-164](#)
- ip igmp snooping ten flood command [2-166](#)
- ip igmp snooping vlan immediate-leave command [2-167](#)
- ip igmp snooping vlan mrouter command [2-168](#)
- ip igmp snooping vlan static command [2-170](#)
- IP multicast addresses [2-259](#)
- IP phones
 - auto-QoS configuration [2-22](#)
 - trusting packets sent from [2-252](#)
- IP-precedence-to-DSCP map [2-226](#)
- IP source guard
 - displaying
 - dynamic binding entries only [2-388](#)
- ip ssh command [2-172](#)
- IPv6 SDM template [2-298](#)

J

- jumbo frames
 - See MTU

L

LACP

See EtherChannel

lacp port-priority command [2-174](#)

lacp system-priority command [2-176](#)

Layer 2 traceroute

IP addresses [2-614](#)

MAC addresses [2-611](#)

line configuration mode [1-2, 1-5](#)

Link Aggregation Control Protocol

See EtherChannel

link flap

error detection for [2-111](#)

error recovery timer [2-116](#)

link state group command [2-182](#)

link state track command [2-184](#)

load-distribution methods for EtherChannel [2-278](#)

location (global configuration) command [2-178](#)

location (interface configuration) command [2-180](#)

logging event command [2-185](#)

logging file command [2-186](#)

logical interface [2-124](#)

loopback error

detection for [2-111](#)

recovery timer [2-116](#)

loop guard, for spanning tree [2-533, 2-537](#)

M

mac access-group command [2-188](#)

MAC access-groups, displaying [2-416](#)

MAC access list configuration mode [2-190](#)

mac access-list extended command [2-190](#)

MAC access lists [2-72](#)

MAC addresses

disabling MAC address learning per VLAN [2-193](#)

displaying

aging time [2-422](#)

all [2-420](#)

dynamic [2-426](#)

MAC address-table move updates [2-431](#)

notification settings [2-430, 2-433](#)

number of addresses in a VLAN [2-424](#)

per interface [2-428](#)

per VLAN [2-437](#)

static [2-435](#)

static and dynamic entries [2-418](#)

dynamic

aging time [2-192](#)

deleting [2-48](#)

displaying [2-426](#)

enabling MAC address notification [2-197](#)

enabling MAC address-table move update [2-195](#)

static

adding and removing [2-199](#)

displaying [2-435](#)

dropping on an interface [2-200](#)

tables [2-420](#)

MAC address notification, debugging [B-18](#)

mac address-table aging-time [2-188](#)

mac address-table aging-time command [2-192](#)

mac address-table learning command [2-193](#)

mac address-table move update command [2-195](#)

mac address-table notification command [2-197](#)

mac address-table static command [2-199](#)

mac address-table static drop command [2-200](#)

macro apply command [2-202](#)

macro description command [2-205](#)

macro global command [2-206](#)

macro global description command [2-209](#)

macro name command [2-210](#)

- macros
 - adding a description [2-205](#)
 - adding a global description [2-209](#)
 - applying [2-206](#)
 - creating [2-210](#)
 - displaying [2-463](#)
 - interface range [2-69, 2-126](#)
 - specifying parameter values [2-206](#)
 - tracing [2-206](#)
- maps
 - QoS
 - defining [2-226](#)
 - displaying [2-447](#)
- match (class-map configuration) command [2-212](#)
- maximum transmission unit
 - See MTU
- mdix auto command [2-214](#)
- media-type command [2-216](#)
- member switches
 - See clusters
- memory (boot loader) command [A-13](#)
- mkdir (boot loader) command [A-14](#)
- mls qos aggregate-policer command [2-220](#)
- mls qos command [2-218](#)
- mls qos cos command [2-222](#)
- mls qos dscp-mutation command [2-224](#)
- mls qos map command [2-226](#)
- mls qos queue-set output buffers command [2-230](#)
- mls qos queue-set output threshold command [2-232](#)
- mls qos rewrite ip dscp command [2-234](#)
- mls qos srr-queue input bandwidth command [2-236](#)
- mls qos srr-queue input buffers command [2-238](#)
- mls qos-srr-queue input cos-map command [2-240](#)
- mls qos srr-queue input dscp-map command [2-242](#)
- mls qos srr-queue input priority-queue command [2-244](#)
- mls qos srr-queue input threshold command [2-246](#)
- mls qos-srr-queue output cos-map command [2-248](#)
- mls qos srr-queue output dscp-map command [2-250](#)
- mls qos trust command [2-252](#)
- mode, MVR [2-259](#)
- modes, commands [1-1](#)
- monitor session command [2-254](#)
- more (boot loader) command [A-15](#)
- MSTP
 - displaying [2-478, 2-479, 2-480, 2-481, 2-482, 2-483, 2-484](#)
 - interoperability [2-54](#)
 - link type [2-535](#)
 - MST region
 - aborting changes [2-541](#)
 - applying changes [2-541](#)
 - configuration name [2-541](#)
 - configuration revision number [2-541](#)
 - current or pending display [2-541](#)
 - displaying [2-478, 2-479, 2-480, 2-481, 2-482, 2-483, 2-484](#)
 - MST configuration mode [2-541](#)
 - VLANs-to-instance mapping [2-541](#)
 - path cost [2-543](#)
 - protocol mode [2-539](#)
 - restart protocol migration process [2-54](#)
 - root port
 - loop guard [2-533](#)
 - preventing from becoming designated [2-533](#)
 - restricting which can be root [2-533](#)
 - root guard [2-533](#)
 - root switch
 - affects of extended system ID [2-532](#)
 - hello-time [2-546, 2-554](#)
 - interval between BPDU messages [2-547](#)
 - interval between hello BPDU messages [2-546, 2-554](#)
 - max-age [2-547](#)
 - maximum hop count before discarding BPDU [2-548](#)
 - port priority for selection of [2-550](#)
 - primary or secondary [2-554](#)
 - switch priority [2-553](#)

MSTP (continued)

state changes

- blocking to forwarding state [2-560](#)
- enabling BPDU filtering [2-524, 2-558](#)
- enabling BPDU guard [2-526, 2-558](#)
- enabling Port Fast [2-558, 2-560](#)
- forward-delay time [2-545](#)
- length of listening and learning states [2-545](#)
- rapid transition to forwarding [2-535](#)
- shutting down Port Fast-enabled ports [2-558](#)

state information display [2-477](#)**MTU**

- configuring size [2-607](#)
- displaying global setting [2-491](#)

multicast group address, MVR [2-262](#)multicast groups, MVR [2-260](#)multicast router learning method [2-168](#)multicast router ports, configuring [2-168](#)multicast storm control [2-576](#)multicast VLAN, MVR [2-259](#)

multicast VLAN registration

See MVR

Multiple Spanning Tree Protocol

See MSTP

MVR

- and address aliasing [2-260](#)
- configuring [2-259](#)
- configuring interfaces [2-262](#)
- debug messages, display [B-22](#)
- displaying [2-455](#)
- displaying interface information [2-457](#)
- members, displaying [2-459](#)

mvr (global configuration) command [2-259](#)mvr (interface configuration) command [2-262](#)mvr vlan group command [2-263](#)**N**native VLANs [2-602](#)Network Admission Control Software Configuration Guide [2-134, 2-136](#)nonegotiate, speed [2-568](#)nonegotiating DTP messaging [2-589](#)

non-IP protocols

- denying [2-72](#)
- forwarding [2-269](#)

non-IP traffic access lists [2-190](#)

non-IP traffic forwarding

- denying [2-72](#)
- permitting [2-269](#)

normal-range VLANs [2-623, 2-628](#)notifies command [2-10](#)no vlan command [2-623, 2-632](#)**P****PAGP**

See EtherChannel

pagp learn-method command [2-265](#)pagp port-priority command [2-267](#)password, VTP [2-642, 2-646](#)password-recovery mechanism, enabling and disabling [2-300](#)permit (MAC access-list configuration) command [2-269](#)

per-VLAN spanning-tree plus

See STP

physical-port learner [2-265](#)PID, displaying [2-386](#)PIM-DVMRP, as multicast router learning method [2-168](#)police aggregate command [2-274](#)police command [2-272](#)policed-DSCP map [2-226](#)policy-map command [2-276](#)

- policy maps
 - applying to an interface [2-302, 2-306](#)
 - creating [2-276](#)
 - displaying [2-466](#)
 - hierarchical [2-276](#)
 - policers
 - displaying [2-440](#)
 - for a single class [2-272](#)
 - for multiple classes [2-220, 2-274](#)
 - policed-DSCP map [2-226](#)
 - traffic classification
 - defining the class [2-38](#)
 - defining trust states [2-616](#)
 - setting DSCP or IP precedence values [2-304](#)
- Port Aggregation Protocol
 - See EtherChannel
- port-based authentication
 - AAA method list [2-3](#)
 - configuring violation modes [2-108](#)
 - debug messages, display [B-8](#)
 - enabling IEEE 802.1x
 - globally [2-75](#)
 - per interface [2-99](#)
 - guest VLAN [2-89](#)
 - host modes [2-91](#)
 - IEEE 802.1x AAA accounting methods [2-1](#)
 - initialize an interface [2-93, 2-104](#)
 - MAC authentication bypass [2-94](#)
 - manual control of authorization state [2-99](#)
 - PAE as authenticator [2-98](#)
 - periodic re-authentication
 - enabling [2-102](#)
 - time between attempts [2-105](#)
 - quiet period between failed authentication exchanges [2-105](#)
 - re-authenticating IEEE 802.1x-enabled ports [2-101](#)
 - resetting configurable IEEE 802.1x parameters [2-87](#)
 - switch-to-authentication server retransmission time [2-105](#)
- port-based authentication (continued)**
 - switch-to-client frame-retransmission number [2-96 to 2-97](#)
 - switch-to-client retransmission time [2-105](#)
 - test for IEEE 802.1x readiness [2-103](#)
 - port-channel load-balance command [2-278](#)
 - Port Fast, for spanning tree [2-560](#)
 - port ranges, defining [2-69](#)
 - ports, debugging [B-54](#)
 - ports, protected [2-600](#)
 - port security
 - aging [2-596](#)
 - debug messages, display [B-56](#)
 - enabling [2-591](#)
 - violation error recovery [2-116](#)
 - port trust states for QoS [2-252](#)
 - port types, MVR [2-262](#)
 - power supply alarms, setting [2-7](#)
 - power-supply dual command [2-280, 2-283](#)
 - power-supply mode [2-280, 2-283](#)
 - Precision Time Protocol
 - primary temperature alarm [2-8](#)
 - priority-queue command [2-281](#)
 - privileged EXEC mode [1-2, 1-3](#)
 - product identification information, displaying [2-386](#)
 - protected ports, displaying [2-381](#)
 - pruning
 - VLANs [2-602](#)
 - VTP
 - displaying interface information [2-376](#)
 - enabling [2-642, 2-646](#)
 - pruning-eligible VLAN list [2-603](#)
 - ptp global configuration command [2-283](#)
 - ptp interface configuration command [2-284](#)
 - PTP settings [2-283, 2-284](#)
 - PVST+
 - See STP

Q**QoS**

auto-QoS

- configuring [2-22](#)
- debug messages, display [B-2](#)
- displaying [2-320](#)

class maps

- creating [2-40](#)
- defining the match criteria [2-212](#)
- displaying [2-329](#)

defining the CoS value for an incoming packet [2-222](#)

displaying configuration information [2-320, 2-439](#)

DSCP transparency [2-234](#)

DSCP trusted ports

- applying DSCP-to-DSCP-mutation map to [2-224](#)
- defining DSCP-to-DSCP-mutation map [2-226](#)

egress queues

- allocating buffers [2-230](#)
- defining the CoS output queue threshold map [2-248](#)
- defining the DSCP output queue threshold map [2-250](#)
- displaying buffer allocations [2-443](#)
- displaying CoS output queue threshold map [2-447](#)
- displaying DSCP output queue threshold map [2-447](#)
- displaying queueing strategy [2-443](#)
- displaying queue-set settings [2-450](#)
- enabling bandwidth shaping and scheduling [2-572](#)
- enabling bandwidth sharing and scheduling [2-574](#)
- limiting the maximum output on a port [2-570](#)
- mapping a port to a queue-set [2-286](#)
- mapping CoS values to a queue and threshold [2-248](#)
- mapping DSCP values to a queue and threshold [2-250](#)

QoS (continued) egress queues

- setting maximum and reserved memory allocations [2-232](#)
- setting WTD thresholds [2-232](#)

enabling [2-218](#)

ingress queues

- allocating buffers [2-238](#)
- assigning SRR scheduling weights [2-236](#)
- defining the CoS input queue threshold map [2-240](#)
- defining the DSCP input queue threshold map [2-242](#)
- displaying buffer allocations [2-443](#)
- displaying CoS input queue threshold map [2-447](#)
- displaying DSCP input queue threshold map [2-447](#)
- displaying queueing strategy [2-443](#)
- displaying settings for [2-441](#)
- enabling the priority queue [2-244](#)
- mapping CoS values to a queue and threshold [2-240](#)
- mapping DSCP values to a queue and threshold [2-242](#)
- setting WTD thresholds [2-246](#)

maps

- defining [2-226, 2-240, 2-242, 2-248, 2-250](#)
- displaying [2-447](#)

policy maps

- applying an aggregate policer [2-274](#)
- applying to an interface [2-302, 2-306](#)
- creating [2-276](#)
- defining policers [2-220, 2-272](#)
- displaying policers [2-440](#)
- displaying policy maps [2-466](#)
- hierarchical [2-276](#)
- policed-DSCP map [2-226](#)
- setting DSCP or IP precedence values [2-304](#)
- traffic classifications [2-38](#)
- trust states [2-616](#)

QoS (continued)

- port trust states [2-252](#)
 - queues, enabling the expedite [2-281](#)
 - statistics
 - in-profile and out-of-profile packets [2-443](#)
 - packets enqueued or dropped [2-443](#)
 - sent and received CoS values [2-443](#)
 - sent and received DSCP values [2-443](#)
 - trusted boundary for IP phones [2-252](#)
- quality of service
- See QoS
- querytime, MVR [2-259](#)
- queue-set command [2-286](#)

R

- radius-server dead-criteria command [2-287](#)
- radius-server host command [2-289](#)
- rapid per-VLAN spanning-tree plus
 - See STP
- rapid PVST+
 - See STP
- rcommand command [2-291](#)
- re-authenticating IEEE 802.1x-enabled ports [2-101](#)
- re-authentication
 - periodic [2-102](#)
 - time between attempts [2-105](#)
- receiver ports, MVR [2-262](#)
- receiving flow-control packets [2-122](#)
- recovery mechanism
 - causes [2-116](#)
 - display [2-44](#), [2-326](#), [2-359](#), [2-363](#)
 - timer interval [2-116](#)
- redundancy for cluster switches [2-66](#)
- relay-major command [2-10](#)
- relay-minor command [2-10](#)
- remote-span command [2-293](#)
- Remote Switched Port Analyzer
 - See RSPAN

- rename (boot loader) command [A-16](#)
- renew ip dhcp snooping database command [2-295](#)
- reset (boot loader) command [A-17](#)
- reset command [2-635](#)
- resource templates, displaying [2-474](#)
- restricted VLAN
 - See dot1x auth-fail vlan
- rmdir (boot loader) command [A-18](#)
- rmon collection stats command [2-297](#)
- root guard, for spanning tree [2-533](#)
- RSPAN
 - configuring [2-254](#)
 - displaying [2-453](#)
 - filter RSPAN traffic [2-254](#)
 - remote-span command [2-293](#)
 - sessions
 - displaying [2-453](#)

S

- sdm prefer command [2-298](#)
- SDM templates
 - displaying [2-474](#)
 - dual IPv4 and IPv6 [2-298](#)
- secondary temperature alarm [2-8](#)
- secure ports, limitations [2-593](#)
- see PTP
- sending flow-control packets [2-122](#)
- service password-recovery command [2-300](#)
- service-policy command [2-302](#)
- set (boot loader) command [A-19](#)
- set command [2-304](#)
- setup command [2-306](#)
- setup express command [2-309](#)
- show access-lists command [2-311](#)
- show alarm description port [2-314](#)
- show alarm description port command [2-314](#)
- show alarm profile command [2-315](#)
- show alarm settings command [2-317](#)

- show archive status command [2-319](#)
- show auto qos command [2-320](#)
- show boot command [2-324](#)
- show cable-diagnostics tdr command [2-326](#)
- show changes command [2-635](#)
- show class-map command [2-329](#)
- show cluster candidates command [2-332](#)
- show cluster command [2-330](#)
- show cluster members command [2-334](#)
- show controllers cpu-interface command [2-336](#)
- show controllers ethernet-controller command [2-338](#)
- show controllers tcam command [2-345](#)
- show controller utilization command [2-347](#)
- show current command [2-635](#)
- show dot1x command [2-349](#)
- show dtp [2-353](#)
- show eap command [2-355](#)
- show env command [2-358](#)
- show errdisable detect command [2-359](#)
- show errdisable flap-values command [2-361](#)
- show errdisable recovery command [2-363](#)
- show etherchannel command [2-365](#)
- show facility-alarm relay command [2-368](#)
- show facility-alarm status [2-368](#)
- show facility-alarm status command [2-369](#)
- show fallback profile command [2-370](#)
- show fcs threshold command [2-372](#)
- show flowcontrol command [2-374](#)
- show interfaces command [2-376](#)
- show interfaces counters command [2-384](#)
- show inventory command [2-386](#)
- show ip dhcp snooping binding command [2-388](#)
- show ip dhcp snooping command [2-387](#)
- show ip dhcp snooping database command [2-390, 2-392](#)
- show ip igmp profile command [2-395](#)
- show ip igmp snooping command [2-396](#)
- show ip igmp snooping groups command [2-399](#)
- show ip igmp snooping mrouter command [2-401](#)
- show ip igmp snooping querier command [2-403](#)
- show ipv6 route updated [2-405](#)
- show lacp command [2-407](#)
- show link state group command [2-414](#)
- show location [2-411](#)
- show mac access-group command [2-416](#)
- show mac address-table address command [2-420](#)
- show mac address-table aging time command [2-422](#)
- show mac address-table command [2-418](#)
- show mac address-table count command [2-424](#)
- show mac address-table dynamic command [2-426](#)
- show mac address-table interface command [2-428](#)
- show mac address-table learning command [2-430](#)
- show mac address-table move update command [2-431](#)
- show mac address-table notification command [2-49, 2-433, B-20](#)
- show mac address-table static command [2-435](#)
- show mac address-table vlan command [2-437](#)
- show mls qos aggregate-policer command [2-440](#)
- show mls qos command [2-439](#)
- show mls qos input-queue command [2-441](#)
- show mls qos interface command [2-443](#)
- show mls qos maps command [2-447](#)
- show mls qos queue-set command [2-450](#)
- show mls qos vlan command [2-452](#)
- show monitor command [2-453](#)
- show mvr command [2-455](#)
- show mvr interface command [2-457](#)
- show mvr members command [2-459](#)
- show pagp command [2-461](#)
- show parser macro command [2-463](#)
- show platform acl command [C-2](#)
- show platform backup interface command [C-3](#)
- show platform etherchannel command [C-4](#)
- show platform forward command [C-5](#)
- show platform igmp snooping command [C-7](#)
- show platform layer4op command [C-9](#)
- show platform mac-address-table command [C-10](#)
- show platform messaging command [C-11](#)
- show platform monitor command [C-12](#)

- show platform mvr table command [C-13](#)
- show platform pm command [C-14](#)
- show platform port-asic command [C-15](#)
- show platform port-security command [C-20](#)
- show platform qos command [C-21](#)
- show platform resource-manager command [C-22](#)
- show platform snmp counters command [C-24](#)
- show platform spanning-tree command [C-25](#)
- show platform stp-instance command [C-26](#)
- show platform tcam command [C-27](#)
- show platform vlan command [C-29](#)
- show policy-map command [2-466](#)
- show port security command [2-468](#)
- show proposed command [2-635](#)
- show ptp command [2-471](#)
- show sdm prefer command [2-474](#)
- show setup express command [2-476](#)
- show spanning-tree command [2-477](#)
- show storm-control command [2-489](#)
- show system mtu command [2-491](#)
- show trust command [2-616](#)
- show udd command [2-492](#)
- show version command [2-495](#)
- show vlan command [2-497](#)
- show vlan command, fields [2-499](#)
- show vmpls command [2-501](#)
- show vtp command [2-504](#)
- shutdown command [2-509](#)
- shutdown vlan command [2-510](#)
- small violation-rate command [2-511](#)
- Smartports macros
 - See macros
- SNMP host, specifying [2-517](#)
- SNMP informs, enabling the sending of [2-513](#)
- snmp-server enable traps command [2-513](#)
- snmp-server host command [2-517](#)
- snmp trap mac-notification command [2-521](#)
- SNMP traps
 - enabling MAC address notification trap [2-521](#)
 - enabling the MAC address notification feature [2-197](#)
 - enabling the sending of [2-513](#)
- SoftPhone
 - See Cisco SoftPhone
- software images
 - deleting [2-71](#)
 - downloading [2-14](#)
 - upgrading [2-14](#)
 - uploading [2-20](#)
- software version, displaying [2-495](#)
- source ports, MVR [2-262](#)
- SPAN
 - configuring [2-254](#)
 - debug messages, display [B-21](#)
 - displaying [2-453](#)
 - filter SPAN traffic [2-254](#)
 - sessions
 - add interfaces to [2-254](#)
 - displaying [2-453](#)
 - start new [2-254](#)
- spanning-tree backbonefast command [2-523](#)
- spanning-tree bpdudfilter command [2-524](#)
- spanning-tree bpduguard command [2-526](#)
- spanning-tree cost command [2-528](#)
- spanning-tree etherchannel command [2-530](#)
- spanning-tree extend system-id command [2-532](#)
- spanning-tree guard command [2-533](#)
- spanning-tree link-type command [2-535](#)
- spanning-tree loopguard default command [2-537](#)
- spanning-tree mode command [2-539](#)
- spanning-tree mst configuration command [2-541](#)
- spanning-tree mst cost command [2-543](#)
- spanning-tree mst forward-time command [2-545](#)
- spanning-tree mst hello-time command [2-546](#)
- spanning-tree mst max-age command [2-547](#)
- spanning-tree mst max-hops command [2-548](#)
- spanning-tree mst port-priority command [2-550](#)

spanning-tree mst pre-standard command [2-552](#)

spanning-tree mst priority command [2-553](#)

spanning-tree mst root command [2-554](#)

spanning-tree portfast (global configuration) command [2-558](#)

spanning-tree portfast (interface configuration) command [2-560](#)

spanning-tree port-priority command [2-556](#)

Spanning Tree Protocol

See STP

spanning-tree transmit hold-count command [2-562](#)

spanning-tree uplinkfast command [2-563](#)

spanning-tree vlan command [2-565](#)

speed command [2-568](#)

srr-queue bandwidth limit command [2-570](#)

srr-queue bandwidth share command [2-574](#)

SSH, configuring version [2-172](#)

static-access ports, configuring [2-579](#)

statistics, Ethernet group [2-297](#)

sticky learning, enabling [2-591](#)

storm-control command [2-576](#)

STP

BackboneFast [2-523](#)

counters, clearing [2-53](#)

debug messages, display

BackboneFast events [B-61](#)

MSTP [B-64](#)

optimized BPDUs handling [B-63](#)

spanning-tree activity [B-59](#)

switch shim [B-66](#)

transmitted and received BPDUs [B-62](#)

UplinkFast [B-68](#)

detection of indirect link failures [2-523](#)

EtherChannel misconfiguration [2-530](#)

extended system ID [2-532](#)

path cost [2-528](#)

protocol modes [2-539](#)

STP (continued)

root port

accelerating choice of new [2-563](#)

loop guard [2-533](#)

preventing from becoming designated [2-533](#)

restricting which can be root [2-533](#)

root guard [2-533](#)

UplinkFast [2-563](#)

root switch

affects of extended system ID [2-532, 2-566](#)

hello-time [2-565](#)

interval between BPDU messages [2-565](#)

interval between hello BPDU messages [2-565](#)

max-age [2-565](#)

port priority for selection of [2-556](#)

primary or secondary [2-565](#)

switch priority [2-565](#)

state changes

blocking to forwarding state [2-560](#)

enabling BPDU filtering [2-524, 2-558](#)

enabling BPDU guard [2-526, 2-558](#)

enabling Port Fast [2-558, 2-560](#)

enabling timer to recover from error state [2-116](#)

forward-delay time [2-565](#)

length of listening and learning states [2-565](#)

shutting down Port Fast-enabled ports [2-558](#)

state information display [2-477](#)

VLAN options [2-553, 2-565](#)

Switched Port Analyzer

See SPAN

switchport access command [2-579](#)

switchport backup interface command [2-581](#)

switchport block command [2-585](#)

switchport host command [2-586](#)

switchport mode command [2-587](#)

switchport nonegotiate command [2-589](#)

switchport port-security aging command [2-596](#)

switchport port-security command [2-591](#)

switchport priority extend command [2-598](#)

switchport protected command [2-600](#)
 switchports, displaying [2-376](#)
 switchport trunk command [2-602](#)
 switchport voice vlan command [2-605](#)
 syslog command [2-10](#)
 system message logging, save message to flash [2-186](#)
 system mtu command [2-607](#)
 system resource templates [2-298](#)

T

tar files, creating, listing, and extracting [2-17](#)
 TDR, running [2-609](#)
 Telnet, using to communicate to cluster switches [2-291](#)
 temperature alarms, setting [2-8](#)
 templates, SDM [2-298](#)
 templates, system resources [2-298](#)
 test cable-diagnostics tdr command [2-609](#)
 test relay [2-610](#)
 test relay command [2-610](#)
 traceroute mac command [2-611](#)
 traceroute mac ip command [2-614](#)
 trunking, VLAN mode [2-587](#)
 trunk mode [2-587](#)
 trunk ports [2-587](#)
 trunks, to non-DTP device [2-588](#)
 trusted boundary for QoS [2-252](#)
 trusted port states for QoS [2-252](#)
 type (boot loader) command [A-22](#)

U

UDLD

aggressive mode [2-618, 2-620](#)
 debug messages, display [B-75](#)
 enable globally [2-618](#)
 enable per interface [2-620](#)
 error recovery timer [2-116](#)
 message timer [2-618](#)
 normal mode [2-618, 2-620](#)
 reset a shutdown interface [2-622](#)
 status [2-492](#)
 uddl command [2-618](#)
 uddl port command [2-620](#)
 uddl reset command [2-622](#)
 unicast storm control [2-576](#)
 UniDirectional Link Detection
 See UDLD
 unknown multicast traffic, preventing [2-585](#)
 unknown unicast traffic, preventing [2-585](#)
 unset (boot loader) command [A-23](#)
 upgrading
 software images
 downloading [2-14](#)
 monitoring status of [2-319](#)
 UplinkFast, for STP [2-563](#)
 user EXEC mode [1-2, 1-3](#)

V

version (boot loader) command [A-25](#)
 vlan (global configuration) command [2-623](#)
 vlan (VLAN configuration) command [2-628](#)
 VLAN configuration
 rules [2-626, 2-630](#)
 saving [2-623, 2-632](#)

VLAN configuration mode

commands

VLAN [2-628](#)VTP [2-646](#)description [1-5](#)entering [2-634](#)summary [1-2](#)vlan database command [2-634](#)VLAN ID range [2-623, 2-628](#)

VLAN Query Protocol

See VQP

VLANs

adding [2-623](#)configuring [2-623, 2-628](#)

debug messages, display

ISL [B-72](#)VLAN IOS file system error tests [B-71](#)VLAN manager activity [B-69](#)VTP [B-73](#)displaying configurations [2-497](#)enabling guest VLAN supplicant [2-78, 2-88, 2-120](#)extended-range [2-623](#)

MAC addresses

displaying [2-437](#)number of [2-424](#)media types [2-625, 2-630](#)normal-range [2-623, 2-628](#)restarting [2-510](#)saving the configuration [2-623](#)shutting down [2-510](#)SNMP traps for VTP [2-516, 2-518](#)suspending [2-510](#)variables [2-628](#)

VLAN Trunking Protocol

See VTP

VMPS

configuring servers [2-640](#)displaying [2-501](#)error recovery timer [2-116](#)reconfirming dynamic VLAN assignments [2-637](#)vmmps reconfirm (global configuration) command [2-638](#)vmmps reconfirm (privileged EXEC) command [2-637](#)vmmps retry command [2-639](#)vmmps server command [2-640](#)

voice VLAN

configuring [2-605](#)setting port priority [2-598](#)

VQP

and dynamic-access ports [2-580](#)clearing client statistics [2-55](#)displaying information [2-501](#)per-server retry count [2-639](#)reconfirmation interval [2-638](#)reconfirming dynamic VLAN assignments [2-637](#)

VTP

changing characteristics [2-642](#)clearing pruning counters [2-56](#)

configuring

domain name [2-642, 2-646](#)file name [2-642](#)mode [2-642, 2-646](#)password [2-642, 2-646](#)counters display fields [2-505](#)displaying information [2-504](#)

enabling

pruning [2-642, 2-646](#)Version 2 [2-642, 2-646](#)mode [2-642, 2-646](#)pruning [2-642, 2-646](#)saving the configuration [2-623, 2-632](#)statistics [2-504](#)status [2-504](#)status display fields [2-507](#)

vtp (global configuration) command [2-642](#)

vtp (VLAN configuration) command [2-646](#)

