

APPENDIX C

Unsupported Commands in Cisco IOS Release 12.2(46)SE1

This appendix lists some of the command-line interface (CLI) commands that appear when you enter the question mark (?) at the IE 3000 switch prompt but are not supported in this release, either because they are not tested or because of switch hardware limitations. This is not a complete list. These unsupported commands are listed by software feature and command mode:

- Access Control Lists, page C-1
- Boot Loader Commands, page C-2
- Debug Commands, page C-2
- IIGMP Snooping Commands, page C-2
- Interface Commands, page C-3
- MAC Address Commands, page C-3
- Miscellaneous, page C-4
- Network Address Translation (NAT) Commands, page C-4
- QoS, page C-5
- SNMP, page C-5
- SNMPv3, page D-16
- Spanning Tree, page C-6
- VLAN, page C-6
- VTP, page C-7

Access Control Lists

Unsupported Privileged EXEC Commands

access-enable [host] [timeout minutes]
access-template [access-list-number | name] [dynamic-name] [source] [destination] [timeout minutes]
clear access-template [access-list-number | name] [dynamic-name] [source] [destination].
show access-lists rate-limit [destination]

show accounting show ip accounting [checkpoint] [output-packets | access violations] show ip cache [prefix-mask] [type number]

Unsupported Global Configuration Commands

access-list rate-limit acl-index {precedence | mask prec-mask}
access-list dynamic extended

Unsupported Route-Map Configuration Commands

match ip address prefix-list prefix-list-name [prefix-list-name...]

Boot Loader Commands

Unsupported Global Configuration Commands

boot buffersize

Debug Commands

Unsupported Privileged EXEC Commands

debug platform cli-redirection main debug platform configuration

IGMP Snooping Commands

Unsupported Global Configuration Commands

ip igmp snooping ten

Interface Commands

Unsupported Privileged EXEC Commands

show interfaces [interface-id | vlan vlan-id] [crb | fair-queue | irb | mac-accounting | precedence | irb | random-detect | rate-limit | shape]

Unsupported Global Configuration Commands

interface tunnel

Unsupported Interface Configuration Commands

transmit-interface type number

MAC Address Commands

Unsupported Privileged EXEC Commands

show mac-address-table

show mac-address-table address

show mac-address-table aging-time

show mac-address-table count

show mac-address-table dynamic

show mac-address-table interface

show mac-address-table multicast

show mac-address-table notification

show mac-address-table static

show mac-address-table vlan

show mac address-table multicast



Use the **show ip igmp snooping groups** privileged EXEC command to display Layer 2 multicast address-table entries for a VLAN.

Unsupported Global Configuration Commands

mac-address-table aging-time mac-address-table notification mac-address-table static

Miscellaneous

Unsupported User EXEC Commands

verify

Unsupported Privileged EXEC Commands

file verify auto show cable-diagnostics prbs test cable-diagnostics prbs

Unsupported Global Configuration Commands

errdisable recovery cause unicast flood 12protocol-tunnel global drop-threshold service compress-config stack-mac persistent timer

Network Address Translation (NAT) Commands

Unsupported Privileged EXEC Commands

show ip nat statistics show ip nat translations

QoS

Unsupported Global Configuration Command

priority-list

Unsupported Interface Configuration Commands

priority-group rate-limit

Unsupported Policy-Map Configuration Command

class class-default where class-default is the class-map-name.

RADIUS

Unsupported Global Configuration Commands

aaa nas port extended
aaa authentication feature default enable
aaa authentication feature default line
aaa nas port extended
radius-server attribute nas-port
radius-server configure
radius-server extended-portnames

SNMP

Unsupported Global Configuration Commands

snmp-server enable informs snmp-server ifindex persist

SNMPv3

Unsupported 3DES Encryption Commands

All

Spanning Tree

Unsupported Global Configuration Command

spanning-tree pathcost method {long | short}

Unsupported Interface Configuration Command

spanning-tree stack-port

VLAN

Unsupported Global Configuration Command

vlan internal allocation policy {ascending | descending}

Unsupported vlan-config Command

private-vlan

Unsupported User EXEC Commands

show running-config vlan show vlan ifindex show vlan private-vlan

VTP

Unsupported Privileged EXEC Commands

vtp {password | pruning | version number}



This command has been replaced by the **vtp** global configuration command.

VTP