



APPENDIX **B**

IE 3000 Switch Debug Commands

This appendix describes the **debug** privileged EXEC commands that have been created or changed for use with the IE 3000switch. These commands are helpful in diagnosing and resolving internetworking problems and should be enabled only under the guidance of Cisco technical support staff.



Caution

Because debugging output is assigned high priority in the CPU process, it can render the system unusable. For this reason, use the **debug** commands only to troubleshoot specific problems or during troubleshooting sessions with Cisco technical support staff. It is best to use the **debug** commands during periods of lower network traffic and fewer users. Debugging during these periods decreases the likelihood that increased **debug** command processing overhead will affect system use.

debug authentication

Use the **debug authentication** privileged EXEC command to enable debugging of the authentication settings on an interface. Use the **no** form of this command to disable debugging.

```
debug authentication {all | errors | events | sync | feature [all] [acct] [auth_fail_vlan]
                    [auth_policy] [autocfg] [critical] [dhcp] [guest_vlan] [mab_pm] [mda] [multi_auth]
                    [switch_pm] [switch_sync] [vlan_assign] [voice] [webauth] [all | errors | events]}
```

```
no debug authentication {all | errors | events | sync | feature [all] [acct] [auth_fail_vlan]
                       [auth_policy] [autocfg] [critical] [dhcp] [guest_vlan] [mab_pm] [mda] [multi_auth]
                       [switch_pm] [switch_sync] [vlan_assign] [voice] [webauth] [all | errors | events]}
```

Syntax Description

acct	(Optional) Display authentication manager accounting information.
all	(Optional) Display all authentication manager debug messages.
auth_fail_vlan	(Optional) Display authentication manager errors for the restricted VLAN.
auth_policy	(Optional) Display authentication policy messages.
autocfg	(Optional) Display autoconfiguration authentication manager debug messages.
critical	(Optional) Display the inaccessible authentication bypass messages. Note The inaccessible authentication bypass feature is also referred to as critical authentication or the authentication, authorization, and accounting (AAA) fail policy.
dhcp	(Optional) Display authentication manager debug messages on DHCP dynamic address-enable interfaces.
errors	(Optional) Display all authentication manager error debug messages.
events	(Optional) Display all authentication manager event debug messages, including registry and miscellaneous events.
feature	(Optional) Display authentication manager feature debug messages
guest_vlan	(Optional) Display guest VLAN authentication manager messages.
mab_pm	(Optional) Display MAC authentication manager bypass authentication debug messages.
mda	(Optional) Display multidomain authentication manager debug messages.
multi_auth	(Optional) Display multi-authentication manager debug authentication messages.
switch_pm	(Optional) Display switch port manager messages.
switch_sync	(Optional) Display synchronization messages between the switch, the authentication server, and the connected devices.
sync	(Optional) Display operational synchronization authentication manager debug messages.
vlan_assign	(Optional) Display the VLAN-assignment debug messages.
voice	(Optional) Display the voice-VLAN debug messages.
webauth	(Optional) Display web authentication manager debug messages.

Defaults Authentication debugging is disabled.

Command Modes Privileged EXEC

Command History	Release	Modification
	12.2(50)SE	This command was introduced.

Usage Guidelines The **undebg authentication** command is the same as the **no debug authentication** command.

Related Commands	Command	Description
	authentication control-direction	Configures the port mode as unidirectional or bidirectional.
	authentication event	Sets the action for specific authentication events.
	authentication fallback	Configures a port to use web authentication as a fallback method for clients that do not support IEEE 802.1x authentication.
	authentication host-mode	Sets the authorization manager mode on a port.
	authentication open	Enables or disables open access on a port.
	authentication order	Sets the order of authentication methods used on a port.
	authentication periodic	Enables or disables reauthentication on a port.
	authentication port-control	Enables manual control of the port authorization state.
	authentication priority	Adds an authentication method to the port-priority list.
	authentication violation	Configures the violation modes that occur when a new device connects to a port or when a new device connects to a port after the maximum number of devices are connected to that port.
	show authentication	Displays information about authentication manager events on the switch.

debug auto qos

Use the **debug auto qos** privileged EXEC command to enable debugging of the automatic quality of service (auto-QoS) feature. Use the **no** form of this command to disable debugging.

debug auto qos

no debug auto qos

Syntax Description This command has no keywords or arguments.

Defaults Auto-QoS debugging is disabled.

Command Modes Privileged EXEC

Command History	Release	Modification
	12.2(44)EX	This command was introduced.

Usage Guidelines To display the QoS configuration that is automatically generated when auto-QoS is enabled, enable debugging *before* you enable auto-QoS. You enable debugging by entering the **debug auto qos** privileged EXEC command.

The **undebug auto qos** command is the same as the **no debug auto qos** command.

Examples This example shows how to display the QoS configuration that is automatically generated when auto-QoS is enabled:

```
Switch# debug auto qos
AutoQoS debugging is on
Switch# configure terminal
Enter configuration commands, one per line. End with CNTL/Z.
Switch(config)# interface gigabitethernet1/1
Switch(config-if)# auto qos voip cisco-phone

21:29:41: mls qos map cos-dscp 0 8 16 26 32 46 48 56
21:29:41: mls qos
21:29:42: no mls qos srr-queue input cos-map
21:29:42: no mls qos srr-queue output cos-map
21:29:42: mls qos srr-queue input cos-map queue 1 threshold 3 0
21:29:42: mls qos srr-queue input cos-map queue 1 threshold 2 1
21:29:42: mls qos srr-queue input cos-map queue 2 threshold 1 2
21:29:42: mls qos srr-queue input cos-map queue 2 threshold 2 4 6 7
21:29:43: mls qos srr-queue input cos-map queue 2 threshold 3 3 5
21:29:43: mls qos srr-queue output cos-map queue 1 threshold 3 5
21:29:43: mls qos srr-queue output cos-map queue 2 threshold 3 3 6 7
21:29:44: mls qos srr-queue output cos-map queue 3 threshold 3 2 4
21:29:44: mls qos srr-queue output cos-map queue 4 threshold 2 1
21:29:44: mls qos srr-queue output cos-map queue 4 threshold 3 0
```

```

21:29:44: no mls qos srr-queue input dscp-map
21:29:44: no mls qos srr-queue output dscp-map
21:29:44: mls qos srr-queue input dscp-map queue 1 threshold 2 9 10 11 12 13 14 15
21:29:45: mls qos srr-queue input dscp-map queue 1 threshold 3 0 1 2 3 4 5 6 7
21:29:45: mls qos srr-queue input dscp-map queue 1 threshold 3 32
21:29:45: mls qos srr-queue input dscp-map queue 2 threshold 1 16 17 18 19 20 21 22 23
21:29:45: mls qos srr-queue input dscp-map queue 2 threshold 2 33 34 35 36 37 38 39 48
21:29:46: mls qos srr-queue input dscp-map queue 2 threshold 2 49 50 51 52 53 54 55 56
21:29:46: mls qos srr-queue input dscp-map queue 2 threshold 2 57 58 59 60 61 62 63
21:29:46: mls qos srr-queue input dscp-map queue 2 threshold 3 24 25 26 27 28 29 30 31
21:29:47: mls qos srr-queue input dscp-map queue 2 threshold 3 40 41 42 43 44 45 46 47
21:29:47: mls qos srr-queue output dscp-map queue 1 threshold 3 40 41 42 43 44 45 46 47
21:29:47: mls qos srr-queue output dscp-map queue 2 threshold 3 24 25 26 27 28 29 30 31
21:29:47: mls qos srr-queue output dscp-map queue 2 threshold 3 48 49 50 51 52 53 54 55
21:29:48: mls qos srr-queue output dscp-map queue 2 threshold 3 56 57 58 59 60 61 62 63
21:29:48: mls qos srr-queue output dscp-map queue 3 threshold 3 16 17 18 19 20 21 22 23
21:29:48: mls qos srr-queue output dscp-map queue 3 threshold 3 32 33 34 35 36 37 38 39
21:29:49: mls qos srr-queue output dscp-map queue 4 threshold 1 8
21:29:49: mls qos srr-queue output dscp-map queue 4 threshold 2 9 10 11 12 13 14 15
21:29:49: mls qos srr-queue output dscp-map queue 4 threshold 3 0 1 2 3 4 5 6 7
21:29:49: no mls qos srr-queue input priority-queue 1
21:29:49: no mls qos srr-queue input priority-queue 2
21:29:50: mls qos srr-queue input bandwidth 90 10
21:29:50: no mls qos srr-queue input buffers
21:29:50: mls qos queue-set output 1 buffers 10 10 26 54
21:29:50: interface GigabitEthernet1/1
21:29:50: mls qos trust device cisco-phone
21:29:50: mls qos trust cos
21:29:50: no queue-set 1
21:29:50: srr-queue bandwidth shape 10 0 0 0
21:29:50: srr-queue bandwidth share 10 10 60 20

```

Related Commands

Command	Description
auto qos voip	Configures auto-QoS for voice over IP (VoIP) within a QoS domain.
show auto qos	Displays the initial configuration that is generated by the automatic auto-QoS feature
show debugging	Displays information about the types of debugging that are enabled.

debug backup

Use the **debug backup** privileged EXEC command to enable debugging of the Flex Links backup interface. Use the **no** form of this command to disable debugging.

debug backup { **all** | **errors** | **events** | **vlan-load-balancing** }

no debug backup { **all** | **errors** | **events** | **vlan-load-balancing** }

Syntax Description

all	Display all backup interface debug messages.
errors	Display backup interface error or exception debug messages.
events	Display backup interface event debug messages.
vlan-load-balancing	Display backup interface VLAN load balancing.

Defaults

Backup interface debugging is disabled.

Command Modes

Privileged EXEC

Command History

Release	Modification
12.2(44)EX	This command was introduced.

Usage Guidelines

The **undebug backup** command is the same as the **no debug backup** command.

Related Commands

Command	Description
show debugging	Displays information about the types of debugging that are enabled.

debug cip

Use the **debug cip** privileged EXEC command to enable debugging of the Common Industrial Protocol (CIP) subsystem. Use the **no** form of this command to disable debugging.

```
debug cip { assembly | connection manager | errors | event | file | io | packet | request response |
security | session | socket }
```

```
no debug cip { assembly | connection manager | errors | event | file | io | packet | request response
| security | session | socket }
```

Syntax Description		
assembly		Display CIP assembly debug messages.
connection manager		Display CIP connection manager debug messages.
errors		Display CIP error debug messages.
event		Display CIP event debug messages.
file		Display CIP file debug messages.
io		Display CIP input/output (I/O) debug messages.
packet		Display CIP packet debug messages.
request response		Display CIP request response debug messages.
security		Display CIP security debug messages.
session		Display CIP session debug messages.
socket		Display CIP socket debug messages.

Defaults CIP debugging is disabled.

Command Modes Privileged EXEC

Command History	Release	Modification
	12.2(44)EX	This command was introduced.

Usage Guidelines The **undebug cip** command is the same as the **no debug cip** command.

Related Commands	Command	Description
	show debugging	Displays information about the types of debugging that are enabled.
	show cip	Displays information about the Common Industrial Protocol (CIP) subsystem.

debug cisp

Use the **debug cisp** global configuration command to enable debugging message exchanges and events on a Client Information Signalling Protocol (CISP)-enabled interface. Use the **no** form of this command to disable debugging.

debug cisp [**all** | **errors** | **events** | **packets** | **sync**]

no debug cisp [**initialization** | **interface-configuration** | **rpc**]

Syntax Description

all	Display all CISP debug messages.
errors	Display CISP debug messages.
events	Display CISP event debug messages.
packets	Display CISP packet debug messages.
sync	Display CISP operational synchronization debug messages.

Defaults

Debugging is disabled.

Command Modes

Privileged EXEC

Command History

Release	Modification
12.2(50)SE	This command was introduced.

Usage Guidelines

The **undebug cisp** command is the same as the **no debug cisp** command.

Related Commands

Command	Description
cisp enable	Enables Client Information Signalling Protocol (CISP)
dot1x credentials (global configuration) <i>profile</i>	Configures a profile on a supplicant switch.
show cisp	Displays CISP information for a specified interface.

debug cluster

Use the **debug cluster** privileged EXEC command to enable debugging of cluster-specific events. Use the **no** form of this command to disable debugging.

```
debug cluster { discovery | events | extended | hsrp | http | ip [packet] | members | nat | neighbors
              | platform | snmp | vqpxy }
```

```
no debug cluster { discovery | events | extended | hsrp | http | ip [packet] | members | nat |
                 neighbors | platform | snmp | vqpxy }
```

Syntax Description	Keyword	Description
	discovery	Display cluster discovery debug messages.
	events	Display cluster event debug messages.
	extended	Display extended discovery debug messages.
	hsrp	Display the Hot Standby Router Protocol (HSRP) debug messages.
	http	Display Hypertext Transfer Protocol (HTTP) debug messages.
	ip [packet]	Display IP or transport packet debug messages.
	members	Display cluster member debug messages.
	nat	Display Network Address Translation (NAT) debug messages.
	neighbors	Display cluster neighbor debug messages.
	platform	Display platform-specific cluster debug messages.
	snmp	Display Simple Network Management Protocol (SNMP) debug messages.
	vqpxy	Display VLAN Query Protocol (VQP) proxy debug messages.

Defaults Debugging is disabled.

Command Modes Privileged EXEC

Command History	Release	Modification
	12.2(44)EX	This command was introduced.

Usage Guidelines This command is available only on the cluster command switch.
The **undebug cluster** command is the same as the **no debug cluster** command.

Related Commands	Command	Description
	show debugging	Displays information about the types of debugging that are enabled.
	show cluster	Displays the cluster status and a summary of the cluster to which the switch belongs.
	show cluster candidates	Displays a list of candidate switches when entered on the command switch.
	show cluster members	Displays information about cluster members when executed on the command switch.

debug dot1x

Use the **debug dot1x** privileged EXEC command to enable debugging of the IEEE 802.1x authentication feature. Use the **no** form of this command to disable debugging.

```
debug dot1x {all | errors | events | feature | packets | registry | state-machine}
```

```
no debug dot1x {all | errors | events | feature | packets | registry | state-machine}
```

Syntax Description

all	Display all IEEE 802.1x authentication debug messages.
errors	Display IEEE 802.1x error debug messages.
events	Display IEEE 802.1x event debug messages.
feature	Display IEEE 802.1x feature debug messages.
packets	Display IEEE 802.1x packet debug messages.
registry	Display IEEE 802.1x registry invocation debug messages.
state-machine	Display state-machine related-events debug messages.



Note

Though visible in the command-line help strings, the **redundancy** keyword is not supported.

Defaults

Debugging is disabled.

Command Modes

Privileged EXEC

Command History

Release	Modification
12.2(44)EX	This command was introduced.

Usage Guidelines

The **undebug dot1x** command is the same as the **no debug dot1x** command.

Related Commands

Command	Description
show debugging	Displays information about the types of debugging that are enabled.
show dot1x	Displays IEEE 802.1x statistics, administrative status, and operational status for the switch or for the specified port.

debug dtp

Use the **debug dtp** privileged EXEC command to enable debugging of the Dynamic Trunking Protocol (DTP) activity. Use the **no** form of this command to disable debugging.

debug dtp { **aggregation** | **all** | **decision** | **events** | **oserrs** | **packets** | **queue** | **states** | **timers** }

no debug dtp { **aggregation** | **all** | **decision** | **events** | **oserrs** | **packets** | **queue** | **states** | **timers** }

Syntax Description

aggregation	Display DTP user-message aggregation debug messages.
all	Display all DTP debug messages.
decision	Display the DTP decision-table debug messages.
events	Display the DTP event debug messages.
oserrs	Display DTP operating system-related error debug messages.
packets	Display DTP packet-processing debug messages.
queue	Display DTP packet-queueing debug messages.
states	Display DTP state-transition debug messages.
timers	Display DTP timer-event debug messages.

Defaults

Debugging is disabled.

Command Modes

Privileged EXEC

Command History

Release	Modification
12.2(44)EX	This command was introduced.

Usage Guidelines

The **undebug dtp** command is the same as the **no debug dtp** command.

Related Commands

Command	Description
show debugging	Displays information about the types of debugging that are enabled.
show dtp	Displays DTP information for the switch or for a specified interface.

debug eap

Use the **debug eap** privileged EXEC command to enable debugging of the Extensible Authentication Protocol (EAP) activity. Use the **no** form of this command to disable debugging.

```
debug dot1x {all | authenticator | errors | events | md5 | packets | peer | sm}
```

```
no debug dot1x {all | authenticator | errors | events | md5 | packets | peer | sm}
```

Syntax Description

all	Display all EAP debug messages.
authenticator	Display authenticator debug messages.
errors	Display EAP error debug messages.
events	Display EAP event debug messages.
md5	Display EAP-MD5 debug messages.
packets	Display EAP packet debug messages.
peer	Display EAP peer debug messages.
sm	Display EAP state-machine related-events debug messages.

Defaults

Debugging is disabled.

Command Modes

Privileged EXEC

Command History

Release	Modification
12.2(44)EX	This command was introduced.

Usage Guidelines

The **undebug dot1x** command is the same as the **no debug dot1x** command.

Related Commands

Command	Description
show debugging	Displays information about the types of debugging that are enabled.
show eap	Displays EAP registration and session information for the switch or for the specified port.

debug etherchannel

Use the **debug etherchannel** privileged EXEC command to enable debugging of the EtherChannel/PAGP shim. This shim is the software module that is the interface between the Port Aggregation Protocol (PAgP) software module and the port manager software module. Use the **no** form of this command to disable debugging.

debug etherchannel [**all** | **detail** | **error** | **event** | **idb**]

no debug etherchannel [**all** | **detail** | **error** | **event** | **idb**]

Syntax Description

all	(Optional) Display all EtherChannel debug messages.
detail	(Optional) Display detailed EtherChannel debug messages.
error	(Optional) Display EtherChannel error debug messages.
event	(Optional) Debug major EtherChannel event messages.
idb	(Optional) Display PAgP interface descriptor block debug messages.



Note

Though visible in the command-line help strings, the **linecard** keyword is not supported.

Defaults

Debugging is disabled.

Command Modes

Privileged EXEC

Command History

Release	Modification
12.2(44)EX	This command was introduced.

Usage Guidelines

If you do not specify a keyword, all debug messages appear.

The **undebug etherchannel** command is the same as the **no debug etherchannel** command.

Related Commands

Command	Description
show debugging	Displays information about the types of debugging that are enabled.
show etherchannel	Displays EtherChannel information for the channel.

debug interface

Use the **debug interface** privileged EXEC command to enable debugging of interface-related activities. Use the **no** form of this command to disable debugging.

```
debug interface { interface-id | null interface-number | port-channel port-channel-number |
  vlan vlan-id }
```

```
no debug interface { interface-id | null interface-number | port-channel port-channel-number |
  vlan vlan-id }
```

Syntax Description		
<i>interface-id</i>		Display debug messages for the specified physical port, identified by type switch number/module number/ port, for example gigabitethernet 0/2 .
null <i>interface-number</i>		Display debug messages for null interfaces. The <i>interface-number</i> is always 0 .
port-channel <i>port-channel-number</i>		Display debug messages for the specified EtherChannel port-channel interface. The <i>port-channel-number</i> range is 1 to .
vlan <i>vlan-id</i>		Display debug messages for the specified VLAN. The <i>vlan-id</i> range is 1 to 4094.

Defaults Debugging is disabled.

Command Modes Privileged EXEC

Command History	Release	Modification
	12.2(44)EX	This command was introduced.

Usage Guidelines If you do not specify a keyword, all debug messages appear. The **undebg interface** command is the same as the **no debug interface** command.

Related Commands	Command	Description
	show debugging	Displays information about the types of debugging that are enabled.
	show etherchannel	Displays EtherChannel information for the channel.

debug ip dhcp snooping

Use the **debug ip dhcp snooping** privileged EXEC command to enable debugging of DHCP snooping. Use the **no** form of this command to disable debugging.

debug ip dhcp snooping {*mac-address* | **agent** | **event** | **packet**}

no debug ip dhcp snooping {*mac-address* | **agent** | **event** | **packet**}

Syntax Description

<i>mac-address</i>	Display debug messages for a DHCP packet with the specified MAC address.
agent	Display debug messages for DHCP snooping agents.
event	Display debug messages for DHCP snooping events.
packet	Display debug messages for DHCP snooping.

Defaults

Debugging is disabled.

Command Modes

Privileged EXEC

Command History

Release	Modification
12.2(44)EX	This command was introduced.

Usage Guidelines

The **undebug ip dhcp snooping** command is the same as the **no debug ip dhcp snooping** command.

Related Commands

Command	Description
show debugging	Displays information about the types of debugging that are enabled.

debug ip verify source packet

Use the **debug ip verify source packet** privileged EXEC command to enable debugging of IP source guard. Use the **no** form of this command to disable debugging.

debug ip verify source packet

no debug ip verify source packet

Syntax Description This command has no arguments or keywords.

Defaults Debugging is disabled.

Command Modes Privileged EXEC

Command History	Release	Modification
	12.2(50)SE	This command was introduced.

Usage Guidelines The **undebg ip verify source packet** command is the same as the **no debug ip verify source packet** command.

Related Commands	Command	Description
	show debugging	Displays information about the types of debugging that are enabled.

debug ip igmp filter

Use the **debug ip igmp filter** privileged EXEC command to enable debugging of Internet Group Management Protocol (IGMP) filter events. Use the **no** form of this command to disable debugging.

debug ip igmp filter

no debug ip igmp filter

Syntax Description This command has no arguments or keywords.

Defaults Debugging is disabled.

Command Modes Privileged EXEC

Command History	Release	Modification
	12.2(44)EX	This command was introduced.

Usage Guidelines The **undebug ip igmp filter** command is the same as the **no debug ip igmp filter** command.

Related Commands	Command	Description
	show debugging	Displays information about the types of debugging that are enabled.

debug ip igmp max-groups

Use the **debug ip igmp max-groups** privileged EXEC command to enable debugging of Internet Group Management Protocol (IGMP) maximum groups events. Use the **no** form of this command to disable debugging.

debug ip igmp max-groups

no debug ip igmp max-groups

Syntax Description This command has no arguments or keywords.

Defaults Debugging is disabled.

Command Modes Privileged EXEC

Release	Modification
12.2(44)EX	This command was introduced.

Usage Guidelines The **undebug ip igmp max-groups** command is the same as the **no debug ip igmp max-groups** command.

Command	Description
show debugging	Displays information about the types of debugging that are enabled.

debug ip igmp snooping

Use the **debug igmp snooping** privileged EXEC command to enable debugging of Internet Group Management Protocol (IGMP) snooping activity. Use the **no** form of this command to disable debugging.

debug ip igmp snooping [group | management | querier | router | timer]

no debug ip igmp snooping [group | management | querier | router | timer]

Syntax Description

group	(Optional) Display IGMP snooping group activity debug messages.
management	(Optional) Display IGMP snooping management activity debug messages.
querier	(Optional) Display IGMP snooping querier debug messages.
router	(Optional) Display IGMP snooping router activity debug messages.
timer	(Optional) Display IGMP snooping timer event debug messages.

Defaults

Debugging is disabled.

Command Modes

Privileged EXEC

Command History

Release	Modification
12.2(44)EX	This command was introduced.

Usage Guidelines

The **undebug ip igmp snooping** command is the same as the **no debug ip igmp snooping** command.

Related Commands

Command	Description
debug platform ip igmp snooping	Displays information about platform-dependent IGMP snooping activity.
show debugging	Displays information about the types of debugging that are enabled.

debug lacp

Use the **debug lacp** privileged EXEC command to enable debugging of Link Aggregation Control Protocol (LACP) activity. Use the **no** form of this command to disable debugging.

debug lacp [**all** | **event** | **fsm** | **misc** | **packet**]

no debug lacp [**all** | **event** | **fsm** | **misc** | **packet**]

Syntax Description		
all	(Optional)	Display all LACP debug messages.
event	(Optional)	Display LACP event debug messages.
fsm	(Optional)	Display LACP finite state-machine debug messages.
misc	(Optional)	Display miscellaneous LACP debug messages.
packet	(Optional)	Display LACP packet debug messages.

Defaults Debugging is disabled.

Command Modes Privileged EXEC

Command History	Release	Modification
	12.2(44)EX	This command was introduced.

Usage Guidelines The **undebug lacp** command is the same as the **no debug lacp** command.

Related Commands	Command	Description
	show debugging	Displays information about the types of debugging that are enabled.
	show lacp	Displays LACP channel-group information.

debug lldp packets

Use the **debug lldp packets** privileged EXEC command to enable debugging of Link Layer Discovery Protocol (LLDP) packets. Use the **no** form of this command to disable debugging.

debug lldp packets

no debug lldp packets

Syntax Description This command has no arguments or keywords.

Defaults Debugging is disabled.

Command Modes Privileged EXEC

Command History	Release	Modification
	12.2(50)SE	This command was introduced.

Usage Guidelines The **undebg lldp packets** command is the same as the **no debug lldp packets** command.

Related Commands	Command	Description
	show debugging	Displays information about the types of debugging that are enabled.

debug mac-notification

Use the **debug mac-notification** privileged EXEC command to enable debugging of MAC notification events. Use the **no** form of this command to disable debugging.

debug mac-notification

no debug mac-notification

Syntax Description This command has no arguments or keywords.

Defaults Debugging is disabled.

Command Modes Privileged EXEC

Command History	Release	Modification
	12.2(44)EX	This command was introduced.

Usage Guidelines The **undebug mac-notification** command is the same as the **no debug mac-notification** command.

Related Commands	Command	Description
	show debugging	Displays information about the types of debugging that are enabled.
	show mac address-table notification	Displays the MAC address notification information for all interfaces or the specified interface.

debug matm

Use the **debug matm** privileged EXEC command to enable debugging of platform-independent MAC address management. Use the **no** form of this command to disable debugging.

debug matm

no debug matm

Syntax Description This command has no arguments or keywords.

Defaults Debugging is disabled.

Command Modes Privileged EXEC

Command History	Release	Modification
	12.2(44)EX	This command was introduced.

Usage Guidelines The **undebug matm** command is the same as the **no debug matm** command.

Related Commands	Command	Description
	debug platform matm	Displays information about platform-dependent MAC address management.
	show debugging	Displays information about the types of debugging that are enabled.

debug matm move update

Use the **debug matm move update** privileged EXEC command to enable debugging of MAC address-table move update message processing.

debug matm move update

no debug matm move update

Syntax Description This command has no arguments or keywords.

Defaults Debugging is disabled.

Command Modes Privileged EXEC

Command History	Release	Modification
	12.2(44)EX	This command was introduced.

Usage Guidelines The **undebg matm move update** command is the same as the **no debug matm move update** command.

Related Commands	Command	Description
	mac address-table move update {receive transmit}	Configures MAC address-table move update feature on the switch.
	show debugging	Displays information about the types of debugging that are enabled.
	show mac address-table move update	Displays the MAC address-table move update information on the switch.

debug monitor

Use the **debug monitor** privileged EXEC command to enable debugging of the Switched Port Analyzer (SPAN) feature. Use the **no** form of this command to disable debugging.

debug monitor { **all** | **errors** | **idb-update** | **info** | **list** | **notifications** | **platform** | **requests** | **snmp** }

no debug monitor { **all** | **errors** | **idb-update** | **info** | **list** | **notifications** | **platform** | **requests** | **snmp** }

Syntax Description

all	Display all SPAN debug messages.
errors	Display detailed SPAN error debug messages.
idb-update	Display SPAN interface description block (IDB) update-trace debug messages.
info	Display SPAN informational-tracing debug messages.
list	Display SPAN port and VLAN-list tracing debug messages.
notifications	Display SPAN notification debug messages.
platform	Display SPAN platform-tracing debug messages.
requests	Display SPAN request debug messages.
snmp	Display SPAN and Simple Network Management Protocol (SNMP) tracing debug messages.

Defaults

Debugging is disabled.

Command Modes

Privileged EXEC

Command History

Release	Modification
12.2(44)EX	This command was introduced.

Usage Guidelines

The **undebug monitor** command is the same as the **no debug monitor** command.

Related Commands	Command	Description
	show debugging	Displays information about the types of debugging that are enabled.
	show monitor	Displays information about all SPAN and remote SPAN (RSPAN) sessions on the switch.

debug mvrdbg

Use the **debug mvrdbg** privileged EXEC command to enable debugging of Multicast VLAN Registration (MVR). Use the **no** form of this command to disable debugging.

```
debug mvrdbg {all | events | igmpsn | management | ports}
```

```
no debug mvrdbg {all | events | igmpsn | management | ports}
```

Syntax Description

all	Display all MVR activity debug messages.
events	Display MVR event-handling debug messages.
igmpsn	Display MVR Internet Group Management Protocol (IGMP) snooping-activity debug messages.
management	Display MVR management-activity debug messages.
ports	Display MVR port debug messages.

Defaults

Debugging is disabled.

Command Modes

Privileged EXEC

Command History

Release	Modification
12.2(44)EX	This command was introduced.

Usage Guidelines

The **undebug mvrdbg** command is the same as the **no debug mvrdbg** command.

Related Commands

Command	Description
show debugging	Displays information about the types of debugging that are enabled.
show mvr	Displays the current MVR configuration.

debug nmsp

Use the **debug nmsp** privileged EXEC command to enable debugging of the Network Mobility Services Protocol (NMSP) on the switch. This command is available only when your switch is running the cryptographic (encrypted) software image. Use the **no** form of this command to disable debugging.

```
debug nmsp {all | connection | error | event | packet | rx | tx}
```

```
no debug nmsp
```

Syntax Description This command has no arguments or keywords.

Defaults Debugging is disabled.

Command Modes Privileged EXEC

Command History	Release	Modification
	12.2(50)SE	This command was introduced.

Usage Guidelines The **undebg nmsp** command is the same as the **no debug nmsp** command.

Related Commands	Command	Description
	show debugging	Displays information about the types of debugging that are enabled.
	show nmsp	Displays the NMSP information.

debug nvram

Use the **debug nvram** privileged EXEC command to enable debugging of NVRAM activity. Use the **no** form of this command to disable debugging.

debug nvram

no debug nvram

Syntax Description This command has no arguments or keywords.

Defaults Debugging is disabled.

Command Modes Privileged EXEC

Command History	Release	Modification
	12.2(44)EX	This command was introduced.

Usage Guidelines The **undebug nvram** command is the same as the **no debug nvram** command.

Related Commands	Command	Description
	show debugging	Displays information about the types of debugging that are enabled.

debug pagp

Use the **debug pagp** privileged EXEC command to enable debugging of Port Aggregation Protocol (PAgP) activity. Use the **no** form of this command to disable debugging.

debug pagp [**all** | **dual-active** | **event** | **fsm** | **misc** | **packet**]

no debug pagp [**all** | **dual-active** | **event** | **fsm** | **misc** | **packet**]

Syntax Description

all	(Optional) Display all PAgP debug messages.
dual-active	(Optional) Display dual-active detection messages.
event	(Optional) Display PAgP event debug messages.
fsm	(Optional) Display PAgP finite state-machine debug messages.
misc	(Optional) Display miscellaneous PAgP debug messages.
packet	(Optional) Display PAgP packet debug messages.

Defaults

Debugging is disabled.

Command Modes

Privileged EXEC

Command History

Release	Modification
12.2(44)EX	This command was introduced.

Usage Guidelines

The **undebug pagp** command is the same as the **no debug pagp** command.

Related Commands

Command	Description
show debugging	Displays information about the types of debugging that are enabled.
show pagp	Displays PAgP channel-group information.

debug platform acl

Use the **debug platform acl** privileged EXEC command to enable debugging of the access control list (ACL) manager. Use the **no** form of this command to disable debugging.

```
debug platform acl {all | exit | label | main | racl | vacl | vmap | warn}
```

```
no debug platform acl {all | exit | label | main | racl | vacl | vmap | warn}
```

Syntax Description

all	Display all ACL manager debug messages.
exit	Display ACL exit-related debug messages.
label	Display ACL label-related debug messages.
main	Display the main or important ACL debug messages.
racl	Display router ACL related debug messages.
vacl	Display VLAN ACL-related debug messages.
vmap	Display ACL VLAN-map-related debug messages.
warn	Display ACL warning-related debug messages.



Note

Though visible in the command-line help strings, the **stack** keyword is not supported.

```
Switch# debug platform acl ?
  all          ACL Manager All
  exit         ACL Exit related events
  expand       VMR L4Op allocation/expansion related events
  fspan       ACL Fspan related events
  ipe         ACL IPE related events
  ipv6        ACL IPv6 related
  label       ACL Label related events
  limitations  ACL Limitations related events
  main        ACL Main related events
  odm         ODM related events
  port-acl    Port-ACL related events
  racl        ACL Racl related events
  stack       ACL Stack related events
  urpf        ACL URPF related events
  vacl        ACL Vacl related events
  vmap        ACL Vmap related events
  warn        ACL Warn related events
```

```
Switch#
```

Defaults

Debugging is disabled.

Command Modes

Privileged EXEC

Command History	Release	Modification
	12.2(44)EX	This command was introduced.
	12.2(52)SE	The racl , vacl , and vmap keywords were added for switches running the IP services image.

Usage Guidelines The **undebg platform acl** command is the same as the **no debug platform acl** command.

Related Commands	Command	Description
	show debugging	Displays information about the types of debugging that are enabled.

debug platform backup interface

Use the **debug platform backup interface** privileged EXEC command to enable debugging of the Flex Links platform backup interface. Use the **no** form of this command to disable debugging.

debug platform backup interface

no debug platform backup interface

Syntax Description This command has no arguments or keywords.

Defaults Platform backup interface debugging is disabled.

Command Modes Privileged EXEC

Command History	Release	Modification
	12.2(44)EX	This command was introduced.

Usage Guidelines The **undebg platform backup interface** command is the same as the **no debug platform backup interface** command.

Related Commands	Command	Description
	show debugging	Displays information about the types of debugging that are enabled.

debug platform cisp

Use the **debug platform cisp** global configuration command to enable platform-level debugging of a switch that has one or more Client Information Signalling Protocol (CISP)-enabled interfaces. Use the **no** form of this command to disable debugging.

debug platform cisp [**initialization** | **interface-configuration** | **rpc**]

no debug platform cisp [**initialization** | **interface-configuration** | **rpc**]

Syntax Description		
	initialization	Enable debugging of the CISP initialization sequence.
	interface-configuration	Enable debugging of the CISP configuration.
	rpc	Enable debugging of the CISP RPC requests.

Defaults Debugging is disabled.

Command Modes Privileged EXEC

Command History	Release	Modification
	12.2(50)SE	This command was introduced.

Usage Guidelines The **undebg platform cisp** command is the same as the **no debug platform cisp** command.

Related Commands	Command	Description
	cisp enable	Enables Client Information Signalling Protocol (CISP)
	dot1x credentials (global configuration)profile	Configures a profile on a supplicant switch.
	show cisp	Displays CISP information for a specified interface.

debug platform cpu-queues

Use the **debug platform cpu-queues** privileged EXEC command to enable debugging of platform central processing unit (CPU) receive queues. Use the **no** form of this command to disable debugging.

```
debug platform cpu-queues {broadcast-q | cbt-to-spt-q | cpuhub-q | host-q | icmp-q |
  igmp-snooping-q | layer2-protocol-q | logging-q | remote-console-q | routing-protocol-q |
  rpffail-q | software-fwd-q | stp-q}
```

```
no debug platform cpu-queues {broadcast-q | cbt-to-spt-q | cpuhub-q | host-q | icmp-q |
  igmp-snooping-q | layer2-protocol-q | logging-q | remote-console-q | routing-protocol-q |
  rpffail-q | software-fwd-q | stp-q}
```

Syntax Description		
broadcast-q	Display debug messages about packets received by the broadcast queue.	
cbt-to-spt-q	Display debug messages about packets received by the core-based tree to shortest-path tree (cbt-to-spt) queue.	
cpuhub-q	Display debug messages about packets received by the CPU heartbeat queue.	
host-q	Display debug messages about packets received by the host queue.	
icmp-q	Display debug messages about packets received by the Internet Control Message Protocol (ICMP) queue.	
igmp-snooping-q	Display debug messages about packets received by the Internet Group Management Protocol (IGMP)-snooping queue.	
layer2-protocol-q	Display debug messages about packets received by the Layer 2 protocol queue.	
logging-q	Display debug messages about packets received by the logging queue.	
remote-console-q	Display debug messages about packets received by the remote console queue.	
routing-protocol-q	Display debug messages about packets received by the routing protocol queue.	
rpffail-q	Display debug messages about packets received by the reverse path forwarding (RFP) failure queue.	
software-fwd-q	Debug packets received by the software forwarding queue.	
stp-q	Debug packets received by the Spanning Tree Protocol (STP) queue.	

Defaults Debugging is disabled.

Command Modes Privileged EXEC

Command History	Release	Modification
	12.2(44)EX	This command was introduced.
	12.2(52)SE	The routing-protocol-Q and rpffail-q keywords were added for switches running the IP services image.

Usage Guidelines

The **undebg platform cpu-queues** command is the same as the **no debug platform cpu-queues** command.

Related Commands

Command	Description
show debugging	Displays information about the types of debugging that are enabled.

debug platform dot1x

Use the **debug platform dot1x** privileged EXEC command to enable debugging of IEEE 802.1x events. Use the **no** form of this command to disable debugging.

debug platform dot1x { **initialization** | **interface-configuration** | **rpc** }

no debug platform dot1x { **initialization** | **interface-configuration** | **rpc** }

Syntax Description		
	initialization	Display IEEE 802.1x-authentication initialization sequence debug messages.
	interface-configuration	Display IEEE 802.1x interface configuration-related debug messages.
	rpc	Display IEEE 802.1x remote procedure call (RPC) request debug messages.

Defaults Debugging is disabled.

Command Modes Privileged EXEC

Command History	Release	Modification
	12.2(44)EX	This command was introduced.

Usage Guidelines The **undebug platform dot1x** command is the same as the **no debug platform dot1x** command.

Related Commands	Command	Description
	show debugging	Displays information about the types of debugging that are enabled.

debug platform etherchannel

Use the **debug platform etherchannel** privileged EXEC command to enable debugging of platform-dependent EtherChannel events. Use the **no** form of this command to disable debugging.

```
debug platform etherchannel {init | link-up | rpc | warnings}
```

```
no debug platform etherchannel {init | link-up | rpc | warnings}
```

Syntax Description

init	Display EtherChannel module initialization debug messages.
link-up	Display EtherChannel link-up and link-down related debug messages.
rpc	Display EtherChannel remote procedure call (RPC) debug messages.
warnings	Display EtherChannel warning debug messages.

Defaults

Debugging is disabled.

Command Modes

Privileged EXEC

Command History

Release	Modification
12.2(44)EX	This command was introduced.

Usage Guidelines

The **undebg platform etherchannel** command is the same as the **no debug platform etherchannel** command.

Related Commands

Command	Description
show debugging	Displays information about the types of debugging that are enabled.

debug platform fallback-bridging

Use the **debug platform fallback-bridging** privileged EXEC command to enable debugging of the platform-dependent fallback bridging manager. Use the **no** form of this command to disable debugging.

```
debug platform fallback-bridging [error | retry | rpc {events | messages}]
```

```
no debug platform fallback-bridging [error | retry | rpc {events | messages}]
```



Note

This command is available only if your switch is running the IP services image.

Syntax Description

error	(Optional) Display fallback bridging manager error condition messages.
retry	(Optional) Display fallback bridging manager retry messages.
rpc {events messages}	(Optional) Display fallback bridging debugging information. The keywords have these meanings: <ul style="list-style-type: none"> events—Display remote procedure call (RPC) events. messages—Display RPC messages.

Defaults

Debugging is disabled.

Command Modes

Privileged EXEC

Command History

Release	Modification
12.2(52)SE	This command was introduced.

Usage Guidelines

If you do not specify a keyword, all fallback bridging manager debug messages appear.

The **undebug platform fallback-bridging** command is the same as the **no debug platform fallback-bridging** command.

debug platform forw-tcam

Use the **debug platform forw-tcam** privileged EXEC command to enable debugging of the forwarding ternary content addressable memory (TCAM) manager. Use the **no** form of this command to disable debugging.

debug platform forw-tcam [**adjustment** | **allocate** | **audit** | **error** | **move** | **read** | **write**]

no debug platform forw-tcam [**adjustment** | **allocate** | **audit** | **error** | **move** | **read** | **write**]

Syntax Description

adjustment	(Optional) Display TCAM manager adjustment debug messages.
allocate	(Optional) Display TCAM manager allocation debug messages.
audit	(Optional) Display TCAM manager audit messages.
error	(Optional) Display TCAM manager error messages.
move	(Optional) Display TCAM manager move messages.
read	(Optional) Display TCAM manager read messages.
write	(Optional) Display TCAM manager write messages.

Defaults

Debugging is disabled.

Command Modes

Privileged EXEC

Command History

Release	Modification
12.2(44)EX	This command was introduced.

Usage Guidelines

If you do not specify a keyword, all forwarding TCAM manager debug messages appear.

The **undebug platform forw-tcam** command is the same as the **no debug platform forw-tcam** command.

Related Commands

Command	Description
show debugging	Displays information about the types of debugging that are enabled.

debug platform ip arp inspection

Use the **debug platform ip arp inspection** privileged EXEC command to debug dynamic Address Resolution Protocol (ARP) inspection events. Use the **no** form of this command to disable debugging.

debug platform ip arp inspection {all | error | event | packet | rpc}

no debug platform ip arp inspection {all | error | event | packet | rpc}

Syntax Description

all	Display all dynamic ARP inspection debug messages.
error	Display dynamic ARP inspection error debug messages.
event	Display dynamic ARP inspection event debug messages.
packet	Display dynamic ARP inspection packet-related debug messages.
rpc	Display dynamic ARP inspection remote procedure call (RPC) request debug messages.

Defaults

Debugging is disabled.

Command Modes

Privileged EXEC

Command History

Release	Modification
12.2(50)SE	This command was introduced.

Usage Guidelines

The **undebug platform ip arp inspection** command is the same as the **no debug platform ip arp inspection** command.

Related Commands

Command	Description
show inventory	Displays the dynamic ARP inspection configuration and operating state.
show debugging	Displays information about the types of debugging that are enabled.

debug platform ip dhcp

Use the **debug platform ip dhcp** privileged EXEC command to debug DHCP events. Use the **no** form of this command to disable debugging.

debug platform ip dhcp [**all** | **error** | **event** | **packet** | **rpc**]

no debug platform ip dhcp [**all** | **error** | **event** | **packet** | **rpc**]

Syntax Description	
all	(Optional) Display all DHCP debug messages.
error	(Optional) Display DHCP error debug messages.
event	(Optional) Display DHCP event debug messages.
packet	(Optional) Display DHCP packet-related debug messages.
rpc	(Optional) Display DHCP remote procedure call (RPC) request debug messages.

Defaults Debugging is disabled.

Command Modes Privileged EXEC

Command History	Release	Modification
	12.2(44)EX	This command was introduced.

Usage Guidelines The **undebug platform ip dhcp** command is the same as the **no debug platform ip dhcp** command.

Related Commands	Command	Description
	show ip dhcp snooping	Displays the DHCP snooping configuration.
	show ip dhcp snooping binding	Displays the DHCP snooping binding information.
	show debugging	Displays information about the types of debugging that are enabled.

debug platform ip igmp snooping

Use the **debug platform ip igmp snooping** privileged EXEC command to enable debugging of platform-dependent Internet Group Management Protocol (IGMP) snooping. Use the **no** form of this command to disable debugging.

```
debug platform ip igmp snooping {all | di | error | event | group | mgmt | pak | retry | rpc | warn}
```

```
debug platform ip igmp snooping pak {ip-address | error | ipopt | leave | query | report | rx | svi | tx}
```

```
debug platform ip igmp snooping rpc [cfg | l3mm | misc | vlan]
```

```
no debug platform ip igmp snooping {all | di | error | event | group | mgmt | pak | retry | rpc | warn}
```

Syntax Description		
all		Display all IGMP snooping debug messages.
di		Display IGMP snooping destination index (di) coordination remote procedure call (RPC) debug messages.
error		Display IGMP snooping error messages.
event		Display IGMP snooping event debug messages.
group		Display IGMP snooping group debug messages.
mgmt		Display IGMP snooping management debug messages.
pak { <i>ip-address</i> error ipopt leave query report rx svi tx }		Display IGMP snooping packet event debug messages. The keywords have these meanings: <ul style="list-style-type: none"> • <i>ip-address</i>—IP address of the IGMP group. • error—Display IGMP snooping packet error debug messages. • ipopt—Display IGMP snooping IP bridging options debug messages. • leave—Display IGMP snooping leave debug messages. • query—Display IGMP snooping query debug messages. • report—Display IGMP snooping report debug messages. • rx—Display IGMP snooping received packet debug messages. • svi—Display IGMP snooping switched virtual interface (SVI) packet debug messages. • tx—Display IGMP snooping sent packet debug messages.
retry		Display IGMP snooping retry debug messages.

rpc [cfg l3mm misc vlan]	<p>Display IGMP snooping remote procedure call (RPC) event debug messages. The keywords have these meanings:</p> <ul style="list-style-type: none"> • cfg—(Optional) Display IGMP snooping RPC debug messages. • l3mm—(Optional) IGMP snooping Layer 3 multicast router group RPC debug messages. • misc—(Optional) IGMP snooping miscellaneous RPC debug messages. • vlan—(Optional) IGMP snooping VLAN assert RPC debug messages.
warn	Display IGMP snooping warning messages.

Defaults

Debugging is disabled.

Command Modes

Privileged EXEC

Command History

Release	Modification
12.2(44)EX	This command was introduced.
12.2(52)SE	The rpc l3mm keyword was added on switches running the IP services image.

Usage Guidelines

The **undebg platform ip igmp snooping** command is the same as the **no debug platform ip igmp snooping** command.

Related Commands

Command	Description
debug ip igmp snooping	Displays information about platform-independent IGMP snooping activity.
show debugging	Displays information about the types of debugging that are enabled.

debug platform ip multicast

Use the **debug platform ip multicast** privileged EXEC command to enable debugging of IP multicast routing. Use the **no** form of this command to disable debugging.

```
debug platform ip multicast {all | mdb | mdfs-rp-retry | midb | mroute-rp | resources | retry |
rpf-throttle | snoop-events | software-forward | swidb-events | vlan-locks }
```

```
no debug platform ip multicast {all | mdb | mdfs-rp-retry | midb | mroute-rp | resources | retry
| rpf-throttle | snoop-events | software-forward | swidb-events | vlan-locks }
```



Note

This command is available only if your switch is running the IP services image.

Syntax Description

all	Display all platform IP-multicast event debug messages. Note Using this command can degrade the performance of the switch.
mdb	Display IP-multicast debug messages for multicast distributed fast switching (MDFS) multicast descriptor block (mdb) events.
mdfs-rp-retry	Display IP-multicast MDFS rendezvous point (RP) retry event debug messages.
midb	Display IP-multicast MDFS multicast interface descriptor block (MIDB) debug messages.
mroute-rp	Display IP-multicast RP event debug messages.
resources	Display IP-multicast hardware resource debug messages.
retry	Display IP-multicast retry processing event debug messages.
rpf-throttle	Display IP-multicast reverse path forwarding (RPF) throttle event debug messages.
snoop-events	Display IP-multicast IGMP snooping event debug messages.
software-forward	Display IP-multicast software forwarding event debug messages.
swidb-events	Display IP-multicast MDFS software interface descriptor block (swidb) or global event debug messages.
vlan-locks	Display IP-multicast VLAN lock and unlock event debug messages.

Defaults

Debugging is disabled.

Command Modes

Privileged EXEC

Command History

Release	Modification
12.2.(52)SE	This command was introduced.

Usage Guidelines

The **undebg platform ip multicast** command is the same as the **no debug platform ip multicast** command.

debug platform ip source-guard

Use the **debug platform ip source-guard** privileged EXEC command to debug IP source guard events. Use the **no** form of this command to disable debugging.

```
debug platform ip source-guard {all | error | event}
```

```
no debug platform ip source-guard {all | error | event }
```

Syntax Description		
	all	Display all IP source-guard platform debug messages.
	error	Display IP source-guard platform error debug messages.
	event	Display IP source-guard platform event debug messages.

Defaults Debugging is disabled.

Command Modes Privileged EXEC

Command History	Release	Modification
	12.2(50)SE	This command was introduced.

Usage Guidelines The **undebug platform ip source-guard** command is the same as the **no debug platform ip source-guard** command.

Related Commands	Command	Description
	show ip verify source	Displays the IP source guard configuration.
	show debugging	Displays information about the types of debugging that are enabled.

debug platform ip unicast

Use the **debug platform ip unicast** privileged EXEC command to enable debugging of platform-dependent IP unicast routing. Use the **no** form of this command to disable debugging.

```
debug platform ip unicast {adjacency | all | arp | dhcp | errors | events | interface | mpath |
registries | retry | route | rpc | standby | statistics}
```

```
no debug platform ip unicast {adjacency | all | arp | dhcp | errors | events | interface | mpath |
registries | retry | route | rpc | standby | statistics}
```



Note

This command is available only if your switch is running the IP services image.

Syntax Description

adjacency	Display IP unicast routing adjacency programming event debug messages.
all	Display all platform IP unicast routing debug messages. Note Using this command can degrade the performance of the switch.
arp	Display IP unicast routing Address Resolution Protocol (ARP) and ARP throttling debug messages.
dhcp	Display IP unicast routing DHCP dynamic address-related event debug messages.
errors	Display all IP unicast routing error debug messages, including resource allocation failures.
events	Display all IP unicast routing event debug messages, including registry and miscellaneous events.
interface	Display IP unicast routing interface event debug messages.
mpath	Display IP unicast routing multi-path adjacency programming event debug messages (present when performing equal or unequal cost routing).
registries	Display IP unicast routing forwarding information database (FIB), adjacency add, update, and delete registry event debug messages.
retry	Display IP unicast routing reprogram FIBs with ternary content addressable memory (TCAM) allocation failure debug messages.
route	Display IP unicast routing FIB TCAM programming event debug messages.
rpc	Display IP unicast routing Layer 3 unicast remote procedure call (RPC) interaction debug messages.
standby	Display IP unicast routing standby event debug messages, helpful in troubleshooting Hot Standby Routing Protocol (HSRP) issues.
statistics	Display IP unicast routing statistics gathering-related event debug messages.

Defaults

Debugging is disabled.

Command Modes

Privileged EXEC

debug platform ip unicast

Command History	Release	Modification
	12.2(52)SE	This command was introduced.

Usage Guidelines The **undebug platform ip unicast** command is the same as the **no debug platform ip unicast** command. **debug platform ip wccp** privileged EXEC command to enable debugging of Web Cache Communication Protocol (WCCP). Use the **no** form of this command to disable debugging.

```
debug platform ip wccp {acl | event | odm | trace}
```

```
no debug platform ip wccp {acl | event | odm | trace}
```



Note

This command is available only if your switch is running the IP services image.

Syntax Description	Parameter	Description
	acl	Display WCCP access control lists (ACLs).
	event	Display WCCP event debug messages.
	odm	Display WCCP OD merge VMRs.
	trace	Trace WCCP execution.

Defaults Debugging is disabled.

Command Modes Privileged EXEC

Command History	Release	Modification
	12.2(52)SE	This command was introduced.

Usage Guidelines The **undebug platform ip wccp** command is the same as the **no debug platform ip wccp** command.

debug platform led

Use the **debug platform led** privileged EXEC command to enable debugging of light-emitting diode (LED) actions. Use the **no** form of this command to disable debugging.

```
debug platform led {generic | signal}
```

```
no debug platform led {generic | signal}
```

Syntax Description

generic	Display LED generic action debug messages.
signal	Display LED signal bit map debug messages.



Note

Though visible in the command-line help strings, the **stack** keyword is not supported.

Defaults

Debugging is disabled.

Command Modes

Privileged EXEC

Command History

Release	Modification
12.2(44)EX	This command was introduced.

Usage Guidelines

The **undebug platform led** command is the same as the **no debug platform led** command.

Related Commands

Command	Description
show debugging	Displays information about the types of debugging that are enabled.

debug platform matm

Use the **debug platform matm** privileged EXEC command to enable debugging of platform-dependent MAC address management. Use the **no** form of this command to disable debugging.

```
debug platform matm { aging | all | ec-aging | errors | learning | rpc | secure-address | warnings }
```

```
no debug platform matm { aging | all | ec-aging | errors | learning | rpc | secure-address | warnings }
```

Syntax Description

aging	Display MAC address aging debug messages.
all	Display all platform MAC address management event debug messages.
ec-aging	Display EtherChannel address aging-related debug messages.
errors	Display MAC address management error messages.
learning	Display MAC address management address-learning debug messages.
rpc	Display MAC address management remote procedure call (RPC) related debug messages.
secure-address	Display MAC address management secure address learning debug messages.
warning	Display MAC address management warning messages.

Defaults

Debugging is disabled.

Command Modes

Privileged EXEC

Command History

Release	Modification
12.2(44)EX	This command was introduced.

Usage Guidelines

The **undebug platform matm** command is the same as the **no debug platform matm** command.

Related Commands

Command	Description
debug matm	Displays information about platform-independent MAC address management.
show debugging	Displays information about the types of debugging that are enabled.

debug platform messaging application

Use the **debug platform messaging application** privileged EXEC command to enable debugging of application messaging activity. Use the **no** form of this command to disable debugging.

```
debug platform messaging application {all | badpak | cleanup | events | memerr | messages |
usererr }
```

```
no debug platform messaging application {all | badpak | cleanup | events | memerr | messages
| usererr }
```

Syntax Description

all	Display all application-messaging debug messages.
badpak	Display bad-packet debug messages.
cleanup	Display clean-up debug messages.
events	Display event debug messages.
memerr	Display memory-error debug messages.
messages	Display application-messaging debug messages.
usererr	Display user-error debug messages.



Note

Though visible in the command-line help strings, the **stackchg** keyword is not supported.

Defaults

Debugging is disabled.

Command Modes

Privileged EXEC

Command History

Release	Modification
12.2(44)EX	This command was introduced.

Usage Guidelines

The **undebug platform messaging application** command is the same as the **no debug platform messaging application** command.

Related Commands

Command	Description
show debugging	Displays information about the types of debugging that are enabled.

debug platform phy

Use the **debug platform phy** privileged EXEC command to enable debugging of PHY driver information. Use the **no** form of this command to disable debugging.

```
debug platform phy { automdix | cablediag | dual-purpose | flcd { configure | ipc | iter | trace } |
  flowcontrol | forced | init-seq | link-status | read | sfp | show-controller | speed | write |
  xenpak }
```

```
no debug platform phy { automdix | cablediag | dual-purpose | flcd { configure | ipc | iter | trace } |
  flowcontrol | forced | init-seq | link-status | read | sfp | show-controller | speed | write |
  xenpak }
```

Syntax Description

automdix	Display PHY automatic medium-dependent interface crossover (auto-MDIX) debug messages.
cablediag	Display PHY cable-diagnostic debug messages.
dual-purpose	Display PHY dual-purpose event debug messages.
fldc { configure ipc iter trace }	Display PHY FLCD debug messages. The keywords have these meanings: <ul style="list-style-type: none"> configure—Display PHY configure debug messages. ipc—Display Interprocess Communication Protocol (IPC) debug messages. iter—Display iter debug messages. trace—Display trace debug messages.
flowcontrol	Display PHY flowcontrol debug messages.
forced	Display PHY forced-mode debug messages.
init-seq	Display PHY initialization-sequence debug messages.
link-status	Display PHY link-status debug messages.
read	Display PHY-read debug messages.
sfp	Display PHY small form-factor pluggable (SFP) modules debug messages.
show-controller	Display PHY show-controller debug messages.
speed	Display PHY speed-change debug messages.
write	Display PHY-write debug messages.
xenpak	Display PHY XENPAK debug messages

Defaults

Debugging is disabled.

Command Modes

Privileged EXEC

Command History

Release	Modification
12.2(44)EX	This command was introduced.

Usage Guidelines The **undebg platform phy** command is the same as the **no debug platform phy** command.

Related Commands	Command	Description
	show debugging	Displays information about the types of debugging that are enabled.

debug platform pm

Use the **debug platform pm** privileged EXEC command to enable debugging of the platform-dependent port manager software module. Use the **no** form of this command to disable debugging.

```
debug platform pm {all | counters | errdisable | etherchnl | exceptions | hpm-events | idb-events
| if-numbers | ios-events | link-status | platform | pm-events | pm-span | pm-vectors [detail]
| rpc [general | oper-info | state | vectors | vp-events] | soutput-vectors | sync | vlans}
```

```
no debug platform pm {all | counters | errdisable | etherchnl | exceptions | hpm-events |
idb-events | if-numbers | ios-events | link-status | platform | pm-events | pm-span |
pm-vectors [detail] | rpc [general | oper-info | state | vectors | vp-events] | soutput-vectors |
sync | vlans}
```

Syntax Description

all	Display all port-manager debug messages.
counters	Display counters for remote procedure call (RPC) debug messages.
errdisable	Display error-disabled related-events debug messages.
etherchnl	Display EtherChannel related-events debug messages.
exceptions	Display system exception debug messages.
hpm-events	Display platform port-manager event debug messages.
idb-events	Display interface descriptor block (IDB) related-events debug messages.
if-numbers	Display interface-number translation-event debug messages.
ios-events	Display Cisco IOS event debug messages.
link-status	Display interface link-detection event debug messages.
platform	Display port-manager function-event debug messages.
pm-events	Display port manager event debug messages.
pm-span	Display port manager Switched Port Analyzer (SPAN) event debug messages.
pm-vectors [detail]	Display port-manager vector-related-event debug messages. The keyword has this meaning: <ul style="list-style-type: none"> detail—Display vector-function details.
rpc [general oper-info state vectors vp-events]	Display RPC related-event debug messages. The keywords have these meanings: <ul style="list-style-type: none"> general—(Optional) Display RPC general events. oper-info—(Optional) Display operational- and informational-related RPC messages. state—(Optional) Display administrative- and operational-related RPC messages. vectors—(Optional) Display vector-related RPC messages. vp-events—(Optional) Display virtual ports related-events RP messages.
soutput-vectors	Display IDB output vector event debug messages.
sync	Display operational synchronization and VLAN line-state event debug messages.
vlans	Display VLAN creation and deletion event debug messages.

**Note**

Though visible in the command-line help strings, the **stack-manager** keyword is not supported.

Defaults

Debugging is disabled.

Command Modes

Privileged EXEC

Command History

Release	Modification
12.2(44)EX	This command was introduced.

Usage Guidelines

The **undebg platform pm** command is the same as the **no debug platform pm** command.

Related Commands

Command	Description
show debugging	Displays information about the types of debugging that are enabled.

debug platform port-asic

Use the **debug platform port-asic** privileged EXEC command to enable debugging of the port application-specific integrated circuit (ASIC) driver. Use the **no** form of this command to disable debugging.

```
debug platform port-asic {interrupt | periodic | read | write}
```

```
no debug platform port-asic {interrupt | periodic | read | write}
```

Syntax Description

interrupt	Display port-ASIC interrupt-related function debug messages.
periodic	Display port-ASIC periodic-function-call debug messages.
read	Display port-ASIC read debug messages.
write	Display port-ASIC write debug messages.



Note

Though visible in the command-line help strings, the **stack** keyword is not supported.

Defaults

Debugging is disabled.

Command Modes

Privileged EXEC

Command History

Release	Modification
12.2(44)EX	This command was introduced.

Usage Guidelines

The **undebug platform port-asic** command is the same as the **no debug platform port-asic** command.

Related Commands

Command	Description
show debugging	Displays information about the types of debugging that are enabled.

debug platform port-security

Use the **debug platform port-security** privileged EXEC command to enable debugging of platform-dependent port-security information. Use the **no** form of this command to disable debugging.

debug platform port-security { **add** | **aging** | **all** | **delete** | **errors** | **rpc** | **warnings** }

no debug platform port-security { **add** | **aging** | **all** | **delete** | **errors** | **rpc** | **warnings** }

Syntax Description

add	Display secure address addition debug messages.
aging	Display secure address aging debug messages.
all	Display all port-security debug messages.
delete	Display secure address deletion debug messages.
errors	Display port-security error debug messages.
rpc	Display remote procedure call (RPC) debug messages.
warnings	Display warning debug messages.

Defaults

Debugging is disabled.

Command Modes

Privileged EXEC

Command History

Release	Modification
12.2(44)EX	This command was introduced.

Usage Guidelines

The **undebug platform port-security** command is the same as the **no debug platform port-security** command.

Related Commands

Command	Description
show debugging	Displays information about the types of debugging that are enabled.

debug platform qos-acl-tcam

Use the **debug platform qos-acl-tcam** privileged EXEC command to enable debugging of the quality of service (QoS) and access control list (ACL) ternary content addressable memory (TCAM) manager software. Use the **no** form of this command to disable debugging.

```
debug platform qos-acl-tcam {all | ctcam | errors | labels | mask | rpc | tcam}
```

```
no debug platform qos-acl-tcam {all | ctcam | errors | labels | mask | rpc | tcam}
```

Syntax Description

all	Display all QoS and ACL TCAM (QATM) manager debug messages.
ctcam	Display Cisco TCAM (CTCAM) related-events debug messages.
errors	Display QATM error-related-events debug messages.
labels	Display QATM label-related-events debug messages.
mask	Display QATM mask-related-events debug messages.
rpc	Display QATM remote procedure call (RPC) related-events debug messages.
tcam	Display QATM TCAM-related events debug messages.

Defaults

Debugging is disabled.

Command Modes

Privileged EXEC

Command History

Release	Modification
12.2(44)EX	This command was introduced.

Usage Guidelines

The **undebug platform qos-acl-tcam** command is the same as the **no debug platform qos-acl-tcam** command.

Related Commands

Command	Description
show debugging	Displays information about the types of debugging that are enabled.

debug platform resource-manager

Use the **debug platform resource-manager** privileged EXEC command to enable debugging of the resource manager software. Use the **no** form of this command to disable debugging.

```
debug platform resource-manager {all | dm | erd | errors | madmed | sd | stats | vld}
```

```
no debug platform resource-manager {all | dm | erd | errors | madmed | sd | stats | vld}
```

Syntax Description	all	Display all resource manager debug messages.
	dm	Display destination-map debug messages.
	erd	Display equal-cost-route descriptor-table debug messages.
	errors	Display error debug messages.
	madmed	Display the MAC address descriptor table and multi-expansion descriptor table debug messages.
	sd	Display the station descriptor table debug messages.
	stats	Display statistics debug messages.
	vld	Display the VLAN-list descriptor debug messages.

Defaults Debugging is disabled.

Command Modes Privileged EXEC

Command History	Release	Modification
	12.2(44)EX	This command was introduced.

Usage Guidelines The **undebug platform resource-manager** command is the same as the **no debug platform resource-manager** command.

Related Commands	Command	Description
	show debugging	Displays information about the types of debugging that are enabled.

debug platform snmp

Use the **debug platform snmp** privileged EXEC command to enable debugging of the platform-dependent Simple Network Management Protocol (SNMP) software. Use the **no** form of this command to disable debugging.

debug platform snmp

no debug platform snmp

Syntax Description This command has no arguments or keywords.

Defaults Debugging is disabled.

Command Modes Privileged EXEC

Command History	Release	Modification
	12.2(44)EX	This command was introduced.

Usage Guidelines The **undebug platform snmp** command is the same as the **no debug platform snmp** command.

Related Commands	Command	Description
	show debugging	Displays information about the types of debugging that are enabled.

debug platform span

Use the **debug platform span** privileged EXEC command to enable debugging of the platform-dependent Switched Port Analyzer (SPAN) software. Use the **no** form of this command to disable debugging.

debug platform span

no debug platform span

Syntax Description This command has no arguments or keywords.

Defaults Debugging is disabled.

Command Modes Privileged EXEC

Command History	Release	Modification
	12.2(44)EX	This command was introduced.

Usage Guidelines The **undebg platform span** command is the same as the **no debug platform span** command.

Related Commands	Command	Description
	show debugging	Displays information about the types of debugging that are enabled.

debug platform supervisor-asic

Use the **debug platform supervisor-asic** privileged EXEC command to enable debugging of the supervisor application-specific integrated circuit (ASIC). Use the **no** form of this command to disable debugging.

```
debug platform supervisor-asic {all | errors | receive | send}
```

```
no debug platform supervisor-asic {all | errors | receive | send}
```

Syntax Description

all	Display all supervisor-ASIC event debug messages.
errors	Display the supervisor-ASIC error debug messages.
receive	Display the supervisor-ASIC receive debug messages.
send	Display the supervisor-ASIC send debug messages.

Defaults

Debugging is disabled.

Command Modes

Privileged EXEC

Command History

Release	Modification
12.2(44)EX	This command was introduced.

Usage Guidelines

The **undebg platform supervisor-asic** command is the same as the **no debug platform supervisor-asic** command.

Related Commands

Command	Description
show debugging	Displays information about the types of debugging that are enabled.

debug platform sw-bridge

Use the **debug platform sw-bridge** privileged EXEC command to enable debugging of the software bridging function. Use the **no** form of this command to disable debugging.

```
debug platform sw-bridge {broadcast | control | multicast | packet | unicast}
```

```
no debug platform sw-bridge {broadcast | control | multicast | packet | unicast}
```

Syntax Description

broadcast	Display broadcast-data debug messages.
control	Display protocol-packet debug messages.
multicast	Display multicast-data debug messages.
packet	Display sent and received data debug messages.
unicast	Display unicast-data debug messages.

Defaults

Debugging is disabled.

Command Modes

Privileged EXEC

Command History

Release	Modification
12.2(44)EX	This command was introduced.

Usage Guidelines

The **undebg platform sw-bridge** command is the same as the **no debug platform sw-bridge** command.

Related Commands

Command	Description
show debugging	Displays information about the types of debugging that are enabled.

debug platform tcam

Use the **debug platform tcam** privileged EXEC command to enable debugging of ternary content addressable memory (TCAM) access and lookups. Use the **no** form of this command to disable debugging.

```
debug platform tcam {log | read | search | write}
```

```
debug platform tcam log l2 {acl {input | output} | local | qos}
```

```
debug platform tcam log l3 {acl {input | output} | ipv6 {acl {input | output} | local | qos |
secondary} | local | qos | secondary}
```

```
debug platform tcam read {reg | ssram | tcam}
```

```
debug platform tcam search
```

```
debug platform tcam write {forw-ram | reg | tcam}
```

```
no debug platform tcam {log | read | search | write}
```

```
no debug platform tcam log l2 {acl {input | output} | local | qos}
```

```
no debug platform tcam log l3 {acl {input | output} | ipv6 {acl {input | output} | local | qos |
secondary} | local | qos | secondary}
```

```
no debug platform tcam read {reg | ssram | tcam}
```

```
no debug platform tcam search
```

```
no debug platform tcam write {forw-ram | reg | tcam}
```

Syntax Description

log l2 {acl {input output} local qos}	<p>Display Layer 2 field-based CAM look-up type debug messages. The keywords have these meanings:</p> <ul style="list-style-type: none"> • acl {input output}—Display input or output ACL look-up debug messages. • local—Display local forwarding look-up debug messages. • qos—Display classification and quality of service (QoS) look-up debug messages.
--	--

I3 {acl {input output} ipv6 {acl {input output} local qos secondary} local qos secondary}	<p>Display Layer 3 field-based CAM look-up type debug messages. The keywords have these meanings:</p> <ul style="list-style-type: none"> • acl {input output}—Display input or output ACL look-up debug messages. • ipv6 {acl {input output} local qos secondary}—Display IPv6-based look-up debug messages. Options include displaying input or output ACL look-up, local forwarding look-up, classification and QoS look-up, or secondary forwarding look-up debug messages. • local—Display local forwarding look-up debug messages. • qos—Display classification and quality of service (QoS) look-up debug messages. • secondary—Display secondary forwarding look-up debug messages.
read {reg ssram tcam}	<p>Display TCAM-read debug messages. The keywords have these meanings:</p> <ul style="list-style-type: none"> • reg—Display TCAM-register read debug messages. • ssram—Display synchronous static RAM (SSRAM)-read debug messages. • tcam—Display TCAM-read debug messages.
search	Display supervisor-initiated TCAM-search results debug messages.
write {forw-ram reg tcam}	<p>Display TCAM-write debug messages. The keywords have these meanings:</p> <p>forw-ram—Display forwarding-RAM write debug messages.</p> <p>reg—Display TCAM-register write debug messages.</p> <p>tcam—Display TCAM-write debug messages.</p>

Defaults

Debugging is disabled.

Command Modes

Privileged EXEC

Command History

Release	Modification
12.2(44)EX	This command was introduced.
12.2(52)SE	Support for the I3 ipv6 {acl {input output} local qos secondary} , the I3 local , and the I3 secondary keywords was added for switches running the IP services image.

Usage GuidelinesThe **undebug platform tcam** command is the same as the **no debug platform tcam** command.

■ debug platform tcam

Related Commands

Command	Description
show debugging	Displays information about the types of debugging that are enabled.

debug platform udd

Use the **debug platform udd** privileged EXEC command to enable debugging of the platform-dependent UniDirectional Link Detection (UDLD) software. Use the **no** form of this command to disable debugging.

```
debug platform udd [all | error | rpc {events | messages}]
```

```
no debug platform udd [all | error | rpc {events | messages}]
```

Syntax Description

all	(Optional) Display all UDLD debug messages.
error	(Optional) Display error condition debug messages.
rpc {events messages}	(Optional) Display UDLD remote procedure call (RPC) debug messages. The keywords have these meanings: <ul style="list-style-type: none"> events—Display UDLD RPC events. messages—Display UDLD RPC messages.

Defaults

Debugging is disabled.

Command Modes

Privileged EXEC

Command History

Release	Modification
12.2(44)EX	This command was introduced.

Usage Guidelines

The **undebug platform udd** command is the same as the **no debug platform udd** command.

Related Commands

Command	Description
show debugging	Displays information about the types of debugging that are enabled.

debug platform vlan

Use the **debug platform vlan** privileged EXEC command to enable debugging of the VLAN manager software. Use the **no** form of this command to disable debugging.

```
debug platform vlan {errors | mvid | rpc}
```

```
no debug platform vlan {errors | mvid | rpc}
```

Syntax Description

errors	Display VLAN error debug messages.
mvid	Display mapped VLAN ID allocations and free debug messages.
rpc	Display remote procedure call (RPC) debug messages.

Defaults

Debugging is disabled.

Command Modes

Privileged EXEC

Command History

Release	Modification
12.2(44)EX	This command was introduced.

Usage Guidelines

The **undebug platform vlan** command is the same as the **no debug platform vlan** command.

Related Commands

Command	Description
show debugging	Displays information about the types of debugging that are enabled.

debug pm

Use the **debug pm** privileged EXEC command to enable debugging of port manager (PM) activity. The port manager is a state machine that controls all the logical and physical interfaces. All features, such as VLANs, UniDirectional Link Detection (UDLD), and so forth, work with the port manager to provide switch functions. Use the **no** form of this command to disable debugging.

```
debug pm {all | assert | card | etherchnl | hatable | messages | port | redundancy | registry | sm
          | span | split | vlan | vp}
```

```
no debug pm {all | assert | card | etherchnl | hatable | messages | port | redundancy | registry |
            sm | span | split | vlan | vp}
```

Syntax Description

all	Display all PM debug messages.
assert	Display assert debug messages.
card	Display line-card related-events debug messages.
etherchnl	Display EtherChannel related-events debug messages.
hatable	Display Host Access Table events debug messages.
messages	Display PM debug messages.
port	Display port related-events debug messages.
redundancy	Display redundancy debug messages.
registry	Display PM registry invocation debug messages.
sm	Display state-machine related-events debug messages.
span	Display spanning-tree related-events debug messages.
split	Display split-processor debug messages.
vlan	Display VLAN related-events debug messages.
vp	Display virtual port related-events debug messages.



Note

Though visible in the command-line help strings, the **scp** and **pvlan** keywords are not supported.

Defaults

Debugging is disabled.

Command Modes

Privileged EXEC

Command History

Release	Modification
12.2(44)EX	This command was introduced.

debug pm**Usage Guidelines**

The **undebug pm** command is the same as the **no debug pm** command.

Related Commands

Command	Description
show debugging	Displays information about the types of debugging that are enabled.

debug port-security

Use the **debug port-security** privileged EXEC command to enable debugging of the allocation and states of the port security subsystem. Use the **no** form of this command to disable debugging.

debug port-security

no debug port-security

Syntax Description This command has no arguments or keywords.

Defaults Debugging is disabled.

Command Modes Privileged EXEC

Command History	Release	Modification
	12.2(44)EX	This command was introduced.

Usage Guidelines The **undebg port-security** command is the same as the **no debug port-security** command.

Related Commands	Command	Description
	show debugging	Displays information about the types of debugging that are enabled.
	show port-security	Displays port-security settings for an interface or for the switch.

debug profinet alarm

Use the **debug profinet alarm** privileged EXEC command to enable debugging of PROFINET alarms. Use the **no** form of this command to disable PROFINET debugging.

debug profinet alarm

no debug profinet alarm

Syntax Description This command has no arguments or keywords.

Defaults PROFINET debugging is not configured.

Command Modes Privileged EXEC

Command History	Release	Modification
	12.2(52)SE	This command was introduced.

Usage Guidelines The **undebug profinet alarm** command is the same as the **no debug profinet alarm** command. Use this command only under the direction of a Cisco Technical Support engineer. When you use this command, use Telnet to access the Cisco IOS software command-line interface (CLI), using Ethernet rather than a serial port.

Examples This example shows how to enable debugging of PROFINET alarms:

```
Switch# debug profinet alarm
```

Related Commands	Command	Description
	debug profinet cyclic	Displays the function calls related to sending and receiving PROFINET cyclic packets.
	debug profinet error	Enables debugging of the PROFINET session errors.
	debug profinet packet	Enables debugging of the PROFINET packets.
	debug profinet platform	Enables debugging of the interaction between the Cisco IOS software and PROFINET.
	debug profinet topology	Displays the received PROFINET topology packets.
	debug profinet trace	Displays a group of traced debug output logs.
	profinet	Enables the PROFINET feature on the switch.

Command	Description
<code>show debugging</code>	Displays information about the types of debugging that are enabled.
<code>show profinet</code>	Displays details of the PROFINET session on the switch.

debug profinet cyclic

Use the **debug profinet cyclic** privileged EXEC command to display the function calls related to sending and receiving PROFINET cyclic packets. Use the **no** form of this command to disable PROFINET debugging.

debug profinet cyclic

no debug profinet cyclic

Syntax Description This command has no arguments or keywords.

Defaults PROFINET debugging is not configured.

Command Modes Privileged EXEC

Command History	Release	Modification
	12.2(52)SE	This command was introduced.

Usage Guidelines The **undebug profinet cyclic** command is the same as the **no debug profinet cyclic** command. Use this command only under the direction of a Cisco Technical Support engineer. When you use this command, use Telnet to access the Cisco IOS software command-line interface (CLI), using Ethernet rather than a serial port.

Examples This example shows how to display information about the time-cycle-based PROFINET Ethernet frames:

```
Switch# debug profinet cyclic
```

Related Commands	Command	Description
	debug profinet alarm	Enables debugging of the PROFINET alarms.
	debug profinet error	Enables debugging of the PROFINET session errors.
	debug profinet packet	Enables debugging of the PROFINET packets.
	debug profinet platform	Enables debugging of the interaction between the Cisco IOS software and PROFINET.
	debug profinet topology	Displays the received PROFINET topology packets.
	debug profinet trace	Displays a group of traced debug output logs.
	profinet	Enables the PROFINET feature on the switch.

Command	Description
<code>show debugging</code>	Displays information about the types of debugging that are enabled.
<code>show profinet</code>	Displays details of the PROFINET session on the switch.

debug profinet error

Use the **debug profinet error** privileged EXEC command to enable debugging of PROFINET session errors. Use the **no** form of this command to disable PROFINET debugging.

debug profinet error

no debug profinet error

Syntax Description This command has no arguments or keywords.

Defaults PROFINET debugging is not configured.

Command Modes Privileged EXEC

Command History	Release	Modification
	12.2(52)SE	This command was introduced.

Usage Guidelines The **undebug profinet error** command is the same as the **no debug profinet error** command. Use this command only under the direction of a Cisco Technical Support engineer. When you use this command, use Telnet to access the Cisco IOS software command-line interface (CLI), using Ethernet rather than a serial port.

Examples This example shows how to enable debugging of PROFINET errors:

```
Switch# debug profinet error
```

Related Commands	Command	Description
	debug profinet alarm	Enables debugging of the PROFINET alarms.
	debug profinet cyclic	Displays the function calls related to sending and receiving PROFINET cyclic packets.
	debug profinet packet	Enables debugging of the PROFINET packets.
	debug profinet platform	Enables debugging of the interaction between the Cisco IOS software and PROFINET.
	debug profinet topology	Displays the received PROFINET topology packets.
	debug profinet trace	Displays a group of traced debug output logs.
	profinet	Enables the PROFINET feature on the switch.

Command	Description
<code>show debugging</code>	Displays information about the types of debugging that are enabled.
<code>show profinet</code>	Displays details of the PROFINET session on the switch.

debug profinet packet

Use the **debug profinet packet** privileged EXEC command to enable debugging of the PROFINET feature. Use the **no** form of this command to disable PROFINET debugging.

debug profinet packet { **ethernet** | **udp** }

no debug profinet packet { **ethernet** | **udp** }

Syntax Description	Command	Description
	ethernet	Enable debugging of PROFINET Ethernet packets.
	udp	Enable debugging of PROFINET UDP packets.

Defaults PROFINET debugging is not configured.

Command Modes Privileged EXEC

Command History	Release	Modification
	12.2(52)SE	This command was introduced.

Usage Guidelines The **undebg profinet packet** command is the same as the **no debug profinet packet** command. Use this command only under the direction of a Cisco Technical Support engineer. When you use this command, use Telnet to access the Cisco IOS software command-line interface (CLI), using Ethernet rather than a serial port.

Examples This example shows how to enable debugging of PROFINET Ethernet packets:

```
Switch# debug profinet packet ethernet
```

Related Commands	Command	Description
	debug profinet alarm	Enables debugging of the PROFINET alarms.
	debug profinet cyclic	Displays the function calls related to sending and receiving PROFINET cyclic packets.
	debug profinet error	Enables debugging of the PROFINET session errors.
	debug profinet platform	Enables debugging of the interaction between the Cisco IOS software and PROFINET.
	debug profinet topology	Displays the received PROFINET topology packets.
	debug profinet trace	Displays a group of traced debug output logs.

Command	Description
profinet	Enables the PROFINET feature on the switch.
show debugging	Displays information about the types of debugging that are enabled.
show profinet	Displays details of the PROFINET session on the switch.

debug profinet platform

Use the **debug profinet platform** privileged EXEC command to enable debugging of the interaction between the Cisco IOS software and PROFINET. Use the **no** form of this command to disable PROFINET debugging.

debug profinet platform

no debug profinet platform

Syntax Description This command has no arguments or keywords.

Defaults PROFINET debugging is not configured.

Command Modes Privileged EXEC

Command History	Release	Modification
	12.2(52)SE	This command was introduced.

Usage Guidelines The **undebug profinet platform** command is the same as the **no debug profinet platform** command. Use this command only under the direction of a Cisco Technical Support engineer. When you use this command, use Telnet to access the Cisco IOS software command-line interface (CLI), using Ethernet rather than a serial port.

Examples This example shows how to enable debugging of the interaction between the Cisco IOS software and PROFINET:

```
Switch# debug profinet platform
```

Related Commands	Command	Description
	debug profinet alarm	Enables debugging of the PROFINET alarms.
	debug profinet cyclic	Displays the function calls related to sending and receiving PROFINET cyclic packets.
	debug profinet error	Enables debugging of the PROFINET session errors.
	debug profinet packet	Enables debugging of the PROFINET packets.
	debug profinet topology	Displays the received PROFINET topology packets.
	debug profinet trace	Displays a group of traced debug output logs.
	profinet	Enables the PROFINET feature on the switch.

Command	Description
<code>show debugging</code>	Displays information about the types of debugging that are enabled.
<code>show profinet</code>	Displays details of the PROFINET session on the switch.

debug profinet topology

Use the **debug profinet topology** privileged EXEC command to display information about the Link Layer Discovery Protocol (LLDP) and Simple Network Management Protocol (SNMP) packets used in PROFINET topology discovery. Use the **no** form of this command to disable PROFINET debugging.

debug profinet topology

no debug profinet topology

Syntax Description This command has no arguments or keywords.

Defaults PROFINET debugging is not configured.

Command Modes Privileged EXEC

Command History	Release	Modification
	12.2(52)SE	This command was introduced.

Usage Guidelines The **undebug profinet topology** command is the same as the **no debug profinet topology** command. Use this command only under the direction of a Cisco Technical Support engineer. When you use this command, use Telnet to access the Cisco IOS software command-line interface (CLI), using Ethernet rather than a serial port.

Examples This example shows how to enable debugging of PROFINET topology discovery:

```
Switch# debug profinet topology
```

Related Commands	Command	Description
	debug profinet alarm	Enables debugging of the PROFINET alarms.
	debug profinet cyclic	Displays the function calls related to sending and receiving PROFINET cyclic packets.
	debug profinet error	Enables debugging of the PROFINET session errors.
	debug profinet packet	Enables debugging of the PROFINET packets.
	debug profinet platform	Enables debugging of the interaction between the Cisco IOS software and PROFINET.
	debug profinet trace	Displays a group of traced debug output logs.
	profinet	Enables the PROFINET feature on the switch.

Command	Description
<code>show debugging</code>	Displays information about the types of debugging that are enabled.
<code>show profinet</code>	Displays details of the PROFINET session on the switch.

debug profinet trace

Use the **debug profinet trace** privileged EXEC command to display a group of traced debug output logs. Use the **no** form of this command to disable PROFINET debugging.

debug profinet trace

no debug profinet trace

Syntax Description This command has no arguments or keywords.

Defaults PROFINET debugging is not configured.

Command Modes Privileged EXEC

Command History	Release	Modification
	12.2(52)SE	This command was introduced.

Usage Guidelines The **undebug profinet trace** command is the same as the **no debug profinet trace** command. Use this command only under the direction of a Cisco Technical Support engineer. When you use this command, use Telnet to access the Cisco IOS software command-line interface (CLI), using Ethernet rather than a serial port.

Examples This example shows how to display a group of traced debug output logs:

```
Switch# debug profinet trace
```

Related Commands	Command	Description
	debug profinet alarm	Enables debugging of the PROFINET alarms.
	debug profinet cyclic	Displays the function calls related to sending and receiving PROFINET cyclic packets.
	debug profinet error	Enables debugging of the PROFINET session errors.
	debug profinet packet	Enables debugging of the PROFINET packets.
	debug profinet platform	Enables debugging of the interaction between the Cisco IOS software and PROFINET.
	debug profinet topology	Displays the received PROFINET topology packets.
	profinet	Enables the PROFINET feature on the switch.

Command	Description
<code>show debugging</code>	Displays information about the types of debugging that are enabled.
<code>show profinet</code>	Displays details of the PROFINET session on the switch.

debug ptp

Use the **debug ptp** privileged EXEC command to enable debugging of the Precision Time Protocol (PTP) activity. Use the **no** form of this command to disable debugging.

debug ptp { **bmc** | **clock-correction** | **errors** | **event** | **messages** | **error** | **transparent-clock** }

no debug ptp { **bmc** | **clock-correction** | **errors** | **event** | **messages** | **error** | **transparent-clock** }

Syntax Description

bmc	Display the PTP best master clock algorithm debug messages.
clock-correction	Display the PTP clock correction debug messages.
error	Display the PTP error debug messages.
event	Display the PTP state event debug messages.
messages	Display the PTP debug messages.
transparent-clock	Display the PTP transparent-clock debug messages.

Command Default

Debugging is disabled.

Command Modes

Privileged EXEC

Command History

Release	Modification
12.2(46)SE1	This command was introduced.

Usage Guidelines

The **undebg ptp** command is the same as the **no debug ptp** command.

Related Commands

Command	Description
ptp (interface configuration)	Sets the PTP clock properties.
ptp (interface configuration)	Sets the PTP clock properties on a port.
show ptp	Displays the PTP properties that are configured on the port.

debug qos-manager

Use the **debug qos-manager** privileged EXEC command to enable debugging of the quality of service (QoS) manager software. Use the **no** form of this command to disable debugging.

```
debug qos-manager {all | event | verbose}
```

```
no debug qos-manager {all | event | verbose}
```

Syntax Description	all	Display all QoS-manager debug messages.
	event	Display QoS-manager related-event debug messages.
	verbose	Display QoS-manager detailed debug messages.

Defaults Debugging is disabled.

Command Modes Privileged EXEC

Command History	Release	Modification
	12.2(44)EX	This command was introduced.

Usage Guidelines The **undebg qos-manager** command is the same as the **no debug qos-manager** command.

Related Commands	Command	Description
	show debugging	Displays information about the types of debugging that are enabled.

debug spanning-tree

Use the **debug spanning-tree** privileged EXEC command to enable debugging of spanning-tree activities. Use the **no** form of this command to disable debugging.

```
debug spanning-tree {all | backbonefast | bpdu | bpdu-opt | config | etherchannel | events |
exceptions | general | mstp | pvst+ | root | snmp | switch | synchronization | uplinkfast}
```

```
no debug spanning-tree {all | backbonefast | bpdu | bpdu-opt | config | etherchannel | events |
exceptions | general | mstp | pvst+ | root | snmp | switch | synchronization | uplinkfast}
```

Syntax Description

all	Display all spanning-tree debug messages.
backbonefast	Display BackboneFast-event debug messages.
bpdu	Display spanning-tree bridge protocol data unit (BPDU) debug messages.
bpdu-opt	Display optimized BPDU handling debug messages.
config	Display spanning-tree configuration change debug messages.
etherchannel	Display EtherChannel-support debug messages.
events	Display spanning-tree topology event debug messages.
exceptions	Display spanning-tree exception debug messages.
general	Display general spanning-tree activity debug messages.
mstp	Debug Multiple Spanning Tree Protocol events.
pvst+	Display per-VLAN spanning-tree plus (PVST+) event debug messages.
root	Display spanning-tree root-event debug messages.
snmp	Display spanning-tree Simple Network Management Protocol (SNMP) handling debug messages.
synchronization	Display the spanning-tree synchronization event debug messages.
switch	Display switch shim command debug messages. This shim is the software module that is the interface between the generic Spanning Tree Protocol (STP) code and the platform-specific code of various switch platforms.
uplinkfast	Display UplinkFast-event debug messages.



Note

Though visible in the command-line help strings, the **csuf/csrt** keyword is not supported.

Defaults

Debugging is disabled.

Command Modes

Privileged EXEC

Command History

Release	Modification
12.2(44)EX	This command was introduced.

Usage Guidelines The **undebg spanning-tree** command is the same as the **no debug spanning-tree** command.

Related Commands	Command	Description
	show debugging	Displays information about the types of debugging that are enabled.
	show spanning-tree	Displays spanning-tree state information.

debug spanning-tree backbonefast

Use the **debug spanning-tree backbonefast** privileged EXEC command to enable debugging of spanning-tree BackboneFast events. Use the **no** form of this command to disable debugging.

debug spanning-tree backbonefast [**detail** | **exceptions**]

no debug spanning-tree backbonefast [**detail** | **exceptions**]

Syntax Description		
	detail	(Optional) Display detailed BackboneFast debug messages.
	exceptions	(Optional) Display spanning-tree BackboneFast-exception debug messages.

Defaults	
	Debugging is disabled.

Command Modes	
	Privileged EXEC

Command History	Release	Modification
	12.2(44)EX	This command was introduced.

Usage Guidelines	
	The undebg spanning-tree backbonefast command is the same as the no debug spanning-tree backbonefast command.

Related Commands	Command	Description
	show debugging	Displays information about the types of debugging that are enabled.
	show spanning-tree	Displays spanning-tree state information.

debug spanning-tree bpdu

Use the **debug spanning-tree bpdu** privileged EXEC command to enable debugging of sent and received spanning-tree bridge protocol data units (BPDUs). Use the **no** form of this command to disable debugging.

debug spanning-tree bpdu [receive | transmit]

no debug spanning-tree bpdu [receive | transmit]

Syntax Description		
receive	(Optional)	Display the nonoptimized path for received BPDU debug messages.
transmit	(Optional)	Display the nonoptimized path for sent BPDU debug messages.

Defaults Debugging is disabled.

Command Modes Privileged EXEC

Command History	Release	Modification
	12.2(44)EX	This command was introduced.

Usage Guidelines The **undebg spanning-tree bpdu** command is the same as the **no debug spanning-tree bpdu** command.

Related Commands	Command	Description
	show debugging	Displays information about the types of debugging that are enabled.
	show spanning-tree	Displays spanning-tree state information.

debug spanning-tree bpdu-opt

Use the **debug spanning-tree bpdu-opt** privileged EXEC command to enable debugging of optimized spanning-tree bridge protocol data units (BPDUs) handling. Use the **no** form of this command to disable debugging.

debug spanning-tree bpdu-opt [detail | packet]

no debug spanning-tree bpdu-opt [detail | packet]

Syntax Description

detail	(Optional) Display detailed optimized BPDU-handling debug messages.
packet	(Optional) Display packet-level optimized BPDU-handling debug messages.

Defaults

Debugging is disabled.

Command Modes

Privileged EXEC

Command History

Release	Modification
12.2(44)EX	This command was introduced.

Usage Guidelines

The **undebug spanning-tree bpdu-opt** command is the same as the **no debug spanning-tree bpdu-opt** command.

Related Commands

Command	Description
show debugging	Displays information about the types of debugging that are enabled.
show spanning-tree	Displays spanning-tree state information.

debug spanning-tree mstp

Use the **debug spanning-tree mstp** privileged EXEC command to enable debugging of the Multiple Spanning Tree Protocol (MSTP) software. Use the **no** form of this command to disable debugging.

```
debug spanning-tree mstp {all | boundary | bpdu-rx | bpdu-tx | errors | flush | init | migration |
  pm | proposals | region | roles | sanity_check | sync | tc | timers}
```

```
no debug spanning-tree mstp {all | boundary | bpdu-rx | bpdu-tx | errors | flush | init | migration |
  pm | proposals | region | roles | sanity_check | sync | tc | timers}
```

Syntax Description	
all	Enable all the debugging messages.
boundary	Debug flag changes at these boundaries: <ul style="list-style-type: none"> • An multiple spanning-tree (MST) region and a single spanning-tree region running Rapid Spanning Tree Protocol (RSTP) • An MST region and a single spanning-tree region running 802.1D • An MST region and another MST region with a different configuration
bpdu-rx	Debug the received MST bridge protocol data units (BPDUs).
bpdu-tx	Debug the sent MST BPDUs.
errors	Debug MSTP errors.
flush	Debug the port flushing mechanism.
init	Debug the initialization of the MSTP data structures.
migration	Debug the protocol migration state machine.
pm	Debug MSTP port manager events.
proposals	Debug handshake messages between the designated switch and the root switch.
region	Debug the region synchronization between the switch processor (SP) and the route processor (RP).
roles	Debug MSTP roles.
sanity_check	Debug the received BPDU sanity check messages.
sync	Debug the port synchronization events.
tc	Debug topology change notification events.
timers	Debug the MSTP timers for start, stop, and expire events.

Defaults Debugging is disabled.

Command Modes Privileged EXEC

Command History	Release	Modification
	12.2(44)EX	This command was introduced.

debug spanning-tree mstp**Usage Guidelines**

The **undebug spanning-tree mstp** command is the same as the **no debug spanning-tree mstp** command.

Related Commands

Command	Description
show debugging	Displays information about the types of debugging that are enabled.
show spanning-tree	Displays spanning-tree state information.

debug spanning-tree switch

Use the **debug spanning-tree switch** privileged EXEC command to enable debugging of the software interface between the Spanning Tree Protocol (STP) software module and the port manager software module. Use the **no** form of this command to disable debugging.

```
debug spanning-tree switch {all | errors | flush | general | helper | pm | rx {decode | errors |
interrupt | process} | state | tx [decode] | uplinkfast}
```

```
no debug spanning-tree switch {all | errors | flush | general | helper | pm | rx {decode | errors |
interrupt | process} | state | tx [decode] | uplinkfast}
```

Syntax Description

all	Display all spanning-tree switch debug messages.
errors	Display debug messages for the interface between the spanning-tree software module and the port manager software module.
flush	Display debug messages for the shim flush operation.
general	Display general event debug messages.
helper	Display spanning-tree helper-task debug messages. Helper tasks handle bulk spanning-tree updates.
pm	Display port-manager event debug messages.
rx	Display received bridge protocol data unit (BPDU) handling debug messages. The keywords have these meanings: <ul style="list-style-type: none"> decode—Display decoded received packets. errors—Display receive error debug messages. interrupt—Display interrupt service request (ISR) debug messages. process—Display process receive BPDU debug messages.
state	Display spanning-tree port state change debug messages;
tx [decode]	Display sent BPDU handling debug messages. The keyword has this meaning: <ul style="list-style-type: none"> decode—(Optional) Display decoded sent packets.
uplinkfast	Display uplinkfast packet transmission debug messages.

Defaults

Debugging is disabled.

Command Modes

Privileged EXEC

Command History

Release	Modification
12.2(44)EX	This command was introduced.

Usage Guidelines

The **undebug spanning-tree switch** command is the same as the **no debug spanning-tree switch** command.

■ debug spanning-tree switch

Related Commands	Command	Description
	show debugging	Displays information about the types of debugging that are enabled.
	show spanning-tree	Displays spanning-tree state information.

debug spanning-tree uplinkfast

Use the **debug spanning-tree uplinkfast** privileged EXEC command to enable debugging of spanning-tree UplinkFast events. Use the **no** form of this command to disable debugging.

debug spanning-tree uplinkfast [exceptions]

no debug spanning-tree uplinkfast [exceptions]

Syntax Description	exceptions (Optional) Display spanning-tree UplinkFast-exception debug messages.
---------------------------	---

Defaults	Debugging is disabled.
-----------------	------------------------

Command Modes	Privileged EXEC
----------------------	-----------------

Command History	Release	Modification
	12.2(44)EX	This command was introduced.

Usage Guidelines	The undebg spanning-tree uplinkfast command is the same as the no debug spanning-tree uplinkfast command.
-------------------------	---

Related Commands	Command	Description
	show debugging	Displays information about the types of debugging that are enabled.
	show spanning-tree	Displays spanning-tree state information.

debug sw-vlan

Use the **debug sw-vlan** privileged EXEC command to enable debugging of VLAN manager activities. Use the **no** form of this command to disable debugging.

```
debug sw-vlan {badpmcookies | cfg-vlan {bootup | cli} | events | ifs | management | mapping |
notification | packets | redundancy | registries | vtp}
```

```
no debug sw-vlan {badpmcookies | cfg-vlan {bootup | cli} | events | ifs | management | mapping
| notification | packets | redundancy | registries | vtp}
```

Syntax Description	
badpmcookies	Display debug messages for VLAN manager incidents of bad port manager cookies.
cfg-vlan {bootup cli}	Display config-vlan debug messages. The keywords have these meanings: <ul style="list-style-type: none"> bootup—Display messages when the switch is booting up. cli—Display messages when the command-line interface (CLI) is in config-vlan mode.
events	Display debug messages for VLAN manager events.
ifs	See the debug sw-vlan ifs command.
management	Display debug messages for VLAN manager management of internal VLANs.
mapping	Display debug messages for VLAN mapping.
notification	See the debug sw-vlan notification command.
packets	Display debug messages for packet handling and encapsulation processes.
redundancy	Display debug messages for VTP VLAN redundancy.
registries	Display debug messages for VLAN manager registries.
vtp	See the debug sw-vlan vtp command.

Defaults Debugging is disabled.

Command Modes Privileged EXEC

Command History	Release	Modification
	12.2(44)EX	This command was introduced.

Usage Guidelines The **undebug sw-vlan** command is the same as the **no debug sw-vlan** command.

Related Commands	Command	Description
	show debugging	Displays information about the types of debugging that are enabled.
	show vlan	Displays the parameters for all configured VLANs or one VLAN (if the VLAN name or ID is specified) in the administrative domain.
	show vtp	Displays general information about VTP management domain, status, and counters.

debug sw-vlan ifs

Use the **debug sw-vlan ifs** privileged EXEC command to enable debugging of the VLAN manager IOS file system (IFS) error tests. Use the **no** form of this command to disable debugging.

```
debug sw-vlan ifs {open {read | write} | read {1 | 2 | 3 | 4} | write}
```

```
no debug sw-vlan ifs {open {read | write} | read {1 | 2 | 3 | 4} | write}
```

Syntax Description	
open {read write}	Display VLAN manager IFS file-open operation debug messages. The keywords have these meanings: <ul style="list-style-type: none"> read—Display VLAN manager IFS file-read operation debug messages. write—Display VLAN manager IFS file-write operation debug messages.
read {1 2 3 4}	Display file-read operation debug messages for the specified error test (1, 2, 3, or 4).
write	Display file-write operation debug messages.

Defaults Debugging is disabled.

Command Modes Privileged EXEC

Command History	Release	Modification
	12.2(44)EX	This command was introduced.

Usage Guidelines The **undebug sw-vlan ifs** command is the same as the **no debug sw-vlan ifs** command.

When selecting the file read operation, Operation **1** reads the file header, which contains the header verification word and the file version number. Operation **2** reads the main body of the file, which contains most of the domain and VLAN information. Operation **3** reads type length version (TLV) descriptor structures. Operation **4** reads TLV data.

Related Commands	Command	Description
	show debugging	Displays information about the types of debugging that are enabled.
	show vlan	Displays the parameters for all configured VLANs or one VLAN (if the VLAN name or ID is specified) in the administrative domain.

debug sw-vlan notification

Use the **debug sw-vlan notification** privileged EXEC command to enable debugging of the activation and deactivation of Inter-Link Switch (ISL) VLAN IDs. Use the **no** form of this command to disable debugging.

```
debug sw-vlan notification { accfwdchange | allowedvlanfgchange | fwdchange | linkchange |
modechange | pruningcfgchange | statechange }
```

```
no debug sw-vlan notification { accfwdchange | allowedvlanfgchange | fwdchange |
linkchange | modechange | pruningcfgchange | statechange }
```

Syntax Description

accfwdchange	Display debug messages for VLAN manager notification of aggregated access interface spanning-tree forward changes.
allowedvlanfgchange	Display debug messages for VLAN manager notification of changes to the allowed VLAN configuration.
fwdchange	Display debug messages for VLAN manager notification of spanning-tree forwarding changes.
linkchange	Display debug messages for VLAN manager notification of interface link-state changes.
modechange	Display debug messages for VLAN manager notification of interface mode changes.
pruningcfgchange	Display debug messages for VLAN manager notification of changes to the pruning configuration.
statechange	Display debug messages for VLAN manager notification of interface state changes.

Defaults

Debugging is disabled.

Command Modes

Privileged EXEC

Command History

Release	Modification
12.2(44)EX	This command was introduced.

Usage Guidelines

The **undebug sw-vlan notification** command is the same as the **no debug sw-vlan notification** command.

Related Commands

Command	Description
show debugging	Displays information about the types of debugging that are enabled.
show vlan	Displays the parameters for all configured VLANs or one VLAN (if the VLAN name or ID is specified) in the administrative domain.

■ debug sw-vlan notification

debug sw-vlan vtp

Use the **debug sw-vlan vtp** privileged EXEC command to enable debugging of the VLAN Trunking Protocol (VTP) code. Use the **no** form of this command to disable debugging.

```
debug sw-vlan vtp {events | packets | pruning [packets | xmit] | redundancy | xmit}
```

```
no debug sw-vlan vtp {events | packets | pruning | redundancy | xmit}
```

Syntax Description		
	events	Display debug messages for general-purpose logic flow and detailed VTP messages generated by the VTP_LOG_RUNTIME macro in the VTP code.
	packets	Display debug messages for the contents of all incoming VTP packets that have been passed into the VTP code from the IOS VTP platform-dependent layer, except for pruning packets.
	pruning [packets xmit]	Display debug messages generated by the pruning segment of the VTP code. The keywords have these meanings: <ul style="list-style-type: none"> • packets—(Optional) Display debug messages for the contents of all incoming VTP pruning packets that have been passed into the VTP code from the IOS VTP platform-dependent layer. • xmit—(Optional) Display debug messages for the contents of all outgoing VTP packets that the VTP code requests the IOS VTP platform-dependent layer to send.
	redundancy	Display debug messages for VTP redundancy.
	xmit	Display debug messages for the contents of all outgoing VTP packets that the VTP code requests the IOS VTP platform-dependent layer to send, except for pruning packets.

Defaults Debugging is disabled.

Command Modes Privileged EXEC

Command History	Release	Modification
	12.2(44)EX	This command was introduced.

Usage Guidelines The **undebg sw-vlan vtp** command is the same as the **no debug sw-vlan vtp** command. If no further parameters are entered after the **pruning** keyword, VTP pruning debugging messages appear. They are generated by the VTP_PRUNING_LOG_NOTICE, VTP_PRUNING_LOG_INFO, VTP_PRUNING_LOG_DEBUG, VTP_PRUNING_LOG_ALERT, and VTP_PRUNING_LOG_WARNING macros in the VTP pruning code.

■ debug sw-vlan vtp

Related Commands	Command	Description
	show debugging	Displays information about the types of debugging that are enabled.
	show vtp	Displays general information about VTP management domain, status, and counters.

debug uddl

Use the **debug uddl** privileged EXEC command to enable debugging of the UniDirectional Link Detection (UDLD) feature. Use the **no** form of this command to disable UDLD debugging.

debug uddl {events | packets | registries}

no debug uddl {events | packets | registries}

Syntax Description

events	Display debug messages for UDLD process events as they occur.
packets	Display debug messages for the UDLD process as it receives packets from the packet queue and tries to send them at the request of the UDLD protocol code.
registries	Display debug messages for the UDLD process as it processes registry calls from the UDLD process-dependent module and other feature modules.

Defaults

Debugging is disabled.

Command Modes

Privileged EXEC

Command History

Release	Modification
12.2(44)EX	This command was introduced.

Usage Guidelines

The **undebug uddl** command is the same as the **no debug uddl** command.

For **debug uddl events**, these debugging messages appear:

- General UDLD program logic flow
- State machine state changes
- Program actions for the set and clear ErrDisable state
- Neighbor cache additions and deletions
- Processing of configuration commands
- Processing of link-up and link-down indications

For **debug uddl packets**, these debugging messages appear:

- General packet processing program flow on receipt of an incoming packet
- Indications of the contents of the various pieces of packets received (such as type length versions [TLVs]) as they are examined by the packet reception code
- Packet transmission attempts and the outcome

For **debug uddl registries**, these categories of debugging messages appear:

- Sub-block creation
- Fiber-port status changes

■ debug udd

- State change indications from the port manager software
- MAC address registry calls

Related Commands

Command	Description
show debugging	Displays information about the types of debugging that are enabled.
show udd	Displays UDD administrative and operational status for all ports or the specified port.

debug vqpc

Use the **debug vqpc** privileged EXEC command to enable debugging of the VLAN Query Protocol (VQP) client. Use the **no** form of this command to disable debugging.

debug vqpc [**all** | **cli** | **events** | **learn** | **packet**]

no debug vqpc [**all** | **cli** | **events** | **learn** | **packet**]

Syntax Description	all	(Optional) Display all VQP client debug messages.
	cli	(Optional) Display the VQP client command-line interface (CLI) debug messages.
	events	(Optional) Display VQP client event debug messages.
	learn	(Optional) Display VQP client address learning debug messages.
	packet	(Optional) Display VQP client packet information debug messages.

Defaults Debugging is disabled.

Command Modes Privileged EXEC

Command History	Release	Modification
	12.2(44)EX	This command was introduced.

Usage Guidelines The **undebug vqpc** command is the same as the **no debug vqpc** command.

Related Commands	Command	Description
	show debugging	Displays information about the types of debugging that are enabled.

■ debug vqpc