

APPENDIX C

Unsupported Commands in Cisco IOS Release 12.2(53)EZ

This appendix lists some of the command-line interface (CLI) commands that appear when you enter the question mark (?) at the IE 3010 switch prompt but are not supported in this release, either because they are not tested or because of switch hardware limitations. This is not a complete list. These unsupported commands are listed by software feature and command mode:

- Access Control Lists, page C-2
- Archive Commands, page C-2
- Boot Loader Commands, page C-3
- Debug Commands, page C-3
- High Availability, page C-3
- IGMP Snooping Commands, page C-3
- Interface Commands, page C-4
- IP SLA, page C-4
- MAC Address Commands, page C-4
- Miscellaneous, page C-5
- NetFlow Commands, page C-6
- Network Address Translation (NAT) Commands, page C-6
- QoS, page C-6
- RADIUS, page C-6
- SNMP, page C-7
- SNMPv3, page C-7
- Spanning Tree, page C-7
- VLAN, page C-8

Access Control Lists

Unsupported Privileged EXEC Commands

access-enable [host] [timeout minutes]
access-template [access-list-number | name] [dynamic-name] [source] [destination] [timeout minutes]
clear access-template [access-list-number | name] [dynamic-name] [source] [destination].
show access-lists rate-limit [destination]
show accounting
show ip accounting [checkpoint] [output-packets | access violations]
show ip cache [prefix-mask] [type number]

Unsupported Global Configuration Commands

access-list rate-limit acl-index {precedence | mask prec-mask} access-list dynamic extended

Unsupported Route-Map Configuration Commands

match ip address prefix-list *prefix-list-name* [*prefix-list-name*...]

Archive Commands

Unsupported Privileged EXEC Commands

archive config logging persistent show archive config show archive log

ARP Commands

Unsupported Global Configuration Commands

arp ip-address hardware-address smds arp ip-address hardware-address srp-a arp ip-address hardware-address srp-b

Unsupported Interface Configuration Commands

arp probe ip probe proxy

Boot Loader Commands

Unsupported Global Configuration Commands

boot buffersize

Debug Commands

Unsupported Privileged EXEC Commands

debug platform cli-redirection main debug platform configuration

High Availability

Unsupported SSO-Aware HSRP Commands

All

IGMP Snooping Commands

Unsupported Global Configuration Commands

ip igmp snooping ten

Interface Commands

Unsupported Privileged EXEC Commands

show interfaces [interface-id | vlan vlan-id] [crb | fair-queue | irb | mac-accounting | precedence | irb | random-detect | rate-limit | shape]

Unsupported Global Configuration Commands

interface tunnel

Unsupported Interface Configuration Commands

transmit-interface type number

IP SLA

Unsupported MPLS Health Monitor Commands

All

Unsupported Ethernet Gatekeeper Registration Commands

All

Unsupported VolP Call Setup Probe Commands

All

MAC Address Commands

Unsupported Privileged EXEC Commands

show mac-address-table show mac-address-table address show mac-address-table aging-time show mac-address-table count show mac-address-table dynamic show mac-address-table interface show mac-address-table multicast show mac-address-table notification show mac-address-table static show mac-address-table vlan show mac address-table multicast



Use the **show ip igmp snooping groups** privileged EXEC command to display Layer 2 multicast address-table entries for a VLAN.

Unsupported Global Configuration Commands

mac-address-table aging-time mac-address-table notification mac-address-table static

Miscellaneous

Unsupported User EXEC Commands

verify

Unsupported Privileged EXEC Commands

file verify auto remote command show cable-diagnostics prbs test cable-diagnostics prbs

Unsupported Global Configuration Commands

errdisable recovery cause unicast flood l2protocol-tunnel global drop-threshold memory reserve critical service compress-config track object-number rtr stack-mac persistent timer

NetFlow Commands

Unsupported Global Configuration Commands

ip flow-aggregation cache

ip flow-cache entries

ip flow-export

Network Address Translation (NAT) Commands

Unsupported Privileged EXEC Commands

show ip nat statistics show ip nat translations

QoS

Unsupported Global Configuration Command

priority-list

Unsupported Interface Configuration Commands

priority-group rate-limit

Unsupported Policy-Map Configuration Command

class class-default where class-default is the class-map-name.

RADIUS

Unsupported Global Configuration Commands

aaa nas port extended
aaa authentication *feature* default enable

aaa authentication feature default line aaa nas port extended radius-server attribute nas-port radius-server configure radius-server extended-portnames

SNMP

Unsupported Global Configuration Commands

snmp-server enable informs snmp-server ifindex persist

logging discriminator discr-name [[facility] [mnemonics] [msg-body] {drops string | includes string}] [severity {drops sev-num | includes sev-num}] [rate-limit msglimit]

logging buffered discriminator

SNMPv3

Unsupported 3DES Encryption Commands

All

Spanning Tree

Unsupported Global Configuration Command

spanning-tree pathcost method {long | short}

Unsupported Interface Configuration Command

spanning-tree stack-port

VLAN

Unsupported Global Configuration Command

 $vlan\ internal\ allocation\ policy\ \{ascending\ |\ descending\}$

Unsupported User EXEC Commands

show running-config vlan show vlan ifindex vlan database

Unsupported VLAN Database Commands

vtp

vlan