



# TACACS+ Commands

---

This chapter contains the following sections:

- [tacacs-server host, on page 2](#)
- [tacacs-server host source-interface, on page 4](#)
- [tacacs-server host source-interface-ipv6, on page 5](#)
- [tacacs-server key, on page 6](#)
- [tacacs-server timeout, on page 7](#)
- [show tacacs, on page 8](#)
- [show tacacs key, on page 9](#)

tacacs-server host

# tacacs-server host

To specify a TACACS+ host, use the **tacacs-server host** Global Configuration mode command. To delete the specified TACACS+ host, use the **no** form of this command.

## Syntax

```
tacacs-server host {ip-address | hostname} [single-connection] [port port-number] [timeout timeout] [key key-string] [priority priority]
encrypted tacacs-server host {ip-address | hostname} [single-connection] [port port-number] [timeout timeout] [key encrypted-key-string] [priority priority]
no tacacs-server host {ip-address | hostname}
```

## Parameters

- **host ip-address**—Specifies the TACACS+ server host IP address. The IP address can be an IPv4, IPv6z address.
- **host hostname**—Specifies the TACACS+ server host name. (Length: 1-158 characters. Maximum label length of each part of the host name: 63 characters)
- **single-connection**—(Optional) Specifies that a single open connection is maintained between the device and the daemon, instead of the device opening and closing a TCP connection to the daemon each time it communicates.
- **port port-number**—(Optional) Specifies the TACACS server TCP port number. If the port number is 0, the host is not used for authentication. (Range : 0-65535)
- **timeout timeout**—(Optional) Specifies the timeout value in seconds. (Range: 1-30)
- **key key-string**—(Optional) Specifies the authentication and encryption key for all TACACS+ communications between the device and the TACACS+ server. This key must match the encryption used on the TACACS+ daemon. To specify an empty string, enter "". (Length: 0-128 characters). If this parameter is omitted, the globally-defined key will be used.
- **key encrypted-key-string**—(Optional) Same as key-string, but the key is in encrypted format.
- **priority priority**—(Optional) Specifies the order in which the TACACS+ servers are used, where 0 is the highest priority. (Range: 0-65535)

## Default Configuration

No TACACS+ host is specified.

The default **port-number** is 1812.

If **timeout** is not specified, the global value (set in the **tacacs-server timeout** command) is used.

If **key-string** is not specified, the global value (set in the **tacacs-server key** command) is used.

## Command Mode

Global Configuration mode

## User Guidelines

Multiple **tacacs-server host** commands can be used to specify multiple hosts.

## Example

The following example specifies a TACACS+ host.

```
switchxxxxxx(config) # tacacs-server host 172.16.1.1
```

**tacacs-server host source-interface**

# tacacs-server host source-interface

To specify the source interface which IPv4 address will be used as the Source IPv4 address for communication with IPv4 TACACS+ servers, use the **tacacs-server host source-interface** Global Configuration mode command. To restore the default configuration, use the **no** form of this command.

## Syntax

**tacacs-server host source-interface *interface-id*****no tacacs-server host source-interface**

## Parameters

- *interface-id*—Specifies the source interface.

## Default Configuration

The source IPv4 address is the IPv4 address defined on the outgoing interface and belonging to next hop IPv4 subnet.

## Command Mode

Global Configuration mode

## User Guidelines

If the source interface is the outgoing interface, the interface IP address belonging to next hop IPv4 subnet is applied.

If the source interface is not the outgoing interface, the minimal IPv4 address defined on the source interface is applied.

If there is no available IPv4 source address, a SYSLOG message is issued when attempting to communicate with an IPv4 TACACS+ server.

OOB cannot be defined as a source interface.

## Example

The following example configures the VLAN 10 as the source interface.

```
switchxxxxxx(config)# tacacs-server host source-interface vlan 100
```

# tacacs-server host source-interface-ipv6

To specify the source interface whose IPv6 address will be used as the Source IPv6 address for communication with IPv6 TACACS+ servers, use the **tacacs-server host source-interface-ipv6** Global Configuration mode command. To restore the default configuration, use the **no** form of this command.

## Syntax

**tacacs-server host source-interface-ipv6 *interface-id***

**no tacacs-server host source-interface-ipv6**

## Parameters

- *interface-id*—Specifies the source interface.

## Default Configuration

The IPv6 source address is the IPv6 address defined on the outgoing interface and selected in accordance with RFC6724.

## Command Mode

Global Configuration mode

## User Guidelines

If the source interface is the outgoing interface, the source IPv6 address is an IPv6 address defined on the interfaces and selected in accordance with RFC 6724.

If the source interface is not the outgoing interface, the source IPv6 address is the minimal IPv6 address defined on the source interface and matched to the scope of the destination IPv6 address is applied.

If there is no available source IPv6 address, a SYSLOG message is issued when attempting to communicate with an IPv6 TACACS+ server.

## Example

The following example configures the VLAN 10 as the source interface.

```
switchxxxxxx(config)# tacacs-server host source-interface-ipv6 vlan 100
```

**tacacs-server key**

# tacacs-server key

To set the authentication encryption key used for all TACACS+ communications between the device and the TACACS+ daemon, use the **tacacs-server key** Global Configuration mode command. To disable the key, use the **no** form of this command.

## Syntax

```
tacacs-server key key-string
encrypted tacacs-server key encrypted-key-string
no tacacs-server key
```

## Parameters

- ***key-string***—Specifies the authentication and encryption key for all TACACS+ communications between the device and the TACACS+ server. This key must match the encryption used on the TACACS+ daemon. (Length: 0–128 characters)
- ***encrypted-key-string***—Same as *key-string*, but the key is in encrypted format.

## Default Configuration

The default key is an empty string.

## Command Mode

Global Configuration mode

## Example

The following example sets Enterprise as the authentication key for all TACACS+ servers.

```
switchxxxxxx(config)# tacacs-server key enterprise
```

# tacacs-server timeout

To set the interval during which the device waits for a TACACS+ server to reply, use the **tacacs-server timeout** Global Configuration mode command. To restore the default configuration, use the **no** form of this command.

## Syntax

```
tacacs-server timeout timeout
no tacacs-server timeout
```

## Parameters

- *timeout*—Specifies the timeout value in seconds. (Range: 1-30).

## Default Configuration

The default timeout value is 5 seconds.

## Command Mode

Global Configuration mode

## Example

The following example sets the timeout value to 30 for all TACACS+ servers.

```
switchxxxxxx(config) # tacacs-server timeout 30
```

**show tacacs**

# show tacacs

To display configuration and statistical information for a TACACS+ server, use the **show tacacs** Privileged EXEC mode command.

## Syntax

```
show tacacs [ip-address]
```

## Parameters

- *ip-address*—Specifies the TACACS+ server name, IPv4 or IPv6 address.

## Default Configuration

If *ip-address* is not specified, information for all TACACS+ servers is displayed.

## Command Mode

Privileged EXEC mode

## Example

The following example displays configuration and statistical information for all TACACS+ servers

```
switchxxxxxx# show tacacs
IP address Status Port Single Time Priority
Connection Out
-----
172.16.1.1 Connected 49 No Global 1
Global values
-----
Time Out: 3
Source IPv4 interface: vlan 120
Source IPv6 interface: vlan 10
```

# show tacacs key

To display the configured key of the TACACS+ server, use the **show tacacs key** Privileged EXEC mode command.

## Syntax

**show tacacs key [ip-address]**

## Parameters

- *ip-address*—Specifies the TACACS+ server name or IP address.

## Default Configuration

If *ip-address* is not specified, information for all TACACS+ servers is displayed.

## Command Mode

Privileged EXEC mode

## Example

The following example displays configuration and statistical information for all TACACS+ servers.

switchxxxxxx# show tacacs key	
IP address	Key (Encrypted)
-----	-----
172.16.1.1	1238af77aaca17568f1298cced165fec
172.16.1.2	1238af77aaca17568f12988601fcabed
Global key (Encrypted)	
-----	
1238af77aaca17568f1298bc5476ddad	

```
show tacacs key
```