



# Preface

---

## Document Conventions

Command-line interface (CLI) syntax descriptions use these conventions:

- Commands and keywords are in **boldface** text.
- Arguments for which you supply values are in *italic*.
- Square brackets ([ ]) mean optional elements.
- Braces ({ }) group required choices, and vertical bars (|) separate the alternative elements.
- Braces and vertical bars within square brackets ({ | }) mean a required choice within an optional element.

Interactive examples use these conventions:

- Terminal sessions and system displays are in `screen` font.
- Information that you enter is in **boldface screen** font.
- Nonprinting characters, such as passwords or tabs, are in angle brackets (< >).

Interactive examples use these conventions:



**Note**

Means *reader take note*. Notes contain helpful suggestions or references to materials not contained in this manual.



**Tip**

Means *the following information will help you solve a problem*.



**Caution**

Means *reader be careful*. In this situation, you might do something that could result in equipment damage or loss of data.



**Warning**

**IMPORTANT SAFETY INSTRUCTIONS**

**This warning symbol means danger. You are in a situation that could cause bodily injury. Before you work on any equipment, be aware of the hazards involved with electrical circuitry and be familiar with standard practices for preventing accidents. Use the statement number provided at the end of each warning to locate its translation in the translated safety warnings that accompanied this device.** Statement 1071

**SAVE THESE INSTRUCTIONS**

## Related Publications

- *Cisco EnergyWise Configuration Guide, EnergyWise Phase 2* on Cisco.com
- *Cisco IOS Release Notes for Cisco EnergyWise, EnergyWise Phase 2* on Cisco.com
- Documentation for the software release running on your device:  
<http://www.cisco.com/cisco/web/support/index.html>.

For Cisco EnergyWise partner documentation: <http://developer.cisco.com/web/esdk/home>.

- *Cisco EnergyWise Documentation Roadmap*
- *Cisco EnergyWise Partner Development Guide*
- *Cisco EnergyWise Programmer Reference Guide for the End Point SDK*
- *Cisco EnergyWise Programmer Reference Guide for the Management API*
- *Cisco IOS Release Notes for the Cisco EnergyWise Configuration Guide, EnergyWise Phase 2*

# Obtaining Documentation and Support on the Cisco Developer Network

Cisco partners can access the EnergyWise documents, API and SDK software code, and Cisco IOS software by joining the Cisco Developer Network at <http://developer.cisco.com/web/esdk/home>.

You must have a support contract and license to access EnergyWise resources on the Cisco Developer Network and on TAC. The business development manager who registered your license must set your Cisco.com account with the appropriate access privileges.

The forum, wiki, and resources on the Cisco Developer Network provide a self-help knowledge base and community for EnergyWise application developers and programmers. You can get additional support by opening a case in the TAC Service Request Tool at <http://tools.cisco.com/ServiceRequestTool/create/launch.do>.

# Obtaining Documentation, Obtaining Support, and Security Guidelines

For information on obtaining documentation, submitting a service request, and gathering additional information, see the monthly *What's New in Cisco Product Documentation*, which also lists all new and revised Cisco technical documentation, at:

<http://www.cisco.com/en/US/docs/general/whatsnew/whatsnew.html>

Subscribe to the *What's New in Cisco Product Documentation* as a Really Simple Syndication (RSS) feed and set content to be delivered directly to your desktop using a reader application. The RSS feeds are a free service and Cisco currently supports RSS version 2.0.