



Preface

This guide provides procedures for installing and using Smart Install and using the related commands. For information about other standard Cisco IOS Release 12.2 commands or Cisco IOS Release 15.0, see the Cisco IOS documentation set available from the Cisco.com home page at Products & Services > Cisco IOS and NX OS Software> Cisco IOS.

This guide does not describe system messages you might encounter or how to install your device. For more information, see the system message guide and the hardware installation guide for the device.

For documentation updates, and other late information, see the release notes for the specific device for this release.

Conventions

This publication uses these conventions to convey instructions and information:

Command descriptions use these conventions:

- Commands and keywords are in **boldface** text.
- Arguments for which you supply values are in *italic*.
- Square brackets ([]) mean optional elements.
- Braces ({ }) group required choices, and vertical bars (|) separate the alternative elements.
- Braces and vertical bars within square brackets ([{ | }]) mean a required choice within an optional element.

Interactive examples use these conventions:

- Terminal sessions and system displays are in `screen` font.
- Information you enter is in **boldface screen** font.
- Nonprinting characters, such as passwords or tabs, are in angle brackets (< >).

Notes and cautions use these conventions and symbols:



Note

Means *reader take note*. Notes contain helpful suggestions or references to materials not contained in this manual.

**Caution**

Means *reader be careful*. In this situation, you might do something that could result in equipment damage or loss of data.

Related Publications

- Catalyst 6500 Supervisor Engine 2T-10GE
http://www.cisco.com/en/US/products/hw/switches/ps708/tsd_products_support_series_home.html
- Catalyst 4500
http://www.cisco.com/en/US/products/hw/switches/ps4324/tsd_products_support_series_home.html
- Catalyst 3850
http://www.cisco.com/en/US/products/ps12686/tsd_products_support_series_home.html
- Catalyst 3750-X
http://www.cisco.com/en/US/products/ps10745/tsd_products_support_series_home.html
- Catalyst 3750-E
http://www.cisco.com/en/US/products/ps7077/tsd_products_support_series_home.html
- Catalyst 3750
http://www.cisco.com/en/US/products/hw/switches/ps5023/tsd_products_support_series_home.html
- Catalyst 3650
http://preview.cisco.com/en/US/products/ps13133/products_installation_and_configuration_guides_list.html
- Catalyst 3560
http://www.cisco.com/en/US/products/hw/switches/ps5528/tsd_products_support_series_home.html
- Catalyst 3560-E
http://www.cisco.com/en/US/products/ps7078/tsd_products_support_series_home.html
- Catalyst 3560-X
http://www.cisco.com/en/US/products/ps10744/tsd_products_support_series_home.html
- Catalyst 2975
http://www.cisco.com/en/US/products/ps10081/tsd_products_support_series_home.html
- Catalyst 2960, Catalyst 2960-S, and Catalyst 2960-SF
http://www.cisco.com/en/US/products/ps6406/tsd_products_support_series_home.html
- Catalyst 2960-X
http://www.cisco.com/en/US/products/ps12995/tsd_products_support_series_home.html
- Catalyst 2960-XR
http://www.cisco.com/en/US/products/ps13078/tsd_products_support_series_home.html

- IE 2000
<http://www.cisco.com/c/en/us/support/switches/industrial-ethernet-2000-series-switches/tsd-products-support-series-home.html>
- IE3000
<http://www.cisco.com/c/en/us/support/switches/industrial-ethernet-3000-series-switches/tsd-products-support-series-home.html>
- IE3010
<http://www.cisco.com/c/en/us/support/switches/industrial-ethernet-3010-series-switches/tsd-products-support-series-home.html>
- EtherSwitch Network Modules
https://www.cisco.com/en/US/docs/ios/lanswitch/configuration/guide/lsw_enet_switch_net_external_docbase_0900e4b18090920b_4container_external_docbase_0900e4b18096f791.html

Obtaining Documentation, Obtaining Support, and Security Guidelines

For information on obtaining documentation, submitting a service request, and gathering additional information, see the monthly *What's New in Cisco Product Documentation*, which also lists all new and revised Cisco technical documentation, at:

<http://www.cisco.com/en/US/docs/general/whatsnew/whatsnew.html>

Subscribe to the *What's New in Cisco Product Documentation* as a Really Simple Syndication (RSS) feed and set content to be delivered directly to your desktop using a reader application. The RSS feeds are a free service and Cisco currently supports RSS version 2.0.

