



APPENDIX **B**

Catalyst 3750 Metro Switch Debug Commands

This appendix describes the **debug** privileged EXEC commands that have been created or changed for use with the Catalyst 3750 Metro switch. These commands are helpful in diagnosing and resolving internetworking problems and should be enabled only under the guidance of Cisco technical support staff.



Caution

Because debugging output is assigned high priority in the CPU process, it can render the system unusable. For this reason, use the **debug** commands only to troubleshoot specific problems or during troubleshooting sessions with Cisco technical support staff. It is best to use the **debug** commands during periods of lower network traffic and fewer users. Debugging during these periods decreases the likelihood that increased **debug** command processing overhead will affect system use.

debug auto qos

Use the **debug auto qos** privileged EXEC command to enable debugging of the automatic quality of service (auto-QoS) feature. Use the **no** form of this command to disable debugging.

debug auto qos

no debug auto qos

Syntax Description This command has no arguments or keywords.

Defaults Auto-QoS debugging is disabled.

Command Modes Privileged EXEC

| Command History | Release | Modification |
|-----------------|------------|--|
| | 12.1(14)AX | This command was introduced. |
| | 12.2(25)EY | The debug auto qos command replaced the debug autoqos command. |

Usage Guidelines To display the QoS configuration that is automatically generated when auto-QoS is enabled, enable debugging *before* you enable auto-QoS. You enable debugging by entering the **debug autoqos** privileged EXEC command.

The **undebug autoqos** command is the same as the **no debug autoqos** command.

Examples This example shows how to display the QoS configuration that is automatically generated when auto-QoS is enabled:

```
Switch# debug autoqos
AutoQoS debugging is on
Switch# configure terminal
Enter configuration commands, one per line. End with CNTL/Z.
Switch(config)# interface gigabitethernet1/0/1
Switch(config-if)# auto qos voip cisco-phone

21:29:41: mls qos map cos-dscp 0 8 16 26 32 46 48 56
21:29:41: mls qos
21:29:42: no mls qos srr-queue input cos-map
21:29:42: no mls qos srr-queue output cos-map
21:29:42: mls qos srr-queue input cos-map queue 1 threshold 3 0
21:29:42: mls qos srr-queue input cos-map queue 1 threshold 2 1
21:29:42: mls qos srr-queue input cos-map queue 2 threshold 1 2
21:29:42: mls qos srr-queue input cos-map queue 2 threshold 2 4 6 7
21:29:43: mls qos srr-queue input cos-map queue 2 threshold 3 3 5
21:29:43: mls qos srr-queue output cos-map queue 1 threshold 3 5
21:29:43: mls qos srr-queue output cos-map queue 2 threshold 3 3 6 7
21:29:44: mls qos srr-queue output cos-map queue 3 threshold 3 2 4
```

```

21:29:44: mls qos srr-queue output cos-map queue 4 threshold 2 1
21:29:44: mls qos srr-queue output cos-map queue 4 threshold 3 0
21:29:44: no mls qos srr-queue input dscp-map
21:29:44: no mls qos srr-queue output dscp-map
21:29:44: mls qos srr-queue input dscp-map queue 1 threshold 2 9 10 11 12 13 14 15
21:29:45: mls qos srr-queue input dscp-map queue 1 threshold 3 0 1 2 3 4 5 6 7
21:29:45: mls qos srr-queue input dscp-map queue 1 threshold 3 32
21:29:45: mls qos srr-queue input dscp-map queue 2 threshold 1 16 17 18 19 20 21 22 23
21:29:45: mls qos srr-queue input dscp-map queue 2 threshold 2 33 34 35 36 37 38 39 48
21:29:46: mls qos srr-queue input dscp-map queue 2 threshold 2 49 50 51 52 53 54 55 56
21:29:46: mls qos srr-queue input dscp-map queue 2 threshold 2 57 58 59 60 61 62 63
21:29:46: mls qos srr-queue input dscp-map queue 2 threshold 3 24 25 26 27 28 29 30 31
21:29:47: mls qos srr-queue input dscp-map queue 2 threshold 3 40 41 42 43 44 45 46 47
21:29:47: mls qos srr-queue output dscp-map queue 1 threshold 3 40 41 42 43 44 45 46 47
21:29:47: mls qos srr-queue output dscp-map queue 2 threshold 3 24 25 26 27 28 29 30 31
21:29:47: mls qos srr-queue output dscp-map queue 2 threshold 3 48 49 50 51 52 53 54 55
21:29:48: mls qos srr-queue output dscp-map queue 2 threshold 3 56 57 58 59 60 61 62 63
21:29:48: mls qos srr-queue output dscp-map queue 3 threshold 3 16 17 18 19 20 21 22 23
21:29:48: mls qos srr-queue output dscp-map queue 3 threshold 3 32 33 34 35 36 37 38 39
21:29:49: mls qos srr-queue output dscp-map queue 4 threshold 1 8
21:29:49: mls qos srr-queue output dscp-map queue 4 threshold 2 9 10 11 12 13 14 15
21:29:49: mls qos srr-queue output dscp-map queue 4 threshold 3 0 1 2 3 4 5 6 7
21:29:49: no mls qos srr-queue input priority-queue 1
21:29:49: no mls qos srr-queue input priority-queue 2
21:29:50: mls qos srr-queue input bandwidth 90 10
21:29:50: no mls qos srr-queue input buffers
21:29:50: mls qos queue-set output 1 buffers 10 10 26 54
21:29:50: interface GigabitEthernet1/0/1
21:29:50: mls qos trust device cisco-phone
21:29:50: mls qos trust cos
21:29:50: no queue-set 1
21:29:50: srr-queue bandwidth shape 10 0 0 0
21:29:50: srr-queue bandwidth share 10 10 60 20

```

Related Commands

| Command | Description |
|--------------------------------|--|
| auto qos voip | Configures auto-QoS for voice over IP (VoIP) within a QoS domain. |
| show auto qos | Displays the initial configuration that is generated by the automatic auto-QoS feature |
| show debugging | Displays information about the types of debugging that are enabled. |

debug backup

Use the **debug backup** privileged EXEC command to enable debugging of the Flex Links backup interface. Use the **no** form of this command to disable debugging.

debug backup { **all** | **errors** | **events** | **vlan-load-balancing** }

no debug backup { **all** | **errors** | **events** | **vlan-load-balancing** }

Syntax Description

| | |
|----------------------------|---|
| all | Display all backup interface debug messages. |
| errors | Display backup interface error or exception debug messages. |
| events | Display backup interface event debug messages. |
| vlan-load-balancing | Display backup interface VLAN load balancing. |

Command Default

Backup interface debugging is disabled.

Command Modes

Privileged EXEC

Command History

| Release | Modification |
|------------|---|
| 12.2(25)EY | This command was introduced. |
| 12.2(37)SE | Added vlan-load-balancing keyword. |

Usage Guidelines

The **undebug backup** command is the same as the **no debug backup** command.

Related Commands

| Command | Description |
|-----------------------|---|
| show debugging | Displays information about the types of debugging that are enabled. |

debug dot1x

Use the **debug dot1x** privileged EXEC command to enable debugging of the 802.1x feature. Use the **no** form of this command to disable debugging.

```
debug dot1x {all | errors | events | packets | registry | state-machine}
```

```
no debug dot1x {all | errors | events | packets | registry | state-machine}
```

Syntax Description

| | |
|----------------------|--|
| all | Display all 802.1x debug messages. |
| errors | Display 802.1x error debug messages. |
| events | Display 802.1x event debug messages. |
| packets | Display 802.1x packet debug messages. |
| registry | Display 802.1x registry invocation debug messages. |
| state-machine | Display state-machine related-events debug messages. |

Defaults

Debugging is disabled.

Command Modes

Privileged EXEC

Command History

| Release | Modification |
|------------|------------------------------|
| 12.1(14)AX | This command was introduced. |

Usage Guidelines

The **undebug dot1x** command is the same as the **no debug dot1x** command.

Related Commands

| Command | Description |
|----------------------------|---|
| show debugging | Displays information about the types of debugging that are enabled. |
| show dot1x | Displays 802.1x statistics, administrative status, and operational status for the switch or for the specified port. |

debug dtp

Use the **debug dtp** privileged EXEC command to enable debugging of the Dynamic Trunking Protocol (DTP) activity. Use the **no** form of this command to disable debugging.

```
debug dtp {aggregation | all | decision | events | oserrs | packets | queue | states | timers}
```

```
no debug dtp {aggregation | all | decision | events | oserrs | packets | queue | states | timers}
```

Syntax Description

| | |
|--------------------|--|
| aggregation | Display DTP user-message aggregation debug messages. |
| all | Display all DTP debug messages. |
| decision | Display the DTP decision-table debug messages. |
| events | Display the DTP event debug messages. |
| oserrs | Display DTP operating system-related error debug messages. |
| packets | Display DTP packet-processing debug messages. |
| queue | Display DTP packet-queueing debug messages. |
| states | Display DTP state-transition debug messages. |
| timers | Display DTP timer-event debug messages. |

Defaults

Debugging is disabled.

Command Modes

Privileged EXEC

Command History

| Release | Modification |
|------------|------------------------------|
| 12.1(14)AX | This command was introduced. |

Usage Guidelines

The **undebug dtp** command is the same as the **no debug dtp** command.

Related Commands

| Command | Description |
|-----------------------|---|
| show debugging | Displays information about the types of debugging that are enabled. |
| show dtp | Displays DTP information for the switch or for a specified interface. |

debug etherchannel

Use the **debug etherchannel** privileged EXEC command to enable debugging of the EtherChannel/PAGP shim. This shim is the software module that is the interface between the Port Aggregation Protocol (PAGP) software module and the port manager software module. Use the **no** form of this command to disable debugging.

debug etherchannel [**all** | **detail** | **error** | **event** | **idb**]

no debug etherchannel [**all** | **detail** | **error** | **event** | **idb**]

Syntax Description

| | |
|---------------|--|
| all | (Optional) Display all EtherChannel debug messages. |
| detail | (Optional) Display detailed EtherChannel debug messages. |
| error | (Optional) Display EtherChannel error debug messages. |
| event | (Optional) Debug major EtherChannel event debug messages. |
| idb | (Optional) Display PAGP interface descriptor block debug messages. |



Note

Though visible in the command-line help strings, the **linecard** keyword is not supported.

Defaults

Debugging is disabled.

Command Modes

Privileged EXEC

Command History

| Release | Modification |
|------------|------------------------------|
| 12.1(14)AX | This command was introduced. |

Usage Guidelines

If you do not specify a keyword, all debug messages are displayed.

The **undebug etherchannel** command is the same as the **no debug etherchannel** command.

Related Commands

| Command | Description |
|--------------------------|---|
| show debugging | Displays information about the types of debugging that are enabled. |
| show etherchannel | Displays EtherChannel information for the channel. |

debug ethernet service

Use the **debug ethernet service** privileged EXEC command to enable debugging of Ethernet customer service instances. Use the **no** form of this command to disable debugging.

```
debug ethernet service { all | api | error | evc [id evc-id] | instance [id id interface-id | interface interface-id] | interface [interface-id] | oam-mgr }
```

```
no debug ethernet service { all | api | error | evc [id evc-id] | instance [id id interface-id | interface interface-id] | interface [interface-id] | oam-mgr }
```

| Syntax Description | | |
|--|--|--|
| all | | Display all Ethernet customer-service debug messages. |
| api | | Display debug messages about the interaction between the Ethernet infrastructure and its clients. |
| error | | Display Ethernet customer-service error messages occurring in the Ethernet infrastructure subsystem. |
| evc | | Display Ethernet virtual connection (EVC) debug messages |
| id <i>evc-id</i> | | (Optional) Display EVC debug messages relevant to a specific EVC identifier. The EVC identifier can be a string of from 1 to 100 characters. |
| instance | | Display debug messages related to Ethernet customer-service instances. |
| id <i>id</i> <i>interface-id</i> | | (Optional) Display Ethernet service-instance debug messages for a specific Ethernet service instance ID and interface. The service identifier range is 1 to 4294967295. The interface is a physical interface. |
| interface <i>interface-id</i> | | (Optional) When entered after the instance keyword, display service-instance debug messages for the interface. You must enter an interface ID. |
| interface [<i>interface-id</i>] | | Display debugging for Ethernet services on all interfaces or the specified interface. |
| oam-mgr | | Display debug messages for the Ethernet operation, administration, and maintenance (OAM) manager component of the infrastructure. |

Command Default Ethernet service debugging is disabled.

Command Modes Privileged EXEC

| Command History | Release | Modification |
|-----------------|-------------|------------------------------|
| | 12.2(25)SEG | This command was introduced. |

Usage Guidelines The **undebug ethernet service** command is the same as the **no debug ethernet service** command.

| Related Commands | Command | Description |
|------------------|----------------|---|
| | show debugging | Displays information about the types of debugging that are enabled. |

debug interface

Use the **debug interface** privileged EXEC command to enable debugging of port-related activities. Use the **no** form of this command to disable debugging.

debug interface {*interface-id* | **null** *interface-number* | **port-channel** *port-channel-number* | **tunnel** *tunnel-interface* | **vlan** *vlan-id*}

no debug interface {*interface-id* | **null** *interface-number* | **port-channel** *port-channel-number* | **tunnel** *tunnel-interface* | **vlan** *vlan-id*}

| Syntax Description | | |
|--|--|--|
| <i>interface-id</i> | | Display debug messages for the specified physical port, for example fastethernet1/0/3. |
| null <i>interface-number</i> | | Display debug messages for null interfaces. The <i>interface-number</i> is always 0. |
| port-channel <i>port-channel-number</i> | | Display debug messages for the specified EtherChannel port-channel. The <i>port-channel-number</i> range is 1 to 12. |
| tunnel <i>tunnel-interface</i> | | Display debug messages for the specified Distance Vector Multicast Routing Protocol (DVMRP) tunnel. The <i>tunnel-interface</i> number range is 0 to 64. |
| vlan <i>vlan-id</i> | | Display debug messages for the specified VLAN. The <i>vlan-id</i> range is 1 to 4094. |

Defaults Debugging is disabled.

Command Modes Privileged EXEC

| Command History | Release | Modification |
|-----------------|------------|------------------------------|
| | 12.1(14)AX | This command was introduced. |

Usage Guidelines If you do not specify a keyword, all debug messages are displayed. The **undebug interface** command is the same as the **no debug interface** command.

| Related Commands | Command | Description |
|------------------|--------------------------|---|
| | show debugging | Displays information about the types of debugging that are enabled. |
| | show etherchannel | Displays EtherChannel information for the channel. |

debug ip dhcp snooping

Use the **debug ip dhcp snooping** privileged EXEC command to enable debugging of DHCP snooping. Use the **no** form of this command to disable debugging.

```
debug ip dhcp snooping {mac-address | agent | event | packet}
```

```
no debug ip dhcp snooping {mac-address | agent | event | packet}
```

Syntax Description

| | |
|--------------------|--|
| <i>mac-address</i> | Display debug messages for a DHCP packet with the specified MAC address. |
| agent | Display debug messages for DHCP snooping agents. |
| event | Display debug messages for DHCP snooping events. |
| packet | Display debug messages for DHCP snooping. |

Defaults

Debugging is disabled.

Command Modes

Privileged EXEC

Command History

| Release | Modification |
|------------|------------------------------|
| 12.2(25)EY | This command was introduced. |

Usage Guidelines

The **undebg ip dhcp snooping** command is the same as the **no debug ip dhcp snooping** command.

Related Commands

| Command | Description |
|-----------------------|---|
| show debugging | Displays information about the types of debugging that are enabled. |

debug ip igmp filter

Use the **debug ip igmp filter** privileged EXEC command to enable debugging of Internet Group Management Protocol (IGMP) filter events. Use the **no** form of this command to disable debugging.

debug ip igmp filter

no debug ip igmp filter

Syntax Description This command has no arguments or keywords.

Defaults Debugging is disabled.

Command Modes Privileged EXEC

| Command History | Release | Modification |
|-----------------|------------|------------------------------|
| | 12.1(14)AX | This command was introduced. |

Usage Guidelines The **undebug ip igmp filter** command is the same as the **no debug ip igmp filter** command.

| Related Commands | Command | Description |
|------------------|-----------------------|---|
| | show debugging | Displays information about the types of debugging that are enabled. |

debug ip igmp max-groups

Use the **debug ip igmp max-groups** privileged EXEC command to enable debugging of Internet Group Management Protocol (IGMP) maximum groups events. Use the **no** form of this command to disable debugging.

debug ip igmp max-groups

no debug ip igmp max-groups

Syntax Description This command has no arguments or keywords.

Defaults Debugging is disabled.

Command Modes Privileged EXEC

| Command History | Release | Modification |
|------------------------|----------------|------------------------------|
| | 12.1(14)AX | This command was introduced. |

Usage Guidelines The **undebug ip igmp max-groups** command is the same as the **no debug ip igmp max-groups** command.

| Related Commands | Command | Description |
|-------------------------|-----------------------|---|
| | show debugging | Displays information about the types of debugging that are enabled. |

debug ip igmp snooping

Use the **debug igmp snooping** privileged EXEC command to enable debugging of Internet Group Management Protocol (IGMP) snooping activity. Use the **no** form of this command to disable debugging.

debug ip igmp snooping [**group** | **management** | **router** | **timer**]

no debug ip igmp snooping [**group** | **management** | **router** | **timer**]

Syntax Description

| | |
|-------------------|--|
| group | (Optional) Display IGMP snooping group activity debug messages. |
| management | (Optional) Display IGMP snooping management activity debug messages. |
| router | (Optional) Display IGMP snooping router activity debug messages. |
| timer | (Optional) Display IGMP snooping timer event debug messages. |

Defaults

Debugging is disabled.

Command Modes

Privileged EXEC

Command History

| Release | Modification |
|------------|------------------------------|
| 12.1(14)AX | This command was introduced. |

Usage Guidelines

The **undebug ip igmp snooping** command is the same as the **no debug ip igmp snooping** command.

Related Commands

| Command | Description |
|---|---|
| debug platform ip igmp snooping | Displays information about platform-dependent IGMP snooping activity. |
| show debugging | Displays information about the types of debugging that are enabled. |

debug ip sla error twamp connection

Use the **debug ip sla error twamp connection** command in privileged EXEC mode to enable debugging output of Cisco IOS IP Service Level Agreements (SLAs) Two-Way Active Measurement Protocol (TWAMP) showing exceptions during communication between the TWAMP client and server. Use the **no** form of this command to disable debugging output.

debug ip sla error twamp connection [**source-ip** *ip-address*]

no debug ip sla error twamp connection [**source-ip** *ip-address*]

| | | |
|---------------------------|---------------------------------------|--|
| Syntax Description | source-ip <i>ip-address</i> | (Optional) Debug IP Performance Metrics (IPPM) TWAMP connections for the specified source. Specify the source using the IP address of the client device. |
|---------------------------|---------------------------------------|--|

| | |
|----------------------|-----------------|
| Command Modes | Privileged EXEC |
|----------------------|-----------------|

| | | |
|------------------------|----------------|------------------------------|
| Command History | Release | Modification |
| | 12.2(52)SE | This command was introduced. |

Usage Guidelines

The **debug ip sla error twamp connection** privileged EXEC command displays messages about the exceptions that occurred during TWAMP communications between the server and reflector.

The **undebug ip sla error twamp connection** command is the same as the **no debug ip sla error twamp connection** command.



Note

Use the **debug ip sla error twamp connection** command before using the **debug ip sla trace twamp connection** command because the **debug ip sla error twamp connection** command generates less debugging output.

The **debug ip sla error twamp connection** command is supported in IPv4 networks.

| | | |
|-------------------------|--|--|
| Related Commands | Command | Description |
| | debug ip sla error twamp control reflector | Displays exceptions during communication between the IP SLAs TWAMP server and reflector. |
| | debug ip sla error twamp control server | Displays exceptions during communication between the IP SLAs TWAMP server and reflector. |
| | debug ip sla error twamp session | Displays exceptions during communication between the IP SLAs TWAMP sender and reflector. |
| | debug ip sla trace twamp connection | Displays the normal communications between an IP SLAs TWAMP client and server. |

■ debug ip sla error twamp connection

| | |
|---|--|
| debug ip sla trace twamp control reflector | Displays the normal communications sent by an IP SLAs TWAMP reflector to the TWAMP server. |
| debug ip sla trace twamp control server | Displays the normal communications sent by an IP SLAs TWAMP server to the TWAMP reflector. |
| debug ip sla trace twamp session | Displays the normal communications between an IP SLAs TWAMP sender and reflector. |
| show debugging | Displays information about the types of debugging that are enabled. |

debug ip sla error twamp control reflector

Use the **debug ip sla error twamp control reflector** command in privileged EXEC mode to enable debugging output of Cisco IOS IP Service Level Agreements (SLAs) Two-Way Active Measurement Protocol (TWAMP) showing exceptions during communication between the TWAMP server and reflector. Use the **no** form of this command to disable debugging output.

debug ip sla error twamp control reflector

no debug ip sla error twamp control reflector

Syntax Description This command has no arguments or keywords.

Command Modes Privileged EXEC

| Command History | Release | Modification |
|-----------------|------------|------------------------------|
| | 12.2(52)SE | This command was introduced. |

Usage Guidelines The **debug ip sla error twamp control reflector** privileged EXEC command displays messages about exceptions that occurred during communications sent from the TWAMP session reflector to the TWAMP session server.



Note

Use the **debug ip sla error twamp control reflector** command before using the **debug ip sla trace twamp control reflector** command because the **debug ip sla error twamp control reflector** command generates less debugging output.

The **debug ip sla error twamp control reflector** command is supported in IPv4 networks.

The **undebug ip sla error twamp control reflector** command is the same as the **no debug ip sla error twamp control reflector** command.

| Related Commands | Command | Description |
|------------------|--|--|
| | debug ip sla error twamp connection | Displays exceptions during communication between the IP SLAs TWAMP client and server. |
| | debug ip sla error twamp control server | Displays exceptions during communication between the IP SLAs TWAMP server and reflector. |
| | debug ip sla error twamp session | Displays exceptions during communication between the IP SLAs TWAMP sender and reflector. |
| | debug ip sla trace twamp connection | Displays the normal communications between an IP SLAs TWAMP client and server. |
| | debug ip sla trace twamp control reflector | Displays the normal communications sent by an IP SLAs TWAMP reflector to the TWAMP server. |

■ debug ip sla error twamp control reflector

| | |
|--|--|
| debug ip sla trace twamp control server | Displays the normal communications sent by an IP SLAs TWAMP server to the TWAMP reflector. |
| debug ip sla trace twamp session | Displays the normal communications between an IP SLAs TWAMP sender and reflector. |
| show debugging | Displays information about the types of debugging that are enabled. |

debug ip sla error twamp control server

Use the **debug ip sla error twamp control server** command in privileged EXEC mode to enable debugging output of Cisco IOS IP Service Level Agreements (SLAs) Two-Way Active Measurement Protocol (TWAMP) exceptions during communication between the TWAMP server and reflector. Use the **no** form of this command to disable debugging output.

debug ip sla error twamp control server

no debug ip sla error twamp control server

Syntax Description This command has no arguments or keywords.

Command Modes Privileged EXEC

| Command History | Release | Modification |
|-----------------|------------|------------------------------|
| | 12.2(52)SE | This command was introduced. |

Usage Guidelines The **debug ip sla error twamp control server** privileged EXEC command displays messages about exceptions that occurred during communications sent from the TWAMP session server to the TWAMP session reflector.



Note Use the **debug ip sla error twamp control server** command before using the **debug ip sla trace twamp control server** command because the **debug ip sla error twamp control server** command generates less debugging output.

The **debug ip sla error twamp control server** command is supported in IPv4 networks.

The **undebug ip sla error twamp control server** command is the same as the **no debug ip sla error twamp control server** command.

| Related Commands | Command | Description |
|------------------|--|--|
| | debug ip sla error twamp connection | Displays exceptions during communication between the IP SLAs TWAMP client and server. |
| | debug ip sla error twamp control reflector | Displays exceptions during communication between the IP SLAs TWAMP server and reflector. |
| | debug ip sla error twamp session | Displays exceptions during communication between the IP SLAs TWAMP sender and reflector. |
| | debug ip sla trace twamp connection | Displays the normal communications between an IP SLAs TWAMP client and server. |
| | debug ip sla trace twamp control reflector | Displays the normal communications sent by an IP SLAs TWAMP reflector to the TWAMP server. |

■ **debug ip sla error twamp control server**

| | |
|--|--|
| debug ip sla trace twamp control server | Displays the normal communications sent by an IP SLAs TWAMP server to the TWAMP reflector. |
| debug ip sla trace twamp session | Displays the normal communications between an IP SLAs TWAMP sender and reflector. |
| show debugging | Displays information about the types of debugging that are enabled. |

debug ip sla error twamp session

Use the **debug ip sla error twamp session** command in privileged EXEC mode to enable debugging output of Cisco IOS IP Service Level Agreements (SLAs) Two-Way Active Measurement Protocol (TWAMP) showing exceptions during communication between the TWAMP sender and reflector. Use the **no** form of this command to disable debugging output.

debug ip sla error twamp session [source-ip *ip-address*]

no debug ip sla error twamp session [source-ip *ip-address*]

| | | |
|---------------------------|---------------------------------------|--|
| Syntax Description | source-ip <i>ip-address</i> | (Optional) Debug IP Performance Metrics (IPPM) TWAMP connections for the specified source. Specify the source using the IP address of the client device. |
|---------------------------|---------------------------------------|--|

| | |
|----------------------|-----------------|
| Command Modes | Privileged EXEC |
|----------------------|-----------------|

| | | |
|------------------------|----------------|------------------------------|
| Command History | Release | Modification |
| | 12.2(52)SE | This command was introduced. |

Usage Guidelines The **debug ip sla error twamp session** privileged EXEC command displays error messages about the communication between the TWAMP sender and reflector.



Note

Use the **debug ip sla error twamp session** command before using the **debug ip sla trace twamp session** command because the **debug ip sla error twamp session** command generates less debugging output.

The **debug ip sla error twamp session** command is supported in IPv4 networks.

The **undebug ip sla error twamp session** command is the same as the **no debug ip sla error twamp session** command.

| | | |
|-------------------------|--|--|
| Related Commands | Command | Description |
| | debug ip sla error twamp connection | Displays exceptions during communication between the IP SLAs TWAMP client and server. |
| | debug ip sla error twamp control reflector | Displays exceptions during communication between the IP SLAs TWAMP server and reflector. |
| | debug ip sla error twamp control server | Displays exceptions during communication between the IP SLAs TWAMP server and reflector. |
| | debug ip sla trace twamp connection | Displays the normal communications between an IP SLAs TWAMP client and server. |
| | debug ip sla trace twamp control reflector | Displays the normal communications sent by an IP SLAs TWAMP reflector to the TWAMP server. |

■ debug ip sla error twamp session

| | |
|--|--|
| debug ip sla trace twamp control server | Displays the normal communications sent by an IP SLAs TWAMP server to the TWAMP reflector. |
| debug ip sla trace twamp session | Displays the normal communications between an IP SLAs TWAMP sender and reflector. |
| show debugging | Displays information about the types of debugging that are enabled. |

debug ip sla trace twamp connection

Use the **debug ip sla trace twamp connection** command in privileged EXEC mode to display the normal communications between a Cisco IOS IP Service Level Agreements (SLAs) Two-Way Active Measurement Protocol (TWAMP) client and server. Use the **no** form of this command to disable debugging output.

```
debug ip sla trace twamp connection [source-ip ip-address]
```

```
no debug ip sla trace twamp connection [source-ip ip-address]
```

| | | |
|---------------------------|-----------------------------|---|
| Syntax Description | source-ip ip-address | (Optional) Debug IP Performance Metrics (IPPM) TWAMP connections for the specified source. Specify the source using the client device IP address. |
|---------------------------|-----------------------------|---|

| | |
|----------------------|-----------------|
| Command Modes | Privileged EXEC |
|----------------------|-----------------|

| | | |
|------------------------|----------------|------------------------------|
| Command History | Release | Modification |
| | 12.2(52)SE | This command was introduced. |

Usage Guidelines The **debug ip sla trace twamp connection** privileged EXEC command displays messages about normal communications between the client and server during a TWAMP session.



Note

Use the **debug ip sla error twamp connection** command before using the **debug ip sla trace twamp connection** command because the **debug ip sla error twamp connection** command generates less debugging output.

The **debug ip sla trace twamp connection** command is supported in IPv4 networks.

The **undebug ip sla trace twamp connection** command is the same as the **no debug ip sla trace twamp connection** command.

| | | |
|-------------------------|--|--|
| Related Commands | Command | Description |
| | debug ip sla error twamp connection | Displays exceptions during communication between the IP SLAs TWAMP client and server. |
| | debug ip sla error twamp control reflector | Displays exceptions during communication between the IP SLAs TWAMP server and reflector. |
| | debug ip sla error twamp control server | Displays exceptions during communication between the IP SLAs TWAMP server and reflector. |
| | debug ip sla error twamp session | Displays exceptions during communication between the IP SLAs TWAMP sender and reflector. |
| | debug ip sla trace twamp control reflector | Displays the normal communications sent by an IP SLAs TWAMP reflector to the TWAMP server. |

■ **debug ip sla trace twamp connection**

| | |
|--|--|
| debug ip sla trace twamp control server | Displays the normal communications sent by an IP SLAs TWAMP server to the TWAMP reflector. |
| debug ip sla trace twamp session | Displays the normal communications between an IP SLAs TWAMP sender and reflector. |
| show debugging | Displays information about the types of debugging that are enabled. |

debug ip sla trace twamp control reflector

Use the **debug ip sla trace twamp control reflector** command in privileged EXEC mode to enable debugging output of Cisco IOS IP Service Level Agreements (SLAs) Two-Way Active Measurement Protocol (TWAMP) normal communications between the TWAMP server and reflector. Use the **no** form of this command to disable debugging output.

debug ip sla trace twamp control reflector

no debug ip sla trace twamp control reflector

Syntax Description This command has no arguments or keywords.

Command Modes Privileged EXEC

| Command History | Release | Modification |
|-----------------|------------|------------------------------|
| | 12.2(52)SE | This command was introduced. |

Usage Guidelines The **debug ip sla trace twamp control reflector** privileged EXEC command displays messages about normal TWAMP session communications sent from the reflector to the server.



Note

Use the **debug ip sla error twamp control reflector** command before using the **debug ip sla trace twamp control reflector** command because the **debug ip sla error twamp control reflector** command generates less debugging output.

The **debug ip sla trace twamp control reflector** command is supported in IPv4 networks.

The **undebug ip sla trace twamp control reflector** command is the same as the **no debug ip sla trace twamp control reflector** command.

| Related Commands | Command | Description |
|------------------|--|--|
| | debug ip sla error twamp connection | Displays exceptions during communication between the IP SLAs TWAMP client and server. |
| | debug ip sla error twamp control reflector | Displays exceptions during communication between the IP SLAs TWAMP server and reflector. |
| | debug ip sla error twamp control server | Displays exceptions during communication between the IP SLAs TWAMP server and reflector. |
| | debug ip sla error twamp session | Displays exceptions during communication between the IP SLAs TWAMP sender and reflector. |
| | debug ip sla trace twamp connection | Displays the normal communications between an IP SLAs TWAMP client and server. |

■ **debug ip sla trace twamp control reflector**

| | |
|--|--|
| debug ip sla trace twamp control server | Displays the normal communications sent by an IP SLAs TWAMP server to the TWAMP reflector. |
| debug ip sla trace twamp session | Displays the normal communications between an IP SLAs TWAMP sender and reflector. |
| show debugging | Displays information about the types of debugging that are enabled. |

debug ip sla trace twamp control server

Use the **debug ip sla trace twamp control server** command in privileged EXEC mode to enable debugging output of Cisco IOS IP Service Level Agreements (SLAs) Two-Way Active Measurement Protocol (TWAMP) normal communications between the TWAMP server and reflector. Use the **no** form of this command to disable debugging output.

debug ip sla trace twamp control server

no debug ip sla trace twamp control server

Syntax Description This command has no arguments or keywords.

Command Modes Privileged EXEC

| Command History | Release | Modification |
|-----------------|------------|------------------------------|
| | 12.2(52)SE | This command was introduced. |

Usage Guidelines The **debug ip sla trace twamp control server** privileged EXEC command displays messages about normal TWAMP session communications sent from the server to the reflector.



Note

Use the **debug ip sla error twamp control server** command before using the **debug ip sla trace twamp control server** command because the **debug ip sla error twamp control server** command generates less debugging output.

The **debug ip sla trace twamp control server** command is supported in IPv4 networks.

The **undebug ip sla trace twamp control server** command is the same as the **no debug ip sla trace twamp control server** command.

| Related Commands | Command | Description |
|------------------|---|--|
| | debug ip sla error twamp connection | Displays exceptions during communication between the IP SLAs TWAMP client and server. |
| | debug ip sla error twamp control reflector | Displays exceptions during communication between the IP SLAs TWAMP server and reflector. |
| | debug ip sla error twamp control server | Displays exceptions during communication between the IP SLAs TWAMP server and reflector. |
| | debug ip sla error twamp session | Displays exceptions during communication between the IP SLAs TWAMP sender and reflector. |
| | debug ip sla trace twamp connection | Displays the normal communications between an IP SLAs TWAMP client and server. |

■ **debug ip sla trace twamp control server**

| | |
|---|--|
| debug ip sla trace twamp control reflector | Displays the normal communications sent by an IP SLAs TWAMP reflector to the TWAMP server. |
| debug ip sla trace twamp session | Displays the normal communications between an IP SLAs TWAMP sender and reflector. |
| show debugging | Displays information about the types of debugging that are enabled. |

debug ip sla trace twamp session

Use the **debug ip sla trace twamp session** command in privileged EXEC mode to enable debugging output of Cisco IOS IP Service Level Agreements (SLAs) Two-Way Active Measurement Protocol (TWAMP) normal session communication between the TWAMP sender and reflector. Use the **no** form of this command to disable debugging output.

```
debug ip sla trace twamp session [source-ip ip-address | source-port port-number]
```

```
no debug ip sla trace twamp session [source-ip ip-address | source-port port-number]
```

| Syntax Description | Parameter | Description |
|--------------------|--|---|
| | source-ip <i>ip-address</i> | (Optional) Debug IP Performance Metrics (IPPM) TWAMP connections for the specified source. Specify the source using the client device IP address. |
| | source-port <i>port-number</i> | (Optional) Debug IP Performance Metrics (IPPM) TWAMP connections for the specified port. |

Command Modes Privileged EXEC

| Command History | Release | Modification |
|-----------------|------------|------------------------------|
| | 12.2(52)SE | This command was introduced. |

Usage Guidelines The **debug ip sla trace twamp session** privileged EXEC command displays normal session communication between the TWAMP sender and reflector.



Note

Use the **debug ip sla error twamp session** command before using the **debug ip sla trace twamp session** command because the **debug ip sla error twamp session** command generates less debugging output.

The **debug ip sla trace twamp session** command is supported in IPv4 networks.

The **undebg ip sla trace twamp session** command is the same as the **no debug ip sla trace twamp session** command.

| Related Commands | Command | Description |
|------------------|--|--|
| | debug ip sla error twamp connection | Displays exceptions during communication between the IP SLAs TWAMP client and server. |
| | debug ip sla error twamp control reflector | Displays exceptions during communication between the IP SLAs TWAMP server and reflector. |
| | debug ip sla error twamp control server | Displays exceptions during communication between the IP SLAs TWAMP server and reflector. |
| | debug ip sla error twamp session | Displays exceptions during communication between the IP SLAs TWAMP sender and reflector. |

■ debug ip sla trace twamp session

| | |
|---|--|
| debug ip sla trace twamp connection | Displays the normal communications between an IP SLAs TWAMP client and server. |
| debug ip sla trace twamp control reflector | Displays the normal communications sent by an IP SLAs TWAMP reflector to the TWAMP server. |
| debug ip sla trace twamp control server | Displays the normal communications sent by an IP SLAs TWAMP server to the TWAMP reflector. |
| show debugging | Displays information about the types of debugging that are enabled. |

debug ip verify source packet

Use the **debug ip verify source packet** privileged EXEC command to enable debugging of IP source guard. Use the **no** form of this command to disable debugging.

debug ip verify source packet

no debug ip verify source packet

Syntax Description This command has no arguments or keywords.

Defaults Debugging is disabled.

Command Modes Privileged EXEC

| Command History | Release | Modification |
|-----------------|------------|------------------------------|
| | 12.2(25)EY | This command was introduced. |

Usage Guidelines The **undebug ip verify source packet** command is the same as the **no debug ip verify source packet** command.

| Related Commands | Command | Description |
|------------------|-----------------------|---|
| | show debugging | Displays information about the types of debugging that are enabled. |

debug lacp

Use the **debug lacp privileged EXEC** command to enable debugging of Link Aggregation Control Protocol (LACP) activity. Use the **no** form of this command to disable debugging.

debug lacp [**all** | **event** | **fsm** | **misc** | **packet**]

no debug lacp [**all** | **event** | **fsm** | **misc** | **packet**]

Syntax Description

| | |
|---------------|--|
| all | (Optional) Display all LACP debug messages. |
| event | (Optional) Display LACP event debug messages. |
| fsm | (Optional) Display LACP finite state-machine debug messages. |
| misc | (Optional) Display miscellaneous LACP debug messages. |
| packet | (Optional) Display LACP packet debug messages. |

Defaults

Debugging is disabled.

Command Modes

Privileged EXEC

Command History

| Release | Modification |
|------------|------------------------------|
| 12.1(14)AX | This command was introduced. |

Usage Guidelines

The **undebug lacp** command is the same as the **no debug lacp** command.

Related Commands

| Command | Description |
|-----------------------|---|
| show debugging | Displays information about the types of debugging that are enabled. |
| show lacp | Displays LACP channel-group information. |

debug mac-notification

Use the **debug mac-notification** privileged EXEC command to enable debugging of MAC notification events. Use the **no** form of this command to disable debugging.

debug mac-notification

no debug mac-notification

Syntax Description This command has no arguments or keywords.

Defaults Debugging is disabled.

Command Modes Privileged EXEC

| Command History | Release | Modification |
|-----------------|------------|------------------------------|
| | 12.1(14)AX | This command was introduced. |

Usage Guidelines The **undebg mac-notification** command is the same as the **no debug mac-notification** command.

| Related Commands | Command | Description |
|------------------|--|--|
| | show debugging | Displays information about the types of debugging that are enabled. |
| | show mac address-table notification | Displays the MAC address notification information for all interfaces or the specified interface. |

debug matm

Use the **debug matm** privileged EXEC command to enable debugging of platform-independent MAC address management. Use the **no** form of this command to disable debugging.

debug matm

no debug matm

Syntax Description This command has no arguments or keywords.

Defaults Debugging is disabled.

Command Modes Privileged EXEC

| Command History | Release | Modification |
|-----------------|------------|------------------------------|
| | 12.1(14)AX | This command was introduced. |

Usage Guidelines The **undebug matm** command is the same as the **no debug matm** command.

| Related Commands | Command | Description |
|------------------|-------------------------------------|---|
| | debug platform matm | Displays information about platform-dependent MAC address management. |
| | show debugging | Displays information about the types of debugging that are enabled. |

debug matm move update

Use the **debug matm move update** privileged EXEC command to enable debugging of MAC address-table move update message processing.

debug matm move update

no debug matm move update

Syntax Description This command has no arguments or keywords.

Defaults Debugging is disabled.

Command Modes Privileged EXEC

| Command History | Release | Modification |
|-----------------|-------------|------------------------------|
| | 12.2(25)SED | This command was introduced. |

Usage Guidelines The **undebg matm move update** command is the same as the **no debug matm move update** command.

| Related Commands | Command | Description |
|------------------|--|---|
| | mac address-table move update | Configures MAC address-table move update feature on the switch. |
| | show debugging | Displays information about the types of debugging that are enabled. |
| | show mac address-table move update | Displays the MAC address-table move update information on the switch. |

debug monitor

Use the **debug monitor** privileged EXEC command to enable debugging of the Switched Port Analyzer (SPAN) feature. Use the **no** form of this command to disable debugging.

debug monitor { **all** | **errors** | **idb-update** | **info** | **list** | **notifications** | **platform** | **requests** | **snmp** }

no debug monitor { **all** | **errors** | **idb-update** | **info** | **list** | **notifications** | **platform** | **requests** | **snmp** }

Syntax Description

| | |
|----------------------|--|
| all | Display all SPAN debug messages. |
| errors | Display detailed SPAN error debug messages. |
| idb-update | Display SPAN interface description block (IDB) update-trace debug messages. |
| info | Display SPAN informational-tracing debug messages. |
| list | Display SPAN port and VLAN-list tracing debug messages. |
| notifications | Display SPAN notification debug messages. |
| platform | Display SPAN platform-tracing debug messages. |
| requests | Display SPAN request debug messages. |
| snmp | Display SPAN and Simple Network Management Protocol (SNMP) tracing debug messages. |

Defaults

Debugging is disabled.

Command Modes

Privileged EXEC

Command History

| Release | Modification |
|------------|------------------------------|
| 12.1(14)AX | This command was introduced. |

Usage Guidelines

The **undebug monitor** command is the same as the **no debug monitor** command.

Related Commands

| Command | Description |
|-----------------------|---|
| show debugging | Displays information about the types of debugging that are enabled. |
| show monitor | Displays information about all SPAN and remote SPAN (RSPAN) sessions on the switch. |

debug mpls atom

Use the **debug mpls atom** privileged EXEC command to enable debugging of the Any Transport over multiprotocol label switching (AToM) layer. Use the **no** form of this command to disable debugging.

debug mpls atom

no debug mpls atom



Note

The Catalyst 3750 Metro switch supports Ethernet over MPLS (EoMPLS), a subset of AToM.

Syntax Description

This command has no arguments or keywords.

Defaults

Debugging is disabled.

Command Modes

Privileged EXEC

Command History

| Release | Modification |
|------------|------------------------------|
| 12.1(14)AX | This command was introduced. |

Related Commands

| Command | Description |
|---|---|
| debug mpls l2transport vlan | Enables debugging of EoMPLS Layer 2 VLANs. |
| show debugging | Displays information about the types of debugging that are enabled. |

debug mpls l2transport vlan

Use the **debug mpls l2transport vlan** privileged EXEC command to enable debugging of the Ethernet over multiprotocol label switching (EoMPLS) Layer 2 VLANs. Use the **no** form of this command to disable debugging.

debug mpls l2transport vlan { control | distributed | switching }

no debug mpls l2transport vlan { control | distributed | switching }

Syntax Description

| | |
|--------------------|--|
| control | Display EoMPLS traffic control plane debug messages. |
| distributed | Display EoMPLS traffic distributed switching control debug messages. |
| switching | Display EoMPLS traffic packet switching debug messages. |

Defaults

Debugging is disabled.

Command Modes

Privileged EXEC

Command History

| Release | Modification |
|------------|------------------------------|
| 12.1(14)AX | This command was introduced. |

Related Commands

| Command | Description |
|--|---|
| debug mpls atom | Enables debugging of the Any Transport over multiprotocol label switching (AToM) layer. |
| show debugging | Displays information about the types of debugging that are enabled. |
| show mpls l2transport vc | Displays information about the Ethernet over MPLS (EoMPLS) virtual circuits (VCs). |

debug mvrdbg

Use the **debug mvrdbg** privileged EXEC command to enable debugging of Multicast VLAN Registration (MVR). Use the **no** form of this command to disable debugging.

```
debug mvrdbg {all | events | igmpsn | management | ports}
```

```
no debug mvrdbg {all | events | igmpsn | management | ports}
```

| Syntax Description | all | Display all MVR activity debug messages. |
|--------------------|------------|---|
| | events | Display MVR event-handling debug messages. |
| | igmpsn | Display MVR Internet Group Management Protocol (IGMP) snooping-activity debug messages. |
| | management | Display MVR management-activity debug messages. |
| | ports | Display MVR port debug messages. |

Defaults Debugging is disabled.

Command Modes Privileged EXEC

| Command History | Release | Modification |
|-----------------|------------|------------------------------|
| | 12.1(14)AX | This command was introduced. |

Usage Guidelines The **undebug mvrdbg** command is the same as the **no debug mvrdbg** command.

| Related Commands | Command | Description |
|------------------|-----------------------|---|
| | show debugging | Displays information about the types of debugging that are enabled. |
| | show mvr | Displays the current MVR configuration. |

debug nvram

Use the **debug nvram** privileged EXEC command to enable debugging of NVRAM activity. Use the **no** form of this command to disable debugging.

debug nvram

no debug nvram

Syntax Description This command has no arguments or keywords.

Defaults Debugging is disabled.

Command Modes Privileged EXEC

| Command History | Release | Modification |
|-----------------|------------|------------------------------|
| | 12.1(14)AX | This command was introduced. |

Usage Guidelines The **undebug nvram** command is the same as the **no debug nvram** command.

| Related Commands | Command | Description |
|------------------|-----------------------|---|
| | show debugging | Displays information about the types of debugging that are enabled. |

debug pagp

Use the **debug pagp privileged EXEC** command to enable debugging of Port Aggregation Protocol (PAgP) activity. Use the **no** form of this command to disable debugging.

debug pagp [**all** | **event** | **fsm** | **misc** | **packet**]

no debug pagp [**all** | **event** | **fsm** | **misc** | **packet**]

| Syntax Description | | |
|--------------------|---------------|--|
| | all | (Optional) Display all PAgP debug messages. |
| | event | (Optional) Display PAgP event debug messages. |
| | fsm | (Optional) Display PAgP finite state-machine debug messages. |
| | misc | (Optional) Display miscellaneous PAgP debug messages. |
| | packet | (Optional) Display PAgP packet debug messages. |

Defaults Debugging is disabled.

Command Modes Privileged EXEC

| Command History | Release | Modification |
|-----------------|------------|------------------------------|
| | 12.1(14)AX | This command was introduced. |

Usage Guidelines The **undebug pagp** command is the same as the **no debug pagp** command.

| Related Commands | Command | Description |
|------------------|-----------------------|---|
| | show debugging | Displays information about the types of debugging that are enabled. |
| | show pagp | Displays PAgP channel-group information. |

debug platform acl

Use the **debug platform acl** privileged EXEC command to enable debugging of the access control list (ACL) manager. Use the **no** form of this command to disable debugging.

```
debug platform acl {all | exit | label | main | racl | vacl | vmap | warn}
```

```
no debug platform acl {all | exit | label | main | racl | vacl | vmap | warn}
```

Syntax Description

| | |
|--------------|---|
| all | Display all ACL manager debug messages. |
| exit | Display ACL exit-related debug messages. |
| label | Display ACL label-related debug messages. |
| main | Display the main or important ACL debug messages. |
| racl | Display router ACL related debug messages. |
| vacl | Display VLAN ACL-related debug messages. |
| vmap | Display ACL VLAN-map-related debug messages. |
| warn | Display ACL warning-related debug messages. |



Note

Though visible in the command-line help strings, the **stack** keyword is not supported.

Defaults

Debugging is disabled.

Command Modes

Privileged EXEC

Command History

| Release | Modification |
|------------|------------------------------|
| 12.1(14)AX | This command was introduced. |

Usage Guidelines

The **undebug platform acl** command is the same as the **no debug platform acl** command.

Related Commands

| Command | Description |
|-----------------------|---|
| show debugging | Displays information about the types of debugging that are enabled. |

debug platform backup interface

Use the **debug platform backup interface** privileged EXEC command to enable debugging of the Flex Links platform backup interface. Use the **no** form of this command to disable debugging.

debug platform backup interface

no debug platform backup interface

Syntax Description This command has no arguments or keywords.

Command Default Platform backup interface debugging is disabled.

Command Modes Privileged EXEC

| Command History | Release | Modification |
|-----------------|------------|------------------------------|
| | 12.2(25)EY | This command was introduced. |

Usage Guidelines The **undebg platform backup interface** command is the same as the **no platform debug backup interface** command.

| Related Commands | Command | Description |
|------------------|-----------------------|---|
| | show debugging | Displays information about the types of debugging that are enabled. |

debug platform cfm

Use the **debug platform cfm** privileged EXEC command to enable debugging of the Ethernet Connectivity Fault Management (CFM) service. Use the **no** form of this command to disable debugging.

debug platform cfm

no debug platform cfm

Syntax Description This command has no arguments or keywords.

Defaults Debugging is disabled.

Command Modes Privileged EXEC

| Command History | Release | Modification |
|-----------------|-------------|------------------------------|
| | 12.2(25)SEG | This command was introduced. |

Usage Guidelines CFM is an end-to-end per-service-instance Ethernet layer operation, administration, and management (OAM) protocol that provides connectivity monitoring, fault verification, and fault isolation for large Ethernet networks.

The **undebug platform cfm** command is the same as the **no debug platform cfm** command.

| Related Commands | Command | Description |
|------------------|-----------------------|---|
| | show debugging | Displays information about the types of debugging that are enabled. |

debug platform cpu-queues

Use the **debug platform cpu-queues** privileged EXEC command to enable debugging of platform CPU receive queues. Use the **no** form of this command to disable debugging.

```
debug platform cpu-queues { broadcast-q | cbt-to-spt-q | cpuhub-q | host-q | icmp-q |
  igmp-snooping-q | layer2-protocol-q | logging-q | remote-console-q | routing-protocol-q |
  rpffail-q | software-fwd-q | stp-q }
```

```
no debug platform cpu-queues { broadcast-q | cbt-to-spt-q | cpuhub-q | host-q | icmp-q |
  igmp-snooping-q | layer2-protocol-q | logging-q | remote-console-q | routing-protocol-q |
  rpffail-q | software-fwd-q | stp-q }
```

| Syntax Description | | |
|---------------------------|--|--|
| broadcast-q | Display debug messages about packets received by the broadcast queue. | |
| cbt-to-spt-q | Display debug messages about packets received by the core-based tree to shortest-path tree (cbt-to-spt) queue. | |
| cpuhub-q | Display debug messages about packets received by the CPU heartbeat queue. | |
| host-q | Display debug messages about packets received by the host queue. | |
| icmp-q | Display debug messages about packets received by the Internet Control Message Protocol (ICMP) queue. | |
| igmp-snooping-q | Display debug messages about packets received by the Internet Group Management Protocol (IGMP)-snooping queue. | |
| layer2-protocol-q | Display debug messages about packets received by the Layer 2 protocol queue. | |
| logging-q | Display debug messages about packets received by the logging queue. | |
| remote-console-q | Display debug messages about packets received by the remote console queue. | |
| routing-protocol-q | Display debug messages about packets received by the routing protocol queue. | |
| rpffail-q | Display debug messages about packets received by the reverse path forwarding (RFP) failure queue. | |
| software-fwd-q | Debug packets received by the software forwarding queue. | |
| stp-q | Debug packets received by the Spanning Tree Protocol (STP) queue. | |

Defaults Debugging is disabled.

Command Modes Privileged EXEC

| Command History | Release | Modification |
|-----------------|------------|------------------------------|
| | 12.1(14)AX | This command was introduced. |

Usage Guidelines The **undebg platform cpu-queues** command is the same as the **no debug platform cpu-queues** command.

■ debug platform cpu-queues

| Related Commands | Command | Description |
|-------------------------|-----------------------|---|
| | show debugging | Displays information about the types of debugging that are enabled. |

debug platform dot1ad

To enable debugging of IEEE 802.1ad tagging, use the **debug platform dot1ad** privileged EXEC command. To disable debugging, use the **no** form of the command.

debug platform dot1ad [error | events | receive | transmit]

no debug platform dot1ad [error | events | receive | transmit]

Syntax Description

| | |
|-----------------|--|
| error | Displays 802.1ad error messages. |
| events | Displays 802.1ad event debug messages. |
| receive | Displays 802.1ad receive debug messages. |
| transmit | Displays 802.1ad sent debug messages. |

Defaults

Debugging is disabled.

Command Modes

Privileged EXEC

Command History

| Release | Modification |
|------------|------------------------------|
| 12.2(54)SE | This command was introduced. |

Usage Guidelines

The **undebg platform dot1ad** command is the same as the **no debug platform dot1ad** command. When you enter **debug platform dot1ad** with no keywords, all 802.1ad debug messages appear.

Related Commands

| Command | Description |
|-----------------------|--|
| show debugging | Displays information about the enabled types of debugging. |

debug platform dot1x

Use the **debug platform dot1x** privileged EXEC command to enable debugging of 802.1x events. Use the **no** form of this command to disable debugging.

debug platform dot1x { **initialization** | **interface-configuration** | **rpc** }

no debug platform dot1x { **initialization** | **interface-configuration** | **rpc** }

Syntax Description

| | |
|--------------------------------|--|
| initialization | Display 802.1x initialization sequence debug messages. |
| interface-configuration | Display 802.1x interface configuration-related debug messages. |
| rpc | Display 802.1x remote procedure call (RPC) request debug messages. |

Defaults

Debugging is disabled.

Command Modes

Privileged EXEC

Command History

| Release | Modification |
|------------|------------------------------|
| 12.1(14)AX | This command was introduced. |

Usage Guidelines

The **undebug platform dot1x** command is the same as the **no debug platform dot1x** command.

Related Commands

| Command | Description |
|-----------------------|---|
| show debugging | Displays information about the types of debugging that are enabled. |

debug platform etherchannel

Use the **debug platform etherchannel** privileged EXEC command to enable debugging of platform-dependent EtherChannel events. Use the **no** form of this command to disable debugging.

```
debug platform etherchannel {init | link-up | rpc-detailed | rpc-generic | warnings}
```

```
no debug platform etherchannel {init | link-up | rpc-detailed | rpc-generic | warnings}
```

Syntax Description

| | |
|---------------------|---|
| init | Display EtherChannel module initialization debug messages. |
| link-up | Display EtherChannel link-up and link-down related debug messages. |
| rpc-detailed | Display detailed EtherChannel remote procedure call (RPC) debug messages. |
| rpc-generic | Display EtherChannel RPC generic debug messages. |
| warnings | Display EtherChannel warning debug messages. |

Defaults

Debugging is disabled.

Command Modes

Privileged EXEC

Command History

| Release | Modification |
|------------|------------------------------|
| 12.1(14)AX | This command was introduced. |

Usage Guidelines

The **undebg platform etherchannel** command is the same as the **no debug platform etherchannel** command.

Related Commands

| Command | Description |
|-----------------------|---|
| show debugging | Displays information about the types of debugging that are enabled. |

debug platform fallback-bridging

Use the **debug platform fallback-bridging** privileged EXEC command to enable debugging of the platform-dependent fallback bridging manager. Use the **no** form of this command to disable debugging.

debug platform fallback-bridging [**error** | **retry** | **rpc** {**events** | **messages**}]

no debug platform fallback-bridging [**error** | **retry** | **rpc** {**events** | **messages**}]

Syntax Description

| | |
|--|--|
| error | (Optional) Display fallback bridging manager error condition debug messages. |
| retry | (Optional) Display fallback bridging manager retry debug messages. |
| rpc { events messages } | (Optional) Display fallback bridging debugging information. The keywords have these meanings: <ul style="list-style-type: none"> • events—Display remote procedure call (RPC) events. • messages—Display RPC messages. |

Defaults

Debugging is disabled.

Command Modes

Privileged EXEC

Command History

| Release | Modification |
|------------|------------------------------|
| 12.1(14)AX | This command was introduced. |

Usage Guidelines

If you do not specify a keyword, all fallback bridging manager debug messages are displayed. The **undebug platform fallback-bridging** command is the same as the **no debug platform fallback-bridging** command.

Related Commands

| Command | Description |
|-----------------------|---|
| show debugging | Displays information about the types of debugging that are enabled. |

debug platform forw-tcam

Use the **debug platform forw-tcam** privileged EXEC command to enable debugging of the forwarding ternary content addressable memory (TCAM) manager. Use the **no** form of this command to disable debugging.

debug platform forw-tcam [**adjustment** | **allocate** | **audit** | **error** | **move** | **read** | **write**]

no debug platform forw-tcam [**adjustment** | **allocate** | **audit** | **error** | **move** | **read** | **write**]

Syntax Description

| | |
|-------------------|--|
| adjustment | (Optional) Display TCAM manager-adjustment debug messages. |
| allocate | (Optional) Display TCAM manager-allocation debug messages. |
| audit | (Optional) Display TCAM manager-audit debug messages. |
| error | (Optional) Display TCAM manager-error debug messages. |
| move | (Optional) Display TCAM manager-move debug messages. |
| read | (Optional) Display TCAM manager-read debug messages. |
| write | (Optional) Display TCAM manager-write debug messages. |

Defaults

Debugging is disabled.

Command Modes

Privileged EXEC

Command History

| Release | Modification |
|------------|------------------------------|
| 12.1(14)AX | This command was introduced. |

Usage Guidelines

If you do not specify a keyword, all forwarding TCAM manager debug messages are displayed.

The **undebg platform forw-tcam** command is the same as the **no debug platform forw-tcam** command.

Related Commands

| Command | Description |
|-----------------------|---|
| show debugging | Displays information about the types of debugging that are enabled. |

debug platform ip arp inspection

Use the **debug platform ip arp inspection** privileged EXEC command to debug dynamic Address Resolution Protocol (ARP) inspection events. Use the **no** form of this command to disable debugging.

debug platform ip arp inspection {all | error | event | packet | rpc}

no debug platform ip arp inspection {all | error | event | packet | rpc}

Syntax Description

| | |
|---------------|--|
| all | Display all dynamic ARP inspection debug messages. |
| error | Display dynamic ARP inspection error debug messages. |
| event | Display dynamic ARP inspection event debug messages. |
| packet | Display dynamic ARP inspection packet-related debug messages. |
| rpc | Display dynamic ARP inspection remote procedure call (RPC) request debug messages. |

Defaults

Debugging is disabled.

Command Modes

Privileged EXEC

Command History

| Release | Modification |
|------------|------------------------------|
| 12.2(25)EY | This command was introduced. |

Usage Guidelines

The **undebug platform ip arp inspection** command is the same as the **no debug platform ip arp inspection** command.

When you enable debugging, it is enabled only on the stack master. To enable debugging on a stack member, you can start a session from the stack master by using the **session switch-number** privileged EXEC command. Then enter the **debug** command at the command-line prompt of the stack member. You also can use the **remote command stack-member-number LINE** privileged EXEC command on the stack master switch to enable debugging on a member switch without first starting a session.

Related Commands

| Command | Description |
|--|--|
| show ip arp inspection | Displays the dynamic ARP inspection configuration and operating state. |
| show debugging | Displays information about the types of debugging that are enabled. |

debug platform ip igmp snooping

Use the **debug platform ip igmp snooping** privileged EXEC command to enable debugging of platform-dependent Internet Group Management Protocol (IGMP) snooping. Use the **no** form of this command to disable debugging.

```
debug platform ip igmp snooping {all | di | error | event | group | mgmt | pak | retry | rpc | warn}
```

```
debug platform ip igmp snooping di [grant | leave | rx | sync | tx | ucast]
```

```
debug platform ip igmp snooping pak {ip-address | error | ipopt | leave | query | report | rx | svi | tx}
```

```
debug platform ip igmp snooping rpc [cfg | l3mm | misc | vlan]
```

```
no debug platform ip igmp snooping {all | di | error | event | group | mgmt | pak | retry | rpc | warn}
```

| Syntax Description | |
|---|---|
| all | Display all IGMP snooping debug messages. |
| di | Display IGMP snooping destination index (DI) coordination remote procedure call (RPC) debug messages. <ul style="list-style-type: none"> • grant—(Optional) Display all IGMP snooping grant request RPC events. • leave—(Optional) Display all IGMP snooping leave request RPC events. • rx—(Optional) Display all IGMP snooping DI receive RPC messages. • sync—(Optional) Display all IGMP snooping DI sync update messages. • tx—(Optional) Display all IGMP snooping DI sent RPC messages. • ucast—(Optional) Display all IGMP snooping DI unicast request RPC messages. |
| error | Display IGMP snooping error messages. |
| event | Display IGMP snooping event debug messages. |
| group | Display IGMP snooping group debug messages. |
| mgmt | Display IGMP snooping management debug messages. |
| pak { <i>ip-address</i> error ipopt leave query report rx svi tx } | Display IGMP snooping packet event debug messages. The keywords have these meanings: <ul style="list-style-type: none"> • <i>ip-address</i>—IP address of the IGMP group. • error—Display IGMP snooping packet error debug messages. • ipopt—Display IGMP snooping IP bridging options debug messages. • leave—Display IGMP snooping leave debug messages. • query—Display IGMP snooping query debug messages. • report—Display IGMP snooping report debug messages. • rx—Display IGMP snooping received packet debug messages. • svi—Display IGMP snooping switched virtual interface (SVI) packet debug messages. • tx—Display IGMP snooping sent packet debug messages. |

debug platform ip igmp snooping

| | |
|---------------------------------------|--|
| retry | Display IGMP snooping retry debug messages. |
| rpc [cfg l3mm misc vlan] | Display IGMP snooping remote procedure call (RPC) event debug messages. The keywords have these meanings: <ul style="list-style-type: none"> • cfg—(Optional) Display IGMP snooping RPC debug messages. • l3mm—(Optional) IGMP snooping Layer 3 multicast router group RPC debug messages. • misc—(Optional) IGMP snooping miscellaneous RPC debug messages. • vlan—(Optional) IGMP snooping VLAN assert RPC debug messages. |
| warn | Display IGMP snooping warning messages. |

Defaults Debugging is disabled.

Command Modes Privileged EXEC

| Command History | Release | Modification |
|-----------------|------------|------------------------------|
| | 12.1(14)AX | This command was introduced. |

Usage Guidelines The **undebug platform ip igmp snooping** command is the same as the **no debug platform ip igmp snooping** command.

| Related Commands | Command | Description |
|------------------|--|---|
| | debug ip igmp snooping | Displays information about platform-independent IGMP snooping activity. |
| | show debugging | Displays information about the types of debugging that are enabled. |

debug platform ip multicast

Use the **debug platform ip multicast** privileged EXEC command to enable debugging of IP multicast routing. Use the **no** form of this command to disable debugging.

```
debug platform ip multicast {all | mdb | mdfs-rp-retry | midb | mroute-rp | resources | retry |
rpf-throttle | snoop-events | software-forward | swidb-events | vlan-locks}
```

```
no debug platform ip multicast {all | mdb | mdfs-rp-retry | midb | mroute-rp | resources | retry
| rpf-throttle | snoop-events | software-forward | swidb-events | vlan-locks}
```

| Syntax Description | |
|-------------------------|--|
| all | Display all platform IP-multicast event debug messages. Note Using this command can degrade the performance of the switch. |
| mdb | Display IP-multicast debug messages for multicast distributed fast switching (MDFS) multicast descriptor block (mdb) events. |
| mdfs-rp-retry | Display IP-multicast MDFS rendezvous point (RP) retry event debug messages. |
| midb | Display IP-multicast MDFS multicast interface descriptor block (MIDB) debug messages. |
| mroute-rp | Display IP-multicast RP event debug messages. |
| resources | Display IP-multicast hardware resource debug messages. |
| retry | Display IP-multicast retry processing event debug messages. |
| rpf-throttle | Display IP-multicast reverse path forwarding (RPF) throttle event debug messages. |
| snoop-events | Display IP-multicast IGMP snooping event debug messages. |
| software-forward | Display IP-multicast software forwarding event debug messages. |
| swidb-events | Display IP-multicast MDFS software interface descriptor block (swidb) or global event debug messages. |
| vlan-locks | Display IP-multicast VLAN lock and unlock event debug messages. |

Defaults Debugging is disabled.

Command Modes Privileged EXEC

| Command History | Release | Modification |
|-----------------|------------|------------------------------|
| | 12.1(14)AX | This command was introduced. |

Usage Guidelines The **undebug platform ip multicast** command is the same as the **no debug platform ip multicast** command.

■ debug platform ip multicast

| Related Commands | Command | Description |
|------------------|----------------|---|
| | show debugging | Displays information about the types of debugging that are enabled. |

debug platform ip unicast

Use the **debug platform ip unicast** privileged EXEC command to enable debugging of platform-dependent IP unicast routing. Use the **no** form of this command to disable debugging.

```
debug platform ip unicast {adjacency | all | arp | dhcp | errors | events | interface | mpath |
registries | retry | route | rpc | standby | statistics}
```

```
no debug platform ip unicast {adjacency | all | arp | dhcp | errors | events | interface | mpath |
registries | retry | route | rpc | standby | statistics}
```

| Syntax Description | |
|--------------------|---|
| adjacency | Display IP unicast routing adjacency programming event debug messages. |
| all | Display all platform IP unicast routing debug messages. Note Using this command can degrade the performance of the switch. |
| arp | Display IP unicast routing Address Resolution Protocol (ARP) and ARP throttling debug messages. |
| dhcp | Display IP unicast routing DHCP dynamic address-related event debug messages. |
| errors | Display all IP unicast routing error debug messages, including resource allocation failures. |
| events | Display all IP unicast routing event debug messages, including registry and miscellaneous events. |
| interface | Display IP unicast routing interface event debug messages. |
| mpath | Display IP unicast routing multi-path adjacency programming event debug messages (present when performing equal or unequal cost routing). |
| registries | Display IP unicast routing forwarding information database (FIB), adjacency add, update, and delete registry event debug messages. |
| retry | Display IP unicast routing reprogram FIBs with ternary content addressable memory (TCAM) allocation failure debug messages. |
| route | Display IP unicast routing FIB TCAM programming event debug messages. |
| rpc | Display IP unicast routing Layer 3 unicast remote procedure call (RPC) interaction debug messages. |
| standby | Display IP unicast routing standby event debug messages, helpful in troubleshooting Hot Standby Routing Protocol (HSRP) issues. |
| statistics | Display IP unicast routing statistics gathering-related event debug messages. |

Defaults Debugging is disabled.

Command Modes Privileged EXEC

| Command History | Release | Modification |
|-----------------|------------|------------------------------|
| | 12.1(14)AX | This command was introduced. |

■ **debug platform ip unicast**

Usage Guidelines The **undebug platform ip unicast** command is the same as the **no debug platform ip unicast** command.

Related Commands

| Command | Description |
|-----------------------|---|
| show debugging | Displays information about the types of debugging that are enabled. |

debug platform led

Use the **debug platform led** privileged EXEC command to enable debugging of LED actions. Use the **no** form of this command to disable debugging.

```
debug platform led {generic | signal}
```

```
no debug platform led {generic | signal}
```

Syntax Description

| | |
|----------------|--|
| generic | Display LED generic action debug messages. |
| signal | Display LED signal bit map debug messages. |



Note

Though visible in the command-line help strings, the **stack** keyword is not supported.

Defaults

Debugging is disabled.

Command Modes

Privileged EXEC

Command History

| Release | Modification |
|------------|------------------------------|
| 12.1(14)AX | This command was introduced. |

Usage Guidelines

The **undebug platform led** command is the same as the **no debug platform led** command.

Related Commands

| Command | Description |
|-----------------------|---|
| show debugging | Displays information about the types of debugging that are enabled. |

debug platform matm

Use the **debug platform matm** privileged EXEC command to enable debugging of platform-dependent MAC address management. Use the **no** form of this command to disable debugging.

```
debug platform matm { aging | all | ec-aging | errors | learning | rpc | secure-address | warnings }
```

```
no debug platform matm { aging | all | ec-aging | errors | learning | rpc | secure-address | warnings }
```

Syntax Description

| | |
|-----------------------|--|
| aging | Display MAC address aging debug messages. |
| all | Display all platform MAC address management event debug messages. |
| ec-aging | Display EtherChannel address aging-related debug messages. |
| errors | Display MAC address management error debug messages. |
| learning | Display MAC address management address-learning debug messages. |
| rpc | Display MAC address management remote procedure call (RPC) related debug messages. |
| secure-address | Display MAC address management secure address learning debug messages. |
| warning | Display MAC address management warning debug messages. |

Defaults

Debugging is disabled.

Command Modes

Privileged EXEC

Command History

| Release | Modification |
|------------|------------------------------|
| 12.1(14)AX | This command was introduced. |

Usage Guidelines

The **undebug platform matm** command is the same as the **no debug platform matm** command.

Related Commands

| Command | Description |
|--------------------------------|---|
| debug matm | Displays information about platform-independent MAC address management. |
| show debugging | Displays information about the types of debugging that are enabled. |

debug platform messaging application

Use the **debug platform messaging application** privileged EXEC command to enable debugging of application messaging activity. Use the **no** form of this command to disable debugging.

```
debug platform messaging application {all | badpak | cleanup | events | memerr | messages |
usererr }
```

```
no debug platform messaging application {all | badpak | cleanup | events | memerr | messages
| usererr }
```

| Syntax Description | all | Display all application-messaging debug messages. |
|--------------------|-----------------|---|
| | badpak | Display bad-packet debug messages. |
| | cleanup | Display clean-up debug messages. |
| | events | Display event debug messages. |
| | memerr | Display memory-error debug messages. |
| | messages | Display application-messaging debug messages. |
| | usererr | Display user-error debug messages. |



Note

Though visible in the command-line help strings, the **stackchg** keyword is not supported.

Defaults Debugging is disabled.

Command Modes Privileged EXEC

| Command History | Release | Modification |
|-----------------|------------|------------------------------|
| | 12.1(14)AX | This command was introduced. |

Usage Guidelines The **undebg platform messaging application** command is the same as the **no debug platform messaging application** command.

| Related Commands | Command | Description |
|------------------|-----------------------|---|
| | show debugging | Displays information about the types of debugging that are enabled. |

debug platform mpls

Use the **debug platform mpls** privileged EXEC command to enable debugging of the multiprotocol label switching (MPLS) control layer. Use the **no** form of this command to disable debugging

```
debug platform mpls { backwalk | encaps | errors | events | lspv | np | timer }
```

```
no debug platform mpls { backwalk | encaps | errors | events | lspv | np | timer }
```

Syntax Description

| | |
|-----------------|--|
| backwalk | Display MPLS backwalk messages. |
| encaps | Display MPLS encapsulation messages. |
| errors | Display MPLS error messages. |
| events | Display all MPLS event messages. |
| lspv | Display MPLS label-switched path verification (LSPV) messages. |
| np | Display MPLS network processor (NP) messages. |
| timer | Display MPLS timer messages. |

Defaults

Debugging is disabled.

Command Modes

Privileged EXEC

Command History

| Release | Modification |
|------------|------------------------------|
| 12.2(37)SE | This command was introduced. |

Usage Guidelines

The **undebug platform mpls** command is the same as the **no debug platform mpls** command.

Related Commands

| Command | Description |
|-----------------------|---|
| show debugging | Displays information about the types of debugging that are enabled. |

debug platform phy

Use the **debug platform phy** privileged EXEC command to enable debugging of PHY driver information. Use the **no** form of this command to disable debugging.

```
debug platform phy { automdix | flowcontrol | forced | init-seq | link-status | read | sfp |
show-controller | speed | write }
```

```
no debug platform phy { automdix | flowcontrol | forced | init-seq | link-status | read | sfp |
show-controller | speed | write }
```

| Syntax Description | | |
|------------------------|--|--|
| automdix | Display PHY automatic medium-dependent-interface crossover (Auto-MDIX) debug messages. | |
| flowcontrol | Display PHY flowcontrol debug messages. | |
| forced | Display PHY forced-mode debug messages. | |
| init-seq | Display PHY initialization-sequence debug messages. | |
| link-status | Display PHY link-status debug messages. | |
| read | Display PHY-read debug messages. | |
| sfp | Display PHY small form-factor pluggable (SFP) modules debug messages. | |
| show-controller | Display PHY show-controller debug messages. | |
| speed | Display PHY speed-change debug messages. | |
| write | Display PHY-write debug messages. | |

Defaults Debugging is disabled.

Command Modes Privileged EXEC

| Command History | Release | Modification |
|-----------------|------------|------------------------------|
| | 12.1(14)AX | This command was introduced. |

Usage Guidelines The **undebug platform phy** command is the same as the **no debug platform phy** command.

| Related Commands | Command | Description |
|------------------|-----------------------|---|
| | show debugging | Displays information about the types of debugging that are enabled. |

debug platform pm

Use the **debug platform pm** privileged EXEC command to enable debugging of the platform-dependent port manager software module. Use the **no** form of this command to disable debugging.

```
debug platform pm {all | atom | counters | errdisable | etherchnl | exceptions | hpm-events |
  idb-events | if-numbers | ios-events | link-status | platform | pm-events | pm-vectors [detail]
  | rpc [general | oper-info | state | vectors | vp-events] | soutput | sync | vlans}
```

```
no debug platform pm {all | atom | counters | errdisable | etherchnl | exceptions | hpm-events |
  idb-events | if-numbers | ios-events | link-status | platform | pm-events | pm-vectors [detail]
  | rpc [general | oper-info | state | vectors | vp-events] | soutput | sync | vlans}
```

Syntax Description

| | |
|--|---|
| all | Display all port-manager debug messages. |
| atom | Display port manager Any Transport over MPLS (AToM) related debug messages. |
| counters | Display counters for remote procedure call (RPC) debug messages. |
| errdisable | Display error-disabled related-events debug messages. |
| etherchnl | Display EtherChannel related-events debug messages. |
| exceptions | Display system exception debug messages. |
| hpm-events | Display platform port-manager event debug messages. |
| idb-events | Display interface descriptor block (IDB) related-events debug messages. |
| if-numbers | Display interface-number translation-event debug messages. |
| ios-events | Display Cisco IOS event debug messages. |
| link-status | Display interface link-detection event debug messages. |
| platform | Display port-manager function-event debug messages. |
| pm-events | Display port manager event debug messages. |
| pm-vectors [detail] | Display port-manager vector-related-event debug messages. The keyword has this meaning: <ul style="list-style-type: none"> detail—Display vector-function details. |
| rpc [general oper-info state vectors vp-events] | Display RPC related-event debug messages. The keywords have these meanings: <ul style="list-style-type: none"> general—(Optional) Display RPC general events. oper-info—(Optional) Display operational- and informational-related RPC messages. state—(Optional) Display administrative- and operational-related RPC messages. vectors—(Optional) Display vector-related RPC messages. vp-events—(Optional) Display virtual ports related-events RP messages. |
| soutput | Display IDB output vector event debug messages. |
| sync | Display operational synchronization and VLAN line-state event debug messages. |
| vlans | Display VLAN creation and deletion event debug messages. |

**Note**

Though visible in the command-line help strings, the **stack-manager** keyword is not supported.

Defaults

Debugging is disabled.

Command Modes

Privileged EXEC

Command History

| Release | Modification |
|------------|------------------------------|
| 12.1(14)AX | This command was introduced. |

Usage Guidelines

The **undebg platform pm** command is the same as the **no debug platform pm** command.

Related Commands

| Command | Description |
|-----------------------|---|
| show debugging | Displays information about the types of debugging that are enabled. |

debug platform port-asic

Use the **debug platform port-asic** privileged EXEC command to enable debugging of the port application-specific integrated circuit (ASIC) driver. Use the **no** form of this command to disable debugging.

```
debug platform port-asic {interrupt | periodic | read | write}
```

```
no debug platform port-asic {interrupt | periodic | read | write}
```

Syntax Description

| | |
|------------------|--|
| interrupt | Display port-ASIC interrupt-related function debug messages. |
| periodic | Display port-ASIC periodic-function-call debug messages. |
| read | Display port-ASIC read debug messages. |
| write | Display port-ASIC write debug messages. |



Note

Though visible in the command-line help strings, the **stack** keyword is not supported.

Defaults

Debugging is disabled.

Command Modes

Privileged EXEC

Command History

| Release | Modification |
|------------|------------------------------|
| 12.1(14)AX | This command was introduced. |

Usage Guidelines

The **undebug platform port-asic** command is the same as the **no debug platform port-asic** command.

Related Commands

| Command | Description |
|-----------------------|---|
| show debugging | Displays information about the types of debugging that are enabled. |

debug platform port-security

Use the **debug platform port-security** privileged EXEC command to enable debugging of platform-dependent port-security information. Use the **no** form of this command to disable debugging.

```
debug platform port-security {add | aging | all | delete | errors | rpc | warnings}
```

```
no debug platform port-security {add | aging | all | delete | errors | rpc | warnings}
```

Syntax Description

| | |
|-----------------|---|
| add | Display secure address addition debug messages. |
| aging | Display secure address aging debug messages. |
| all | Display all port-security debug messages. |
| delete | Display secure address deletion debug messages. |
| errors | Display port-security error debug messages. |
| rpc | Display remote procedure call (RPC) debug messages. |
| warnings | Display warning debug messages. |

Defaults

Debugging is disabled.

Command Modes

Privileged EXEC

Command History

| Release | Modification |
|------------|------------------------------|
| 12.1(14)AX | This command was introduced. |

Usage Guidelines

The **undebg platform port-security** command is the same as the **no debug platform port-security** command.

Related Commands

| Command | Description |
|-----------------------|---|
| show debugging | Displays information about the types of debugging that are enabled. |

debug platform qos-acl-tcam

Use the **debug platform qos-acl-tcam** privileged EXEC command to enable debugging of the quality of service (QoS) and access control list (ACL) ternary content addressable memory (TCAM) manager software. Use the **no** form of this command to disable debugging.

```
debug platform qos-acl-tcam {all | ctcam | errors | labels | mask | rpc | tcam}
```

```
no debug platform qos-acl-tcam {all | ctcam | errors | labels | mask | rpc | tcam}
```

Syntax Description

| | |
|---------------|---|
| all | Display all QoS and ACL TCAM (QATM) manager debug messages. |
| ctcam | Display Cisco TCAM (CTCAM) related-events debug messages. |
| errors | Display QATM error-related-events debug messages. |
| labels | Display QATM label-related-events debug messages. |
| mask | Display QATM mask-related-events debug messages. |
| rpc | Display QATM remote procedure call (RPC) related-events debug messages. |
| tcam | Display QATM TCAM-related events debug messages. |

Defaults

Debugging is disabled.

Command Modes

Privileged EXEC

Command History

| Release | Modification |
|------------|------------------------------|
| 12.1(14)AX | This command was introduced. |

Usage Guidelines

The **undebug platform qos-acl-tcam** command is the same as the **no debug platform qos-acl-tcam** command.

Related Commands

| Command | Description |
|-----------------------|---|
| show debugging | Displays information about the types of debugging that are enabled. |

debug platform remote-commands

Use the **debug platform remote-commands** privileged EXEC command to enable debugging of remote commands. Use the **no** form of this command to disable debugging.

debug platform remote-commands

no debug platform remote-commands

Syntax Description This command has no arguments or keywords.

Defaults Debugging is disabled.

Command Modes Privileged EXEC

| Command History | Release | Modification |
|-----------------|------------|------------------------------|
| | 12.1(14)AX | This command was introduced. |

Usage Guidelines The **undebg platform remote-commands** command is the same as the **no debug platform remote-commands** command.

| Related Commands | Command | Description |
|------------------|-----------------------|---|
| | show debugging | Displays information about the types of debugging that are enabled. |

debug platform rep

Use the **debug platform rep** privileged EXEC command to enable debugging of Resilient Ethernet Protocol (REP). Use the **no** form of this command to disable debugging.

debug platform rep

no debug platform rep

Syntax Description This command has no arguments or keywords.

Defaults Debugging is disabled.

Command Modes Privileged EXEC

| Command History | Release | Modification |
|-----------------|------------|------------------------------|
| | 12.2(40)SE | This command was introduced. |

Usage Guidelines The **undebbug platform rep** command is the same as the **no debug platform rep** command.

| Related Commands | Command | Description |
|------------------|-----------------------|---|
| | show debugging | Displays information about the types of debugging that are enabled. |

debug platform resource-manager

Use the **debug platform resource-manager** privileged EXEC command to enable debugging of the resource manager software. Use the **no** form of this command to disable debugging.

```
debug platform resource-manager {all | dm | erd | errors | madmed | sd | stats | vld}
```

```
no debug platform resource-manager {all | dm | erd | errors | madmed | sd | stats | vld}
```

Syntax Description

| | |
|---------------|---|
| all | Display all resource manager debug messages. |
| dm | Display destination-map debug messages. |
| erd | Display equal-cost-route descriptor-table debug messages. |
| errors | Display error debug messages. |
| madmed | Display the MAC address descriptor table and multi-expansion descriptor table debug messages. |
| sd | Display the station descriptor table debug messages. |
| stats | Display statistics debug messages. |
| vld | Display the VLAN-list descriptor debug messages. |

Defaults

Debugging is disabled.

Command Modes

Privileged EXEC

Command History

| Release | Modification |
|------------|------------------------------|
| 12.1(14)AX | This command was introduced. |

Usage Guidelines

The **undebg platform resource-manager** command is the same as the **no debug platform resource-manager** command.

Related Commands

| Command | Description |
|-----------------------|---|
| show debugging | Displays information about the types of debugging that are enabled. |

debug platform snmp

Use the **debug platform snmp** privileged EXEC command to enable debugging of the platform-dependent Simple Network Management Protocol (SNMP) software. Use the **no** form of this command to disable debugging.

debug platform snmp

no debug platform snmp

Syntax Description This command has no arguments or keywords.

Defaults Debugging is disabled.

Command Modes Privileged EXEC

| Command History | Release | Modification |
|-----------------|------------|------------------------------|
| | 12.1(14)AX | This command was introduced. |

Usage Guidelines The **undebbug platform snmp** command is the same as the **no debug platform snmp** command.

| Related Commands | Command | Description |
|------------------|-----------------------|---|
| | show debugging | Displays information about the types of debugging that are enabled. |

debug platform span

Use the **debug platform span** privileged EXEC command to enable debugging of the platform-dependent Switched Port Analyzer (SPAN) software. Use the **no** form of this command to disable debugging.

debug platform span

no debug platform span

Syntax Description This command has no arguments or keywords.

Defaults Debugging is disabled.

Command Modes Privileged EXEC

| Command History | Release | Modification |
|-----------------|------------|------------------------------|
| | 12.1(14)AX | This command was introduced. |

Usage Guidelines The **undebug platform span** command is the same as the **no debug platform span** command.

| Related Commands | Command | Description |
|------------------|-----------------------|---|
| | show debugging | Displays information about the types of debugging that are enabled. |

debug platform supervisor-asic

Use the **debug platform supervisor-asic** privileged EXEC command to enable debugging of the supervisor application-specific integrated circuit (ASIC). Use the **no** form of this command to disable debugging.

```
debug platform supervisor-asic {all | errors | receive | send}
```

```
no debug platform supervisor-asic {all | errors | receive | send}
```

Syntax Description

| | |
|----------------|---|
| all | Display all supervisor-ASIC event debug messages. |
| errors | Display the supervisor-ASIC error debug messages. |
| receive | Display the supervisor-ASIC receive debug messages. |
| send | Display the supervisor-ASIC send debug messages. |

Defaults

Debugging is disabled.

Command Modes

Privileged EXEC

Command History

| Release | Modification |
|------------|------------------------------|
| 12.1(14)AX | This command was introduced. |

Usage Guidelines

The **undebug platform supervisor-asic** command is the same as the **no debug platform supervisor-asic** command.

Related Commands

| Command | Description |
|-----------------------|---|
| show debugging | Displays information about the types of debugging that are enabled. |

debug platform sw-bridge

Use the **debug platform sw-bridge** privileged EXEC command to enable debugging of the software bridging function. Use the **no** form of this command to disable debugging.

```
debug platform sw-bridge {broadcast | control | multicast | packet | unicast}
```

```
no debug platform sw-bridge {broadcast | control | multicast | packet | unicast}
```

Syntax Description

| | |
|------------------|--|
| broadcast | Display broadcast-data debug messages. |
| control | Display protocol-packet debug messages. |
| multicast | Display multicast-data debug messages. |
| packet | Display sent and received data debug messages. |
| unicast | Display unicast-data debug messages. |

Defaults

Debugging is disabled.

Command Modes

Privileged EXEC

Command History

| Release | Modification |
|------------|------------------------------|
| 12.1(14)AX | This command was introduced. |

Usage Guidelines

The **undebg platform sw-bridge** command is the same as the **no debug platform sw-bridge** command.

Related Commands

| Command | Description |
|-----------------------|---|
| show debugging | Displays information about the types of debugging that are enabled. |

debug platform tcam

Use the **debug platform tcam** privileged EXEC command to enable debugging of ternary content addressable memory (TCAM) access and lookups. Use the **no** form of this command to disable debugging.

```
debug platform tcam {log | read | search | write}
```

```
debug platform tcam log l2 {acl {input | output} | local | qos}
```

```
debug platform tcam log l3 {acl {input | output} | ipv6 {acl {input | output} | local | qos |
secondary} | local | qos | secondary}
```

```
debug platform tcam read {reg | ssram | tcam}
```

```
debug platform tcam search
```

```
debug platform tcam write {forw-ram | reg | tcam}
```

```
no debug platform tcam {log | read | search | write}
```

```
no debug platform tcam log l2 {acl {input | output} | local | qos}
```

```
no debug platform tcam log l3 {acl {input | output} | ipv6 {acl {input | output} | local | qos |
secondary} | local | qos | secondary}
```

```
no debug platform tcam read {reg | ssram | tcam}
```

```
no debug platform tcam search
```

```
no debug platform tcam write {forw-ram | reg | tcam}
```

Syntax Description

| | |
|--|--|
| log l2 {acl {input output} local qos} | <p>Display Layer-2 field-based CAM look-up type debug messages. The keywords have these meanings:</p> <ul style="list-style-type: none"> • acl {input output}—Display input or output ACL look-up debug messages. • local—Display local forwarding look-up debug messages. • qos—Display classification and quality of service (QoS) look-up debug messages. |
|--|--|

| | |
|--|--|
| l3 {acl {input output} ipv6 {acl {input output} local qos secondary} local qos secondary} | <p>Display Layer-3 field-based CAM look-up type debug messages. The keywords have these meanings:</p> <ul style="list-style-type: none"> • acl {input output}—Display input or output ACL look-up debug messages. • ipv6 {acl {input output} local qos secondary}—Display IPv6-based look-up debug messages. Options include displaying input or output ACL look-up, local forwarding look-up, classification and QoS look-up, or secondary forwarding look-up debug messages. • local—Display local forwarding look-up debug messages. • qos—Display classification and quality of service (QoS) look-up debug messages. • secondary—Display secondary forwarding look-up debug messages. |
| read {reg ssram tcam} | <p>Display TCAM-read debug messages. The keywords have these meanings:</p> <ul style="list-style-type: none"> • reg—Display TCAM-register read debug messages. • ssram—Display synchronous static RAM (SSRAM)-read debug messages. • tcam—Display TCAM-read debug messages. |
| search | Display supervisor-initiated TCAM-search results debug messages. |
| write {forw-ram reg tcam} | <p>Display TCAM-write debug messages. The keywords have these meanings:</p> <p>forw-ram—Display forwarding-RAM write debug messages.</p> <p>reg—Display TCAM-register write debug messages.</p> <p>tcam—Display TCAM-write debug messages.</p> |

Defaults

Debugging is disabled.

Command Modes

Privileged EXEC

Command History

| Release | Modification |
|------------|------------------------------|
| 12.1(14)AX | This command was introduced. |

Usage GuidelinesThe **undebg platform tcam** command is the same as the **no debug platform tcam** command.**Related Commands**

| Command | Description |
|-----------------------|---|
| show debugging | Displays information about the types of debugging that are enabled. |

debug platform udd

Use the **debug platform udd** privileged EXEC command to enable debugging of the platform-dependent UniDirectional Link Detection (UDLD) software. Use the **no** form of this command to disable debugging.

```
debug platform udd [all | error | rpc {events | messages}]
```

```
no debug platform udd [all | error | rpc {events | messages}]
```

Syntax Description

| | |
|--------------------------------|--|
| all | (Optional) Display all UDLD debug messages. |
| error | (Optional) Display error condition debug messages. |
| rpc {events messages} | (Optional) Display UDLD remote procedure call (RPC) debug messages. The keywords have these meanings: <ul style="list-style-type: none"> events—Display UDLD RPC events. messages—Display UDLD RPC messages. |

Defaults

Debugging is disabled.

Command Modes

Privileged EXEC

Command History

| Release | Modification |
|------------|------------------------------|
| 12.1(14)AX | This command was introduced. |

Usage Guidelines

The **undebug platform udd** command is the same as the **no debug platform udd** command.

Related Commands

| Command | Description |
|-----------------------|---|
| show debugging | Displays information about the types of debugging that are enabled. |

debug platform vlan

Use the **debug platform vlan** privileged EXEC command to enable debugging of the VLAN manager software. Use the **no** form of this command to disable debugging.

```
debug platform vlan { errors | mvid | rpc }
```

```
no debug platform vlan { errors | mvid | rpc }
```

Syntax Description

| | |
|---------------|---|
| errors | Display VLAN error debug messages. |
| mvid | Display mapped VLAN ID allocations and free debug messages. |
| rpc | Display remote procedure call (RPC) debug messages. |

Defaults

Debugging is disabled.

Command Modes

Privileged EXEC

Command History

| Release | Modification |
|------------|------------------------------|
| 12.1(14)AX | This command was introduced. |

Usage Guidelines

The **undebug platform vlan** command is the same as the **no debug platform vlan** command.

Related Commands

| Command | Description |
|-----------------------|---|
| show debugging | Displays information about the types of debugging that are enabled. |

debug pm

Use the **debug pm privileged EXEC** command to enable debugging of port manager (PM) activity. The port manager is a state machine that controls all the logical and physical ports. All features, such as VLANs, UniDirectional Link Detection (UDLD), and so forth, work with the port manager to provide switch functions. Use the **no** form of this command to disable debugging.

```
debug pm {all | assert | card | cookies | etherchnl | hatable | messages | port | registry | sm | span
          | split | vlan | vp}
```

```
no debug pm {all | assert | card | cookies | etherchnl | hatable | messages | port | registry | sm |
            span | split | vlan | vp}
```

Syntax Description

| | |
|------------------|---|
| all | Display all PM debug messages. |
| assert | Display assert debug messages. |
| card | Display line-card related-events debug messages. |
| cookies | Display internal PM cookie validation debug messages. |
| etherchnl | Display EtherChannel related-events debug messages. |
| hatable | Display Host Access Table events debug messages. |
| messages | Display PM debug messages. |
| port | Display port related-events debug messages. |
| registry | Display PM registry invocation debug messages. |
| sm | Display state-machine related-events debug messages. |
| span | Display spanning-tree related-events debug messages. |
| split | Display split-processor debug messages. |
| vlan | Display VLAN related-events debug messages. |
| vp | Display virtual port related-events debug messages. |



Note

Though visible in the command-line help strings, the **scp** and **pvlan** keywords are not supported.

Defaults

Debugging is disabled.

Command Modes

Privileged EXEC

Command History

| Release | Modification |
|------------|------------------------------|
| 12.1(14)AX | This command was introduced. |

Usage Guidelines

The **undebug pm** command is the same as the **no debug pm** command.

| Related Commands | Command | Description |
|------------------|----------------|---|
| | show debugging | Displays information about the types of debugging that are enabled. |

debug port-security

Use the **debug port-security** privileged EXEC command to enable debugging of the allocation and states of the port security subsystem. Use the **no** form of this command to disable debugging.

debug port-security

no debug port-security

Syntax Description This command has no arguments or keywords.

Defaults Debugging is disabled.

Command Modes Privileged EXEC

| Command History | Release | Modification |
|-----------------|------------|------------------------------|
| | 12.1(14)AX | This command was introduced. |

Usage Guidelines The **undebbug port-security** command is the same as the **no debug port-security** command.

| Related Commands | Command | Description |
|------------------|------------------------------------|---|
| | show debugging | Displays information about the types of debugging that are enabled. |
| | show port-security | Displays port-security settings for an interface or for the switch. |

debug rep

Use the **debug rep** privileged EXEC command to enable debugging of Resilient Ethernet Protocol (REP) functions. Use the **no** form of this command to disable debugging.

```
debug rep {all | bpa-event | bpsm | epasm | error | failure-recovery | lsism | packet | prsm}
```

```
no debug rep {all | bpa-event | bpsm | epasm | error | failure-recovery | lsism | packet | prsm}
```

| Syntax Description | | |
|-------------------------|--|--|
| all | Display all REP debug messages. | |
| bpa-event | Display blocked port advertisement (BPA) debug messages. | |
| bpsm | Display BPA state machine debug messages. | |
| epasm | Display end port advertisement (EPA) state machine debug messages. | |
| error | Display REP protocol error debug messages. | |
| failure-recovery | Display REP switchover event debug messages. | |
| lsism | Display Link State Layer (LSL) state machine debug messages. | |
| packet | Display protocol PDU debug messages. | |
| prsm | Display REP port role state machine debug messages. | |

Defaults Debugging is disabled.

Command Modes Privileged EXEC

| Command History | Release | Modification |
|-----------------|------------|------------------------------|
| | 12.2(46)SE | This command was introduced. |

Usage Guidelines The **undebug rep** command is the same as the **no debug rep** command.

| Related Commands | Command | Description |
|------------------|----------------------------|--|
| | show debugging | Displays information about the types of debugging that are enabled. |
| | show interfaces rep | Displays REP configuration and status for a specified interface or for all interfaces. |

debug qos-manager

Use the **debug qos-manager** privileged EXEC command to enable debugging of the quality of service (QoS) manager software. Use the **no** form of this command to disable debugging.

debug qos-manager {all | event | verbose}

no debug qos-manager {all | event | verbose}

Syntax Description

| | |
|----------------|---|
| all | Display all QoS-manager debug messages. |
| event | Display QoS-manager related-event debug messages. |
| verbose | Display QoS-manager detailed debug messages. |

Defaults

Debugging is disabled.

Command Modes

Privileged EXEC

Command History

| Release | Modification |
|------------|------------------------------|
| 12.1(14)AX | This command was introduced. |

Usage Guidelines

The **undebug qos-manager** command is the same as the **no debug qos-manager** command.

Related Commands

| Command | Description |
|-----------------------|---|
| show debugging | Displays information about the types of debugging that are enabled. |

debug spanning-tree

Use the **debug spanning-tree privileged EXEC** command to enable debugging of spanning-tree activities. Use the **no** form of this command to disable debugging.

```
debug spanning-tree {all | backbonefast | bpdu | bpdu-opt | config | etherchannel | events |
exceptions | general | mstp | pvst+ | root | snmp | switch | synchronization | uplinkfast }
```

```
no debug spanning-tree {all | backbonefast | bpdu | bpdu-opt | config | etherchannel | events |
exceptions | general | mstp | pvst+ | root | snmp | switch | synchronization | uplinkfast }
```

| Syntax Description | |
|------------------------|--|
| all | Display all spanning-tree debug messages. |
| backbonefast | Display BackboneFast-event debug messages. |
| bpdu | Display spanning-tree bridge protocol data unit (BPDU) debug messages. |
| bpdu-opt | Display optimized BPDU handling debug messages. |
| config | Display spanning-tree configuration change debug messages. |
| etherchannel | Display EtherChannel-support debug messages. |
| events | Display spanning-tree topology event debug messages. |
| exceptions | Display spanning-tree exception debug messages. |
| general | Display general spanning-tree activity debug messages. |
| mstp | Debug Multiple Spanning Tree Protocol events. |
| pvst+ | Display per-VLAN spanning-tree plus (PVST+) event debug messages. |
| root | Display spanning-tree root-event debug messages. |
| snmp | Display spanning-tree Simple Network Management Protocol (SNMP) handling debug messages. |
| synchronization | Display the spanning-tree synchronization event debug messages. |
| switch | Display switch shim command debug messages. This shim is the software module that is the interface between the generic Spanning Tree Protocol (STP) code and the platform-specific code of various switch platforms. |
| uplinkfast | Display UplinkFast-event debug messages. |



Note

Though visible in the command-line help strings, the **csuf/csrt** keyword is not supported.

Defaults

Debugging is disabled.

Command Modes

Privileged EXEC

Command History

| Release | Modification |
|------------|------------------------------|
| 12.1(14)AX | This command was introduced. |

■ debug spanning-tree

Usage Guidelines

The **undebug spanning-tree** command is the same as the **no debug spanning-tree** command.

Related Commands

| Command | Description |
|---------------------------|---|
| show debugging | Displays information about the types of debugging that are enabled. |
| show spanning-tree | Displays spanning-tree state information. |

debug spanning-tree backbonefast

Use the **debug spanning-tree backbonefast privileged EXEC** command to enable debugging of spanning-tree BackboneFast events. Use the **no** form of this command to disable debugging.

debug spanning-tree backbonefast [detail | exceptions]

no debug spanning-tree backbonefast [detail | exceptions]

| | | |
|---------------------------|---|---|
| Syntax Description | detail | (Optional) Display detailed BackboneFast debug messages. |
| | exceptions | (Optional) Display spanning-tree BackboneFast-exception debug messages. |
| Defaults | Debugging is disabled. | |
| Command Modes | Privileged EXEC | |
| Command History | Release | Modification |
| | 12.1(14)AX | This command was introduced. |
| Usage Guidelines | The undebg spanning-tree backbonefast command is the same as the no debug spanning-tree backbonefast command. | |
| Related Commands | Command | Description |
| | show debugging | Displays information about the types of debugging that are enabled. |
| | show spanning-tree | Displays spanning-tree state information. |

debug spanning-tree bpdu

Use the **debug spanning-tree bpdu** privileged EXEC command to enable debugging of sent and received spanning-tree bridge protocol data units (BPDUs). Use the **no** form of this command to disable debugging.

debug spanning-tree bpdu [receive | transmit]

no debug spanning-tree bpdu [receive | transmit]

Syntax Description

| | |
|-----------------|---|
| receive | (Optional) Display the nonoptimized path for received BPDU debug messages. |
| transmit | (Optional) Display the nonoptimized path for transmitted BPDU debug messages. |

Defaults

Debugging is disabled.

Command Modes

Privileged EXEC

Command History

| Release | Modification |
|------------|------------------------------|
| 12.1(14)AX | This command was introduced. |

Usage Guidelines

The **undebg spanning-tree bpdu** command is the same as the **no debug spanning-tree bpdu** command.

Related Commands

| Command | Description |
|---------------------------|---|
| show debugging | Displays information about the types of debugging that are enabled. |
| show spanning-tree | Displays spanning-tree state information. |

debug spanning-tree bpdu-opt

Use the **debug spanning-tree bpdu-opt** privileged EXEC command to enable debugging of optimized spanning-tree bridge protocol data units (BPDUs) handling. Use the **no** form of this command to disable debugging.

debug spanning-tree bpdu-opt [detail | packet]

no debug spanning-tree bpdu-opt [detail | packet]

Syntax Description

| | |
|---------------|---|
| detail | (Optional) Display detailed optimized BPDU-handling debug messages. |
| packet | (Optional) Display packet-level optimized BPDU-handling debug messages. |

Defaults

Debugging is disabled.

Command Modes

Privileged EXEC

Command History

| Release | Modification |
|------------|------------------------------|
| 12.1(14)AX | This command was introduced. |

Usage Guidelines

The **undebg spanning-tree bpdu-opt** command is the same as the **no debug spanning-tree bpdu-opt** command.

Related Commands

| Command | Description |
|---------------------------|---|
| show debugging | Displays information about the types of debugging that are enabled. |
| show spanning-tree | Displays spanning-tree state information. |

debug spanning-tree mstp

Use the **debug spanning-tree mstp privileged EXEC** command to enable debugging of the Multiple Spanning Tree Protocol (MSTP) software. Use the **no** form of this command to disable debugging.

```
debug spanning-tree mstp {all | boundary | bpdu-rx | bpdu-tx | errors | flush | init | migration |
  pm | proposals | region | roles | sanity_check | sync | tc | timers}
```

```
no debug spanning-tree mstp {all | boundary | bpdu-rx | bpdu-tx | errors | flush | init | migration |
  pm | proposals | region | roles | sanity_check | sync | tc | timers}
```

| Syntax Description | | |
|---------------------|---|--|
| all | Display all MSTP debug messages. | |
| boundary | Display flag change debug messages at these boundaries: <ul style="list-style-type: none"> • An multiple spanning-tree (MST) region and a single spanning-tree region running Rapid Spanning Tree Protocol (RSTP) • An MST region and a single spanning-tree region running 802.1D • An MST region and another MST region with a different configuration | |
| bpdu-rx | Display received MST bridge protocol data unit (BPDUs) debug messages. | |
| bpdu-tx | Display sent MST BPDU debug messages. | |
| errors | Display MSTP error debug messages. | |
| flush | Display port-flushing mechanism debug messages. | |
| init | Display MSTP data structure initialization debug messages. | |
| migration | Display protocol-migration state-machine debug messages. | |
| pm | Display MSTP port-manager event debug messages. | |
| proposals | Display handshake messages between the designated switch and the root switch debug messages. | |
| region | Display region synchronization between the switch processor (SP) and the route processor (RP) debug messages. | |
| roles | Display MSTP role debug messages. | |
| sanity_check | Display received BPDU sanity check debug messages. | |
| sync | Display port synchronization event debug messages. | |
| tc | Display topology change notification event debug messages. | |
| timers | Display MSTP timers for start, stop, and expire event debug messages. | |

Defaults Debugging is disabled.

Command Modes Privileged EXEC

| Command History | Release | Modification |
|-----------------|------------|------------------------------|
| | 12.1(14)AX | This command was introduced. |

Usage Guidelines

The **undebg spanning-tree mstp** command is the same as the **no debug spanning-tree mstp** command.

Related Commands

| Command | Description |
|---------------------------|---|
| show debugging | Displays information about the types of debugging that are enabled. |
| show spanning-tree | Displays spanning-tree state information. |

debug spanning-tree switch

Use the **debug spanning-tree switch privileged EXEC** command to enable debugging of the software interface between the Spanning Tree Protocol (STP) software module and the port manager software module. Use the **no** form of this command to disable debugging.

```
debug spanning-tree switch {all | errors | flush | general | helper | pm | rx {decode | errors |
interrupt | process} | state | tx [decode] | uplinkfast}
```

```
no debug spanning-tree switch {all | errors | flush | general | helper | pm | rx {decode | errors |
interrupt | process} | state | tx [decode] | uplinkfast}
```

Syntax Description

| | |
|--------------------|--|
| all | Display all spanning-tree switch debug messages. |
| errors | Display debug messages for the interface between the spanning-tree software module and the port manager software module. |
| flush | Display shim flush operation debug messages. |
| general | Display general event debug messages. |
| helper | Display spanning-tree helper-task debug messages. Helper tasks handle bulk spanning-tree updates. |
| pm | Display port-manager event debug messages. |
| rx | Display received bridge protocol data unit (BPDU) handling debug messages. The keywords have these meanings: <ul style="list-style-type: none"> • decode—Display decoded received packets. • errors—Display receive error debug messages. • interrupt—Display interrupt service request (ISR) debug messages. • process—Display process receive BPDU debug messages. |
| state | Display spanning-tree port state change debug messages. |
| tx [decode] | Display transmitted BPDU handling debug messages. The keyword has this meaning: <ul style="list-style-type: none"> • decode—(Optional) Display decoded transmitted packets. |
| uplinkfast | Display uplinkfast packet transmission debug messages. |

Defaults

Debugging is disabled.

Command Modes

Privileged EXEC

Command History

| Release | Modification |
|------------|------------------------------|
| 12.1(14)AX | This command was introduced. |

Usage Guidelines

The **undebg spanning-tree switch** command is the same as the **no debug spanning-tree switch** command.

Related Commands

| Command | Description |
|---------------------------|---|
| show debugging | Displays information about the types of debugging that are enabled. |
| show spanning-tree | Displays spanning-tree state information. |

debug spanning-tree uplinkfast

Use the **debug spanning-tree uplinkfast privileged EXEC** command to enable debugging of spanning-tree UplinkFast events. Use the **no** form of this command to disable debugging.

debug spanning-tree uplinkfast [exceptions]

no debug spanning-tree uplinkfast [exceptions]

| Syntax Description | exceptions (Optional) Display spanning-tree UplinkFast-exception debug messages. | | | | | | |
|---------------------------|--|---------|--------------|-----------------------|---|---------------------------|---|
| Defaults | Debugging is disabled. | | | | | | |
| Command Modes | Privileged EXEC | | | | | | |
| Command History | <table border="1"> <thead> <tr> <th>Release</th> <th>Modification</th> </tr> </thead> <tbody> <tr> <td>12.1(14)AX</td> <td>This command was introduced.</td> </tr> </tbody> </table> | Release | Modification | 12.1(14)AX | This command was introduced. | | |
| Release | Modification | | | | | | |
| 12.1(14)AX | This command was introduced. | | | | | | |
| Usage Guidelines | The undebug spanning-tree uplinkfast command is the same as the no debug spanning-tree uplinkfast command. | | | | | | |
| Related Commands | <table border="1"> <thead> <tr> <th>Command</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>show debugging</td> <td>Displays information about the types of debugging that are enabled.</td> </tr> <tr> <td>show spanning-tree</td> <td>Displays spanning-tree state information.</td> </tr> </tbody> </table> | Command | Description | show debugging | Displays information about the types of debugging that are enabled. | show spanning-tree | Displays spanning-tree state information. |
| Command | Description | | | | | | |
| show debugging | Displays information about the types of debugging that are enabled. | | | | | | |
| show spanning-tree | Displays spanning-tree state information. | | | | | | |

debug sw-vlan

Use the **debug sw-vlan privileged EXEC** command to enable debugging of VLAN manager activities. Use the **no** form of this command to disable debugging.

```
debug sw-vlan {badpmcookies | cfg-vlan {bootup | cli} | events | ifs | management | notification
| packets | registries | vtp}
```

```
no debug sw-vlan {badpmcookies | cfg-vlan {bootup | cli} | events | ifs | management |
notification | packets | registries | vtp}
```

| Syntax | Description |
|--------------------------------|--|
| badpmcookies | Display VLAN manager incidents of bad port manager cookie debug messages. |
| cfg-vlan {bootup cli} | Display config-vlan debug messages. The keywords have these meanings: <ul style="list-style-type: none"> bootup—Display messages when the switch is booting up. cli—Display messages when the command-line interface (CLI) is in config-vlan mode. |
| events | Display VLAN manager event debug messages. |
| ifs | See the debug sw-vlan ifs command. |
| management | Display VLAN manager management of internal VLAN debug messages. |
| notification | See the debug sw-vlan notification command. |
| packets | Display packet handling and encapsulation process debug messages. |
| registries | Display VLAN manager registry debug messages. |
| vtp | See the debug sw-vlan vtp command. |

Defaults Debugging is disabled.

Command Modes Privileged EXEC

| Command History | Release | Modification |
|-----------------|------------|------------------------------|
| | 12.1(14)AX | This command was introduced. |

Usage Guidelines The **undebg sw-vlan** command is the same as the **no debug sw-vlan** command.

| Related Commands | Command | Description |
|------------------|-----------------------|---|
| | show debugging | Displays information about the types of debugging that are enabled. |

| Command | Description |
|------------------------|--|
| <code>show vlan</code> | Displays the parameters for all configured VLANs or one VLAN (if the VLAN name or ID is specified) in the administrative domain. |
| <code>show vtp</code> | Displays general information about VTP management domain, status, and counters. |

debug sw-vlan ifs

Use the **debug sw-vlan ifs privileged EXEC** command to enable debugging of the VLAN manager Cisco IOS file system (IFS) error tests. Use the **no** form of this command to disable debugging.

```
debug sw-vlan ifs {open {read | write} | read {1 | 2 | 3 | 4} | write}
```

```
no debug sw-vlan ifs {open {read | write} | read {1 | 2 | 3 | 4} | write}
```

Syntax Description

| | |
|-----------------------------|---|
| open {read write} | Display VLAN manager IFS file-open operation debug messages. The keywords have these meanings: <ul style="list-style-type: none"> read—Display VLAN manager IFS file-read operation debug messages. write—Display VLAN manager IFS file-write operation debug messages. |
| read {1 2 3 4} | Display file-read operation debug messages for the specified error test (1, 2, 3, or 4). |
| write | Display file-write operation debug messages. |

Defaults

Debugging is disabled.

Command Modes

Privileged EXEC

Command History

| Release | Modification |
|------------|------------------------------|
| 12.1(14)AX | This command was introduced. |

Usage Guidelines

The **undebg sw-vlan ifs** command is the same as the **no debug sw-vlan ifs** command.

When determining the file read operation, Operation **1** reads the file header, which contains the header verification word and the file version number. Operation **2** reads the main body of the file, which contains most of the domain and VLAN information. Operation **3** reads type length version (TLV) descriptor structures. Operation **4** reads TLV data.

Related Commands

| Command | Description |
|-----------------------|--|
| show debugging | Displays information about the types of debugging that are enabled. |
| show vlan | Displays the parameters for all configured VLANs or one VLAN (if the VLAN name or ID is specified) in the administrative domain. |

debug sw-vlan notification

Use the **debug sw-vlan notification privileged EXEC** command to enable debugging of the activation and deactivation of Inter-Link Switch (ISL) VLAN IDs. Use the **no** form of this command to disable debugging.

```
debug sw-vlan notification { accfwdchange | allowedvlanfgchange | fwdchange | linkchange |
modechange | pruningcfgchange | statechange }
```

```
no debug sw-vlan notification { accfwdchange | allowedvlanfgchange | fwdchange |
linkchange | modechange | pruningcfgchange | statechange }
```

Syntax Description

| | |
|----------------------------|--|
| accfwdchange | Display debug messages for VLAN manager notification of aggregated access interface spanning-tree forward changes. |
| allowedvlanfgchange | Display debug messages for VLAN manager notification of changes to the allowed VLAN configuration. |
| fwdchange | Display debug messages for VLAN manager notification of spanning-tree forwarding changes. |
| linkchange | Display debug messages for VLAN manager notification of interface link-state changes. |
| modechange | Display debug messages for VLAN manager notification of interface mode changes. |
| pruningcfgchange | Display debug messages for VLAN manager notification of changes to the pruning configuration. |
| statechange | Display debug messages for VLAN manager notification of interface state changes. |

Defaults

Debugging is disabled.

Command Modes

Privileged EXEC

Command History

| Release | Modification |
|------------|------------------------------|
| 12.1(14)AX | This command was introduced. |

Usage Guidelines

The **undebug sw-vlan notification** command is the same as the **no debug sw-vlan notification** command.

Related Commands

| Command | Description |
|-----------------------|--|
| show debugging | Displays information about the types of debugging that are enabled. |
| show vlan | Displays the parameters for all configured VLANs or one VLAN (if the VLAN name or ID is specified) in the administrative domain. |

debug sw-vlan vtp

Use the **debug sw-vlan vtp privileged EXEC** command to enable debugging of the VLAN Trunking Protocol (VTP) code. Use the **no** form of this command to disable debugging.

```
debug sw-vlan vtp {events | packets | pruning [packets | xmit] | xmit}
```

```
no debug sw-vlan vtp {events | packets | pruning | xmit}
```

| Syntax Description | | |
|--------------------|---------------------------------|--|
| | events | Display debug messages for general-purpose logic flow and detailed VTP messages generated by the VTP_LOG_RUNTIME macro in the VTP code. |
| | packets | Display debug messages for the contents of all incoming VTP packets that have been passed into the VTP code from the Cisco IOS VTP platform-dependent layer, except for pruning packets. |
| | pruning [packets xmit] | Display debug messages generated by the pruning segment of the VTP code. The keywords have these meanings: <ul style="list-style-type: none"> • packets—(Optional) Display debug messages for the contents of all incoming VTP pruning packets that have been passed into the VTP code from the VTP platform-dependent layer. • xmit—(Optional) Display debug messages for the contents of all outgoing VTP packets that the VTP code requests the Cisco IOS VTP platform-dependent layer to send. |
| | xmit | Display debug messages for the contents of all outgoing VTP packets that the VTP code requests the VTP platform-dependent layer to send, except for pruning packets. |

Defaults Debugging is disabled.

Command Modes Privileged EXEC

| Command History | Release | Modification |
|-----------------|------------|------------------------------|
| | 12.1(14)AX | This command was introduced. |

Usage Guidelines The **undebug sw-vlan vtp** command is the same as the **no debug sw-vlan vtp** command.

If no further parameters are entered after the **pruning keyword**, VTP pruning debugging messages are displayed. They are generated by the VTP_PRUNING_LOG_NOTICE, VTP_PRUNING_LOG_INFO, VTP_PRUNING_LOG_DEBUG, VTP_PRUNING_LOG_ALERT, and VTP_PRUNING_LOG_WARNING macros in the VTP pruning code.

■ debug sw-vlan vtp

| Related Commands | Command | Description |
|------------------|-----------------------|---|
| | show debugging | Displays information about the types of debugging that are enabled. |
| | show vtp | Displays general information about VTP management domain, status, and counters. |

debug uddl

Use the **debug uddl** privileged EXEC command to enable debugging of the UniDirectional Link Detection (UDLD) feature. Use the **no** form of this command to disable UDLD debugging.

debug uddl {events | packets | registries}

no debug uddl {events | packets | registries}

| Syntax Description | events | packets | registries |
|--------------------|---|---|--|
| | Display debug messages for UDLD process events as they occur. | Display debug messages for the UDLD process as it receives packets from the packet queue and tries to send them at the request of the UDLD protocol code. | Display debug messages for the UDLD process as it processes registry calls from the UDLD process-dependent module and other feature modules. |

Defaults Debugging is disabled.

Command Modes Privileged EXEC

| Command History | Release | Modification |
|-----------------|------------|------------------------------|
| | 12.1(14)AX | This command was introduced. |

Usage Guidelines The **undebug uddl** command is the same as the **no debug uddl** command.

For **debug uddl events**, these debugging messages are displayed:

- General UDLD program logic flow
- State machine state changes
- Program actions for the set and clear ErrDisable state
- Neighbor cache additions and deletions
- Processing of configuration commands
- Processing of link-up and link-down indications

For **debug uddl packets**, these debugging messages are displayed:

- General packet processing program flow on receipt of an incoming packet
- Indications of the contents of the various pieces of packets received (such as type length versions [TLVs]) as they are examined by the packet reception code
- Packet transmission attempts and the outcome

For **debug uddl registries**, these categories of debugging messages are displayed:

- Sub-block creation
- Fiber-port status changes

■ debug udd

- State change indications from the port manager software
- MAC address registry calls

Related Commands

| Command | Description |
|-----------------------|---|
| show debugging | Displays information about the types of debugging that are enabled. |
| show udd | Displays UDD administrative and operational status for all ports or the specified port. |

debug vqpc

Use the **debug vqpc** privileged EXEC command to enable debugging of the VLAN Query Protocol (VQP) client. Use the **no** form of this command to disable debugging.

debug vqpc [**all** | **cli** | **events** | **learn** | **packet**]

no debug vqpc [**all** | **cli** | **events** | **learn** | **packet**]

| Syntax Description | all | (Optional) Display all VQP client debug messages. |
|--------------------|---------------|--|
| | cli | (Optional) Display the VQP client command-line interface (CLI) debug messages. |
| | events | (Optional) Display VQP client event debug messages. |
| | learn | (Optional) Display VQP client address learning debug messages. |
| | packet | (Optional) Display VQP client packet information debug messages. |

Defaults Debugging is disabled.

Command Modes Privileged EXEC

| Command History | Release | Modification |
|-----------------|------------|------------------------------|
| | 12.1(14)AX | This command was introduced. |

Usage Guidelines The **undebug vqpc** command is the same as the **no debug vqpc** command.

| Related Commands | Command | Description |
|------------------|-----------------------|---|
| | show debugging | Displays information about the types of debugging that are enabled. |

debug xconnect

Use the **debug xconnect** privileged EXEC command to enable debugging of Layer 2 transport routing using Ethernet over multiprotocol label switching (EoMPLS). Use the **no** form of this command to disable debugging.

```
debug xconnect {error | event}
```

```
no debug xconnect {error | event}
```

Syntax Description

| | |
|--------------|--|
| error | Display xconnect authorization error debug messages. |
| event | Display xconnect authorization event debug messages. |

Defaults

Debugging is disabled.

Command Modes

Privileged EXEC

Command History

| Release | Modification |
|------------|------------------------------|
| 12.1(14)AX | This command was introduced. |

Usage Guidelines

The **undebug xconnect** command is the same as the **no debug xconnect** command.

Related Commands

| Command | Description |
|-----------------------|---|
| show debugging | Displays information about the types of debugging that are enabled. |