



Configuring DDMI

- [DDMI Configuration, page 1](#)

DDMI Configuration

This feature allows you to configure DDMI.



Mode: Indicates the DDMI mode operation. Possible modes are:

- **Enabled:** Enables DDMI mode operation.
- **Disabled:** Disables DDMI mode operation.

Related Topics

[Monitoring DDMI](#)

