

# **Preface**

This preface contains information about the Cisco ME 1200 Series Carrier Ethernet Access Device.

- · Audience, page i
- Document Conventions, page i
- Related Documentation, page iii

## **Audience**

This guide is for the person configuring the Cisco ME 1200 Series Carrier Ethernet Access Devices, hereafter known as Cisco ME 1200 NID.

## **Document Conventions**

This document uses the following conventions:

Convention	Description
^ or Ctrl	Both the ^ symbol and Ctrl represent the Control (Ctrl) key on a keyboard. For example, the key combination ^ <b>D</b> or <b>Ctrl-D</b> means that you hold down the Control key while you press the D key. (Keys are indicated in capital letters but are not case sensitive.)
<b>bold</b> font	Commands and keywords and user-entered text appear in <b>bold</b> font.
Italic font	Document titles, new or emphasized terms, and arguments for which you supply values are in <i>italic</i> font.
Courier font	Terminal sessions and information the system displays appear in courier font.
Bold Courier font	Bold Courier font indicates text that the user must enter.
[x]	Elements in square brackets are optional.

Convention	Description
	An ellipsis (three consecutive nonbolded periods without spaces) after a syntax element indicates that the element can be repeated.
I	A vertical line, called a pipe, indicates a choice within a set of keywords or arguments.
[x   y]	Optional alternative keywords are grouped in brackets and separated by vertical bars.
{x   y}	Required alternative keywords are grouped in braces and separated by vertical bars.
[x {y   z}]	Nested set of square brackets or braces indicate optional or required choices within optional or required elements. Braces and a vertical bar within square brackets indicate a required choice within an optional element.
string	A nonquoted set of characters. Do not use quotation marks around the string or the string will include the quotation marks.
<>	Nonprinting characters such as passwords are in angle brackets.
[]	Default responses to system prompts are in square brackets.
!,#	An exclamation point (!) or a pound sign (#) at the beginning of a line of code indicates a comment line.

#### **Reader Alert Conventions**

This document uses the following conventions for reader alerts:



Note

Means *reader take note*. Notes contain helpful suggestions or references to material not covered in the manual.



Tin

Means the following information will help you solve a problem.



Warning

Means reader be warned. In this situation, you might perform an action that could result in bodily injury.

#### **Related Documentation**

These documents provide information about the switches and are available from this Cisco.com site:

http://www.cisco.com/c/en/us/support/switches/me-1200-series-carrier-ethernet-access-devices/tsd-products-support-general-information.html

• Release Notes for the Cisco ME 1200 Series Carrier Ethernet Access Devices



Note

Before installing, configuring, or upgrading the switch, see the release notes on Cisco.com for the latest information.

- Cisco ME 3800x and ME 3600x Switches Software Configuration Guide
- Cisco Regulatory Compliance and Safety Information for Cisco ME 1200 Series Carrier Ethernet Access Devices

For information on supported MIBs, see ftp://ftp.cisco.com/pub/mibs/ME1200-MIBS/.

**Related Documentation**