



Preface

This preface contains information about the *Cisco ME 3400E Ethernet Access Switch Software Configuration Guide, Cisco IOS Release 12.2(58)EX* document:

- [Changes to This Document, page xlv](#)
- [Purpose, page xlv](#)
- [Audience, page xlvi](#)
- [Conventions, page xlvi](#)
- [Related Publications, page xlvii](#)
- [Obtaining Documentation and Submitting a Service Request, page xlvii](#)

Changes to This Document

[Table 1](#) lists the technical changes made to this document.

Table 1 **Changes to This Document**

| Revision | Date | Change Summary |
|-------------|--------------|--|
| OL-26662-02 | October 2012 | Added the Y.1731 Performance Monitoring feature information. See the following section: “Configuring Y.1731 Performance Monitoring” |
| OL-26662-01 | April 2012 | Initial release of this document. |

Purpose

The switch ships with one of these software images installed:

- The metro access image includes additional features such as IEEE 802.1Q tunneling, Layer 2 protocol tunneling, dynamic ARP inspection, and IP source guard.
- The metro IP access image adds Layer 3 functionality such as IP routing support for Routing Information Protocol (RIP), Open Shortest Path First (OSPF) Protocol, Border Gateway Protocol (BGP), and Enhanced Interior Gateway Routing Protocol (EIGRP), multiple VPN routing/forwarding on customer edge (multi-VRF-CE) devices, and IP multicast routing.

This guide provides procedures for using the commands that have been created or changed for use with the Cisco ME 3400E switch. It does not provide detailed information about these commands. For detailed information about these commands, see the *Cisco ME 3400E Ethernet Access Switch Command Reference* for this release. For information about the standard Cisco IOS commands, see the Cisco IOS documentation available from this URL:

<http://www.cisco.com/cisco/web/psa/default.html?mode=prod>

This guide does not describe system messages you might encounter or how to install your switch. For more information, see the *Cisco ME 3400E, ME 3400, and ME 2400 Switch System Message Guide* for this release and the *Cisco ME 3400E Ethernet Access Switch Hardware Installation Guide*.

For the latest documentation updates, see the release notes for this release.

Audience

This guide is for the networking professional managing the Cisco Metro Ethernet (ME) 3400E Series Ethernet Access switch, hereafter referred to as the *switch*. We assume that you are familiar with the concepts and terminology of Ethernet and local area networking. If you are interested in more training and education in these areas, learning opportunities including training courses, self-study options, seminars, and career certifications programs are available on the Cisco Training & Events web page:

<http://www.cisco.com/web/learning/index.html>

Conventions

This publication uses these conventions to convey instructions and information:

Command descriptions use these conventions:

- Commands and keywords are in **boldface** text.
- Arguments for which you supply values are in *italic*.
- Square brackets ([]) mean optional elements.
- Braces ({ }) group required choices, and vertical bars (|) separate the alternative elements.
- Braces and vertical bars within square brackets ([{ | }]) mean a required choice within an optional element.

Interactive examples use these conventions:

- Terminal sessions and system displays are in `screen` font.
- Information you enter is in **boldface screen** font.
- Nonprinting characters, such as passwords or tabs, are in angle brackets (<>).

Notes, cautions, and timesavers use these conventions and symbols:



Note

Means *reader take note*. Notes contain helpful suggestions or references to materials not contained in this manual.

**Caution**

Means *reader be careful*. In this situation, you might do something that could result in equipment damage or loss of data.

Related Publications

These documents provide complete information about the switch and are available from this Cisco.com site:

http://www.cisco.com/en/US/products/ps9637/tsd_products_support_series_home.html

**Note**

Before installing, configuring, or upgrading the switch, see these documents:

- For initial configuration information, see the “Configuring the Switch with the CLI-Based Setup Program” appendix in the hardware installation guide.
- For upgrading information, see the “Downloading Software” section in the release notes.

- *Release Notes for the Cisco ME 3400E Ethernet Access Switch*
- *Cisco ME 3400E Ethernet Access Switch Software Configuration Guide*
- *Cisco ME 3400E Ethernet Access Switch Command Reference*
- *Cisco ME 3400E, ME 3400, and ME 2400 Switch System Message Guide*
- *Cisco ME 3400E Ethernet Access Switch Hardware Installation Guide*
- *Cisco ME 3400E Switch Getting Started Guide*
- *Regulatory Compliance and Safety Information for the Cisco ME 3400E Ethernet Access Switch*
- *Cisco Small Form-Factor Pluggable Modules Installation Notes*
- *Cisco CWDM GBIC and CWDM SFP Installation Note*
- These compatibility matrix documents are available from this Cisco.com site:
http://www.cisco.com/en/US/products/hw/modules/ps5455/products_device_support_tables_list.html
 - *Cisco Gigabit Ethernet Transceiver Modules Compatibility Matrix*
 - *Cisco 100-Megabit Ethernet SFP Modules Compatibility Matrix*
 - *Cisco Small Form-Factor Pluggable Modules Compatibility Matrix*
 - *Compatibility Matrix for 1000BASE-T Small Form-Factor Pluggable Modules*

Obtaining Documentation and Submitting a Service Request

For information on obtaining documentation, submitting a service request, and gathering additional information, see the monthly *What’s New in Cisco Product Documentation*, which also lists all new and revised Cisco technical documentation, at:

<http://www.cisco.com/en/US/docs/general/whatsnew/whatsnew.html>

Subscribe to the *What's New in Cisco Product Documentation* as an RSS feed and set content to be delivered directly to your desktop using a reader application. The RSS feeds are a free service. Cisco currently supports RSS Version 2.0.