

Preface	xlvi
Changes to This Document	xlvi
Purpose	xlvi
Audience	xlvi
Conventions	xlvi
Related Publications	xlvi
1	
Overview	1
Software Licenses and Features	1
Features	2
Performance Features	3
Management Options	3
Manageability Features	4
Availability Features	5
VLAN Features	6
Security Features	6
Switch Security	6
Network Security	7
Quality of Service and Class of Service Features	7
Layer 2 Virtual Private Network Services	8
Layer 3 Features	8
Layer 3 VPN Services	9
Monitoring Features	9
Feature Support per License	10
Where to Go Next	11
1	
Using the Command-Line Interface	1
Understanding Command Modes	1
Understanding the Help System	3
Understanding Abbreviated Commands	3
Understanding no and default Forms of Commands	4
Understanding CLI Error Messages	4
Using Command History	4
Changing the Command History Buffer Size	5
Recalling Commands	5
Disabling the Command History Feature	5
Using Editing Features	6
Enabling and Disabling Editing Features	6
Editing Commands through Keystrokes	6
Editing Command Lines that Wrap	8
Searching and Filtering Output of show and more Commands	8
Accessing the CLI	9
Accessing the CLI through a Console Connection or through Telnet	9

1	
Assigning the Switch IP Address and Default Gateway	1
Understanding the Boot Process	1
Initial Configuration	2
Assigning Switch Information	3
Default Switch Information	3
Understanding DHCP-Based Autoconfiguration	4
DHCP Client Request Process	4
Understanding DHCP-based Autoconfiguration and Image Update	5
DHCP Autoconfiguration	5
DHCP Auto-Image Update	5
Limitations and Restrictions	6
Configuring DHCP-Based Autoconfiguration	6
DHCP Server Configuration Guidelines	7
Configuring the TFTP Server	7
Configuring the DNS	8
Configuring the Relay Device	8
Obtaining Configuration Files	9
Example Configuration	10
Configuring the DHCP Auto Configuration and Image Update Features	11
Configuring DHCP Autoconfiguration (Only Configuration File)	11
Configuring DHCP Auto-Image Update (Configuration File and Image)	12
Configuring the Client	14
Manually Assigning IP Information	15
Checking and Saving the Running Configuration	16
Modifying the Startup Configuration	17
Default Boot Configuration	18
Automatically Downloading a Configuration File	18
Specifying the Filename to Read and Write the System Configuration	18
Booting Manually	19
Booting a Specific Software Image	19
Controlling Environment Variables	20
Scheduling a Reload of the Software Image	21
Configuring a Scheduled Reload	22
Displaying Scheduled Reload Information	23
1	
Configuring Cisco IOS Configuration Engine	1
Understanding Cisco Configuration Engine Software	1
Configuration Service	2
Event Service	3
NameSpace Mapper	3
What You Should Know About the CNS IDs and Device Hostnames	3
ConfigID	3

DeviceID	4
Hostname and DeviceID	4
Using Hostname, DeviceID, and ConfigID	4
Understanding Cisco IOS Agents	5
Initial Configuration	5
Incremental (Partial) Configuration	6
Synchronized Configuration	6
Configuring Cisco IOS Agents	6
Enabling Automated CNS Configuration	6
Enabling the CNS Event Agent	7
Enabling the Cisco IOS CNS Agent	8
Enabling an Initial Configuration	9
Enabling a Partial Configuration	12
Upgrading Devices with Cisco IOS Image Agent	13
Prerequisites for the CNS Image Agent	13
Restrictions for the CNS Image Agent	13
Displaying CNS Configuration	14
1	
Administering the Switch	1
Managing the System Time and Date	1
Understanding the System Clock	2
Understanding Network Time Protocol	2
Configuring NTP	4
Default NTP Configuration	4
Configuring NTP Authentication	4
Configuring NTP Associations	5
Configuring NTP Broadcast Service	6
Configuring NTP Access Restrictions	8
Configuring the Source IP Address for NTP Packets	10
Displaying the NTP Configuration	11
Configuring Time and Date Manually	11
Setting the System Clock	11
Displaying the Time and Date Configuration	12
Configuring the Time Zone	12
Configuring Summer Time (Daylight Saving Time)	13
Configuring a System Name and Prompt	14
Default System Name and Prompt Configuration	15
Configuring a System Name	15
Understanding DNS	15
Default DNS Configuration	16
Setting Up DNS	16
Displaying the DNS Configuration	17
Creating a Banner	17

- Default Banner Configuration 17
- Configuring a Message-of-the-Day Login Banner 18
- Configuring a Login Banner 19
- Managing the MAC Address Table 19
- Building the Address Table 20
- MAC Addresses and VLANs 20
- Default MAC Address Table Configuration 21
- Changing the Address Aging Time 21
- Removing Dynamic Address Entries 21
- Configuring MAC Address Change Notification Traps 22
- Configuring MAC Address Move Notification Traps 24
- Configuring MAC Threshold Notification Traps 25
- Configuring MAC Limiting per VFI and BD 26
- Adding and Removing Static Address Entries 28
- Configuring Unicast MAC Address Filtering 29
- Disabling MAC Address Learning on a VLAN 30
- Displaying Address Table Entries 31
- Managing the ARP Table 31
- 1
- Configuring Synchronous Ethernet 1
- Understanding SyncE 1
- Reference Clocks 1
- BITS Interface 2
- Synchronous Ethernet and Ethernet Synchronization Messaging Channel 3
- Configuring Synchronous Ethernet 4
- Configuring Input Clock and Priority 4
- Configuring Hold-off timer 5
- Configuring Hold-over Timer 5
- Configuring Wait-to-Restore Timer 6
- Configuring Revertive Mode 6
- Configuring EEC Option 6
- Configuring BITS 6
- Configuring BITS Input 7
- Configuring BITS Output 7
- Configuring Output Clock 8
- SyncE Show Commands 8
- SyncE Debug Commands 9
- Configuring SyncE 9
- Default SyncE Configuration 9
- Configuring the Network Clock Selection 10
- Selecting the Network Clock 10
- Configuring SyncE using ESMC and SSM 11
- Monitoring SyncE 12

1	
Configuring the Switch External Alarms	1
Understanding Switch Alarms	1
Configuring Switch Alarms	2
1	
Configuring SDM Templates	1
Understanding the SDM Templates	1
Configuring the Switch SDM Template	3
SDM Template Configuration Guidelines	3
Setting the SDM Template	3
Configuring IO Mode on Cisco ME3600X-24CX Switch	4
I/O Mode 1	4
I/O Mode 2	5
I/O Mode 3	5
T1/E1 License on ME-3600X-24CX Switch	6
Displaying the SDM Templates	6
1	
Configuring Switch-Based Authentication	1
Preventing Unauthorized Access to Your Switch	1
Protecting Access to Privileged EXEC Commands	2
Default Password and Privilege Level Configuration	2
Setting or Changing a Static Enable Password	3
Protecting Enable and Enable Secret Passwords with Encryption	3
Disabling Password Recovery	5
Setting a Telnet Password for a Terminal Line	6
Configuring Username and Password Pairs	6
Configuring Multiple Privilege Levels	7
Setting the Privilege Level for a Command	8
Changing the Default Privilege Level for Lines	9
Logging into and Exiting a Privilege Level	9
Controlling Switch Access with TACACS+	10
Understanding TACACS+	10
TACACS+ Operation	12
Configuring TACACS+	12
Default TACACS+ Configuration	13
Identifying the TACACS+ Server Host and Setting the Authentication Key	13
Configuring TACACS+ Login Authentication	14
Configuring TACACS+ Authorization for Privileged EXEC Access and Network Services	16
Starting TACACS+ Accounting	16
Displaying the TACACS+ Configuration	17
Controlling Switch Access with RADIUS	17
Understanding RADIUS	17
RADIUS Operation	19

- Configuring RADIUS 19
 - Default RADIUS Configuration 20
 - Identifying the RADIUS Server Host 20
 - Configuring RADIUS Login Authentication 22
 - Defining AAA Server Groups 24
 - Configuring RADIUS Authorization for User Privileged Access and Network Services 26
 - Starting RADIUS Accounting 27
 - Configuring Settings for All RADIUS Servers 28
 - Configuring the Switch to Use Vendor-Specific RADIUS Attributes 28
 - Configuring the Switch for Vendor-Proprietary RADIUS Server Communication 29
 - Configuring RADIUS Server Load Balancing 30
 - Displaying the RADIUS Configuration 30
 - Controlling Switch Access with Kerberos 31
 - Understanding Kerberos 31
 - Kerberos Operation 33
 - Authenticating to a Boundary Switch 33
 - Obtaining a TGT from a KDC 34
 - Authenticating to Network Services 34
 - Configuring Kerberos 34
 - Configuring the Switch for Local Authentication and Authorization 34
 - Configuring the Switch for Secure Shell 35
 - Understanding SSH 36
 - SSH Servers, Integrated Clients, and Supported Versions 36
 - Limitations 36
 - Configuring SSH 37
 - Configuration Guidelines 37
 - Setting Up the Switch to Run SSH 37
 - Configuring the SSH Server 38
 - Displaying the SSH Configuration and Status 39
 - Configuring the Switch for Secure Copy Protocol 39
 - Information About Secure Copy 40
- 1
- Configuring Interfaces 1
 - Understanding Interface Types 1
 - NNI Port Type 2
 - Port-Based VLANs 2
 - Switch Ports 2
 - Access Ports 3
 - Trunk Ports 3
 - Routed Ports 3
 - Ethernet Management Port 4
 - Switch Virtual Interfaces 4
 - EtherChannel Port Groups 4

Ethernet Flow Points	5
Connecting Interfaces	5
Using Interface Configuration Mode	6
Procedures for Configuring Interfaces	6
Configuring a Range of Interfaces	7
Configuring and Using Interface Range Macros	8
Using the Ethernet Management Port	10
Understanding the Ethernet Management Port	10
Supported Features on the Ethernet Management Port	12
Configuring the Ethernet Management Port	12
TFTP and the Ethernet Management Port	12
Configuring Ethernet Interfaces	13
Default Ethernet Interface Configuration	13
Configuring Interface Speed and Duplex Mode	14
Speed and Duplex Configuration Guidelines	14
Setting the Interface Speed and Duplex Parameters	15
Configuring IEEE 802.3x Flow Control	16
Configuring Auto-MDIX on an Interface	17
Adding a Description for an Interface	18
Configuring Layer 3 Interfaces	19
Configuring the Interface MTU	20
Monitoring and Maintaining the Interfaces	21
Monitoring Interface Status	21
Clearing and Resetting Interfaces and Counters	23
Shutting Down and Restarting the Interface	23
1	
Configuring VLANs	1
Understanding VLANs	1
Supported VLANs	3
Normal-Range VLANs	3
Extended-Range VLANs	4
VLAN Port Membership Modes	4
UNI VLANs	4
Creating and Modifying VLANs	5
Default Ethernet VLAN Configuration	5
VLAN Configuration Guidelines	6
Creating or Modifying an Ethernet VLAN	7
Assigning Static-Access Ports to a VLAN	8
Displaying VLANs	9
Configuring VLAN Trunks	9
Trunking Overview	9
IEEE 802.1Q Configuration Considerations	10
Default Layer 2 Ethernet Interface VLAN Configuration	10

- Configuring an Ethernet Interface as a Trunk Port 11
- Interaction with EtherChannels 11
- Configuring a Trunk Port 11
- Defining the Allowed VLANs on a Trunk 12
- Configuring the Native VLAN for Untagged Traffic 13
- Configuring Trunk Ports for Load Sharing 14
- Load Sharing Using STP Port Priorities 14
- Load Sharing Using STP Path Cost 15
- 1
- Configuring Ethernet Virtual Connections (EVCs) 1
- Supported EVC Features 2
- Understanding EVC Features 3
- Ethernet Virtual Connections 3
- Service Instances and EFPs 3
- Encapsulation 4
- Bridge Domains 6
- Split-Horizon 6
- Split Horizon Groups 7
- Rewrite Operations 7
- Configuring EFPs 8
- Default EVC Configuration 8
- Configuration Guidelines 8
- Creating Service Instances 10
- Configuration Examples 11
- Configuring a Service Instance 11
- Encapsulation Using a VLAN Range 11
- Two Service Instances Joining the Same Bridge Domain 12
- Bridge Domains and VLAN Encapsulation 12
- Rewrite 12
- Split Horizon 13
- Hairpinning 14
- Egress Filtering 14
- l2protocol Forward Option 15
- Examples of Unsupported Configurations 17
- Overlapping Encapsulation 17
- Global Rewrite Operation Limitation on a Switch 18
- Restricted number of tags supported on EVC and switchport 19
- Configuring Other Features on EFPs 19
- EFPs and EtherChannels 20
- EFPs and Layer 2 Protocols 20
- MAC Address Forwarding, Learning and Aging on EFPs 20
- Configuring IEEE 802.1Q Tunneling and Layer 2 Protocol Tunneling Using EFPs 21
- 802.1Q Tunneling (QinQ) 21

Layer 2 Protocol Tunneling	26
EFPs and Ethernet over Multiprotocol Layer Switching (EoMPLS)	29
Bridge Domain Routing	29
EFPs and Switchport MAC Addresses	30
EVC and Switchports	30
EFPs and MSTP	34
L3 Unicast and Multicast Routing on a Bridge Domain with Multiple EFPs	34
Configuring L3 Multicast Routing on a Bridge Domain	36
Cross-Connect on EFP Interfaces	36
Configuring Cross-Connect on an EFP Interface	37
Local Connect on EFP Interfaces	38
Configuring Local Connect on an EFP Interface	38
Monitoring EVC	40
1	
Configuring Command Macros	1
Understanding Command Macros	1
Configuring Command Macros	1
Default Command Macro Configuration	2
Command Macro Configuration Guidelines	2
Creating Command Macros	3
Applying Command Macros	4
Displaying Command Macros	5
1	
Configuring STP	1
Understanding Spanning-Tree Features	1
STP Overview	2
Spanning-Tree Topology and BPDUs	2
Bridge ID, Switch Priority, and Extended System ID	3
Spanning-Tree Interface States	4
Blocking State	5
Listening State	6
Learning State	6
Forwarding State	6
Disabled State	6
How a Switch or Port Becomes the Root Switch or Root Port	7
Spanning Tree and Redundant Connectivity	7
Spanning-Tree Address Management	8
Accelerated Aging to Retain Connectivity	8
Spanning-Tree Modes and Protocols	9
Supported Spanning-Tree Instances	9
Spanning-Tree Interoperability and Backward Compatibility	10
STP and IEEE 802.1Q Trunks	10
Configuring Spanning-Tree Features	10

Default Spanning-Tree Configuration 11
Spanning-Tree Configuration Guidelines 11
Changing the Spanning-Tree Mode. 12
Disabling Spanning Tree 13
Configuring the Root Switch 14
Configuring a Secondary Root Switch 15
Configuring Port Priority 16
Configuring Path Cost 18
Configuring the Switch Priority of a VLAN 19
Configuring Spanning-Tree Timers 20
Configuring the Hello Time 20
Configuring the Forwarding-Delay Time for a VLAN 21
Configuring the Maximum-Aging Time for a VLAN 21
Displaying the Spanning-Tree Status 22
1
Configuring MSTP 1
Understanding MSTP 2
Multiple Spanning-Tree Regions 2
IST, CIST, and CST 2
Operations Within an MST Region 3
Operations Between MST Regions 3
IEEE 802.1s Terminology 5
Hop Count 5
Boundary Ports 6
IEEE 802.1s Implementation 6
Port Role Naming Change 6
Interoperation Between Legacy and Standard Switches 7
Detecting Unidirectional Link Failure 7
Interoperability with IEEE 802.1D STP 8
Understanding RSTP 8
Port Roles and the Active Topology 9
Rapid Convergence 9
Synchronization of Port Roles 11
Bridge Protocol Data Unit Format and Processing 12
Processing Superior BPDU Information 13
Processing Inferior BPDU Information 13
Topology Changes 13
Configuring MSTP Features 14
Default MSTP Configuration 14
MSTP Configuration Guidelines 15
Specifying the MST Region Configuration and Enabling MSTP 16
Configuring the Root Switch 17
Configuring a Secondary Root Switch 18

Configuring Port Priority	19
Configuring Path Cost	21
Configuring the Switch Priority	22
MSTP and Ethernet Flow Points (EFPs)	23
Configuring the Hello Time	23
Configuring the Forwarding-Delay Time	23
Configuring the Maximum-Aging Time	24
Configuring the Maximum-Hop Count	24
Specifying the Link Type to Ensure Rapid Transitions	25
Designating the Neighbor Type	26
Restarting the Protocol Migration Process	26
Displaying the MST Configuration and Status	27
1	
Configuring Optional Spanning-Tree Features	1
Understanding Optional Spanning-Tree Features	1
Understanding Port Fast	2
Understanding BPDU Guard	2
Understanding BPDU Filtering	3
Understanding EtherChannel Guard	3
Understanding Root Guard	3
Understanding Loop Guard	4
Configuring Optional Spanning-Tree Features	5
Default Optional Spanning-Tree Configuration	5
Optional Spanning-Tree Configuration Guidelines	5
Enabling Port Fast	5
Enabling BPDU Guard	6
Enabling BPDU Filtering	7
Enabling EtherChannel Guard	8
Enabling Root Guard	9
Enabling Loop Guard	9
Displaying the Spanning-Tree Status	10
1	
Configuring Resilient Ethernet Protocol	1
Understanding REP	1
Link Integrity	3
Fast Convergence	4
VLAN Load Balancing	4
Spanning Tree Interaction	6
REP Ports	6
Configuring REP	6
Default REP Configuration	7
REP Configuration Guidelines	7
Configuring the REP Administrative VLAN	8

- Configuring REP Interfaces 9
- Setting Manual Preemption for VLAN Load Balancing 13
- Configuring SNMP Traps for REP 13
- Monitoring REP 14
 - 1
- Configuring DHCP Features 1
- Understanding DHCP Features 1
- DHCP Server 2
- DHCP Relay Agent 2
- DHCP Snooping 2
- Option-82 Data Insertion 3
- Cisco IOS DHCP Server Database 6
- DHCP Snooping Binding Database 6
- Configuring DHCP Features 7
- Default DHCP Configuration 8
- DHCP Snooping Configuration Guidelines 8
- Configuring the DHCP Server 9
- Configuring the DHCP Relay Agent 10
- Specifying the Packet Forwarding Address 10
- Enabling DHCP Snooping and Option 82 11
- Enabling the DHCP Option-82 on Untrusted Port 13
- Enabling the Cisco IOS DHCP Server Database 13
- Enabling the DHCP Snooping Binding Database Agent 14
- Displaying DHCP Snooping Information 15
- Understanding DHCP Server Port-Based Address Allocation 15
- Configuring DHCP Server Port-Based Address Allocation 15
- Default Port-Based Address Allocation Configuration 16
- Port-Based Address Allocation Configuration Guidelines 16
- Enabling DHCP Server Port-Based Address Allocation 16
- Displaying DHCP Server Port-Based Address Allocation 18
 - 1
- Configuring Dynamic ARP Inspection 1
- Understanding Dynamic ARP Inspection 1
- Interface Trust States and Network Security 3
- Rate Limiting of ARP Packets 4
- Relative Priority of ARP ACLs and DHCP Snooping Entries 4
- Logging of Dropped Packets 4
- Configuring Dynamic ARP Inspection 5
- Default Dynamic ARP Inspection Configuration 5
- Dynamic ARP Inspection Configuration Guidelines 6
- Configuring Dynamic ARP Inspection in DHCP Environments 7
- Configuring ARP ACLs for Non-DHCP Environments 8
- Limiting the Rate of Incoming ARP Packets 10

Performing Validation Checks	12
Configuring the Log Buffer	13
Displaying Dynamic ARP Inspection Information	14
1	
Configuring IGMP Snooping	1
Understanding IGMP Snooping	1
IGMP Support	2
IGMP Versions	3
Joining a Multicast Group	3
Leaving a Multicast Group	5
Immediate Leave	6
IGMP Configurable-Leave Timer	6
IGMP Report Suppression	6
Configuring IGMP Snooping	6
Default IGMP Snooping Configuration	7
Enabling or Disabling IGMP Snooping	7
Configuring a Multicast Router Port	8
Configuring a Host Statically to Join a Group	9
Enabling IGMP Immediate Leave	9
Configuring the IGMP Leave Timer	10
Configuring TCN-Related Commands	11
Controlling the Multicast Flooding Time After a TCN Event	11
Recovering from Flood Mode	11
Disabling Multicast Flooding During a TCN Event	12
Disabling IGMP Report Suppression	12
Displaying IGMP Snooping Information	13
Configuring IGMP Filtering and Throttling	14
Default IGMP Filtering and Throttling Configuration	15
Configuring IGMP Profiles	15
Applying IGMP Profiles	16
Setting the Maximum Number of IGMP Groups	17
Configuring the IGMP Throttling Action	18
Displaying IGMP Filtering and Throttling Configuration	19
1	
Configuring PIM Snooping	1
Understanding How PIM Snooping Works	1
Default PIM Snooping Configuration	4
PIM Snooping Configuration Guidelines and Restrictions	4
Configuring PIM Snooping	4
Enabling PIM Snooping Globally	5
Enabling PIM Snooping in a VLAN	5
Disabling PIM Snooping Designated-Router Flooding	6
1	

- Configuring IEEE 802.1x Port-Based Authentication 1
- Understanding IEEE 802.1x Port-Based Authentication 1
- Device Roles 2
- Authentication Initiation and Message Exchange 3
- Ports in Authorized and Unauthorized States 4
- 802.1x with RADIUS Accounting 4
- Supported Topologies 5
- 802.1x with VLAN Assignment 5
- Configuring IEEE 802.1x Authentication 6
- Default 802.1x Configuration 7
- 802.1x Configuration Guidelines 8
- Maximum Number of Allowed Devices Per Port 9
- Configuring IEEE 802.1x Violation Modes 9
- Configuring IEEE 802.1x Authentication 10
- Configuring the Switch-to-RADIUS-Server Communication 11
- Configuring Periodic Re-Authentication 12
- Manually Re-Authenticating a Client Connected to a Port 13
- Changing the Quiet Period 13
- Changing the Switch-to-Client Retransmission Time 14
- Setting the Switch-to-Client Frame-Retransmission Number 14
- Setting the Re-Authentication Number 15
- Configuring the Host Mode 16
- Resetting the 802.1x Configuration to the Default Values 16
- Configuring 802.1x Accounting 17
- Configuring 802.1x User Distribution 18
- Displaying 802.1x Statistics and Status 19
- 1
- Configuring IEEE 802.1ad 1
- Prerequisites for IEEE 802.1ad 1
- Restrictions for IEEE 802.1ad 1
- Information About IEEE 802.1ad 2
- How Provider Bridges Work 2
- S-Bridge Component 3
- C-Bridge Component 3
- MAC Addresses for Layer 2 Protocols 4
- Guidelines for Handling BPDU 5
- UNI-C Ports 5
- UNI-S Ports 5
- NNI Ports 6
- Interoperability of QinQ and Dot1ad 6
- How to Configure IEEE 802.1ad 6
- Configuring a Switchport 7
- UNI-C Port 7

UNI-S Port	8
NNI Port	9
Examples	10
Configuring a Layer 2 Protocol Forward	11
Examples	12
Configuring a Switchport for Translating QinQ to 802.1ad	12
Examples	14
Configuring a Customer-Facing UNI-C Port with EVC	15
Examples	18
Configuring a Customer-Facing UNI-C Port and Switchport on NNI with EVC	18
Examples	21
Configuring a Customer-Facing UNI-S Port with EVC	21
Examples	23
Configuration Examples for IEEE 802.1ad	24
Displaying a Dot1ad Configuration	24
Additional References	25
Related Documents	25
Standards	25
Technical Assistance	25
Glossary	25
1	
Configuring Traffic Control	1
Configuring Storm Control	1
Understanding Storm Control	1
Default Storm Control Configuration	3
Configuring Storm Control and Threshold Levels	3
Configuring Port Blocking	5
Default Port Blocking Configuration	5
Blocking Flooded Traffic on an Interface	5
Configuring EVC MAC Security	6
Understanding MAC Security	7
Secure MAC Addresses	7
Security Violations	7
Default EVC MAC Security Configuration	8
MAC Address Security Guidelines	9
Enabling and Configuring EVC MAC Security	9
Displaying Traffic Control Settings	12
1	
Configuring CDP	1
Understanding CDP	1
Configuring CDP	2
Default CDP Configuration	2
Configuring the CDP Characteristics	2

- Disabling and Enabling CDP 3
- Disabling and Enabling CDP on an Interface 4
- CDP and Ethernet Flow Points (EFPs) 4
- Monitoring and Maintaining CDP 5
 - 1
- Configuring LLDP and LLDP-MED 1
- Understanding LLDP and LLDP-MED 1
- Understanding LLDP 1
- Understanding LLDP-MED 2
- Configuring LLDP and LLDP-MED 3
- Default LLDP Configuration 3
- Configuring LLDP Characteristics 3
- Disabling and Enabling LLDP Globally 4
- Disabling and Enabling LLDP on an Interface 5
- Configuring LLDP-MED TLVs 6
- LLDP and Ethernet Flow Points (EFPs) 7
- Monitoring and Maintaining LLDP and LLDP-MED 7
 - 1
- Configuring UDLD 1
- Understanding UDLD 1
- Modes of Operation 1
- Methods to Detect Unidirectional Links 2
- Configuring UDLD 3
- Default UDLD Configuration 4
- Configuration Guidelines 4
- Enabling UDLD Globally 5
- Enabling UDLD on an Interface 5
- Resetting an Interface Disabled by UDLD 6
- UDLD and Ethernet Flow Points (EFPs) 6
- Displaying UDLD Status 7
 - 1
- Configuring System Message Logging 1
- Understanding System Message Logging 1
- Configuring System Message Logging 2
- System Log Message Format 2
- Default System Message Logging Configuration 3
- Disabling Message Logging 3
- Setting the Message Display Destination Device 4
- Synchronizing Log Messages 5
- Enabling and Disabling Time Stamps on Log Messages 7
- Enabling and Disabling Sequence Numbers in Log Messages 7
- Defining the Message Severity Level 8
- Limiting Syslog Messages Sent to the History Table and to SNMP 9

Enabling the Configuration-Change Logger	10
Configuring UNIX Syslog Servers	11
Logging Messages to a UNIX Syslog Daemon	11
Configuring the UNIX System Logging Facility	12
Displaying the Logging Configuration	13
1	
Configuring RMON	1
Understanding RMON	1
Configuring RMON	2
Default RMON Configuration	3
Configuring RMON	3
Configuring RMON Alarms and Events	3
Collecting Group History Statistics on an Interface	5
Collecting Group Ethernet Statistics on an Interface	6
Displaying RMON Status	6
1	
Using the SD Flash Memory Module	1
SD Flash Memory Module	1
Supported SD Cards	2
Accessing the SD Card	2
SD Card Status	2
SD Card LED	2
Insertion and Removal of Card	2
Configuration Restrictions	3
Configuring SD Flash Card	3
Transferring Running Configuration	3
Transferring Start-up Configuration	4
Configure Core and Crash information	4
Commands	5
1	
Configuring SNMP	1
Understanding SNMP	1
SNMP Versions	2
SNMP Manager Functions	3
SNMP Agent Functions	4
SNMP Community Strings	4
Using SNMP to Access MIB Variables	4
SNMP Notifications	5
SNMP ifIndex MIB Object Values	5
MIB Data Collection and Transfer	6
Configuring SNMP	6
Default SNMP Configuration	7
SNMP Configuration Guidelines	7

Disabling the SNMP Agent 8
Configuring Community Strings 8
Configuring SNMP Groups and Users 10
Configuring SNMP Notifications 12
Setting the CPU Threshold Notification Types and Values 16
Setting the Agent Contact and Location Information 17
Limiting TFTP Servers Used Through SNMP 17
Configuring MIB Data Collection and Transfer 18
Configuring the Cisco Process MIB CPU Threshold Table 20
SNMP Examples 21
Displaying SNMP Status 23
1
Configuring Embedded Event Manager 1
Understanding Embedded Event Manager 1
Event Detectors 2
Embedded Event Manager Actions 4
Embedded Event Manager Policies 4
Embedded Event Manager Environment Variables 4
EEM 3.2 5
Configuring Embedded Event Manager 5
Registering and Defining an Embedded Event Manager Applet 6
Registering and Defining an Embedded Event Manager TCL Script 7
Displaying Embedded Event Manager Information 7
1
Configuring Network Security with ACLs 1
Understanding ACLs 1
Supported ACLs 2
Port ACLs 3
Router ACLs 4
VLAN Maps 5
Handling Fragmented and Unfragmented Traffic 5
Configuring IPv4 ACLs 6
Creating Standard and Extended IPv4 ACLs 7
IPv4 Access List Numbers 8
ACL Logging 8
Creating a Numbered Standard ACL 9
Creating a Numbered Extended ACL 10
Resequencing ACEs in an ACL 14
Creating Named Standard and Extended ACLs 14
Using Time Ranges with ACLs 16
Including Comments in ACLs 18
Applying an IPv4 ACL to a Terminal Line 18
Applying an IPv4 ACL to an Interface 19

Hardware and Software Treatment of IP ACLs	20
Troubleshooting ACLs	21
IPv4 ACL Configuration Examples	22
Numbered ACLs	24
Extended ACLs	24
Named ACLs	25
Time Range Applied to an IP ACL	25
Commented IP ACL Entries	26
ACL Logging	26
Creating Named MAC Extended ACLs	27
Applying a MAC ACL to a Layer 2 Interface	29
Configuring VLAN Maps	30
VLAN Map Configuration Guidelines	30
Creating a VLAN Map	31
Examples of ACLs and VLAN Maps	32
Applying a VLAN Map to a VLAN	34
Using VLAN Maps in Your Network	34
Wiring Closet Configuration	34
Denying Access to a Server on Another VLAN	35
Using VLAN Maps with Router ACLs	36
VLAN Maps and Router ACL Configuration Guidelines	37
Examples of Router ACLs and VLAN Maps Applied to VLANs	38
ACLs and Switched Packets	38
ACLs and Routed Packets	38
ACLs and Multicast Packets	39
Displaying IPv4 ACL Configuration	40
1	
Configuring IPv6 ACLs	1
Understanding IPv6 ACLs	2
Supported ACL Features	2
IPv6 ACL Limitations	3
Configuring IPv6 ACLs	3
Default IPv6 ACL Configuration	4
Interaction with Other Features and Switches	4
Creating IPv6 ACLs	4
Applying an IPv6 ACL to an Interface	6
Displaying IPv6 ACLs	7
1	
Configuring Quality of Service (QoS)	1
Restrictions for QoS	2
Understanding QoS	2
Modular QoS CLI Configuration	3
Hierarchical QoS	4

- Classification 5
 - The match Command 7
 - VLAN Match Support 7
 - Match Input Interface and Vlan Support 8
 - Classification Based on EFP 9
 - Classification Based on Layer 2 Class of Service 10
 - Classification Based on IP Precedence 10
 - Classification Based on IP DSCP 10
 - CoS Mapping 11
 - Ingress Classification Based on QoS ACLs 12
 - Classification Based on QoS Groups 12
 - Classification Based on Discard Class 14
 - Classification Based on VLAN IDs 14
 - QoS-Context Manager 14
 - Classification for MPLS and EoMPLS 16
 - Table Maps 18
 - Policing 19
 - Priority Policing 20
 - Packet Marking 21
 - Restrictions and Usage Guidelines 21
 - Congestion Avoidance and Queuing 23
 - Weighted Tail Drop 23
 - Weighted Random Early Detection (WRED) 25
 - Average Queue Size 26
 - Congestion Management and Scheduling 27
 - Traffic Shaping 27
 - Class-Based Weighted Fair Queuing 29
 - Priority Queuing 30
 - Input and Output Policy Maps 31
 - Input Policy Maps 32
 - Output Policy Maps 32
 - QoS Treatment for Performance-Monitoring Protocols 33
 - Cisco IP-SLAs Probes 33
 - CPU Traffic 33
 - Configuring QoS 34
 - Default QoS Configuration 34
 - Configuration Guidelines and Limitations 34
 - Configuring Input Policy Maps 36
 - Configuring Input Class Maps 36
 - Using ACLs to Classify Traffic 38
 - Layer 4 port matching 39
 - Configuring Class-Based Marking 43
 - Configuring Policing 45

- Configuring Output Policy Maps 52
- Configuring Output Class Maps 52
- Configuring Class-Based-Weighted Fair Queuing 55
- Configuring Class-Based Shaping 58
- Configuring Port Shaping 59
- Configuring Marking 60
- Configuring Policing 61
- Configuring Class-Based Priority Queuing 64
- Configuring Weighted Tail Drop 66
- Configuring Weighted Random Early Detection 68
- Hierarchical Policy Maps Configuration Examples 71
- Configuring Table Maps 72
- Configuring MPLS and EoMPLS QoS 74
- Default MPLS and EoMPLS QoS Configuration 74
- MPLS QoS Configuration Guidelines 74
- Setting the Priority of Packets with Experimental Bits 74
- MPLS DiffServ Tunneling Modes 76
- Attaching a Service Policy to an Interface or EFP 76
- Displaying QoS Information 78
- 1
- Hierarchical Color-Aware Policing 1
- Contents 1
- Restrictions for Hierarchical Color-Aware Policing 1
- Information About Hierarchical Color-Aware Policing 2
- Hierarchical Order Policing 2
- Limited Color-Aware Policing 2
- How to Configure Hierarchical Color-Aware Policing 3
- Configuring the Hierarchical Color-Aware Policing Feature 3
- Example 5
- Configuration Examples for Hierarchical Color-Aware Policing 6
- Example: Enable the Hierarchical Color-Aware Policing Feature 6
- Example: Hierarchical Color-Aware Policing 6
- 1
- Configuring Multi-level Priority Queues 1
- Prerequisites for Multi-Level Priority Queues 1
- Restrictions for Multi-Level Priority Queues 1
- Information About Multi-Level Priority Queues 2
- Benefits of Multi-Level Priority Queues 2
- Functionality of Multi-Level Priority Queues 2
- Traffic Policing and Multi-Level Priority Queues 3
- How to Configure Multi-Level Priority Queues 3
- Configuring Multi-Level Priority Queues in a Policy Map 4
- Verifying Multi-Level Priority Queues 5

Configuration Examples for Multi-Level Priority Queues 6

Example: Configuring Multi-Level Priority Queues 6

Example: Unacceptable MPQ Configurations 7

Example: Verifying Multi-Level Priority Queues 7

1

Configuring Policy-Based Routing (PBR) 1

Prerequisites for PBR 1

Restrictions for PBR 1

Information About PBR 2

PBR Overview 2

How to Configure PBR 2

Configuring PBR 2

Configuration Examples for PBR 3

1

Configuring Control Plane Policing (CoPP) 1

Configuring CoPP 3

Example 6

Monitoring CoPP 7

Clearing CoPP policy-map statistics 7

Removing CoPP Configuration 7

Example 7

Changing Policer Rate for a Class 8

Example 9

1

Configuring EtherChannels 1

Understanding EtherChannels 1

EtherChannel Overview 2

Port-Channel Interfaces 3

Port Aggregation Protocol 4

PAGP Modes 5

PAGP Interaction with Other Features 5

Link Aggregation Control Protocol 6

LACP Modes 6

LACP Interaction with Other Features 6

EtherChannel On Mode 7

Load Balancing and Forwarding Methods 7

Configuring EtherChannels 9

Default EtherChannel Configuration 9

EtherChannel Configuration Guidelines 10

Configuring Layer 2 EtherChannels 11

Configuring Layer 3 EtherChannels 13

Creating Port-Channel Logical Interfaces 13

Configuring the Physical Interfaces 14

Configuring EtherChannel Load Balancing	16
Configuring the PAGP Learn Method and Priority	17
Configuring LACP Hot-Standby Ports	18
Configuring the LACP System Priority	19
Configuring the LACP Port Priority	19
Configuring LACP Maximum Bundles	20
Configuration Example	20
Configuring LACP Fast Switchover	21
Configuration Example	22
Configuring LACP Fast Rate	23
Configuration Example	23
Configuring the EtherChannel Min-Links Feature	23
EtherChannels and Ethernet Flow Points (EFPs)	28
Displaying EtherChannel, PAGP, and LACP Status	29
1	
Configuring IP Unicast Routing	1
Understanding IP Routing	1
Types of Routing	2
Steps for Configuring Routing	2
Configuring IP Addressing	3
Default Addressing Configuration	3
Assigning IP Addresses to Network Interfaces	4
Use of Subnet Zero	5
Classless Routing	5
Configuring Address Resolution Methods	7
Define a Static ARP Cache	7
Set ARP Encapsulation	9
Enable Proxy ARP	9
Routing Assistance When IP Routing is Disabled	10
Proxy ARP	10
Default Gateway	10
ICMP Router Discovery Protocol (IRDP)	10
Configuring Broadcast Packet Handling	12
Enabling Directed Broadcast-to-Physical Broadcast Translation	12
Forwarding UDP Broadcast Packets and Protocols	13
Establishing an IP Broadcast Address	14
Flooding IP Broadcasts	14
Monitoring and Maintaining IP Addressing	16
Enabling IPv4 Unicast Routing	16
Configuring RIP	17
Default RIP Configuration	18
Configuring Basic RIP Parameters	18
Configuring RIP Authentication	20

- Configuring Split Horizon 20
- Configuring Summary Addresses 21
- Configuring OSPF 22
- Default OSPF Configuration 23
- Nonstop Forwarding Awareness 24
- Configuring Basic OSPF Parameters 24
- Configuring OSPF Interfaces 25
- Configuring OSPF Network Types 27
- Configuring OSPF for Nonbroadcast Networks 27
- Configuring Network Types for OSPF Interfaces 27
- Configuring OSPF Area Parameters 29
- Configuring Other OSPF Parameters 30
- Changing LSA Group Pacing 31
- Configuring a Loopback Interface 32
- Monitoring OSPF 33
- Configuring EIGRP 33
- Default EIGRP Configuration 35
- Nonstop Forwarding Awareness 36
- Configuring Basic EIGRP Parameters 36
- Configuring EIGRP Interfaces 37
- Configuring EIGRP Route Authentication 38
- Configuring EIGRP Stub Routing 39
- Monitoring and Maintaining EIGRP 40
- Configuring BGP 41
- Default BGP Configuration 43
- Nonstop Forwarding Awareness 45
- Enabling BGP Routing 45
- Managing Routing Policy Changes 47
- BFD Support for Static Routing 48
- Configuring BGP Decision Attributes 49
- Configuring BGP Filtering with Route Maps 51
- Configuring BGP Filtering by Neighbor 52
- Configuring Prefix Lists for BGP Filtering 53
- Configuring BGP Community Filtering 54
- Configuring BGP Neighbors and Peer Groups 56
- Configuring Aggregate Addresses 58
- Configuring Routing Domain Confederations 58
- Configuring Route Dampening 59
- Configuring Border Gateway Protocol (BGP) Prefix-Independent Convergence (PIC) 60
- Contents 60
- Prerequisites for BGP PIC 60
- Restrictions for BGP PIC 61
- Limitations 61

Information About BGP PIC 61
How to Configure BGP PIC 68
Monitoring and Maintaining BGP 75
Configuring ISO CLNS Routing 76
Configuring IS-IS Dynamic Routing 77
Default IS-IS Configuration 78
Nonstop Forwarding Awareness 78
Enabling IS-IS Routing 79
Configuring IS-IS Global Parameters 80
Configuring IS-IS Interface Parameters 83
IS-IS Client for BFD C-Bit Support 85
Information About IS-IS Client for BFD C-Bit Support 85
Prerequisites for IS-IS Client for BFD C-Bit Support 85
IS-IS Restarts and BFD Sessions 85
Configuring IS-IS Client for BFD C-Bit Support 86
Monitoring and Maintaining IS-IS 86
Configuring BFD 87
Default BFD Configuration 89
Default BFD Configuration Guidelines 89
Configuring BFD Session Parameters on an Interface 90
Enabling BFD Routing Protocol Clients 91
Configuring BFD for Port-Channel 92
Configuring BFD Support for SVI 92
Configuring BFD for OSPF 93
Configuring BFD for IS-IS 94
Configuring BFD for BGP 96
Configuring BFD for EIGRP 97
Configuring BFD for HSRP 97
Configuring BFD Support for Static Routing 98
Disabling BFD Echo Mode 99
Configuring BFD Support for RIP 99
Configuring Multi-VRF CE 100
Understanding Multi-VRF CE 101
Default Multi-VRF CE Configuration 102
Multi-VRF CE Configuration Guidelines 103
Configuring VRFs 104
Configuring Multicast VRFs 104
Configuring VRF-Aware Services 105
User Interface for ARP 106
User Interface for PING 106
User Interface for SNMP 106
User Interface for HSRP 107
User Interface for Syslog 107

User Interface for Traceroute 108
User Interface for FTP and TFTP 108
Configuring a VPN Routing Session 108
Configuring BGP PE to CE Routing Sessions 109
Multi-VRF CE Configuration Example 110
Displaying Multi-VRF CE Status 114
Configuring Protocol-Independent Features 114
Configuring Cisco Express Forwarding 114
Configuring the Number of Equal-Cost Routing Paths 116
Configuring Static Unicast Routes 116
Configuring IP Loop-Free Alternate Fast Reroute 117
Benefits of Loop-Free Alternate Fast Reroute 118
Prerequisite for Configuring IP Loop-Free Alternate Fast Reroute 118
Restrictions for Configuring IP Loop-Free Alternate Fast Reroute 118
Concept of Remote LFA FRR 119
Benefits of Remote LFA FRR 120
Remote LFA FRR with VPLS 120
Remote LFA FRR for TDM on ME 3600X-24CX-M Switch 120
Microloop Avoidance 120
How to Configure Loop-Free Alternate Fast Reroute 121
Configuring IS-IS Remote Loop-Free Alternate Fast Reroute 121
Configuration Example for IPv4 Loop-Free Alternate Fast Reroute 123
Example: Configuring Remote LFA FRR with VPLS 123
Verifying Loop-Free Alternate Fast Reroute 124
Verifying Remote Loop-Free Alternate Fast Reroute with VPLS 125
Show commands for FRR verification 126
Example: Configuring Remote LFA FRR for TDM 129
Show commands for TDM verification 130
Additional References 134
Specifying Default Routes and Networks 135
Using Route Maps to Redistribute Routing Information 135
Filtering Routing Information 139
Setting Passive Interfaces 139
Controlling Advertising and Processing in Routing Updates 140
Filtering Sources of Routing Information 141
Managing Authentication Keys 141
Monitoring and Maintaining the IP Network 142
1
Configuring IPv6 Unicast Routing 1
Understanding IPv6 1
IPv6 Addresses 2
Supported IPv6 Unicast Routing Features 2
Path MTU Discovery for IPv6 Unicast 3

ICMPv6	3
Neighbor Discovery	3
Default Router Preference	3
IPv6 Stateless Auto-configuration and Duplicate Address Detection	4
IPv6 Applications	4
Dual IPv4 and IPv6 Protocol Stacks	4
DHCP for IPv6 Address Assignment	5
DHCP for IPv6 Server, Client, and Relay	6
Static Routes for IPv6	6
OSPF for IPv6	6
HTTP(S) Over IPv6	6
BGP over IPv6	7
Unsupported IPv6 Unicast Routing Features	7
Configuring IPv6	7
Default IPv6 Configuration	8
Configuring IPv6 Addressing and Enabling IPv6 Routing	8
Configuration Examples	10
Configuring Default Router Preference	10
Configuring IPv4 and IPv6 Protocol Stacks	11
Configuring DHCP for IPv6 Address Assignment	12
Default DHCPv6 Address Assignment Configuration	12
DHCPv6 Address Assignment Configuration Guidelines	13
Enabling the DHCPv6 Server Address-Assignment	13
Enabling the DHCPv6 Client Address Assignment	15
Configuring DHCP Client, Server and Relay Functions	15
Configuring IPv6 ICMP Rate Limiting	15
Configuring CEF for IPv6	16
Configuring Static Routing for IPv6	16
Configuring OSPF for IPv6	18
Configuring IS-IS for IPv6	20
Displaying IPv6	20
Configuration Example	21
IS-IS IPv6 Client for BFD	23
Information About IS-IS IPv6 Client for BFD	23
Prerequisites for IS-IS IPv6 Client for BFD	24
IS-IS BFD Topology	24
RFC 6213 Support	24
IS-IS BFD IPv6 Session Creation	24
IS-IS BFD IPv6 Session Deletion	25
Configuring IS-IS IPv6 Client for BFD	25
Configuring IS-IS IPv6 Client Support for BFD on an Interface	25
Configuring IS-IS IPv6 Client Support for BFD on All Interfaces	26
Configuration Examples for ISIS IPv6 Client for BFD	26

- 1
- Configuring IPv6 VPN over MPLS 1
- Restrictions and limitations 1
- 1
- Configuring Virtual Router Redundancy Protocol 1
- Information About VRRP 1
- VRRP Operation 1
- Benefits of VRRP 3
- Multiple Virtual Router Support 4
- VRRP Router Priority and Preemption 4
- VRRP Advertisements 5
- VRRP Object Tracking 5
- How Object Tracking Affects the Priority of a VRRP Router 5
- VRRP Authentication 6
- ISSU—VRRP 6
- SSO—VRRP 6
- Configuring VRRP 7
- Customizing VRRP 7
- Enabling VRRP 8
- Disabling VRRP on an Interface 9
- Configuring VRRP Object Tracking 10
- Restrictions 10
- Configuring VRRP Text Authentication 11
- Restrictions 11
- Enabling the Router to Send SNMP VRRP Notifications 12
- Configuration Examples for VRRP 12
- Example: Configuring VRRP 12
- Example: VRRP Object Tracking 13
- Example: VRRP Object Tracking Verification 14
- Example: VRRP Text Authentication 14
- Example: Disabling a VRRP Group on an Interface 14
- Example: VRRP MIB Trap 14
- 1
- Configuring HSRP 1
- Understanding HSRP 1
- HSRP Versions 3
- Configuring HSRP 3
- Default HSRP Configuration 4
- Restrictions and Guidelines 4
- Enabling HSRP 5
- Configuring HSRP Priority 6
- Configuring HSRP Authentication and Timers 8
- Enabling HSRP Support for ICMP Redirect Messages 10

Displaying HSRP Configurations	10
1	
Configuring Cisco IOS IP SLAs Operations	1
Understanding Cisco IOS IP SLAs	1
Using Cisco IOS IP SLAs to Measure Network Performance	2
IP SLAs Responder and IP SLAs Control Protocol	3
Response Time Computation for IP SLAs	4
IP SLAs Operation Scheduling	5
IP SLAs Operation Threshold Monitoring	5
Configuring IP SLAs Operations	5
Default Configuration	6
Configuration Guidelines	6
Configuring the IP SLAs Responder	7
Analyzing IP Service Levels by Using the UDP Jitter Operation	7
Analyzing IP Service Levels by Using the ICMP Echo Operation	10
Monitoring IP SLAs Operations	12
1	
Configuring Enhanced Object Tracking	1
Understanding Enhanced Object Tracking	1
Configuring Enhanced Object Tracking Features	1
Default Configuration	2
Tracking Interface Line-Protocol or IP Routing State	2
Configuring a Tracked List	3
Configuring a Tracked List with a Boolean Expression	3
Configuring a Tracked List with a Weight Threshold	5
Configuring a Tracked List with a Percentage Threshold	6
Configuring HSRP Object Tracking	7
Configuring Other Tracking Characteristics	8
Configuring IP SLAs Object Tracking	8
Configuring Static Routing Support	10
Configuring a Primary Interface	10
Configuring a Cisco IP SLAs Monitoring Agent and Track Object	11
Configuring a Routing Policy and Default Route	12
Monitoring Enhanced Object Tracking	12
1	
Configuring Ethernet OAM, CFM, and E-LMI	1
Understanding Ethernet CFM	2
CFM Domain	2
Maintenance Associations and Maintenance Points	3
CFM Messages	4
Crosscheck Function and Static Remote MEPs	5
SNMP Traps and Fault Alarms	5
Configuration Error List	5

IP SLAs Support for CFM 6	6
CFM on EVC Bridge Domains and EVC Cross-Connect Interfaces 6	6
Configuring Ethernet CFM 7	7
Default Ethernet CFM Configuration 7	7
Ethernet CFM Configuration Guidelines 8	8
Configuring the CFM Domain 8	8
Configuring Ethernet CFM Crosscheck 11	11
Configuring Static Remote MEP 13	13
Configuring a Port MEP 14	14
Configuring SNMP Traps 15	15
Configuring Fault Alarms 16	16
Configuring IP SLAs CFM Operation 17	17
Manually Configuring an IP SLAs CFM Probe or Jitter Operation 17	17
Configuring an IP SLAs Operation with Endpoint Discovery 19	19
Configuring CFM on EVC Bridge Domains and EVC Cross-Connect Interfaces 21	21
Configuring CFM on EVC Commands 21	21
Configuring CFM on an EVC Bridge Domain 22	22
Displaying CFM on EVC 22	22
Configuring CFM on an EVC with Cross-Connect 23	23
Managing and Displaying Ethernet CFM Information 23	23
Understanding the Ethernet OAM Protocol 25	25
OAM Features 26	26
OAM Messages 26	26
Setting Up and Configuring Ethernet OAM 26	26
Default Ethernet OAM Configuration 27	27
Ethernet OAM Configuration Guidelines 27	27
Enabling Ethernet OAM on an Interface 27	27
Enabling Ethernet OAM Remote Loopback 28	28
Configuring Ethernet OAM Link Monitoring 29	29
Configuring Ethernet OAM Remote Failure Indications 32	32
Configuring Ethernet OAM Templates 32	32
Displaying Ethernet OAM Protocol Information 35	35
Understanding E-LMI 35	35
Configuring E-LMI 36	36
Default E-LMI Configuration 36	36
E-LMI Configuration Guidelines 36	36
Enabling E-LMI 37	37
Customer-Edge Device Configuration 38	38
Displaying E-LMI 38	38
Ethernet CFM and Ethernet OAM Interaction 38	38
Enabling Ethernet OAM 39	39
Ethernet OAM and CFM Configuration Example 40	40

Y.1731 Performance Monitoring	1
Understanding Y.1731 Performance Monitoring	1
Connectivity	2
Frame Delay and Frame Delay Variation	2
Frame Loss Ratio and Availability	3
Supported Interfaces	4
Restrictions for Y.1731 Performance Monitoring	5
Configuring Y.1731 Performance Monitoring	5
Configuring One-Way Delay Measurement	5
Configuring Example	8
Configuring Two-Way Delay Measurement	9
Configuration Example	10
Configuring Single Ended Synthetic Loss Measurement	11
Configuration Example	13
Configuring On-Demand Operations	14
Configuring a Direct On-Demand Operation	14
Configuring a Referenced On-Demand Operation	14
Configuration Examples for On-Demand Operations	15
Verifying the Frame Delay and Synthetic Loss Measurement Configurations	18
Troubleshooting Tips	26
1	
Configuring Ethernet Data Plane Loopback	1
Limitations and Configuration Guidelines	1
Configuring Ethernet Data Plane Loopback	2
Displaying Ethernet Dataplane Loopback Information	3
Sample Configurations	4
1	
L2VPN Protocol-Based CLIs	1
L2VPN Protocol-Based CLI Changes:	1
CLI Comparison Examples	1
1	
Configuring IP Multicast Routing	1
Restrictions for Configuring IP Multicast Routing	1
Understanding Cisco's Implementation of IP Multicast Routing	1
Understanding IGMP	2
IGMP Version 1	3
IGMP Version 2	3
Understanding PIM	3
PIM Versions	3
PIM Modes	4
PIM Stub Routing	4
IGMP Helper	5
Auto-RP	6

Multicast Forwarding and Reverse Path Check 6
Configuring IP Multicast Routing 7
Default Multicast Routing Configuration 8
Multicast Routing Configuration Guidelines 8
PIMv1 and PIMv2 Interoperability 8
Configuring Basic Multicast Routing 9
Configuring PIM Stub Routing 11
PIM Stub Routing Configuration Guidelines 11
Enabling PIM Stub Routing 11
Configuring Source-Specific Multicast 12
SSM Components Overview 12
How SSM Differs from Internet Standard Multicast 13
SSM IP Address Range 13
SSM Operations 13
IGMPv3 Host Signalling 14
Configuration Guidelines 14
Configuring SSM 15
Monitoring SSM 15
Configuring Source Specific Multicast Mapping 15
Configuration Guidelines and Restrictions 16
SSM Mapping Overview 16
Configuring SSM Mapping 18
Monitoring SSM Mapping 20
Configuring a Rendezvous Point 21
Manually Assigning an RP to Multicast Groups 21
Configuring Auto-RP 22
Monitoring the RP Mapping Information 26
Troubleshooting PIMv1 and PIMv2 Interoperability Problems 27
Configuring Advanced PIM Features 27
Understanding PIM Shared Tree and Source Tree 27
Delaying the Use of PIM Shortest-Path Tree 28
Modifying the PIM Router-Query Message Interval 29
Configuring Optional IGMP Features 30
Default IGMP Configuration 30
Configuring the Switch as a Member of a Group 31
Controlling Access to IP Multicast Groups 32
Changing the IGMP Version 33
Modifying the IGMP Host-Query Message Interval 33
Changing the IGMP Query Timeout for IGMPv2 34
Changing the Maximum Query Response Time for IGMPv2 35
Configuring the Switch as a Statically Connected Member 35
Configuring Optional Multicast Routing Features 36
Configuring sdr Listener Support 36

Enabling sdr Listener Support	36
Limiting How Long an sdr Cache Entry Exists	37
Configuring an IP Multicast Boundary	37
Monitoring and Maintaining IP Multicast Routing	39
Clearing Caches, Tables, and Databases	39
Displaying System and Network Statistics	39
Monitoring IP Multicast Routing	40
1	
Configuring Multicast VPN	1
Restrictions and Limitations	1
1	
Configuring MPLS, MPLS VPN, MPLS OAM, and EoMPLS	1
General Restrictions	2
Understanding MPLS Services	2
Understanding MPLS VPNs	3
VPN Benefits	4
Distribution of VPN Routing Information	6
Restrictions for MPLS VPNs	6
Configuring MPLS VPNs	7
Default MPLS Configuration	7
MPLS VPN Configuration Guidelines	7
SVI Limitations	8
Enabling MPLS	8
Defining VPNs	9
Configuring BGP Routing Sessions	10
Configuring Provider-Edge-to-Provider-Edge Routing Sessions	10
IBGP Provider-Edge-to-Provider-Edge Configuration	11
IBGP Provider-Edge-to-Provider-Edge Configuration	11
Configuring Provider-Edge-to-Customer-Edge Routing Sessions	12
BGP Provider-Edge-to-Customer-Edge Configuration	12
OSPF Provider-Edge-to-Customer-Edge Configuration	13
RIPv2 Provider-Edge-to-Customer-Edge Routing Sessions	13
Configuring Static Route Provider-Edge-to-Customer-Edge Routing Sessions	14
EIGRP Provider-Edge-to-Customer-Edge Configuration	15
Packet Flow in an MPLS VPN	15
Sample Configurations	16
Understanding MPLS Traffic Engineering and Fast Reroute	17
MPLS TE	18
MPLS TE Fast Reroute	19
MPLS TE Primary and Backup Autotunnel	20
Configuring MPLS Traffic Engineering and Fast Reroute	20
Default MPLS TE and Fast Reroute Configuration	20
MPLS TE and Fast Reroute Configuration Guidelines	20

- Configuring MPLS TE 21
- Configuring an MPLS TE Tunnel 21
- Configuring the Routing Protocol for MPLS TE 22
- Configuring TE Fast Reroute 23
- Configuring a Protected Link to Use a Backup Tunnel 24
- Configuring Fast Reroute Failure Detection (Optional) 24
- Configuring Primary and Backup Autotunnels 25
- Understanding EoMPLS 27
- Interaction with Other Features 28
- EoMPLS and IEEE 802.1Q Tunneling 28
- EoMPLS and Layer 2 Tunneling 29
- EoMPLS and Q in Q 29
- EoMPLS and QoS 30
- EoMPLS Limitations 30
- Enabling EoMPLS 31
- Default EoMPLS Configuration 31
- EoMPLS Configuration Guidelines 31
- Configuring EoMPLS 32
- Configuring the Pseudowire Using Pseudowire Class 33
- Configuring L2VPN Interworking 34
- EoMPLS and EVC 35
- Configuring EVC Xconnect 36
- Configuring Support for Integrated Routing and Bridging (IRB) 38
- Packet Flow in an EoMPLS Network 39
- Configuring L2VPN Pseudowire Redundancy 40
- Configuration Guidelines 41
- Configuring Pseudowire Redundancy 42
- Forcing a Manual Switchover to the Backup Pseudowire VC 43
- Monitoring L2VPN Pseudowire Redundancy 43
- Routed VPLS/EoMPLS 44
- Restrictions for Routed VPLS/EoMPLS 44
- Configuring Routed Pseudowire 45
- Configuring Routed VPLS 46
- Support for H-VPLS 46
- Full-Mesh Configuration 47
- Hub and Spoke 48
- VPLS-Supported Features 48
- VPLS Services 49
- Transparent LAN Service 49
- VPLS BGP Signaling 49
- Prerequisites for Configuring VPLS BGP Signaling 49
- VPLS BGP Signalling Limitations 50
- Configuring VPLS BGP Signaling 51

Configuration Examples for VPLS BGP Signaling	53
Configuring the VPLS Pseudowire	54
Configuring a VPLS Pseudowire Using VFI	55
Configuring a P2P Pseudowire Using pw-class	55
VPLS Autodiscovery: BGP Based	55
Information About VPLS Autodiscovery: BGP Based	56
How the VPLS Feature Works	56
How the VPLS Autodiscovery: BGP Based Feature Works	56
How Enabling VPLS Autodiscovery Differs from Manually Configuring VPLS	56
Show Commands Affected by VPLS Autodiscovery: BGP Based	57
How to Configure VPLS Autodiscovery: BGP Based	57
Enabling VPLS Autodiscovery: BGP Based	58
Configuring BGP to Enable VPLS Autodiscovery	58
Customizing the VPLS Autodiscovery Settings	60
Configuration Examples for VPLS Autodiscovery: BGP Based	61
VPLS Autodiscovery: BGP Based: Basic Example	61
Understanding MPLS OAM	64
LSP Ping	65
LSP Traceroute	65
AToM VCCV (LSP Ping over Pseudowire)	66
IP SLAs Interworking with MPLS OAM	66
LSP Tree Trace and IP SLAs ECMP Tree Trace	66
Configuring MPLS OAM and IP SLAs MPLS	67
Default MPLS OAM Configuration	67
MPLS OAM Configuration Guidelines	67
Using LSP Ping for LDP IPv4 FEC	68
Using LSP Ping to Specify a MPLS TE Tunnel	70
Using LSP Traceroute	71
Using LSP Ping for Pseudowire (AToM VCCV)	73
Configuring IP SLAs MPLS Ping and Traceroute	75
Configuring the IP SLAs LSP Health Monitor	76
Manually Configuring IP SLAs MPLS LSP Ping or Traceroute	79
Using LSP Tree Trace	81
Manually Setting LSP Tree Trace	81
Configuring ECMP IP SLAs Tree Trace	82
Monitoring and Maintaining MPLS and EoMPLS	85
1	
Multiprotocol Label Switching Load Balancing	1
Finding Feature Information	1
Contents	1
Prerequisites for MPLS Load Balancing	2
Restrictions for MPLS Load Balancing	2
Label Limits	2

Information About MPLS Load Balancing 2
How to Configure MPLS Load Balancing 2
Where to Go Next? 4
Configuration Examples for MPLS Load Balancing 4
Layer 2 VPN Configuration Example 5
Layer 3 VPN Configuration Example 9
Load Balancing Over Port Channel: Configuration Example 14
Verifying the MPLS Load Balancing Configuration 19
Additional References 22
Related Documents 22
Standards 22
MIBs 22
RFCs 22
Technical Assistance 23
Feature Information for MPLS Load Balancing 23
1
MPLS Traffic Engineering Bundled Interface Support 1
Finding Feature Information 1
Contents 1
Prerequisites for MPLS TE Bundled Interface Support 2
Restrictions for MPLS TE Bundled Interface Support 2
Information About MPLS TE Bundled Interface Support 2
Cisco EtherChannel Overview 2
Cisco EtherChannel Benefits 2
Load Balancing and Min-Links in EtherChannel 3
How to Configure MPLS TE Bundled Interface Support 3
Configuring MPLS TE Bundled Interface Support 4
Configuring MPLS TE on an EtherChannel Interface 5
Configuration Examples for MPLS TE Bundled Interface Support 6
Configuring MPLS TE on an EtherChannel Interface: Example 6
Additional References 6
Standards 6
MIBs 6
RFCs 6
Technical Assistance 7
Feature Information for MPLS TE Bundled Interface Support 8
Glossary 9
1
Configuring OSPF TTL Security Check 1
Information About OSPF TTL Security Check 1
TTL Security Check for OSPF 1
Transitioning Existing Networks to Use TTL Security Check 1
TTL Security Check for OSPF Virtual and Sham Links 2

- Benefits of the OSPF Support for TTL Security Check 2
- How to Configure OSPF TTL Security Check 2
- Configuring TTL Security Check on All OSPF Interfaces 2
- Configuring TTL Security Check on a Per-Interface Basis 3
- Configuration Examples for OSPF TTL Security Check 4
- Example: Transitioning an Existing Network to use TTL Security Check 4
 - 1
- Configuring Switched Port Analyzer (SPAN) 1
- SPAN Limitations and Configuration Guidelines 1
- Understanding Switched Port Analyzer 2
- Switched Port Analyzer (SPAN) Session 2
- Destination Interface 2
- Source Interface 2
- Traffic Types 2
- SPAN Traffic 3
- Configuring Switched Port Analyzer 3
- Configuring Sources and Destinations for SPAN 3
- Removing Sources and Destinations from a SPAN Session 4
- Sample Configurations 5
- Configuring Sources and Destinations Example 5
- Removing Sources and Destinations from a SPAN Session Example 5
- Displaying SPAN Session Information 5
 - 1
- Configuring Ethernet Ring Protection 1
- Restrictions and Limitations 1
 - 1
- Auto-IP 1
- Prerequisites for Auto-IP 1
- Restrictions for Auto-IP 2
- Overview 2
- Supported Interfaces 3
- Configuring Auto-IP 3
- Configuration Example for Auto-IP 4
 - 1
- Troubleshooting 1
- Recovering from a Lost or Forgotten Password 2
- Procedure with Password Recovery Enabled 3
- Procedure with Password Recovery Disabled 5
- ROM Monitor 6
- Send Break 6
- Preventing Autonegotiation Mismatches 7
- SFP Module Security and Identification 7
- Monitoring SFP Module Status 8

- Monitoring Temperature 8
- Using Ping 8
- Using Layer 2 Traceroute 9
- Understanding Layer 2 Traceroute 9
- Layer 2 Traceroute Usage Guidelines 9
- Displaying the Physical Path 10
- Using IP Traceroute 10
- Understanding IP Traceroute 11
- Executing IP Traceroute 11
- Using TDR 12
- Understanding TDR 12
- Running TDR and Displaying the Results 13
- Using Debug Commands 13
- Enabling Debugging on a Specific Feature 13
- Enabling All-System Diagnostics 14
- Redirecting Debug and Error Message Output 14
- Using the crashinfo File 15
- Using On-Board Failure Logging 15
- Understanding OBFL 15
- Configuring OBFL 16
- Displaying OBFL Information 17
- 1
- Configuring Online Diagnostics 1
- Understanding Online Diagnostics 1
- Configuring Online Diagnostics 2
- Running Online Diagnostic Tests 3
- Starting Online Diagnostic Tests 3
- Displaying Online Diagnostic Tests and Results 4
- MIB List 1
- Using FTP to Access the MIB Files 2
- Working with the Flash File System 1
- Displaying Available File Systems 2
- Setting the Default File System 3
- Displaying Information about Files on a File System 3
- Changing Directories and Displaying the Working Directory 3
- Creating and Removing Directories 4
- Copying Files 4
- Deleting Files 5
- Creating, Displaying, and Extracting tar Files 5
- Creating a tar File 6
- Displaying the Contents of a tar File 6
- Extracting a tar File 7
- Displaying the Contents of a File 8

- Working with Configuration Files 8
- Guidelines for Creating and Using Configuration Files 9
- Configuration File Types and Location 9
- Creating a Configuration File By Using a Text Editor 10
- Copying Configuration Files By Using TFTP 10
- Preparing to Download or Upload a Configuration File By Using TFTP 10
- Downloading the Configuration File By Using TFTP 11
- Uploading the Configuration File By Using TFTP 11
- Copying Configuration Files By Using FTP 12
- Preparing to Download or Upload a Configuration File By Using FTP 13
- Downloading a Configuration File By Using FTP 13
- Uploading a Configuration File By Using FTP 14
- Copying Configuration Files By Using RCP 15
- Preparing to Download or Upload a Configuration File By Using RCP 16
- Downloading a Configuration File By Using RCP 17
- Uploading a Configuration File By Using RCP 18
- Clearing Configuration Information 18
- Clearing the Startup Configuration File 19
- Deleting a Stored Configuration File 19
- Replacing and Rolling Back Configurations 19
- Understanding Configuration Replacement and Rollback 19
- Configuration Replacement and Rollback Guidelines 20
- Configuring the Configuration Archive 21
- Performing a Configuration Replacement or Rollback Operation 22
- Working with Software Images 23
- Image Location on the Switch 23
- tar File Format of Images on a Server or Cisco.com 24
- Copying Image Files By Using TFTP 24
- Preparing to Download or Upload an Image File By Using TFTP 25
- Downloading an Image File By Using TFTP 26
- Uploading an Image File By Using TFTP 27
- Copying Image Files By Using FTP 27
- Preparing to Download or Upload an Image File By Using FTP 28
- Downloading an Image File By Using FTP 29
- Uploading an Image File By Using FTP 31
- Copying Image Files By Using RCP 32
- Preparing to Download or Upload an Image File By Using RCP 32
- Downloading an Image File By Using RCP 33
- Uploading an Image File By Using RCP 35
- 1
- Configuring MPLS Transport Profile 1
- Contents 1
- Restrictions for MPLS-TP 1

Information About MPLS-TP 2
How MPLS-TP Works 2
MPLS-TP Path Protection 3
Bidirectional LSPs 3
MPLS-TP OAM Support 3
MPLS-TP: Static and Dynamic Pseudowires 4
MPLS-TP: L2VPN Pseudowire Redundancy for Static and Dynamic Pseudowires 5
MPLS-TP: OAM Status for Static and Dynamic Pseudowires 5
MPLS-TP Links and Physical Interfaces 5
Tunnel Midpoints 5
How to Configure MPLS-TP 6
Configuring the MPLS Label Range 6
Configuring the Router ID and Global ID 7
Configuring Bidirectional Forwarding Detection Templates 8
Configuring Pseudowire OAM Attributes 9
Configuring the Pseudowire Class 10
Configuring the Pseudowire 11
Configuring the MPLS-TP Tunnel 12
Configuring MPLS-TP LSPs at Midpoints 15
Configuring MPLS-TP Links and Physical Interfaces 16
Configuring Static-to-Static Multisegment Pseudowires for MPLS-TP 18
Configuring a Template with Pseudowire Type-Length-Value Parameters 19
Configuring Static-to-Dynamic Pseudowires for MPLS-TP 20
Example 22
Configuring the L2VPN Pseudowire Redundancy for Static Pseudowires Backed Up with Static or Dynamic Pseudowires 23
Example 25
Verifying the MPLS-TP Configuration 25
Access Control List Commands 2
Privileged EXEC Mode 2
Global Configuration Mode 2
Address Resolution Protocol (ARP) Commands 2
Global Configuration Mode 2
Interface Configuration Mode 2
Hot Standby Routing Protocol (HSRP) Commands 2
Global Configuration Mode 2
IGMP Snooping Commands 3
Global Configuration Mode 3
IP Multicast Routing Commands 3
Privileged EXEC Mode 3
Global Configuration Mode 3
Interface Configuration Mode 3
IP Network Address Translation (NAT) Commands 4

Privileged EXEC Mode 4
Global Configuration Mode 4
Interface Configuration Mode 4
IP Unicast Routing Commands 4
Privileged EXEC or User EXEC Mode 4
Global Configuration Mode 5
Interface Configuration Mode 5
BGP Router Configuration Mode 5
Route Map Configuration Mode 5
VPN Configuration Mode 6
Multiprotocol Label Switching (MPLS) Commands 6
Privileged EXEC or User EXEC Mode 6
Global Configuration Mode 6
Interface Configuration Mode 7
Physical Interfaces 7
Tunnel Interfaces 7
Routing Configuration Mode 7
Multicast Source Discovery Protocol (MSDP) Commands 7
Privileged EXEC Mode 7
Global Configuration Mode 8
NetFlow Commands 8
Global Configuration Mode 8
Quality of Service (QoS) Commands 8
Global Configuration Mode 8
Interface Configuration Mode 8
RADIUS Commands 8
Global Configuration Mode 8
Simple Network Management Protocol (SNMP) Commands 9
Global Configuration Mode 9
Spanning Tree Commands 9
Global Configuration Mode 9
Interface Configuration Mode 9
VLAN Commands 9
Global Configuration Mode 9
Global Configuration Mode 9
VLAN Configuration Mode 9
Other Unsupported Commands 10
Privileged EXEC and User EXEC Mode 10
Clear Commands 10
Debug Commands 10
Show Commands 10
Global Configuration Mode 10
Interface Configuration Mode 11

