



CHAPTER 6

CTMS Unset Commands

October 2011

This chapter contains the following Cisco TelePresence Multipoint Switch (CTMS) **unset** CLI commands. For information on how to use CTMS CLI commands, refer to “Using Cisco TelePresence Multipoint Switch CLI Commands” chapter in this manual.

- [unset eventcontrol all](#), page 6-2
- [unset eventcontrol meeting](#), page 6-3
- [unset network dns options](#), page 6-4
- [unset network domain](#), page 6-5



Note

For information about using the CTMS Administration software, refer to the *Cisco TelePresence Multipoint Switch Release 1.8 Administration Guide* at the following URL:
http://www.cisco.com/en/US/products/ps7315/prod_maintenance_guides_list.html

unset eventcontrol all

unset eventcontrol all

Syntax Description None

Command Modes Admin

Command History

Release	Modifications
1.6	This command was first documented.

Usage Guidelines

Use this command to unset the following system and active meeting event control settings:

- eventcontrol entry rx audio
- eventcontrol entry rx video
- eventcontrol entry source
- eventcontrol entry tx audio
- eventcontrol entry tx video
- eventcontrol lock
- eventcontrol map
- eventcontrol rx audio
- eventcontrol rx video
- eventcontrol tx audio
- eventcontrol tx video

This command will not affect the following event control settings:

- eventcontrol announcement
- eventcontrol videoswitch
- eventcontrol webgui boardroom
- eventcontrol webgui directorctrl

Examples

```
admin:unset eventcontrol all
```

unset eventcontrol meeting

unset eventcontrol meeting *meeting_id*

Syntax Description	<i>meeting_id</i>	Defaults the wait time before considering a Domain Name System (DNS) query to have failed.
---------------------------	-------------------	--

Command Modes	Admin
----------------------	-------

Command History	Release	Modifications
	1.6	This command was first documented.

Usage Guidelines Use this command to unset the following event control settings for the specified meeting:

- eventcontrol entry rx audio
- eventcontrol entry rx video
- eventcontrol entry source
- eventcontrol entry tx audio
- eventcontrol entry tx video
- eventcontrol lock
- eventcontrol map
- eventcontrol rx audio
- eventcontrol rx video
- eventcontrol tx audio
- eventcontrol tx video

This command will not affect the following event control settings:

- eventcontrol announcement
- eventcontrol videoswitch
- eventcontrol webgui boardroom
- eventcontrol webgui directorctrl

Examples	<code>admin:unset eventcontrol meeting 12345</code>
-----------------	---

unset network dns options

unset network dns options [timeout] [attempts] [rotate]

Syntax Description

timeout	Sets the the wait time before considering a Domain Name System (DNS) query to have failed to the default value.
attempts	Sets the number of attempts to make before failing to the default value.
rotate	Sets the method for selecting a name server to the default value; this affects how loads are distributed across name servers.

Command Modes

Admin

Command History

Release	Modifications
1.5	This command was first documented.

Usage Guidelines

Use this command to unset the Domain Name System (DNS) options. This command causes a temporary loss of network connections.

Examples

```
admin:unset network dns options timeout
      ***  W A R N I N G  ***
This will cause the system to temporarily lose network connectivity

      Do you want to continue ?

Enter "yes" to continue or any other key to abort
yes
executing...
```

unset network domain

unset network domain

Syntax Description None

Command Modes Admin

Command History	Release	Modifications
	1.8	This command was first documented.

Usage Guidelines Use this command to unset the network domain. This command causes a temporary loss of network connections.

Examples

```
admin:unset network domain
***  W A R N I N G  ***
This will cause the system to temporarily lose network connectivity

          Do you want to continue ?

Enter "yes" to continue or any other key to abort
yes
executing...
```

■ unset network domain