



## New and Changed Information

- [New and Changed Information](#), on page 1

## New and Changed Information

This section provides information on new features and changed behavior in Cisco Intersight Managed Mode Transition Tool, Release 3.x

**Table 1: New Features and Changed Behavior in Intersight Managed Mode Transition Tool, Release 3.1.1**

Feature	Description	Where Documented
Preservation of configuration identifiers while cloning an Intersight account	IMM Transition Tool, Release 3.1.1 enables you to clone an Intersight account while preserving the assigned IDs on the source server profiles.	<a href="#">Appendix C: Transition Settings</a>
Support for conversion of UCS Central tags	IMM Transition Tool, Release 3.1.1, supports the conversion of UCS Central tags that are assigned to various pools, policies, and profiles/templates.	<a href="#">Appendix C: Transition Settings</a>
Enabling proxy settings for individual devices	You can now enable/disable the proxy settings separately for each device.	<a href="#">Device Management</a>
Bulk deletion of devices	You can now delete multiple devices with a single click on the device management page.	<a href="#">Device Management</a>
Ability to backup and restore data	IMM Transition Tool, Release 3.1.1, provides the ability to back up and restore data on the tool.	<a href="#">Appendix E: Backup/Restore</a>

Feature	Description	Where Documented
Validation of the firmware version of the added device.	IMM Transition Tool, Release 3.1.1, shows a warning if the firmware version of the added device is not compliant with the minimum supported version.	<a href="#">Device Management</a>
Support for UCS 4.2(3) release	Support for UCS 4.2(3) release and conversion of Cisco UCS 6536 Fabric Interconnect in UCSM mode.	<a href="#">Appendix A: Supported Features for Conversion</a>
Updated the list of supported hardware in IMM.	The updated list of supported hardware in IMM now includes IOM 2304, FEX 93180YC-FX3, Cisco UCS 6536 FI, all VIC 1300 models.	

**Table 2: New Features and Changed Behavior in Intersight Managed Mode Transition Tool, Release 3.0.2**

Feature	Description	Where Documented
Generating Readiness Report without adding an Intersight device	You can now generate the conversion readiness report without having to add the configuration details of the destination Intersight device in the IMM Transition Tool.	<a href="#">Adding an IMM Transition for Conversion</a>
Support for Private VLAN conversion	IMM Transition Tool, 3.0.2 supports the conversion of Private VLANs from UCSM to Intersight.	<a href="#">Appendix A: Supported Features for Conversion</a>
Ability to define custom tags for transition	You can now customize the converted objects tags by adding, updating, and deleting the tags on the Transition Settings page.	<a href="#">Appendix C: Transition Settings</a>
Bulk deletion of transitions	You can delete the listed IMM transitions in bulk.	<a href="#">Transition Management</a>
Ability to upgrade the tool using the command-line interface (CLI).	In addition to the GUI, you can now upgrade the IMM Transition Tool from 3.0.1 to 3.0.2 using CLI.	<a href="#">Upgrading Tool</a>
Ability to view all of the Inband and OutOfBand (Static/Pool) IP Addresses assigned to the Service Profiles in the Readiness Report.	You can now view the Management IP Addresses section in the Transition Readiness Report that lists IP Addresses assigned to UCSM/Central Service Profiles and physical server.	<a href="#">Interpreting Transition Readiness Report</a>

Feature	Description	Where Documented
Support for Intersight V2 and V3 API Keys	You can now use OpenAPI V2 and V3 API Keys to connect to Intersight.	<a href="#">Adding an IMM Transition for Conversion</a>

**Table 3: New Features and Changed Behavior in Intersight Managed Mode Transition Tool, Release 3.0.1**

Feature	Description	Where Documented
Preservation of Configuration Identifiers	The Service Profile identifiers can be preserved when converting from UCSM/Central to Intersight.	<a href="#">Overview</a>
Cloning an Intersight Account	Configuration attributes can be cloned between two Intersight instances.	<a href="#">Adding an IMM Transition for Cloning</a>
Mapping UCS Organization to Intersight Organization	One or more source UCS organization(s) can be mapped to an Intersight organization.	<a href="#">Adding an IMM Transition for Conversion</a>
View Push Summary	You can view the push status of each object using the <b>View Push Summary</b> option.	<a href="#">Adding an IMM Transition for Conversion</a> and <a href="#">Adding an IMM Transition for Cloning</a>
Default Transition Settings	You can define the default configuration settings that get applied to every new transition that is created in the tool.	<a href="#">Appendix C: Transition Settings</a>
Auto-generated default password for converted policies	An auto-generated default password is used for converting policies.	<a href="#">Installing Cisco Intersight Managed Mode Transition Tool</a>
Support for new IMM configurations such as breakout ports, static pin groups, FC Zoning Policy, Cisco UCS 6536 Fabric Interconnect.	Support has been added for the conversion of breakout ports and static pin groups from UCSM to Intersight. The tool also supports FC Zoning policy and Cisco UCS 6536 FI model in Intersight accounts.	<a href="#">Appendix A: Supported Features for Conversion</a>

