



Device Management

- [Adding Devices, on page 1](#)
- [Claiming Devices, on page 2](#)
- [Uploading Custom Device File, on page 3](#)

Adding Devices

IMM Transition Tool, Release 1.0.2 and above allows you to manage your UCS System and Intersight devices better. You can avoid duplicity of devices by providing unique Target IP or FQDN to each device.

Perform the following steps to add and manage devices.

1. Navigate to **Device Management**.
2. To add a single device:
 - a. Click **Add Device**.
 - b. Select the **Device Type** from the drop-down.
 - c. Enter the Target IP/FQDN.
 - d. If the **Device Type** selected in Step 3 is **Cisco IMC**, **UCS Manager** or **UCS Central**, enter the **Username** for the device else go to Step 7.
 - e. Enter the **Password** for the device and go to Step 9.
 - f. If the Device Type selected in Step 3 is **Intersight**:
 - (a) Select **Intersight SaaS** for a SaaS account and enter the API key/ Secret key.



Note From release 4.0.1 onwards, if you select **Intersight SaaS** account, you can also select the region to which the account belongs: **US** or **EU**.

- (b) Select **Intersight Appliance VM** for an appliance account and enter the Target/ API Key/Secret Key.
- g. Turn on the **Use Proxy** toggle button to enable proxy settings.
For more details on proxy settings, see [Proxy Settings](#)

- h. Turn on the **Bypass Connection Check** to bypass connection checks during device addition. This feature enables addition of offline devices to the transition tool.
 3. To bulk add multiple devices:
 - a. Click **Upload CSV**.
 - b. Browse to a CSV file that contains the device type, target, username, and password details.

Sample CSV File

Device Type	Target	Username	Password
ucsm	192.0.2.1	admin	wiwdyh49
ucsc	192.0.2.20	admin	0un58gvb
cimc	192.0.2.78	admin	yebduskk

- c. Click **Upload**.

The **Progress** page indicates the progress of the device connections. If a connection fails, that device will not be added.

4. Click **Save**.

In IMM Transition Tool, 3.1.1 and above, a validation is performed by the tool to check if the firmware version of the added device is compliant with the minimum version supported by the transition tool. If found non-compliant, a warning message gets displayed.

You can opt-out of the validation check by turning on the **Bypass Validation** toggle button.

This option enables you to add a device which has an unsupported firmware version.

The added devices can be deleted or edited. The values that can be edited for the Intersight device are API Key and Secret Key and for a UCS device are Username and Password.



 

Note

- Deletion of an existing device is possible only when there is no transition associated with it.
- In IMM Transition Tool, 3.1.1, you can select multiple devices and click the trash button located on upper-left of the list view to delete the selected devices in bulk.

Claiming Devices

To claim devices in Intersight:

1. Click **Claim to Intersight**.
2. In the **Select Devices** screen:
 - a. From the **Select Intersight Device** drop-down list, choose a target Intersight account to which you want to claim the devices.

While adding a transition, the configuration/inventory fetched from a live device is represented by , and the configuration/inventory fetched from a file (manually uploaded by user) is denoted by  on the **Select Source UCS/Intersight Device** page.