



Enabling SNMP in IMM

- [Enabling SNMP in IMM, on page 1](#)

Enabling SNMP in IMM

Enabling SNMP in a Server

Prerequisite: An IMC Access Policy should be created for the Simple Network Management Protocol (SNMP) to work in a server. For more details, see [Creating an IMC Access Policy](#) in the IMM Configuration Guide.

1. Create an SNMP policy for the server. For more details, see [Creating an SNMP Policy](#).
2. Create a UCS Server Profile. For more details, see [Creating a UCS Server Profile](#).
3. Associate the IMC Access policy and the SNMP policy to the UCS Server Profile.
4. Deploy the Server Profile to the server.

Enabling SNMP in a Chassis

Prerequisite: An IMC Access Policy should be created for the SNMP to work in a chassis. For more details, see [Creating an IMC Access Policy](#) in the IMM Configuration Guide.

1. Create an SNMP policy for the chassis. For more details, see [Creating an SNMP Policy](#).
2. Create a Chassis Profile. For more details, see [Creating a Chassis Profile](#).
3. Associate the IMC Access policy and the SNMP policy to the Chassis Profile.
4. Deploy the Chassis Profile to the chassis.

Enabling SNMP in an FI

1. Create an SNMP policy for the FI. For more details, see [Creating an SNMP Policy](#).
2. Create a UCS Domain Profile. For more details, see [Creating a UCS Domain Profile](#).
3. Associate the SNMP policy to the UCS Domain Profile.
4. Deploy the Domain Profile to the FI.

